

Part C T826 Transmitter & T827 Exciter

This part of the manual is divided into six sections, as listed below. There is a detailed table of contents at the start of each section.

Section	Title
1	General Information
2	Circuit Operation
3	Initial Tuning & Adjustment
4	Functional Testing (not available for Initial Adjustment manual)
5	Fault Finding (not available for Initial Adjustment manual)
6	PCB Information

