



**Frequently Asked Questions
12
8 December, 2003**

Model	Question	Solution
TM8115	How do I use the Tap Points for connecting external equipment?	Select the Tap Point type you need for your equipment. For full details of Tap Points, run HELP and run a search for "Tap Points". The TX & RX tap points are on the AUX connector on the rear of the radio, TX is on pin 7, and the RX is on pin 13. Ground is brought out on pin 15. The nominal levels for both TX and RX are -10 dBm.
TM8000 calibration software.	Please explain the function of SCALER & NORMALISER deviations settings in the TM8000 calibration software	<ul style="list-style-type: none"> - The Scaler and Normaliser set the operational deviation of the transceiver (in Hz). The maximum bandwidth can be changed for each bandwidth Narrow/Medium/Wide to different values should a system require it. - This is similar to the Maximum Deviation setting page in the Orca5000 Calibration Application. - Scaler sets the receive bandwidth up to a maximum of 7000 Hz. - Normaliser sets the transmit deviation up to a maximum of 10085 Hz.
Tait WEB support	What is the WEB address for Taitworld support in Australia	This site is a secure site and requires a valid user name and password for access. The address is http://australia.taitworld.com/main/custom
T2000 Windows software	Latest T2000 Windows conventional software, displays a message when starting, indication that it has exceeded, it's use by date.	This is correct, it was expected that a full release would be available by now. However this has been held up, but should be available soon. It's OK to carry on using the "expired" edition until this is released.