Custom Settings

Function Key Settings

runction	i key settiligs			
	Short Press	Long Press		
F1:				
Г2;				
Handset Mode Volume Keys				
Volume Up: Volume Down:				
voiume O	r·	volume Bown.		
Selcall Settings				
Selcall ID:				
Commonly Used Channels/Groups				
Position	Settings			



TAITRadio Communications

CORPORATE HEAD OFFICE NEW ZEALAND

P O Box 1645, Christchurch

E-mail: tait@taitworld.co.nz

Tait Electronics Ltd

CANADA

Toll Free: 1-800-890 TAIT (8248) E-mail: canada@taitworld.com

LISA

Toll Free: 1-800-890 TAIT (8248) E-mail: usa@taitworld.com

LATIN AMERICA

E-mail: latinamerica@taitworld.com

AUSTRALIA

E-mail: australia@taitworld.com

NEW ZEALAND

E-mail: headoffice@tcl.tait.co.nz

EUROPE

E-mail: sales@tait.co.uk

HONG KONG

E-mail: hongkong@taitworld.com

BEIJING

E-mail: beijing@taitworld.com

SINGAPORE

E-mail: singapore@taitworld.com

THAILAND

E-mail: thailand@taitworld.com

5015 CONVENTIONAL ● TAIT ORCA



THE TAIT ORCA 5000

SERIES OF

OW/EREIII

PORTABLE RADIOS

FOR ORGANIZATIONS

MOBILE

COMMUNICATION

USER'S MANU



Tait Electronics Ltd is an ISO 9001 registered supplier. Certificate No.461.



TAIT Authorized Dealer March 2003 M5015-00-001-805



5000 SERIES COMPLETING YOUR SOLUTION

000



Copyright © 2003, Tait Electronics Ltd

Radio Indicators

Display messages are shown in ALLCAPS, e.g. CALL

	Display	Sound	Meaning
	* * + message	- - x 2	You have just turned on the radio. The power-up sequence is complete.
	+ 44 flashing		The radio is transmitting.
+ f flashing			The radio is transmitting at low power.
	# fast + CALL flashing	ringing tone*	A call has been received.
ation	# fast + CALL flashing		A call has been received but not answered.
obei	+ Y		Activity has been detected on a channel.
Start-up/basic operation			You cannot transmit because the channel is busy or selective call mute is active. Wait until it is free to transmit or use a channel that is clear.
		- - x 3	The transmit timer is about to expire. In 10 seconds, the radio will stop transmitting. Release the PTT key before transmitting again.
		for 1.5 seconds	The radio has stopped transmitting because the transmit timer has expired. Release the PTT key before transmitting again.
ning	+ O		The radio is scanning a group of channels for activity or greatest signal strength.
Scanning	# medium + Oflashing		The radio has detected activity on one of a group of channels being scanned.
		-	A function has been turned on.
			A function has been turned off.
	₩ slow + RTA		Repeater talkaround is active.
ons	* medium + ₹		Low power transmit is active.
-unctions	* slow		Economy mode is active.
Fu	** slow + J		Handset mode is active.
			Squelch override has been turned on.
			Squelch override has been turned off.
	medium +		Monitor or squelch override is active.
Warnings	* slow + flashing	every 5 seconds	The battery is low. Recharge or replace the battery as soon as possible.
			The battery is too low to operate the radio. Turn off the radio and recharge or replace the battery.
		x 2	The temperature is too high. You should stop transmitting and allow the radio to cool down.
	# fast + RADIO DISABLED		The radio is stunned. Contact your dispatcher.
	* * fast	x 2	The radio has been programmed incorrectly or is faulty. Contact your local dealer.

^{*}The ringing tone is preprogrammed. The radio will give different ringing tones when different types of calls are received.