# T800 Series Ancillary Equipment Service Manual

Issue 100

August 1996

M800-00-100



#### Head Office New Zealand

Tait Electronics Ltd 558 Wairakei Road P.O. Box 1645 Christchurch New Zealand

Phone: 64 3 358-3399 Fax: 64 3 358-3636

#### **Radio Infrastructure Division**

535 Wairakei Road P.O. Box 1645 Christchurch New Zealand

Phone: 64 3 358-3399 Fax: 64 3 358-2825

#### Australia

Tait Electronics (Aust) Pty Ltd 275 Toombul Road Northgate 4013 P.O. Box 679 Virginia Queensland 4014 Australia

Phone: 61 7 3260-7799 Toll Free: 1800 077-112 Fax: 61 7 3260-7990

#### Canada

Tait Mobile Radio Inc. Unit 5, 158 Anderson Avenue Markham Ontario L6E1A9

Canada Phone: 1 905 472-1100

Toll Free: 1 800 890-8248 Fax: 1 905 472-5300

#### France

Tait France Sarl 2 Avenue de la Cristallerie 92 316 Sèvres, Cedex France

Phone: 33 1 41 14-05-50

Fax: 33 1 41 14-05-55

#### Germany

Tait Mobilfunk GmbH Willstätterstraße 50 D-90449 Nürnberg 60 Germany

Phone: 49 911 96 746-0 Fax: 49 911 96 746-79

#### **Hong Kong**

Tait Mobile Radio (HK) Ltd Room 703A New East Ocean Centre 9, Science Museum Road Tsim Sha Tsui East Hong Kong

Phone: 852 2369-3040 Fax: 852 2369-3009

#### New Zealand

Tait Communications Ltd Unit 4, 75 Blenheim Road P.O. Box 1185 Christchurch

Phone: 64 3 348-3301 Fax: 64 3 343-0558

#### Singapore

Tait Electronics (Far East) Pte Ltd 4 Leng Kee Road SIS Building #05-11A Singapore 159088 Phone: 65 471-2688 Fax: 65 479-7778

#### Taiwan

Tait Electronics (Taiwan) Ltd 1104, No. 142 Chung Hsiao E. Rd

Sec. 4 Taipei Taiwan

Phone: 886 2 731-1290 Fax: 886 2 711-6351

#### **United Kingdom**

Tait Mobile Radio Ltd Ermine Business Park Ermine Road Huntingdon Cambridgeshire PE18 6YA United Kingdom Phone: 44 1480-52255 Fax: 44 1480-411996

#### **USA**

Tait Electronics (USA) Inc. 9434 Old Katy Road Suite 110 Houston Texas 77055 USA

Phone: 1 713 984-8684 Toll Free: 1 800 222-1255 Fax: 1 713 468-6944

## **About This Manual**

Scope This manual contains general, technical and servicing informa-

tion on T800 ancillary equipment.

**Format** We have published this manual in a ring binder so that "revision

packages" containing additional information pertaining to new issues of PCBs, or to additional ancillary equipment, can be

added as required.

**Revision Packages** Revision packages will normally be published when an ancillary equipment manual requires overhaul, or to coincide with the

release of information on a new PCB, and may also contain addi-

tions or corrections pertaining to other parts of the manual.

If you return the address card at the front of this manual, you will be notified when revision packages containing new PCB information and/or text are available. You may then order as many packages as you require from your local Tait Company. Revision packages are supplied ready-punched for inclusion in

your manual.

**Revision Control** 


Each page in this manual has a date of issue. This is to comply with various Quality Standards, but will also serve to identify which pages have been updated and when. Each page and its publication date is listed in the "List of Effective Pages", and a new list containing any new/revised pages and their publication dates will be sent with each revision package.





Any portion of text that has been changed is marked by a vertical line (as shown at left) in the outer margin of the page. Where the removal of an entire paragraph means there is no text left to mark, an arrow (as shown at left) will appear in the outer margin. The number beside the arrow will indicate how many paragraphs have been deleted.

The manual issue and revision status are indicated by the last three digits of the manual IPN. These digits start at 100 and will increment through 101, 102, 103, etc., as revision packages are published, e.g:

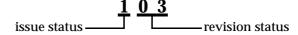

Thus, Issue 103 indicates the third revision to issue 1 and means that three packages should have been added to the manual. The issue digit will only change if there is a major product revision, or if the number of revision packages to be included means that the manual becomes difficult to use, at which point a new issue manual will be published in a new ring binder.

**PCB Information** 

PCB information is provided for all current issue PCBs, as well as all previous issue PCBs manufactured in production quantities, and is grouped according to PCB. Thus, you will find the

parts list, grid reference index (if necessary), PCB layouts and circuit diagram(s) for each individual PCB grouped together.

**Errors** 

If you find an error in this manual, or have a suggestion on how it might be improved, please do not hesitate to contact the Technical Writer, Tait Radio Infrastructure Division, Tait Electronics Ltd, P.O. Box 1645, Christchurch, New Zealand.

### **Technical Information**

Any enquiries regarding this manual or the equipment it describes should be addressed in the first instance to your nearest approved Tait Dealer or Service Centre. Further technical assistance may be obtained from the Customer Support Group, Radio Infrastructure Division, Tait Electronics Ltd, Christchurch, New Zealand.

# **Updating Equipment And Manuals**

In the interests of improving performance, reliability or servicing, Tait Electronics Ltd reserve the right to update their equipment and/or manuals without prior notice.

# Copyright

All information contained in this manual is the property of Tait Electronics Ltd. All rights are reserved. This manual may not, in whole or part, be copied, photocopied, reproduced, translated stored or reduced to any electronic medium or machine readable form without prior written permission from Tait Electronics Ltd.

## **Ordering Tait Service Manuals**

Service Manuals should be ordered from your nearest Tait Branch or approved Dealer. When ordering, quote the Tait Internal Part Number (IPN) and, where applicable, the version.

## **Date Of Issue**

IPN M800-00-100 T800 Series Service Manual

Issue 100 published August 1996

# **Table Of Contents**

This manual is divided into two parts as listed below, with each part being further subdivided into sections. There is a detailed table of contents at the start of each part and/or section.

Part	Title		
A	General Servicing Procedures		
В	T807/808 Switching Power Supply		

# **List Of Effective Pages**

The total number of pages in this Manual is 144, as listed below.

Page	Issue Date		Page	Issue Date	
1	31/08/96		1.6	31/08/96	
2	31/08/96		1.7	31/08/96	
3	31/08/96		1.8	31/08/96	
4	31/08/96		1.9	31/08/96	
5	31/08/96		1.10	31/08/96	(blank)
6	31/08/96				,
7	31/08/96		2.1	31/08/96	
8	31/08/96	(blank)	2.2	31/08/96	(blank)
			2.3	31/08/96	
			2.4	31/08/96	
Part A			2.5	31/08/96	
			2.6	31/08/96	
I	31/08/96				
II	31/08/96	(blank)	3.1	31/08/96	
			3.2	31/08/96	(blank)
1.1	31/08/96		3.3	31/08/96	
1.2	31/08/96		3.4	31/08/96	
			3.5	31/08/96	
2.1	31/08/96		3.6	31/08/96	
2.2	31/08/96	(blank)	3.7	31/08/96	
			3.8	31/08/96	
3.1	31/08/96		3.9	31/08/96	
3.2	31/08/96		3.10	31/08/96	(blank)
4.1	31/08/96		4.1	31/08/96	
4.2	31/08/96	(blank)	4.2	31/08/96	(blank)
			4.3	31/08/96	
5.1	31/08/96		4.4	31/08/96	
5.2	31/08/96		4.5	31/08/96	
5.3	31/08/96		4.6	31/08/96	(blank)
5.4	31/08/96	(blank)			
			5.1	31/08/96	
6.1	31/08/96		5.2	31/08/96	(blank)
6.2	31/08/96	(blank)	5.3	31/08/96	
			5.4	31/08/96	
Part B			6.1	31/08/96	
			6.2	31/08/96	(blank)
I	31/08/96		6.3	31/08/96	
II	31/08/96	(blank)	6.4	31/08/96	
			6.5	31/08/96	
1.1	31/08/96		6.6	31/08/96	
1.2	31/08/96	(blank)	6.7	31/08/96	
1.3	31/08/96		6.8	31/08/96	
1.4	31/08/96		6.9	31/08/96	
1.5	31/08/96		6.10	31/08/96	(blank)

Page	Issue Date		Page	Issue Date	
7.1	31/08/96		8.2.39	31/08/96	
7.1	31/08/96	(blank)	8.2.40	31/08/96	
7.2	31/08/96	(Dialik)	8.2.41	31/08/96	
					(blank)
7.4	31/08/96		8.2.42	31/08/96	(blank)
7.5	31/08/96		8.2.43	31/08/96	
7.6	31/08/96		8.2.44	31/08/96	(1-11-)
7.7	31/08/96		8.2.45	31/08/96	(blank)
7.8	31/08/96		8.2.46	31/08/96	
0.1.1	01 /00 /00		8.2.47	31/08/96	(1.11.)
8.1.1	31/08/96	(1.1.1)	8.2.48	31/08/96	(blank)
8.1.2	31/08/96	(blank)	8.2.49	31/08/96	
8.1.3	31/08/96		8.2.50	31/08/96	(1.1.1.)
8.1.4	31/08/96		8.2.51	31/08/96	(blank)
	04 (00 (00		8.2.52	31/08/96	
8.2.1	31/08/96		8.2.53	31/08/96	
8.2.2	31/08/96	(blank)	8.2.54	31/08/96	(blank)
8.2.3	31/08/96		8.2.55	31/08/96	
8.2.4	31/08/96		8.2.56	31/08/96	
8.2.5	31/08/96	(blank)	8.2.57	31/08/96	
8.2.6	31/08/96		8.2.58	31/08/96	
8.2.7	31/08/96		8.2.59	31/08/96	
8.2.8	31/08/96	(blank)	8.2.60	31/08/96	(blank)
8.2.9	31/08/96				
8.2.10	31/08/96				
8.2.11	31/08/96	(blank)			
8.2.12	31/08/96				
8.2.13	31/08/96				
8.2.14	31/08/96	(blank)			
8.2.15	31/08/96				
8.2.16	31/08/96				
8.2.17	31/08/96				
8.2.18	31/08/96				
8.2.19	31/08/96				
8.2.20	31/08/96	(blank)			
8.2.21	31/08/96	()			
8.2.22	31/08/96				
8.2.23	31/08/96				
8.2.24	31/08/96	(blank)			
8.2.25	31/08/96	(Diami)			
8.2.26	31/08/96				
8.2.27	31/08/96	(blank)			
8.2.28	31/08/96	(Dialik)			
8.2.29	31/08/96				
8.2.30	31/08/96	(blank)			
8.2.31	31/08/96	(DIGITIN)			
8.2.32	31/08/96				
8.2.33	31/08/96	(blank)			
8.2.34	31/08/96	(DIGIIN)			
	31/08/96				
8.2.35		(blank)			
8.2.36	31/08/96	(blank)			
8.2.37	31/08/96				
8.2.38	31/08/96				