

Part H T800 Ancillary Equipment

This part of the manual gives a brief description of the ancillary equipment and accessory kits available for use with T800 series base station equipment.

| Section | Page |
|--|------|
| T318-02 Receiver/Transmitter Monitor | 1 |
| T708-91/92 Mains Power Supplies | 1 |
| T800-01 Programming Kit | 1 |
| T800-02 CTCSS Dencoder | 1 |
| T800-03 Auxiliary D-Range | 2 |
| T800-05 Guide Rail | 2 |
| T800-06 External Frequency Reference Kit | 2 |
| T800-07 Multichannel Kit | 2 |
| T800-10 Memory Module | 2 |
| T800-13 Extender Rail | 2 |
| T800-14 Extender Rail | 2 |
| T800-15 Speaker Panel | 3 |
| T800-16 Speaker Panel (formerly T359-01) | 3 |
| T800-19 Rack Mounting Fan | 3 |
| T800-30 & T800-35 DFSK Modulators | 3 |
| T800-60 Slimline Repeater Mounting Kit | 3 |
| T800-80 Local Microphone | 3 |
| T801 Frequency Reference Module | 4 |
| T802 Remote Monitor | 4 |
| T802-10 RF Splitter | 4 |
| T802-21 Programming Kit | 4 |
| T802-22 Modem | 4 |
| T806 Mains Power Supply | 5 |
| T807 Mains Power Supply | 5 |
| T808 Mains Power Supply | 5 |
| T1500-50 Trunking Extra D-Range (formerly T800-50) | 5 |
| T1500-51 Trunking Transmitter Interface (formerly T800-51) | 5 |

