M830-00 **T838/839 Initial Adjustment D3.9** 

RV109 front panel power control 121-231-90-200-210 Components Inc. /IC101 pin 9 ہکسسے high temperature shutdown level **RF** Power LINK1 factory test only DO NOT REMOVE LINK201 high temperature shutdown power check •RV113 -RV115 driver power clamp RV101-·RV107 reverse power meter calibration forward power alarm set RV103 RV105 reverse power forward power meter calibration

Figure 3.3 T838/839 Main Adjustment Controls (T839 Shown)

The photograph printed at right will help you to identify the main controls used in tuning and adjusting the T838/839.

There is a similar photograph in Figure 1.1 which shows the main circuit blocks.

Extending both these fold-outs will allow you to refer to both photographs while using the manual.

Copyright TEL