

Option

500 Hz CW Filter


This option is used in the 9360 range of transceivers that have the 500 Hz CW Filter fitted.

To check if this option is fitted in your transceiver, select View All Settings mode (refer to Chapter 3, *Using View All Settings mode*). The display will show **CW** on one of the transceiver capabilities screens if the option is fitted.

Selecting the CW mode

- Press **USB/LSB** to select the CW mode.

The display shows **USB, LSB, UCW LCW** or **AM** (where available).

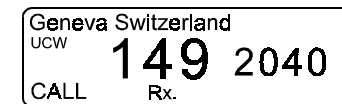

Repeated pressing of **USB/LSB** will cycle through the available options.



CW mode is selected automatically when the morse key is activated.

Deselecting the CW mode

The CW mode is deselected when:

- the channel is changed
- **Scan** is selected
- any PTT source (except CW) is activated
- **USB/LSB** is pressed to select **USB**, **LSB** or **AM** (where available)