

KENWOOD

Document Copyrights

Copyright 2006 by Kenwood Corporation. All rights reserved.

No part of this manual may be reproduced, translated, distributed, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, for any purpose without the prior written permission of Kenwood.

Disclaimer

While every precaution has been taken in the preparation of this manual, Kenwood assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. Kenwood reserves the right to make changes to any products herein at any time for improvement purposes.

文档版权信息

Kenwood Corporation 拥有版权 2006。保留所有权利。

未经 Kenwood 公司预先书面同意，无论出于何种目的，均不得以任何形式或任何方式包括电子、机械、影印、录音或其他方式复制、翻译、分发或传播本手册的任何部分。

免责声明

Kenwood 公司在准备本文档时已采取所有必要的预防措施，恕不对错误或疏漏承担任何责任，也不对因使用本文中所含的信息而导致的损害负责。Kenwood 公司保留出于改进的需要而随时对文中的产品信息做出更改的权利。

UHF FM TRANSCEIVER / UHF 调频对讲机

TK-3207G

SERVICE MANUAL / 维修手册

KENWOOD



Kenwood Corporation

© 2006-4 PRINTED IN JAPAN
B51-8756-00 (S) 576

Antenna
天线
(T90-1039-15): C
(T90-1041-15): C2
(T90-1035-05): C5,C6

Knob (CH)
旋钮(信道)
(K29-9318-03)

Knob (Volume)
旋钮(音量)
(K29-9309-03)

无铅焊接通信产品  
保护环境建伍领先


⚠ 注意：本产品是无铅化焊接产品
在维修时请使用无铅焊锡
和相应的焊接工具
详细事项请访问如下网址了解：
<http://www.kenwoodhk.com.hk/>

Badge
徽章
(B43-1190-04)

Button knob(PTT)
钮扣按钮(PTT)
(K29-9308-13)

Button knob
钮扣按钮
(Side1/Side2)
(侧面1/侧面2)
(K29-9364-03)

Plastic cabinet assy
机壳
(A02-3945-03)

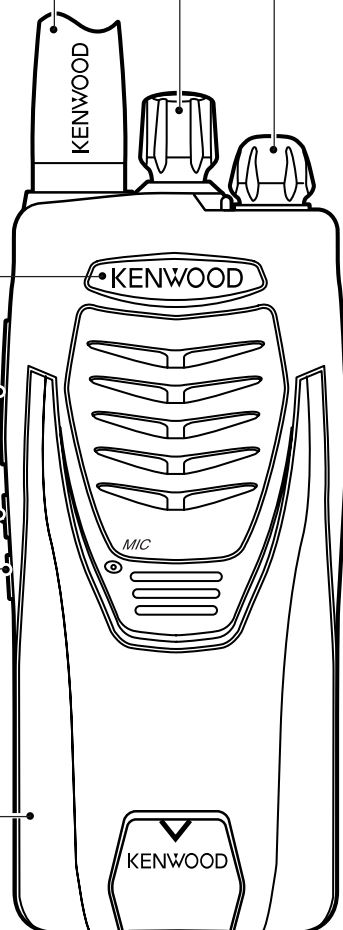

This product uses Lead Free solder.

GENERAL	2	概述	2
SYSTEM SET-UP	3	系统体系	3
REALIGNMENT	4	模式组合	4
DISASSEMBLY FOR REPAIR	7	维修拆卸	7
CIRCUIT DESCRIPTION	12	电路说明	12
TERMINAL FUNCTION	20	端子功能	20
SEMICONDUCTOR DATA	20	半导体数据	20
COMPONENTS DESCRIPTION	22	元件说明	22
PARTS LIST	24	零件表	24
EXPLODED VIEW	32	部件分解图	32
PACKING	33	包装	33
ADJUSTMENT	34	调整	34
PC BOARD		PC 板	
TX-RX UNIT (X57-6890-XX)	46	TX-RX 单元 (X57-6890-XX)	46
SCHEMATIC DIAGRAM	50	原理图	50
BLOCK DIAGRAM	54	方块图	54
LEVEL DIAGRAM	56	电平图	56
OPTIONAL ACCESSORIES		可选附件	
KSC-31 (RAPID CHARGER)	57	KSC-31 (快速充电器)	57
KNB-29N (Ni-MH BATTERY PACK)	57	KNB-29N (Ni-MH 电池组)	57
KNB-30A (Ni-Cd BATTERY PACK)	58	KNB-30A (Ni-Cd 电池组)	58
KBH-10 (BELT CLIP)	58	KBH-10 (皮带夹)	58
SPECIFICATIONS	59	规格	封底

GENERAL / 概述

INTRODUCTION

SCOPE OF THIS MANUAL

This manual is intended for use by experienced technicians familiar with similar types of commercial grade communications equipment. It contains all required service information for the equipment and is current as of the publication date. Changes which may occur after publication are covered by either Service Bulletins or Manual Revisions. These are issued as required.

ORDERING REPLACEMENT PARTS

When ordering replacement parts or equipment information, the full part identification number should be included. This applies to all parts : components, kits, or chassis. If the part number is not known, include the chassis or kit number of which it is a part, and a sufficient description of the required component for proper identification.

PERSONAL SAFETY

The following precautions are recommended for personal safety:

- DO NOT transmit until all RF connectors are verified secure and any open connectors are properly terminated.
- SHUT OFF and DO NOT operate this equipment near electrical blasting caps or in an explosive atmosphere.
- This equipment should be serviced by a qualified technician only.

引言

本手册的范围

本手册是提供给熟悉通信专业并且具有维修经验的技术人员使用的。它包括了维修该设备所需要的全部资料和现行出版日期。在出版后如果发生变动，则根据需要使用《维修通报》或《手册修订本》进行补充。

替换零件的订购

当订购替换零件或设备资料时,应注明完整的零件识别号码。所有的零件均有识别号码:元件,组件或机壳。如果不知道零件的号码,为了正确地识别,必须注明此元件所属的机壳或组件的号码,并对元件进行充分的说明。

个人安全

为了个人的安全,请注意下列事项:

- 在没有认真核实所有射频插头之前或有任何一个打开的插头没有连接到相应端子上的情况下,均不要发射。
- 在电爆管附近或在易燃性气体环境中,必须关掉电源,不要操作本设备。
- 本设备只应该由有资格的技术人员来维修。

GENERAL / 概述

SERVICE

This transceiver is designed for easy servicing. Refer to the schematic diagrams, printed circuit board views, and alignment procedures contained within.


维修服务

为了便于维修本设备，建立了完整的维修服务体系，提供了包括原理图，印刷电路板图和调整步骤在内的资料供参考。

Unit		TX-RX Unit	Frequency range	Remarks
Model & destination				
TK-3207G	C	X57-6890-21	440~480MHz	IF1 : 38.85MHz LOC : 38.4MHz
	C2	X57-6890-22	400~430MHz	
	C5	X57-6890-25	370~390MHz	
	C6	X57-6890-24	350~370MHz	


单元		TX-RX 单元	频率范围	备注
型号和类型				
TK-3207G	C	X57-6890-21	440~480MHz	IF1 : 38.85MHz LOC : 38.4MHz
	C2	X57-6890-22	400~430MHz	
	C5	X57-6890-25	370~390MHz	
	C6	X57-6890-24	350~370MHz	

SYSTEM SET-UP / 系统体系

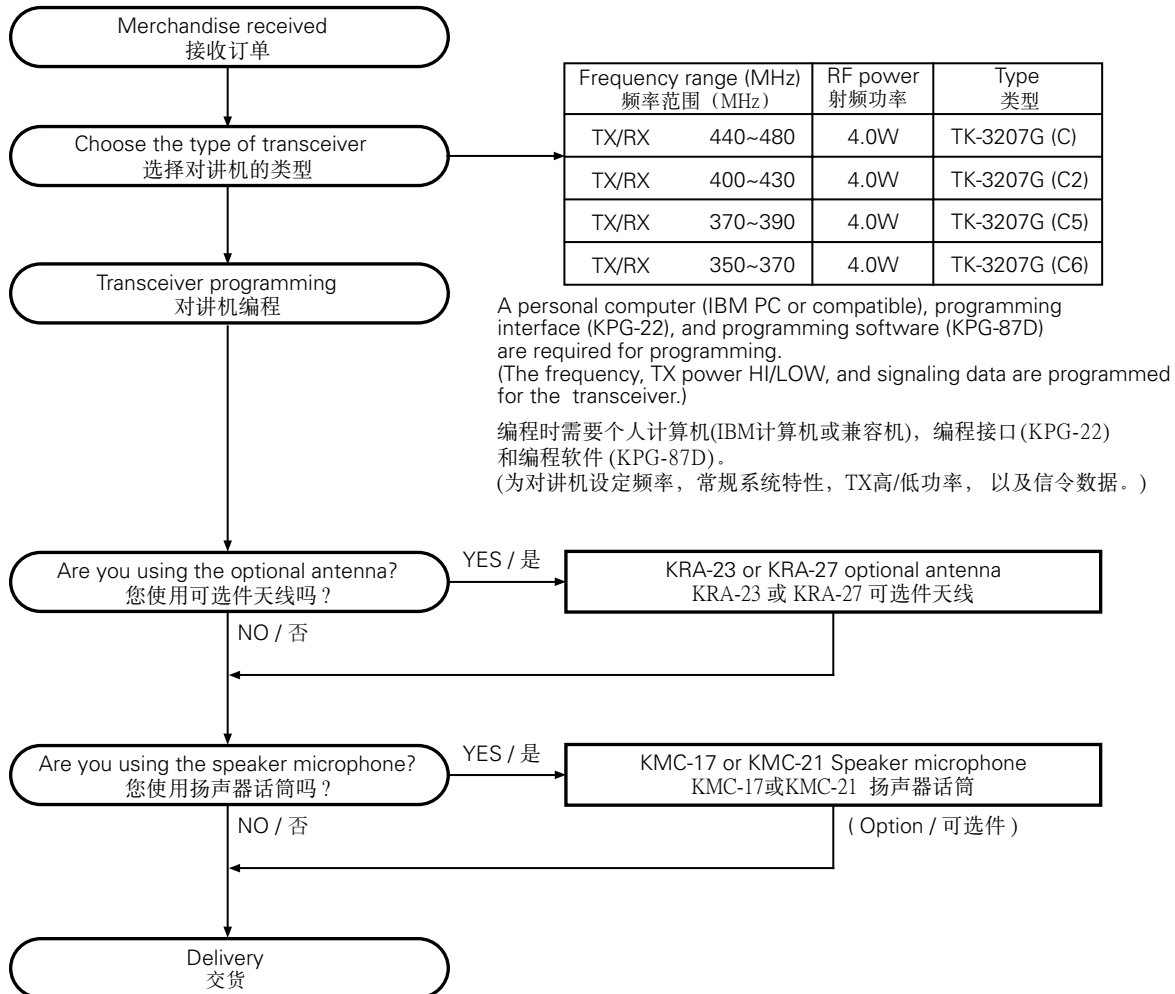

REALIGNMENT / 模式组合

1. Modes

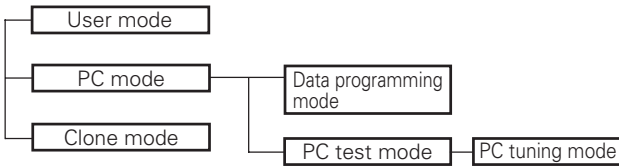

Mode	Function
User mode	For normal use.
PC mode	Used for communication between the transceiver and PC (IBM compatible).
Data programming mode	Used to read and write frequency data and other features to and from the transceiver.
PC test mode	Used to check the transceiver using the PC. This feature is included in the KPG-87D.
Clone mode	Used to transfer programming data from one transceiver to another.

2. How to Enter Each Mode

Mode	Operation
User mode	Power ON
PC mode	Received commands from PC
Clone mode	[PTT]+[Side2]+Power ON (Two seconds)

3. PC Mode

3-1. Preface

The transceiver is programmed using a personal computer, a programming interface cable (KPG-22) and programming software (KPG-87D).

The programming software can be used with an IBM PC or compatible. Figure 1 shows the setup of an IBM PC for programming.

3-2. Connection procedure

1. Connect the transceiver to the personal computer with the interface cable.
2. When the POWER is switched on, user mode can be entered immediately. When the PC sends a command, the transceiver enters PC mode.
When data is transmitting from the transceiver, the red LED lights.
When data is received by the transceiver, the green LED lights.

Notes:


- The data stored in the personal computer must match the model type when it is written into the EEPROM.
- Change the transceiver to PC mode, then attach the interface cable.

3-3. KPG-22 description

(PC programming interface cable: Option)

The KPG-22 is required to interface the transceiver with the computer. It has a circuit in its D-sub connector (25-pin) case that converts the RS-232C logic level to the TTL level.

1. 模式

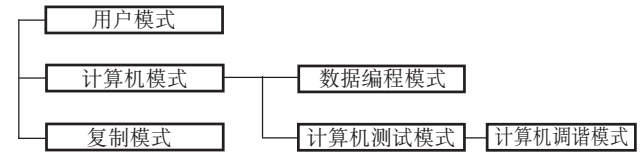

模式	功能
用户模式	一般使用
计算机模式	用于对讲机与计算机(IBM 兼容机)之间的通信。
数据编程模式	用于读出和写入频率数据以及其他功能。
计算机测试模式	用于使用计算机来检测对讲机。此功能包括在 KPG-87D 内。
复制模式	用于从一个对讲机编程数据复制到另一个对讲机。

2. 如何进入每一种模式

模式	操作
用户模式	接通电源
计算机模式	从计算机接收指令
复制模式	[PTT]+[侧面 2]+ 接通电源 (2 秒钟)

3. 计算机模式

3-1. 前言

对讲机使用计算机, 编程接口电缆 (KPG-22) 和编程软件 (KPG-87D) 进行编程。

IBM 计算机或兼容机可以使用编程软件。图 1 显示 IBM 计算机编程的设置。

3-2. 连接步骤

1. 使用接口电缆将对讲机连接到计算机上。
2. 当电源接通时, 立即进入用户模式。当计算机发出指令时, 对讲机进入计算机模式。
当对讲机传送数据时, 红色 LED 亮灯。
当对讲机接收数据时, 绿色 LED 亮灯。

注意:

- 当把储存在计算机中的数据写入到 EEPROM 中时, 机型型号必须相匹配。
- 将对讲机改变为计算机模式, 然后连接接口电缆。

3-3. KPG-22 说明(计算机编程接口电缆: 可选件)

对讲机需要通过接口电缆 KPG-22 与电脑连接。此接口电缆的 D-sub 连接器 (25 芯) 中有一个将 RS-232C 逻辑电平转换为 TTL 电平的电路。

REALIGNMENT / 模式组合

The KPG-22 connects the SP/MIC connector of the transceiver to the computer's RS-232C serial port.

3-4. Programming software KPG-87D description

KPG-87D is the programming software for the transceiver supplied on a CD-ROM. This software runs under Windows 98, ME, Windows 2000 or XP on an IBM-PC or compatible machine.

The data can be input to or read from the transceiver and edited on the screen. The programmed or edited data can be printed out. It is also possible to tune the transceiver.

KPG-22 连接对讲机的 SP/MIC 连接器和电脑的 RS-232C 串行接口。

3-4. 编程软件 KPG-87D 说明

KPG-87D 是以 CD-ROM 形式提供的对讲机用编程软件。此软件的运行环境为 IBM-PC 机或兼容机的 Windows 98,ME,Windows 2000 或 XP。

数据可以被输入到对讲机或从对讲机中读取数据，并且在屏幕上进行编辑。已被编程或编辑的数据可以打印出来。也可以调整对讲机的指标。

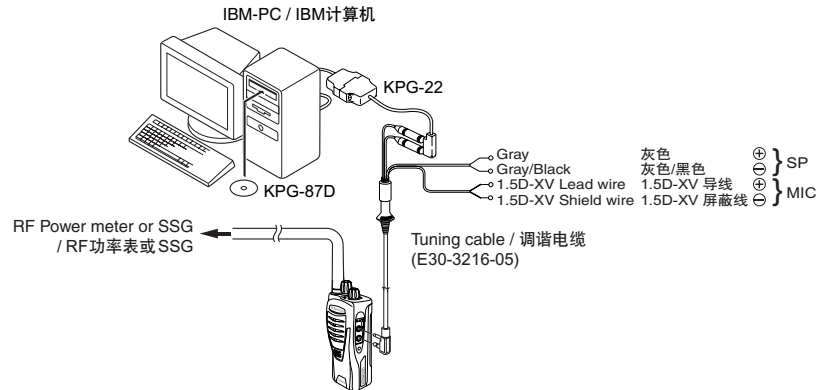


Fig. 1 / 图 1

4. Clone Mode

4-1. Outline

"Clone Mode" copies the transceiver data to another transceiver.

The dealer can copy the transceiver data to another transceiver even without the use of a personal computer.

4-2. Example

The transceiver can copy the programming data to one or more transceivers via RF communication.

The clone source and clone target/s must be in Clone mode.

4-3. Operation

- To switch the clone target/s to Clone mode, press and hold the [PTT] and [Side2] keys while turning the transceiver power ON.
- Wait for 2 seconds. The LED will light orange and the transceiver will announce "Clone".
- Select a channel table number using Side1 (increment channel table) and Side2 (decrement channel table) keys.
- To switch the clone source to Clone mode, press and hold the [PTT] and [Side2] keys while turning the transceiver power ON.
- Wait for 2 seconds. The LED will light orange and the transceiver will announce "Clone".
- Select the same channel table number as the clone target/s.
- Press [PTT] on the clone source to begin data transmission. When the clone target starts to receive data, the LED will light green. When the clone source finishes sending data, a "confirmation" tone will sound.
If data transmission fails while cloning, an "error" tone will sound from the Target unit.
- If the cloning fails, no data will be available in the Target unit when it is returned to User mode.

4. 复制模式

4-1. 概要

"复制模式"可以将一台对讲机的数据复制到其它的对讲机。经销商甚至不使用个人电脑也可以将一台对讲机的数据复制到其它的对讲机。

4-2. 例:

对讲机可以通过 RF 通信复制编程数据到一台或更多的对讲机。

复制主机和复制子机必须处于复制模式。

4-3. 操作方法

- 将子机切换到复制模式，旋转对讲机电源的同时，持续按 [PTT] 键和 [侧面 2] 键。
- 等待 2 秒。LED 将呈橘黄色并且对讲机将发出"复制"的声音。
- 用侧面 1 (频道表递增) 键和侧面 2 (频道表递减) 键选择频率表号码。
- 将主机切换到复制模式，旋转对讲机电源的同时，持续按 [PTT] 键和 [侧面 2] 键。
- 等待 2 秒。LED 将呈橘黄色并且对讲机将发出"复制"的声音。
- 选择与复制子机相同的频率表号码。
- 按复制主机上的 [PTT]，开始数据传输。
当复制子机开始接收数据时，LED 将呈绿色。
当复制主机完成传送数据时，将发出一个"确认"音。
如果在复制过程中数据传输失败，子机将发出一个"错误"音。
- 如果复制失败，子机回到用户模式时数据随即消失。

REALIGNMENT / 模式组合

9. When the cloning is successful, the Target unit's "Scan" and "Key lock" functions will return to their default values (Scan = OFF, Key lock = OFF).

Notes:

- The dealer can clone data to two or more transceivers by repeating the above procedures.
- If the transceivers Clone Mode is configured as "Disabled", the transceiver cannot enter Clone mode.
- The table shown below will cover the frequency tables used for wireless cloning.
- Clone mode cannot be entered in battery low state.
- A unit cannot be a "Source Unit" if it is unprogrammed. If [PTT] is pressed, an "error" tone will sound.
- The language used in cloning depends on the "Model type" setting, not the FPU setting. C type TK-2207G transceiver and C, C2, C5 and C6 type TK-3207/3207G transceivers will use Chinese. Other types English.
- Once a unit is set to be the Source, it cannot be a target after the data has been transmitted. This protects the data in the Source unit.
- Electronic interface may cause a failure in data transfer during Wireless Clone, such as when waveforms or electromagnetics are being performed at the workbench.
- Clone mode can be used ONLY by the authorized service personal.
- The Clone mode setting must be configured as "Disable" before being delivered to the end-user.
- To clone, replace the antenna from both the source transceiver and the target transceiver with a dummy load.
- The transmit output power is automatically set to Low in Clone mode.

9. 当复制成功时，子机的 "扫描" 和 "键锁定" 功能将回到它们的初始值 (扫描 =OFF, 键锁定 =OFF)

注意:

- 经销商可以反复上述过程复制数据到2个或更多的对讲机。
- 如果对讲机复制模式被设置为“无效”，则对讲机不能进入复制模式。
- 下表包含了无线复制用的频率表。
- 当电池处于低电压状态时不能进入复制模式。
- 如果对讲机是非编程的它将不能成为主机。如果按[PTT]，将发出一个“错误”音。
- 复制时所用的语言是根据“样机类别”设置，而不是FPU设置，TK-2207G的C类型的对讲机和TK-3207/3207G的C, C2, C5和C6类型的对讲机用中文，其它类别用英文。
- 对讲机一旦被设置为主机，数据传送以后，它就不能成为子机。这是为了保护主机里的数据。
- 在无线复制的数据传输过程中，例如在工作台产生的电波或电磁干扰有可能引起传输失败。
- 复制模式可以仅被批准的服务人员使用。
- 在交付给最终用户之前，复制模式设置必须被设置为“无效”。
- 为了复制，将模拟负载代替主对讲机和子对讲机的天线。
- 在复制模式，发射功率自动设定为低。

Clone Frequency Table

Type	C	C2	C5	C6
Operating Frequency (MHz)	440~480	400~430	370~390	350~370
Clone Frequency Table				
1	440.000	400.000	370.000	350.000
2	442.000	401.000	371.000	351.000
3	446.000	402.000	372.000	352.000
4	448.000	403.000	373.000	353.000
5	450.000	404.000	374.000	354.000
6	452.000	405.000	375.000	355.000
7	454.000	406.000	376.000	356.000
8	456.000	407.000	377.000	357.000
9	458.000	408.000	378.000	358.000
10	460.000	409.000	379.000	359.000
11	462.000	410.000	380.000	360.000
12	464.000	411.000	381.000	361.000
13	466.000	412.000	382.000	362.000
14	468.000	413.000	383.000	363.000
15	470.000	414.000	384.000	364.000
16	472.000	415.000	385.000	365.000
17	474.000	416.000	386.000	366.000
18	476.000	417.000	387.000	367.000
19	478.000	418.000	388.000	368.000
20	480.000	419.000	389.000	369.000

复制频率表


类型	C	C2	C5	C6
操作频率 (MHz)	440~480	400~430	370~390	350~370
复制频率表				
1	440.000	400.000	370.000	350.000
2	442.000	401.000	371.000	351.000
3	446.000	402.000	372.000	352.000
4	448.000	403.000	373.000	353.000
5	450.000	404.000	374.000	354.000
6	452.000	405.000	375.000	355.000
7	454.000	406.000	376.000	356.000
8	456.000	407.000	377.000	357.000
9	458.000	408.000	378.000	358.000
10	460.000	409.000	379.000	359.000
11	462.000	410.000	380.000	360.000
12	464.000	411.000	381.000	361.000
13	466.000	412.000	382.000	362.000
14	468.000	413.000	383.000	363.000
15	470.000	414.000	384.000	364.000
16	472.000	415.000	385.000	365.000
17	474.000	416.000	386.000	366.000
18	476.000	417.000	387.000	367.000
19	478.000	418.000	388.000	368.000
20	480.000	419.000	389.000	369.000

DISASSEMBLY FOR REPAIR / 维修拆卸

Disassembly Procedure

■ Removing the case assembly from the chassis

1. Remove the volume knob ① and channel knob ②.
2. Remove two screws ③.
3. Lift and remove the chassis from the case assembly ④.
(Use a flat-head screwdriver to easily lift the chassis.)

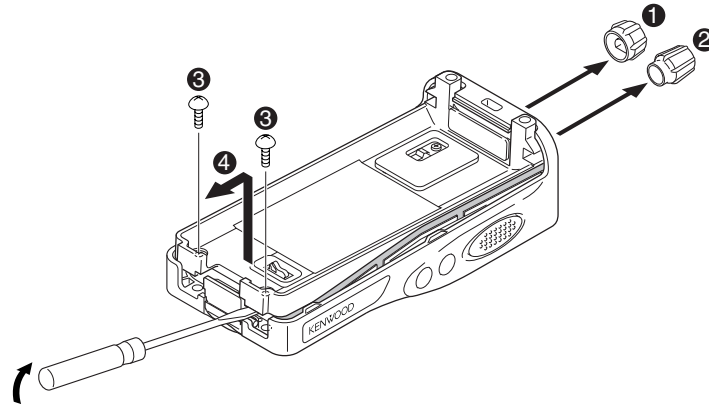

拆卸程序

■ 拆卸机壳

1. 卸下音量旋钮 ① 和信道旋钮 ②。
2. 卸下 2 个螺丝 ③。
3. 抬起机架 ④，将其与机壳分离取出。(使用一字形螺丝刀会比较容易抬起机架。)

■ Removing the TX-RX unit from the chassis

1. Remove the packing ⑤ from the SP / MIC jack of the TX-RX unit.
2. Remove eleven screws ⑥ fixing the TX-RX unit.
3. Remove the fixing bracket ⑦ of the SP / MIC.
4. Remove the solder of the antenna terminal with a soldering iron ⑧.
5. Remove the solder of the positive terminal with a soldering iron ⑨.

Note: You can remove the TX-RX unit from the chassis without removing the solder at the positive terminal. However, in this case, you can not attach the packing (G53-1605-03) that is on the positive terminal to the chassis in assembling. So, it is advisable to remove the solder on the positive terminal first.


6. Remove the FPC from the flat cable connector ⑩.
7. Lift and remove the TX-RX unit from the chassis ⑪.

■ 拆卸 TX-RX 单元

1. 从 TX-RX 单元的 SP / MIC 插孔卸下橡胶垫 ⑤。
2. 卸下固定 TX-RX 单元的 11 个螺丝 ⑥。
3. 卸下 SP / MIC 部的固定支架 ⑦。
4. 用电烙铁烫开天线端子的焊锡 ⑧。
5. 用电烙铁烫开电池正极端子的焊锡 ⑨。

注意：虽然不烫开电池正极端子的焊锡也可以从机架拆卸 TX-RX 单元，但是组装时，电池正极端子连接的垫片 (G53-1605-03) 不能安装到机架。因此，请先烫开电池正极端子的焊锡。

6. 从扁平电缆连接器卸下 FPC ⑩。
7. 拿起 TX-RX 单元 ⑪，从机架拆卸下来。

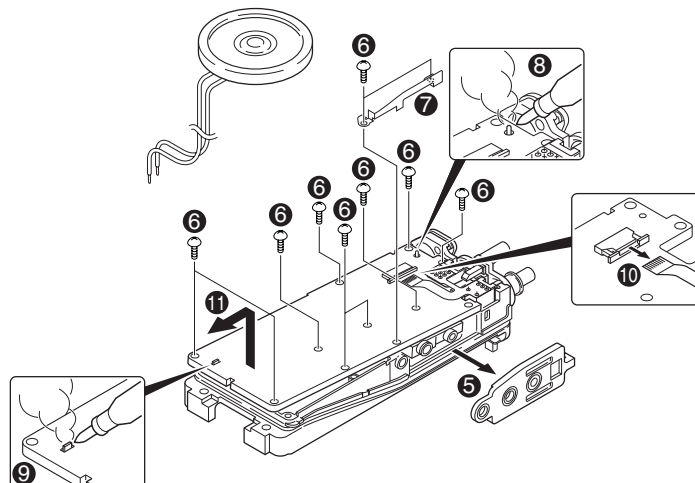

DISASSEMBLY FOR REPAIR / 维修拆卸

■ Removing the battery release lever from the case assembly

1. Press the upper part of the lever toward the inside of the case assembly. One side of the shaft will be removed ①.
2. Lift and remove the battery release lever from the case assembly ②.


Note: Scratch and widen the glue hole if there is difficulty in removing the other end of the shaft.

No glue is required when you reassemble the battery release lever.

■ 从机壳拆卸电池分离拨杆

1. 向机壳的内侧按压拨杆上部之后，就可以卸下轴的一侧 ①。
2. 拿起电池分离拨杆 ②，就可以从机壳上拆卸下来。

注意：如果很难拆卸轴的其他端部时，请刮掉和扩展粘合孔。当你重新组装电池分离杆时，则不需要粘合。

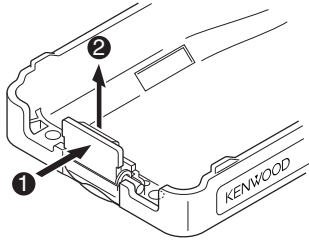

Precautions for Reassembly

■ Attaching the battery release lever to the case assembly

1. Insert one side of the shaft into the hole at the lever fitting section on the case assembly ①.

Note: The thin spring (G01-4543-04) should be positioned above two tabs of the lever.

2. Tilt the battery release lever slightly forward ②, so that the thick spring (G01-4542-04) is positioned below the case surface.

3. With the thick spring positioned below the case surface, attach the other side of the shaft to the case assembly by pressing the battery release lever ③ until it snaps into place ④.

Note: Be careful not to tilt the battery release lever too forward. If the battery release lever is pushed in this state where two tabs come below the case surface, there is a possibility of damaging two tabs.

重新组装注意事项

■ 把电池分离拨杆安装到机壳

1. 把轴的一侧插入到机壳的拨杆安装部的孔里 ①。


注意：细弹簧(G01-4543-04)的横杆部分应安装到拨杆的2个突起的上侧。

2. 轻轻地前推电池分离杆倾斜到 ②，这样粗弹簧(G01-4542-04)被定位在机壳下面。

3. 随着粗弹簧定位到机壳下面，通过按电池分离杆 ③ 直到它嵌到位置 ④ 轴的另一侧接触机壳组件。

注意：注意不要把电池分离杆倾斜得太靠前。


如果电池分离杆被推到机壳下面的2个卡头的位置，就有可能损坏此2个卡头。

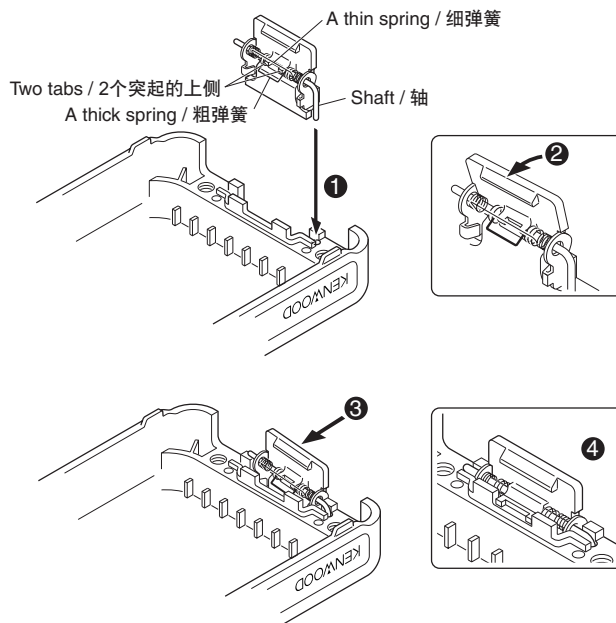

DISASSEMBLY FOR REPAIR / 维修拆卸

■ Assembling the battery release lever

1. Place the lever ② onto the stopper ①.
2. Place the thick spring ③ onto the lever.
3. Hook the right and left ends of the thin spring ④ onto the tabs of the stopper, then place the thin spring onto the lever ⑤.
4. Slide the shaft through the hole of the stopper and lever ⑥.

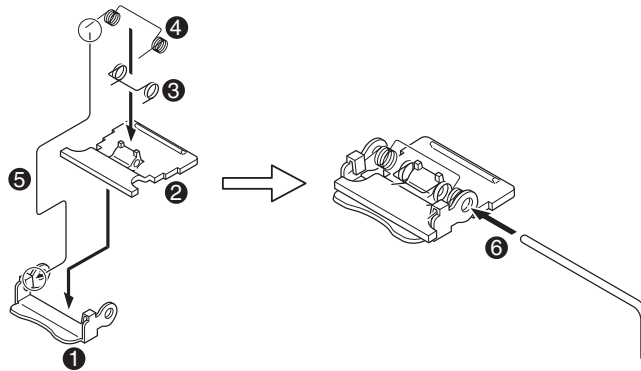


■ 电池分离拨杆的组装方法

1. 把拨杆 ② 置于止动器 ① 的上面。
2. 把粗弹簧 ③ 置于拨杆的上面。
3. 把细弹簧置于拨杆的上面，并让细弹簧 ④ 的左右端置于止动器的两个勾内 ⑤。
4. 把轴穿过止动器和拨杆的孔 ⑥。

■ Attaching the positive terminal to the chassis

Always attach the positive terminal to the chassis, using the following procedures, before mounting the TX-RX unit onto the chassis.

1. Remove the holder assembly ② from the packing ① of the positive terminal.
2. Mount the packing of the positive terminal into the chassis hole ③.
3. Mount the holder assembly into the packing of the positive terminal ④.

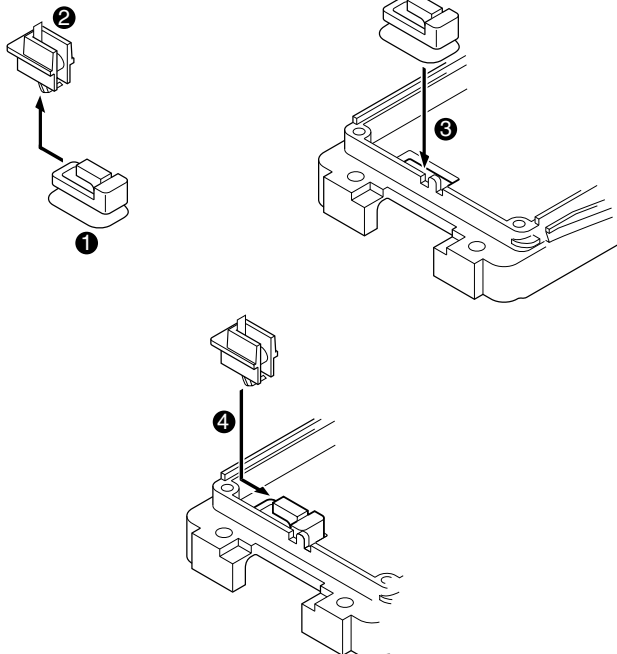

■ 把电池正极端子安装机架

把TX-RX单元组装到机架之前，必须按照以下的顺序把电池正极端子安装到机架。

1. 从电池正极端子的垫片 ① 取下支架总成 ②。
2. 把电池正极端子的垫片装到机架孔 ③。
3. 把支架总成组装到电池正极端子的垫片上 ④。


TK-3207G

DISASSEMBLY FOR REPAIR / 维修拆卸

■ Mounting the chassis to the case assembly

1. Confirm that the waterproof packing attached to the circumference of the chassis is securely inserted in the groove of the chassis ①.
2. Twist the speaker wires twice, then attach the speaker to the speaker recess of the case assembly ②. Make sure the speaker is securely inserted.

Confirm that the waterproof packing is securely inserted in the groove of the chassis.

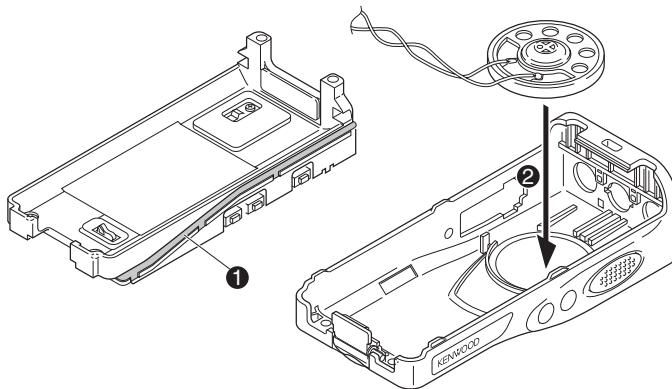

■ 安装机壳和机架

1. 确认机架四周的防水垫是否确实地进入机架的槽里 ①。
2. 先将扬声器的两根引线扭在一起转2圈，然后把扬声器安装到机壳的扬声器安装部 ②。确保扬声器完全被插入。

确认防水垫是否确实地进入机架的槽里。

3. Insert the upper part of the chassis into the case assembly ③.

Note: Take care that the speaker lead wire is not caught by the microphone element.

4. Press the chassis ④ and the case assembly together to attach them.


Note: If the packing of the SP / MIC does not come to the correct position after attaching the chassis to the case assembly, reposition the packing with your fingers.

3. 把机架上侧插到机壳内 ③。

注意：请不要使扬声器引线勾住麦克风。

4. 下压机架 ④，使机架和机壳合为一体并安装好。

注意：把机架安装到机壳后，如果SP / MIC的橡胶垫不在正常的位置时，请用手指将其调整到正常的位置。

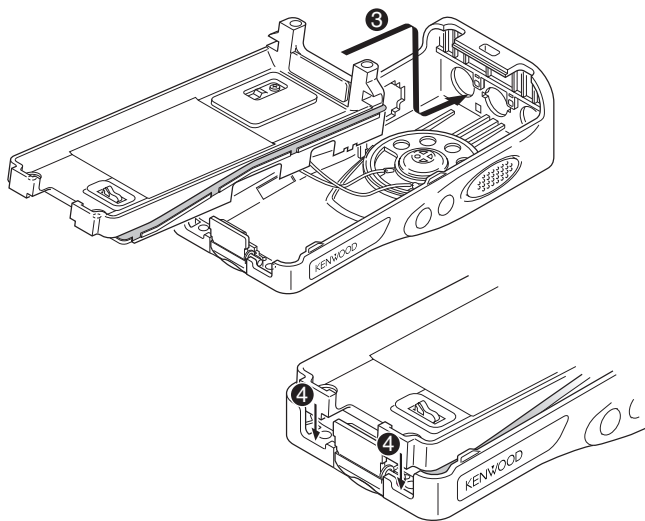


DISASSEMBLY FOR REPAIR / 维修拆卸

■ Attaching the antenna receptacle to the chassis

Screw the antenna receptacle to the chassis in the order shown in the drawing so that the antenna receptacle comes to the center of the case hole.

■ 把天线插座 (Antenna receptacle) 安装到机架

为了能把天线插座安装到机芯孔的中心, 在将天线插座安装到机架时, 请按照图示的顺序固定螺丝。

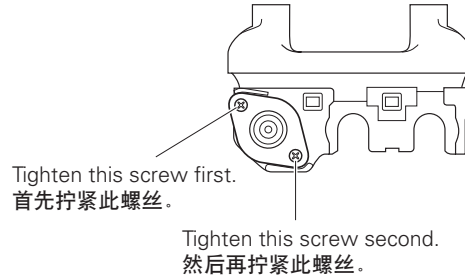

■ The nuts of the volume knob and channel knob

Note that the shapes, colors and heights of nuts of the volume knob and channel knob are different from one another. (The nut of volume knob is silver, and the nut of channel knob is gold)


Use the following jig when removing the nuts of the volume knob and channel knob.

- Jig (Part No. : W05-1012-00)

■ 关于音量旋钮和信道旋钮的螺母

音量旋钮和信道旋钮的螺母形状不同, 颜色高度也不同, 因此请注意。(音量旋钮螺母为银色, 信道旋钮的螺母为金色)

- 夹具 (零件号: W05-1012-00)

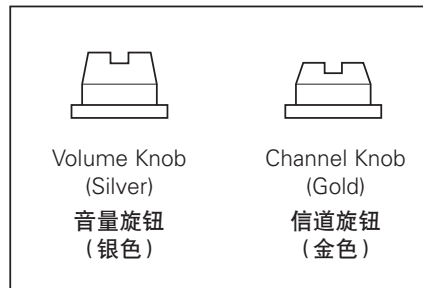


■ Screw sequence for mounting the TX-RX unit to the chassis

Attach the TX-RX unit to the chassis using the screws in the order shown in the drawing below.

■ 安装 TX-RX 单元到机架上的螺钉顺序

利用下图所示的螺钉顺序安装 TX-RX 单元到机架上。

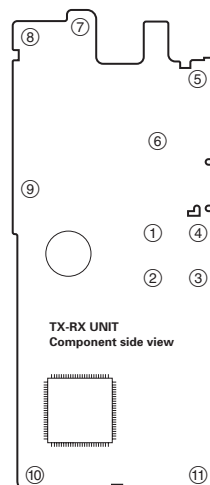

CIRCUIT DESCRIPTION / 电路说明

1. Frequency Configuration

The receiver utilizes double conversion. The first IF is 38.85 MHz and the second IF is 450 kHz. The first local oscillator signal is supplied from the PLL circuit.

The PLL circuit in the transmitter generates the necessary frequencies. Fig. 1 shows the frequencies.

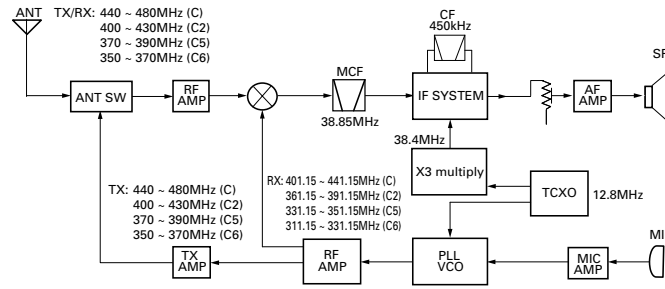


Fig. 1 Frequency configuration / 图 1 频率构成

2. Receiver

The frequency configuration of the receiver is shown in Fig. 2.

2. 接收部

接收部的频率构成如图 2 所示。

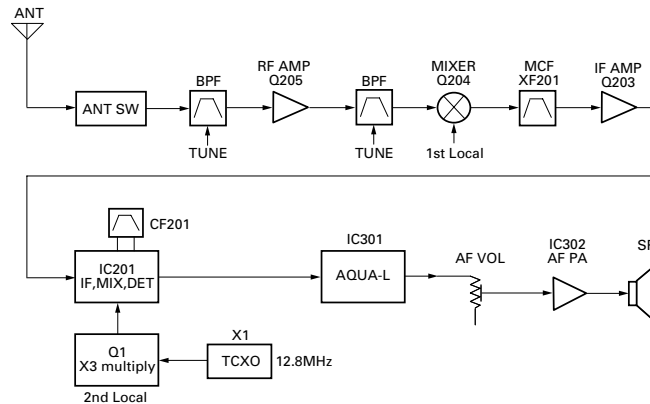


Fig. 2 Receiver section / 图 2 接收部

1) Front End (RF AMP)

The signal coming from the antenna passes through the transmit/receive switching diode circuit, (D103, D104, D106 and D122) passes through a BPF (L229 and L228), and is amplified by the RF amplifier (Q205).

The resulting signal passes through a BPF (L214, L212 and L211) and goes to the mixer. These BPFs are adjusted by variable capacitors (D203, D204, D205, D206 and D210). The input voltage to the variable capacitor is regulated by voltage output from the microprocessor (IC405).

2) First Mixer

The signal from the front end is mixed with the first local oscillator signal generated in the PLL circuit by Q1 to produce a first IF frequency of 38.85 MHz.

The resulting signal passes through the XF201 MCF to cut the adjacent spurious and provide the optimum characteristics, such as adjacent frequency selectivity.

1) 前端 (RF 放大器)

从天线接收的信号进入发送 / 接收转换开关二极管电路 (D103, D104, D106 和 D122), 然后通过 BPF (L229 和 L228), 并且被 RF 放大器 (Q205) 放大。

此信号通过 BPF (L214, L212 和 L211) 然后进入混频。这些 BPF 被可变电容器 (D203, D204, D205, D206 和 D210) 调整。输入可变电容器的电压被经微处理器 (IC405) 的电压输出调整。

2) 第一混频器

前端的信号与 PLL 电路产生的第一本振信号在 Q1 混频, 生成 38.85MHz 频率的第一中频信号。

生成的信号通过 XF201 MCF。

CIRCUIT DESCRIPTION / 电路说明

3) IF Amplifier Circuit

The first IF signal is passed through a four-pole monolithic crystal filter (XF201) to remove the adjacent channel signal. The filtered first IF signal is amplified by the first IF amplifier (Q203) and then applied to the IF system IC (IC201). The IF system IC provides a second mixer, second local oscillator, limiting amplifier, quadrature detector and RSSI (Received Signal Strength Indicator). The second mixer mixes the first IF signal with the 38.4MHz of the second local oscillator output (TCXO X1) and produces the second IF signal of 450kHz.

The second IF signal is passed through the ceramic filter (CF201) to remove the adjacent channel signal. The filtered second IF signal is amplified by the limiting amplifier and demodulated by the quadrature detector with the ceramic discriminator (CD201). The demodulated signal is routed to the audio circuit.

4) Wide/Narrow Switching Circuit

Narrow and Wide settings can be made for each channel by switching the demodulation level.

The WIDE (low level) and NARROW (high level) data is output from IC405, pin 45.

When a WIDE (low level) data is received, Q202 turn on. When a NARROW (high level) data is received, Q202 turn off.

Q202 turns off/on with the Wide/Narrow data and the IC201 detector output level is switched to maintain a constant output level during wide or narrow signals.

3) 中频放大电路

第一中频信号通过晶体滤波器 (XF201) 消除相邻信道的信号。经滤波的第一中频信号被第一中频放大器 (Q203) 放大并进入中频系统芯片 (IC201)。中频系统芯片提供第二混频器, 第二本振信号, 限幅放大器, 正交检测器和 RSSI (接收信号强度指示器)。第二混频器将第一中频信号与 38.4MHz 的第二本振信号输出 (TCXO X1) 进行混频, 并生成 450kHz 的第二中频信号。

第二中频信号通过陶瓷滤波器 (CF201) 继续消除相邻信道的信号。经滤波的第二中频信号被限幅放大器放大并被带有陶瓷鉴频器 (CD201) 的正交检测器解调。经解调的信号进入音频电路。

4) 宽 / 窄开关电路

可以通过开启宽窄开关对各信道进行宽窄设定。

WIDE (低电平) 和 NARROW (高电平) 数据被 IC405、45 管脚输出。

当接收到 WIDE (低电平) 数据时, Q202 接通。

当接收到 NARROW (高电平) 数据时, Q202 断开。

Q202 伴随着宽 / 窄数据而接通 / 断开, IC201 检测器输出电平经常变化用来维持宽或窄信号过程中的恒定输出电平。

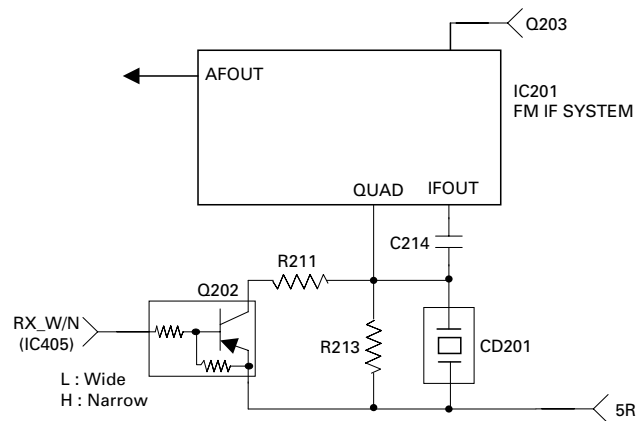


Fig. 3 Wide/Narrow switching circuit / 图3 宽 / 窄开关电路

5) Audio Amplifier Circuit

The demodulated signal from IC201 goes to AF amplifier through IC301.

The signal then goes through an AF volume control, and is routed to an audio power amplifier (IC302) where it is amplified and output to the speaker.

5) 音频放大器电路

来自于 IC201 的解调信号通过 IC301 送到音频放大器。

信号通过 AF 音量控制, 在音频功率放大器 (IC302) 进行放大后输出到扬声器。

CIRCUIT DESCRIPTION / 电路说明

6) Squelch

Part of the AF signal from the IC enters the FM IC (IC201) again, and the noise component is amplified and rectified by a filter and an amplifier to produce a DC voltage corresponding to the noise level.

The DC signal from the FM IC goes to the analog port of the microprocessor (IC405). IC405 determines whether to output sounds from the speaker by checking whether the input voltage is higher or lower than the preset value.

To output sounds from the speaker, IC405 sends a high signal to the SP MUTE line and turns IC302 on through Q303, Q304, Q305, Q306 and Q316. (See Fig. 4)

7) Receive Signaling

(1) QT/DQT

The output signal from FM IC (IC201) enters the microprocessor (IC405) through IC301. IC405 determines whether the QT or DQT matches the preset value, and controls the SP MUTE and the speaker output sounds according to the squelch results.

(2) MSK (Fleet Sync)

The MSK input signal from the FM IC goes to pin 31 of IC 301. The signal is demodulated by MSK demodulator in IC 301. The demodulated data goes to the CPU for processing.

6) 静噪

FM IC (IC201) 输出的 AF 信号的一部分再进入 IC，噪声成份通过滤波器和放大器进行放大和修正，生成与噪声电平相应的 DC 电压。

DC 信号通过 FM IC 被送到微处理器的模拟端口 (IC405)。IC405 通过检测输入的电压是高于还是低于预设值来决定是否从扬声器输出声音。由扬声器输出声音时，IC405 发送高电平信号给 SP MUTE 线，通过 Q303, Q304, Q305, Q306 和 Q316 打开 IC302。(见图 4)。

7) 接收信令

(1) QT/DQT

FM IC (IC201) 输出的信号通过 IC301 进入微处理器 (IC405)。IC405 测定 QT 或 DQT 是否与设置的值匹配，并根据此结果来控制 SP MUTE 和扬声器输出声音。

(2) MSK (Fleet Sync)

来自 FM IC 的 MSK 输入信号送到 IC301 的 31 脚。信号在 IC301 上的 MSK 调制器中进行调制。被解调的数据送到 CPU 进行处理。

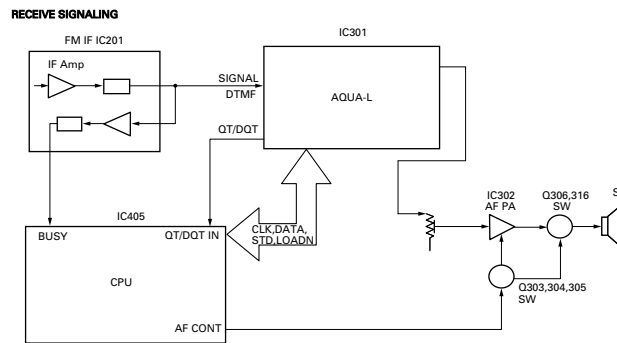


Fig. 4 AF amplifier and squelch / 图 4 AF 放大器和静噪

(3) DTMF

The DTMF input signal from the FM IC (IC201) goes to IC301. The decoded information is then processed by the CPU.

(3) DTMF

FM IC (IC201) 的 DTMF 输出信号送到 IC301。解码数据由 CPU 处理。

3. PLL Frequency Synthesizer

The PLL circuit generates the first local oscillator signal for reception and the RF signal for transmission.

1) PLL

The frequency step of the PLL circuit is 5 or 6.25kHz.

A 12.8MHz reference oscillator signal is divided at IC1 by a fixed counter to produce oscillator (VCO) output signal which is buffer amplified by Q2 then divided in IC1 by a programmable counter. The divided signal is compared in phase with the 5 or 6.25kHz reference signal from the phase comparator in IC1. The output signal from the phase comparator is filtered through a low-pass filter and passed to the VCO to control the oscillator frequency. (See Fig. 5)

3. PLL 频率合成

PLL 电路产生用于接收的第一本地振荡信号和发射用的 RF 信号。

1) PLL

PLL 电路的频率步进是 5 或 6.25kHz。

12.8MHz 的参考振荡信号在 IC1 中被一个固定计数器分频。振荡器 (VCO) 的输出信号由 Q2 缓冲放大，然后在 IC1 中被一个可编程双模块计数器分频。分频的信号在 IC1 的相位比较器中进行比较。生成的信号通过一个低通滤波器滤波后传送到 VCO 控制振荡器频率。(见图 5)

CIRCUIT DESCRIPTION / 电路说明

2) VCO

The operating frequency is generated by Q4 in transmit mode and Q3 in receive mode. The oscillator frequency is controlled by applying the VCO control voltage, obtained from the phase comparator, to the varactor diodes (D4 and D7 in transmit mode and D5 and D9 in receive mode). The RX pin is set high in receive mode causing Q5 turn on. The TX pin is set high in transmit mode. The outputs from Q3 and Q4 are amplified by Q6 and sent to the RF amplifiers.

2) VCO

所使用的频率在发射模式时由 Q4 生成，在接收模式时由 Q3 生成。通过将相位比较器所获得的 VCO 控制电压输送给可变二极管（在发射模式时为 D4 和 D7，在接收模式时为 D5 和 D9）来控制振荡频率。在接收时 RX 脚被设定为高，使 Q5 接通。发射时 TX 脚被设定为高。Q3 和 Q4 的输出被 Q6 放大并且传送给 RF 放大器。

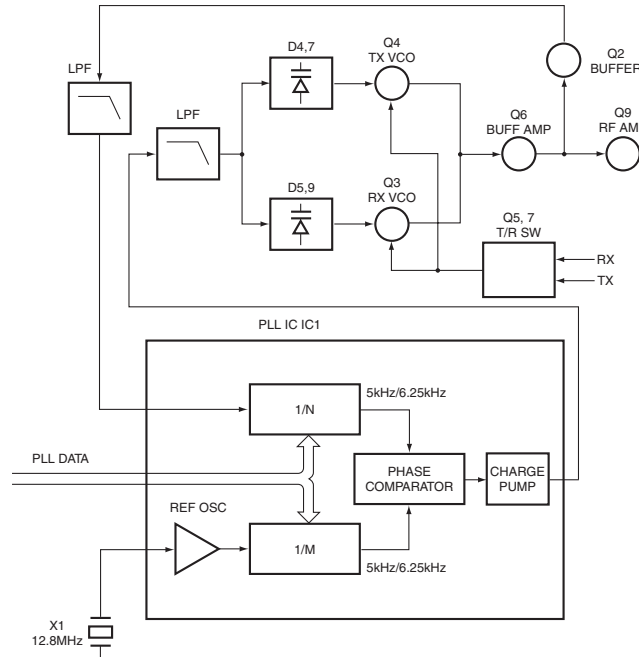


Fig. 5 PLL circuit / 图 5 PLL 电路

3) Unlock Detector

If a pulse signal appears at the LD pin of IC1, an unlock condition occurs, and the DC voltage obtained from C4, R5, and D1 causes the voltage applied to the microprocessor to go low. When the microprocessor detects this condition, the transmitter is disabled, ignoring the push-to-talk switch input signal.

3) 失锁检测器

如果脉冲信号出现在 IC1 的 LD 管脚上，则发生了失锁的情况，从 C4, R5 和 D1 获得的 DC 电压使微处理器的输入电压变低。微处理器检测到这个情况后发射被禁止，忽略 PTT 开关的输入信号。

4. Transmitter System

1) Microphone Amplifier

The signal from the microphone passes through IC301. When encoding DTMF, it is turned OFF for muting the microphone input signal by IC301.

The signal passes through the Audio processor (IC301) for the maximum deviation adjustment, and goes to the VCO modulation input.

4. 发射部系统

1) 话筒放大器

来自于话筒的信号通过 IC301。当编码 DTMF 时，话筒输入信号被 IC301 关闭。

信号通过音频处理器 (IC301) 进行最大频偏调整，然后送到 VCO 调制输入。

CIRCUIT DESCRIPTION / 电路说明

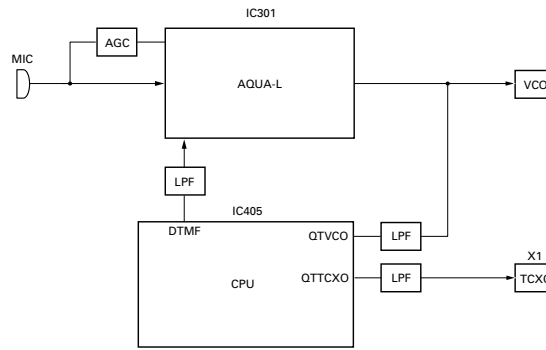


Fig. 6 Microphone amplifier / 图6 话筒放大器

2) Drive and Final Amplifier

The signal from the T/R switch (D101 is on) is amplified by the pre-drive (Q101) and drive amplifier (Q102) to 50mW. The output of the drive amplifier is amplified by the RF power amplifier (Q103) to 4.0W (1W when the power is low). The RF power amplifier consists of two MOS FET stages. The output of the RF power amplifier is then passed through the harmonic filter (LPF) and antenna switch (D103 and D122) and applied to the antenna terminal.

2) 驱动器和终端放大器

来自于 T/R 开关 (D101 ON) 的信号被前置驱动放大器 (Q101) 和驱动放大器 (Q102) 放大到 50mW。驱动放大器的输出被 RF 功率放大器 (Q103) 放大到 4.0W (当低功率时为 1W)。RF 功率放大器由 2 个 MOS FET 构成。RF 功率放大器的输出通过谐波滤波器 (LPF) 和天线开关 (D103 和 D122) 并且送到天线终端。

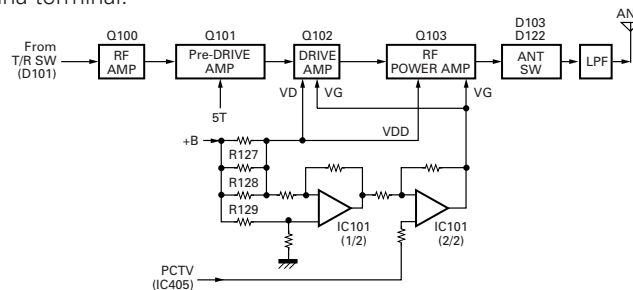


Fig. 7 Drive and final amplifier and APC circuit / 图7 驱动、终端放大器以及 APC 电路

3) APC Circuit

The APC circuit always monitors the current flowing through the RF power amplifier (Q103) and keeps a constant current. The voltage drop at R127, R128 and R129 is caused by the current flowing through the RF power amplifier and this voltage is applied to the differential amplifier IC101(1/2). IC101(2/2) compares the output voltage of IC101(1/2) with the reference voltage from IC405. The output of IC101(2/2) controls the VG of the RF power amplifier, Drive amplifier and Pre-Drive amplifier to make both voltages the same. The change of power high/low is carried out by the change of the reference voltage.

3) 自动功率控制 (APC) 电路

APC 电路一直监视通过射频功率放大器 (Q103) 的电流并保持电流稳定。经过射频功率放大器的电流的变化会引起 R127, R128 和 R129 的电压降低, 此电压送到差分放大器 IC101 (1/2)。IC101 (2/2) 将 IC101 (1/2) 的输出电压与来自 IC405 的参考电压进行比较。IC101 (2/2) 的输出电压控制射频功率放大器, 驱动放大器, 预驱动放大器的 VG, 使电压保持一致。功率高 / 低的变化是通过变更参考电压来实现的。

4) Encode Signaling

(1) QT/DQT

QT, DQT data of the QTTCXO Line is output from pin 28 of the CPU. The signal passes through a low-pass CR filter and goes to the TCXO (X1).

The QT, DQT data of the QTVCO Line is output from pin 24 of the CPU. The signal passes through a low pass CR filter, mixes with the audio signal, and goes to the VCO modulation input. TX deviation is adjusted by the CPU.

4) 编码信号

(1) QT/DQT

QTTCXO 线的 QT, DQT 数据从 CPU 的 28 管脚输出。信号通过低通 CR 滤波器, 并且送到 TCXO (X1)。

QTVCO 线的 QT, DQT 数据从 CPU 的 24 管脚输出。信号通过低通 CR 滤波器, 与音频信号混合, 然后输入到 VCO。TX 频偏被 CPU 调整。

CIRCUIT DESCRIPTION / 电路说明

(2) DTMF

High-speed data is output from pin 2 of the CPU. The signal passes through a low-pass CR filter, and provides a TX and SP out tone, and is then applied to the audio processor (IC301). The signal is mixed with the audio signal and goes to the VCO.

TX deviation is adjusted by the CPU.

(3) MSK (Fleet Sync)

Fleet Sync utilizes 1200bps and 2400bps MSK signal is output from pin 6 of IC301. And is routed to the VCO. When encoding MSK, the microphone input signal is muted.

5. Power Supply

There are four 5V power supplies: 5M,5C,5R, and 5T. 5M for microprocessor is always output while the power is on. 5M is always output, but turns off when the power is turned off to prevent malfunction of the microprocessor.

5C is a common 5V and is output when SAVE is not set to OFF.

5R is 5V for reception and output during reception.

5T is 5V for transmission and output during transmission.

6. Control Circuit

The control circuit consists of a microprocessor (IC405) and its peripheral circuits. It controls the TX-RX unit. IC405 mainly performs the following:

- (1) Switching between transmission and reception by the PTT signal input.
- (2) Reading system, group, frequency, and program data from the memory circuit.
- (3) Sending frequency program data to the PLL.
- (4) Controlling squelch on/off by the DC voltage from the squelch circuit.
- (5) Controlling the audio mute circuit by the decode data input.
- (6) Transmitting tone and encode data.

1) Frequency Shift Circuit

The microprocessor (IC405) operates at a clock of 7.3728MHz. This oscillator has a circuit that shifts the frequency by beat shift switch (Q407, Q408).

A beat sound may be able to be evaded from generation if "Beat Shift" is set to ON when it is generated in the internal spurious transmission modulated sound of a transceiver.

(2) DTMF

高速数据从CPU的2脚输出。信号通过低通CR滤波器,提供TX和SP输出音频,并输入到音频处理器(IC301)。信号与音频信号混合,然后送到VCO。

TX 频偏被 CPU 调整。

(3) MSK (Fleet Sync)

FleetSync 使用 1200bps 和 2400bps 的 MSK 信号,这些信号从 IC301 的 6 脚输出。并且被发送到 VCO。当编码 MSK 时,话筒输入信号被静音。

5. 电源

有 4 个 5V 电源: 5M,5C,5R 和 5T。当电源接通时,微处理器用的 5M 一直保持输出。5M 虽然为经常输出,但在关闭电源时也被关掉,防止微处理器出现故障状态。

5C 为公共的 5V,在非省电状态时保持输出。

5R 为接收用的 5V,在接收期间保持输出。

5T 为发射用的 5V,在发射期间保持输出。

6. 控制电路

控制电路是由微处理器(IC405)和外部电路构成。它控制 TX-RX 单元。IC405 的主要功能如下:

- (1) 根据 PTT 的输入信号来转换发射和接收状态。
- (2) 从存储电路读出系统,组,频率以及编程数据。
- (3) 发送频率数据给 PLL。
- (4) 根据静噪电路输出的 DC 电压来控制静噪的开启和关闭。
- (5) 根据解码数据控制音频静音。
- (6) 发射 Tone 及编码数据。

1) 频率偏移电路

微处理器 (IC405) 在 7.3728MHz 时钟下工作。此振荡器有可以被拍频偏移开关 (Q407, Q408) 变换频率的电路。

如果 "Beat Shift (拍频偏移)" 被设定为 ON,可以避免产生拍频声音。

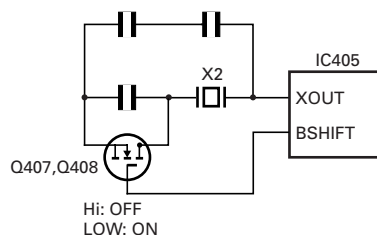


Fig. 8 Frequency shift circuit / 图 8 频率偏移电路

CIRCUIT DESCRIPTION / 电路说明

2) Memory Circuit

Memory circuit consists of the CPU (IC405) and an EEPROM (IC406). An EEPROM has a capacity of 64k bits that contains the transceiver control program for the CPU and data such as transceiver channels and operating features.

 


Fig. 9 Memory circuit / 图 9 存储器电路

2) 存储器电路

存储器电路由 CPU (IC405) 和 EEPROM (IC406) 组成。有 64k bits 的容量，包含 CPU 用的对讲机控制程序以及信道和操作功能这样的数据。

3) Low Battery Warning

The battery voltage is checked using by the microprocessor. The transceiver generates a warning tone when the battery voltage falls below the warning voltage (2) shown in the table.

(1) The red LED blinks when the battery voltage falls below the voltage (1) shown in the table during transmission.

Note:

During reception, transceiver constantly checks the battery level. When the battery level drops near to 5.9V, the red LED blinks and low battery warning tone is generated.

(2) The transceiver immediately stops transmission when the battery voltage falls below the voltage (2) shown in the table. The warning tone sounds while the PTT switch is pressed.

3) 电池低压警告

通过微处理器监视电池电压。当低于表中所示警告电压(2)时将发出警告音。

(1) 发射中，当电池电压低于电压 (1) 时红色 LED 闪烁。

注意：

对讲机在接收时不断地检测电池电压。当电池电压降到接近 5.9V 时，红色 LED 会闪烁并产生低电池电压警告音。

(2) 当电池电压降到电压 (2) 以下，对讲机将立刻停止发射。按下 PTT 开关时响起警告音。

	Ni-Cd Battery	Ni-MH Battery
(1)	6.2[V]	6.2[V]
(2)	5.9[V]	5.9[V]

	Ni-Cd 电池	Ni-MH 电池
(1)	6.2 [V]	6.2 [V]
(2)	5.9 [V]	5.9 [V]

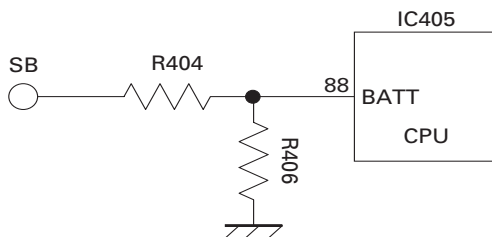


Fig. 10 Low battery warning / 图 10 电池低压警告

CIRCUIT DESCRIPTION / 电路说明

7. Control System

Keys and channel selector circuit.

The signal from the keys and channel selector are directly input to the microprocessor, as shown in Fig. 11.

7. 控制系统

按键和频道选择器电路。

如图11所示，来自按键和频道选择器的信号直接输入到微处理器。

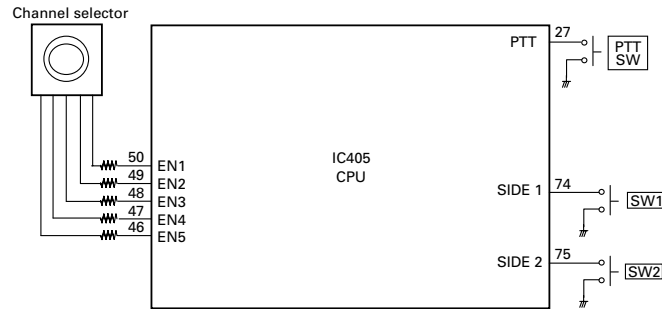


Fig. 11 Control system / 图 11 控制系统

TK-3207G

TERMINAL FUNCTION / 端子功能

■ CN401

Pin No.	Name	I/O	Function
1	B	I	B (Battery Voltage)
2	SB	O	Switched B
3	SP1	I	Audio input
4	SP2	O	Audio output
5	GND	-	GND
6	EN1	I	Encoder pulse input
7	EN2	I	Encoder pulse input
8	GND	-	GND
9	EN3	I	Encoder pulse input
10	EN4	I	Encoder pulse input
11	EN5	I	Encoder pulse input

■ CN401

管脚号码	名称	输入/输出	功能
1	B	输入	B (电池电压)
2	SB	输出	可关闭的 B
3	SP1	输入	音频输入
4	SP2	输出	音频输出
5	GND	-	GND
6	EN1	输入	编码器脉冲输入
7	EN2	输入	编码器脉冲输入
8	GND	-	GND
9	EN3	输入	编码器脉冲输入
10	EN4	输入	编码器脉冲输入
11	EN5	输入	编码器脉冲输入

SEMICONDUCTOR DATA / 半导体数据

Microprocessor : 30622MAA-B95GU (TX-RX UNIT : IC405)

■ Pin function

Pin No.	Port Name	I/O	Function
1	PCTV	O	APC/BPF control data output
2	DTMF	O	DTMF/ Beep output
3	NC	-	NC
4	EEPDAT	I/O	EEPROM data input/output
5	EEPCLK	O	EEPROM clock output
6	BYTE	-	GND
7	GND	-	GND
8	BSHIFT	O	Beat shift switch
9	NC	-	NC
10	RESET	I	CPU reset
11	XOUT	O	CPU clock (7.3728MHz)
12	VSS	-	GND
13	XIN	I	CPU clock (7.3728MHz)
14-15	VCC	-	+5V
16	INT	I	Battery voltage monitor input
17	TCLK/DTRDO	I	Base band IC data input
18	RDF/FD	I	Base band IC data input
19	SCLK	O	Base band IC clock output
20	D I/O	I/O	Base band IC data input / output
21	TDATA/DTRCLK	O	Base band IC data output
22	DIR	O	Base band IC data output
23	STD	I	Base band IC data input
24	QT VCO	O	QT/DQT output
25	DTRLOADN	O	Base band IC data output
26	1/2 OSC	O	3.6864 MHz (7.3728 MHz/2)
27	PTT	I	PTT switch input
28	QT TCXO	O	QT/DQT output
29	TXD	O	Serial data (FPU/FLASH)
30	RXD	I	Serial data (FPU/FLASH)

微处理器 : 30622MAA-B95GU (TX-RX 单元 : IC405)

■ 管脚功能

管脚号码	接口名称	输入/输出	功能
1	PCTV	输出	APC/BPF 控制数据输出
2	DTMF	输出	DTMF/ 哔哔声开关
3	NC	-	NC
4	EEPDAT	输入/输出	EEPROM 数据输入 / 输出
5	EEPCLK	输出	EEPROM 时钟输出
6	BYTE	-	GND
7	GND	-	GND
8	BSHIFT	输出	拍频偏移开关
9	NC	-	NC
10	RESET	输入	CPU 复位
11	XOUT	输出	CPU 时钟 (7.3728MHz)
12	VSS	-	GND
13	XIN	输入	CPU 时钟 (7.3728MHz)
14-15	VCC	-	+5V
16	INT	输入	电池电压监视器输入
17	TCLK/DTRDO	输入	基带 IC 数据输入
18	RDF/FD	输入	基带 IC 数据输入
19	SCLK	输出	基带 IC 时钟输出
20	D I/O	输入/输出	基带 IC 数据输入 / 输出
21	TDATA/DTRCLK	输出	基带 IC 数据输出
22	DIR	输出	基带 IC 数据输出
23	STD	输入	基带 IC 数据输入
24	QT VCO	输出	QT/DQT 输出
25	DTRLOADN	输出	基带 IC 数据输出
26	1/2 OSC	输出	3.6864 MHz (7.3728 MHz/2)
27	PTT	输入	PTT 开关输入
28	QT TCXO	输出	QT/DQT 输出
29	TXD	输出	串行数据 (FPU/FLASH)
30	RXD	输入	串行数据 (FPU/FLASH)

SEMICONDUCTOR DATA / 半导体数据

Pin No.	Port Name	I/O	Function
31	GND	-	GND
32	APCSW	O	APC switch
33-34	NC	-	NC
35	DCSW	O	APC voltage discharge switch
36	TX_W/N	O	TX Wide/Narrow switch
37	RX_SW	O	RX VCO switch
38	TX_SW	O	TX VCO switch
39	GND	-	GND
40	PLL_UL	I	PLL unlock detect input
41	PLL_STB	O	PLL strobe output
42	PLL_DAT	O	PLL data output
43	PLL_CLK	O	PLL clock output
44	VCC	-	+5V
45	RX_W/N	O	RX Wide/Narrow switch
46	EN5	I	Channel selector input
47	EN4	I	Channel selector input
48	EN3	I	Channel selector input
49	EN2	I	Channel selector input
50	EN1	I	Channel selector input
51	OPTDET	I	Headset input detect
52	AF_CONT	O	Speaker mute
53-59	NC	-	NC
60	VCC	-	+5V
61	NC	-	NC
62	VSS	-	GND
63-64	GND	-	GND
65-71	NC	-	NC
72	LEDTX	O	Red LED lights control output
73	LEDRX	O	Green LED lights control output
74	PF1	I	SIDE1 key input
75	PF2	I	SIDE2 key input
76	SIM1	-	GND
77	SIM2	-	GND
78-79	NC	-	NC
80	5T_C	O	5T control output
81	5R_C	O	5R control output
82	5C_C	O	5C control output
83-87	NC	-	NC
88	BATT	I	Battery voltage input
89	RSSI	I	Received Signal Strength Indicator input
90	BUSY	I	Busy level input
91	VOX	I	VOX level input
92	QT/DQT_IN	I	QT/DQT input
93	TH_DET	I	Thermistor input
94	AVSS	-	GND
95	NC	-	NC
96	VREF	-	+5V
97	AVCC	-	+5V
98	NC	-	NC
99	MIC_MUTE	O	MIC mute
100	NC	-	NC

管脚号码	接口名称	输入/输出	功能
31	GND	-	GND
32	APCSW	输出	APC 开关
33-34	NC	-	NC
35	DCSW	输出	APC 电压放电开关
36	TX_W/N	输出	TX 宽 / 窄带开关
37	RX_SW	输出	RX VCO 开关
38	TX_SW	输出	TX VCO 开关
39	GND	-	GND
40	PLL_UL	输入	PLL 失锁检测输入
41	PLL_STB	输出	PLL 选通输出
42	PLL_DAT	输出	PLL 数据输出
43	PLL_CLK	输出	PLL 时钟输出
44	VCC	-	+5V
45	RX_W/N	输出	RX 宽 / 窄带开关
46	EN5	输入	CH 选择器输入
47	EN4	输入	CH 选择器输入
48	EN3	输入	CH 选择器输入
49	EN2	输入	CH 选择器输入
50	EN1	输入	CH 选择器输入
51	OPTDET	输入	耳机输入检测
52	AF_CONT	输出	扬声器静音
53-59	NC	-	NC
60	VCC	-	+5V
61	NC	-	NC
62	VSS	-	GND
63-64	GND	-	GND
65-71	NC	-	NC
72	LEDTX	输出	红 LED 指示灯控制输出
73	LEDRX	输出	绿 LED 指示灯控制输出
74	PF1	输入	SIDE1 键输入
75	PF2	输入	SIDE2 键输入
76	SIM1	-	GND
77	SIM2	-	GND
78-79	NC	-	NC
80	5T_C	输出	5T 控制输出
81	5R_C	输出	5R 控制输出
82	5C_C	输出	5C 控制输出
83-87	NC	-	NC
88	BATT	输入	电池电压输入
89	RSSI	输入	接收信号强度指示器输入
90	BUSY	输入	忙水平输入
91	VOX	输入	VOX 水平输入
92	QT/DQT_IN	输入	QT/DQT 输入
93	TH_DET	输入	热敏电阻输入
94	AVSS	-	GND
95	NC	-	NC
96	VREF	-	+5V
97	AVCC	-	+5V
98	NC	-	NC
99	MIC_MUTE	输出	MIC 静音
100	NC	-	NC

TK-3207G

COMPONENTS DESCRIPTION / 元件说明

TX-RX UNIT (X57-6890-XX)

Ref. No.	Use/Function	Operation/Condition
IC1	IC	PLL system
IC101	IC	Comparator (APC)
IC201	IC	FM IF system
IC301	IC	Audio processor
IC302	IC	AF AMP
IC401	IC	Voltage regulator/ 5V
IC402	IC	Voltage regulator/ 5V
IC403	IC	Voltage detector / Reset
IC404	IC	Voltage detector / INT
IC405	IC	Microprocessor
IC406	IC	EEPROM
Q1	Transistor	Tripler
Q2	Transistor	PLL IC f_in AMP
Q3	FET	VCO / RX
Q4	FET	VCO / TX
Q5	Transistor	DC switch / TX VCO
Q6	Transistor	RF Buffer AMP
Q7	Transistor	DC switch / RX VCO
Q8	Transistor	Ripple filter
Q9	Transistor	RF AMP
Q100	Transistor	RF AMP
Q101	FET	RF AMP
Q102	FET	TX Drive AMP
Q103	FET	TX Final AMP
Q104	Transistor	APC switch
Q105	FET	APC switch
Q107	Transistor	APC switch
Q108	FET	APC switch
Q109	Transistor	APC switch
Q202	Transistor	W/N switch / RX
Q203	Transistor	IF AMP
Q204	FET	Mixer
Q205	FET	RF AMP
Q301	Transistor	W/N switch / TX
Q302	Transistor	MIC AGC
Q303	Transistor	DC switch / SP Mute
Q304	Transistor	DC switch
Q305	Transistor	DC switch / SP Mute
Q306	FET	SP Mute switch
Q316	FET	SP Mute switch
Q401	Transistor	LED switch / Red
Q402	Transistor	LED switch / Green
Q403	FET	5T switch
Q404	FET	5R switch
Q405	Transistor	5C switch
Q407	FET	Beat Shift switch
Q408	FET	Beat Shift switch
Q901	FET	W/N Switch/ TX
D1	Diode	Ripple Filter
D2	Variable capacitance diode	Frequency control / TX VCO
D3	Variable capacitance diode	Frequency control / RX VCO

TX-RX 单元 (X57-6890-XX)

编号	使用 / 功能	操作 / 状态
IC1	IC	PLL 系统
IC101	IC	比较器 (APC)
IC201	IC	FM IF 系统
IC301	IC	音频处理器
IC302	IC	AF 放大器
IC401	IC	电压管理器 / 5V
IC402	IC	电压管理器 / 5V
IC403	IC	电压检测器 / 复位
IC404	IC	电压检测器 / INT
IC405	IC	微处理器
IC406	IC	EEPROM
Q1	晶体管	三倍频器
Q2	晶体管	PLL IC f_in 放大器
Q3	场效应管	VCO / RX
Q4	场效应管	VCO / TX
Q5	晶体管	DC 开关 / TX VCO
Q6	晶体管	RF 缓冲放大器
Q7	晶体管	DC 开关 / RX VCO
Q8	晶体管	触发滤波器
Q9	晶体管	RF 放大器
Q100	晶体管	RF 放大器
Q101	场效应管	RF 放大器
Q102	场效应管	TX 驱动放大器
Q103	场效应管	TX 终端放大器
Q104	晶体管	APC 开关
Q105	场效应管	APC 开关
Q107	晶体管	APC 开关
Q108	场效应管	APC 开关
Q109	晶体管	APC 开关
Q202	晶体管	W/N 开关 / RX
Q203	晶体管	IF 放大器
Q204	场效应管	混频器
Q205	场效应管	RF 放大器
Q301	晶体管	W/N 开关 / TX
Q302	晶体管	MIC AGC
Q303	晶体管	DC 开关 / SP 静音
Q304	晶体管	DC 开关
Q305	晶体管	DC 开关 / SP 静音
Q306	场效应管	SP 静音开关
Q316	场效应管	SP 静音开关
Q401	晶体管	LED 开关 / 红
Q402	晶体管	LED 开关 / 绿
Q403	场效应管	5T 开关
Q404	场效应管	5R 开关
Q405	晶体管	5C 开关
Q407	场效应管	拍频偏移开关
Q408	场效应管	拍频偏移开关
Q901	场效应管	W/N 开关 / TX
D1	二极管	触发滤波器
D2	可变电容二极管	频率控制 / TX VCO
D3	可变电容二极管	频率控制 / RX VCO

COMPONENTS DESCRIPTION / 元件说明

Ref. No.	Use/Function	Operation/Condition
D4	Variable capacitance diode	Frequency control / TX VCO
D5	Variable capacitance diode	Frequency control / RX VCO
D6	Variable capacitance diode	Frequency control / TX VCO
D7	Variable capacitance diode	Frequency control / TX VCO
D8	Variable capacitance diode	Frequency control / RX VCO
D9	Variable capacitance diode	Frequency control / RX VCO
D10	Variable capacitance diode	Modulator
D11	Diode	Current steering
D101	Diode	TX/RX RF switch
D102	Zener diode	APC protect
D103	Diode	ANT switch
D104	Diode	ANT switch
D106	Diode	ANT switch
D122	Diode	ANT switch
D202	Diode	TX/RX RF switch
D203	Variable capacitance diode	RF BPF tuning
D204	Variable capacitance diode	RF BPF tuning
D205	Variable capacitance diode	RF BPF tuning
D206	Variable capacitance diode	RF BPF tuning
D210	Variable capacitance diode	RF BPF tuning
D301	Diode	Detector
D302	Diode	Detector
D303	Diode	Isolation
D401	Diode	5V Protection
D402	Diode	Reverse Protection
D403	LED	LED/ Red
D404	LED	LED/ Green
D405	Zener diode	Limiter of QT encode deviation


编号	使用 / 功能	操作 / 状态
D4	可变电容二极管	频率控制 / TX VCO
D5	可变电容二极管	频率控制 / RX VCO
D6	可变电容二极管	频率控制 / TX VCO
D7	可变电容二极管	频率控制 / TX VCO
D8	可变电容二极管	频率控制 / RX VCO
D9	可变电容二极管	频率控制 / RX VCO
D10	可变电容二极管	调制器
D11	二极管	电流开关
D101	二极管	TX/RX RF 开关
D102	齐纳二极管	APC 保护
D103	二极管	ANT 开关
D104	二极管	ANT 开关
D106	二极管	ANT 开关
D122	二极管	ANT 开关
D202	二极管	TX/RX RF 开关
D203	可变电容二极管	RF BPF 调谐
D204	可变电容二极管	RF BPF 调谐
D205	可变电容二极管	RF BPF 调谐
D206	可变电容二极管	RF BPF 调谐
D210	可变电容二极管	RF BPF 调谐
D301	二极管	检测器
D302	二极管	检测器
D303	二极管	隔离
D401	二极管	5V 保护器
D402	二极管	反转保护器
D403	LED	LED / 红
D404	LED	LED / 绿
D405	齐纳二极管	QT 编码频偏限幅器

PARTS LIST / 零件表

CAPACITORS


CC 45 TH 1H 220 J
 1 2 3 4 5 6

- 1 = Type ... ceramic, electrolytic, etc.
- 2 = Shape ... round, square, ect.
- 3 = Temp. coefficient
- 4 = Voltage rating
- 5 = Value
- 6 = Tolerance

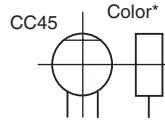

Capacitor value

- 010 = 1pF
- 100 = 10pF
- 101 = 100pF
- 102 = 1000pF = 0.001μF
- 103 = 0.01μF

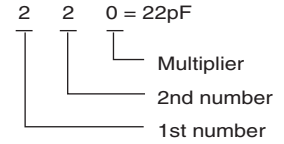

Temperature coefficient

1st Word	C	L	P	R	S	T	U
Color*	Black	Red	Orange	Yellow	Green	Blue	Violet
ppm/°C	0	-80	-150	-220	-330	-470	-750

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

Example : CC45TH = -470 ± 60ppm/°C

Tolerance (More than 10pF)

Code	C	D	G	J	K	M	X	Z	P	No code
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -40	+80 -20	+100 -0	More than 10μF -10 ~ +50 Less than 4.7μF -10 ~ +75

(Less than 10pF)

Gode	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

Voltage rating

2nd word \ 1st word	A	B	C	D	E	F	G	H	J	K	V
0	1.0	1.25	1.6	2.0	2.5	3.15	4.0	5.0	6.3	8.0	-
1	10	12.5	16	20	25	31.5	40	50	63	80	35
2	100	125	160	200	250	315	400	500	630	800	-
3	1000	1250	1600	2000	2500	3150	4000	5000	6300	8000	-

Chip capacitors

(EX) C C 7 3 F S L 1 H 0 0 0 J
 1 2 3 4 5 6 7
 (Chip)(CH,RH,UJ,SL)

(EX) C K 7 3 F F 1 H 0 0 0 Z
 1 2 3 4 5 6 7
 (Chip)(B,F)

- 1 = Type
- 2 = Shape
- 3 = Dimension
- 4 = Temp. coefficient
- 5 = Voltage rating
- 6 = Value
- 7 = Tolerance

Dimension (Chip capacitors)

Dimension code	L	W	T
Empty	5.6 ± 0.5	5.0 ± 0.5	Less than 2.0
A	4.5 ± 0.5	3.2 ± 0.4	Less than 2.0
B	4.5 ± 0.5	2.0 ± 0.3	Less than 2.0
C	4.5 ± 0.5	1.25 ± 0.2	Less than 1.25
D	3.2 ± 0.4	2.5 ± 0.3	Less than 1.5
E	3.0 ± 0.2	1.6 ± 0.2	Less than 1.25
F	2.0 ± 0.3	1.25 ± 0.2	Less than 1.25
G	1.6 ± 0.2	0.8 ± 0.2	Less than 1.0
H	1.0 ± 0.05	0.5 ± 0.05	0.5 ± 0.05

RESISTORS

Chip resistor (Carbon)


(EX) R D 7 3 E B 2 B 0 0 0 J
 1 2 3 4 5 6 7
 (Chip)(B,F)

Carbon resistor (Normal type)

(EX) R D 1 4 B B 2 C 0 0 0 J
 1 2 3 4 5 6 7

- 1 = Type
- 2 = Shape
- 3 = Dimension
- 4 = Temp. coefficient
- 5 = Rating wattage
- 6 = Value
- 7 = Tolerance

Dimension

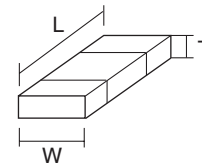

Dimension (Chip resistor)

Dimension code	L	W	T
E	3.2 ± 0.2	1.6 ± 0.2	1.0
F	2.0 ± 0.3	1.25 ± 0.2	1.0
G	1.6 ± 0.2	0.8 ± 0.2	0.5 ± 0.1
H	1.0 ± 0.05	0.5 ± 0.05	0.35 ± 0.05

Rating wattage

Code	Wattage	Code	Wattage	Code	Wattage
1J	1/16W	2C	1/6W	3A	1W
2A	1/10W	2E	1/4W	3D	2W
2B	1/8W	2H	1/2W		

PARTS LIST / 零件表

* New Parts. Δ indicates safety critical components.
 Parts without **Parts No.** are not supplied.
 Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
 Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia K: USA P: Canada
 Y: PX (Far East, Hawaii) T: England E: Europe
 Y: AAFES (Europe) X: Australia M: Other Areas

TK-3207G (Y50-6103-XX) TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-3207G					
1	1A	*	A02-3944-03	PLASTIC CABINET	
2	1A	*	A02-3945-03	PLASTIC CABINET ASSY(16CH)	
3	3A		A10-4078-31	CHASSIS	
4	1B		A21-1644-23	DRESSING PANEL(16CH)	
6	2C		B09-0680-03	CAP(SP/MIC) ACCESSORY	
7	2B		B11-1817-04	ILLUMINATION GUIDE	
8	1B	*	B43-1190-04	BADGE	
10	1C	*	B62-1937-10	INSTRUCTION MANUAL	
11	1A		D10-0649-03	LEVER	
12	1A		D21-0863-04	SHAFT	
13	1A		D32-0441-03	STOPPER	
14	2A		E04-0465-05	RF COAXIAL RECEPTACLE(SMA)	
15	3B		E23-1253-04	TERMINAL(BATT-)	
16	2B		E37-1175-05	PROCESSED LEAD WIRE(BROWN:SP+)	
17	2B		E37-1176-05	PROCESSED LEAD WIRE(GREEN:SP-)	
18	3A		F20-3353-14	INSULATING SHEET(CHASSIS BATT+)	
19	2A		G01-4542-04	COIL SPRING(LEVER)	
20	1A		G01-4543-04	COIL SPRING(STOPPER)	
21	2B		G10-1330-04	FIBROUS SHEET(C302:AUDIO IC)	
22	2A		G11-4283-04	RUBBER SHEET(Q103:FINAL FET)	
23	2A		G11-4313-04	SHEET(MIC ELEMENT)	
25	3A		G13-2033-04	CUSHION(TERMINAL BATT-)	
26	3B		G13-2034-14	CUSHION(TERMINAL BATT-)	
27	3A		G13-2038-24	CUSHION(CHASSIS-CERAMIC FILTER)	
28	2A		G13-2039-14	CUSHION(PCB-CERAMIC FILTER)	
29	3B		G13-2045-04	CUSHION(CHASSIS)	
30	2A		G13-2051-04	CUSHION(VCO)	
34	2B		G13-2088-04	CUSHION(CHASSIS VOL/CH)	
35	3A		G53-1604-03	PACKING(CHASSIS)	
36	3A		G53-1605-03	PACKING(TERMINAL BATT+)	
37	2B		G53-1606-13	PACKING(VOL/CH/LED)	
38	1B		G53-1607-03	PACKING(SP/MIC)	
39	2B		G53-1608-03	PACKING(SP)	
40	2A		G53-1609-14	PACKING(MIC ELEMENT)	
41	2B		G53-1610-04	PACKING(SMA)	
43	2D		H12-3179-05	PACKING FIXTURE	
45	1C		H25-0085-04	PROTECTION BAG (100/200/0.07)	
47	3D	*	H52-2143-02	ITEM CARTON CASE	
48	2D		J19-5472-03	HOLDER(SP/MIC) ACCESSORY	
49	2A		J19-5473-03	HOLDER ASSY(TERMINAL BATT+)	
50	2B		J21-8478-04	MOUNTING HARDWARE(SP/MIC)	
51	2B		J21-8525-03	MOUNTING HARDWARE(VOL/CH)	
52	2D		J29-0713-05	BELT CLIP ACCESSORY	
53	1D		J69-0352-05	HANDSTRAP ACCESSORY	
54	2B		J82-0092-05	FPC	
55	1A		K29-9308-13	BUTTON KNOB(PTT)	
56	1B		K29-9309-03	KNOB(VOL)	
57	1B		K29-9318-03	KNOB(CH)	
58	1A		K29-9364-03	BUTTON KNOB(SIDE1/SIDE2)	
A	2B		N14-0819-04	CIRCULAR NUT(VOL KNOB)	
B	2B		N14-0832-04	CIRCULAR NUT(CH KNOB)	
C	2A,2B		N30-2604-48	PAN HEAD MACHINE SCREW(SMA)	
D	3A		N30-2606-48	PAN HEAD MACHINE SCREW(CHASSIS)	
TX-RX UNIT (X57-6890-XX) -21:C -22:C2 -24:C6 -25:C5					
E	2A,2B,3B		N83-2005-48	PAN HEAD TAPTITE SCREW(PCB)	
60	2D		N99-2046-05	SCREW SET ACCESSORY	
61	2B		R31-0661-05	VARIABLE RESISTOR(POWER SW/VOL)	
62	2B		S60-0434-05	ROTARY SWITCH(16CH)	
63	1B		T07-0369-15	SPEAKER	
64	1D	*	T90-1039-15	WHIP ANTENNA	C
64	1D	*	T90-1041-15	WHIP ANTENNA	C2
64	1D		T90-1035-05	HELICAL ANTENNA	C5,C6
D403			B30-2156-05	LED(RED)	
D404			B30-2157-05	LED(YELLOW)	
C1			CK73HB1H332K	CHIP C 3300PF K	
C2			CK73HB1C682K	CHIP C 6800PF K	
C3			CK73GB1A105K	CHIP C 1.0UF K	
C4			CK73HB1C103K	CHIP C 0.010UF K	
C5			CK73HB1H102K	CHIP C 1000PF K	
C6			CK73HB1A104K	CHIP C 0.10UF K	
C7 ,8			CC73HCH1H101J	CHIP C 100PF J	
C9			CC73HCH1H100D	CHIP C 10PF D	
C10			CS77CP0J100M	CHIP-TAN 10UF 6.3WV	
C11			CC73HCH1H101J	CHIP C 100PF J	
C12			CK73HB1H102K	CHIP C 1000PF K	
C13			CK73HB1A104K	CHIP C 0.10UF K	
C14			CK73HB1C103K	CHIP C 0.010UF K	
C15			CC73HCH1H100D	CHIP C 10PF D	
C16			CK73HB1H102K	CHIP C 1000PF K	
C17			CC73HCH1H470J	CHIP C 47PF J	
C18			CC73HCH1H180J	CHIP C 18PF J	
C19			CK73HB1A104K	CHIP C 0.10UF K	
C21			CS77CP0J100M	CHIP-TAN 10UF 6.3WV	
C22			CS77AA1VR33M	CHIP-TAN 0.33UF 35WV	
C24			CK73HB1H102K	CHIP C 1000PF K	
C25			CC73HCH1H020B	CHIP C 2.0PF B	
C26			CC73HCH1H300J	CHIP C 30PF J	
C27		*	CS77CA1C3R3M	CHIP-TAN 3.3UF 16WV	
C29 ,30			CK73HB1H471K	CHIP C 470PF K	
C32		*	CS77CA1V0R1M	CHIP-TAN 0.1UF 35WV	
C33 ,34			CK73HB1H102K	CHIP C 1000PF K	
C35			CC73HCH1H270J	CHIP C 27PF J	
C38			CC73HCH1H050B	CHIP C 5.0PF B	C,C2,C5
C38			CC73HCH1H080B	CHIP C 8.0PF B	C6
C39			CK73GB1H332K	CHIP C 3300PF K	
C40			CC73HCH1H030B	CHIP C 3.0PF B	
C41			CK73GB1H682K	CHIP C 6800PF K	
C42			CC73HCH1H050B	CHIP C 5.0PF B	C,C2,C5
C42			CC73HCH1H080B	CHIP C 8.0PF B	C6
C43			CC73HCH1H100C	CHIP C 10PF C	
C44			CK73HB1H471K	CHIP C 470PF K	
C45			CK73GB1A105K	CHIP C 1.0UF K	
C47			CC73HCH1H101J	CHIP C 100PF J	
C48			CK73HB1H471K	CHIP C 470PF K	
C49			CC73HCH1H101J	CHIP C 100PF J	

PARTS LIST / 零件表

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C50			CC73HCH1H100D	CHIP C 10PF D		C116			CC73GCH1H030B	CHIP C 3.0PF B	C2
C52			CC73HCH1H110J	CHIP C 11PF J	C2,C5,C6	C116			CC73GCH1H110J	CHIP C 11PF J	C
C52			CC73HCH1H120J	CHIP C 12PF J	C	C116			CC73GCH1H120J	CHIP C 12PF J	C5,C6
C53			CC73HCH1H040B	CHIP C 4.0PF B	C2	C119			CK73GB1H471K	CHIP C 470PF K	
						C121			CC73GCH1H120J	CHIP C 12PF J	C2
C53			CC73HCH1H050B	CHIP C 5.0PF B	C6						
C54			CC73HCH1H060B	CHIP C 6.0PF B	C,C5	C122			CC73GCH1H330J	CHIP C 33PF J	
C54			CC73HCH1H070B	CHIP C 7.0PF B	C2	C123			CC73GCH1H330G	CHIP C 33PF G	C2,C5,C6
C54			CC73HCH1H090B	CHIP C 9.0PF B	C6	C123			CC73GCH1H560J	CHIP C 56PF J	C
C55			CC73HCH1H110J	CHIP C 11PF J	C5	C124			CC73HCH1H100D	CHIP C 10PF D	
						C125			CC73GCH1H060B	CHIP C 6.0PF B	C
C55			CC73HCH1H120J	CHIP C 12PF J	C,C2						
C55			CC73HCH1H220J	CHIP C 22PF J	C6	C125			CC73GCH1H110G	CHIP C 11PF G	C2
C56			CC73HCH1H050B	CHIP C 5.0PF B	C2	C125			CC73GCH1H240J	CHIP C 24PF J	C5,C6
C57			CC73HCH1H0R5B	CHIP C 0.5PF B	C2,C5,C6	C126			CS77CA1C010M	CHIP-TAN 1.0UF 6.3WV	
C58			CC73HCH1H060B	CHIP C 6.0PF B	C,C5	C127			CC73GCH1H180J	CHIP C 18PF J	C
						C128			CK73HB1H471K	CHIP C 470PF K	
C58			CC73HCH1H070B	CHIP C 7.0PF B	C2						
C58			CC73HCH1H110J	CHIP C 11PF J	C6	C129			CK73GB1H471K	CHIP C 470PF K	
C59			CC73HCH1H1R5B	CHIP C 1.5PF B	C2,C5,C6	C130			CK73HB1H471K	CHIP C 470PF K	
C59,60			CC73HCH1H010B	CHIP C 1.0PF B	C	C132			CC73GCH1H200J	CHIP C 20PF J	C,C5,C6
C60			CC73HCH1H010B	CHIP C 1.0PF B	C2,C5,C6	C132			CC73GCH1H390J	CHIP C 39PF J	C2
						C133			CK73GB1H471K	CHIP C 470PF K	
C61			CC73HCH1H030B	CHIP C 3.0PF B	C						
C61			CC73HCH1H040B	CHIP C 4.0PF B	C2	C134			CK73GB1H103K	CHIP C 0.010UF K	
C61			CC73HCH1H050B	CHIP C 5.0PF B	C5,C6	C135			CK73GB1C104K	CHIP C 0.10UF K	
C62			CC73HCH1H020B	CHIP C 2.0PF B	C	C136			CK73GB1A105K	CHIP C 1.0UF K	
C62			CC73HCH1H030B	CHIP C 3.0PF B	C2,C5,C6	C138			CK73GB1H102K	CHIP C 1000PF K	
						C140			CC73GCH1H101J	CHIP C 100PF J	
C63			CC73HCH1H101J	CHIP C 100PF J							
C64			CC73HCH1H030B	CHIP C 3.0PF B	C5,C6	C145			CC73GCH1H200J	CHIP C 20PF J	C
C64			CC73HCH1H040B	CHIP C 4.0PF B	C2	C145			CC73GCH1H240J	CHIP C 24PF J	C5
C64			CC73HCH1H050B	CHIP C 5.0PF B	C	C145			CC73GCH1H270J	CHIP C 27PF J	C6
C65			CC73HCH1H040B	CHIP C 4.0PF B	C6	C145			CC73GCH1H300J	CHIP C 30PF J	C2
						C146			CK73GB1H102K	CHIP C 1000PF K	
C65-67			CC73HCH1H040B	CHIP C 4.0PF B	C5						
C65,66			CC73HCH1H050B	CHIP C 5.0PF B	C2	C148			CK73GB1H102K	CHIP C 1000PF K	
C65,66			CC73HCH1H070B	CHIP C 7.0PF B	C	C149			CC73GCH1H070B	CHIP C 7.0PF B	C,C2
C66			CC73HCH1H050B	CHIP C 5.0PF B	C6	C149			CC73GCH1H100C	CHIP C 10PF C	C6
C67			CC73HCH1H040B	CHIP C 4.0PF B	C2,C6	C151			CC73GCH1H070B	CHIP C 7.0PF B	C2
						C151			CC73GCH1H1R5B	CHIP C 1.5PF B	C
C67			CC73HCH1H050B	CHIP C 5.0PF B	C						
C68-70			CK73HB1H471K	CHIP C 470PF K		C152			CC73GCH1H200J	CHIP C 20PF J	C2
C71,72			CK73HB1A104K	CHIP C 0.10UF K		C152			CC73GCH1H240J	CHIP C 24PF J	C
C73,74			CC73HCH1H0R5B	CHIP C 0.5PF B		C152			CC73GCH1H270J	CHIP C 27PF J	C5,C6
C75,76			CK73HB1H102K	CHIP C 1000PF K		C154			CK73GB1H471K	CHIP C 470PF K	
						C156			CC73GCH1H030B	CHIP C 3.0PF B	C2
C77			CK73HB1H471K	CHIP C 470PF K							
C78			CC73HCH1H330J	CHIP C 33PF J		C156			CC73GCH1H040B	CHIP C 4.0PF B	C
C79			CS77CP0J100M	CHIP-TAN 10UF 6.3WV		C156			CC73GCH1H060B	CHIP C 6.0PF B	C5
C80			CK73HB1H471K	CHIP C 470PF K		C156			CC73GCH1H090B	CHIP C 9.0PF B	C6
C83			CC73HCH1H050B	CHIP C 5.0PF B	C6	C157			CC73GCH1H010B	CHIP C 1.0PF B	C
						C157			CC73GCH1H040B	CHIP C 4.0PF B	C2
C83			CC73HCH1H150J	CHIP C 15PF J	C,C2,C5						
C84-86			CK73HB1H102K	CHIP C 1000PF K		C157			CC73GCH1H2R5B	CHIP C 2.5PF B	C5
C87			CC73HCH1H100D	CHIP C 10PF D		C157			CC73GCH1H3R5B	CHIP C 3.5PF B	C6
C90			CK73HB1H102K	CHIP C 1000PF K		C158			CC73GCH1H101J	CHIP C 100PF J	C,C2
C100			CK73HB1H471K	CHIP C 470PF K		C158			CK73GB1H102K	CHIP C 1000PF K	C5,C6
						C159			CC73GCH1H010B	CHIP C 1.0PF B	C5,C6
C101			CK73GB1H471K	CHIP C 470PF K							
C102			CC73GCH1H120J	CHIP C 12PF J		C159			CC73GCH1H020C	CHIP C 2.0PF C	C,C2
C106			CK73HB1H471K	CHIP C 470PF K		C160			CC73GCH1H020B	CHIP C 2.0PF B	C,C2
C107			CC73GCH1H060B	CHIP C 6.0PF B	C	C160			CC73GCH1H1R5B	CHIP C 1.5PF B	C5,C6
C107			CC73GCH1H070D	CHIP C 7.0PF D	C2	C161			CC73GCH1H050B	CHIP C 5.0PF B	C,C2
						C161			CC73GCH1H060B	CHIP C 6.0PF B	C5,C6
C107			CC73GCH1H080B	CHIP C 8.0PF B	C5,C6						
C108			CK73HB1H471K	CHIP C 470PF K		C163			CC73GCH1H030B	CHIP C 3.0PF B	
C110,111			CK73GB1H471K	CHIP C 470PF K		C164			CC73GCH1H050B	CHIP C 5.0PF B	C,C2
C112			CC73GCH1H070D	CHIP C 7.0PF D		C164			CC73GCH1H060B	CHIP C 6.0PF B	C5,C6
C113			CK73GB1C104K	CHIP C 0.10UF K		C166			CC73GCH1HR75B	CHIP C 0.75PF B	C,C2
						C166			CC73GCH1H030B	CHIP C 3.0PF B	C5,C6

PARTS LIST / 零件表

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C168			CC73GCH1H010B	CHIP C 1.0PF B	C	C257			CC73GCH1H070B	CHIP C 7.0PF B	C2
C169			CC73GCH1H060B	CHIP C 6.0PF B	C,C6	C258			CK73HB1H471K	CHIP C 470PF K	
C169			CC73GCH1H100C	CHIP C 10PF C	C2	C259			CK73GB1H471K	CHIP C 470PF K	
C169			CC73GCH1H4R5B	CHIP C 4.5PF B	C5	C262,263			CK73HB1H471K	CHIP C 470PF K	
C190			CK73GB1A105K	CHIP C 1.0UF K		C265			CK73HB1H471K	CHIP C 470PF K	
C191			CK73GB1H103K	CHIP C 0.010UF K		C266			CK73GB1H471K	CHIP C 470PF K	
C201			CK73GB1A224K	CHIP C 0.22UF K		C267			CC73GCH1H050B	CHIP C 5.0PF B	C5
C206			CK73HB1H102K	CHIP C 1000PF K		C267			CC73GCH1H060B	CHIP C 6.0PF B	C,C6
C207			CK73HB1H182K	CHIP C 1800PF K		C267			CC73GCH1H2R5B	CHIP C 2.5PF B	C
C208			CK73HB1H471K	CHIP C 470PF K		C268			CC73GCH1H220J	CHIP C 22PF J	C,C2
C209			CS77CP0J100M	CHIP-TAN 10UF 6.3WV		C268			CC73GCH1H270J	CHIP C 27PF J	C5,C6
C210			CK73HB1H471K	CHIP C 470PF K		C269			CC73GCH1H020B	CHIP C 2.0PF B	C,C2,C6
C211			CK73HB1C103K	CHIP C 0.010UF K		C269			CC73GCH1H1R5B	CHIP C 1.5PF B	C5
C213			CK73HB1A104K	CHIP C 0.10UF K		C270,271			CK73HB1H471K	CHIP C 470PF K	
C214			CC73HCH1H680J	CHIP C 68PF J		C272			CC73GCH1H020B	CHIP C 2.0PF B	
C215			CK73HB1H102K	CHIP C 1000PF K		C273			CC73GCH1H220J	CHIP C 22PF J	C,C2
C216			CK73GB1C104K	CHIP C 0.10UF K		C273			CC73GCH1H270J	CHIP C 27PF J	C5,C6
C217			CK73HB1A104K	CHIP C 0.10UF K		C274			CC73GCH1H040B	CHIP C 4.0PF B	C2,C5,C6
C218			CK73GB1C104K	CHIP C 0.10UF K		C275			CC73GCH1H020B	CHIP C 2.0PF B	C2
C219			CC73HCH1H330J	CHIP C 33PF J		C275			CC73GCH1H030B	CHIP C 3.0PF B	C6
C220			CK73HB1H102K	CHIP C 1000PF K		C275			CC73GCH1H1R5B	CHIP C 1.5PF B	C5
C221			CK73GB1C104K	CHIP C 0.10UF K		C275			CC73GCH1H2R5B	CHIP C 2.5PF B	C
C222			CK73HB1H102K	CHIP C 1000PF K		C276			CC73GCH1H040B	CHIP C 4.0PF B	C,C2,C5
C224,225			CK73HB1C103K	CHIP C 0.010UF K		C276			CC73GCH1H4R5B	CHIP C 4.5PF B	C6
C228			CC73GCH1H100C	CHIP C 10PF C		C290			CC73GCH1H020B	CHIP C 2.0PF B	C,C2
C230			CK73HB1C103K	CHIP C 0.010UF K		C290			CC73GCH1H050B	CHIP C 5.0PF B	C5,C6
C231			CK73GB1H103K	CHIP C 0.010UF K		C291			CC73GCH1H060B	CHIP C 6.0PF B	C,C2
C232			CK73HB1C103K	CHIP C 0.010UF K		C291			CC73GCH1H100C	CHIP C 10PF C	C5,C6
C233			CC73GCH1H060B	CHIP C 6.0PF B	C,C2	C292			CK73HB1H102K	CHIP C 1000PF K	C5,C6
C233			CC73GCH1H100C	CHIP C 10PF C	C5,C6	C292			CK73HB1H471K	CHIP C 470PF K	C,C2
C234			CK73HB1H102K	CHIP C 1000PF K		C293			CC73GCH1H0R3B	CHIP C 0.3PF B	C
C236			CC73GCH1H180J	CHIP C 18PF J		C293			CC73GCH1H040B	CHIP C 4.0PF B	C5,C6
C237			CK73HB1H102K	CHIP C 1000PF K		C301			CK73HB1H392K	CHIP C 3900PF K	
C238			CK73GB1C104K	CHIP C 0.10UF K		C302			CK73HB1H271K	CHIP C 270PF K	
C239			CK73GB1H102K	CHIP C 1000PF K		C304			CK73GB1A224K	CHIP C 0.22UF K	
C240			CC73GCH1H010B	CHIP C 1.0PF B	C2,C5,C6	C306		*	CS77CP0J4R7M	CHIP-TAN 4.7UF 6.3WV	
C240			CC73GCH1H3R5B	CHIP C 3.5PF B	C	C307,308			CK73HB1A104K	CHIP C 0.10UF K	
C241			CK73GB1H471K	CHIP C 470PF K		C309			CC73GCH1H820J	CHIP C 82PF J	
C244			CC73GCH1H2R5B	CHIP C 2.5PF B	C	C310			CK73HB1A683K	CHIP C 0.068UF K	
C245			CC73GCH1H220J	CHIP C 22PF J	C	C311			CK73GB1A105K	CHIP C 1.0UF K	
C246			CC73GCH1H020B	CHIP C 2.0PF B	C	C312			CC73GCH1H120J	CHIP C 12PF J	
C247			CK73HB1H471K	CHIP C 470PF K	C,C5,C6	C313			CC73GCH1H121J	CHIP C 120PF J	
C248			CC73GCH1H020B	CHIP C 2.0PF B	C	C314			CK73HB1A104K	CHIP C 0.10UF K	
C249			CC73GCH1H030B	CHIP C 3.0PF B	C5	C315			CK73GB1A105K	CHIP C 1.0UF K	
C249			CC73GCH1H050B	CHIP C 5.0PF B	C2	C316			CK73GB1C104K	CHIP C 0.10UF K	
C249			CC73GCH1H3R5B	CHIP C 3.5PF B	C6	C317			CK73HB1A104K	CHIP C 0.10UF K	
C249			CC73GCH1H4R5B	CHIP C 4.5PF B	C	C318		*	CS77CP0J4R7M	CHIP-TAN 4.7UF 6.3WV	
C250			CC73GCH1H220J	CHIP C 22PF J	C,C2	C319			CC73GCH1H271J	CHIP C 270PF J	
C250			CC73GCH1H270J	CHIP C 27PF J	C5,C6	C320			CK73HB1C103K	CHIP C 0.010UF K	
C251			CK73HB1H471K	CHIP C 470PF K		C321			CK73GB1A105K	CHIP C 1.0UF K	
C252			CC73GCH1H010B	CHIP C 1.0PF B	C,C5,C6	C322			CK73HB1C153K	CHIP C 0.015UF K	
C252			CC73GCH1H1R5B	CHIP C 1.5PF B	C2	C323			CC73GCH1H820J	CHIP C 82PF J	
C253			CC73GCH1H020B	CHIP C 2.0PF B	C2	C324			CC73HCH1H820J	CHIP C 82PF J	
C253			CC73GCH1H1R5B	CHIP C 1.5PF B	C,C5,C6	C325			CK73HB1A104K	CHIP C 0.10UF K	
C254			CK73HB1H471K	CHIP C 470PF K		C326			CK73HB1H102K	CHIP C 1000PF K	
C255			CC73GCH1H220J	CHIP C 22PF J	C,C2	C327			CC73HCH1H101J	CHIP C 100PF J	
C255			CC73GCH1H270J	CHIP C 27PF J	C5,C6	C328			CK73HB1H391K	CHIP C 390PF K	
C256		*	CS77CP0J4R7M	CHIP-TAN 4.7UF 6.3WV		C329,330			CK73GB1A105K	CHIP C 1.0UF K	
C257			CC73GCH1H040B	CHIP C 4.0PF B	C	C331			CK73HB1A104K	CHIP C 0.10UF K	
C257			CC73GCH1H060B	CHIP C 6.0PF B	C5,C6	C332			CK73HB1H471K	CHIP C 470PF K	

PARTS LIST / 零件表

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C333,334			CK73GB1C104K	CHIP C 0.10UF K		L1			L40-4791-37	SMALL FIXED INDUCTOR(4.700UH)	
C335			CC73GCH1H221J	CHIP C 220PF J		L3			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
C336			CK73FB1C474K	CHIP C 0.47UF K		L5			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
C338			CC73GCH1H101J	CHIP C 100PF J		L6 ,7			L92-0138-05	CHIP FERRITE	
C339			CS77AA0J100M	CHIP-TAN 10UF 6.3WV		L8 ,9			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	
C340			CK73GB1C104K	CHIP C 0.10UF K		L10 ,11			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C341			CK73GB1C473K	CHIP C 0.047UF K		L12			L92-0138-05	CHIP FERRITE	
C342			CS77AA0J100M	CHIP-TAN 10UF 6.3WV		L13 ,14			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C343			CK73GB1C473J	CHIP C 0.047UF J		L16			L40-2278-67	SMALL FIXED INDUCTOR(22NH)	C
C344			CC73GCH1H221J	CHIP C 220PF J		L16			L40-2278-67	SMALL FIXED INDUCTOR(27NH)	C2
C345		*	CS77CC0J101M	CHIP-TAN 100UF 6.3WV		L16			L40-3978-67	SMALL FIXED INDUCTOR(39NH)	C5,C6
C346			CK73GB1H102K	CHIP C 1000PF K		L17			L40-2278-67	SMALL FIXED INDUCTOR(27NH)	C
C348			CK73HB1H471K	CHIP C 470PF K		L17			L40-3378-67	SMALL FIXED INDUCTOR(33NH)	C2
C349			CK73HB1A333K	CHIP C 0.033UF K	C2	L17			L40-4778-67	SMALL FIXED INDUCTOR(47NH)	C5,C6
C351,352			CK73HB1C103K	CHIP C 0.010UF K		L18 ,19			L41-2285-03	SMALL FIXED INDUCTOR(220NH)	
C354			CK73HB1A104K	CHIP C 0.10UF K		L20 ,21			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
C401			CC73GCH1H471J	CHIP C 470PF J		L22			L92-0138-05	CHIP FERRITE	
C402			CK73HB1H102K	CHIP C 1000PF K		L23			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	
C403			CK73GB1C104K	CHIP C 0.10UF K		L24			L92-0470-05	CHIP FERRITE	
C405			CC73GCH1H101J	CHIP C 100PF J		L25			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	
C406			CC73HCH1H101J	CHIP C 100PF J		L100			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	C5,C6
C407			CK73HB1H102K	CHIP C 1000PF K		L100			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	C2
C408			CC73HCH1H101J	CHIP C 100PF J		L100,101			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	C
C409,410			CK73GB1A105K	CHIP C 1.0UF K		L101			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	C2,C5,C6
C411			CK73HB1H102K	CHIP C 1000PF K		L102			L92-0138-05	CHIP FERRITE	
C412-414			CC73HCH1H101J	CHIP C 100PF J		L103,104			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	
C415			CK73HB1H471K	CHIP C 470PF K		L105			L40-1575-54	SMALL FIXED INDUCTOR(15NH)	
C417			CK73GB1A105K	CHIP C 1.0UF K		L106			L92-0149-05	CHIP FERRITE	
C418			CK73HB1E562K	CHIP C 5600PF K		L107			L40-1263-92	SMALL FIXED INDUCTOR(1.2NH)	C
C419			CK73HB1H102K	CHIP C 1000PF K		L109			L92-0149-05	CHIP FERRITE	
C420			CC73HCH1H101J	CHIP C 100PF J		L110			L40-2285-54	SMALL FIXED INDUCTOR(220NH)	
C421			CK73GB1A105K	CHIP C 1.0UF K		L111			L41-1092-44	SMALL FIXED INDUCTOR(1UH)	
C422			CC73HCH1H101J	CHIP C 100PF J		L201			L40-1091-37	SMALL FIXED INDUCTOR(1.000UH)	
C424			CC73HCH1H101J	CHIP C 100PF J		L202			L92-0138-05	CHIP FERRITE	
C426,427			CK73GB1A105K	CHIP C 1.0UF K		L203			L40-5685-85	SMALL FIXED INDUCTOR(0.56UH)	
C428,429			CK73HB1H102K	CHIP C 1000PF K		L204			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
C430			CK73GB1H103K	CHIP C 0.010UF K		L206			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	C2
C431			CK73HB1C103K	CHIP C 0.010UF K		L206			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	C5,C6
C432			CC73HCH1H050B	CHIP C 5.0PF B		L211,212			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	C
C433,434			CC73HCH1H030B	CHIP C 3.0PF B		L212			L41-1278-14	SMALL FIXED INDUCTOR(12NH)	C5,C6
C435			CC73HCH1H050B	CHIP C 5.0PF B		L212			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	C2
C440			CC73GCH1H1R5B	CHIP C 1.5PF B		L214			L41-1278-14	SMALL FIXED INDUCTOR(12NH)	C5,C6
C443			CK73GB1A474K	CHIP C 0.47UF K		L214			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	C,C2
C444			CC73GCH1H020B	CHIP C 2.0PF B	C2	L215			L41-2285-03	SMALL FIXED INDUCTOR(220NH)	
C444			CC73GCH1H100C	CHIP C 10PF C	C5	L220			L34-4602-05	AIR-CORE COIL	C2,C5,C6
C453,454			CC73HCH1H101J	CHIP C 100PF J		L220			L34-4604-05	AIR-CORE COIL	C
C901,902			CK73GB1A105K	CHIP C 1.0UF K		L223			L34-4572-05	AIR-CORE COIL	C,C5,C6
TC1 ,2			C05-0384-05	CERAMIC TRIMMER CAPACITOR(10PF)		L224			L34-4564-05	AIR-CORE COIL	C5,C6
CN201			E23-1278-05	TERMINAL		L224-226			L34-4564-05	AIR-CORE COIL	C,C2
CN401			E40-6573-05	FLAT CABLE CONNECTOR		L225			L34-4565-05	AIR-CORE COIL	C5,C6
J301		*	E11-0707-05	PHONE JACK(2.5/3.5)		L226			L34-4564-05	AIR-CORE COIL	C5,C6
F401			F53-0324-05	FUSE(2.5A)		L228,229			L41-1278-14	SMALL FIXED INDUCTOR(12NH)	C5,C6
101	2A	*	J30-1282-14	SPACER(MIC ELEMENT)		L228,229			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	C,C2
CD201			L79-1582-05	TUNING COIL		L230			L41-3978-03	SMALL FIXED INDUCTOR(39NH)	C
CF201	2A		L72-0973-05	CERAMIC FILTER		L230			L41-5678-03	SMALL FIXED INDUCTOR(56NH)	C2
						L230			L41-6878-03	SMALL FIXED INDUCTOR(68NH)	C5
						L230			L41-7278-03	SMALL FIXED INDUCTOR(72NH)	C6
						L250			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	C5,C6
						L250			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	C,C2
						L290			L41-3078-17	SMALL FIXED INDUCTOR(30NH)	C

PARTS LIST / 零件表

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L301			L92-0140-05	CHIP FERRITE		R103			RK73GB2A333J	CHIP R 33K J 1/10W	C2
L302			L92-0149-05	CHIP FERRITE		R103			RK73GB2A473J	CHIP R 47K J 1/10W	C,C5,C6
L401			L92-0149-05	CHIP FERRITE		R105			RK73GB2A331J	CHIP R 330 J 1/10W	
L402-404			L92-0138-05	CHIP FERRITE		R106			RK73GB2A121J	CHIP R 120 J 1/10W	C2
L410			L92-0138-05	CHIP FERRITE		R106			RK73GB2A220J	CHIP R 22 J 1/10W	C,C5,C6
L411			L40-1875-92	SMALL FIXED INDUCTOR(18NH)		R107			RK73HB1J101J	CHIP R 100 J 1/16W	
L412			L34-4564-05	AIR-CORE COIL	C2	R110			RK73GB2A331J	CHIP R 330 J 1/10W	
X1			L77-1931-05	TCXO(12.8MHZ)		R111,112			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
X2		*	L78-1414-05	RESONATOR(7.37MHZ)		R114			RK73GB2A473J	CHIP R 47K J 1/10W	C,C5,C6
XF201			L71-0619-05	MCF(38.85MHZ)		R114			RK73GB2A683J	CHIP R 68K J 1/10W	C2
CP404			RK75HA1J473J	CHIP-COM 47K J 1/16W		R115			RK73GB2A103J	CHIP R 10K J 1/10W	
CP405			RK75HA1J102J	CHIP-COM 1.0K J 1/16W		R116			RK73GB2A220J	CHIP R 22 J 1/10W	
R1			RK73HB1J223J	CHIP R 22K J 1/16W		R120			RK73GB2A000JX	CHIP R 0.0 J 1/10W	C2,C5,C6
R2			RK73HB1J103J	CHIP R 10K J 1/16W		R121			RK73GB2A220J	CHIP R 22 J 1/10W	
R3			RK73HB1J333J	CHIP R 33K J 1/16W		R123			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R4			RK73HB1J563J	CHIP R 56K J 1/16W		R124			RK73GB2A473J	CHIP R 47K J 1/10W	
R5			RK73HB1J104J	CHIP R 100K J 1/16W		R126			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R6			RK73HB1J823J	CHIP R 82K J 1/16W		R127-129			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R7			RK73HB1J101J	CHIP R 100 J 1/16W		R130-135			RK73GH2A154D	CHIP R 150K D 1/10W	
R8 -11			RK73HB1J000JX	CHIP R 0.0 J 1/16W		R137			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R12			RK73HB1J222J	CHIP R 2.2K J 1/16W		R138			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R13			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R139			RK73GB2A473J	CHIP R 47K J 1/10W	
R14			RK73HB1J334J	CHIP R 330K J 1/16W		R140			RK73GB2A563J	CHIP R 56K J 1/10W	
R15			RK73GB2A221J	CHIP R 220 J 1/10W		R141			RK73GB2A104J	CHIP R 100K J 1/10W	
R16			RK73GB2A561J	CHIP R 560 J 1/10W		R142			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R17			RK73HB1J101J	CHIP R 100 J 1/16W		R143			RK73GB2A104J	CHIP R 100K J 1/10W	
R18			RK73GB2A181J	CHIP R 180 J 1/10W		R145			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R19			RK73GB2A122J	CHIP R 1.2K J 1/10W		R147			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R20			RK73HB1J100J	CHIP R 10 J 1/16W		R190			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A681J	CHIP R 680 J 1/10W		R191,192			RK73GB2A271J	CHIP R 270 J 1/10W	
R22			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R193			RK73GB2A473J	CHIP R 47K J 1/10W	C2
R23			RK73GB2A103J	CHIP R 10K J 1/10W		R193,194			RK73GB2A473J	CHIP R 47K J 1/10W	C,C5,C6
R25			RK73HB1J223J	CHIP R 22K J 1/16W		R194			RK73GB2A683J	CHIP R 68K J 1/10W	C2
R26			RK73HB1J103J	CHIP R 10K J 1/16W		R203			RK73HB1J184J	CHIP R 180K J 1/16W	
R27			RK73HB1J220J	CHIP R 22 J 1/16W		R206			RK73GB2A100J	CHIP R 10 J 1/10W	
R30			RK73HB1J273J	CHIP R 27K J 1/16W	C5,C6	R207			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R30			RK73HB1J333J	CHIP R 33K J 1/16W	C,C2	R208			RK73HB1J823J	CHIP R 82K J 1/16W	
R31			RK73HB1J474J	CHIP R 470K J 1/16W		R209			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R32			RK73HB1J102J	CHIP R 1.0K J 1/16W		R210,211			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R33			RK73HB1J154J	CHIP R 150K J 1/16W		R212			RK73HB1J823J	CHIP R 82K J 1/16W	
R34			RK73HB1J474J	CHIP R 470K J 1/16W		R213			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R35,36			RK73HB1J274J	CHIP R 270K J 1/16W		R215			RK73HB1J101J	CHIP R 100 J 1/16W	
R37			RK73HB1J101J	CHIP R 100 J 1/16W		R216			RK73HB1J124J	CHIP R 120K J 1/16W	
R38			RK73HB1J181J	CHIP R 180 J 1/16W		R217			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R39			RK73HB1J151J	CHIP R 150 J 1/16W	C2,C5,C6	R218			RK73HB1J561J	CHIP R 560 J 1/16W	
R39,40			RK73HB1J151J	CHIP R 150 J 1/16W	C	R219			RK73GB2A561J	CHIP R 560 J 1/10W	
R40			RK73HB1J101J	CHIP R 100 J 1/16W	C2,C5,C6	R226,227			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R41			RK73HB1J154J	CHIP R 150K J 1/16W		R228			RK73GB2A151J	CHIP R 150 J 1/10W	
R42			RK73HB1J103J	CHIP R 10K J 1/16W	C	R233			RK73HB1J104J	CHIP R 100K J 1/16W	
R42			RK73HB1J472J	CHIP R 4.7K J 1/16W	C2,C5,C6	R236			RK73HB1J563J	CHIP R 56K J 1/16W	
R43			RK73HB1J101J	CHIP R 100 J 1/16W		R238			RK73HB1J104J	CHIP R 100K J 1/16W	
R46			RK73HB1J103J	CHIP R 10K J 1/16W		R239			RK73HB1J563J	CHIP R 56K J 1/16W	
R47			RK73HB1J220J	CHIP R 22 J 1/16W		R240			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R48			RK73HB1J331J	CHIP R 330 J 1/16W		R241			RK73HB1J105J	CHIP R 1.0M J 1/16W	C,C5,C6
R49			RK73HB1J222J	CHIP R 2.2K J 1/16W		R243,244			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R50			RK73HB1J472J	CHIP R 4.7K J 1/16W		R248			RK73GB2A221J	CHIP R 220 J 1/10W	
R100			RK73HB1J472J	CHIP R 4.7K J 1/16W		R249			RK73GB2A220J	CHIP R 22 J 1/10W	
						R251			RK73HB1J104J	CHIP R 100K J 1/16W	
						R253			RK73HB1J104J	CHIP R 100K J 1/16W	
						R254			RK73HB1J683J	CHIP R 68K J 1/16W	

PARTS LIST / 零件表

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R255			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R423			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R256,257			RK73HB1J105J	CHIP R 1.0M J 1/16W		R424,425			RK73HB1J473J	CHIP R 47K J 1/16W	
R258			RK73FB2B000JX	CHIP R 0.0 J 1/8W		R426			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R301			RK73HB1J103J	CHIP R 10K J 1/16W		R435			RK73HB1J473J	CHIP R 47K J 1/16W	
R304			RK73HB1J273J	CHIP R 27K J 1/16W		R436			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R305			RK73HB1J104J	CHIP R 100K J 1/16W		R437,438			RK73HB1J473J	CHIP R 47K J 1/16W	
R306			RK73HB1J102J	CHIP R 1.0K J 1/16W		R445,446			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R307,308			RK73HB1J000JX	CHIP R 0.0 J 1/16W		R447			RK73HB1J123J	CHIP R 12K J 1/16W	
R310			RK73GB2A394J	CHIP R 390K J 1/10W		R449,450			RK73GB2A000JX	CHIP R 0.0 J 1/10W	C2,C5,C6
R311			RK73HB1J123J	CHIP R 12K J 1/16W		R452			RK73HB1J103J	CHIP R 10K J 1/16W	
R312			RK73GB2A334J	CHIP R 330K J 1/10W		R453			RK73HB1J223J	CHIP R 22K J 1/16W	
R313			RK73GB2A104J	CHIP R 100K J 1/10W		R901,902			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R314			RK73GB2A103J	CHIP R 10K J 1/10W		VR1	*		R32-0736-05	SEMI FIXED VARIABLE RESISTOR(68K)	
R315			RK73GB2A334J	CHIP R 330K J 1/10W		S1 -3			S70-0414-05	TACT SWITCH	
R316			RK73GB2A124J	CHIP R 120K J 1/10W		MIC301	2A	*	T91-0649-15	MIC ELEMENT	
R317			RK73GB2A474J	CHIP R 470K J 1/10W		D1			MA2S111	DIODE	
R318			RK73GB2A122J	CHIP R 1.2K J 1/10W		D2 -9			HVC376B	VARIABLE CAPACITANCE DIODE	
R319			RK73HB1J563J	CHIP R 56K J 1/16W		D10			1SV278F	VARIABLE CAPACITANCE DIODE	
R320			RK73HB1J332J	CHIP R 3.3K J 1/16W		D11			MA2S111	DIODE	
R321			RK73HB1J224J	CHIP R 220K J 1/16W		D101			HSC277	DIODE	
R322			RK73HB1J184J	CHIP R 180K J 1/16W		D102			HZU5CLL	ZENER DIODE	
R323			RK73HB1J563J	CHIP R 56K J 1/16W		D103,104			HVC131	DIODE	
R324,325			RK73GB2A104J	CHIP R 100K J 1/10W		D106			HVC131	DIODE	
R326			RK73GB2A000JX	CHIP R 0.0 J 1/10W		D122			HVC131	DIODE	
R327			RK73GB2A184J	CHIP R 180K J 1/10W		D202			HSC277	DIODE	
R328			RK73GB2A103J	CHIP R 10K J 1/10W		D203-206			HVC355B	VARIABLE CAPACITANCE DIODE	
R329			RK73GB2A823J	CHIP R 82K J 1/10W		D210			HVC355B	VARIABLE CAPACITANCE DIODE	C,C5,C6
R330			RK73HB1J332J	CHIP R 3.3K J 1/16W		D301,302			RB706F-40	DIODE	
R331			RK73GB2A154J	CHIP R 150K J 1/10W		D303			DAN222	DIODE	
R332			RK73GB2A153J	CHIP R 15K J 1/10W		D401			RB521S-30	DIODE	
R334			RK73GB2A473J	CHIP R 47K J 1/10W		D402			1SR154-400	DIODE	
R335			RK73GB2A222J	CHIP R 2.2K J 1/10W		D405			KDZ3.3V	ZENER DIODE	C5,C6
R336			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC1	*		MB15A02PFV2E1	MOS-IC	
R337			RK73GB2A151J	CHIP R 150 J 1/10W		IC101			TA75W01FUF	MOS-IC	
R338			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC201			TA31136FNG	MOS-IC	
R339			RK73GB2A471J	CHIP R 470 J 1/10W		IC301			AQUA-L	MOS-IC	
R340			RK73GB2A182J	CHIP R 1.8K J 1/10W		IC302			TA7368FG	MOS-IC	
R341			RK73GB2A103J	CHIP R 10K J 1/10W		IC401,402			XC6204B502MR	MOS-IC	
R342			RK73GB2A101J	CHIP R 100 J 1/10W		IC403			BD4840FVE	MOS-IC	
R343			RK73GB2A474J	CHIP R 470K J 1/10W		IC404			BD4845FVE	MOS-IC	
R344			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC405	*		30622MAA-B95GU	MICROPROCESSOR IC	
R345,346			RK73GB2A101J	CHIP R 100 J 1/10W		IC406			BR24L08F-W	ROM IC	
R347			RK73GB2A104J	CHIP R 100K J 1/10W		Q1			KTC4082	TRANSISTOR	
R348			RK73GB2A563J	CHIP R 56K J 1/10W		Q2			2SC5108(Y)F	TRANSISTOR	
R349			RK73GB2A333J	CHIP R 33K J 1/10W		Q3 ,4			2SK508NV(K52)	FET	
R350			RK73HB1J000JX	CHIP R 0.0 J 1/16W	C,C5,C6	Q5			DTA143TE	DIGITAL TRANSISTOR	
R350			RK73HB1J103J	CHIP R 10K J 1/16W	C2	Q6			2SC5108(Y)F	TRANSISTOR	
R354,355			RK73HB1J103J	CHIP R 10K J 1/16W		Q7			DTA143TE	DIGITAL TRANSISTOR	
R357			RK73HB1J000JX	CHIP R 0.0 J 1/16W		Q8			2SC4617(S)	TRANSISTOR	
R360			RK73HB1J000JX	CHIP R 0.0 J 1/16W		Q9			2SC4619(P,Q)	TRANSISTOR	
R403			RK73GB2A101J	CHIP R 100 J 1/10W		Q100			2SC4619(P,Q)	TRANSISTOR	
R404			RK73HB1J474D	CHIP R 470K D 1/16W		Q101			2SK3077F	FET	
R405			RK73GB2A334J	CHIP R 330K J 1/10W		Q102			2SK2596	FET	
R406			RK73HB1J474D	CHIP R 470K D 1/16W		Q103			2SK3476	FET	
R407			RK73HB1J334J	CHIP R 330K J 1/16W		Q104			DTC114EE	DIGITAL TRANSISTOR	
R408-412			RK73HB1J473J	CHIP R 47K J 1/16W		Q105			2SK879(Y)F	FET	
R413,414			RK73GB2A331J	CHIP R 330 J 1/10W		Q107			DTC114EE	DIGITAL TRANSISTOR	
R415,416			RK73GB2A473J	CHIP R 47K J 1/10W							
R417-420			RK73HB1J473J	CHIP R 47K J 1/16W							
R421,422			RK73HB1J102J	CHIP R 1.0K J 1/16W							


PARTS LIST / 零件表

TX-RX UNIT (X57-6890-XX)


Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
Q108			2SK1824-A	FET							
Q109			DTA144EE	DIGITAL TRANSISTOR							
Q202			DTA144EE	DIGITAL TRANSISTOR							
Q203			2SC4649(N,P)	TRANSISTOR							
Q204,205			3SK318	FET							
Q301			DTA114EE	DIGITAL TRANSISTOR							
Q302			2SC4919	TRANSISTOR							
Q303			DTC144EE	DIGITAL TRANSISTOR							
Q304		*	2SA1362(GR)-F	TRANSISTOR							
Q305			DTC144EE	DIGITAL TRANSISTOR							
Q306		*	2SK3577-A	FET							
Q316		*	2SK3577-A	FET							
Q401,402			DTC114EE	DIGITAL TRANSISTOR							
Q403,404			CPH3317	FET							
Q405			DTA123JE	DIGITAL TRANSISTOR							
Q407,408			2SK1830F	FET							
Q901			2SK1824-A	FET							
TH101			157-104-65001	THERMISTOR							
TH203			157-104-65001	THERMISTOR							

TK-3207G

EXPLODED VIEW / 部件分解图

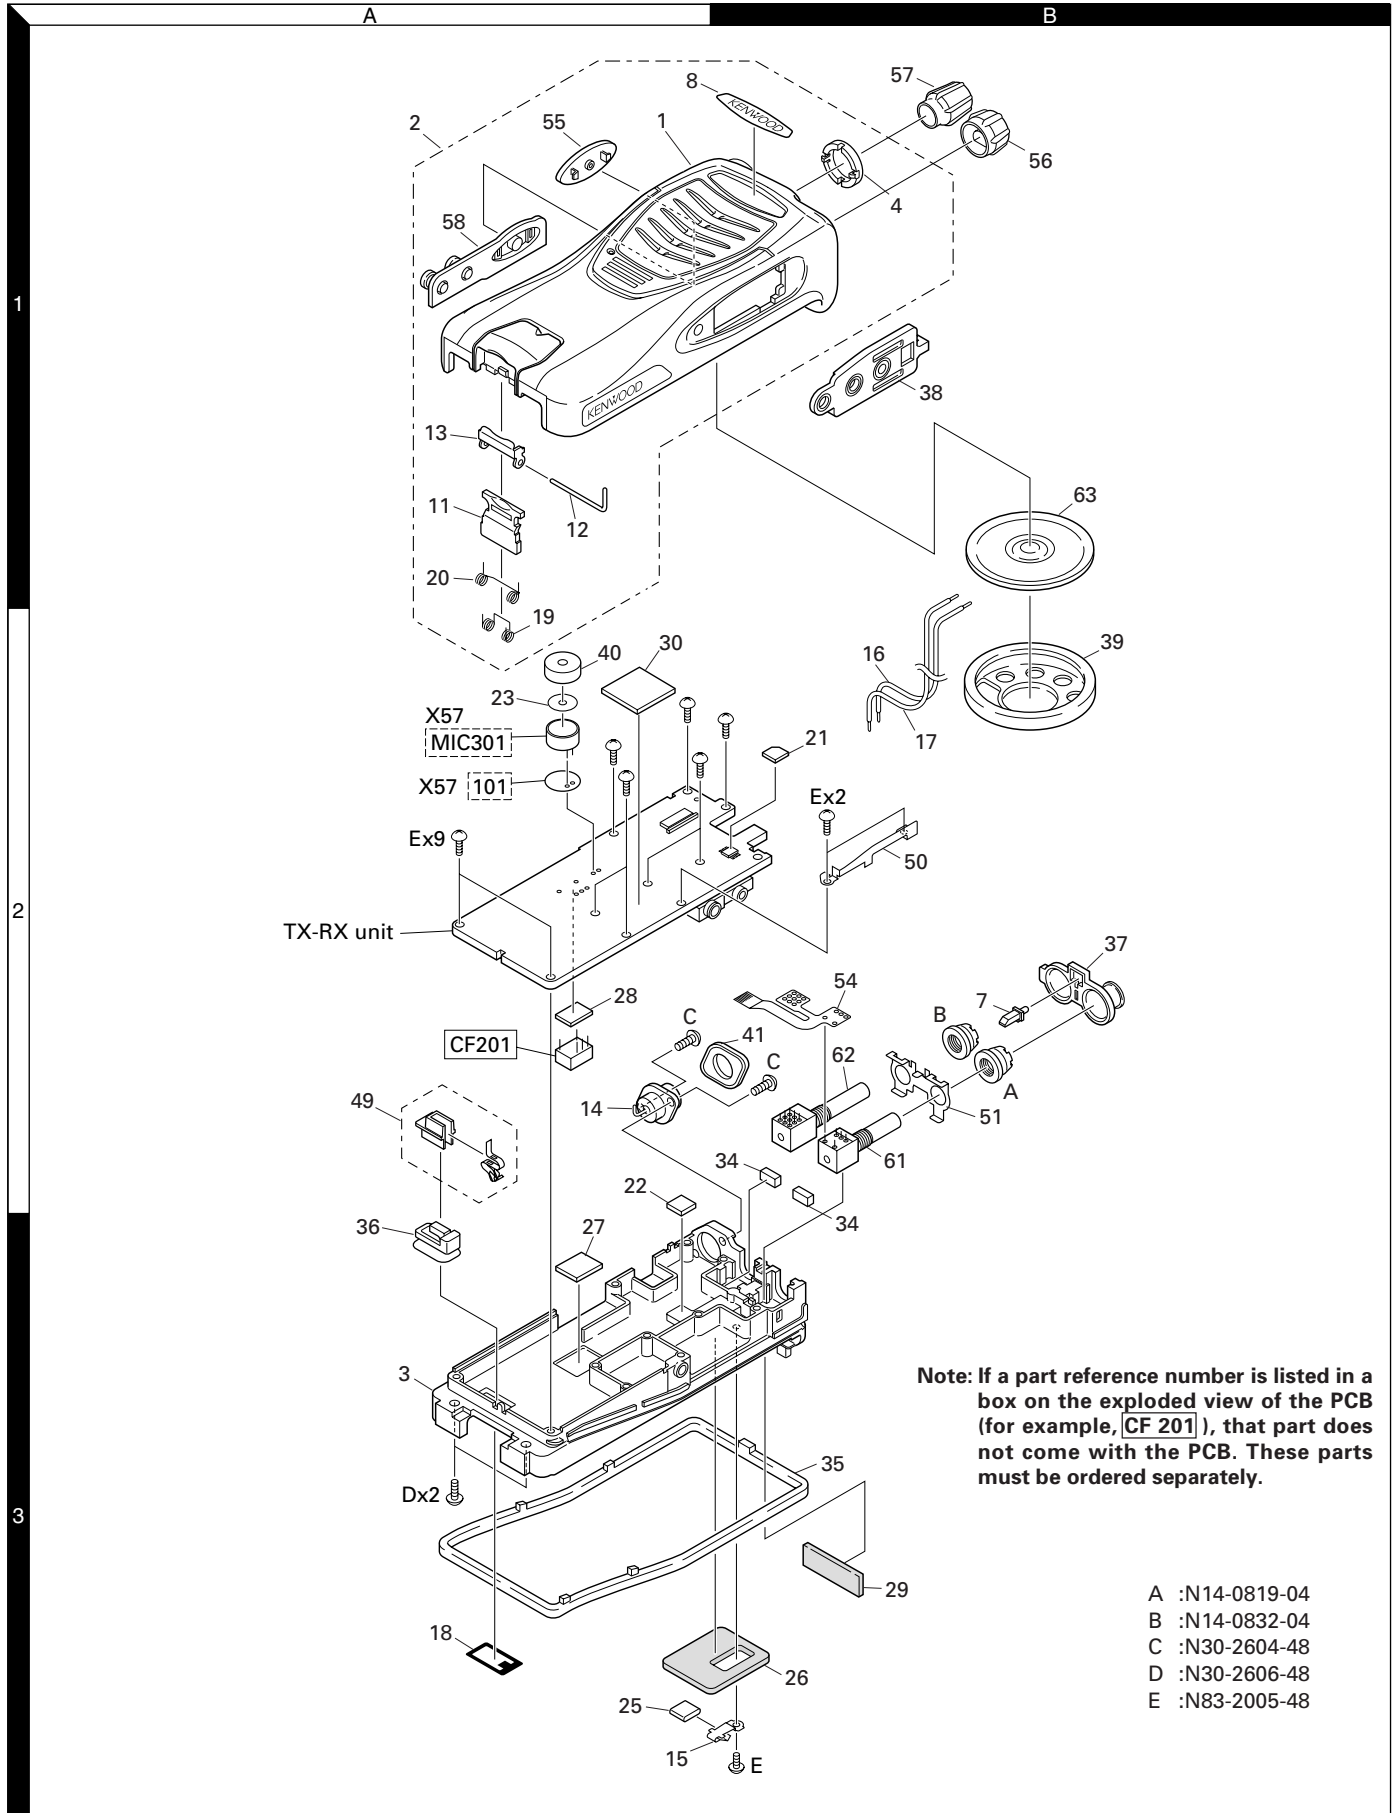

PACKING / 包装

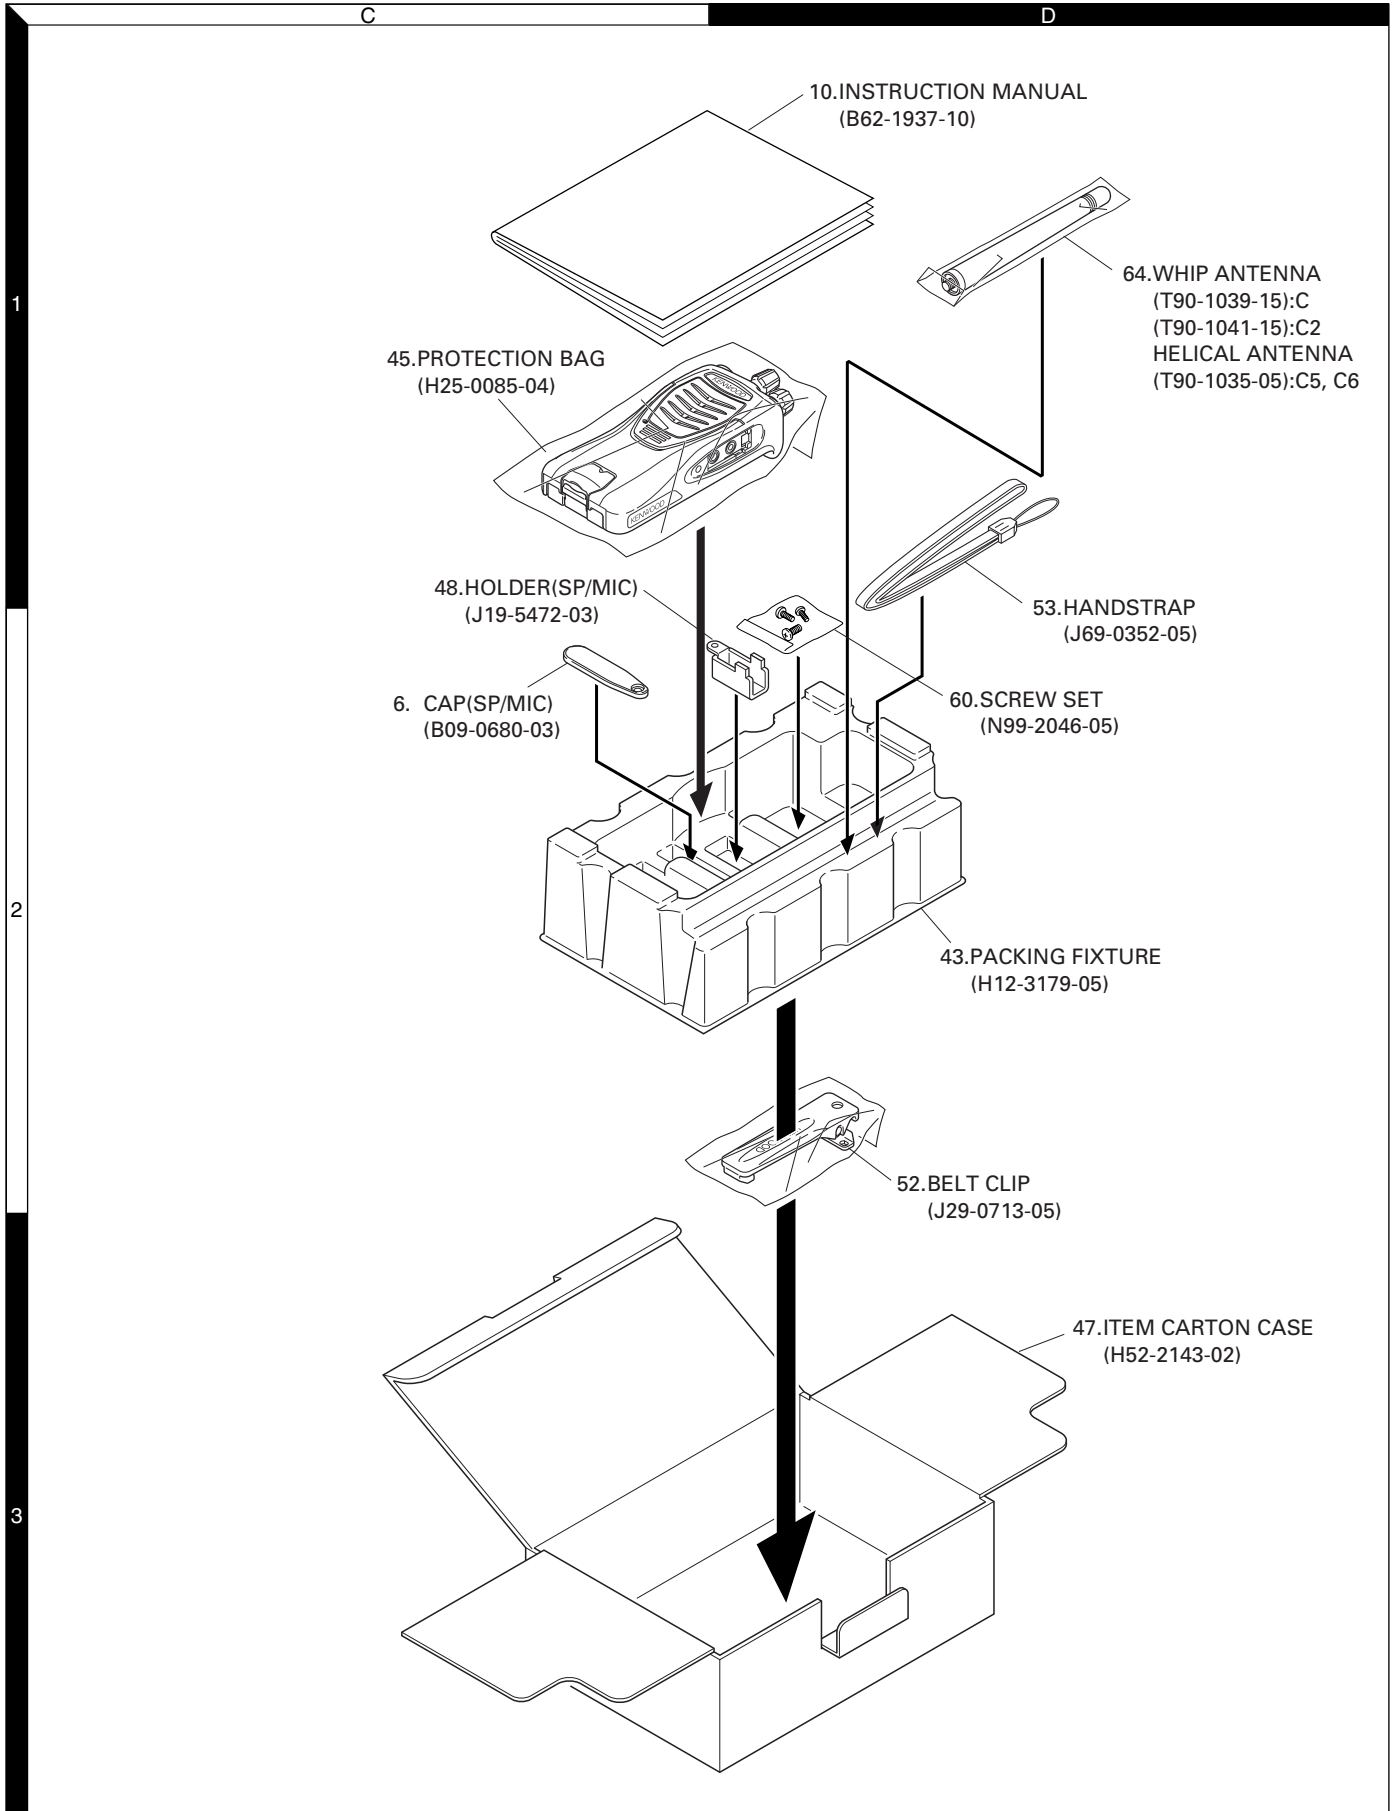

ADJUSTMENT / 调整

Test Equipment Required for Alignment

Test Equipment	Major Specifications	
1. Standard Signal Generator (SSG)	Frequency Range Modulation Output	440 to 480MHz (C) 400 to 430MHz (C2) 370 to 390MHz (C5) 350 to 370MHz (C6) Frequency modulation and external modulation -127dBm/0.1 μ V to greater than -47dBm/1mV
2. Power Meter	Input Impedance Operation Frequency Measurement Range	50 Ω 440 to 480MHz (C) 400 to 430MHz (C2) 370 to 390MHz (C5) 350 to 370MHz (C6) Vicinity of 10W
3. Deviation Meter	Frequency Range	440 to 480MHz (C) 400 to 430MHz (C2) 370 to 390MHz (C5) 350 to 370MHz (C6)
4. Digital Volt Meter (DVM)	Measuring Range Input Impedance	10mV to 10V DC High input impedance for minimum circuit loading
5. Oscilloscope		DC through 30MHz
6. High Sensitivity Frequency Counter	Frequency Range Frequency Stability	10Hz to 1000MHz 0.2ppm or less
7. Ammeter		5A
8. AF Volt Meter (AF VTVM)	Frequency Range Voltage Range	50Hz to 10kHz 1mV to 10V
9. Audio Generator (AG)	Frequency Range Output	50Hz to 5kHz or more 0 to 1V
10. Distortion Meter	Capability Input Level	3% or less at 1kHz 50mV to 10Vrms
11. Spectrum Analyzer	Measuring Range	DC to 1GHz or more
12. Tracking Generator	Center frequency Output Voltage	50kHz to 600MHz 100mV or more
13. 8 Ω Dummy Load		Approx. 8 Ω , 3W
14. Regulated Power Supply		5V to 10V, approx. 3A Useful if ammeter equipped

所需的用于调整的测试设备

测试设备	主要特性	
1. 标准信号发生器 (SSG)	频率范围 调制 输出	440 到 480MHz (C) 400 到 430MHz (C2) 370 到 390MHz (C5) 350 到 370MHz (C6) 调频和外部调制 -127dBm/0.1 μ V 到 大于 -47dBm/1mV
2. 功率计	输入阻抗 操作频率 测量范围	50 Ω 440 到 480MHz (C) 400 到 430MHz (C2) 370 到 390MHz (C5) 350 到 370MHz (C6) 10W 左右
3. 偏差仪	频率范围	440 到 480MHz (C) 400 到 430MHz (C2) 370 到 390MHz (C5) 350 到 370MHz (C6)
4. 数字电压表 (DVM)	测量范围 输入阻抗	直流 10mV 到 10V 为最小电路负载高输入阻抗
5. 示波器		直流到 30MHz
6. 高灵敏度频率计数器	频率范围 频率稳定性	10Hz 到 1000MHz 0.2ppm 或更低
7. 电流表		5A
8. 音频电压表 (AF VTVM)	频率范围 电压范围	50Hz 到 10kHz 1mV 到 10V
9. 音频发生器 (AG)	频率范围 输出	50Hz 到 5kHz 或更高 0 到 1V
10. 失真测试仪	容量 输入电平	1kHz 时 3% 或更低 50mV 到 10Vrms
11. 频谱分析仪	测量范围	直流到 1GHz 或更高
12. 轨迹发生器	中心频率 输出电压	50kHz 到 600MHz 100mV 或更高
13. 8 Ω 假负载		大约 8 Ω , 3W
14. 可调电源		5V 到 10V, 大约 3A 配备了电流表时有用

ADJUSTMENT / 调整

■ The following parts are required for adjustment

1. Antenna connector adapter

The antenna connector of this transceiver uses an SMA terminal.

Use an antenna connector adapter [SMA(f) – BNC(f) or SMA(f) – N(f)] for adjustment. (The adapter is not provided as an option, so buy a commercially-available one.)

2. Repair Jig (Chassis)


Use jig (part No.: A10-4086-03) for repairing the transceiver. Place the TX-RX unit on the jig and fit it with screws.

The jig facilitates the voltage check and protects the final amplifier FET when the voltage on the flow side of the TX-RX unit is checked during repairs.

3. Battery Jig (W05-1011-00)

Connect the power cable properly between the battery jig installed in the transceiver and the power supply, and be sure output voltage and the power supply polarity prior to switching the power supply ON, otherwise over voltage and reverse connection may damage the transceiver, or the power supply or both.

Note: When using the battery jig, you must measure the voltage at the terminals of the battery jig. Otherwise, a slight voltage drop may occur within the power cable, between the power supply and the battery jig, especially while the transceiver transmits.

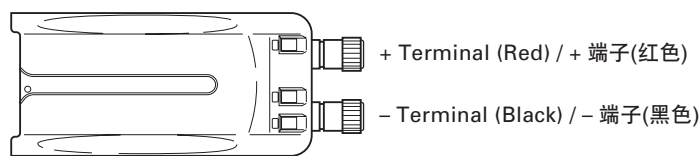

■ 下面是调整时所需的部件

1. 天线接口转换头

此对讲机的天线接口使用 SMA 终端。

使用天线接口转换头 [SMA(f)-BNC(f) 或 SMA(f)-N(f)] 进行调整。(转换头不作为可选件提供, 因此请购买商用转换头。)

2. 维修机架 (机壳)


使用机壳 (A10-4086-03) 维修对讲机。将 TX-RX 单元放置在机壳上, 并且拧上螺钉。

在维修过程中, 需要在 TX-RX 单元的电路板上检测电压时, 机壳可以方便地进行电压检测, 并且保护模块。

3. 电池夹具 (W05-1011-00)

在对讲机的电池夹具和电源之间连接适当的电源电缆, 确认了输出电压之后接通电源开关, 电压超过或极性颠倒都有可能损坏对讲机。


注意: 当使用电池夹具时, 你必须测定电池夹具的终端电压。因为, 电源和电池夹具之间会有一些的电压下降, 尤其在对讲机发射的时候。

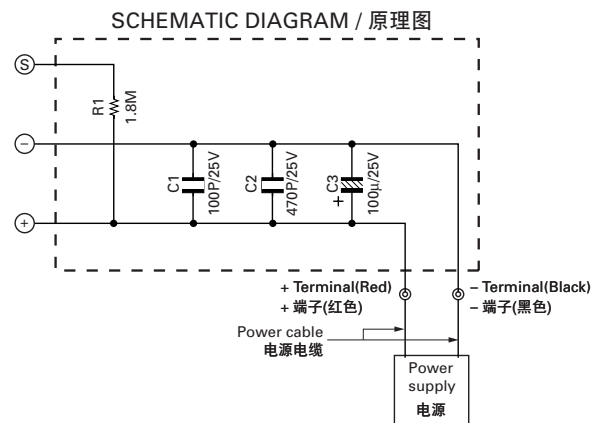

ADJUSTMENT / 调整


Adjustment points

调整点

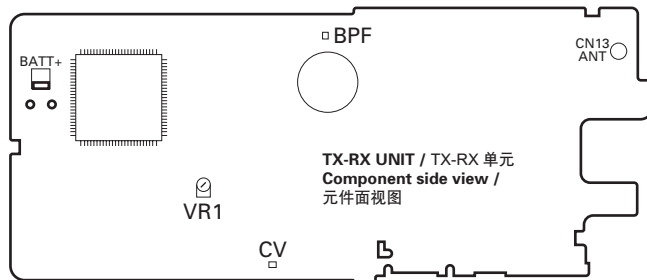

VR1 : Frequency adjustment
 BPF : Band-pass wave form test point
 CV : Lock voltage adjustment terminal

VR1 : 频率调整
 BPF : 带通波形测试点
 CV : 锁定电压调整端子

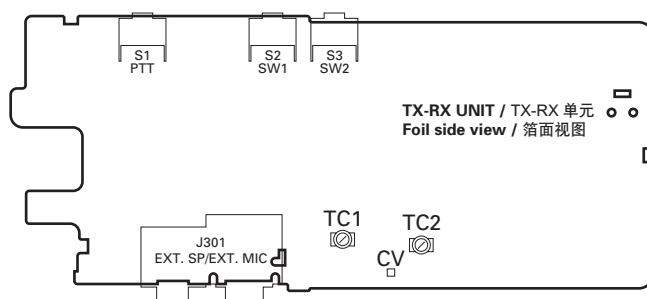

TC1 : Transmit lock voltage adjustment
 TC2 : Receive lock voltage adjustment
 CV : Lock voltage adjustment terminal

TC1 : 发射锁定电压调整
 TC2 : 接收锁定电压调整
 CV : 锁定电压调整端子

Frequency and signaling

The transceiver has been adjusted for the frequencies shown in the following table. When required, readjust them following the adjustment procedure to obtain the frequencies you want in actual operation.

Frequency (MHz) C type

Channel No.	RX	TX
1	460.050	460.100
2	440.050	440.100
3	479.950	479.900
4	460.000	460.000
5	460.200	460.200
6	460.400	460.400
7~16	—	—

Frequency (MHz) C2 type

Channel No.	RX	TX
1	415.050	415.100
2	400.050	400.100
3	429.950	429.900
4	415.000	415.000
5	415.200	415.200
6	415.400	415.400
7~16	—	—

Frequency (MHz) C5 type

Channel No.	RX	TX
1	380.050	380.100
2	370.050	370.100
3	389.950	389.900
4	380.000	380.000
5	380.200	380.200
6	380.400	380.400
7~16	—	—

频率和信令

频率设定调整如下表所示。当需要时，按照如下调整程序重新调整，以便获得您在实际操作时希望的频率。

频率 (MHz) C 类型

信道号码	接收	发射
1	460.050	460.100
2	440.050	440.100
3	479.950	479.900
4	460.000	460.000
5	460.200	460.200
6	460.400	460.400
7~16	—	—

频率 (MHz) C2 类型

信道号码	接收	发射
1	415.050	415.100
2	400.050	400.100
3	429.950	429.900
4	415.000	415.000
5	415.200	415.200
6	415.400	415.400
7~16	—	—

频率 (MHz) C5 类型

信道号码	接收	发射
1	380.050	380.100
2	370.050	370.100
3	389.950	389.900
4	380.000	380.000
5	380.200	380.200
6	380.400	380.400
7~16	—	—

ADJUSTMENT / 调整

Frequency (MHz) C6 type

Channel No.	RX	TX
1	360.050	360.100
2	350.050	350.100
3	369.950	369.900
4	360.000	360.000
5	360.200	360.200
6	360.400	360.400
7~16	—	—

Signaling

Signaling No.	RX	TX
1	None	None
2	None	100Hz Square Wave
3	QT 67.0Hz	QT 67.0Hz
4	QT 151.4Hz	QT 151.4Hz
5	QT 250.3Hz	QT 250.3Hz
6	DQT D023N	DQT D023N
7	DQT D754I	DQT D754I
8	DTMF 159D	DTMF 159D
9	None	DTMF tone 9

• Preparations for tuning the transceiver

Before attempting to tune the transceiver, connect the unit to a suitable power supply.

Whenever the transmitter is tuned, the unit must be connected to a suitable dummy load (i.e. power meter).

The speaker output connector must be terminated with a 8Ω dummy load and connected to an AC voltmeter and an audio distortion meter or a SINAD measurement meter at all times during tuning.

Adjustment Frequency

TEST CH	C type	
	RX	TX
Low	440.050MHz	440.100MHz
Low'	450.050MHz	450.100MHz
Center	460.050MHz	460.100MHz
High'	470.050MHz	470.100MHz
High	479.950MHz	479.900MHz

TEST CH	C2 type	
	RX	TX
Low	400.050MHz	400.100MHz
Low'	407.550MHz	407.600MHz
Center	415.050MHz	415.100MHz
High'	422.550MHz	422.600MHz
High	429.950MHz	429.900MHz

TEST CH	C5 type	
	RX	TX
Low	370.050MHz	370.100MHz
Low'	375.050MHz	375.100MHz
Center	380.050MHz	380.100MHz
High'	385.050MHz	385.100MHz
High	389.950MHz	389.900MHz

TEST CH	C6 type	
	RX	TX
Low	350.050MHz	350.100MHz
Low'	355.050MHz	355.100MHz
Center	360.050MHz	360.100MHz
High'	365.050MHz	365.100MHz
High	369.950MHz	369.900MHz

频率 (MHz) C6 类型

信道号码	接收	发射
1	360.050	360.100
2	350.050	350.100
3	369.950	369.900
4	360.000	360.000
5	360.200	360.200
6	360.400	360.400
7~16	—	—

信令

信令号码	接收	发射
1	无	无
2	无	100Hz 方形波
3	QT 67.0Hz	QT 67.0Hz
4	QT 151.4Hz	QT 151.4Hz
5	QT 250.3Hz	QT 250.3Hz
6	DQT D023N	DQT D023N
7	DQT D754I	DQT D754I
8	DTMF 159D	DTMF 159D
9	无	DTMF 音频 9

• 调谐对讲机的准备

在调谐对讲机之前，把装置连接到规定的电源。

任何时候调整发射，装置必须连接到合适的假负载（即功率表）。

在全部调谐过程中，扬声器输出端子必须连接8Ω假负载连接到AC伏特计和音频失真仪或SINAD测试表。

调整频率

测试 CH	C 类型	
	接收	发射
低	440.050MHz	440.100MHz
低'	450.050MHz	450.100MHz
中心	460.050MHz	460.100MHz
高'	470.050MHz	470.100MHz
高	479.950MHz	479.900MHz

测试 CH	C2 类型	
	接收	发射
低	400.050MHz	400.100MHz
低'	407.550MHz	407.600MHz
中心	415.050MHz	415.100MHz
高'	422.550MHz	422.600MHz
高	429.950MHz	429.900MHz

测试 CH	C5 类型	
	接收	发射
低	370.050MHz	370.100MHz
低'	375.050MHz	375.100MHz
中心	380.050MHz	380.100MHz
高'	385.050MHz	385.100MHz
高	389.950MHz	389.900MHz

测试 CH	C6 类型	
	接收	发射
低	350.050MHz	350.100MHz
低'	355.050MHz	355.100MHz
中心	360.050MHz	360.100MHz
高'	365.050MHz	365.100MHz
高	369.950MHz	369.900MHz

ADJUSTMENT / 调整

Common Section

Item	Condition	Measurement		Adjustment		Specifications/ Remark
		Test equipment	Terminal	Parts	Method	
1. Setting	1) BATT terminal voltage:7.5V 2) SSG standard modulation [Wide] MOD:1kHz,DEV:3kHz [Narrow] MOD:1kHz,DEV:1.5kHz					
2. VCO lock voltage RX	1) CH:High	Power meter DVM	ANT CV	TC2	3.0V (C, C2)	±0.1V
	2) CH:Low				3.2V (C5, C6)	
3. VCO lock voltage TX	3) CH:High PTT:ON			TC1	3.0V (C, C2)	±0.1V
	4) CH:Low PTT:ON				3.2V (C5, C6)	
			Check	0.6V or more		

Transmitter Section

Item	Condition	Measurement		Adjustment		Specifications/ Remark
		Test equipment	Terminal	Parts	Method	
1. Frequency Adjust	1) CH:High 2) PTT:ON	Frequency counter	ANT	VR1	High frequency ±50Hz	Note: After replacing the TCXO(X1) align frequency.
2. High power Adjust	TEST CH: Low Low' Center High' High (5 points) BATT terminal voltage:7.5V PTT:ON	Power meter Ammeter		Programming Software:KPG-87D	4.0W	±0.1W 2.0 A or less
3. Low power Adjust	TEST CH: Low Low' Center High' High (5 points) BATT terminal voltage:7.5V PTT:ON				Low High : 0.95W Center : 1.05W Low' High' : 1.00W	Low High : ±0.05W Low' Center High' : ±0.1W 1.0 A or less
4. Max deviation Adjust [Wide]	TEST CH: Center Low High (3 points) AG:1kHz/150mV Deviation meter filter LPF:15kHz HPF:OFF PTT:ON	Power meter Deviation meter Oscilloscope AG AF VTVM	ANT SP/MIC connector			4.2kHz (According to the larger +,-)
[Narrow]	TEST CH:Center PTT:ON				2.2kHz (According to the larger +,-)	±80Hz
5. VOX 1 Writing	TEST CH:Center AG:1kHz/45mV					

ADJUSTMENT / 调整


公用部分

项目	条件	测量		调整		规格 / 备注
		测试设备	端子	部件	方法	
1. 设置	1) BATT端子电压: 7.5V 2) SSG 标准调制 [宽] MOD:1kHz,DEV:3kHz [窄] MOD:1kHz,DEV:1.5kHz					
2. VCO 锁定电压 RX	1) CH: 高	功率表 DVM	ANT CV	TC2	3.0V (C, C2) 3.2V (C5, C6)	±0.1V
	2) CH: 低				检查	0.6V 或以上
3. VCO 锁定电压 TX	3) CH: 高 PTT: ON			TC1	3.0V (C, C2) 3.2V (C5, C6)	±0.1V
	4) CH: 低 PTT: ON				检查	0.6V 或以上


发射部分

项目	条件	测量		调整		规格 / 备注
		测试设备	端子	部件	方法	
1. 频率调整	1) CH: 高 2) PTT: ON	频率计	ANT	VR1	高频率 ±50Hz	注意: 更换 TCXO(X1)后, 请调整频率。
2. 高功率调整	测试 CH: 低 低' 中心 高' 高 (5点) BATT 端子电压: 7.5V PTT: ON	功率表 电流表		编程软件: KPG-87D	4.0W	±0.1W 2.0A 或以下
3. 低功率调整	测试 CH: 低 低' 中心 高' 高 (5点) BATT 端子电压: 7.5V PTT: ON				低 高 : 0.95W 中心 : 1.05W 低' 高' : 1.00W	低 高 : ±0.05W 低' 中心 高' : ±0.1W 1.0A 或以下
4. 最大频偏调整 [宽]	测试 CH: 中心 低 高 (3点) AG: 1kHz / 150mV 频偏仪滤波器 LPF: 15kHz HPF: OFF PTT: ON	功率表 频偏仪 示波器 AG AF VTVM	ANT SP / MIC 连接器		4.2kHz (按照最大+,-)	±80Hz
	[窄]	测试 CH: 中心 PTT: ON			2.2kHz (按照最大+,-)	±80Hz
5. VOX 1 写入	测试 CH: 中心 AG: 1kHz / 45mV					










ADJUSTMENT / 调整

Item	Condition	Measurement		Adjustment		Specifications/ Remark
		Test equipment	Terminal	Parts	Method	
6. VOX 10 Writing	TEST CH:Center AG:1kHz/3.0mV	Power meter Deviation meter	ANT SP/MIC connector	Programming Software:KPG-87D		
7. DQT balance Adjust [Wide]	TEST CH: Center Low High (3 points) LPF:3kHz HPF:OFF PTT:ON	Oscilloscope AG AF VTVM	ANT	Programming Software:KPG-87D	Make the demodulation wave into square waves	
[Narrow]	TEST CH:Center PTT:ON					
8. QT deviation Adjust [Wide]	TEST CH: Center Low High (3 points) LPF:3kHz HPF:OFF PTT:ON				0.75kHz	±40Hz
[Narrow]	TEST CH: Center PTT:ON				0.38kHz (C, C2) 0.40kHz (C5, C6)	±40Hz
9. DQT deviation Adjust [Wide]	TEST CH: Center Low High (3 points) LPF:3kHz HPF:OFF PTT:ON				0.75kHz	±40Hz
[Narrow]	TEST CH:Center PTT:ON				0.38kHz	±40Hz
10. DTMF deviation Adjust [Wide]	TEST CH:Center LPF:15kHz HPF:OFF PTT:ON				3.0kHz	±100Hz
[Narrow]	TEST CH:Center PTT:ON				1.5kHz	±100Hz
11. MSK deviation Adjust [Wide]	TEST CH: Center LPF:15kHz HPF:OFF PTT:ON				3.1kHz	±100Hz
[Narrow]	TEST CH:Center PTT:ON				1.5kHz	±100Hz

ADJUSTMENT / 调整

项目	条件	测量		调整		规格 / 备注
		测试设备	端子	部件	方法	
6. VOX 10 写入	测试 CH: 中心 AG: 1kHz / 3.0mV	功率表 频偏仪	ANT SP/MIC 连接器	编程软件: KPG-87D		
7. DQT 平衡调整 [宽]	测试 CH: 中心 低 高 (3点) LPF: 3kHz HPF: OFF PTT: ON	示波器 AG AF VTVM	ANT	编程软件: KPG-87D	把解调波调整为方波	
[窄]	测试 CH: 中心 PTT: ON					
8. QT 频偏调整 [宽]	测试 CH: 中心 低 高 (3点) LPF: 3kHz HPF: OFF PTT: ON				0.75kHz	± 40Hz
[窄]	测试 CH: 中心 PTT: ON				0.38kHz (C, C2) 0.40kHz (C5, C6)	± 40Hz
9. DQT 频偏调整 [宽]	测试 CH: 中心 低 高 (3点) LPF: 3kHz HPF: OFF PTT: ON				0.75kHz	± 40Hz
[窄]	测试 CH: 中心 PTT: ON				0.38kHz	± 40Hz
10. DTMF 频偏调整 [宽]	测试 CH: 中心 LPF: 15kHz HPF: OFF PTT: ON				3.0kHz	± 100Hz
[窄]	测试 CH: 中心 PTT: ON				1.5kHz	± 100Hz
11. MSK 频偏调整 [宽]	测试 CH: 中心 LPF: 15kHz HPF: OFF PTT: ON				3.1kHz	± 100Hz
[窄]	测试 CH: 中心 PTT: ON				1.5kHz	± 100Hz

Receiver Section

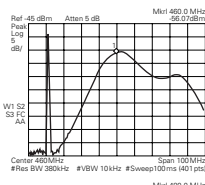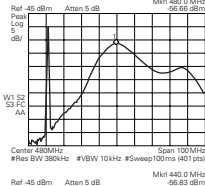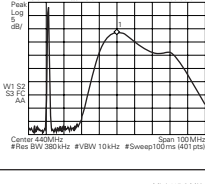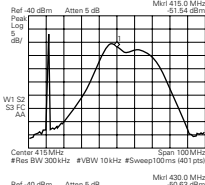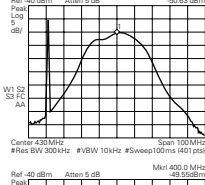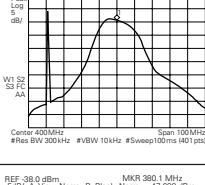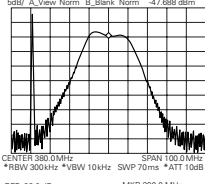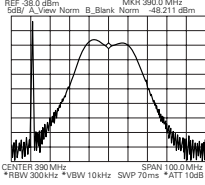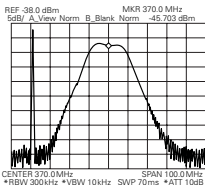
Item	Condition	Measurement		Adjustment		Specifications/ Remark
		Test equipment	Terminal	Parts	Method	
1. BPF Wave Adjust TK-3207 (C)	(1)Center frequency Spectrum analyzer setting Center-f : 460MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 5dB (2)High-edge frequency Spectrum analyzer setting Center-f : 480MHz (3)Low-edge frequency Spectrum analyzer setting Center-f : 440MHz	Spectrum analyzer	ANT BPF	Programming Software: KPG-87D	Adjust the waveform as shown to the right.	  
TK-3207 (C2)	(1)Center frequency Spectrum analyzer setting Center-f : 415MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 5dB (2)High-edge frequency Spectrum analyzer setting Center-f : 430MHz (3)Low-edge frequency Spectrum analyzer setting Center-f : 400MHz					  
TK-3207 (C5)	(1)Center frequency Spectrum analyzer setting Center-f : 380MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 10dB (2)High-edge frequency Spectrum analyzer setting Center-f : 390MHz (3)Low-edge frequency Spectrum analyzer setting Center-f : 370MHz					  

ADJUSTMENT / 调整


接收部分

项目	条件	测量		调整		规格 / 备注
		测试设备	端子	部件	方法	
1. BPF 波形调整 TK-3207 (C)	(1)中心频率 频谱分析仪设定 Center-f : 460MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 5dB (2)高边频率 频谱分析仪设定 Center-f : 480MHz (3)低边频率 频谱分析仪设定 Center-f : 440MHz	频谱分析仪	ANT BPF	编程软件: KPG-87D	调整波形如 右图所示	<p>Three frequency response graphs showing the BPF adjustment process. Each graph plots Peak Log S/P (dB) against frequency (MHz). The graphs are for center frequencies of 460MHz, 480MHz, and 440MHz. The y-axis ranges from -38.0 dBm to 45.0 dBm. The x-axis ranges from 400MHz to 520MHz. The graphs show a peak at the center frequency with a roll-off on either side.</p>
TK-3207 (C2)	(1)中心频率 频谱分析仪设定 Center-f : 415MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 5dB (2)高边频率 频谱分析仪设定 Center-f : 430MHz (3)低边频率 频谱分析仪设定 Center-f : 400MHz					<p>Three frequency response graphs showing the BPF adjustment process. Each graph plots Peak Log S/P (dB) against frequency (MHz). The graphs are for center frequencies of 415MHz, 430MHz, and 400MHz. The y-axis ranges from -38.0 dBm to 40.0 dBm. The x-axis ranges from 350MHz to 480MHz. The graphs show a peak at the center frequency with a roll-off on either side.</p>
TK-3207 (C5)	(1)中心频率 频谱分析仪设定 Center-f : 380MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 10dB (2)高边频率 频谱分析仪设定 Center-f: 390MHz (3)低边频率 频谱分析仪设定 Center-f: 370MHz					<p>Three frequency response graphs showing the BPF adjustment process. Each graph plots Peak Log S/P (dB) against frequency (MHz). The graphs are for center frequencies of 380MHz, 390MHz, and 370MHz. The y-axis ranges from -38.0 dBm to -37.0 dBm. The x-axis ranges from 300MHz to 450MHz. The graphs show a peak at the center frequency with a roll-off on either side.</p>

ADJUSTMENT / 调整

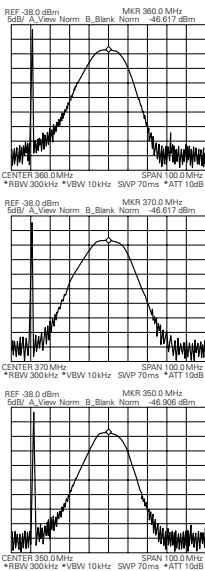Item	Condition	Measurement		Adjustment		Specifications/ Remark
		Test equipment	Terminal	Parts	Method	
1. BPF Wave Adjust TK-3207 (C6)	(1)Center frequency Spectrum analyzer setting Center-f : 360MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 10dB (2)High-edge frequency Spectrum analyzer setting Center-f : 370MHz (3)Low-edge frequency Spectrum analyzer setting Center-f : 350MHz	Spectrum analyzer	ANT BPF	Programming Software: KPG-87D	Adjust the waveform as shown to the right.	
2. Sensitivity Check [Wide]	TEST CH: Low Center High SSG output:-117 dBm(0.3μV) SSG MOD:3.0kHz	SSG DVM Oscilloscope AF VTVM	ANT		Check	12dB SINAD or more
[Narrow]	TEST CH:Center SSG output:-115 dBm(0.4μV) SSG MOD:1.5kHz					
3. SQL1 (Threshold) Writing [Wide]	TEST CH: Center Low High SSG output:-123 dBm(0.16μV) SSG MOD:3.0kHz			Programming Software: KPG-87D	Write	Squelch open
[Narrow]	TEST CH: Center SSG output:-122 dBm(0.18μV) SSG MOD:1.5kHz					
4. SQL9 (Tight) Writing [Wide]	TEST CH: Center Low High SSG output:-117 dBm(0.3μV) SSG MOD:3.0kHz					
[Narrow]	TEST CH: Center SSG output: -116 dBm(0.35μV) (C, C2) -117 dBm(0.3μV) (C5, C6) SSG MOD:1.5kHz					
5. BATT detection Writing	BATT terminal voltage:5.9V	DVM	ANT BATT terminal		Write	BATT terminal voltage:5.9V


ADJUSTMENT / 调整

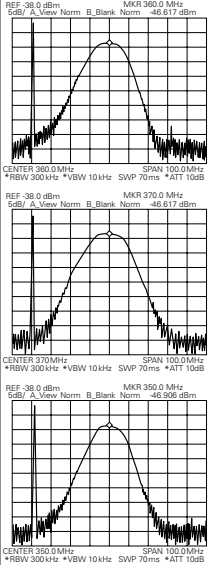项目	条件	测量		调整		规格 / 备注
		测试设备	端子	部件	方法	
1. BPF 波形调整 TK-3207 (C6)	(1)中心频率 频谱分析仪设定 Center-f : 360MHz Span : 100MHz RBW : 300kHz VBW : 10kHz ATT : 10dB (2)高边频率 频谱分析仪设定 Center-f : 370MHz (3)低边频率 频谱分析仪设定 Center-f : 350MHz	频谱分析仪	ANT BPF	编程软件: KPG-87D	调整波形如 右图所示	
2. 灵敏度检查 [宽]	测试 CH : 低 中心 高 SSG 输出 : -117 dBm (0.3 μV) SSG MOD : 3kHz	SSG DVM 示波器 AF VTVM	ANT		检查	12dB SINAD 或 以上
[窄]	测试 CH : 中心 SSG 输出 : -115 dBm (0.4 μV) SSG MOD : 1.5kHz					
3. SQL1 (静噪阈值) 写入 [宽]	测试 CH : 中心 低 高 SSG 输出 : -123 dBm (0.16 μV) SSG MOD : 3.0kHz			编程软件 : KPG-87D	写入	静噪开放
[窄]	测试 CH : 中心 SSG 输出 : -122 dBm (0.18 μV) SSG MOD : 1.5kHz					
4. SQL9 (深静噪) 写入 [宽]	测试 CH : 中心 低 高 SSG 输出 : -117 dBm (0.3 μV) SSG MOD : 3.0kHz					
[窄]	测试 CH : 中心 SSG 输出 : -116 dBm (0.35 μV) (C, C2) -117 dBm (0.3 μV) (C5, C6) SSG MOD : 1.5kHz					
5. 电池检测写入	BATT 端子电压 : 5.9V	DVM	ANT BATT 端子		写入	BATT端子电压 : 5.9V

TK-3207G PC BOARD / PC 板

TX-RX UNIT (X57-6890-XX) Component side view (J79-0045-09)



-21 : C -22 : C2 -24 : C6 -25 : C5

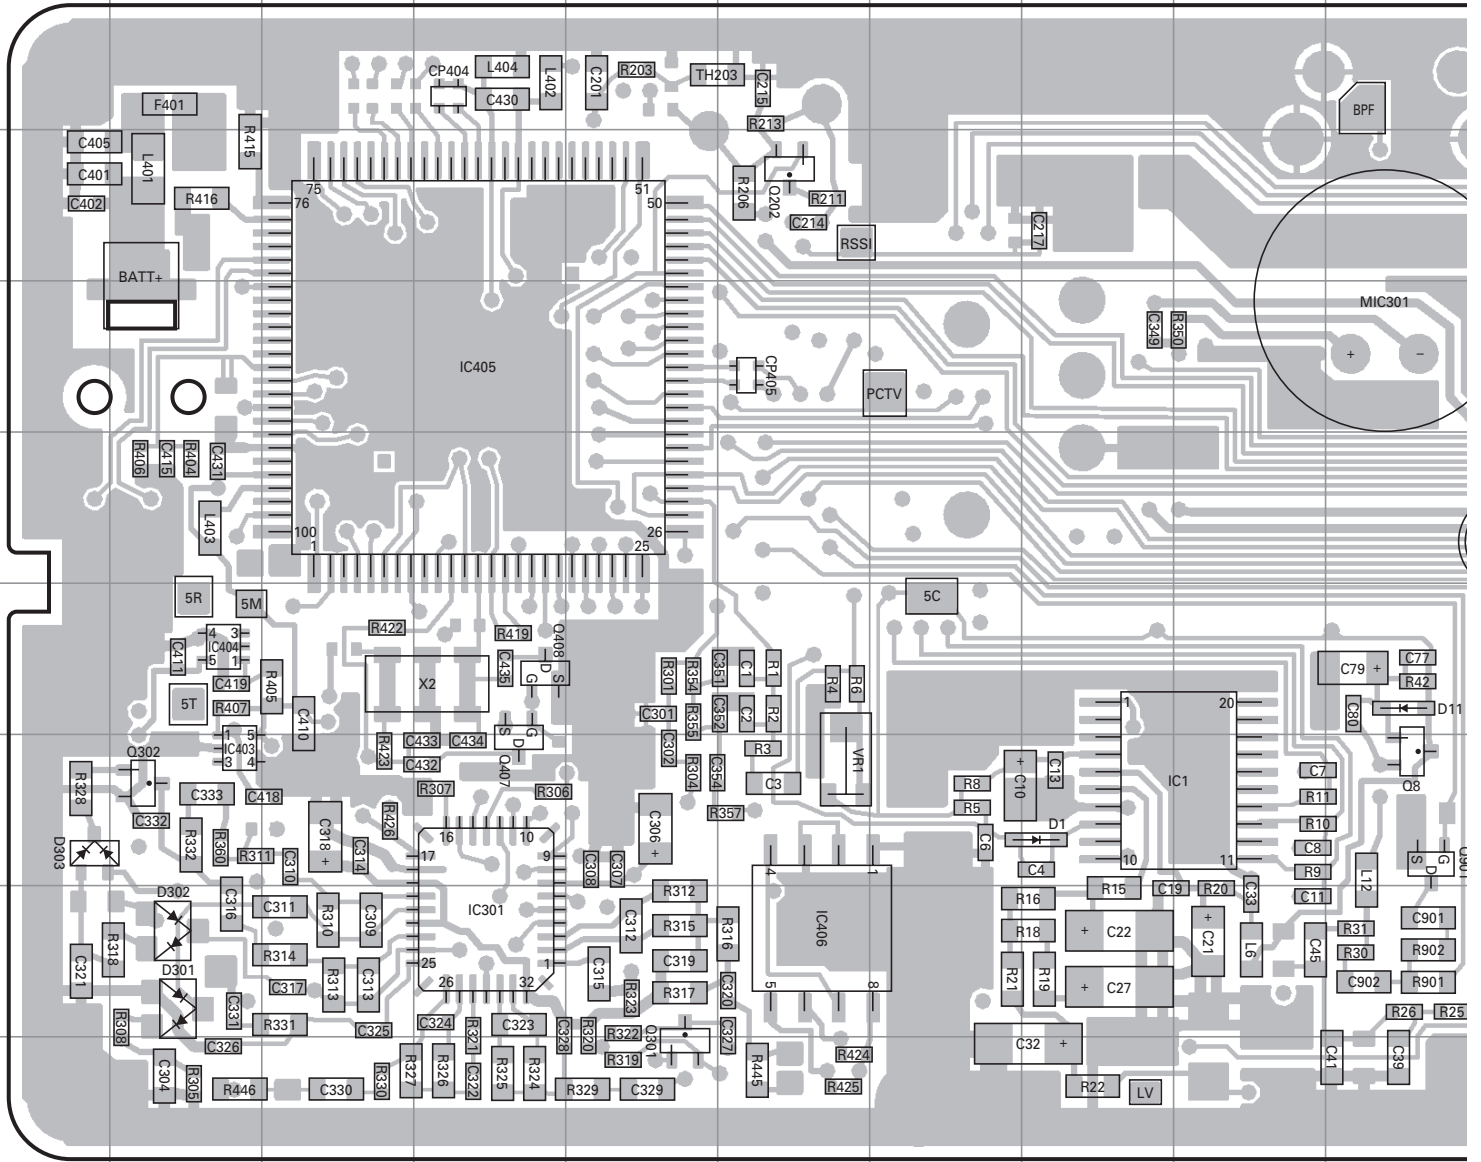

Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address
IC1	8I	Q104	5L	Q304	7P	D1	8H
IC101	4M	Q105	4K	Q305	8O	D11	7J
IC301	9D	Q107	4L	Q306	9P	D102	4M
IC302	8P	Q108	4L	Q316	9O	D301	9B
IC403	8B	Q109	5L	Q401	8R	D302	9B
IC404	7B	Q202	4F	Q402	8R	D303	8A
IC405	5D	Q301	10E	Q407	8D	D403	8R
IC406	9F	Q302	8B	Q408	7D	D404	8R
Q8	8J	Q303	7P	Q901	8J		

PC BOARD / PC 板 TK-3207G

TX-RX UNIT (X57-6890-XX) Component side view (J79-0045-09)
 -21 : C -22 : C2 -24 : C6 -25 : C5

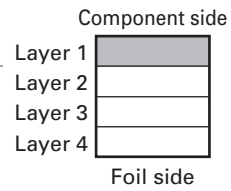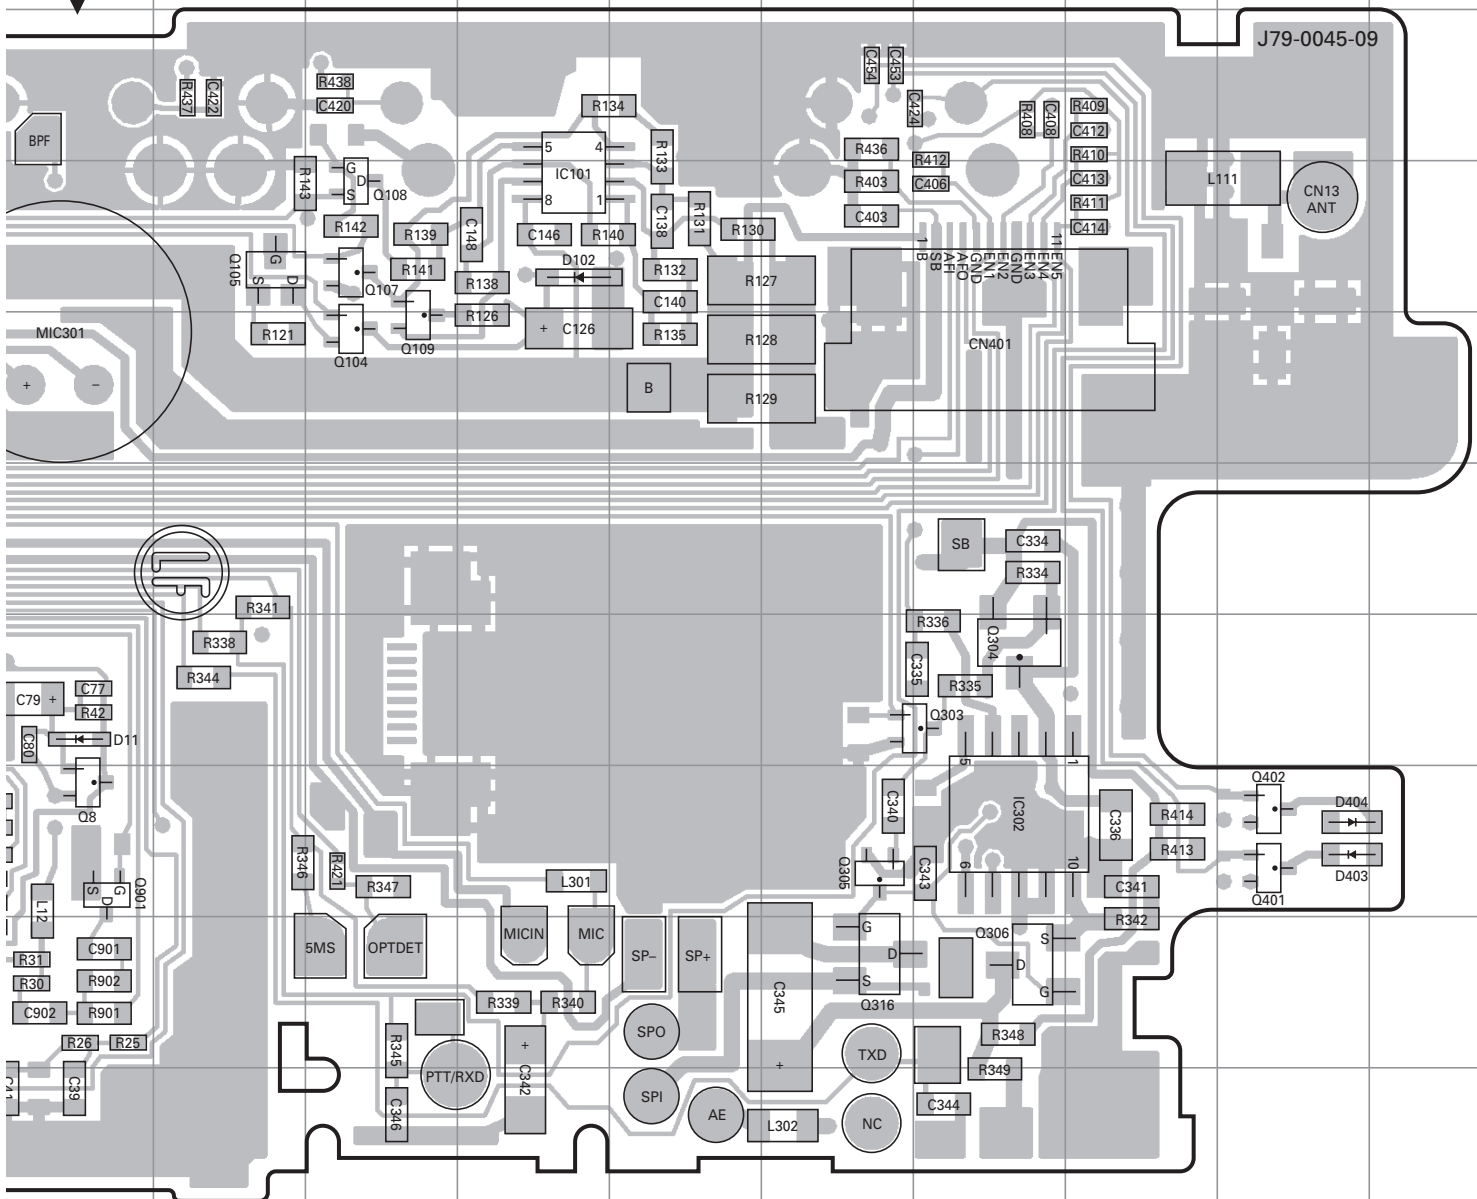


TK-3207G PC BOARD / PC 板


PC BOARD / PC 板 TK-3207G

TX-RX UNIT (X57-6890-XX) Component side view (J79-0045-09)
 -21 : C -22 : C2 -24 : C6 -25 : C5

TX-RX UNIT (X57-6890-XX) Component side view (J79-0045-09)
 -21 : C -22 : C2 -24 : C6 -25 : C5

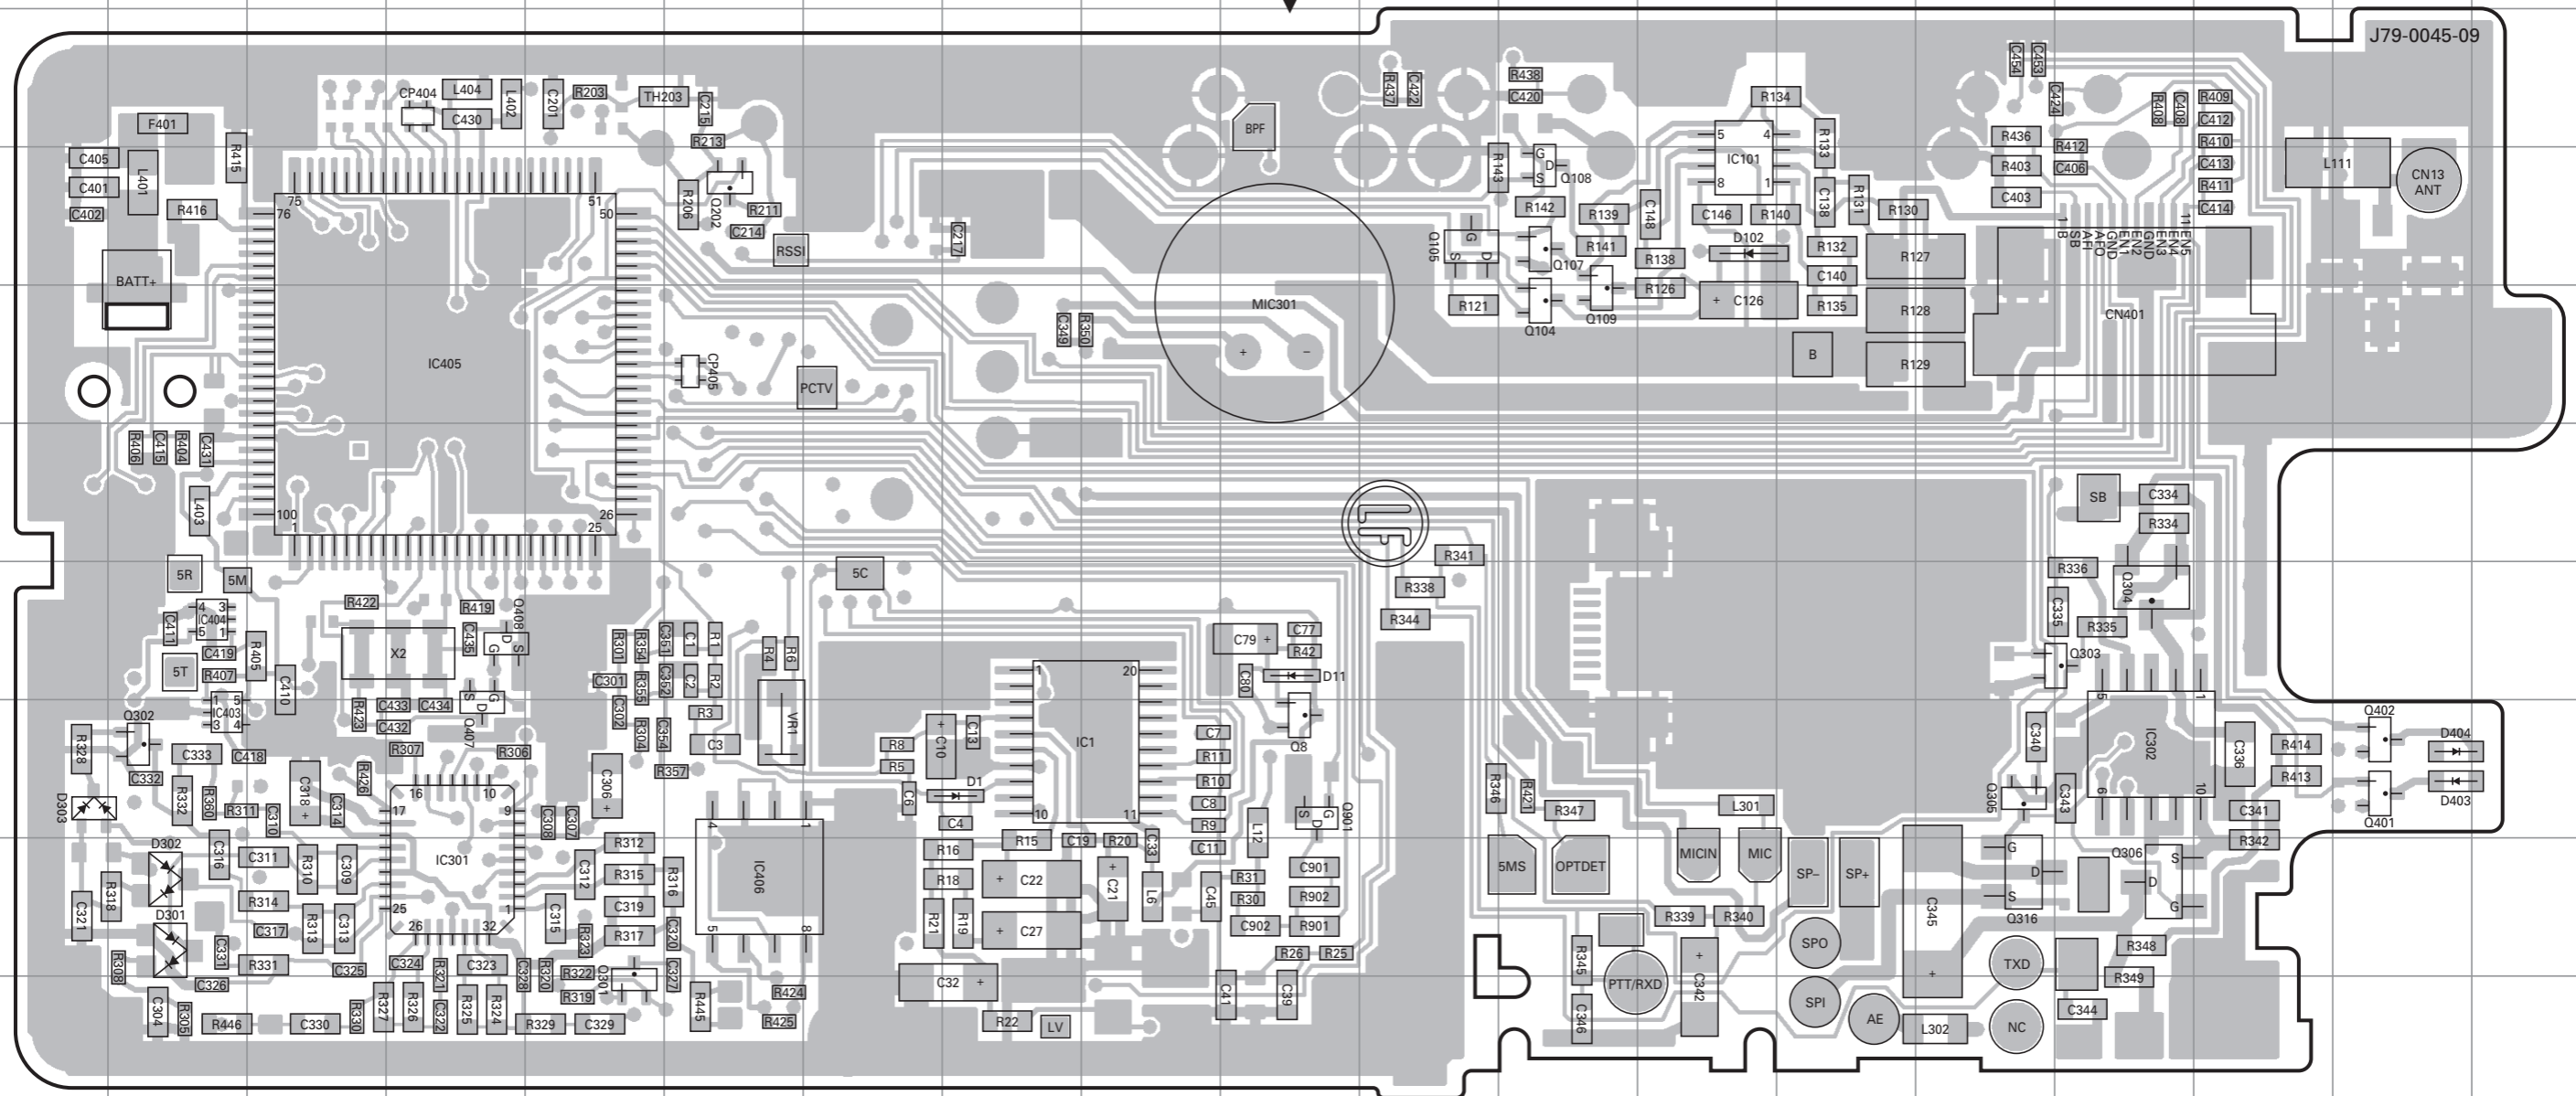


Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address
IC1	8I	Q104	5L	Q304	7P	D1	8H
IC101	4M	Q105	4K	Q305	8O	D11	7J
IC301	9D	Q107	4L	Q306	9P	D102	4M
IC302	8P	Q108	4L	Q316	9O	D301	9B
IC403	8B	Q109	5L	Q401	8R	D302	9B
IC404	7B	Q202	4F	Q402	8R	D303	8A
IC405	5D	Q301	10E	Q407	8D	D403	8R
IC406	9F	Q302	8B	Q408	7D	D404	8R
Q8	8J	Q303	7P	Q901	8J		

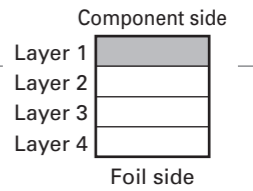

TK-3207G PC BOARD / PC 板

TX-RX UNIT (X57-6890-XX) Foil side view (J79-0045-09)



-21 : C -22 : C2 -24 : C6 -25 : C5

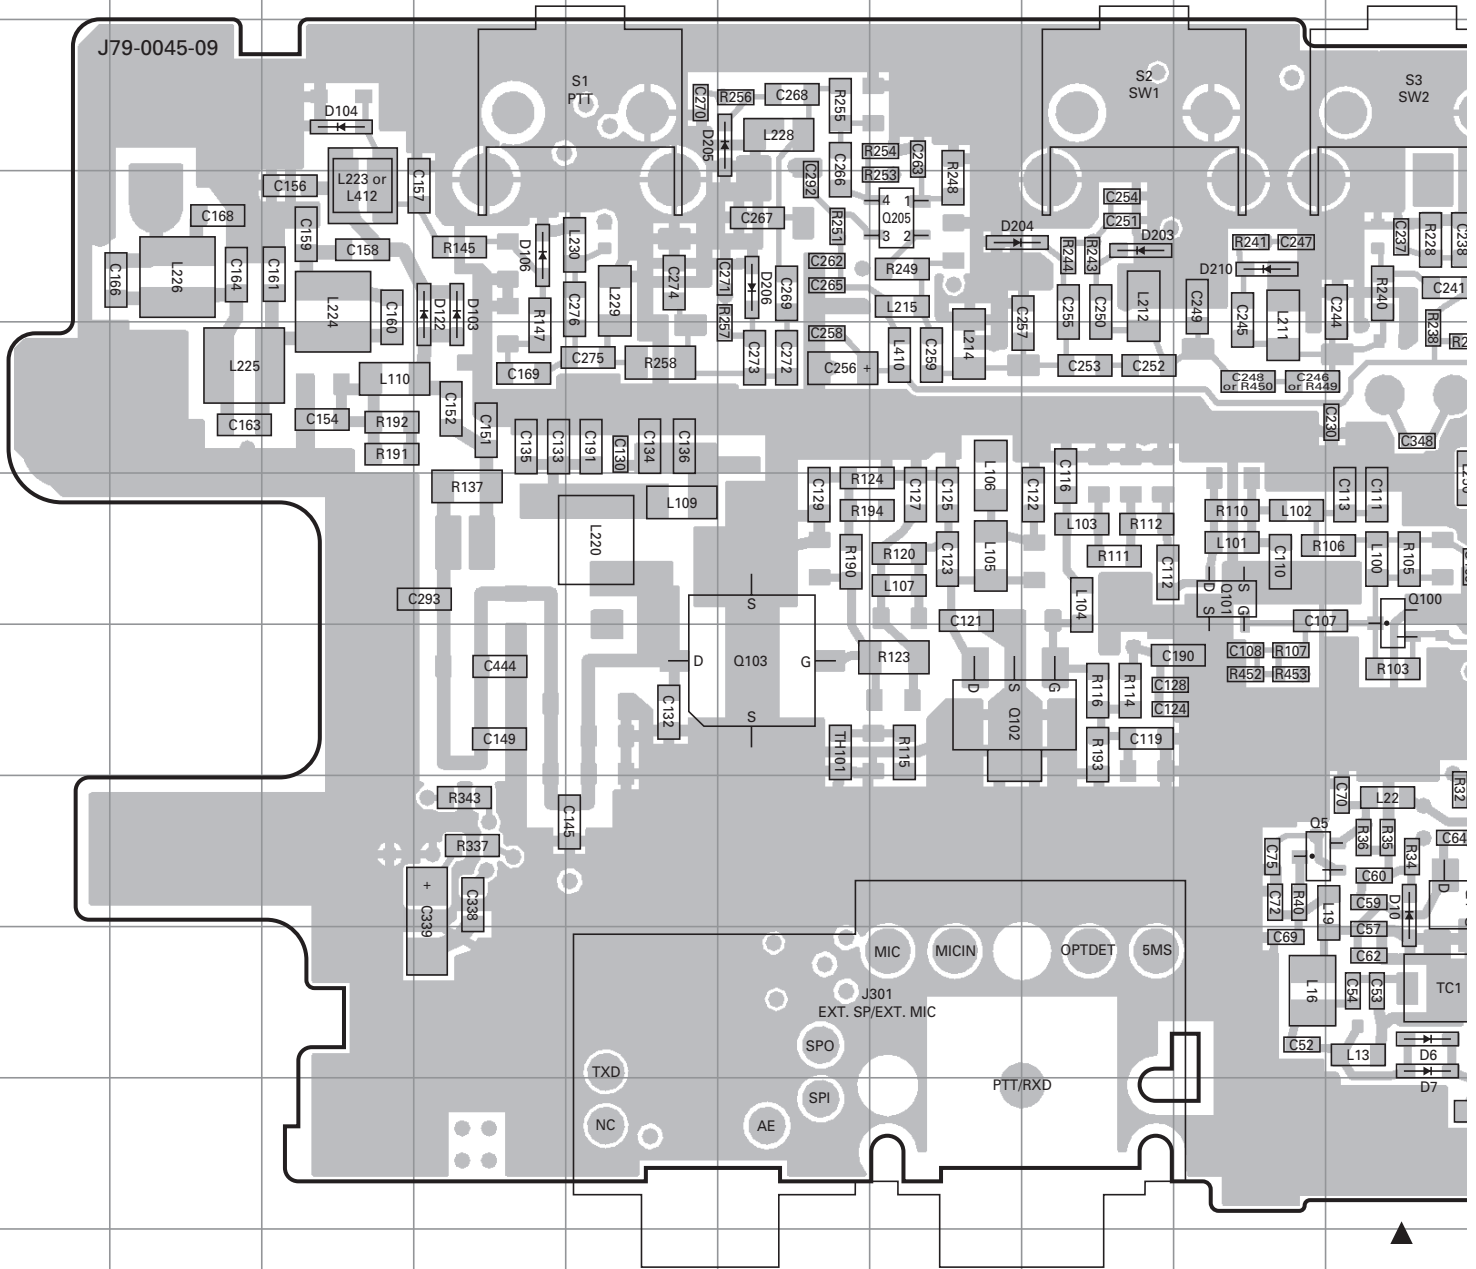

Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address
IC201	5N	Q6	8K	Q204	4K	D5	10L	D104	3C	D210	4I
IC401	9R	Q7	9L	Q205	4G	D6	9J	D106	4D	D401	8R
IC402	8R	Q9	6L	Q403	8R	D7	9J	D122	4D	D402	4R
Q1	7O	Q100	6J	Q404	9R	D8	10L	D202	6K	D405	9P
Q2	8L	Q101	6I	Q405	9R	D9	10L	D203	4H		
Q3	9M	Q102	7G	D2	9K	D10	8J	D204	4G		
Q4	8J	Q103	7F	D3	10M	D101	6K	D205	3F		
Q5	8I	Q203	4N	D4	9J	D103	4D	D206	4F		

PC BOARD / PC 板 TK-3207G

TX-RX UNIT (X57-6890-XX) Foil side view (J79-0045-09)
 -21 : C -22 : C2 -24 : C6 -25 : C5

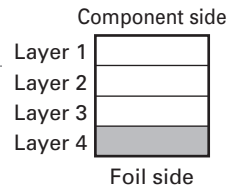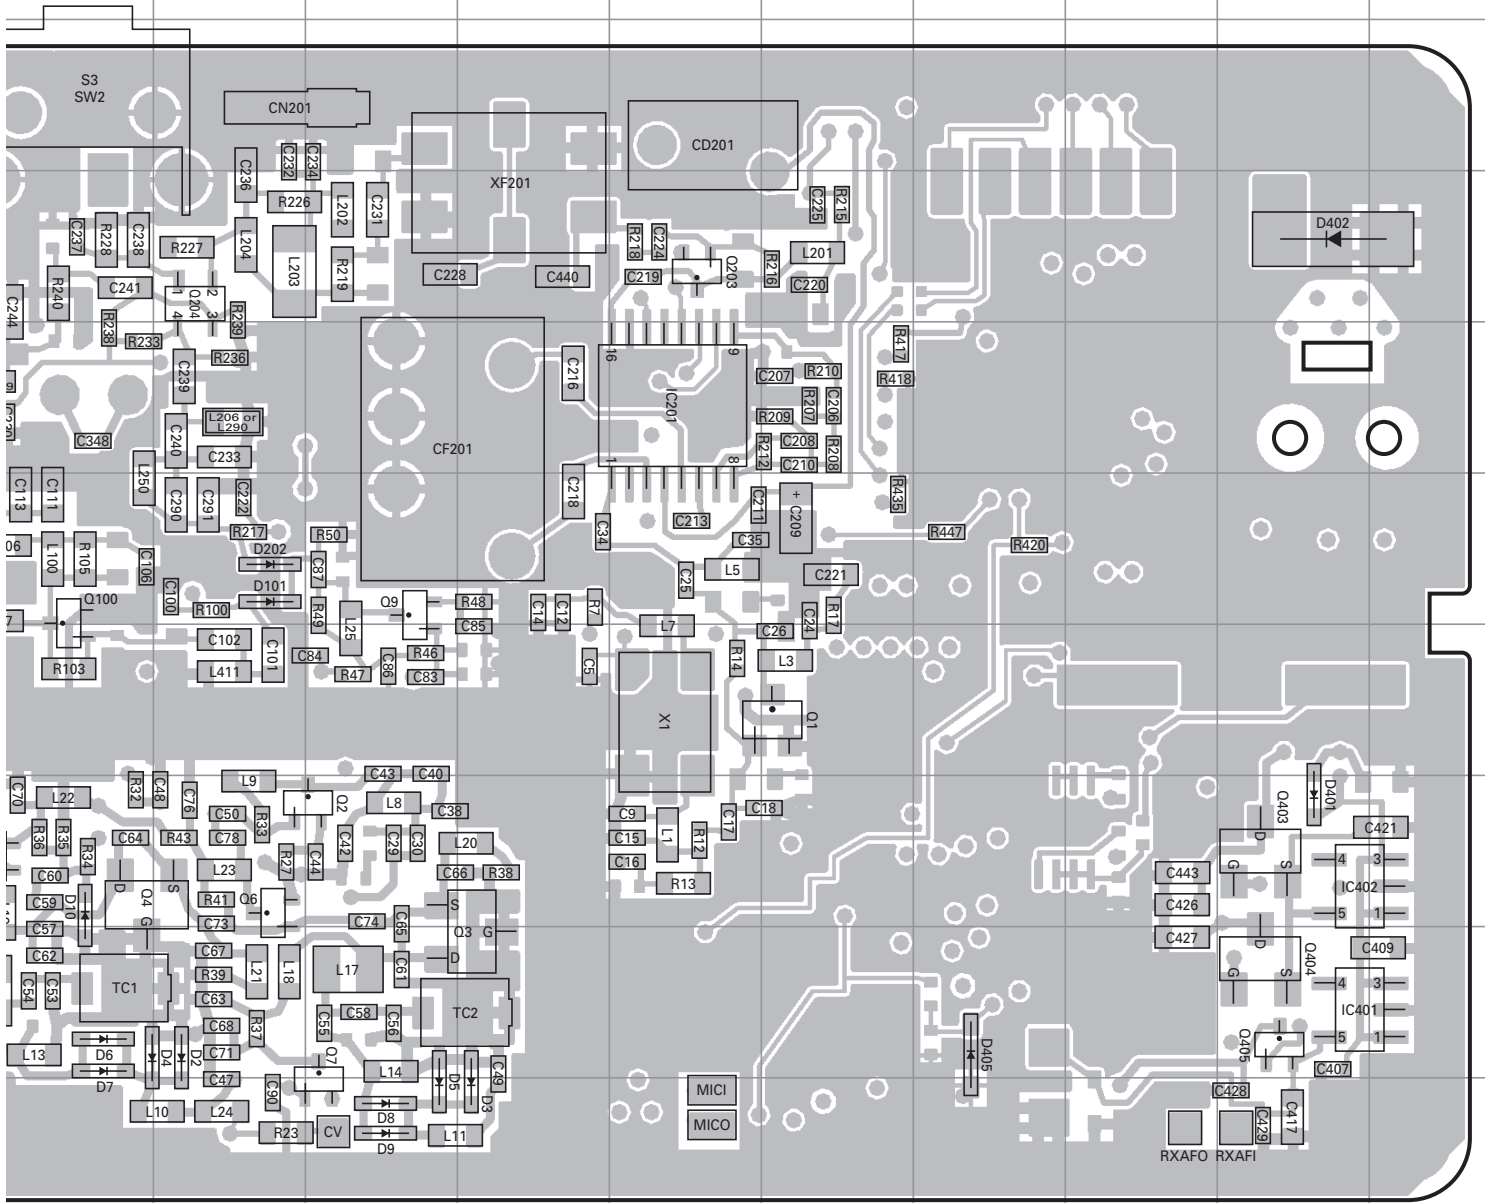


TK-3207G PC BOARD / PC 板


PC BOARD / PC 板 TK-3207G

TX-RX UNIT (X57-6890-XX) Foil side view (J79-0045-09)
 -21 : C -22 : C2 -24 : C6 -25 : C5

TX-RX UNIT (X57-6890-XX) Foil side view (J79-0045-09)
 -21 : C -22 : C2 -24 : C6 -25 : C5

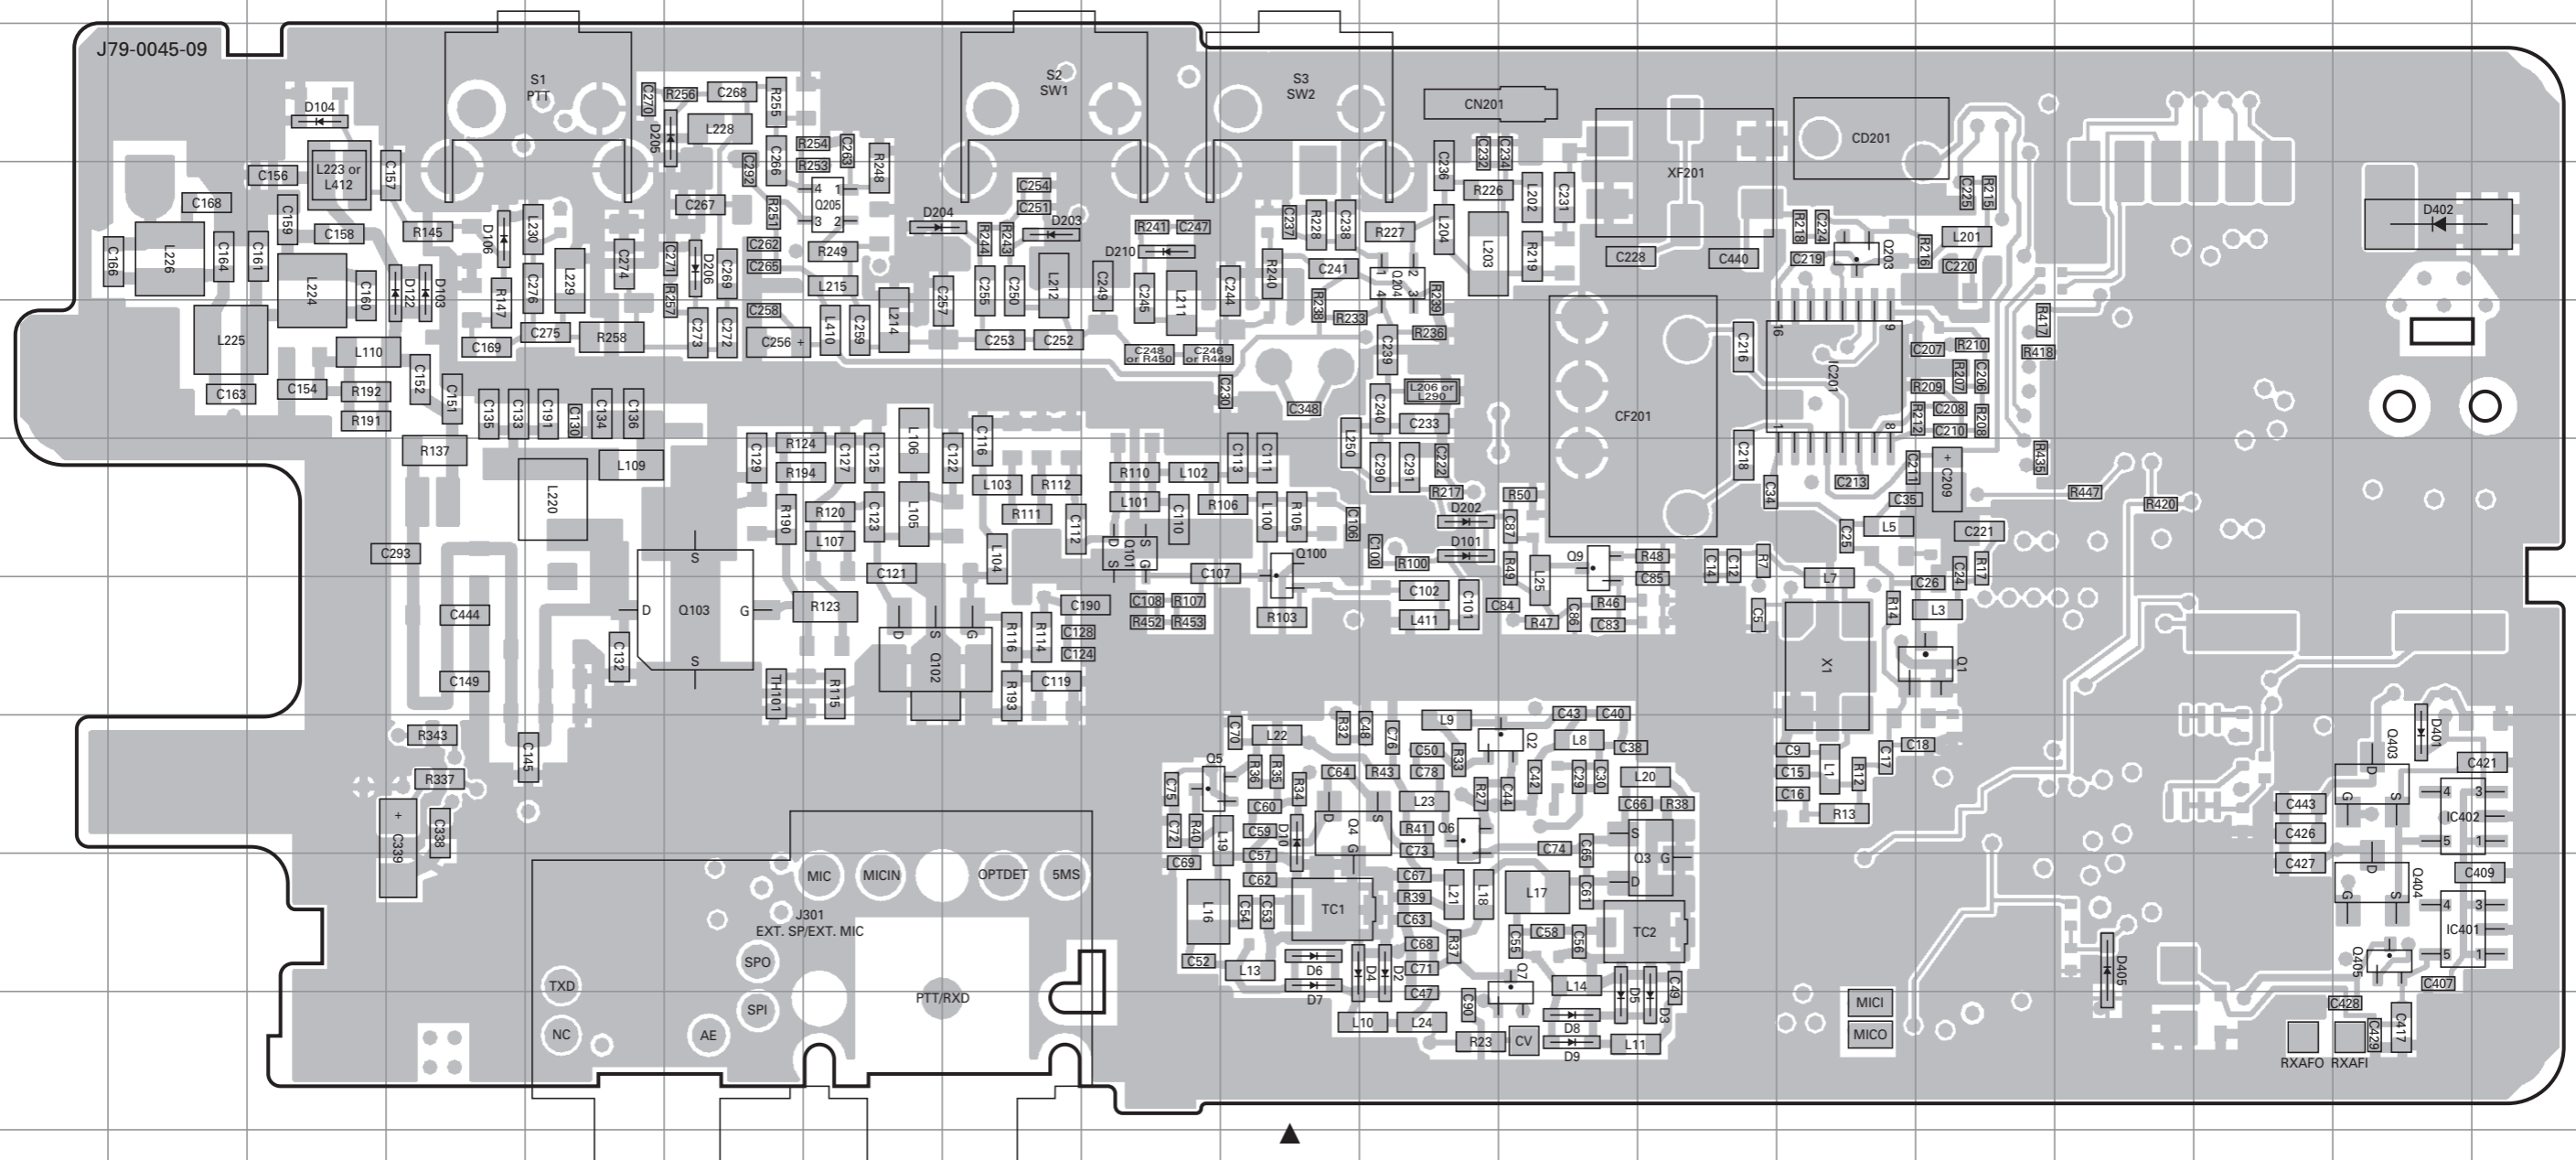


Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address	Ref. No.	Address
IC201	5N	Q6	8K	Q204	4K	D5	10L	D104	3C	D210	4I
IC401	9R	Q7	9L	Q205	4G	D6	9J	D106	4D	D401	8R
IC402	8R	Q9	6L	Q403	8R	D7	9J	D122	4D	D402	4R
Q1	7O	Q100	6J	Q404	9R	D8	10L	D202	6K	D405	9P
Q2	8L	Q101	6I	Q405	9R	D9	10L	D203	4H		
Q3	9M	Q102	7G	D2	9K	D10	8J	D204	4G		
Q4	8J	Q103	7F	D3	10M	D101	6K	D205	3F		
Q5	8I	Q203	4N	D4	9J	D103	4D	D206	4F		

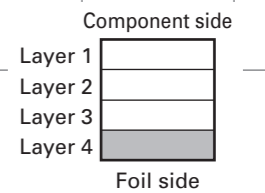


TK-3207G SCHEMATIC DIAGRAM / 原理图

TX-RX UNIT (X57-6890-XX)

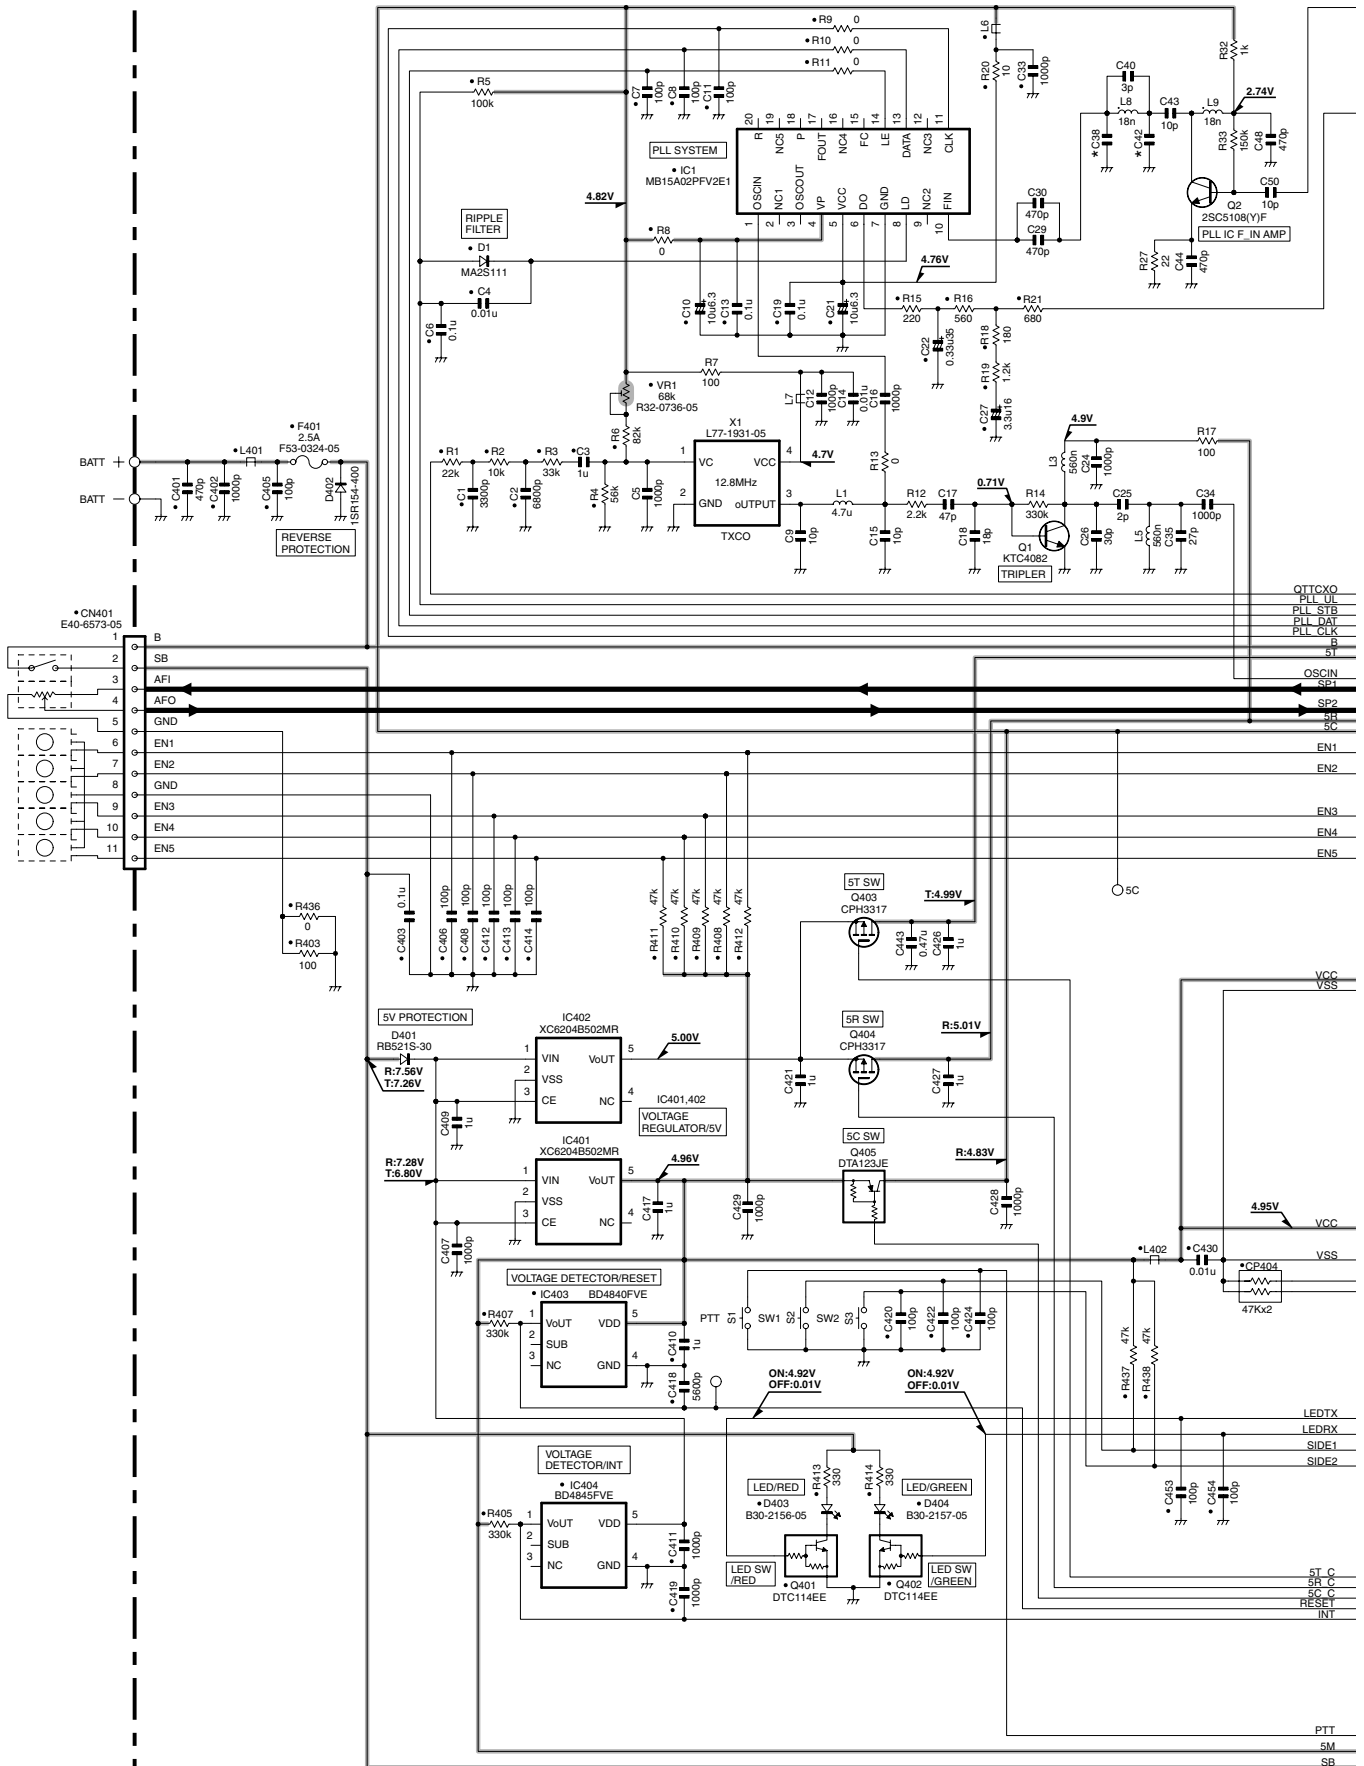


SCHEMATIC DIAGRAM / 原理图 TK-3207G

TX-RX UNIT (X57-6890-XX)

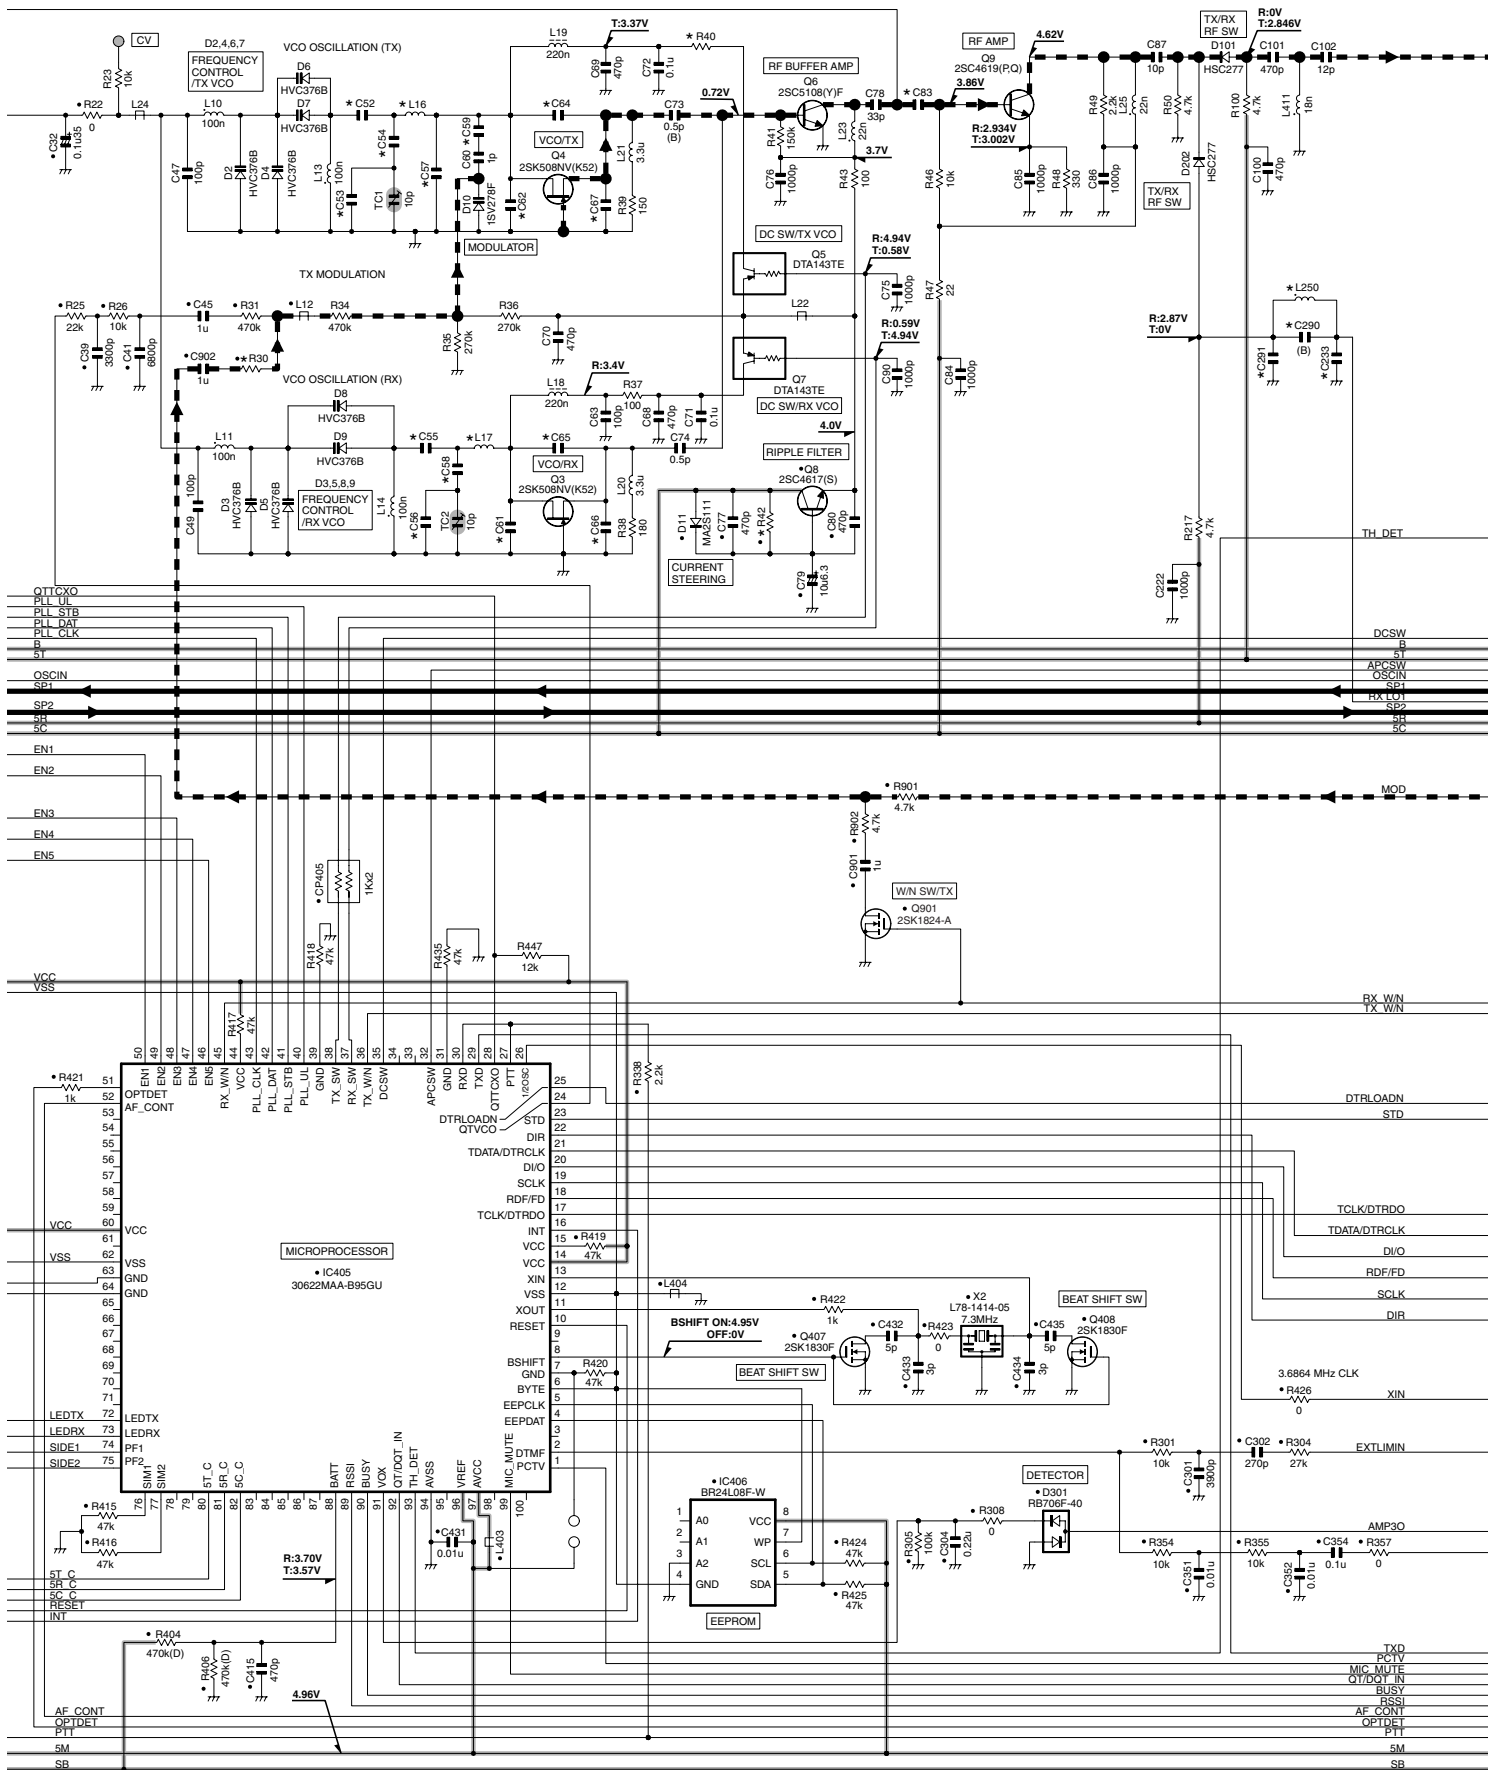

TK-3207G SCHEMATIC DIAGRAM / 原理图

TX-RX UNIT (X57-6890-XX)

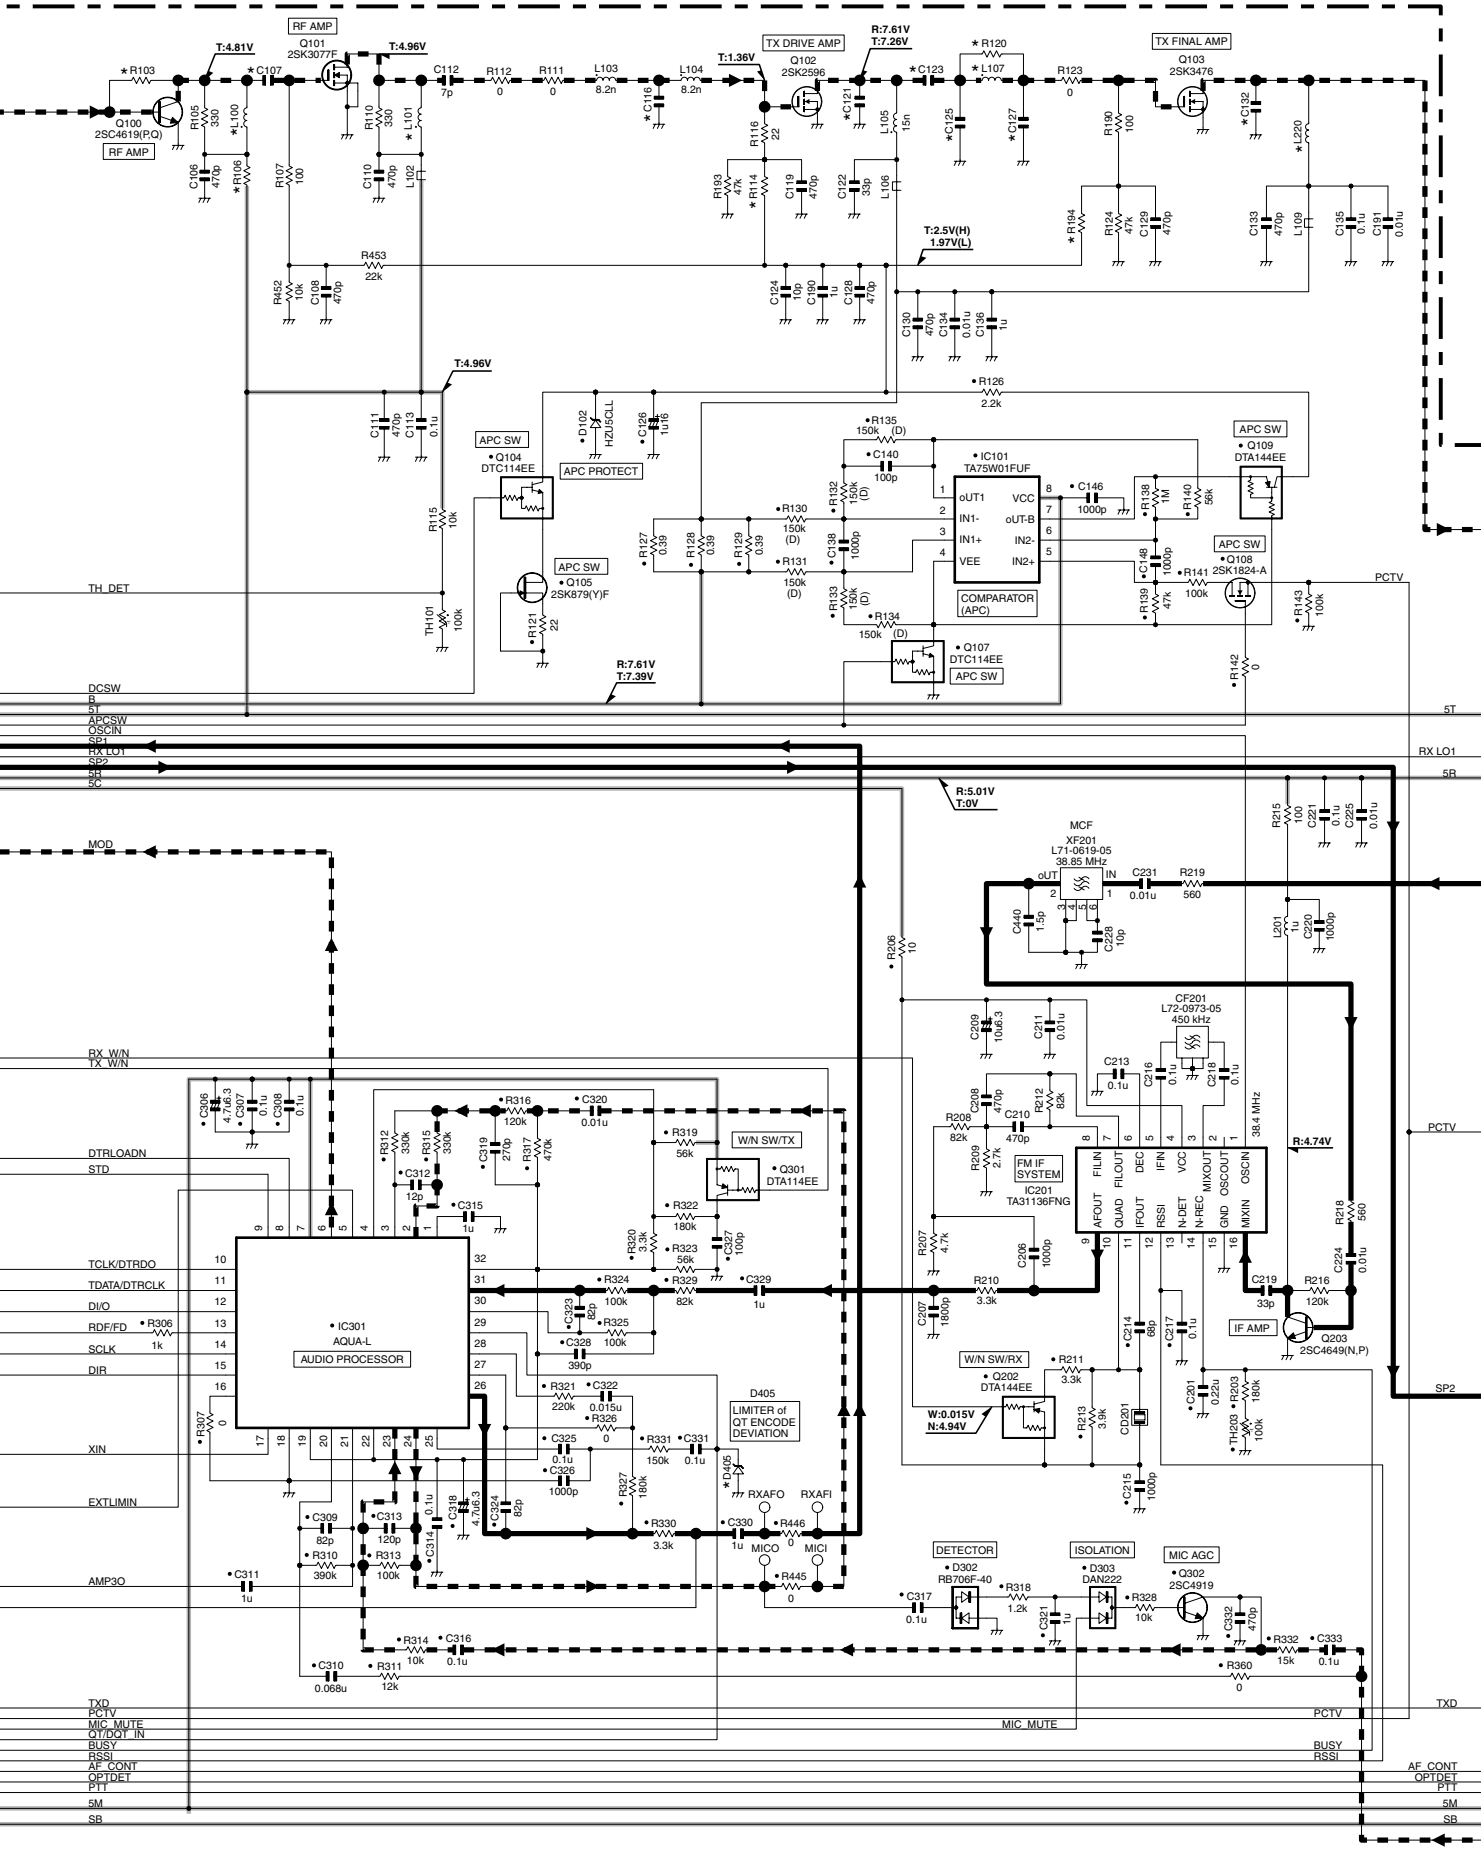

SCHEMATIC DIAGRAM / 原理图 TK-3207G


X57-6890-XX	L16	L17	L100	L101	L107	L206	L211	L212	L214	L220	L223	L225	L228	L229	L230	L250	L290	L412	C38	C42	C52	C53	C54	C55	C56	C57	C58	C59	C61	C62	C64	C65	C66	C67	C83	
-21	C	22n	27n	15n	15n	1.2n	NO	8.2n	8.2n	8.2n	8n	L34-4572-05	L34-4564-05	8.2n	8.2n	39n	18n	30n	NO	5p	5p	12p	NO	6p	12p	NO	NO	6p	1p	3p	2p	5p	7p	7p	5p	15p
-22	C2	27n	33n	33n	22n	NO	39n	NO	8.2n	8.2n	2.5n	NO	L34-4564-05	8.2n	8.2n	56n	18n	NO	L34-4564-05	5p	5p	11p	4p	7p	12p	5p	0.5p	7p	1.5p	4p	3p	4p	5p	4p	15p	
-24	C6	39n	47n	27n	22n	NO	56n	NO	12n	12n	2.5n	L34-4572-05	L34-4565-05	12n	12n	72n	15n	NO	NO	8p	8p	11p	5p	9p	22p	NO	0.5p	11p	1.5p	5p	3p	3p	4p	5p	4p	5p
-25	C5	39n	47n	27n	22n	NO	56n	NO	12n	12n	2.5n	L34-4572-05	L34-4565-05	12n	12n	68n	15n	NO	NO	5p	5p	11p	NO	6p	11p	NO	0.5p	6p	1.5p	5p	3p	3p	4p	4p	4p	15p

X57-6890-XX	C107	C116	C121	C123	C125	C127	C132	C145	C149	C151	C152	C156	C157	C158	C159	C160	C161	C164	C166	C168	C169	C233	C240	C244	C245	C246	C247	C248	C249	C250	C252	C253	C255	C257	C267	C268	C269	C273		
-21	C	6p	11p	NO	56p	6p	18p	20p	20p	7p	1.5p	24p	4p	1p	100p	2p	2p	5p	5p	0.75p	1p	6p	6p	3.5p	2.5p	22p	2p	470p	2p	4.5p	22p	1p	1.5p	22p	4p	2.5p	22p	2p	22p	
-22	C2	7p	3p	12p	33p	11p	NO	39p	30p	7p	7p	20p	3p	4p	100p	2p	2p	5p	5p	0.75p	NO	10p	6p	1p	NO	NO	NO	NO	NO	5p	22p	1.5p	2p	22p	7p	6p	22p	2p	22p	
-24	C6	8p	12p	NO	33p	24p	NO	20p	27p	10p	NO	27p	9p	3.5p	1000p	1p	1.5p	6p	6p	3p	NO	6p	10p	1p	NO	NO	NO	NO	470p	NO	3.5p	27p	1p	1.5p	27p	6p	6p	27p	2p	27p
-25	C5	8p	12p	NO	33p	24p	NO	20p	24p	NO	NO	27p	6p	2.5p	1000p	1p	1.5p	6p	6p	3p	NO	4.5p	10p	1p	NO	NO	NO	470p	NO	3p	27p	1p	1.5p	27p	6p	5p	27p	1.5p	27p	

X57-6890-XX	C274	C275	C276	C290	C291	C292	C293	C349	C444	R30	R40	R42	R103	R106	R114	R120	R194	R241	R350	R449	R450	D210	D405	
-21	C	NO	2.5p	4p	2p	6p	470p	0.3p	NO	NO	33k	150	10k	47k	22	47k	NO	47k	1.0M	0	NO	NO	HVC355B	NO
-22	C2	4p	2p	4p	2p	6p	470p	NO	0.03u	2p	33k	100	4.7k	33k	120	68k	0	68k	NO	10k	0	0	NO	NO
-24	C6	4p	3p	4.5p	5p	10p	1000p	4p	NO	10p	27k	100	4.7k	47k	22	47k	0	47k	1.0M	0	0	0	HVC355B	KDZ3.3V
-25	C5	4p	1.5p	4p	5p	10p	1000p	4p	NO	10p	27k	100	4.7k	47k	22	47k	0	47k	1.0M	0	0	0	HVC355B	KDZ3.3V


TX-RX UNIT (X57-6890-XX)

Note : The components marked with a dot (●) are parts of layer 1.

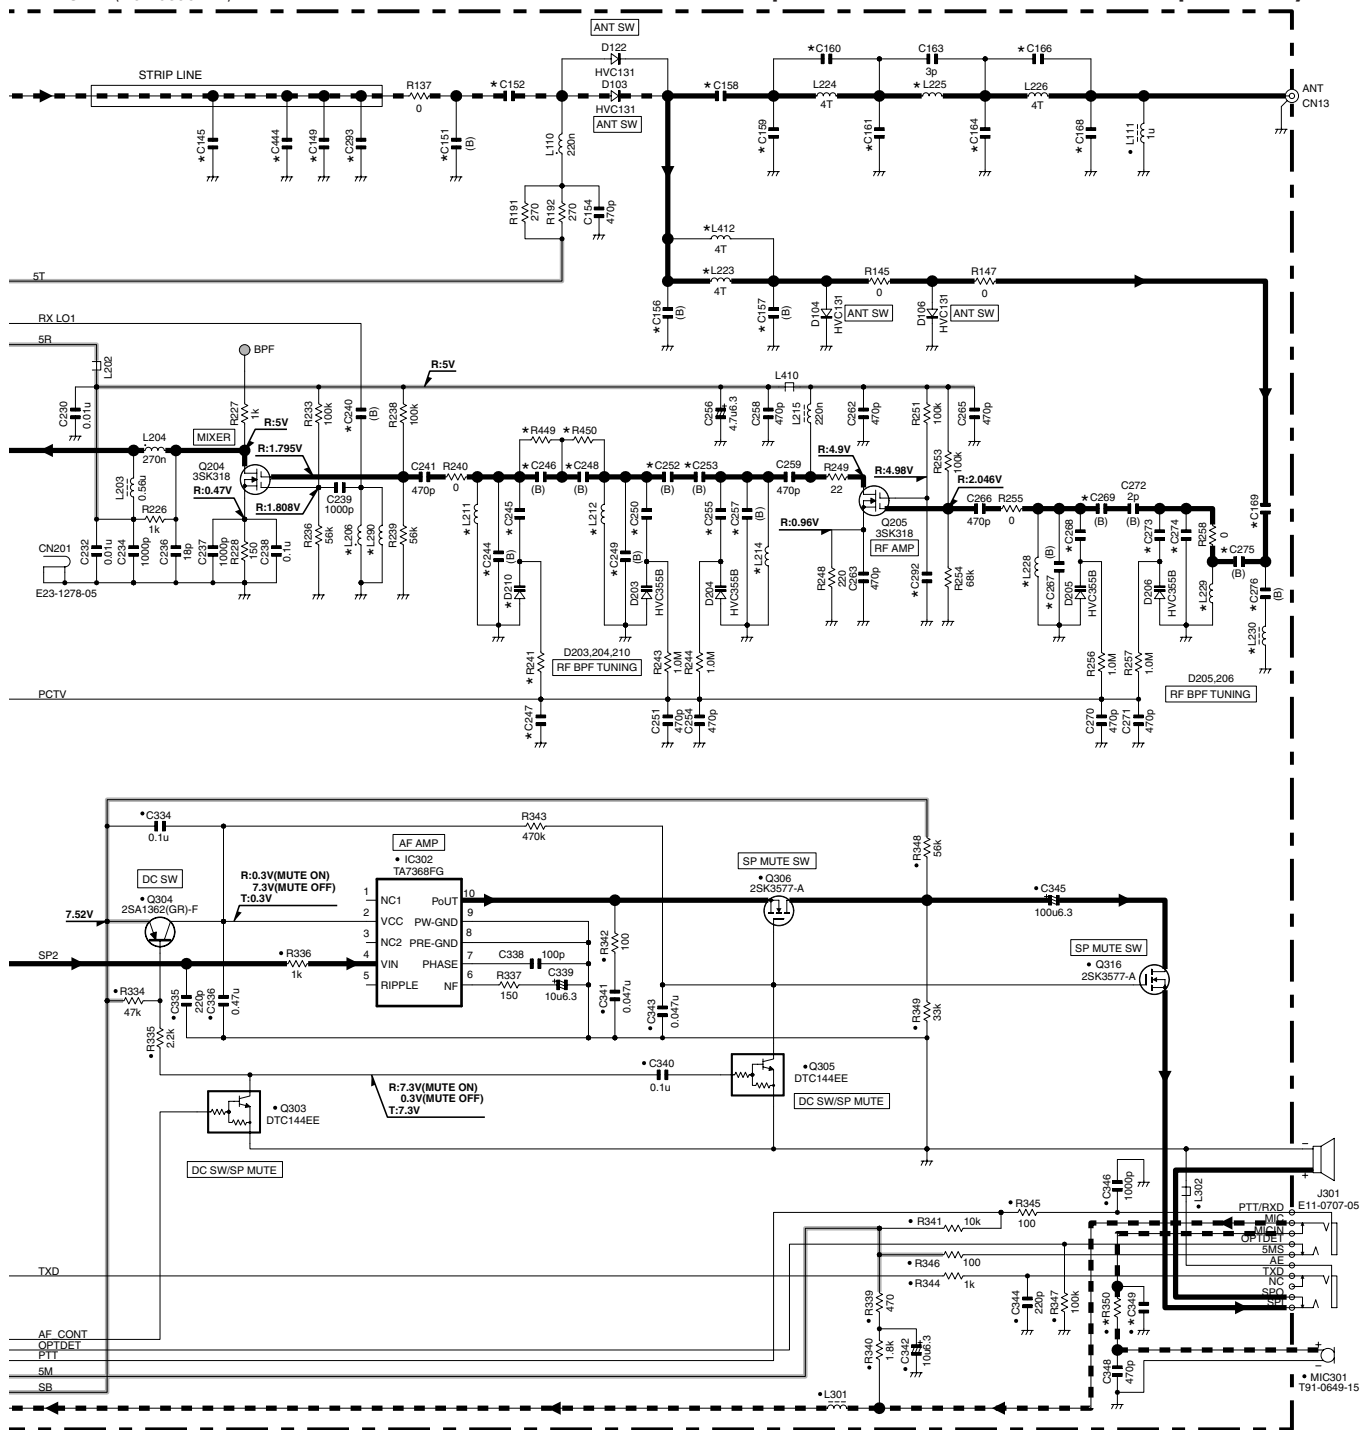

TK-3207G SCHEMATIC DIAGRAM / 原理图

TX-RX UNIT (X57-6890-XX)

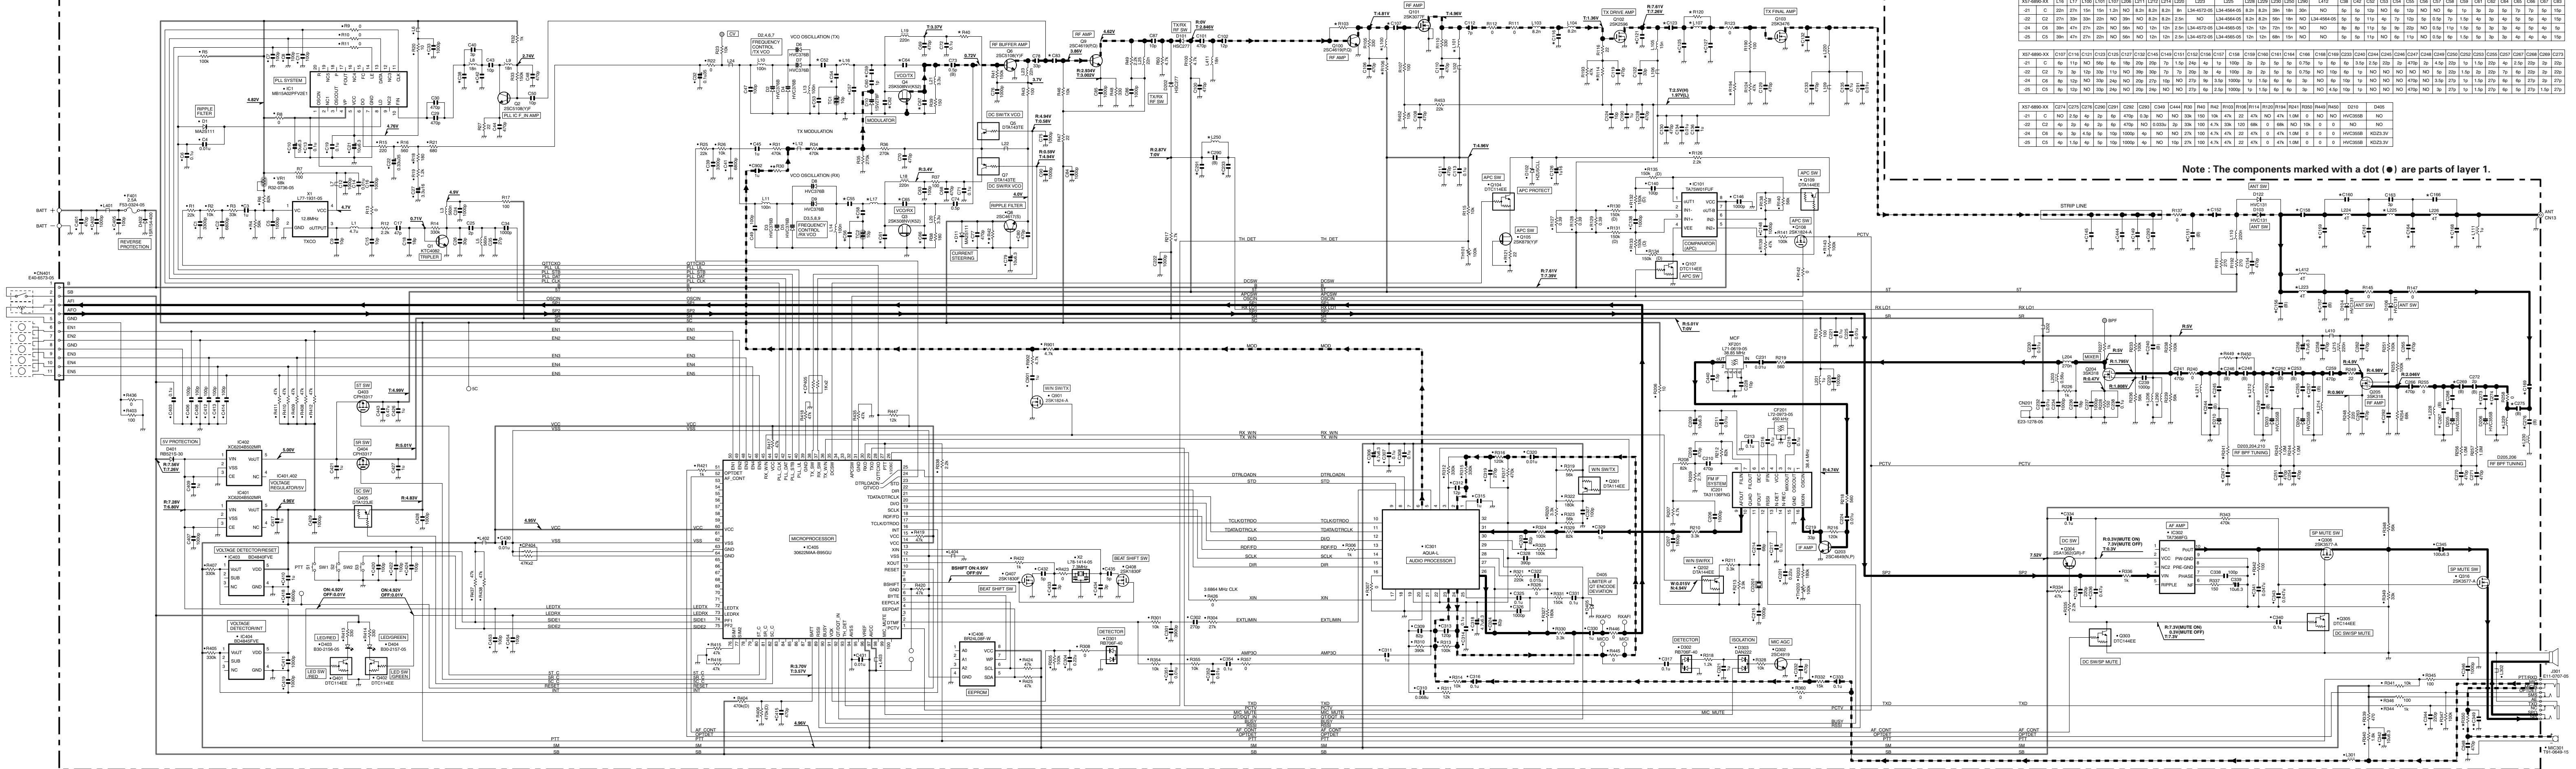


X57-6890-XX	L16	L17	L100	L101	L107	L200	L211	L214	L220	L223	L225	L229	L230	L250	L412	C28	C42	C52	C53	C54	C55	C56	C57	C58	C59	C61	C62	C64	C65	C67	C68
-21	C	22n	27n	33n	15n	1.2n	NO	8.2n	8.2n	8.2n	134-4572-05	8.2n	8.2n	39n	18n	30n	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
-22	C	27n	33n	33n	22n	NO	39n	NO	39n	NO	134-4564-05	8.2n	8.2n	59n	18n	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
-24	C	39n	47n	27n	22n	NO	56n	NO	12n	12n	2.5n	134-4572-05	12n	12n	78n	15n	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
-25	C	39n	47n	27n	22n	NO	56n	NO	12n	12n	2.5n	134-4565-05	12n	12n	69n	15n	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

X57-6890-XX	C107	C116	C121	C123	C125	C132	C145	C149	C151	C152	C156	C157	C158	C159	C160	C161	C164	C166	C169	C233	C244	C246	C247	C248	C249	C252	C253	C255	C257	C267	C268	C269	C273	
-21	C	6p	11p	NO	56p	6p	18p	20p	7p	1.5p	24p	4p	1p	100p	2p	2p	5p	0.75p	1p	6p	3.5p	2.5p	22p	4p	4.5p	22p	1p	1.5p	22p	4p	2.5p	22p	2p	22p
-22	C	7p	3p	12p	33p	11p	NO	39p	30p	7p	7p	20p	3p	4p	100p	2p	2p	5p	0.75p	1p	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
-24	C	6p	12p	NO	33p	24p	NO	20p	27p	10p	NO	27p	5p	3.5p	100p	1p	1.5p	6p	3p	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
-25	C	6p	12p	NO	33p	24p	NO	20p	24p	NO	NO	27p	5p	2.5p	100p	1p	1.5p	6p	3p	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	


X57-6890-XX	C274	C276	C280	C281	C293	C349	C444	R30	R40	R42	R43	R108	R114	R120	R14	R369	R440	R460	D310	D405															
-21	C	NO	2.5p	4p	2p	6p	470p	5.3p	NO	NO	33p	15n	47k	22	47k	NO	NO	NO	NO	HVC355B	NO														
-22	C	4p	2p	2p	6p	470p	NO	D.033k	2p	33k	100	4.7k	33k	120	68k	0	68k	NO	10k	0	NO	NO													
-24	C	6p	4p	2p	4.5p	5p	10p	100p	4p	NO	NO	27k	100	4.7k	47k	22	47k	0	47k	1.0M	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
-25	C	4p	1.5p	4p	5p	10p	100p	4p	NO	NO	10p	27k	100	4.7k	47k	22	47k	0	47k	1.0M	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Note: The components marked with a dot (●) are parts of layer 1.

BLOCK DIAGRAM / 方块图

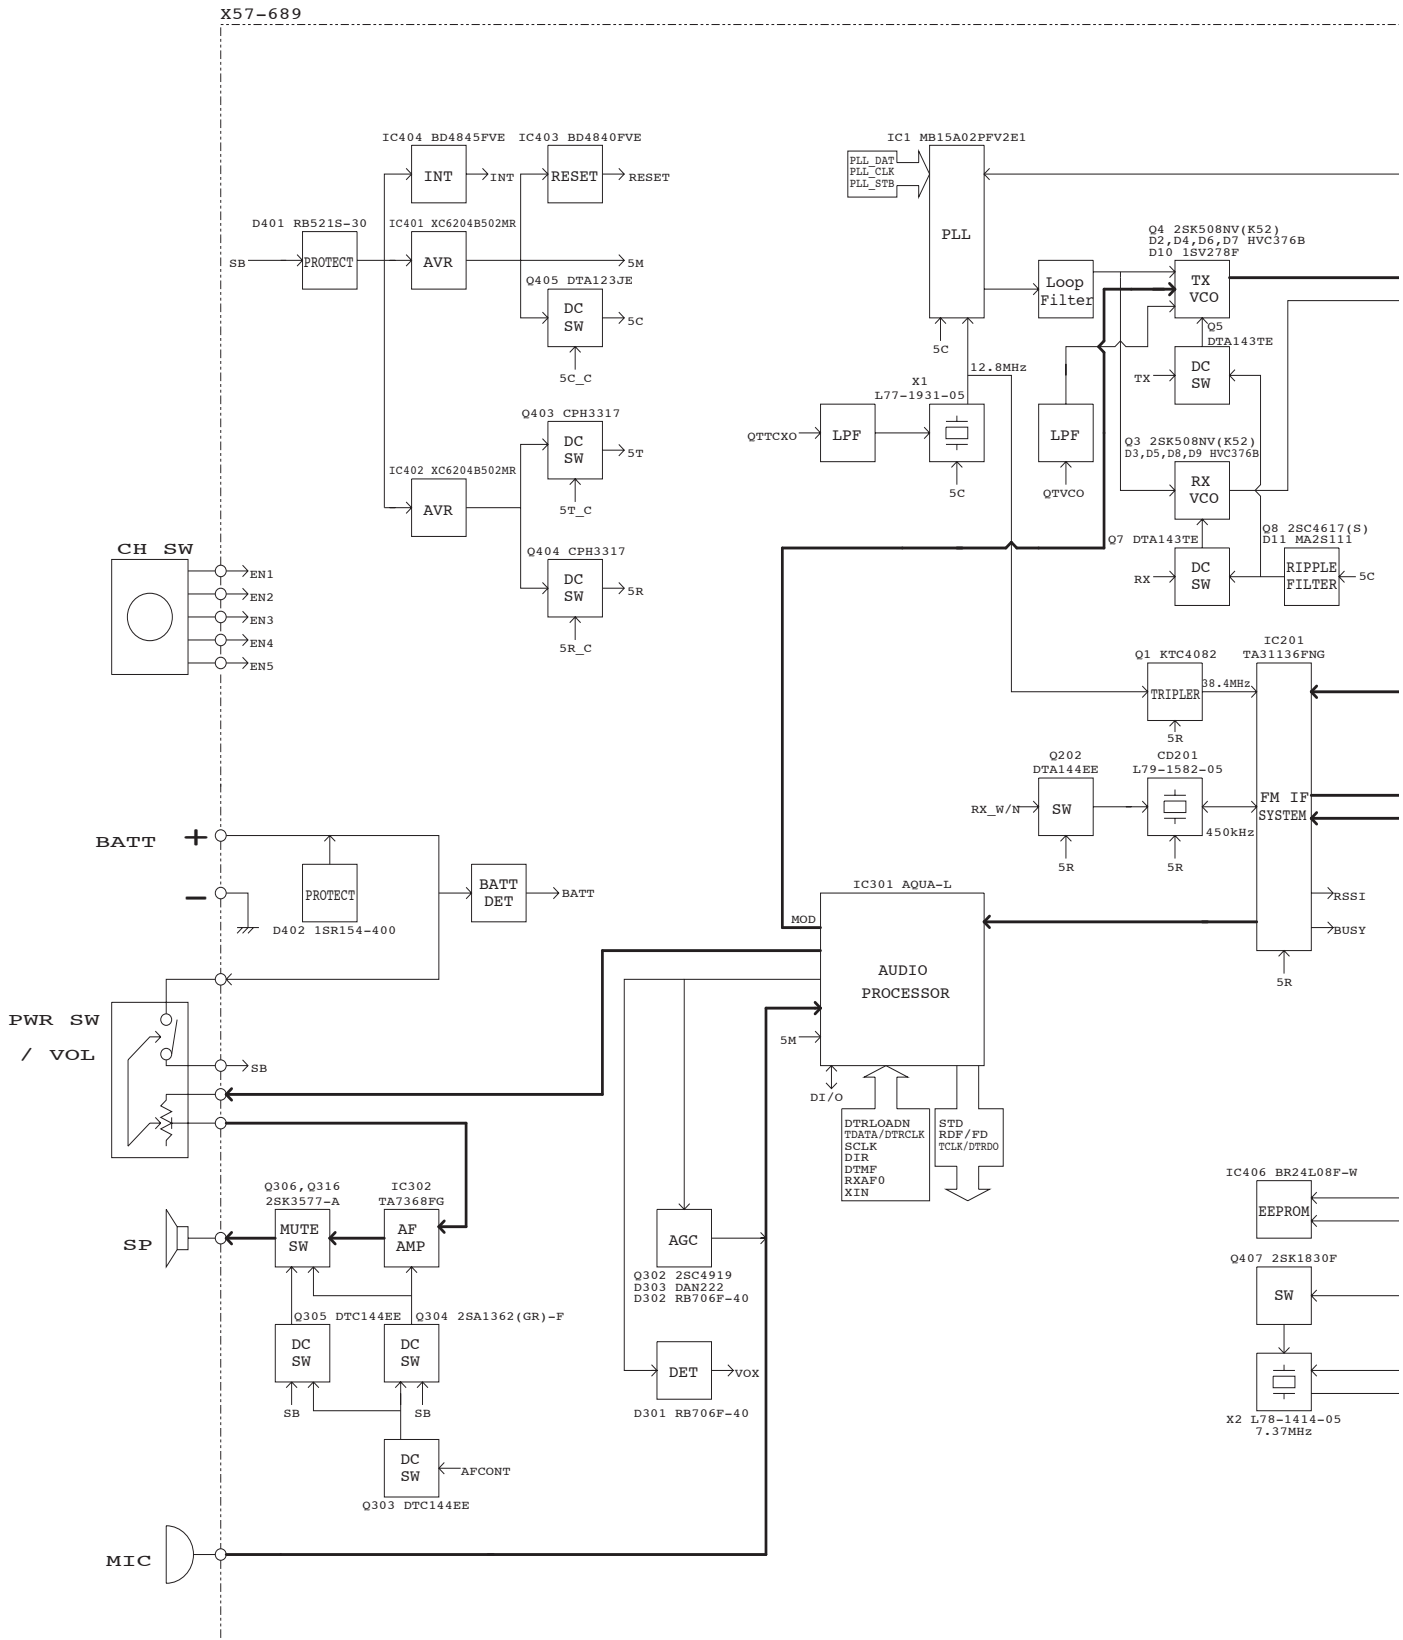


BLOCK DIAGRAM / 方块图

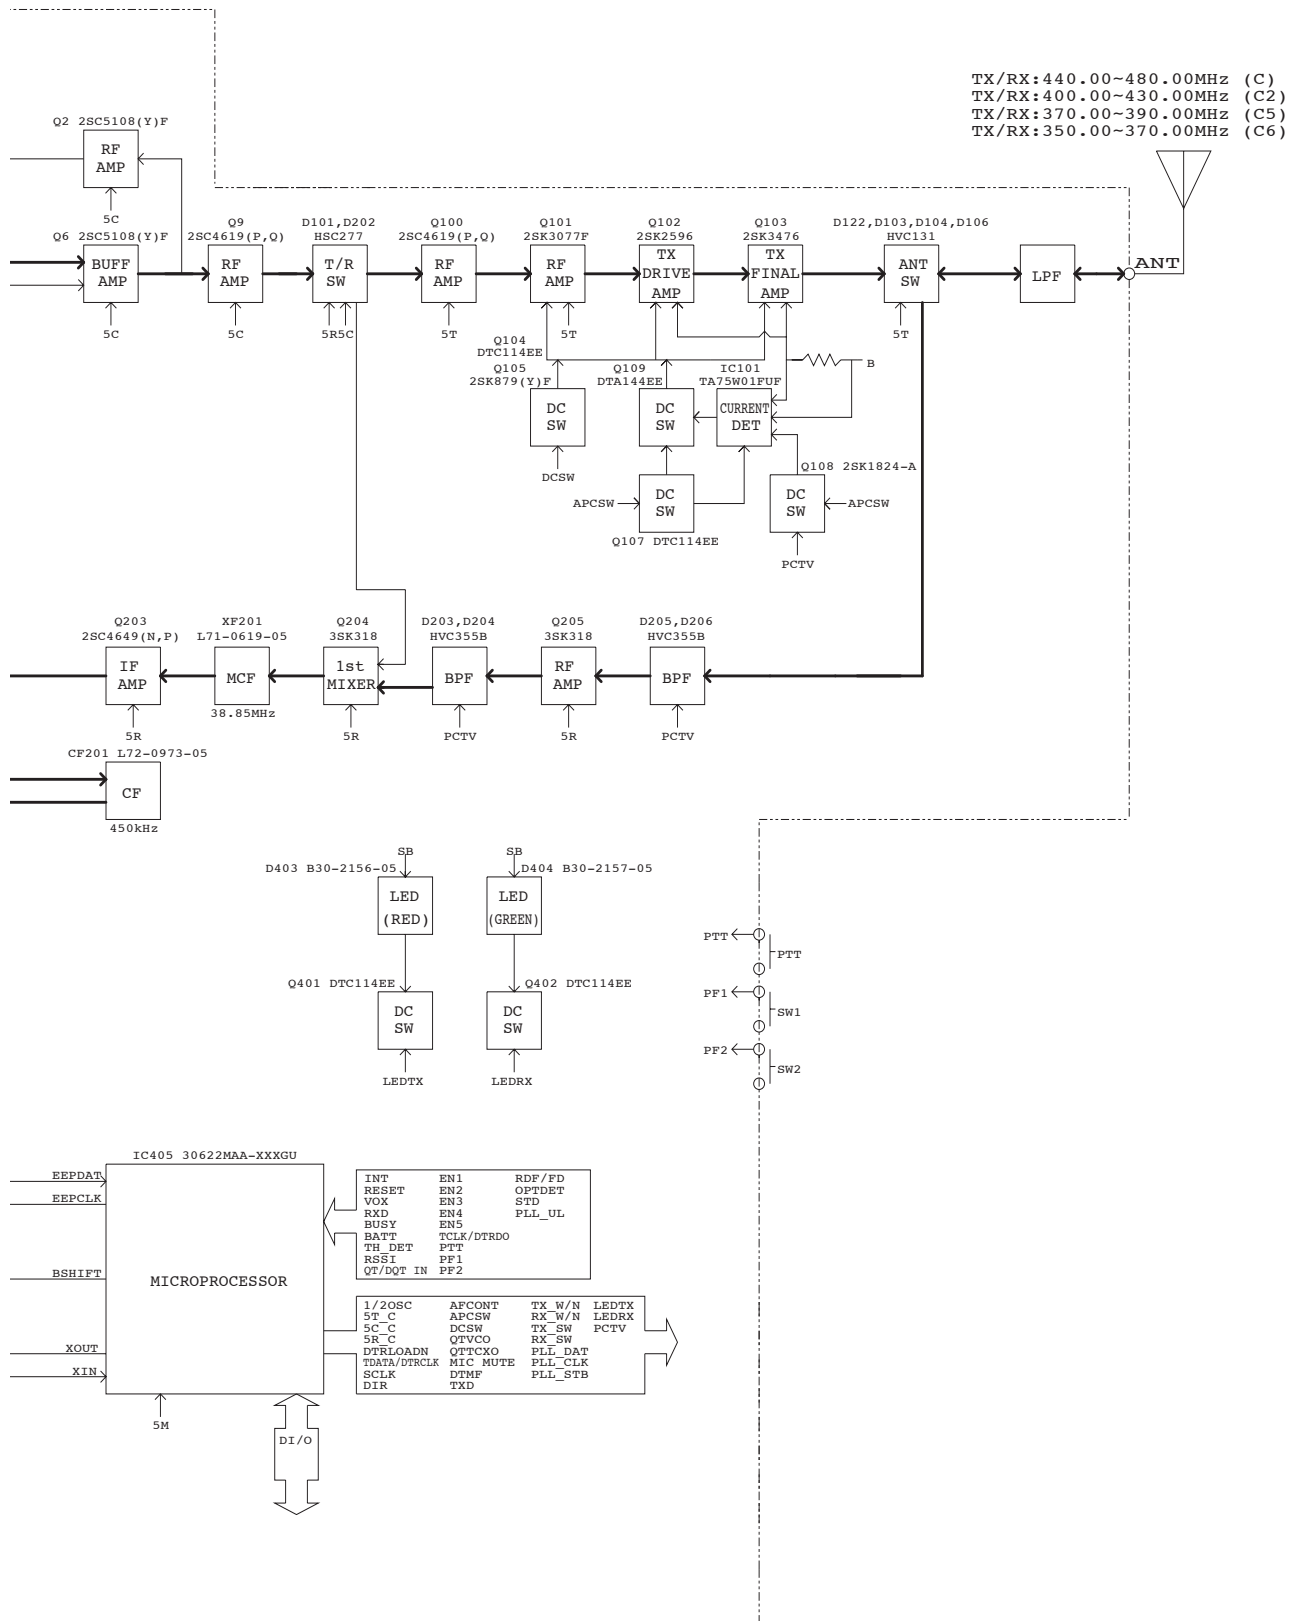

LEVEL DIAGRAM / 电平图


Receiver Section / 接收部

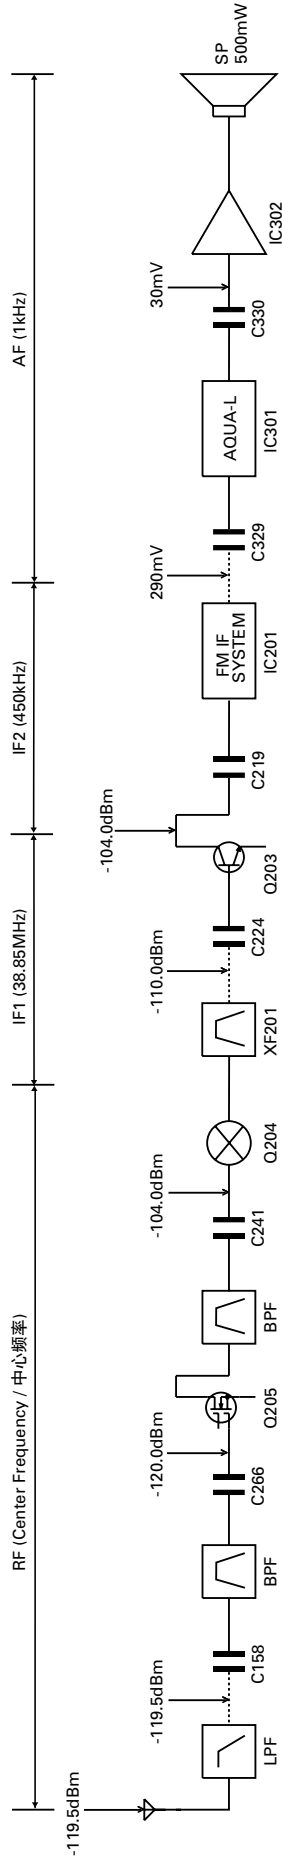

如要在 AF 部测量, 则连接 AC 电平表。(天线输入:
-53dBm, 1kHz FM, 3kHz DEV(宽))
如要在 RF 部测量, 请使用 1000pF 耦合电容器。
(图中显示了获得 12dB SINAD 所需的 SSG 输入值,
没有本地电平。)

To make measurements in the AF section, connect
the AC level meter. (ANT input: -53dBm, 1kHz FM,
3kHz DEV (WIDE).)
In the RF section, use 1000pF coupling capacitor.
(The display shows the SSG input value required to
obtain 12dB SINAD without local level.)

Transmitter Section / 发射部

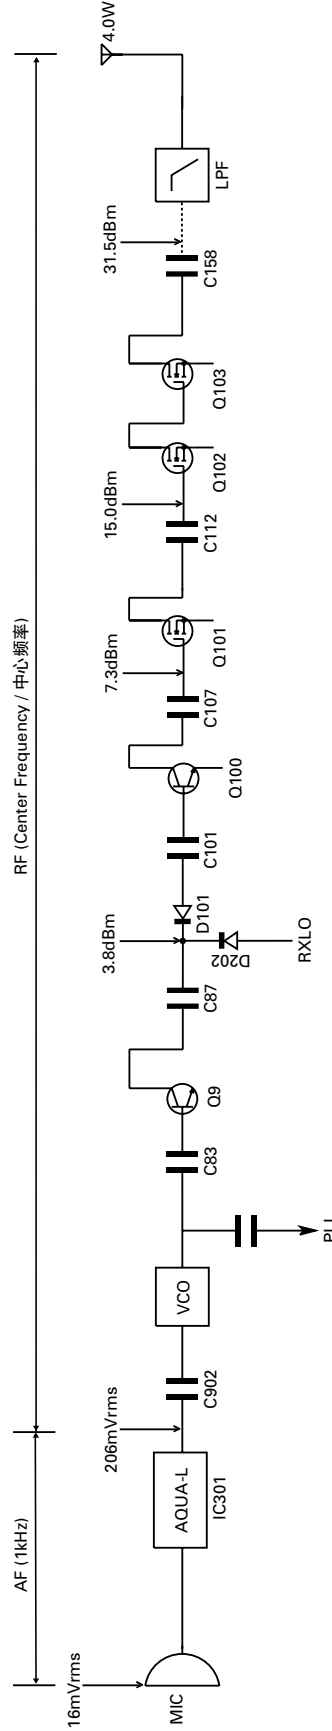

AG is set to the MIC input becomes 3kHz DEV.at
1kHz MOD.(WIDE)

AG 被设置成话筒输入得到 3kHz DEV 在 1kHz MOD
(宽)。
如要在 AF 部测量, 则连接 AC 电平表。
如要在 RF 部测量, 请使用 1000pF 耦合电容器。

To make measurements in the AF section, connect
the AC level meter.
In the RF section, use 1000pF coupling capacitor.

OPTIONAL ACCESSORIES / 可选附件

KSC-31 (RAPID CHARGER / 快速充电器)

External View / 外视图



Specifications / 规格

Charging current.....	850mA ±5%
Charging time	KNB-29N : Approx.180 minutes KNB-30A : Approx.120 minutes
Dimensions (Charger only)	86.3W x 46.2H x 100.0D (mm) 3-3/8W x 1-7/8H x 4D (inches)
Weight (Charger only)	Approx.100g / 0.22 lbs

KNB-29N (Ni-MH BATTERY PACK / Ni-MH 电池组)


External View / 外视图



Specifications / 规格

Voltage	7.2V (1.2V x 6)
Battery capacity...	1500mAh

Schematic Diagram / 原理图

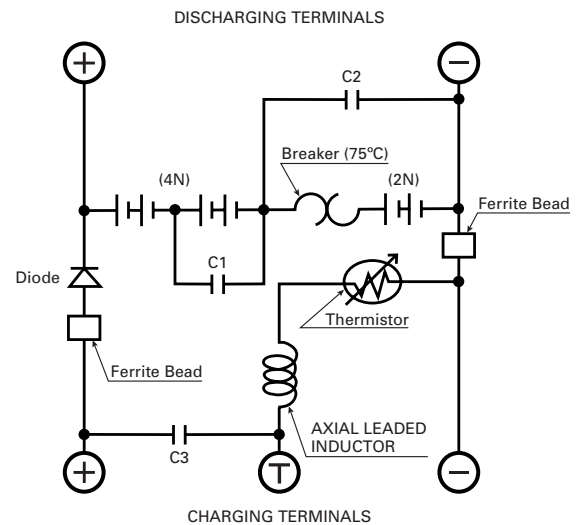


TK-3207G

OPTIONAL ACCESSORIES / 可选附件

KNB-30A (Ni-Cd BATTERY PACK / Ni-Cd 电池组)

External View / 外视图

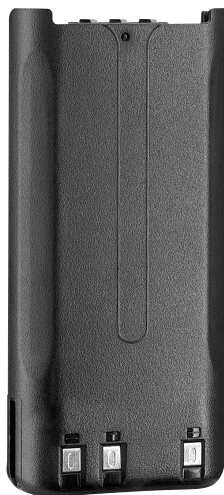

KBH-10 (BELT CLIP / 皮带夹)

External View / 外视图




Specifications / 规格

Voltage 7.2V (1.2V x 6)

Battery capacity ... 1100mAh

Schematic Diagram / 原理图

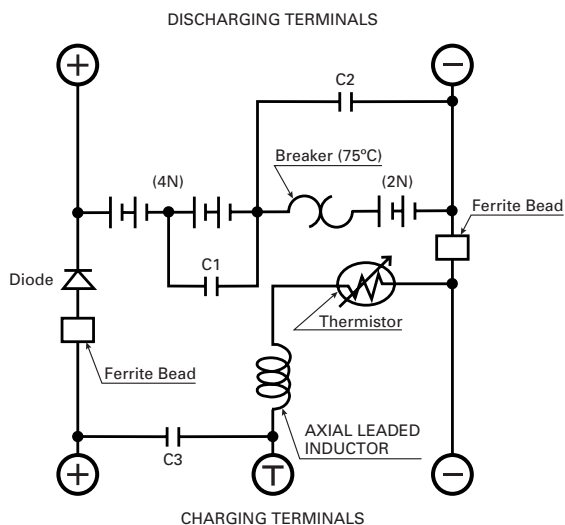

SPECIFICATIONS

General

Frequency Range	440~480MHz (C) 400~430MHz (C2) 370~390MHz (C5) 350~370MHz (C6)
Number of Channels	Max. 16
Channel Spacing.....	25kHz (Wide) 12.5kHz (Narrow)
PLL Channel Stepping	5kHz, 6.25kHz
Operating Voltage	7.5 V DC \pm 20%
Battery Life	More than 14 hours at 4 watts (5-5-90 duty cycle with KNB-29N battery) More than 9 hours at 4 watts (5-5-90 duty cycle with KNB-30A battery)
Operating Temperature Range	-30°C to +60°C
Frequency Stability	\pm 2.5ppm (-30°C to +60°C)
Channel Frequency Spread	40MHz (C) 30MHz (C2) 20MHz (C5, C6)
Dimensions and Weight (Dimensions not including protrusions)	
Radio Only	54 (2-1/8) W x 122 (4-13/16) H x 21.1 (13/16) D mm (inches) 160g (0.35lbs)
With KNB-29N (1500mAh battery)	54 (2-1/8) W x 122 (4-13/16) H x 33 (1-5/16) D mm (inches) 360g (0.79lbs)
With KNB-30A (1100mAh battery)	54 (2-1/8) W x 122 (4-13/16) H x 33 (1-5/16) D mm (inches) 340g (0.75lbs)

Receiver (Measurements made per TIA/EIA-603)

Sensitivity	
EIA 12dB SINAD	0.25 μ V (Wide)/0.28 μ V (Narrow)
Selectivity	70dB (Wide)/60dB (Narrow)
Intermodulation	65dB (Wide)/60dB (Narrow)
Spurious Response	60dB
Audio Power Output	500mW at 8 Ω less than 10% distortion

Transmitter (Measurements made per TIA/EIA-603)

RF Power Output	4W/1W
Spurious and Harmonics	65dB
Modulation	16K0F3E (Wide)/11K0F3E (Narrow)
FM Noise	45dB (Wide)/40dB (Narrow)
Audio Distortion	Less than 5%

TK-3207G

规格

概述

频率范围	440~480MHz (C) 400~430MHz (C2) 370~390MHz (C5) 350~370MHz (C6)
频道数	最大 16
信道间距	25kHz (宽) 12.5kHz (窄)
PLL 频道步进	5kHz, 6.25kHz
电池电压	7.5 V 直流 ±20%
电池寿命	4W 时长于 14 个小时 (使用 KNB-29N 电池 5-5-90 工作周期) 4W 时长于 9 个小时 (使用 KNB-30A 电池 5-5-90 工作周期)
温度范围	-30°C 到 +60°C (-22° F 到 + 140° F)
频率稳定性	± 2.5ppm (-30°C 到 +60°C)
信道频率扩展	40MHz (C) 30MHz (C2) 20MHz (C5, C6)
尺寸和重量 (尺寸大小不包括突出部分)	
仅对讲机时	54 (2-1/8) 宽 x 122 (4-13/16) 高 x 21.1 (13/16) 长 mm (英寸) 160g (0.35 lbs)
带有 KNB-29N (1500mAh 电池)	54 (2-1/8) 宽 x 122 (4-13/16) 高 x 33 (1-5/16) 长 mm (英寸) 360g (0.79 lbs)
带有 KNB-30A (1100mAh 电池)	54 (2-1/8) 宽 x 122 (4-13/16) 高 x 33 (1-5/16) 长 mm (英寸) 340g (0.75 lbs)

接收部 (根据标准 TIA / EIA-603 测定)

灵敏度 EIA 12dB SINAD	0.25µV (宽) / 0.28µV (窄)
选择性	70dB (宽) / 60dB (窄)
互调	65dB (宽) / 60dB (窄)
杂散响应抗扰性	60dB
音频功率输出	8 Ω 时为 500mW, 失真小于 10%

发射部 (根据标准 TIA / EIA-603 测定)

射频功率输出	4W / 1W
杂散射频分量	65dB
调制	16K0F3E (宽) / 11K0F3E (窄)
FM 噪音	45dB (宽) / 40dB (窄)
音频失真	低于 5%

Kenwood Corporation

2967-3, Ishikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

Kenwood U.S.A. Corporation

P.O. BOX 22745, 2201 East Dominguez Street, Long Beach, CA 90801-5745, U.S.A.

Kenwood Electronics Canada Inc.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

Kenwood Electronics Deutschland GmbH

Rembrücker Str. 15, 63150 Heusenstamm, Germany

Kenwood Electronics Belgium N.V.

Leuvensesteenweg 248 J, 1800 Vilvoorde, Belgium

Kenwood Electronics France S.A.

L'Etoile Paris Nord 2, 50 Allée des Impressionnistes, Bp 58416 Villepinte, 95944 Roissy Ch De Gaulle Cedex

Kenwood Electronics UK Limited

KENWOOD House, Dwight Road, Watford, Herts., WD18 9EB United Kingdom

Kenwood Electronics Europe B.V.

Amsterdamseweg 37, 1422 AC Uithoorn, The Netherlands

Kenwood Electronics Italia S.p.A.

Via G. Sirtori, 7/9 20129 Milano, Italy

Kenwood Ibérica, S.A.

Bolivia, 239-08020 Barcelona, Spain

Kenwood Electronics Australia Pty. Ltd.

(A.C.N. 001 499 074)

16 Giffnock Avenue, Centrecourt Estate, North Ryde, N.S.W. 2113 Australia

Kenwood Electronics (Hong Kong) Ltd.

Unit 3712-3724, Level 37, Tower one Metroplaza, 223 Hing Fong Road, Kwai Fong, N.T., Hong Kong

Kenwood Electronics Singapore Pte Ltd

1 Ang Mo Kio Street 63, Singapore 569110

