

DL7100/DL7200
Digital Oscilloscope
Communication Interface

U S E R ' S M A N U A L

Introduction

Thank you for purchasing YOKOGAWA 's DL7100/DL7200 Digital Oscilloscope. This Communication Interface User 's Manual describes the functions and commands of the GP-IB and serial (RS-232) interfaces. To ensure proper use of the GP-IB/serial (RS-232) interfaces, please read this manual thoroughly. Keep the manual in a safe place for quick reference whenever a question arises. Three manuals are provided with the DL7100/DL7200 including this Communication Interface User 's Manual.

Manual Name	Manual No.	Description
DL7100/DL7200 User 's Manual	IM 701410-01E	Describes all functions except for the communications functions and operation procedures of the instrument.
DL7100/DL7200 Communication User 's Manual	IM 701410-11E	Describes the communications functions of the GP-IB/serial (RS-232) interface.
DL7100/DL7200 Operation Guide	IM 701410-02E	Explains basic operations only.

Note

- The contents of this manual are subject to change without prior notice as a result of improvements in instrument 's performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA representative listed on the back cover of this manual.
- Copying or reproduction of all or any part of the contents of this manual without YOKOGAWA 's permission is strictly prohibited.

Trademarks

- HP-GL is a registered trademark of Hewlett-Packard Company.
- IBM PC/AT is a registered trademark of International Business Machines Corporation.
- Other product names are trademarks or registered trademarks of their respective holders.

Revisions

1st Edition: August 1999
2nd Edition: August 2000
3rd Edition: July 2001

How to Use this Manual

Structure of this Manual

This User's Manual consists of the following sections.

- Chapter 1 Overview of the GP-IB Interface**
Describes the functions and specifications of GP-IB.
- Chapter 2 Overview of the Serial (RS-232) Interface**
Describes the functions and specifications of the serial interface (RS-232).
- Chapter 3 Network Interface**
Describes the functions and specifications of the network interface.
- Chapter 4 Before Programming**
Describes formats used when sending a command.
- Chapter 5 Command**
Describes each command.
- Chapter 6 Status Report**
Describes the status byte, various registers and queues.
- Chapter 7 Sample Programs**
Sample programs, written in Visual BASIC, for MS-DOS/V machines equipped with the following GP-IB board: AT-GPIB/TNT IEEE-488.2, from National Instruments.
- Appendix**
Contains references including the ASCII character code table.
- Index**
Provides an alphabetically ordered index.

Conventions Used in this Manual

Symbols used for Notes and Keys

Type	Symbol	Description
Unit	k	1000 e.g.: 100 kS/s (sample rate)
	K	1024 e.g.: 640 KB (floppy disk memory capacity)
Note	Note	Provides information that is necessary for proper operation of the instrument.
Key	"Probe"	Refers to a soft key displayed on the screen.

Symbols used in syntax descriptions

Symbols which are used in the syntax descriptions in Chapter 5 are shown below. These symbols are referred to as BNF notation (Backus-Naur Form). For detailed information, refer to page 4-5.

Symbol	Description	Example	Example of Input
<>	Defined value	CHANnel <x> <x>=1 to 4	→CHANNEL2
{}	One of the options in {} is selected.	COUPLing {AC DC DC50 GND}	→COUPLING AC
	Exclusive OR		
[]	Abbreviated	TRIGger [:SIMPlE]:SLOPe	→TRIGger:SLOPe

Contents

Introduction	i
How to Use this Manual	ii
Chapter 1 Overview of the GP-IB Interface	
1.1 Names of the Parts and Their Function	1-1
1.2 Connecting the GP-IB Cable	1-2
1.3 GP-IB Interface Functions	1-4
1.4 GP-IB Interface Specifications	1-5
1.5 Setting up this Instrument (GP-IB)	1-6
1.6 Response to Interface Messages	1-7
Chapter 2 Overview of the Serial (RS-232) Interface	
2.1 Names of the Parts and Their Function	2-1
2.2 Serial (RS-232) Interface Functions and Specifications	2-2
2.3 Connecting the Serial (RS-232) Interface Cable	2-3
2.4 Handshaking	2-5
2.5 Matching the Data Format	2-7
2.6 Setting up this Instrument (Serial)	2-8
Chapter 3 Overview of the Network Interface	
3.1 Names and Function of Sections	3-1
3.2 Specifications and Functions of the Network Interface	3-2
3.3 Connection Using the Network Interface	3-4
3.4 Setting the DL7100/DL7200 (Network)	3-5
Chapter 4 Before Programming	
4.1 Messages	4-1
4.2 Commands	4-3
4.3 Response	4-5
4.4 Data	4-5
4.5 Synchronization with the Controller	4-8
Chapter 5 Commands	
5.1 A List of Commands	5-1
5.2 ACQUIRE Group	5-15
5.3 ASETUP Group	5-16
5.4 CALIBRATE Group	5-17
5.5 CHANNEL Group	5-18
5.6 CLEAR Group	5-20
5.7 COMMUNICATE Group	5-21
5.8 CURSOR Group	5-24
5.9 DISPLAY Group	5-34
5.10 FILE Group	5-39
5.11 GONOGO Group	5-45
5.12 HCOPY Group	5-51
5.13 HISTORY Group	5-56
5.14 IMAGE Group	5-61

Contents

5.15	INITialize Group	5-61
5.16	LOGic Group (Option)	5-62
5.17	MATH Group	5-66
5.18	MEASure Group	5-69
5.19	PHASe Group	5-78
5.20	PRESet Group	5-79
5.21	SEARch Group	5-82
5.22	SNAP Group	5-93
5.23	SStart Group	5-93
5.24	STARt Group	5-93
5.25	STATus Group	5-94
5.26	STOP Group	5-95
5.27	SYSTem Group	5-96
5.28	TIMebase Group	5-99
5.29	TRIGger Group	5-100
5.30	WAVeform Group	5-113
5.31	XY Group	5-116
5.32	ZOOM Group	5-118
5.33	Common Command Group	5-120

Chapter 6 Status Report

6.1	Overview of the Status Report	6-1
6.2	Status Byte	6-2
6.3	Standard Event Register	6-3
6.4	Extended Event Register	6-4
6.5	Output Queue and Error Queue	6-5

Chapter 7 Sample Program

7.1	Before Programming	7-1
7.2	Image of Sample Program	7-2
7.3	Initialize/Error/Execute	7-3
7.4	Sets/Queries the T/Div	7-6
7.5	Data Output in Word Format	7-9
7.6	Sets/Queries Measure Value	7-15

Appendix


Appendix 1	ASCII Character Code	App-1
Appendix 2	Error Messages	App-2
Appendix 3	Overview of IEEE 488.2-1992	App-4

Index

Chapter 1 Overview of the GP-IB Interface

1.1 Names of the Parts and Their Function


Front Panel

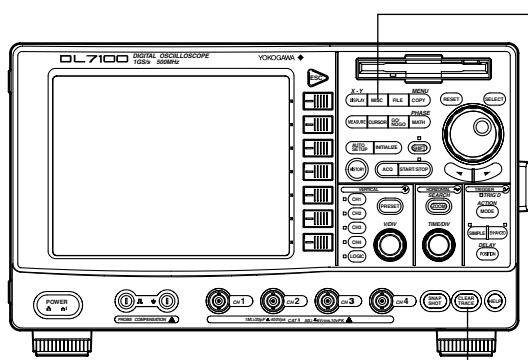

MISC key (page 1-6)
Press to enter the communication settings such as the address and the timeout.

SHIFT+CLEAR TRACE key
Press to switch from remote mode to local mode which allows key operation. However, this is not possible if Local Lockout has been set by the controller (refer to page 1-7).

Rear Panel

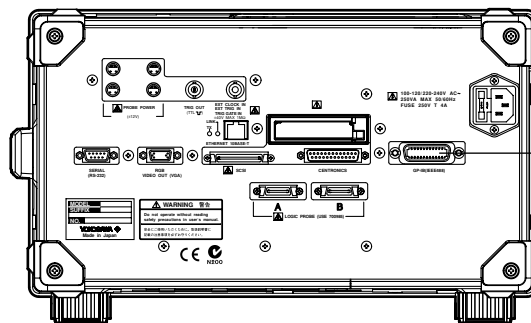

GP-IB connector
This connector is for connecting the controller (such as a PC) with the GP-IB cable. For information on how to connect the GP-IB cable, refer to the following page.


1.2 Connecting the GP-IB Cable

GP-IB Cable

The GP-IB connector on the side panel of the DL716 is a 24-pin connector that conforms to IEEE Standard 488-1978. Use a GP-IB cable that also conforms to IEEE Standard 488-1978.



Connection Method

Connect the GP-IB cable as shown below.

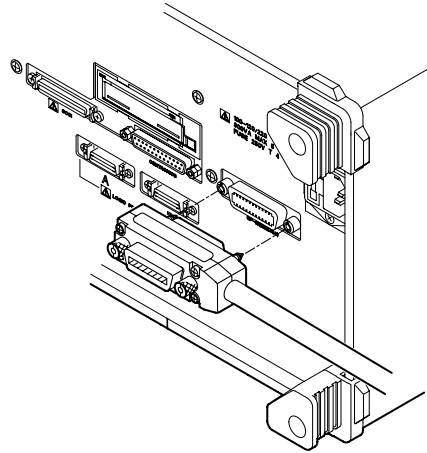

Connection Precautions

 - Be sure to tighten the screws on the GP-IB cable connector firmly.
- The instrument can be connected to more than one item of equipment (e.g. a personal computer) if more than one GP-IB cable is used. However, it is not possible to connect more than 15 items of equipment (including the controller) to a single bus.
- If you connect the instrument to more than one item of equipment, make sure that a different address is used for each item.
- Each connecting cable must be 2 m or less in length.
- The total length of all the cables must not exceed 20 m.
- While communications are in progress, more than two-thirds of the connected equipment items must be turned ON.
- When connecting more than one item of equipment, connect them so that the connection route forms a star or linear configuration. Loop or parallel wiring is not allowed.

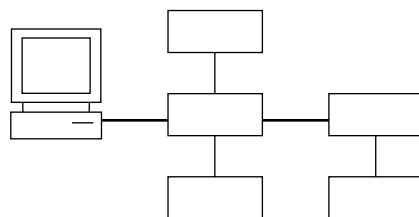

CAUTION

Be sure to switch off power to both your PC and the oscilloscope before connecting or disconnecting cables. Failure to switch power off may cause internal circuit failure or improper operation.

1.3 GP-IB Interface Functions

GP-IB Interface Functions

Listener function

- Allows you to make the settings which you can make using the panel keys on the instrument, except for the power ON/OFF and GP-IB communications settings.
- Receives commands from a controller requesting output of set-up and waveform data. Also receives status report commands.

Talker function

Outputs set-up and waveform data.

Note

The listen-only, talk-only and controller functions are not available on this instrument.

Switching between Remote and Local Modes

When switched from Local to Remote Mode

Remote mode is activated when a REN (Remote Enable) message is received from a controller while local mode is active.

- REMOTE is displayed on the lower right of the screen.
- All front panel keys except the SHIFT+CLEAR TRACE key can no longer be operated any more.
- Settings entered in local mode are retained.

When switched from Remote to Local Mode

Pressing the SHIFT+CLEAR TRACE key in remote mode puts the instrument in local mode. However, this is not possible if Local Lockout has been set by the controller (page 1-7).

- The REMOTE indicator on the lower right of the screen is turned off.
- All front panel keys are operative.
- Settings entered in remote mode are retained.

1.4 GP-IB Interface Specifications

GP-IB Interface Specifications

Electrical and mechanical specifications	: Conforms to IEEE Standard 488-1978.
Interface functions	: Refer to the table below.
Protocol	: Conforms to IEEE Standard 488.2-1992.
Code	: ISO (ASCII) code
Mode	: Addressable mode / Talk-only mode (switched automatically)
Address setting	: Addresses 0 to 30 can be selected from the GP-IB setting screen, displayed when you press the MISC key.
Remote mode clear	: Remote mode can be cleared by pressing the SHIF+CLEAR TRACE key. However, this is not possible if Local Lockout has been set by the controller.

Interface functions

Function	Subset Name	Description
Source handshaking	SH1	Full source handshaking capability
Acceptor handshaking	AH1	Full acceptor handshaking capability
Talker	T6	Basic talker capability, serial polling, untalk on MLA (My Listen Address), no talk-only capability
Listener	L4	Basic listener capability, unlisten on MTA (My Talk Address), no listen-only capability
Service request	SR1	Full service request capability
Remote local	RL1	Full remote/local capability
Parallel poll	PP0	No parallel polling capability
Device clear	DC1	Full device clear capability
Device trigger	DT0	No device trigger capability
Controller	C0	No controller function
Electrical characteristic	E1	Open collector

Data Transfer Rate

The table below shows approximate response times for output of waveform data, assuming the following configuration.

Model	: 701410
Controller	: DELL GXMT 5133
GB-IB Board	: NI AT-GPIB/TNT(PNP)
Programming language:	Visual C++

Data volume	Byte format	Word format	ASCII format
1000	about 25 ms	about 28 ms	about 650 ms
10000	about 60 ms	about 100 ms	about 6.4 s
100000	about 410 ms	about 950 ms	about 63 s
1000000	about 4 s	about 8.5 s	about 622 s

1.5 Setting Up the Instrument (GP-IB)

Before You Begin

When you make settings which can be made using the front panel keys of the instrument or when you output set-up data or waveform data using the controller, the following settings must be made.

Setting the address

This function allows you to set the instrument's address for addressable mode within the range of 0 to 30. Each item of equipment connected via a GP-IB interface has its own address, by which it can be identified. Care must be taken to ensure that all interconnected devices are assigned unique addresses.

Note

Do not change the address while the GP-IB interface is being used by the controller.


Operating Procedure

Displaying the GP-IB menu

1. Press the MISC key.
2. Press the "Communication" soft key.
3. Press the "Device" soft key to select "GP-IB."

Setting the address

4. Turn the jog shuttle to set the desired address.

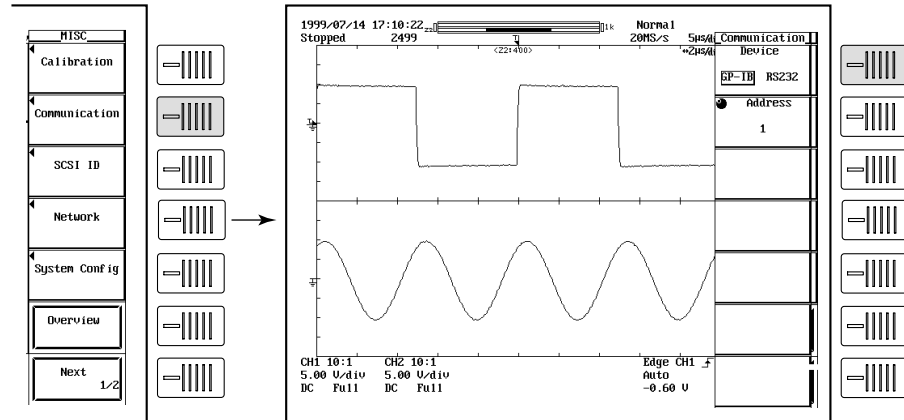

*For DL7100s prior to firmware version 2.01, "Graphic Color" (instead of "Network") is displayed when you press the MISC key.

1.6 Response to Interface Messages

Response to Interface Message

Response to a uni-line message

IFC (Interface Clear)

Clears the talker and listener. Stops output if data is being output.

REN (Remote Enable)

Switches between remote and local modes.

IDY (Identify) is not supported.

Response to a multi-line message (address command)

GTL (Go To Local)

Switches to local mode.

SDC (Selected Device Clear)

Clears the program message (command) which is currently being output. Also clears the output queue (page 6-5).

*OPC and *OPC? will be disabled if they are currently being executed.

*WAI and COMMunicate:WAIT will be stopped immediately.

PPC (Parallel Poll Configure), GET (Group Execute Trigger) and TCT (Take Control) are not supported.

Response to a multi-line message (universal command)

LLO (Local Lockout)

Invalidates the SHIFT+CLEAR key on the front panel to disable switching to local mode.

DCL (Device Clear)

Same as SDC.

SPE (Serial Poll Enable)

Sets the talker function to serial poll mode for all equipment connected to the communications bus. The controller performs polling on equipment sequentially.

SPD (Serial Poll Disable)

Clears serial poll mode as the talker function for all equipment connected to the communications bus.

PPU (Parallel Poll Unconfigure) is not supported.

What is an Interface Message?

An interface message is also called an interface command or bus command, and is issued by the controller. Interface messages are classified as follows.

Uni-line messages

Messages are transferred through a single control line. The following three types of uni-line message are available.

IFC (Interface Clear)

REN (Remote Enable)

IDY (Identify)

1.6 Response to Interface Messages

Multi-line message

Eight data lines are used to transmit a message. Multi-line messages are classified as follows.

Address commands

Valid when the equipment is designated as a listener or a talker. The following five address commands are available.


- Commands valid for equipment designated as a listener;
 - GTL (Go To Local)
 - SDC (Selected Device Clear)
 - PPC (Parallel Poll Configure)
 - GET (Group Execute Trigger)
- Command valid for equipment designated as a talker;
 - TCT (Take Control)

Universal commands

Valid for any item of equipment, irrespective of whether the item is designated as a listener or a talker. The following five universal commands are available.

LLO (Local Lockout)
DCL (Device Clear)
PPU(Parallel Poll Unconfigure)
SPE (Serial Poll Enable)
SPD (Serial Poll Disable)

In addition to the above commands, a listener address, talker address on secondary command can be sent in an interface message.

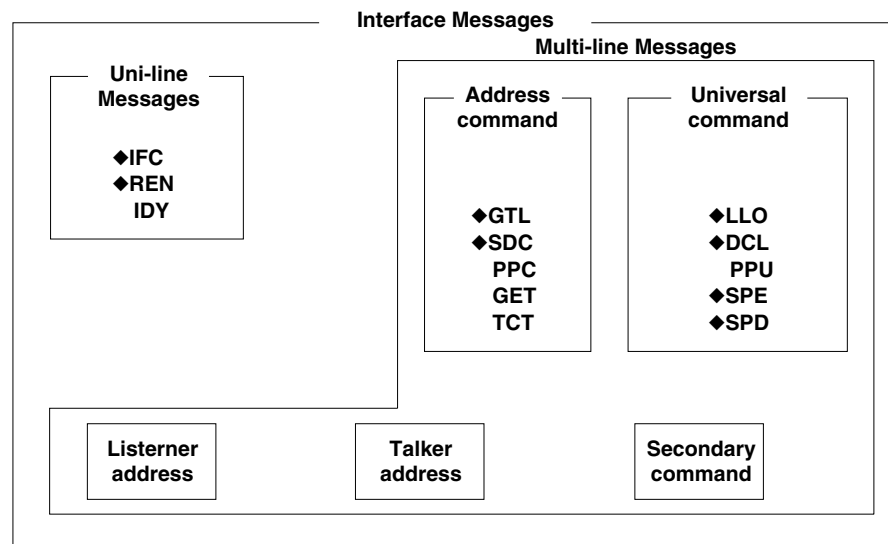

Messages marked with a "♦" are interface messages supported by the DL716.

Note


Differences between SDC and DCL

The SDC command is an address command and requires that both the talker and listener be designated; however DCL is a universal command and does not require that the talker and listener be designated. Therefore, SDC is used for particular items of equipment, while DCL can be used for any equipment connected to the communications bus.

Chapter 2 Overview of the Serial (RS-232) Interface

2.1 Names of the Parts and Their Function


Front Panel

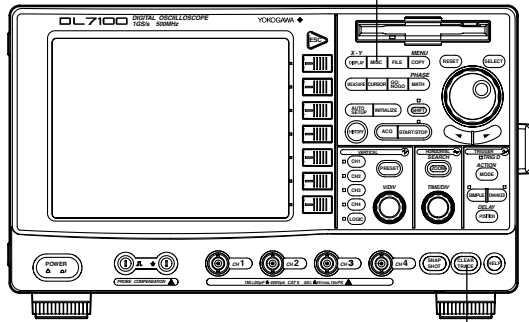

MISC key (page 2-8)
Press to enter the communication settings such as the baud rate, data format, and the handshaking method.

SHIFT+CLEAR TRACE key
Press to switch from remote mode to local mode which allows key operation. However, this is not possible if Local Lockout has been set by the controller (refer to page 2-2).

Rear Panel

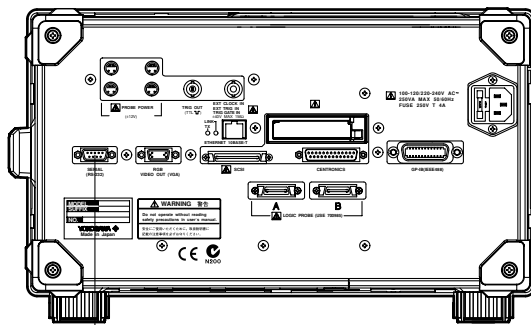

SERIAL (RS-232) connector
This connector is for connecting the controller (such as a PC) with the RS-232 cable. For information on how to connect the RS-232 cable, refer to the following page.

2.2 Serial (RS-232) Interface Functions and Specifications

Receiving Function

It is possible to make the same settings via the serial (RS-232) interface as can be made using the front panel keys.

Measured/computed data, panel set-up information and error codes can be received.

Sending Function

Measured/computed data can be output.

Panel set-up information and the status byte can be output.

Error codes which have occurred can be output.

RS-232 Interface Specifications

Electrical characteristics : Conforms to EIA RS-232.

Connection : Point-to-point

Communications : Full-duplex

Synchronization : Start-stop system

Baud rate : 1200, 2400, 4800, 9600, 19200, 38400, 57600

Start bit : 1 bit (fixed)

Data Length : 7 or 8 bits

Parity : Even, odd or no parity

Stop Bit : 1 or 2 bits

Connector : DELC-J9PAF-13L6 (JAE or equivalent)

Hardware handshaking : User can select whether CA or CB signals will always be True, or will be used for control.

Software Handshaking : User can control both transmission and reception using X-on and X-off signals.

X-on (ASCII 11H)

X-off (ASCII 13H)

Receive buffer size : 256 bytes

Switching between Remote and Local Modes

When switched from Local to Remote Mode

Remote mode is activated when the "COMMunicate:REMote ON" command is received from a controller while local mode is active.

- REMOTE is displayed on.
- All front panel keys except the SHIFT+CLEAR TRACE key can no longer be operated any more.
- Settings entered in local mode are retained.

When switched from Remote to Local Mode

Pressing the SHIFT+CLEAR TRACE key in remote mode puts the instrument in local mode. However, this is not possible if Local Lockout (when the "COMMunicate:LOCKout ON" command is received) has been set by the controller.

Local mode is activated when the "COMMunicate:REMote OFF" command regardless of Local Lockout.


- The REMOTE indicator is turned off.
- All front panel keys are operative.
- Settings entered in remote mode are retained.

2.3 Connecting the Serial (RS-232) Interface Cable

When connecting this instrument to a computer, make sure that the handshaking method, data transmission rate and data format selected for the instrument match those selected for the computer.

For details, refer to the following pages. Also make sure that the correct interface cable is used.


Connector and Signal Names

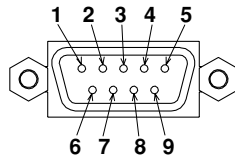

- 2. RD (Received Data) : Data received from personal computer.
Signal direction...Input.
- 3. SD (Send Data) : Data transmitted to a personal computer.
Signal direction...Output.
- 5. SG (Signal Ground) : Ground for signals.
- 7. RS (Request to Send) : Signal used for handshaking when receiving data from a personal computer.
Signal direction...Output.
- 8. CS (Clear to Send) : Signal used for handshaking when transmitting data to a personal computer.
Signal direction...Input.

Pin Nos. 1, 4, 6, and 9 are not used.


9-25 Pin Connector

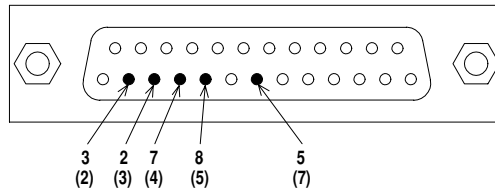

The number between brackets refer to the pin Nos. of the 25-pin connector.

Signal Direction

The figure below shows the direction of the signals used by the serial (RS-232) interface.

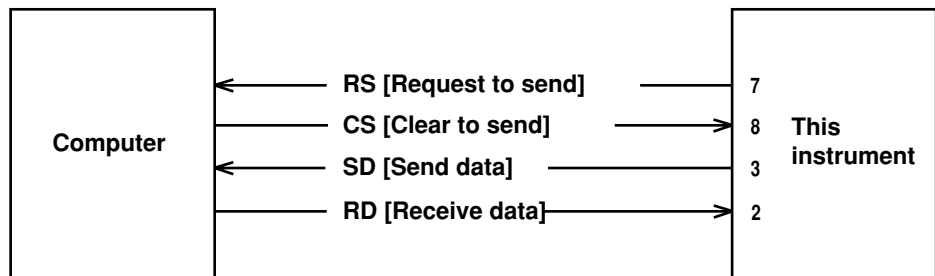

2.3 Connecting the Serial (RS-232) Interface Cable

Table of RS-232 Standard Signals and their JIS and CCITT Abbreviations


Pin No. (9-pin connector)	Abbreviation			Description
	RS-232	CCITT	JIS	
5	AB (GND)	102	SG	Signal ground
3	BA (TXD)	103	SD	Transmitted data
2	BB (RXD)	104	RD	Received data
7	CA (RTS)	105	RS	Request to send
8	CB (CTS)	106	CS	Clear to send

Signal line connection examples


The pin numbers shown are that of 9-pin connectors.

In general, use a cross cable.

• **OFF-OFF / XON-XON**

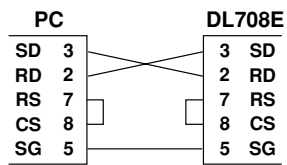

• **CTS-RTS(CS-RS)**

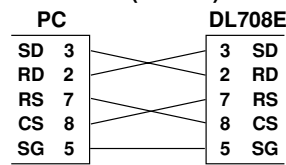

2.4 Handshaking

To use an serial (RS-232) interface for transferring data between this instrument and a computer, it is necessary to use certain procedures by mutual agreement to ensure the proper transfer of data. These procedures are called "handshaking." Various handshaking systems are available depending on the computer to be used; the same handshaking system must be used for both the computer and this instrument. This instrument allows you to choose any handshaking mode from the following three modes.

Handshake format Descriptions → ○

Handshake Method	Data Sending Control (control method when sending data to a computer)			Data Receiving Control (control method when receiving data from a computer)		
	Software Handshake	Hardware Handshake	No handshake	Software Handshake	Hardware Handshake	No handshake
	Sending stops when X-off is received, and sending is resumed when X-on is received.	Sending stops when CB(CTS) is False, and sending is resumed when CB is True.		X-off is sent when received data buffer becomes 3/4-full, and X-on is sent when the received data buffer is only 1/4-full.	CA (RTS) is set to False when received data buffer is only 3/4-full, and is set to True when received data buffer is only 1/4-full.	
	The menu of this instrument					
OFF-OFF	NO-NO		○			○
XON-XON	XON-XON	○		○		
CS-RS	CTS-RTS		○		○	

OFF-OFF

- **Transmission data control**

There is no handshake status between the instrument and host computer. The X-OFF and X-ON signal from the host computer is processed as data, and the CS signal is ignored.

- **Reception data control**

There is no handshake status between the recorder and host computer. When the recorder reception buffer becomes full, the excess data is discarded. RS = True (fixed).

XON-XON

- **Transmission data control**

A software handshake status is established between the instrument and host computer. The instrument will stop a data transmission when an X-OFF signal is received from the host computer, and will resume transmission when the next X-ON signal is received. A CS signal from the host computer is ignored.

- **Reception data control**

A software handshake status is established between the instrument and host computer. When the instruments reception buffer vacancy reaches 64bytes, the X-OFF signal will be sent to the host computer. When the reception buffer vacancy reaches 192 bytes, the X-ON signal will be sent. RS = True (fixed).

CS-RS

- **Transmission data control**


A software handshake status is established between the instrument and host computer. The instrument will stop a data transmission if a "CS = False" status is established, and will resume the transmission when a "CS = True" status is established. The X-OFF and X-ON signals from the host computer are processed as data.

- **Reception data control**

A hardware handshake status is established between the instrument and host computer. When the instruments reception buffer vacancy reaches 64bytes, an "RS=False" status will be established. When the reception buffer vacancy reaches 192 bytes, an "RS=True" status will be established.

Precautions Regarding Data Receiving Control


When handshaking is used to control the reception of data, data may still be sent from the computer even if the free space in the receive buffer drops below 64 bytes. In this case, after the receive buffer becomes full, the excess data will be lost, whether handshaking is in effect or not. Data storage to the buffer will begin again when there is free space in the buffer.

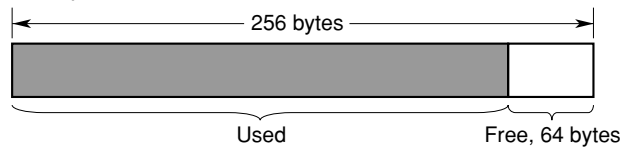

When handshaking is in use, reception of data will stop when the free space in the buffer drops to 64 bytes since data cannot be passed to the main program fast enough to keep up with the transmission.



 After reception of data stops, data continues to be passed to the internal program. Reception of data starts again when the free space in the buffer increases to 192 bytes.



Whether handshaking is in use or not, if the buffer becomes full, any additional data received is no longer stored and is lost.


Data Receiving Control using Handshaking

Note

It is necessary to create a host computer program which prevents the buffers of both the intrument and the computer from becoming full.

2.5 Matching the Data Format

The serial (RS-232) interface of this instrument performs communications using start-stop synchronization. In start-stop synchronization, one character is transmitted at a time. Each character consists of a start bit, data bits, a parity bit, and a stop bit. Refer to the figure below.

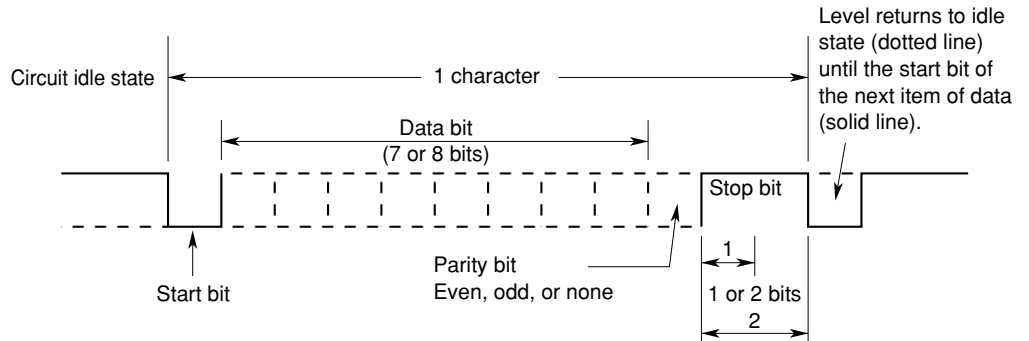

2.6 Setting Up the Instrument (Serial)

Before You Begin

When using the controller to set the items which can be set locally using the keys on the instrument, or when outputting the setup information or the waveform data to the controller, set the following items.

Baud rate

Select from the following choices.

1200, 2400, 4800, 9600, 19200, 38400, 57600

Data format

Select the combination of the data length and the stop bit from the following choices.

8-NO-1, 7-EVEN-1, 7-ODD-1, 7-NO-2

Handshaking method

Select the transmit data control and the receive data control from the following choices.

NO-NO, XON-XON, CTS-RTS

Terminator

Select from the following choices. The terminator used when sending the data from this instrument is selected on the menu. Use either "LF" or "CR+LF" for the terminator in receiving the data.

CR, LF, CR+LF


Operating Procedure

Displaying the serial (RS-232) menu

1. Press the MISC key.
2. Press the "Communication" soft key.
3. Press the "Device" soft key to select "RS232."

Selecting the baud rate, the data format and etc.

4. Press the "BaudRate" (baud rate), "Format" (data format), "Rx-Tx" (handshaking method), and the "Terminator" (terminator) soft keys individually, and turn the jog shuttle to set each item.

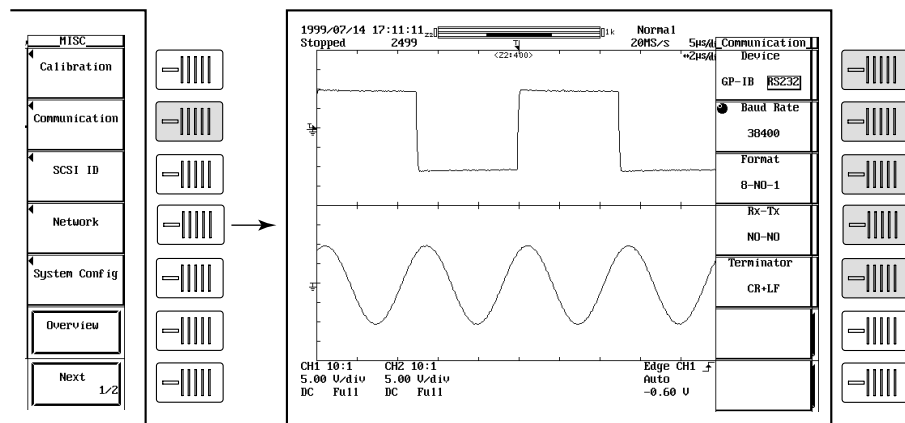


*For DL7100s prior to firmware version 2.01, "Graphic Color" (instead of "Network") is displayed when you press the MISC key.


Chapter 3 Overview of the Network Interface

3.1 Names of the Parts and Their Function

Front Panel

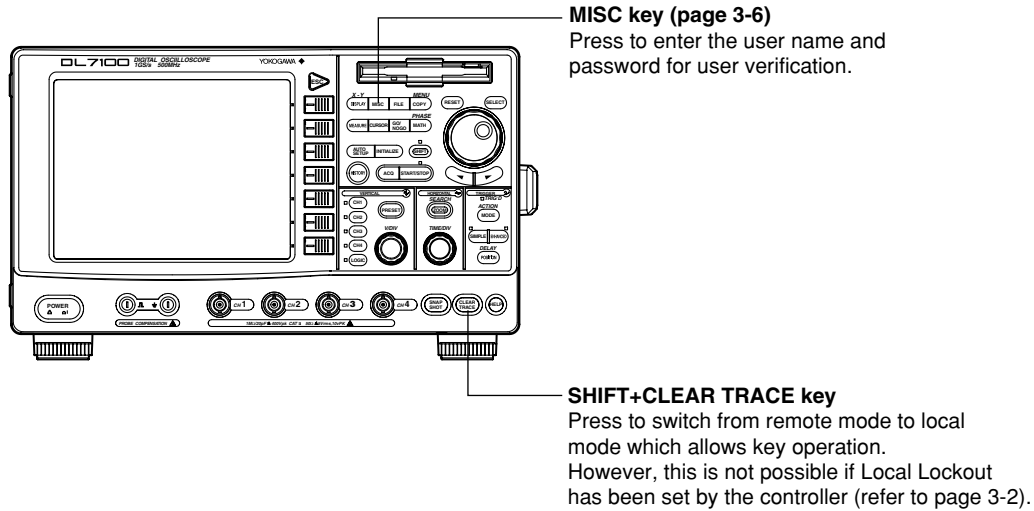

Rear Panel

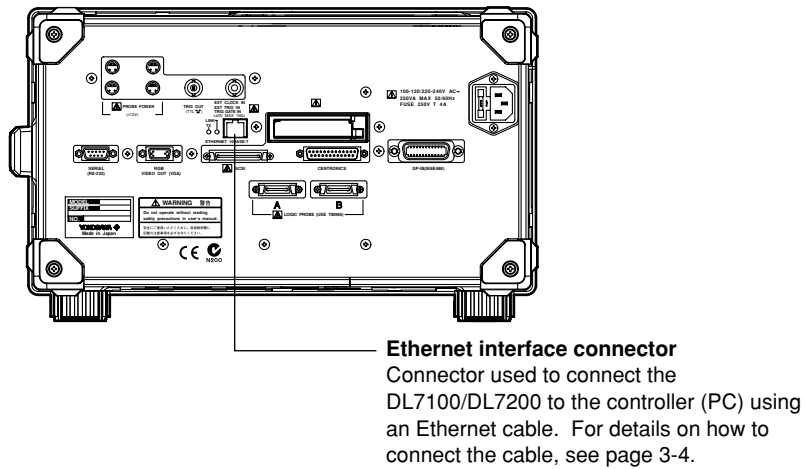

3.2 Network Interface Functions and Specifications

Receiving Function

You can specify the same settings as those specified by front panel key operations.
Receives output requests for measured and computed data, setting parameters of the panel, and error codes.

Sending Function

Outputs measured and computed data.
Outputs setting parameters of the panel and the status byte.
Outputs error codes that are generated.

Network Interface Specifications

Electrical and mechanical specifications : Conforms to IEEE802.3
Number of simultaneous connections : 1
Port number : 10001/tcp

Data Transfer Rate

The response time when outputting waveform data is shown below as a reference.
Target model : 701440 main unit
Controller : EPSON DIRECT MT-4000 (Pentium III, 1 GHz)
Network adapter : 3Com 3C920
Language used : VisualC++

Number of Data Points	Byte Data	Word Data	ASCII Data
1000	7.4 ms	9.7 ms	344 ms
10000	33.3 ms	56.4 ms	3.54 s
100000	370 ms	582 ms	34.14 s
1000000	2834 ms	4950 ms	342.0 s
4000000	11.21 s	19.86 s	1344.5 s
16000000	44.8 s	79.4 s	5280.7 s

Switching between Remote and Local Modes

When switching from local to remote mode

If the DL7100/DL7200 receives a “:COMMunicate:REMOte ON” command from the PC when it is in the local mode, it switches to the remote mode.

- REMOTE is displayed at the upper left corner of the screen.
- All keys except SHIFT+CLEAR TRACE are disabled.
- The settings that existed in the local mode are maintained even when the DL7100/DL7200 switches to the remote mode.

When switching from remote to local mode

Pressing SHIFT+CLEAR TRACE when the instrument is in the remote mode causes the instrument to switch to the local mode. However, this is void when the DL7100/DL7200 has received a “:COMMunicate:LOCKout ON” command from the PC (local lockout condition). When the DL7100/DL7200 receives a “:COMMunicate:REMOte OFF” command from the PC, the DL7100/DL7200 switches to the local mode regardless of the local lock condition.

- REMOTE indication at the upper right corner disappears.
- Key operations are enabled.
- The settings that existed in the remote mode are maintained even when the instrument switches to the local mode.

Note

The network interface cannot be used simultaneously with another communication interface (GP-IB, serial (RS-232), or USB).


User Verification Function

The network interface has a user verification function. A user name and password for the DL7100/DL7200 are set in advance. The user name and password are set on the Communication setup screen under the MISC menu of the DL7100/DL7200. For details, see section 3.4, "Setting the DL7100/DL7200 (Network)."

3.3 Connection via the Network Interface

Connection Method

Connect a UTP (Unshielded Twisted-Pair) cable or an STP (Shielded Twisted-Pair) cable that is connected to a hub, for example, to the 10BASE-T port on the rear panel of the DL7100/DL7200.

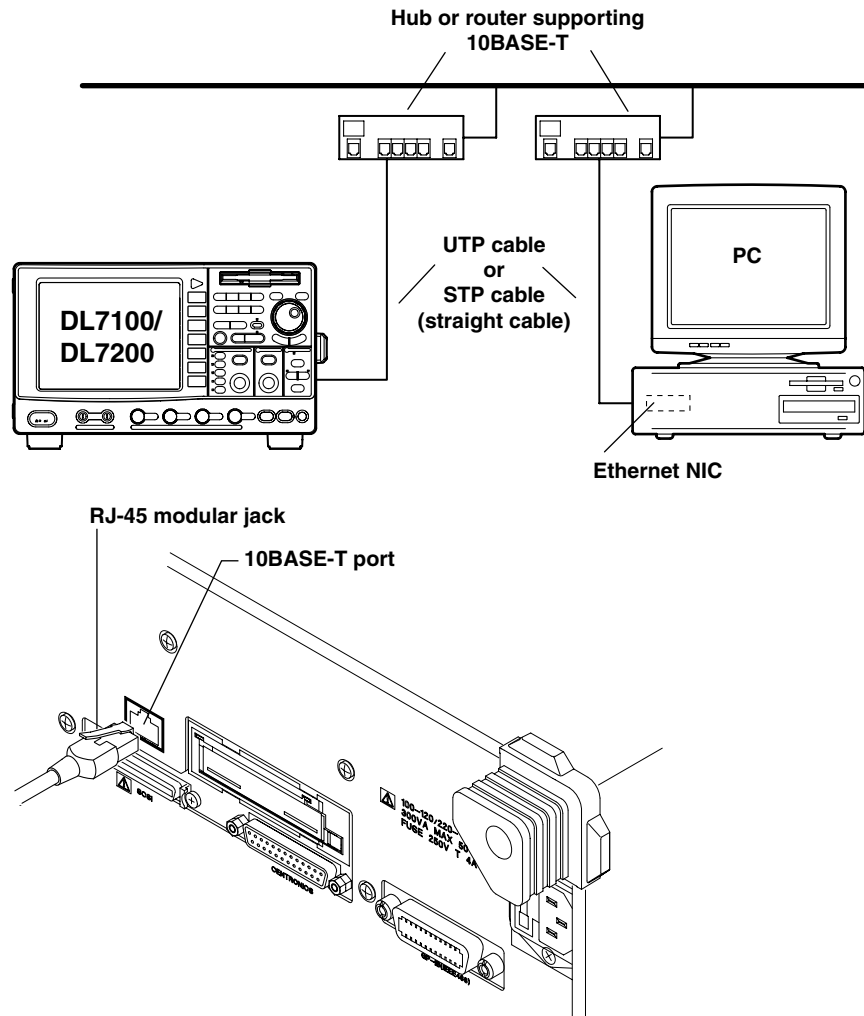

Connection Precautions

To connect the DL7100/DL7200 and a PC, use a straight cable via a hub.

3.4 Setting Up the Instrument (Network)

Function

Carry out the following settings when using a controller to set information that can be specified through key operation on the DL7100/DL7200 or when outputting setting parameters or output waveform data to the controller.

Setting the User Name and Password

The network interface has a user verification function. A user name and password for the DL7100/DL7200 are set in advance.

- Setting the user name
Enter the user name using up to 15 characters. The default setting is “anonymous.”
- Setting the password
Enter the password using up to 15 characters.

Note

If the user verification fails, connection to the DL7100/DL7200 is dropped.
Password is not required if the user name is “anonymous.”
If you change the user name, password, and time out, power cycle the instrument.

Setting Time Out

The network connection is automatically dropped, if there is no access to the DL7100/DL7200 within the time specified here.


Setting the TCP/IP

For details, see section 13.2, “Setting the Ethernet Interface (TCP/IP)” in the *DL7100/DL7200 User's Manual IM701410-01E*.

Operating Procedure

Displaying the Network Menu

1. Press the MISC key.
2. Press the “Communication” soft key.
3. Press the “Device” soft key and select “Network.”

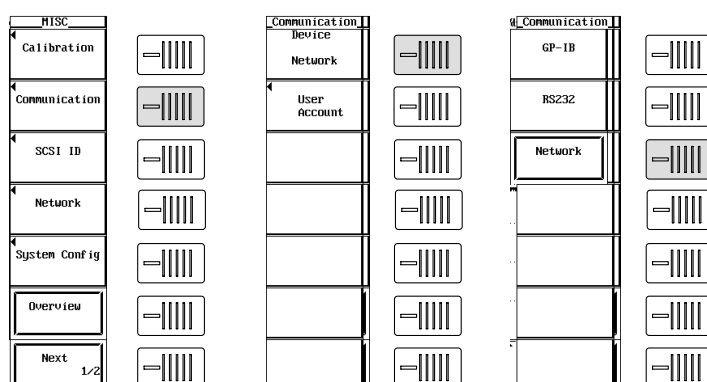


Note

Only the communication interface selected by Device is enabled. The DL7100/DL7200 does not accept commands that are transmitted to other unselected communication interfaces.

3.4 Setting the DL7100/DL7200 (Network)

Setting the User Name, Password, and Time Out

4. Press the “User Account” soft key to display the User Account dialog box.

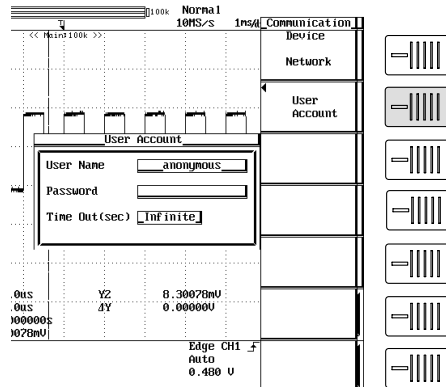

5. Turn the jog shuttle to move the cursor to “User Name” and press the “SELECT” key.
6. Enter the user name. Specify anonymous if you wish to allow access to all users. To restrict access, enter the user name using up to 15 characters.
7. Turn the jog shuttle to move the cursor to “Password” and press the “SELECT” key.
8. Enter the password using up to 15 characters. Enter the password again for confirmation.
9. Turn the jog shuttle to move the cursor to “Time Out” and press the “SELECT” key.
10. Turn the jog shuttle to set the timeout time. Press the “SELECT” key to confirm. Pressing the “RESET” key will reset the value to “Infinite.”

Note

For details on the keyboard (software keyboard) operation, see section 4.1, “Entering Values and Character Strings” in the *DL7100/DL7200 User's Manual IM701410-01E*.

User name and password are case-sensitive.

Setting the TCP/IP

To use the network interface function, the following TCP/IP settings must be entered.

- IP address
- Subnet mask
- Default gateway

For details on how to enter these parameters, see section 13.2, “Setting the Ethernet Interface (TCP/IP)” in the *DL7100/DL7200 User's Manual IM701410-01E*.

Chapter 4 Before Programming


4.1 Messages

Blocks of message data are transferred between the controller and this instrument during communications. Messages sent from the controller to this instrument are called program messages, and messages sent back from this instrument to the controller are called response messages.

If a program message contains a query command, i.e. a command which requests a response, this instrument returns a response message. A single response message is always returned in reply to a program message.

Program Messages

The format of a program message is shown below.

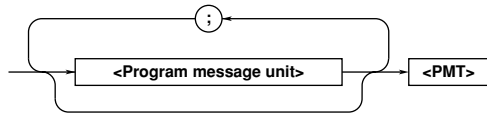

<Program message unit>

A program message consists of zero or more program message units; each unit corresponds to one command. This instrument executes commands one by one according to the order in which they are received.

Program message units are delimited by a ";". For a description of the format of the program message unit, refer to the explanation given further below.

Example `:ACQUIRE:MODE NORMAL;COUNT 1<PMT>`

Unit
Unit

 
<PMT>

PMT is a terminator used to terminate each program message. The following three types of terminator are available.

- NL (New Line) : Same as LF (Line Feed). ASCII code "0AH" is used.
- ^END : END message defined in IEEE488.1. (EOI signal)
(The data byte sent with an END message will be the final item of the program message unit.)
- NL^END : NL with an END message attached (NL is not included in the program message unit.)

Program message unit format

The format of a program message unit is shown below.



<Program header>

A program header is used to indicate the command type. For details, refer to page 4-3.

<Program data>


If certain conditions are required for the execution of a command, program data must be added. Program data must be separated from the header by a space (ASCII code "20H"). If multiple items of program data are included, they must be separated by a ",", (comma). For details, refer to page 4-5.

Example `:ACQUIRE:MODE NORMAL<PMT>`

Header
Data

Response Messages

The format of a response message is shown below.

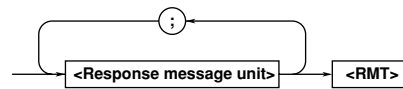

<Response message units>

A response message consists of one or more response message units; each response message unit corresponds to one response.

Response message units are delimited by a ";".

For the response message format, refer to the next page.

Example `:ACQUIRE:MODE NORMAL;COUNT 1<RMT>`

Unit
Unit

<RMT>

RMT is the terminator used for every response message. Only one type of response message is available; NL^END.

4.2 Commands

 
There are three types of command (program header) which can be sent from the controller to this instrument. They differ in the format of their program headers.

They are

- Common command header
- Compound header
- Simple header

Common Command Header


Commands defined in IEEE 488.2-1987 are called common commands. The header format of a common command is shown below. An asterisk (*) must always be attached to the beginning of a command.



An example of a common command
*CLS

Compound Header

 Commands designed to be used only with this instrument are classified and arranged in a hierarchy according to their function. The format of a compound header is illustrated below. A colon (:) must be used when specifying a lower-level header.



An example of a compound header
:ACQuire:MODE

Simple Header

These commands (headers) are functionally independent of each other and are not arranged hierarchically. The format of a simple header is shown below.



An example of a simple header
:STARt

Note

A mnemonic is a character string made up of alphanumeric characters.

When Concatenating Commands

Command Group

A command group is a group of commands which have the same compound header. A command group may contain sub-groups.

Example Commands relating to acquisition settings

```
:ACQuire:AVERage:COUNT      :ACQuire:MODE
:ACQuire:AVERage:EWEight     :ACQuire:REPetitive
:ACQuire:CLOCK                :ACQuire:RLEngth
:ACQuire:COUNT
:ACQuire:INTerleave
```

When Concatenating Commands of the Same Group

This instrument stores the hierarchical level of the command which is currently being executed, and performs analysis on the assumption that the next command to be sent will also belong to the same level. Therefore, it is possible to omit the header if the commands belong to the same group.

Example :ACQuire:MODE NORMaL;COUNT 1<PMT>

When Concatenating Commands of Different Groups

A colon (:) must be included before the header of a command, if the command does not belong to the same group as the preceding command. It is impossible to omit a colon (:).

Example :ACQuire:MODE NORMaL;:DISPLay:
FORMat SINGLe<PMT>

When Concatenating Simple Headers

When you type in a simple header after another command, you must include a colon (:) before the simple header. It is impossible to omit a colon (:).

Example :ACQuire:MODE NORMaL;:STARt<PMT>

When Concatenating Common Commands

Common commands defined in IEEE 488.2-1987 are independent of hierarchical level. Thus, it is not necessary to add a colon (:) before a common command.

Example :ACQuire:MODE NORMaL;*CLS;
COUNT 1<PMT>

4.2 Commands

When Separating Commands with <PMT>

If a terminator is used to separate two commands, each command is a separate message. Therefore, the common header must be typed in for each command even when commands of the same command group are being concatenated.

```
Example :ACQuire:MODE NORMal<PMT>:
        ACQuire:COUNT 1<PMT>
```

Upper-level Query

An upper-level query is a compound header to which a question mark is appended. Execution of an upper-level query allows all a group's settings to be output at once. Some query groups comprising more than three hierarchical levels can output all their lower level settings.

```
Example :CHANnel1?<PMT>->:CHANNEL1:
        DISPLAY ON;LABEL "CH1 ";
        COUPLING DC;POSITION 0.00;PROBE 10;
        VDIV 50.0E+00;BWIDTH FULL;
        OFFSET 0.0E+00;LSCALE:MODE 0
```

In reply to a query, a response can be returned as a program message to this instrument. Transmitting a response can restore the settings made when the query was executed. However, some upper-level queries will not return set-up data which is not currently in use. Note that not all a group's information will necessarily be sent out as a response.

Header Interpretation Rules

This instrument interprets the header received according to the following rules.

- Mnemonics are not case sensitive.
Example "CURSor" can also be written as "cursor" or "Cursor."
- The lower-case part of a header can be omitted.
Example "CURSor" can also be written as "CURSO" or "CURS."
- If the header ends with a question mark, the command is a query. It is not possible to omit the question mark.
Example "CURSor?" cannot be abbreviated to anything shorter than "CURS?."
- If the "x" at the end of a mnemonic is omitted, it is assumed to be "1."
Example If "CHANnel<x>" is written as "CHAN," this represents "CHANnel1."
- Any part of a command enclosed by [] can be omitted.
Example "TRIGger[:SIMPLle]:LEVe1" can be written as "TRIG:LEV."
- However, a part enclosed by [] cannot be omitted if it is located at the end of an upper-level query.
Example "TRIGger?" and "TRIGger:SIMPLe?" belong to different upper-level query levels.

4.3 Response

On receiving a query from the controller, this instrument returns a response message to the controller. A response message is sent in one of the following two forms.

- Response consisting of a header and data
If the query can be used as a program message without any change, a command header is attached to the query, which is then returned.
Example :ACQUIRE:MODE?<PMT>→:ACQUIRE:MODE NORMAL<RMT>
- Response consisting of data only
If the query cannot be used as a program message unless changes are made to it (i.e. it is a query-only command), no header is attached and only the data is returned. Some query-only commands can be returned after a header is attached to them.
Example :MEASURE:CHANNEL1:PTOPeak:VALUE?<PMT>→10.0E+00<RMT>

When returning a response without a header

It is possible to remove the header from a response consisting of a header and data. The "COMMunicate:HEADer" command is used to do this.

Abbreviated form

Normally, the lower-case part is removed from a response header before the response is returned to the controller. Naturally, the full form of the header can also be used. For this, the "COMMunicate:VERBose" command is used. The part enclosed by [] is also omitted in the abbreviated form.

4.4 Data

Data

A data section comes after the header. A space must be included between the header and the data. The data contains conditions and values. Data is classified as below.

Data	Description
<Decimal>	Value expressed as a decimal number (Example: CH2's probe attenuation →CHANNEL2:PROBe 100)
<Voltage><Time><Frequency>	Physical value (Example: Time axis range→TIMEbase:TDIV 1US)
<Register>	Register value expressed as either binary, octal, decimal or hexadecimal (Example: Extended event register value →STATUS:ESE #HFE)
<Character data>	Specified character string (mnemonic). Can be selected from { } (Example: CH2 input coupling →CHANNEL2:COUPLing {ACIDC DC50 GND})
<Boolean>	Indicates ON/OFF. Set to ON, OFF or value (Example: CH2 display ON →CHANNEL2:DISPLay ON)
<Character string data>	Arbitrary character string (Example: Comment on screen-data output →HCOPY:COMMENT "ABCDEF")
<Filename>	Gives the name of a file. (Example: Name of file to be saved →FILE:SAVE:WAVEform:NAME "CASE1")
<Block data>	Arbitrary 8-bit data (Example: Response to acquired waveform data →#800000010ABCDEFGHIJ)

<Decimal>

<Decimal> indicates a value expressed as a decimal number, as shown in the table below. Decimal values are given in the NR form specified in ANSI X3. 42-1975.

Symbol	Description	Example
<NR1>	Integer	125 -1 +1000
<NR2>	Fixed point number	125.0 -90 +001.
<NR3>	Floating point number	125.0E+0 -9E-1 +.1E4
<NRf>	Any of the forms <NR1> to <NR3> is allowed.	

- Decimal values which are sent from the controller to this instrument can be sent in any of the forms to <NR3>. In this case, <NRf> appears.
- For response messages which are returned from this instrument to the controller, the form (<NR1> to <NR3> to be used) is determined by the query. The same form is used, irrespective of whether the value is large or small.
- In the case of <NR3>, the "+" after the "E" can be omitted, but the "-" cannot.
- If a value outside the setting range is entered, the value will be normalized so that it is just inside the range.
- If the value has more than the significant number of digits, the value will be rounded.

4.4 Data

<Voltage>, <Time>, <Frequency>

<Voltage>, <Time>, and <Frequency> indicate decimal values which have physical significance. <Multiplier> or <Unit> can be attached to <NRf>. They can be entered in any of the following forms.

Form	Example
<NRf><Multiplier><Unit>	5MV
<NRf><Unit>	5E-3V
<NRf><Multiplier>	5M
<NRf>	5E-3

<Multiplier>

Multipliers which can be used are shown below.

Symbol	Word	Description
EX	Exa	10 ¹⁸
PE	Peta	10 ¹⁵
T	Tera	10 ¹²
G	Giga	10 ⁹
MA	Mega	10 ⁶
K	Kilo	10 ³
M	Mili	10 ⁻³
U	Micro	10 ⁻⁶
N	Nano	10 ⁻⁹
P	Pico	10 ⁻¹²
F	Femto	10 ⁻¹⁵
A	Atto	10 ⁻¹⁸

<Unit>

Units which can be used are shown below.

Symbol	Word	Description
V	Volt	Voltage
S	Second	Time
HZ	Hertz	Frequency
MHZ	Megahertz	Frequency

- <Multiplier> and <Unit> are not case sensitive.
- "U" is used to indicate "μ."
- "MA" is used for Mega (M) to distinguish it from Mili, except for in the case of Megahertz, which is expressed as "MHZ." Hence, it is not permissible to use "M" (Mili) for Hertz.
- If both <Multiplier> and <Unit> are omitted, the default unit will be used.
- Response messages are always expressed in <NR3> form. Neither <Multiplier> nor <Unit> is used, therefore the default unit is used.

<Register>

<Register> indicates an integer, and can be expressed in hexadecimal, octal, or binary as well as as a decimal number. <Register> is used when each bit of a value has a particular meaning. <Register> is expressed in one of the following forms.

Form	Example
<NRf>	1
#H<Hexadecimal value made up of the digits 0 to 9, and A to F>	#H0F
#Q<Octal value made up of the digits 0 to 7>	#Q777
#B<Binary value made up of the digits 0 and 1>	#B001100

- <Register> is not case sensitive.
- Response messages are always expressed as <NR1>.

<Character Data>

<Character data> is a specified string of character data (a mnemonic). It is mainly used to indicate options, and is chosen from the character strings given in { }. For interpretation rules, refer to "Header Interpretation Rules" on page 4-4.

Form	Example
{AC DC DC50 GND}	AC

- As with a header, the "COMMunicate:VERBose" command can be used to return a response message in its full form. Alternatively, the abbreviated form can be used.
- The "COMMunicate:HEADer" command does not affect <character data>.

<Boolean>

<Boolean> is data which indicates ON or OFF, and is expressed in one of the following forms.

Form	Example
{ON OFF <NRf>}	ON OFF 1 0

- When <Boolean> is expressed in <NRf> form, OFF is selected if the rounded integer value is "0" and ON is selected if the rounded integer is "Not 0."
- A response message is always "1" if the value is ON and "0" if it is OFF.

<Character String Data>

<Character string data> is not a specified character string like <Character data>. It is an arbitrary character string. A character string must be enclosed in single quotation marks (') or double quotation marks (").

Form	Example
<Character string data>	'ABC' "IEEE488.2-1987"

- Response messages are always enclosed in double quotation marks.
- If a character string contains a double quotation mark ("), the double quotation mark will be replaced by two concatenated double quotation marks ("""). This rule also applies to a single quotation mark within a character string.
- <Character string data> is an arbitrary character string, therefore this instrument assumes that the remaining program message units are part of the character string if no single (') or double quotation mark (") is encountered. As a result, no error will be detected if a quotation mark is omitted.

<Filename>

Gives the name of a file. The format is as follows.

Form	Example
{<NRf> <Character data> <Character string>}	1 CASE "CASE"

- If you input an <NRf> value, the system converts the value (after rounding to the nearest integer) to the corresponding 8-character ASCII string. (If you set the value to 1, the name becomes "00000001".) Note that negative values are not allowed.
- If you enter a <character data> or <character string> argument that is longer than eight characters, only the first eight characters are used.
- Response messages always return filenames as <character string> arguments.

<Block data>

<Block data> is arbitrary 8-bit data. <Block data> is only used for response messages. Response messages are expressed in the following form.

Form	Example
#N<N-digit decimal value><Data byte string>	#800000010ABCDEFGHIJ

- **#N**
Indicates that the data is <Block data>. "N" is an ASCII character string number (digits) which indicates the number of data bytes that follow.
- **<N-digits decimal value>**
Indicates the number of bytes of data. (Example: 00000010=10 bytes)
- **<Data byte string>**
The actual data. (Example: ABCDEFGHIJ)
- Data is comprised of 8-bit values (0 to 255). This means that the ASCII code "0AH," which stands for "NL," can also be a code used for data. Hence, care must be taken when programming the controller.

4.5 Synchronization with the Controller

Overlap Commands and Sequential Commands

There are two kinds of command; overlap commands and sequential commands. Execution of an overlap command may start before execution of the previously sent command is completed.

The "CHANnel1:VDIV" command, for example, is a sequential command. Assume that you set a new V/div value and immediately request return of the new value, as follows:

```
:CHANnel1:VDIV 5V;VIDV?<PMT>
```

In this case, the oscilloscope always returns the newest setting ("5V"). This is because it always completes processing of the current sequential command (in this case, "VDIV 5V") before moving on to the next command ("VIDV?").

In contrast, assume that you begin a file load and then immediately query the V/div value:

```
:FILE:LOAD:SETup:EXECute "CASE1";:CHANnel1:VDIV?
```

Because "FILE:LOAD:SETup:EXECute "CASE1"" is an overlapped command, the oscilloscope will advance to the "CHANnel1:VDIV?" command before it finishes the load. The returned V/div value will not show the newest setting, but will rather show the setting in use before the setup was changed.

Obviously, use of overlapped commands may in some cases produce inappropriate results. Where necessary, you can avoid such problems as described below.

Synchronization with an Overlap Command

Using the *WAI command

The *WAI command causes the commands which follow it to wait until an overlap command has been executed.

Example

```
:COMMunicate:OPSE #0040;:FILE:LOAD:SETup:EXECute "CASE1";*WAI;:CHANnel1:VDIV?<PMT>
```

The "COMMunicate:OPSE" command is used to designate which commands are to be subject to the *WAI command. In the above example, only auto set-up is designated.

Since a *WAI command is executed just before "CHANnel1:VDIV?", "CHANnel1:VDIV?" will not be executed until auto set-up has been completed.

Using the COMMunicate:OVERlap command

The "COMMunicate:OVERlap" command is used to enable or disable overlap operation.

Example

```
:COMMunicate:OVERlap #HFFBF;:FILE:LOAD:SETup:EXECute "CASE1";:CHANnel1:VDIV:VALue?<PMT>
```

The "COMMunicate:OVERlap #HFFBF" command disables overlapped operation of the medium access command, while enabling all other overlap-type operations. The oscilloscope will therefore handle "FILE:LOAD:SETup:EXECute "CASE1"" as sequential command, ensuring that the "CHANnel1:VDIV?" command (in the above example) will not execute until file loading is completed.

Using the *OPC command

The *OPC command causes the OPC bit (bit 0) of the standard event register (page 6-3) to be set to "1" when an overlap operation has been completed.

Example

```
:COMMunicate:OPSE #H0040;*ESE 1;*ESR?;*SRE 32;:FILE:LOAD:SETup:EXECute "CASE1";*OPC<PMT>
```

(Response to *ESR? is decoded.)

(Service request is awaited.)

```
CHANnel1:VDIV?<PMT>
```

The "COMMunicate:OPSE" command is used to designate which commands are to be subject to the *OPC command. In the above example, only medium access commands are designated.

*ESE 1 and *SRE 32 stipulate that a service request is generated only when the OPC bit is set to "1."

*ESR? is used to clear the standard event register.

In the above example, "CHANnel1:VDIV?" will not be executed until a service request is generated.

Using the *OPC? query

The *OPC? query generates a response when an overlap operation has been completed.

Example

```
:COMMunicate:OPSE #H0040;:FILE:LOAD:SETup:
EXECute "CASE1";*OPC?<PMT>
(Response to *OPC? is decoded.)
```

```
:CHANnel1:VDIV?<PMT>
```

The "COMMunicate:OPSE" command is used to designate which commands are to be subject to the *OPC? command. In the above example, only medium access commands are designated.

Since *OPC? does not generate a response until an overlap operation is completed, file loading will have been completed when a response to *OPC? is read.

Note

Most commands are sequential commands. Commands used in Chapter 5 are sequential commands unless otherwise specified.

Synchronization with Non-Overlap Commands

Synchronization is sometimes required for reasons other than communications-related reasons, such as the activation of a trigger, even if a sequential command is used.

For example, if a "next program" message is transmitted to make an inquiry about the waveform data which has been acquired using single mode as the trigger mode, the "WAVEform:SEND?" command is sometimes executed whether acquisition has been completed or not, causing a command execution error.

```
:TRIGger:MODE SINGLE;:START;:WAVEform:
SEND?<PMT>
```

In this case, synchronization with the time at which acquisition is completed must be accomplished, as shown next.

Using STATUS:CONDition? query

A "STATus:CONDition?" query is used to make an query about the contents of the condition register (page 6-4). It is possible to judge whether acquisition is in progress or not by reading bit 0 of the condition register. Bit 0 is "1" if acquisition is in progress, and "0" if acquisition is stopped.

Example

```
:TRIGger:MODE SINGLE;:START<PMT>
:STATus:CONDition?<PMT>
```

(Returns to the previous status if bit 0 is found to be "1" when the response is decoded.)

```
:WAVEform:SEND?<PMT>
```

A "WAVEform:SEND?" query will not be executed until bit 0 of the condition register has been set to "0."

Using the extended event register

Changes in the condition register are reflected in the extended event register (page 6-4).

Example

```
:STATus:FILTer1 FALL;:STATus:EES 1;EESR?;
*SRE 8;:TRIGger:MODE SINGLE;:START<PMT>
```

(Response to "STATus:EESR?" is decoded.)

(Service request is awaited.)

```
:WAVEform:SEND?<PMT>
```

The "STATus:FILTer1 FALL" command sets the transition filter such that Bit 0 (FILTer1) of the Extended Event Register sets to 1 when Bit 0 of the Condition Register changes from 1 to 0.

"STATus:EES 1" is a command used only to reflect the status of bit 0 of the extended event register in the status byte.

"STATus:EESR?" is used to clear the extended event register.

The *SRE command is used to generate a service request caused solely by the extended event register. "WAVEform:SEND?" will not be executed until a service request is generated.

4.5 Synchronization with the Controller

Using the COMMunicate:WAIT command

The "COMMunicate:WAIT" command halts communications until a specific event is generated.

Example

```
:STATus:FILTer1  
FALL;:STATus:EESR?;:TRIGger:MODE SINGLE;:  
START<PMT>  
(Response to "STATus:EESR?" is decoded.)  
:COMMunicate:WAIT 1;:WAVEform:SEND?<PMT>
```

For a description of "STATus:FILTer1 FALL" and "STATus:EESR?," refer to "Using the extended event register" on this page.

"COMMunicate:WAIT 1" means that communications is halted until bit 0 of the extended event register is set to "1."

Chapter 5 Commands

5.1 A List of Commands

Command	Function	Page
ACQUIRE Group		
:ACQUIRE?	Queries all settings related to waveform acquisition.	5-15
:ACQUIRE:AVERAge?	Queries all settings related to averaging.	5-15
:ACQUIRE:AVERAge:COUNT	Sets the number of waveform acquisitions during averaging or queries the current setting.	5-15
:ACQUIRE:AVERAge:EWEight	Sets the attenuation constant for exponential averaging or queries the current setting.	5-16
:ACQUIRE:CLOCK	Sets the time base or queries the current setting.	5-16
:ACQUIRE:COUNT	Sets the number of waveform acquisitions during normal mode, average mode, and box average or queries the current setting.	5-16
:ACQUIRE:INTerleave	Turns the interleave mode ON/OFF or queries the current setting.	5-16
:ACQUIRE:MODE	Sets the waveform acquisition mode or queries the current setting.	5-16
:ACQUIRE:REPetitive	Turns the repetitive sampling mode ON/OFF or queries the current setting.	5-16
:ACQUIRE:RLENgth	Sets the record length or queries the current setting.	5-16
ASETUP Group		
:ASETUP:EXECute	Executes auto setup.	5-16
:ASETUP:UNDO	Cancels the previous auto setup operation.	5-16
CALIBRATE Group		
:CALIBRATE?	Queries all settings related to calibration.	5-17
:CALIBRATE:DESKew?	Queries all settings related to skew compensation.	5-17
:CALIBRATE:DESKew:MODE	Turns the skew compensation ON/OFF or queries the current setting.	5-17
:CALIBRATE:DESKew:TARGet	Sets the channel on which skew compensation is to be performed or queries the current setting.	5-17
:CALIBRATE:DESKew:TIME	Sets the skew adjustment time that are common to all channels or queries the current setting.	5-17
:CALIBRATE[:EXECute]	Executes the calibration.	5-17
:CALIBRATE:MODE	Turns auto calibration ON/OFF or queries the current setting.	5-17
CHANNEL Group		
:CHANNEL<x>?	Queries all settings related to the vertical axis of each channel.	5-19
:CHANNEL<x>:BWIDTH	Sets the input filter of each channel or queries the current setting.	5-19
:CHANNEL<x>:COUPLing	Sets the input coupling of each channel or queries the current setting.	5-19
:CHANNEL<x>:DISPLay	Turns the display of each channel ON/OFF or queries the current setting.	5-19
:CHANNEL<x>:LABel	Sets a waveform label on each channel or queries the current setting.	5-19
:CHANNEL<x>:LSCaLe?	Queries all settings related to the linear scaling of each channel.	5-19
:CHANNEL<x>:LSCaLe:AVALue	Sets scaling constant A or queries the current setting.	5-19
:CHANNEL<x>:LSCaLe:BVALue	Sets offset value B or queries the current setting.	5-19
:CHANNEL<x>:LSCaLe:MODE	Turns linear scaling ON/OFF or queries the current setting.	5-19
:CHANNEL<x>:LSCaLe:UNIT	Sets the measurement unit to be added to the result of the linear scaling or queries the current setting.	5-19
:CHANNEL<x>:MODE	Turns the display of each channel ON/OFF or queries the current setting.	5-20
:CHANNEL<x>:OFFSet	Sets the offset voltage of each channel or queries the current setting.	5-20
:CHANNEL<x>:POSition	Sets the vertical position of each channel or queries the current setting.	5-20
:CHANNEL<x>:PROBe	Sets the probe attenuation of each channel or queries the current setting.	5-20
:CHANNEL<x>:VARiable	Sets the voltage sensitivity in units of 0.01 of the V/div setting for each channel or queries the current setting.	5-20
:CHANNEL<x>:VDIV	Sets the V/div value of each channel or queries the current setting.	5-20
CLEAR Group		
:CLEAR	Clears the trace.	5-20

5.1 A List of Commands

Command	Function	Page
COMMunicate Group		
:COMMunicate?	Queries all settings related to communications.	5-21
:COMMunicate:HEADer	Sets whether or not to add a header to the response data or queries the current setting.	5-21
:COMMunicate:LOCKout	Sets or clears the local lockout.	5-21
:COMMunicate:OPSE	Sets the overlap commands that are subject to *OPC, *OPC?, and *WAI or queries the current setting.	5-22
:COMMunicate:OPSR?	Queries the operation pending status register value.	5-22
:COMMunicate:OVERLap	Sets the commands that will operate as overlap commands or queries the current setting.	5-22
:COMMunicate:REMOte	Switches to remote/local mode.	5-22
:COMMunicate:STATus?	Queries the line status.	5-22
:COMMunicate:VERBoSe	Sets the response messages to full form or abbreviated form or queries the current setting.	5-22
:COMMunicate:WAIT	Waits for a specified extended event.	5-22
:COMMunicate:WAIT?	Creates a response that is returned when the specified event occurs.	5-23
CURSOR Group		
:CURSor?	Queries all settings related to cursor measurements.	5-27
:CURSor:TY?	Queries all settings related to the cursor in the T-Y display.	5-27
:CURSor:TY:DEGRee?	Queries all settings related to angle cursors.	5-27
:CURSor:TY:DEGRee:DX?	Queries the angle difference, ΔD , between angle cursors.	5-27
:CURSor:TY:DEGRee:DY?	Queries the angle difference, ΔV , between angle cursors.	5-27
:CURSor:TY:DEGRee:JUMP	Moves the angle cursor to the zoomed waveform.	5-27
:CURSor:TY:DEGRee:POSition<x>	Sets the position of the angle cursor or queries the current setting.	5-27
:CURSor:TY:DEGRee:REFerence<x>	Sets the position of the angle reference start point (Reference1) or the end point (Reference2) or queries the current setting.	5-27
:CURSor:TY:DEGRee:RVALue	Sets the angle reference width or queries the current setting.	5-28
:CURSor:TY:DEGRee:TRACe	Sets the waveform on which to use the angle cursor or queries the current setting.	5-28
:CURSor:TY:DEGRee:X<x>?	Queries the angle at the angle cursor.	5-28
:CURSor:TY:DEGRee:Y<x>?	Queries the voltage value at the angle cursor.	5-28
:CURSor:TY:HORIZontal?	Queries all settings related to H cursors.	5-28
:CURSor:TY:HORIZontal:DY?	Queries the Y-axis value between the H cursors.	5-28
:CURSor:TY:HORIZontal:POSition<x>	Sets the H cursor position or queries the current setting.	5-28
:CURSor:TY:HORIZontal:TRACe	Sets the waveform on which to use the H cursor or queries the current setting.	5-28
:CURSor:TY:HORIZontal:Y<x>?	Queries the Y-axis value of the H cursor.	5-28
:CURSor:TY:LOGic?	Sets/queries all settings related to the cursor in the logic T-Y display.	5-28
:CURSor:TY:LOGic:FORMat	Sets/queries the data format in the logic T-Y display.	5-29
:CURSor:TY:LOGic:ORDeR	Queries the bit order of logic in the T-Y display.	5-29
:CURSor:TY:MARKer?	Queries all settings related to marker cursors.	5-29
:CURSor:TY:MARKer:DX<x>?	Queries the X-axis value between the marker cursors.	5-29
:CURSor:TY:MARKer:DY<x>?	Queries the physical value of the Y-axis difference between the marker cursors.	5-29
:CURSor:TY:MARKer:M<x>?	Queries all settings related to the specified marker cursor.	5-29
:CURSor:TY:MARKer:M<x>:JUMP	Moves the marker cursor to the zoomed waveform.	5-29
:CURSor:TY:MARKer:M<x>:POSition<x>	Sets the X-axis position of the marker cursor or queries the current setting.	5-29
:CURSor:TY:MARKer:M<x>:TRACe	Sets the waveform on which to use the marker cursor or queries the current setting.	5-29
:CURSor:TY:MARKer:X<x>?	Queries the X-axis position of the marker cursor.	5-30
:CURSor:TY:MARKer:Y<x>?	Queries the Y-axis position of the marker cursor.	5-30
:CURSor:TY:TYPE	Sets the cursor type or queries the current setting.	5-30
:CURSor:TY:VERTical?	Queries all settings related to V cursors.	5-30
:CURSor:TY:VERTical:DX?	Queries the X-axis value between V cursors.	5-30
:CURSor:TY:VERTical:DY?	Queries the Y-axis value between V cursors.	5-30
:CURSor:TY:VERTical:JUMP	Moves the V cursor to the zoomed waveform.	5-30
:CURSor:TY:VERTical:PERDt?	Queries the $1/\Delta T$ value between V cursors.	5-30
:CURSor:TY:VERTical:POSition<x>	Sets the V cursor position or queries the current setting.	5-31
:CURSor:TY:VERTical:TRACe	Sets the waveform on which to use the V cursor or queries the current setting.	5-31

Command	Function	Page
:CURSor:TY:VERTical:X<x>?	Queries the X-axis position of the V cursor.	5-31
:CURSor:TY:VERTical:Y<y>?	Queries the Y-axis position of the V cursor.	5-31
:CURSor:XY?	Queries all settings related to the cursors in the X-Y display.	5-31
:CURSor:XY:HORizontal?	Queries all settings related to the H cursors in the X-Y display.	5-31
:CURSor:XY:HORizontal:DY?	Queries the Y-axis value of the H cursor of the X-Y display.	5-31
:CURSor:XY:HORizontal:POSition<x>	Sets the H cursor position of the X-Y display or queries the current setting.	5-31
:CURSor:XY:HORizontal:TRACe	Sets the waveform on which to use the H cursor in the X-Y display or queries the current setting.	5-31
:CURSor:XY:HORizontal:Y?	Queries the Y-axis value of the H cursor of the X-Y display.	5-32
:CURSor:XY:MARKer?	Queries all settings related to the marker cursors in the X-Y display.	5-32
:CURSor:XY:MARKer:POSition	Sets the X-axis position of the marker cursor in the X-Y display or queries the current setting.	5-32
:CURSor:XY:MARKer:T?	Queries the time value of the marker cursor in the X-Y display.	5-32
:CURSor:XY:MARKer:TRACe	Sets the waveform on which to use the marker cursor in the X-Y display or queries the current setting.	5-32
:CURSor:XY:MARKer:X?	Queries the X-axis position of the marker cursor in the X-Y display.	5-32
:CURSor:XY:MARKer:Y?	Queries the Y-axis position of the marker cursor in the X-Y display.	5-32
:CURSor:XY:TYPE	Sets the cursor type of the X-Y display or queries the current setting.	5-32
:CURSor:XY:VERTical?	Queries all settings related to V cursors in the X-Y display.	5-32
:CURSor:XY:VERTical:DX?	Queries the X-axis value between the V cursors in the X-Y display.	5-32
:CURSor:XY:VERTical:POSition<x>	Sets the V cursor position of the X-Y display or queries the current setting.	5-32
:CURSor:XY:VERTical:TRACe	Sets the waveform on which to use the V cursor in the X-Y display or queries the current setting.	5-32
:CURSor:XY:VERTical:X<x>?	Queries the X-axis position of the V cursor in the X-Y display.	5-33
DISPlay Group		
:DISPlay?	Queries all settings related to the display.	5-36
:DISPlay:ACCumulate?	Queries all settings related to the accumulation display.	5-36
:DISPlay:ACCumulate:COLor	Sets the color grade width or queries the current setting.	5-36
:DISPlay:ACCumulate:MODE	Sets the accumulation mode or queries the current setting.	5-36
:DISPlay:ACCumulate:PERsistence	Sets the accumulation time or queries the current setting.	5-36
:DISPlay:COLor	Sets whether to change the screen color using RGB or brightness or queries the current setting.	5-36
:DISPlay:RGB?	Queries all settings related to the screen color.	5-36
:DISPlay:RGB:MENU?	Queries all settings related to colors used in the menu.	5-36
:DISPlay:RGB:MENU:{BACK DIALog FOCus FORE LINE SElect SHADow}	Sets the color of the characters, background, dialog, and lines of the menu screen or queries the current setting.	5-37
:DISPlay:RGB:OTHerS?	Queries all settings related to the colors of other items.	5-37
:DISPlay:RGB:OTHerS:{CURSor GRID MARKer SNAP ZONE<x>}	Sets the color for cursors, grid, markers, and snapshot waveforms or queries the current setting.	5-37
:DISPlay:RGB:WAVeform?	Queries all settings related to the waveform colors.	5-37
:DISPlay:RGB:WAVeform:{CHANneL<x> BACK MATH<x> PODA PODB}	Sets the colors for waveform and computation channels or queries the current setting.	5-37
:DISPlay:FORMat	Sets the display format or queries the current setting.	5-37
:DISPlay:GRATicule	Sets the graticule type or queries the current setting.	5-37
:DISPlay:INTENSity?	Queries all settings related to the brightness of the displayed items.	5-37
:DISPlay:INTENSity:{CURSor MENU GRID SNAP WAVeform}	Sets the brightness of each display item or queries the current setting.	5-37
:DISPlay:INTERpolate	Sets the interpolation method or queries the current setting.	5-38
:DISPlay:MAPPing	Sets the mapping mode used to allocate the waveforms to the divided windows or queries the current setting.	5-38
:DISPlay:SMAPPing?	Queries the mapping of all waveforms to the divided windows.	5-38
:DISPlay:SMAPPing:{CHANneL<x> MATH<x>}	Maps waveforms to the divided windows or queries the current setting.	5-38

5.1 A List of Commands

Command	Function	Page
:DISPlay:SVALue	Turns the scale value display ON/OFF or queries the current setting.	5-38
:DISPlay:TLABel	Turns the display of waveform labels ON/OFF or queries the current setting.	5-38
:DISPlay:TRANslucent	Turns the popup menu's transparent mode ON/OFF or queries the current setting.	5-38
FILE Group		
:FILE?	Queries all settings related to the specified medium.	5-42
:FILE:DELEte:{ASCIi BINary BMP FLOat MEASure POSTscript SETup SNAP TIFF}[:EXECute]	Deletes various types of data files.	5-42
:FILE:DIRectory?	Queries all settings related to the current medium.	5-42
:FILE[:DIRectory]:CDIRectory	Changes the current directory.	5-42
:FILE[:DIRectory]:DRIVE	Selects the current medium.	5-42
:FILE[:DIRectory]:FILTer	Sets a filter or queries the current setting.	5-42
:FILE[:DIRectory]:FREE?	Queries the free space (number of bytes) on the current medium.	5-42
:FILE[:DIRectory]:MDIRectory	Creates a directory in the current directory.	5-42
:FILE[:DIRectory]:PATH?	Queries the current path.	5-42
:FILE:FORMat?	Queries all settings related to the formatting of the floppy disk.	5-42
:FILE:FORMat:EXECute	Formats the floppy disk.	5-43
:FILE:FORMat:TYPE	Sets the format type for the floppy disk or queries the current setting.	5-43
:FILE:LOAD?	Queries all settings related to file loading.	5-43
:FILE:LOAD:{BINary SETup SNAP}:ABORt	Aborts loading the data.	5-43
:FILE:LOAD:{BINary SETup SNAP}[:EXECute]	Loads the data.	5-43
:FILE:LOAD:PLANE	Sets the plane number of the snapshot waveform data or queries the current setting.	5-43
:FILE:LOAD:SNAP?	Queries all settings related to the loading of the snapshot waveform data.	5-43
:FILE:SAVE?	Queries all settings related to file saving.	5-43
:FILE:SAVE:ANAMing	Turns the auto naming function of files ON/OFF or queries the current setting.	5-43
:FILE:SAVE:{ASCIi BINary FLOat}?	Queries all settings related to various types of data.	5-43
:FILE:SAVE:{ASCIi BINary FLOat MEASure SETup SNAP}:ABORt	Aborts saving the data.	5-43
:FILE:SAVE:{ASCIi BINary FLOat MEASure SETup SNAP}[:EXECute]	Saves the file.	5-43
:FILE:SAVE:{ASCIi BINary FLOat}:HISTory	Sets the number of histories to save or queries the current setting.	5-43
:FILE:SAVE:{ASCIi BINary FLOat}:RANGe	Sets the range of data to be saved or queries the current setting.	5-44
:FILE:SAVE:{ASCIi BINary FLOat}:TRACe	Sets the waveform to be saved or queries the current setting.	5-44
:FILE:SAVE:BINary:COMPReSSion	Sets data compression on the waveform to be saved or queries the current setting.	5-44
:FILE:SAVE:COMMENT	Sets comments or queries the current setting.	5-44
:FILE:SAVE:NAME	Sets the name of the file to be saved or queries the current setting.	5-44
:FILE:UNLoad?	Queries all settings related to canceling the loaded data.	5-44
:FILE:UNLoad:{BINary SNAP}?	Queries all settings related to canceling of loaded data.	5-44
:FILE:UNLoad:{BINary SNAP}[:EXECute]	Clears the loaded data.	5-44
:FILE:UNLoad:BINary:TRACe	Sets the waveform to be cleared from the loaded data or queries the current setting.	5-44
:FILE:UNLoad:SNAP:PLANE	Sets the plane number to be cleared from the loaded data or queries the current setting.	5-44
GONogo Group		
:GONogo?	Queries all settings related to GO/NO-GO determination.	5-46
:GONogo:ABORt	Aborts GO/NO-GO determination.	5-46
:GONogo:ACTion?	Queries all settings related to the action to be performed when the result of the determination is NO-GO and also the determination criteria.	5-46
:GONogo:ACTion:BUZZer	Sets whether or not to sound an alarm when the determination is NO-GO or queries the current setting.	5-46
:GONogo:ACTion:HCOPY	Sets whether or not to make a hard copy to the built-in printer (option) when the determination results in NO-GO or queries the current setting.	5-47
:GONogo:ACTion:MAIL?	Queries all setting values for mail reports sent when NO-GO is determined.	5-47

Command	Function	Page
:GONogo:ACTion:MAIL:COUNT	Sets/queries the maximum number of e-mail is to be sent when the determination is NO-GO.	5-47
:GONogo:ACTion:MAIL:MODE	Sets/queries whether and e-mail report is sent when the determination is NO-GO.	5-47
:GONogo:ACTion:SAVE	Sets whether or not to save the NO-GO result to the medium or queries the current setting.	5-47
:GONogo:COUNT?	Queries the GO/NO-GO determination count.	5-47
:GONogo:EXECute	Executes GO/NO-GO determination.	5-47
:GONogo:LOGic	Sets the GO/NO-GO determination logic or queries the current setting.	5-47
:GONogo:MODE	Sets the GO/NO-GO determination type or queries the current setting.	5-47
:GONogo:NGCount?	Queries the number of NO-GO results.	5-47
:GONogo:PARAmeter?	Queries all settings related to the parameter determination.	5-47
:GONogo:PARAmeter:ITEM<x>?	Queries all settings related to waveform parameters.	5-48
:GONogo:PARAmeter:ITEM<x>:CAUSE?	Queries whether or not the waveform parameter is the cause of the NO-GO result.	5-48
:GONogo:PARAmeter:ITEM<x>:CONDition	Sets the criteria for each waveform parameter or queries the current setting.	5-48
:GONogo:PARAmeter:ITEM<x>:MODE	Turns the waveform parameter ON/OFF or queries the current setting.	5-48
:GONogo:PARAmeter:ITEM<x>:TRACe	Sets the waveform on which to use the waveform parameter or queries the current setting.	5-48
:GONogo:PARAmeter:ITEM<x>:TYPE?	Queries the waveform parameter and the upper and lower limits.	5-48
:GONogo:PARAmeter:ITEM<x>:TYPE:<parameter>	Sets the upper and lower limits of each waveform parameter or queries the current setting.	5-48
:GONogo:PARAmeter:ITEM<x>:VALue?	Queries the measured value of each waveform parameter.	5-48
:GONogo:SEQuence	Selects single or continuous action or queries the current setting.	5-49
:GONogo:STOPcount	Sets the number of waveform acquisitions on which to perform GO/NO-GO determination or queries the current setting.	5-49
:GONogo:TRANge	Sets the range over which to perform GO/NO-GO determination or queries the current setting.	5-49
:GONogo:WAIT?	Waits for the GO/NO-GO determination to complete with a timeout.	5-49
:GONogo:ZONE?	Queries all settings related to zone determination.	5-49
:GONogo:ZONE:EDIT<x>:EXIT	Exits from the edit menu of the zone for zone determination.	5-49
:GONogo:ZONE:EDIT<x>:PART	Edits a portion of the zone for zone determination.	5-49
:GONogo:ZONE:EDIT<x>:WHOLe	Edits the zone for zone determination.	5-49
:GONogo:ZONE:ZONE<x>?	Queries all settings related to zone determination of the specified zone.	5-50
:GONogo:ZONE:ZONE<x>:CAUSE?	Queries whether or not the specified zone for zone determination is the cause of the NO-GO result.	5-50
:GONogo:ZONE:ZONE<x>:CONDition	Sets the criteria for the zone for zone determination or queries the current setting.	5-50
:GONogo:ZONE:ZONE<x>:MODE	Turns ON/OFF the determination of the zone or queries the current setting.	5-50
:GONogo:ZONE:ZONE<x>:SEND	Sets the zone data specified for the determination zone or queries the current setting.	5-50
HCOPY Group		
:HCOPY?	Queries all settings related to the hard copy of the screen data.	5-53
:HCOPY:ABORt	Aborts data output or paper feeding.	5-53
:HCOPY:{BMP TIFF}?	Queries all settings related to the BMP or TIFF format.	5-53
:HCOPY:BMP:COMPReSSion	Enables compression on BMP format image data or queries the current setting.	5-53
:HCOPY:{BMP TIFF}:TONE	Sets the number of colors to use for the BMP or TIFF format or queries the current setting.	5-53
:HCOPY:CENTronics?	Queries all settings related to the output to the external printer.	5-53
:HCOPY:CENTronics:TONE	Sets the half tone on the external printer output or queries the current setting.	5-53
:HCOPY:CENTronics:TYPE	Sets the type of output commands to send to the external printer or queries the current setting.	5-53
:HCOPY:COMMeNt	Sets comments at the upper section of the screen or queries the current setting.	5-54
:HCOPY:DIReCtion	Sets the data output destination or queries the current setting.	5-54
:HCOPY:EXECute	Executes data output.	5-54

5.1 A List of Commands

Command	Function	Page
:HCOPY:FORMat	Sets the format of the image that is to be saved to the file or queries the current setting.	5-54
:HCOPY:NETPrint?	Queries all setting values involving output to network printers.	5-54
:HCOPY:NETPrint:TONE	Sets/queries halftones for output to network printers.	5-54
:HCOPY:NETPrint:TYPE	Sets/queries command types for output to network printers.	5-54
:HCOPY:PRINter?	Queries all settings related to the output to the built-in printer.	5-54
:HCOPY:PRINter:MAG	Sets the zoom rate to use during long copy or queries the current setting.	5-54
:HCOPY:PRINter:RANGe	Sets the output range during long copy or queries the current setting.	5-54
:HCOPY:PRINter:REPort	Sets whether or not to output additional information to the built-in printer or queries the current setting.	5-54
:HCOPY:PRINter:TYPE	Selects short copy or long copy or queries the current setting.	5-55
:HCOPY:SAVE?	Queries all settings related to file output.	5-55
:HCOPY:SAVE:ANAMing	Turns the auto naming function of file names ON/OFF or queries the current setting.	5-55
:HCOPY:SAVE:CDIRectory	Changes the directory in which to create the file.	5-55
:HCOPY:SAVE:DRIVE	Selects the medium on which to create the file.	5-55
:HCOPY:SAVE:NAME	Sets the name of the file to be created or queries the current setting.	5-55
HISTory Group		
:HISTory?	Queries all settings related to the history memory function.	5-57
:HISTory:ABORt	Aborts the search.	5-57
:HISTory:DISPlay	Sets the start/end number of the display record or queries the current setting.	5-57
:HISTory:EXECute	Executes zone search.	5-57
:HISTory:SMODe	Sets the history memory's search mode or queries the current setting.	5-57
:HISTory:DMODe	Sets whether to display one record or all records or queries the current setting.	5-57
:HISTory:PARAMeter?	Queries all settings related to the parameter search.	5-58
:HISTory:PARAMeter:ITEM<x>?	Queries all settings related to the specified parameter of the parameter search.	5-58
:HISTory:PARAMeter:ITEM<x>:CONDition	Sets the criteria for the specified parameter of the parameter search or queries the current setting.	5-58
:HISTory:PARAMeter:ITEM<x>:SOURce	Sets the trace on which to perform the parameter search of the specified parameter or queries the current setting.	5-58
:HISTory:PARAMeter:ITEM<x>:TYPE:<parameter>	Sets the upper and lower limits for the specified parameter of the parameter search or queries the current setting.	5-58
:HISTory:PARAMeter:ITEM<x>:VALue?	Queries the measured value of the specified parameter of the parameter search or queries the current setting.	5-58
:HISTory:PARAMeter:LOGic	Sets the determination logic of the parameter search or queries the current setting.	5-58
:HISTory:PARAMeter:TRANge	Sets the range over which to perform the parameter search or queries the current setting.	5-58
:HISTory:RECORD	Sets the target record or queries the current setting.	5-59
:HISTory:RECORD? MINimum	Queries the minimum record number.	5-59
:HISTory:TIME?	Queries the time of the specified record number.	5-59
:HISTory:ZONE?	Queries all settings related to zone search.	5-59
:HISTory:ZONE:EDIT<x>	Queries all settings related to all zone cursors.	5-59
:HISTory:ZONE:EDIT<x>:CONDition	Sets the search condition of the zone cursor or queries the current setting.	5-59
:HISTory:ZONE:EDIT<x>:HORizontal	Sets the vertical position of the zone cursor or queries the current setting.	5-59
:HISTory:ZONE:EDIT<x>:SOURce	Sets the waveform on which to use the zone cursor or queries the current setting.	5-59
:HISTory:ZONE:EDIT<x>:VERTical	Sets the horizontal position of the zone cursor or queries the current setting.	5-60
:HISTory:ZONE:LOGic	Sets the search logic between zone cursors or queries the current setting.	5-60
IMAGe Group		
:IMAGe?	Queries all settings related to the screen image data output.	5-61
:IMAGe:FORMat	Sets the output format of the screen image or queries the current setting.	5-61
:IMAGe:SEND?	Queries the screen image data.	5-61
:IMAGe:TONE	Sets the color tone of the output screen image data or queries the current setting.	5-61

Command	Function	Page
INITIALize Group		
:INITIALize:EXECute	Executes initialization.	5-61
:INITIALize:UNDO	Cancels the initialization that was executed.	5-61
LOGic Group (option)		
:LOGic?	Queries all settings related to the logic probe.	5-64
:LOGic:MODE	Turns the logic mode ON/OFF or queries the current setting.	5-64
:LOGic:{PODA PODB}?	Queries all settings related to the specified logic probe.	5-64
:LOGic:{PODA PODB}:ALL:DISPly	Turns the display of all the bits of the specified logic probe ON/OFF.	5-64
:LOGic:{PODA PODB}:{BIT0 BIT1 BIT2 BIT3 BIT4 BIT5 BIT6 BIT7}:DISPly	Displays the bits of the specified logic probe or queries the current setting.	5-64
:LOGic:{PODA PODB}:{BIT0 BIT1 BIT2 BIT3 BIT4 BIT5 BIT6 BIT7}:LABel	Sets a label to the bits of the specified logic probe or queries the current setting.	5-64
:LOGic:{PODA PODB}:THReshold?	Queries all settings related to the threshold level.	5-64
:LOGic:{PODA PODB}:THReshold:TYPE	Executes the threshold level preset or queries the current setting.	5-65
:LOGic:{PODA PODB}:THReshold:USERLeveL	Sets the user-defined threshold level or queries the current setting.	5-65
MATH Group		
:MATH<x>?	Queries all settings related to computations.	5-67
:MATH<x>:BINary?	Queries all settings related to binary computations.	5-67
:MATH<x>:BINary:{CHANneL<x> MATH<x>}	Sets the threshold level for each channel of the binary computation or queries the current setting.	5-67
:MATH<x>:DISPly	Sets whether or not to display computation waveforms or queries the current setting.	5-67
:MATH<x>:FFT?	Queries all settings related to the FFT.	5-67
:MATH<x>:FFT:POINt	Sets the number of points for the FFT or queries the current setting.	5-67
:MATH<x>:FFT:SP0int	Sets the start point of the FFT or queries the current setting.	5-67
:MATH<x>:FFT:WINDow	Sets the window function of the FFT or queries the current setting.	5-67
:MATH<x>:INTegral?	Queries all settings related to integration.	5-67
:MATH<x>:INTegral:SP0int	Sets the start point of the integration or queries the current setting.	5-68
:MATH<x>:LABel	Sets/queries the math's label.	5-68
:MATH<x>:OPERation	Sets the type of computation or queries the current setting.	5-68
:MATH<x>:SCALE?	Queries all settings related to scaling.	5-68
:MATH<x>:SCALE:MODE	Sets the scaling method or queries the current setting.	5-68
:MATH<x>:SCALE:VALue	Sets the upper and lower limits during manual scaling or queries the current setting.	5-68
:MATH<x>:SMOothing	Turns smoothing ON/OFF or queries the current setting.	5-68
:MATH<x>:UNIT	Sets the unit to be added to the computed result or queries the current setting.	5-68
MEASure Group		
:MEASure?	Queries all settings related to the automated measurement of waveform parameters.	5-71
:MEASure:{CHANneL<x> MATH<x>}?	Queries the ON/OFF state of every parameter of the waveform.	5-73
:MEASure:{CHANneL<x> MATH<x>}:ALL	Turns all the measurement parameters of the waveform ON/OFF at once.	5-73
:MEASure:{CHANneL<x> MATH<x>}:COPY	Copies the ON/OFF state of all measurement parameters of one waveform to all other waveforms.	5-73
:MEASure:{CHANneL<x> MATH<x>}:DELay?	Queries all settings related to the delay between waveform channels.	5-73
:MEASure:{CHANneL<x> MATH<x>}:DELay:MEASure?	Queries all settings related to the measured waveform when measuring the delay between channels.	5-73
:MEASure:{CHANneL<x> MATH<x>}:DELay:MEASure:COUNT	Sets the edge count of the measured waveform when measuring the delay between channels or queries the current setting.	5-73
:MEASure:{CHANneL<x> MATH<x>}:DELay:MEASure:SLOPe	Sets the slope of the measured waveform when measuring the delay between channels or queries the current setting.	5-74
:MEASure:{CHANneL<x> MATH<x>}:DELay:REFerence?	Queries all settings related to the reference waveform when measuring the delay between channels.	5-74

5.1 A List of Commands

Command	Function	Page
:MEASure:{CHANnel<x> MATH<x>}:DELay:REFerence:COUNT	Sets the edge count of the reference waveform when measuring the delay between channels or queries the current setting.	5-74
:MEASure:{CHANnel<x> MATH<x>}:DELay:REFerence:SLOPe	Sets the slope of the reference waveform when measuring the delay between channels or queries the current setting.	5-74
:MEASure:{CHANnel<x> MATH<x>}:DELay:REFerence:SOURce	Sets whether or not to set the reference to the trigger point or the waveform when measuring the delay between channels or queries the current setting.	5-74
:MEASure:{CHANnel<x> MATH<x>}:DELay:REFerence:TRACe	Sets the reference trace when measuring the delay between channels or queries the current setting.	5-74
:MEASure:{CHANnel<x> MATH<x>}:DELay:STATe	Turns the delay parameter ON/OFF and sets the display format or queries the current setting.	5-75
:MEASure:{CHANnel<x> MATH<x>}:DPRoximal?	Queries all settings related to distal, mesial, and proximal values.	5-75
:MEASure:{CHANnel<x> MATH<x>}:DPRoximal:MODE	Sets the distal, mesial, and proximal mode or queries the current setting.	5-75
:MEASure:{CHANnel<x> MATH<x>}:DPRoximal:PERCent	Sets the distal, mesial, and proximal points or queries the current setting. (%)	5-75
:MEASure:{CHANnel<x> MATH<x>}:DPRoximal:UNIT	Sets the distal, mesial, and proximal points or queries the current setting. (voltage)	5-75
:MEASure:{CHANnel<x> MATH<x>}:METHod	Sets the High and Low points or queries the current setting.	5-75
:MEASure:{CHANnel<x> MATH<x>}:<parameter>?	Queries all settings related to the parameters of each waveform.	5-76
:MEASure:{CHANnel<x> MATH<x>}:<parameter>:COUNT?	Queries the number of statistical processing of each parameter.	5-76
:MEASure:{CHANnel<x> MATH<x>}:<parameter>:{MAXimum MEAN MINimum SDEVIation}?	Queries the statistics of each parameter.	5-76
:MEASure:{CHANnel<x> MATH<x>}:<parameter>:STATe	Turns the parameter ON/OFF or queries the current setting. (one by one)	5-76
:MEASure:{CHANnel<x> MATH<x>}:<parameter>:VALue?	Queries the value of the automated measurement of each parameter.	5-77
:MEASure:CYCLe?	Queries all settings related to the periodic statistical processing of the automated measurement of waveform parameters.	5-77
:MEASure:CYCLe:ABORt	Aborts the periodic statistical processing of the automated measurement of waveform parameters.	5-77
:MEASure:CYCLe:EXECute	Executes the periodic statistical processing of the automated measurement of waveform parameters.	5-77
:MEASure:CYCLe:TRACe	Sets the waveform used to determine the period for the periodic statistical processing of automated measurement of waveform parameters or queries the current setting.	5-77
:MEASure:HISTory:ABORt	Aborts the statistical processing within the historical data of the automated measurement of waveform parameters.	5-77
:MEASure:HISTory:EXECute	Executes the statistical processing within the historical data of the automated measurement of waveform parameters.	5-77
:MEASure:MODE	Turns the automated measurement of waveform parameters ON/OFF and sets the statistical processing or queries the current setting.	5-77
:MEASure:TRANge	Sets the measurement range or queries the current setting.	5-77
:MEASure:WAIT?	Waits for the completion of the automated measurement with a timeout.	5-78
PHASe Group		
:PHASe?	Queries all settings related to the phase shift function.	5-78
:PHASe:CHANnel<x>	Sets the amount of phase shift of the waveform or queries the current setting.	5-78
:PHASe:MODE	Turns the phase shift function ON/OFF or queries the current setting.	5-78

Command	Function	Page
PRESet Group		
:PRESet?	Queries all settings related to the preset function.	5-80
:PRESet:ALL:PROBe	Sets the preset values of the probe attenuation of all channels.	5-80
:PRESet:ALL:TYPE	Sets preset values to all channels.	5-80
:PRESet:ALL:USERdefine:LEVeL	Sets the preset trigger level of all channels.	5-80
:PRESet:ALL:USERdefine:OFFSet	Sets the preset offset voltage of all channels.	5-80
:PRESet:ALL:USERdefine:VDIV	Sets the preset V/div value of all channels.	5-80
:PRESet:CHANneL<x>?	Queries the preset information of an arbitrary channel.	5-80
:PRESet:CHANneL<x>:PROBe	Sets the preset probe attenuation of an arbitrary channel or queries the current setting.	5-80
:PRESet:CHANneL<x>:TYPE	Sets the preset type to the channel or queries the current setting.	5-80
:PRESet:CHANneL<x>:USERdefine?	Queries all preset values when using User preset.	5-80
:PRESet:CHANneL<x>:USERdefine:LEVeL	Sets the preset trigger level or queries the current setting.	5-80
:PRESet:CHANneL<x>:USERdefine:OFFSet	Sets the preset offset voltage or queries the current setting.	5-81
:PRESet:CHANneL<x>:USERdefine:VDIV	Sets the preset V/div value or queries the current setting.	5-81
:PRESet:EXECute	Executes preset.	5-81
:PRESet:SELEctch	Sets the channel to be preset or queries the current setting.	5-81
SEARCh Group		
:SEARCh?	Queries all settings related to the search function.	5-86
:SEARCh:ASCROll?	Queries all settings related to the auto scroll function.	5-86
:SEARCh:ASCROll:DIRectioN	Sets the direction for moving the zoom box of the auto scroll or queries the current setting.	5-86
:SEARCh:ASCROll:SPEEd	Sets the speed for moving the zoom box of the auto scroll or queries the current setting.	5-86
:SEARCh:EDGE?	Queries all settings related to the edge search.	5-86
:SEARCh:EDGE:COUNT	Sets the edge search count or queries the current setting.	5-86
:SEARCh:EDGE:HYSTEResis	Sets the hysteresis on the edge search level or queries the current setting.	5-86
:SEARCh:EDGE:LEVEL	Sets the edge search level or queries the current setting.	5-87
:SEARCh:EDGE:SLOPe	Sets the slope or queries the current setting.	5-87
:SEARCh:EDGE:SOURce	Sets the waveform on which to perform the edge search or queries the current setting.	5-87
:SEARCh:EXECute	Executes the search.	5-87
:SEARCh:MLINKage	Turns the link ON/OFF when changing the zoom rate or queries the current setting.	5-87
:SEARCh:MAG<x>	Sets the zoom rate of the zoom window or queries the current setting.	5-87
:SEARCh:PLINKage	Turns the link ON/OFF when moving the zoom box or queries the current setting.	5-87
:SEARCh:POSitiON<x>	Sets the zoom box position or queries the current setting.	5-87
:SEARCh:PPATtern?	Queries all settings related to the parallel pattern search.	5-88
:SEARCh:PPATtern:{CHANneL<x> MATH<x>}?	Queries all settings related to the waveform of the parallel pattern search.	5-88
:SEARCh:PPATtern:{CHANneL<x> MATH<x>}:HYSTEResis	Sets the hysteresis on the waveform on which to perform the parallel pattern search or queries the current setting.	5-88
:SEARCh:PPATtern:{CHANneL<x> MATH<x>}:LEVeL	Sets the search level on the waveform on which to perform the parallel pattern search or queries the current setting.	5-88
:SEARCh:PPATtern:{CHANneL<x> MATH<x>}:PATTern	Sets the search pattern on the waveform on which to perform the parallel pattern search or queries the current setting.	5-88
:SEARCh:PPATtern:CLOCK?	Queries all settings related to the clock channel of the parallel pattern search.	5-88
:SEARCh:PPATtern:CLOCK:HYSTEResis	Sets the hysteresis on the clock channel of the parallel pattern search or queries the current setting.	5-89
:SEARCh:PPATtern:CLOCK:LEVeL	Sets the search level of the clock channel of the parallel pattern search or queries the current setting.	5-89
:SEARCh:PPATtern:CLOCK:SLOPe	Sets the slope of the clock channel of the parallel pattern search or queries the current setting.	5-89

5.1 A List of Commands

Command	Function	Page
:SEARch:PPATtern:CLOCK:SOURce	Sets the waveform used as the clock channel of the parallel pattern search or queries the current setting.	5-89
:SEARch:PPATtern:LOGic?	Queries all settings related to the logic channel of the parallel pattern search.	5-89
:SEARch:PPATtern:LOGic:{A0 A1 A2 A3 A4 A5 A6 A7 B0 B1 B2 B3 B4 B5 B6 B7}	Sets the bit condition of the clock channel of the parallel pattern search or queries the current setting.	5-89
:SEARch:SElect	Queries the storage number of the found position and the position that is stored in the specified storage number.	5-89
:SEARch:SElect? MAXimum	Queries the maximum storage number of the found positions.	5-89
:SEARch:SPATtern?	Queries all settings related to the serial pattern search.	5-90
:SEARch:SPATtern:BIT	Sets the bit of the logic waveform to be searched or queries the current setting.	5-90
:SEARch:SPATtern:CLEar	Clears all search patterns (Don't care).	5-90
:SEARch:SPATtern:CLOCK?	Queries all settings related to the clock channel.	5-90
:SEARch:SPATtern:CLOCK:HYSteresis	Sets the hysteresis of the clock channel or queries the current setting.	5-90
:SEARch:SPATtern:CLOCK:LEVEl	Sets the level of the clock channel or queries the current setting.	5-90
:SEARch:SPATtern:CLOCK:SLOPe	Sets the slope of the clock channel or queries the current setting.	5-90
:SEARch:SPATtern:CLOCK:SOURce	Sets the clock channel source waveform or queries the current setting.	5-90
:SEARch:SPATtern:INTerval	Sets the search interval of the waveform to be searched or queries the current setting.	5-90
:SEARch:SPATtern:LEVEl	Sets the upper and lower limits of the search level of the waveform to be searched or queries the current setting.	5-91
:SEARch:SPATtern:PATTern<x>	Sets the search pattern or queries the current setting.	5-91
:SEARch:SPATtern:PSElect	Selects the pattern number to which the search pattern is to be set or queries the current setting.	5-91
:SEARch:SPATtern:SOURce	Sets the waveform on which to perform the serial pattern search or queries the current setting.	5-91
:SEARch:SPOint	Sets the start position of the search or queries the current setting.	5-91
:SEARch:TWINdow	Sets the zoom window in which to display the sections that are found or queries the current setting.	5-91
:SEARch:TYPE	Sets the search type or queries the current setting.	5-91
:SEARch:WIDTH?	Queries all settings related to the pulse width search.	5-92
:SEARch:WIDTH:HYSteresis	Sets the hysteresis on the pulse width search level or queries the current setting.	5-92
:SEARch:WIDTH:LEVEl	Sets the pulse width search level or queries the current setting.	5-92
:SEARch:WIDTH:POLarity	Sets the pulse width search level's polarity or queries the current setting.	5-92
:SEARch:WIDTH:SOURce	Sets the search source for the pulse width search or queries the current setting.	5-92
:SEARch:WIDTH:TIME<x>	Sets the pulse width when using the pulse width search or queries the current setting.	5-92
:SEARch:WIDTH:TYPE	Sets the search type when using the pulse width search or queries the current setting.	5-92
SNAP Group		
:SNAP	Executes snap shot.	5-93
SSTART Group		
:SSTART?	Starts the data acquisition with the trigger mode set to single.	5-93
START Group		
:START	Starts waveform acquisition.	5-93
STATus Group		
:STATus?	Queries all settings related to the communication status function.	5-94
:STATus:CONDition?	Queries the status register.	5-94
:STATus:EESE	Sets the extended event enable register or queries the current setting.	5-94
:STATus:EESR?	Queries the extended event register and clears the register.	5-94
:STATus:ERRor?	Queries the error code and the details of the error.	5-95
:STATus:FILTer<x>	Sets the transition filter or queries the current setting.	5-95
:STATus:QENable	Sets whether or not to store messages other than errors in the error queue or queries the current setting.	5-95

Command	Function	Page
:STATus:QMESSage	Sets whether or not to attach message information to the response to the " :STATus:ERRor?" query or queries the current setting.	5-95
:STATus:SPOLL?	Executes serial polling.	5-95
STOP Group		
:STOP	Stops the waveform acquisition.	5-95
SYSTEM Group		
:SYSTem?	Queries all settings related to the system.	5-97
:SYSTem:BATTery?	Queries the lithium battery level.	5-97
:SYSTem:CLICk	Turns the click sound ON/OFF or queries the current setting.	5-97
:SYSTem:CLOCK?	Queries all settings related to date and time.	5-97
:SYSTem:CLOCK:DATE	Sets the date or queries the current setting.	5-97
:SYSTem:CLOCK:MODE	Turns the date and time display ON/OFF or queries the current setting.	5-97
:SYSTem:CLOCK:TIME	Sets the time or queries the current setting.	5-97
:SYSTem:LANGUage	Sets the message language or queries the current setting.	5-97
:SYSTem:LCD?	Queries all settings related to the LCD monitor.	5-97
:SYSTem:LCD:AUTO?	Queries all settings related to the LCD backlight auto-off function.	5-97
:SYSTem:LCD:AUTO:MODE	Turns the LCD backlight ON/OFF or queries the current setting.	5-97
:SYSTem:LCD:AUTO:TIME	Sets the time for the LCD backlight auto-off function or queries the current setting.	5-97
:SYSTem:LCD:BRIGhtness	Sets the brightness of the LCD monitor or queries the current setting.	5-98
:SYSTem:LCD:MODE	Turns the LCD backlight ON/OFF or queries the current setting.	5-98
:SYSTem:OCANcel(Offset Cancel)	Sets whether or not to reflect the offset voltage to the measured results or the computed results or queries the current setting.	5-98
:SYSTem:OVERview	Displays the system information.	5-98
:SYSTem:SCSI?	Queries all settings related to the SCSI-ID.	5-98
:SYSTem:SCSI:INITialize	Initializes SCSI-related settings.	5-98
:SYSTem:SCSI:OWNid	Sets the SCSI-ID of the instrument or queries the current setting.	5-98
:SYSTem:TGAte	Sets the external trigger gate or queries the current setting.	5-98
TIMEbase Group		
:TIMEbase?	Queries all settings related to the time base.	5-99
:TIMEbase:SOURce	Sets the time base or queries the current setting.	5-99
:TIMEbase:SRATE?	Queries the sample rate.	5-99
:TIMEbase:TDIV	Sets the T/div value or queries the current setting.	5-99
TRIGger Group		
:TRIGger?	Queries all settings related to the trigger.	5-104
:TRIGger:ABN?	Queries all settings related to the A→B (n) trigger.	5-104
:TRIGger:ABN:COUNT	Sets the number of times condition B is to be met or queries the current setting.	5-104
:TRIGger:ACTion?	Queries all settings related to the action-on-trigger.	5-104
:TRIGger:ACTion:ACQCount	Sets the number of times to perform the action for the action-on-trigger or queries the current setting.	5-104
:TRIGger:ACTion:BUZZer	Sets whether or not to sound an alarm when the action is enabled or queries the current setting.	5-105
:TRIGger:ACTion:HCOpy	Sets whether or not to make a hard copy of the screen image data when the action is enabled or queries the current setting.	5-105
:TRIGger:ACTion:MAIL?	Queries all the setting values for mail reports sent as an ACTION.	5-105
:TRIGger:ACTion:MAIL:COUNT	Sets/queries the limit for the number of reports that are sent as an ACTION.	5-105
:TRIGger:ACTion:MAIL:MODE	Sets/queries whether mail reports are sent as an ACTION.	5-105
:TRIGger:ACTion:SAVE	Sets whether or not to save the waveform data when the action is enabled or queries the current setting.	5-105
:TRIGger:ACTion:START	Starts action-on-trigger.	5-105
:TRIGger:ACTion:STOP	Aborts action-on-trigger.	5-105
:TRIGger:ADB?	Queries all settings related to the A Delay B trigger.	5-105
:TRIGger:ADB:DELay	Sets the delay time of condition B or queries the current setting.	5-105
:TRIGger:ATRigger?	Queries all settings related to condition A.	5-105

5.1 A List of Commands

Command	Function	Page
:TRIGger:ATriGger:CHANnel<x>	Sets the condition of each channel for condition A or queries the current setting.	5-106
:TRIGger:ATriGger:CONDition	Sets the conditions for condition A or queries the current setting.	5-106
:TRIGger:BTriGger?	Queries all settings related to condition B.	5-106
:TRIGger:BTriGger:CHANnel<x>	Sets the condition of each channel for condition B or queries the current setting.	5-106
:TRIGger:BTriGger:CONDition	Sets the conditions for condition B or queries the current setting.	5-106
:TRIGger:DELay	Sets the delay or queries the current setting.	5-106
:TRIGger:HOLDoff?	Queries all settings related to the hold off.	5-106
:TRIGger:HOLDoff:TIME	Sets the hold off time or queries the current setting.	5-106
:TRIGger:LOGic?	Queries all settings related to logic trigger edge.	5-106
:TRIGger:LOGic:{A0 A1 A2 A3 A4 A5 A6 A7 B0 B1 B2 B3 B4 B5 B6 B7}	Sets the condition of each bit or queries the current setting.	5-107
:TRIGger:LOGic:CLOCK?	Queries all settings related to the clock channel.	5-107
:TRIGger:LOGic:CLOCK:SLOPe	Sets the slope of the clock channel or queries the current setting.	5-107
:TRIGger:LOGic:CLOCK:SOURce	Sets the clock channel or queries the current setting.	5-107
:TRIGger:LOGic:CONDition	Sets the trigger condition or queries the current setting.	5-107
:TRIGger:MODE	Sets the trigger mode or queries the current setting.	5-107
:TRIGger:OR?	Queries all settings related to the OR trigger.	5-107
:TRIGger:OR:CHANnel<x>	Sets the edge of each channel or queries the current setting.	5-107
:TRIGger:OR:WINDow	Turns the window ON/OFF or queries the current setting.	5-108
:TRIGger:PATTern?	Queries all settings related to the pattern trigger.	5-108
:TRIGger:PATTern:CHANnel<x>	Sets the state of each channel or queries the current setting.	5-108
:TRIGger:PATTern:CLOCK?	Queries all settings related to the clock channel.	5-108
:TRIGger:PATTern:CLOCK:SLOPe	Sets the slope of the clock channel or queries the current setting.	5-108
:TRIGger:PATTern:CLOCK:SOURce	Sets the clock channel or queries the current setting.	5-108
:TRIGger:PATTern:CONDition	Sets the trigger condition or queries the current setting.	5-108
:TRIGger:POSition	Sets the trigger position or queries the current setting.	5-108
:TRIGger:SCount	Sets the number of times the trigger is activated when the trigger mode is set to Single (N) or queries the current setting.	5-108
:TRIGger[:SIMPLe]?	Queries all settings related to the simple trigger.	5-108
:TRIGger[:SIMPLe]:COUPLing	Sets the trigger coupling or queries the current setting.	5-109
:TRIGger[:SIMPLe]:HFRejection	Turns the low-pass filter (HF rejection) ON/OFF or queries the current setting.	5-109
:TRIGger[:SIMPLe]:HYSTeresis	Sets the hysteresis on the search level or queries the current setting.	5-109
:TRIGger[:SIMPLe]:LEVeL	Sets the trigger level of the specified channel or queries the current setting.	5-109
:TRIGger[:SIMPLe]:PROBe	Sets the probe when the trigger source is set to "EXTernal" or queries the current setting.	5-109
:TRIGger[:SIMPLe]:SLOPe	Sets the trigger slope of the specified channel or queries the current setting.	5-109
:TRIGger[:SIMPLe]:SOURce	Sets the trigger source or queries the current setting.	5-109
:TRIGger:SOURce?	Queries all settings related to the trigger source for the enhanced trigger.	5-110
:TRIGger:SOURce:CHANnel<x>?	Queries all settings related to the trigger source of the specified channel.	5-110
:TRIGger:SOURce:CHANnel<x>:COUPLing	Sets the trigger coupling of each channel or queries the current setting.	5-110
:TRIGger:SOURce:CHANnel<x>:HFRejection	Sets the low-pass filter or queries the current setting.	5-110
:TRIGger:SOURce:CHANnel<x>:HYSTeresis	Sets the hysteresis on the search level or queries the current setting.	5-110
:TRIGger:SOURce:CHANnel<x>:LEVeL	Sets the trigger level of each channel or queries the current setting.	5-110
:TRIGger:SOURce:CHANnel<x>:WIDTh	Sets the width of the window trigger or queries the current setting.	5-110
:TRIGger:TV?	Queries all settings related to the TV trigger.	5-111
:TRIGger:TV:FIELD	Sets the field or queries the current setting.	5-111
:TRIGger:TV:FRAME	Sets the frame skip function or queries the current setting.	5-111
:TRIGger:TV:LEVeL	Sets the trigger level or queries the current setting.	5-111
:TRIGger:TV:LINE	Sets the line or queries the current setting.	5-111
:TRIGger:TV:POLarity	Sets the input polarity or queries the current setting.	5-111
:TRIGger:TV:TYPE	Sets the trigger input type or queries the current setting.	5-111
:TRIGger:TYPE	Sets the trigger type or queries the current setting.	5-111
:TRIGger:WIDTh?	Queries all settings related to the pulse width trigger.	5-111
:TRIGger:WIDTh:CHANnel<x>	Sets the trigger condition of each channel or queries the current setting.	5-111
:TRIGger:WIDTh:CONDition	Sets the trigger condition or queries the current setting.	5-112


Command	Function	Page
:TRIGger:WIDTh:TIME<x>	Sets the pulse width or queries the current setting.	5-112
:TRIGger:WIDTh:TLINKage	Turns the link ON/OFF when changing the pulse width for the pulse width trigger or queries the current setting.	5-112
:TRIGger:WIDTh:TYPE	Sets the trigger type or queries the current setting.	5-112
:TRIGger:WIDTh:WINDow	Turns the window ON/OFF or queries the current setting.	5-112
WAVeform Group		
:WAVeform?	Queries all information related to the waveform data.	5-113
:WAVeform:BITS?	Queries the bit length of the specified waveform data.	5-113
:WAVeform:BYTeorder	Sets the transmission byte order or queries the current setting.	5-114
:WAVeform:DATaselect	Sets whether to use the ACQ data or P-P data when querying the waveform data or queries the current setting.	5-114
:WAVeform:END	Sets which point of the specified waveform is to be the last data point or queries the current setting.	5-114
:WAVeform:FORMat	Sets the transmission data format or queries the current setting.	5-114
:WAVeform:LENGth?	Queries the total data length of the specified waveform.	5-114
:WAVeform:OFFSet?	Queries the offset voltage of the specified waveform.	5-114
:WAVeform:RANGe?	Queries the range that is used when converting the waveform specified by the ":WAVeform:TRACe" command to physical values.	5-114
:WAVeform:RECORD	Sets the target record number of the waveform group or queries the current setting.	5-114
:WAVeform:RECORD? MINimum	Queries the smallest record number.	5-114
:WAVeform:SEND?	Queries the specified waveform data.	5-115
:WAVeform:SIGN?	Queries the existence of a sign.	5-115
:WAVeform:SRATE?	Queries the sample rate of the specified record.	5-115
:WAVeform:START	Sets which point of the specified waveform is to be the start data point or queries the current setting.	5-115
:WAVeform:TRACe	Sets the target waveform of the WAVeform group or queries the current setting.	5-115
:WAVeform:TRIGger?	Queries the trigger position of the specified record.	5-115
:WAVeform:TYPE?	Queries the acquisition mode of the specified waveform.	5-115
XY Group		
:XY<x>?	Queries all settings related to the X-Y display.	5-116
:XY<x>:DISPLay	Sets whether or not to display the X-Y waveform or queries the current setting.	5-116
:XY<x>:MODE	Sets the display mode or queries the current setting.	5-116
:XY:TRANge	Sets the range of the T-Y waveform to be used in the X-Y display or queries the current setting.	5-116
:XY<x>:XAXis	Sets whether or not use the same channel for the X-axis for XY1 and XY2.	5-117
:XY<x>:XTRace	Sets the channel that is to be assigned to the X-axis or queries the current setting.	5-117
:XY<x>:YTRace	Sets the channel that is to be assigned to the Y-axis or queries the current setting.	5-117
ZOOM Group		
:ZOOM?	Queries all settings related to the zooming of the waveform.	5-119
:ZOOM:ALLOcation?	Queries all settings related to the waveform being zoomed.	5-119
:ZOOM:ALLOcation:ALL	Selects all waveforms to be zoomed.	5-119
:ZOOM:ALLOcation:{CHANnel<x> MATH<x>}	Sets the waveform to be zoomed or queries the current setting.	5-119
:ZOOM:ALLOcation:{PODA PODB}	Sets the pod to be zoomed or queries the current setting.	5-119
:ZOOM:FITMeasure	Changes the range of the automated measurement of waveform parameters to the ends of the zoom box.	5-119
:ZOOM:FORMat	Sets the zoom waveform display format or queries the current setting.	5-119
:ZOOM:MLINKage	Turns the zoom rate link ON/OFF or queries the current setting.	5-119
:ZOOM:MAG<x>	Sets the zoom rate of the zoomed waveform display or queries the current setting.	5-119
:ZOOM:MODE	Sets the zoomed waveform display mode or queries the current setting.	5-119
:ZOOM:PLINKage	Turns the link ON/OFF when moving the zoom box or queries the current setting.	5-119
:ZOOM:POSition<x>	Sets the zoom box position or queries the current setting.	5-119

5.1 A List of Commands

Command	Function	Page
Common Command Group		
*CAL?	Executes calibration and queries the result.	5-120
*CLS	Clears the standard event register, extended event register, and error queue.	5-120
*ESE	Sets the standard event enable register or queries the current setting.	5-120
*ESR?	Queries the standard event register and clears the register.	5-121
*IDN?	Queries the instrument model.	5-121
*LRN?	Queries all current settings of the command group.	5-121
*OPC	Sets the OPC event after the completion of the specified overlap command.	5-122
*OPC?	Creates a response upon the completion of the specified overlap command.	5-122
*OPT?	Queries the installed options.	5-122
*PSC	Sets whether or not to clear the registers at power up or queries the current setting.	5-122
*RST	Initializes the command group's settings.	5-122
*SRE	Sets the service request enable register or queries the current setting.	5-122
*STB?	Queries the status byte register.	5-122
*TST?	Executes self test and queries the result.	5-123
*WAI	Holds the subsequent command until the completion of the specified overlap operation.	5-123

5.2 ACQuire Group

The commands in the ACQuire group are used for making settings and queries about acquisition. This allows you to make the same settings that you can make using the ACQ key on the front panel.

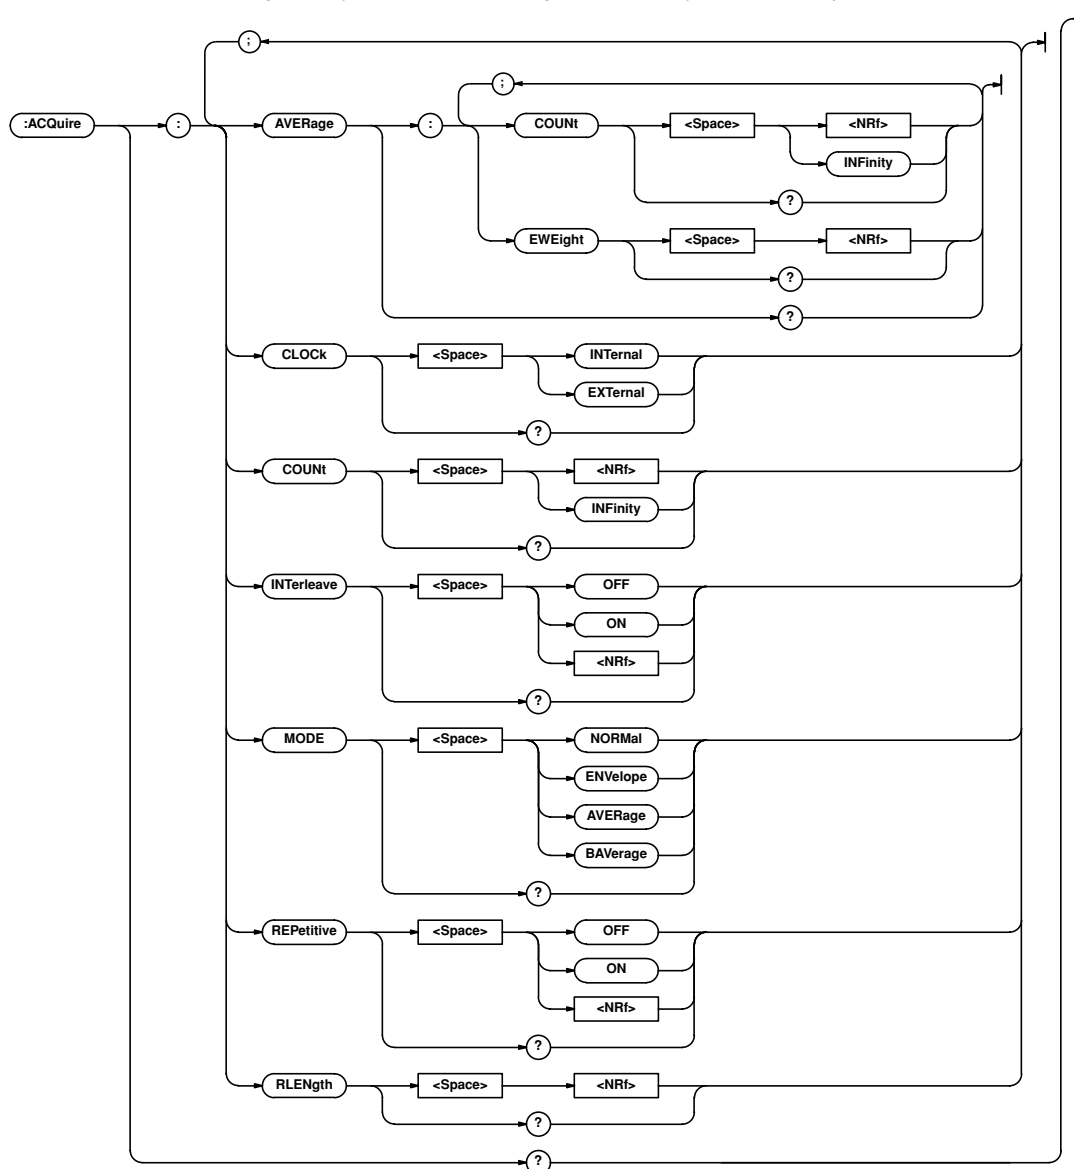

:ACQuire?

Function Queries all the acquisition settings.
 Syntax :ACQuire?
 Example :ACQUIRE?→:ACQUIRE:RLENGTH 1000;
 MODE NORMAL;AVERAGE:COUNT INFINITY;
 EWEIGHT 16;:ACQUIRE:COUNT INFINITY;
 INTERLEAVE 0;REPETITIVE 0;CLOCK INTERNAL

:ACQuire:AVERage?

Function Queries all the averaging and acquisition count settings.
 Syntax :ACQuire:AVERage?
 Example :ACQUIRE:AVERAGE?→:ACQUIRE:AVERAGE:
 COUNT INFINITY;EWEIGHT 16

:ACQuire:AVERage:COUNT

Function Sets/queries the acquisition count in averaging mode.
 Syntax :ACQuire:AVERage:COUNT {<NRf>|INFINITY}
 :ACQuire:AVERage:COUNT?
 <NRf>=2 to 65536 (in steps of 2ⁿ)
 Example :ACQUIRE:AVERAGE:COUNT INFINITY
 :ACQUIRE:AVERAGE:COUNT?→:ACQUIRE:
 AVERAGE:COUNT INFINITY

5.2 ACQUIRE Group/5.3 ASETUP Group

:ACQUIRE:AVERAGE:EWEIGHT (Exponent WEIGHT)

Function Sets/queries the average weight for infinite averaging mode.

Syntax :ACQUIRE:AVERAGE:EWEIGHT {<NRF>}
:ACQUIRE:AVERAGE:EWEIGHT?
<NRF>=2 to 256 (in steps of 2ⁿ)

Example :ACQUIRE:AVERAGE:EWEIGHT 16
:ACQUIRE:AVERAGE:EWEIGHT?→:ACQUIRE:AVERAGE:EWEIGHT 16

:ACQUIRE:CLOCK

Function Sets/queries the time base.

Syntax :ACQUIRE:{INTERNAL|EXTERNAL}
:ACQUIRE:CLOCK?
:ACQUIRE:CLOCK INTERNAL

Example :ACQUIRE:CLOCK INTERNAL
:ACQUIRE:CLOCK?→:ACQUIRE:CLOCK INTERNAL

:ACQUIRE:COUNT

Function Sets the number of waveform acquisitions during normal mode, envelope mode, and box average or queries the current setting.

Syntax :ACQUIRE:COUNT {<NRF>|INFINITY}
:ACQUIRE:COUNT?
<NRF>=2 to 65536

Example :ACQUIRE:COUNT INFINITY
:ACQUIRE:COUNT?→:ACQUIRE:COUNT INFINITY

:ACQUIRE:INTERLEAVE

Function Turns the interleave mode ON/OFF or queries the current setting.

Syntax :ACQUIRE:INTERLEAVE {<Boolean>}
:ACQUIRE:INTERLEAVE?

Example :ACQUIRE:INTERLEAVE ON
:ACQUIRE:INTERLEAVE?→:ACQUIRE:INTERLEAVE ON

:ACQUIRE:MODE

Function Sets/queries the acquisition mode.

Syntax :ACQUIRE:MODE{AVERAGE|BAVERAGE|ENVELOPE|NORMAL}
:ACQUIRE:MODE?

Example :ACQUIRE:MODE NORMAL
:ACQUIRE:MODE?→:ACQUIRE:MODE NORMAL

:ACQUIRE:REPETITIVE

Function Turns the repetitive sampling mode ON/OFF or queries the current setting.

Syntax :ACQUIRE:REPETITIVE {<Boolean>}
:ACQUIRE:REPETITIVE?

Example :ACQUIRE:REPETITIVE OFF
:ACQUIRE:REPETITIVE?→:ACQUIRE:REPETITIVE 0

:ACQUIRE:RLENGTH

 
Function Sets/queries the record length.

Syntax :ACQUIRE:RLENGTH {<NRF>}
:ACQUIRE:RLENGTH?
<NRF>= 1000 to 8000000 (DL7100)
1000 to 16000000 (DL7200)

Example :ACQUIRE:RLENGTH 1000
:ACQUIRE:RLENGTH?→:ACQUIRE:RLENGTH 1000

5.3 ASETUP Group

The commands in the ASETUP group are used for setting and querying auto-setup. This allows you to make the same settings and queries that you can make using the AUTO SETUP key on the front panel.



:ASETUP:EXECUTE

Function Executes auto-setup.

Syntax :ASETUP:EXECUTE

Example :ASETUP:EXECUTE

:ASETUP:UNDO


Function Cancels auto set-up settings.

Syntax :ASETUP:UNDO

Example :ASETUP:UNDO

5.4 CALibrate Group

The commands in the CALibrate group are used for setting and querying the calibration. This allows you to make the same settings that you can make using the Calibration menu of the MISC key on the front panel.

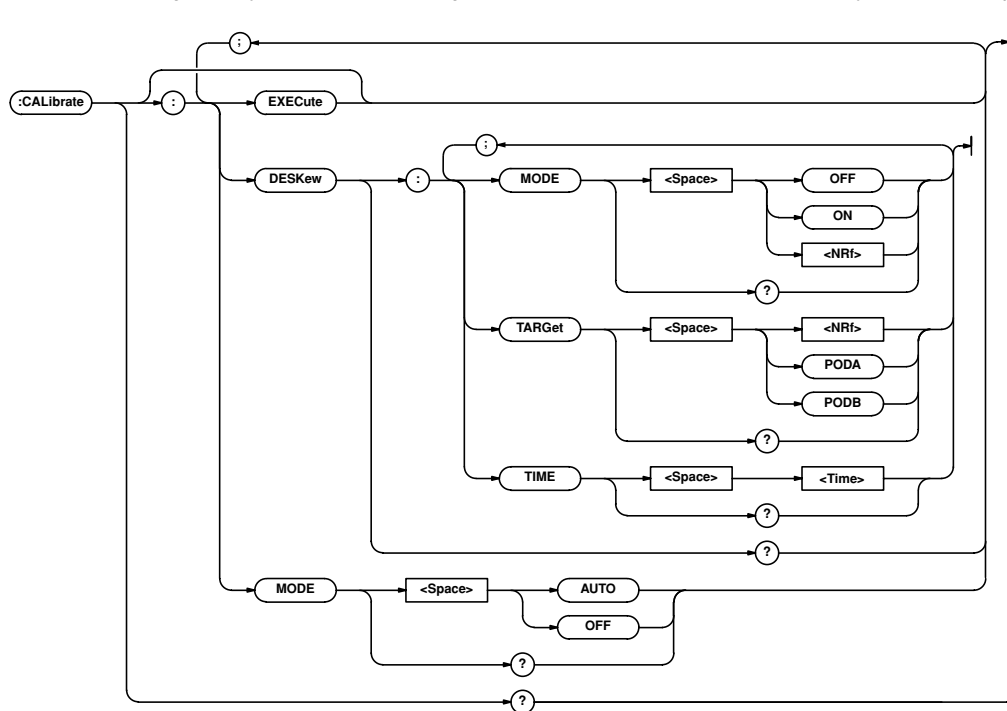

:CALibrate?

Function Queries all calibration settings.
 Syntax :CALibrate?
 Example :CALIBRATE?→:CALIBRATE:MODE OFF;DESKEW:
 MODE 0;TARGET 1;TIME 0.0E+00

:CALibrate:DESKew?

Function Queries all settings related to skew compensation.
 Syntax :CALibrate:DESKew?
 Example :CALIBRATE:DESKEW?→:CALIBRATE:DESKEW:
 MODE 0;TARGET 1;TIME 0.0E+00

:CALibrate:DESKew:MODE

Function Turns the skew compensation ON/OFF or queries the current setting.
 Syntax :CALibrate:DESKew:MODE {<Boolean>}
 :CALibrate:DESKew:MODE?
 Example :CALIBRATE:DESKEW:MODE ON
 :CALIBRATE:DESKEW:MODE?→:CALIBRATE:
 DESKEW:MODE 0

:CALibrate:DESKew:TARGet

Function Sets the channel on which skew compensation is to be performed or queries the current setting.
 Syntax CALibrate:DESKew:TARGet {<NRf>|PODA|PODB}
 :CALibrate:DESKew:TARGet?
 <NRf>=1 to 4
 Example :CALIBRATE:DESKEW:TARGET 1
 :CALIBRATE:DESKEW:TARGET?→:CALIBRATE:
 DESKEW:TRAGET 1

:CALibrate:DESKew:TIME

Function Sets the skew adjustment time that are common to all channels or queries the current setting.
 Syntax :CALibrate:DESKew:TIME {<time>}
 :CALibrate:DESKew:TIME?
 <time>=-100 ns to 100 ns
 Example :CALIBRATE:DESKEW:TIME 1NS
 :CALIBRATE:DESKEW:TIME?→:CALIBRATE:
 DESKEW:TIME 1.000E-09

:CALibrate[:EXECute]


Function Executes calibration.
 Syntax :CALibrate[:EXECute]
 Example :CALIBRATE:EXECUTE

:CALibrate:MODE

Function Sets/queries the ON/OFF of the auto calibration.
 Syntax :CALibrate:MODE {AUTO|OFF}
 :CALibrate?
 Example :CALIBRATE:MODE AUTO
 :CALIBRATE?→:CALIBRATE:MODE AUTO

5.5 CHANnel Group

The commands in the CHANnel group are used to make settings and queries about the vertical axis of the specified channel. This allows you to make the same settings that you can make using the VERTICAL keys (CH key, V/DIV key).

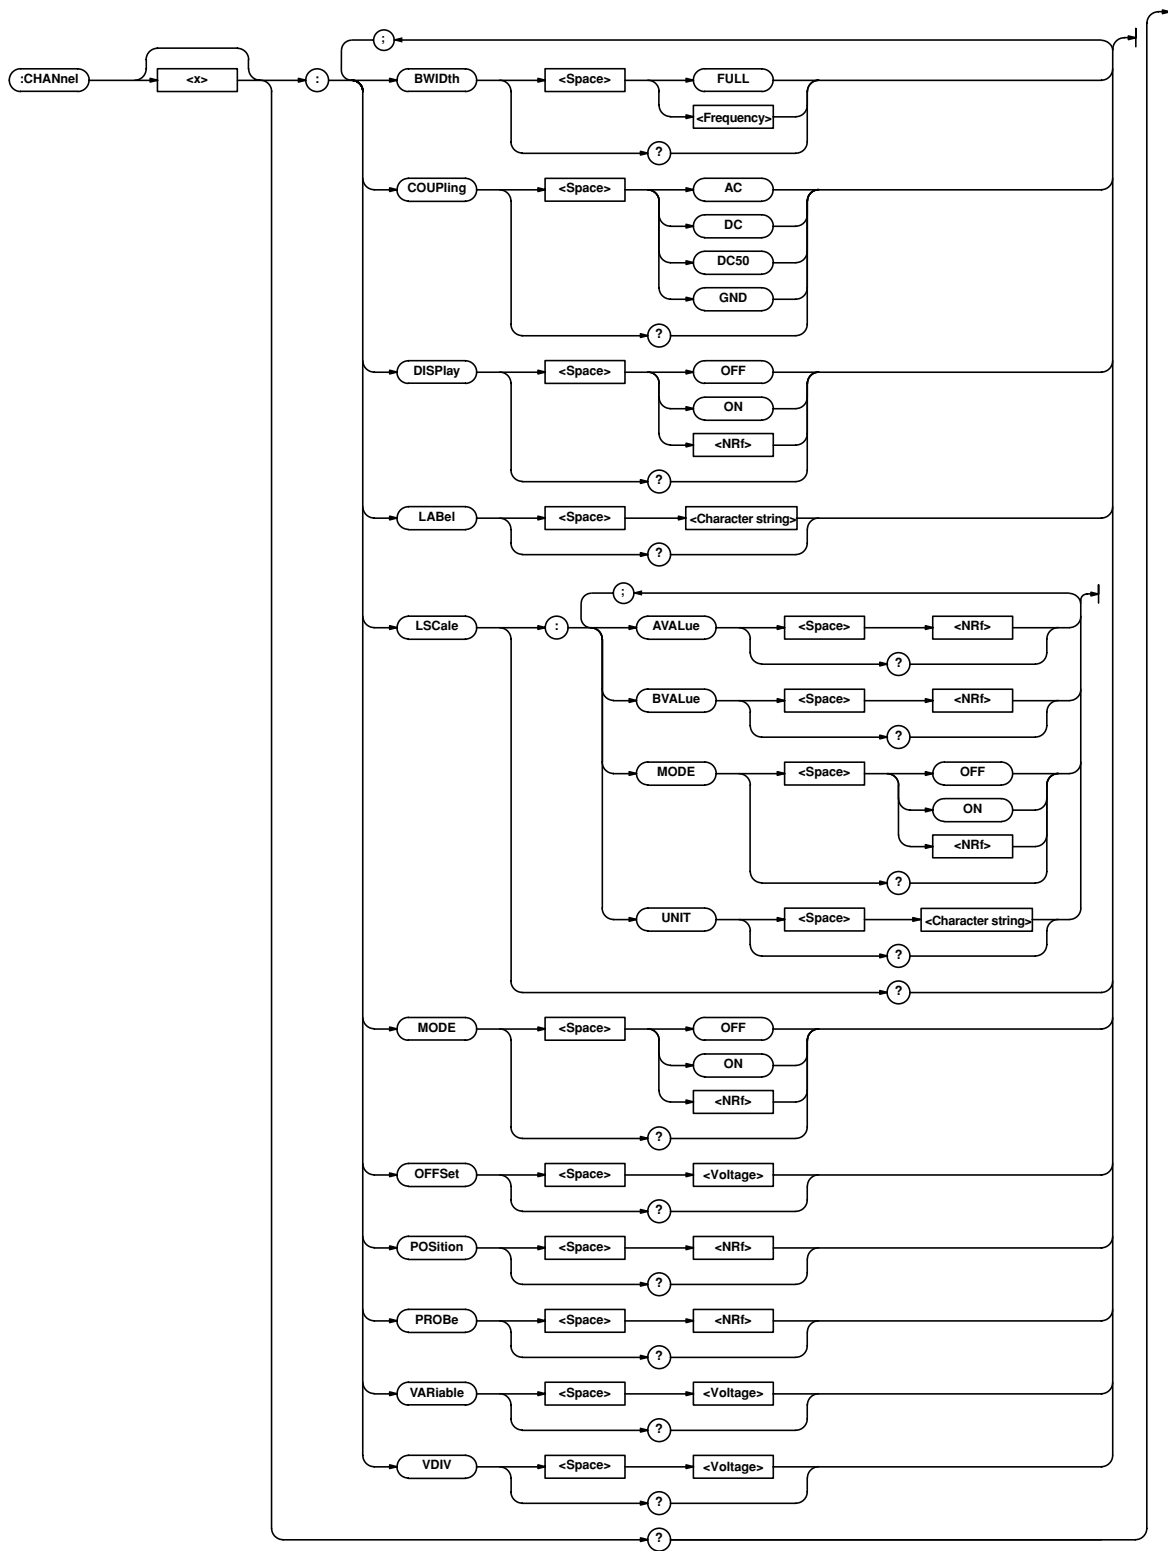

:CHANNEL<x>?

Function	Queries all vertical axis settings for the specified channel.
Syntax	:CHANNEL<x>? <x>=1 to 4
Example	:CHANNEL?→:CHANNEL1:DISPLAY 1; VDIV 50.000E+00;POSITION 0.00; COUPLING DC;PROBE 10;OFFSET 0.0E+00; BWIDTH FULL;VARIABLE 50.000E+00;LSCALE: MODE 0;AVALUE 1.00000E+00; BVALUE 0.00000E+00;UNIT "V";:CHANNEL1: LABEL "CH1"

:CHANNEL<x>:BWIDTh

Function	Sets the input filter of each channel or queries the current setting.
Syntax	:CHANNEL<x>:BWIDTh {FULL <frequency>} :CHANNEL<x>:BWIDTh? <x>=1 to 4 {<frequency>}=20 MHz, 100 MHz
Example	:CHANNEL1:BWIDTh FULL :CHANNEL1:BWIDTh?→:CHANNEL1:BWIDTh FULL

:CHANNEL<x>:COUPLing

Function	Sets the input coupling of each channel or queries the current setting.
Syntax	:CHANNEL<x>:COUPLing {AC DC DC50 GND} :CHANNEL<x>:COUPLing? <x>=1 to 4
Example	:CHANNEL1:COUPLING DC :CHANNEL1:COUPLING?→:CHANNEL1: COUPLING DC

:CHANNEL<x>:DISPlay

Function	Sets/queries display ON/OFF for the specified channel.
Syntax	:CHANNEL<x>:DISPlay {<Boolean>} :CHANNEL<x>:DISPlay? <x>=1 to 4
Example	:CHANNEL1:DISPlay ON :CHANNEL1:DISPlay?→:CHANNEL1:DISPlay 1
Description	The same function can be performed using "CHANNEL<x>:MODE."

:CHANNEL<x>:LABel

Function	Sets/queries the channel's waveform label.
Syntax	:CHANNEL<x>:LABel {<Character string>} :CHANNEL<x>:LABel? <x>=1 to 4 <Character string>=Within 8 characters.
Example	:CHANNEL1:LABel "CH1" :CHANNEL1:LABel?→:CHANNEL1:LABel "CH1"
Description	<ul style="list-style-type: none"> Only characters and symbols on the displayed keyboard are available for use in the label. ASCII codes for "Ω" and "μ" are 1EH and 1FH, respectively.

:CHANNEL<x>:LSCale?

Function	Queries all linear scaling settings.
Syntax	:CHANNEL<x>:LSCale? <x>=1 to 4
Example	:CHANNEL1:LSCALE:MODE 1;AVALUE 1.00000E+00; BVALUE 0.00000E+00;UNIT "V"

:CHANNEL<x>:LSCale:AVALue

Function	Sets/queries the constant (coefficient) A of linear scaling.
Syntax	:CHANNEL<x>:LSCale:AVALue {<NRf>} :CHANNEL<x>:LSCale:AVALue? <x>=1 to 4 <NRf>=-9.9999E+30 to 9.9999E+30
Example	:CHANNEL1:LSCALE:AVALue 10 :CHANNEL1:LSCALE:AVALue?→:CHANNEL: LSCALE:AVALue 10.0000E+00

:CHANNEL<x>:LSCale:BVALue

Function	Sets/queries the offset value B of linear scaling.
Syntax	:CHANNEL<x>:LSCale:BVALue {<NRf>} :CHANNEL<x>:LSCale:BVALue? <x>=1 to 4 <NRf>=-9.9999E+30 to 9.9999E+30
Example	:CHANNEL1:LSCALE:BVALue 10 :CHANNEL1:LSCALE:BVALue?→:CHANNEL: LSCALE:BVALue 10.0000E+00

:CHANNEL<x>:LSCale:MODE

Function	Sets/queries the ON/OFF condition of linear scaling.
Syntax	:CHANNEL<x>:LSCale:MODE {<Boolean>} :CHANNEL<x>:LSCale:MODE? <x>=1 to 4
Example	:CHANNEL1:LSCALE:MODE ON :CHANNEL1:LSCALE:MODE?→:CHANNEL1: LSCALE:MODE 1

:CHANNEL<x>:LSCale:UNIT

Function	Sets/queries the dimensional unit which is appended to the linear scaling result.
Syntax	:CHANNEL<x>:LSCale:UNIT {<Character string>} :CHANNEL<x>:LSCale:UNIT? <x>=1 to 4 <Character string>=Within 4 characters.
Example	:CHANNEL1:LSCALE:UNIT "EU" :CHANNEL1:LSCALE:UNIT?→:CHANNEL1: LSCALE:UNIT "EU"
Description	<ul style="list-style-type: none"> Only the characters and symbols on the keyboard that appear on the instrument's screen can be used. ASCII codes for "Ω" and "μ" are 1EH and 1FH, respectively. This unit will not affect the scaled value in any way.

5.5 CHANnel Group/5.6 CLear Group

:CHANnel<x>:MODE

Function Sets/queries display ON/OFF for the specified channel.

Syntax :CHANnel<x>:MODE {<Boolean>}
:CHANnel<x>:MODE?
<x>=1 to 4

Example :CHANNEL1:MODE ON
:CHANNEL1:MODE?→:CHANNEL1:MODE 1

Description The same function can be performed using "CHANnel<x>:DISPlay."

:CHANnel<x>:OFFSet

Function Sets/queries the offset voltage, when the voltage module is installed at the channel (slot).

Syntax :CHANnel<x>:OFFSet {<Voltage>}
:CHANnel<x>:OFFSet?
<x>=1 to 4
<Voltage>= See the IM701410-01E User's Manual.

Example :CHANNEL1:OFFSET 0V
:CHANNEL1:OFFSET?→:CHANNEL1:OFFSET 0.000E+00

:CHANnel<x>:POSition

Function Sets/queries the vertical position, when the voltage module is installed at the channel (slot).

Syntax :CHANnel<x>:POSition {<NRf>}
:CHANnel<x>:POSition?
<x>=1 to 4
<NRf>=-4.00 to 4.00div (in 1/100 steps)

Example :CHANNEL1:POSITION 1
:CHANNEL1:POSITION?→:CHANNEL1:POSITION 1.00E+00

:CHANnel<x>:PROBE

Function Sets/queries the probe attenuation.

Syntax :CHANnel<x>:PROBE {<NRf>}
:CHANnel<x>:PROBE?
<x>=1 to 4
<NRf>=1,10,100,1000 (See the IM701410-01E User's Manual)

Example :CHANNEL1:PROBE 1
:CHANNEL1:PROBE?→:CHANNEL1:PROBE 1

:CHANnel<x>:VARIABLE

Function Sets the voltage sensitivity in units of 0.01 of the V/div setting for each channel or queries the current setting.

Syntax :CHANnel<x>:VARIABLE {<voltage>}
:CHANnel<x>:VARIABLE?
<x>=1 to 4
<voltage>= See the IM701410-01E User's Manual.

Example :CHANNEL1:VARIABLE 1V
:CHANNEL1:VARIABLE?→:CHANNEL1:VARIABLE 1.000E+00

:CHANnel<x>:VDIV

 
Function Sets/queries the voltage sensitivity (V/div).

Syntax :CHANnel<x>:VDIV {<Voltage>}
:CHANnel<x>:VDIV?
<x>=1 to 4
<Voltage>=2 mV to 10 V (Probe attenuation 1:1, See the IM701410-01E User's Manual)

Example :CHANNEL1:VDIV 2V
:CHANNEL1:VDIV?→:CHANNEL1:VDIV 2.000E+00

5.6 CLear Group

The CLear command is used to clear the trace. This allows you to perform the same operation that you can perform using the CLEAR TRACE key on the front panel.



:CLear


Function Clears trace.

Syntax :CLear

Example :CLEAR

5.7 COMMunicate Group

The commands in the COMMunicate group are used to make settings and queries about communications. There is no front panel key with this function.

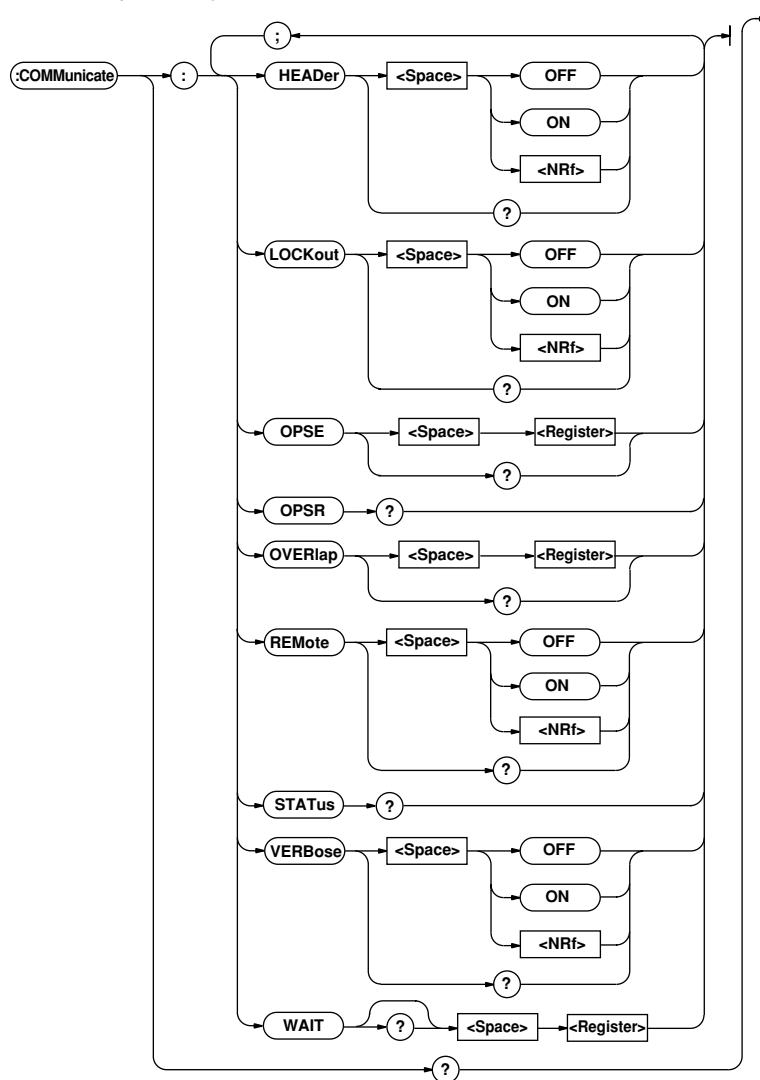

:COMMunicate?

Function Queries all communication settings.
 Syntax :COMMunicate?
 Example :COMMUNICATE?→:COMMUNICATE:HEADER 1;
 OPSE 352;OVERLAP 352;VERBOSE 1

:COMMunicate:HEADer

Function Determines whether a header is to be added (for example: CHANNEL1:VOLTAGE:PROBE 10) or not (example: 10) when sending a response to a query; or queries the current setting.
 Syntax :COMMunicate:HEADer {<Boolean>}
 :COMMunicate:HEADer?
 Example :COMMUNICATE:HEADER ON
 :COMMUNICATE:HEADER?→:COMMUNICATE:HEADER 1

:COMMunicate:LOCKout

Function Sets/releases the local lockout.
 Syntax :COMMunicate:LOCKout {<Boolean>}
 :COMMunicate:LOCKout?
 Example :COMMUNICATE:LOCKOUT ON
 :COMMUNICATE:LOCKOUT?→:COMMUNICATE:LOCKOUT 1
 Description This is an exclusive command for the serial (RS-232) interface.

5.7 COMMunicate Group

:COMMunicate:OPSE

(Operation Pending Status Enable register)

Function Sets the overlap command to be used with *OPC, *OPC?, and *WAI, or queries the current setting.

Syntax :COMMunicate:OPSE <Register>
:COMMunicate:OPSE?
<Register>=0 to 65535, refer to the figure on the next page.

Example :COMMUNICATE:OPSE 65535
:COMMUNICATE:OPSE?→:COMMUNICATE:OPSE 352

Description In the above example, all bits are masked to "1" so that all overlap commands can be used by this command. However, bits that are fixed as "0" cannot be set to "1," so only bits 5, 6 and 8 are actually set to "1" and appears as "1" when a query is made.

:COMMunicate:OPSR?

(Operation Pending Status Register)

Function Inquires about the value in the operation pending status register.

Syntax :COMMunicate:OPSR?

Example :COMMUNICATE:OPSR?→0

Description For a description of the operation pending status register, refer to the figure on the next page.

:COMMunicate:OVERlap

Function Selects/queries the commands enabled for overlap.

Syntax :COMMunicate:OVERlap <Register>
:COMMunicate:OVERlap?
<Register>=0 to 65535, refer to the figure on the next page.

Example :COMMUNICATE:OVERLAP 65535
:COMMUNICATE:OVERLAP?→:COMMUNICATE:OVERLAP 352

Description

- In the above example, all bits are set to "1" so that all overlap commands can be used by this command. However, bits that are fixed as "0" cannot be set to "1," so only bits 5, 6 and 8 are actually set to "1" and appears as "1" when a query is made.
- COMMunicate: For the synchronization method using "OVERlap," refer to page 4-8.
- In the above example, bits 5, 6 and 8 are set to "1" so that all overlap commands can be used by this command. (Refer to the figure on the next page.)

:COMMunicate:REMOte

Function Sets remote/local. It is in remote mode when it is set to ON.

Syntax :COMMunicate:REMOte {<Boolean>}
:COMMunicate:REMOte?

Example :COMMUNICATE:REMOte ON
:COMMUNICATE:REMOte?→:COMMUNICATE:REMOte 1

Description This is an exclusive command for the serial (RS-232) interface.

:COMMunicate:STATus?

Function Queries the circuit status.

Syntax :COMMunicate:STATus?

Example :COMMUNICATE:STATus?→:COMMUNICATE:STATus 0

Description Status-bit meanings are as follows.

Bit	GP-IB	Serial (RS-232)
0	Unrecoverable transmission error	Parity error
1	Always 0	Framing error
2	Always 0	Break character detected
3 to	Always 0	Always 0

Status bit sets when cause occurs, and clears when read.

:COMMunicate:VERBOse

Function Determines whether a response to a query is to be returned in full form (for example: CHANNEL1:VOLTAGE:PROBE 10) or in abbreviated form (for example: CHAN:PROB 10), or queries the current setting.

Syntax :COMMunicate:VERBOse {<Boolean>}
:COMMunicate:VERBOse?

Example :COMMUNICATE:VERBOse ON
:COMMUNICATE:VERBOse?→:COMMUNICATE:VERBOse 1

:COMMunicate:WAIT

Function Waits until one of the specified extended events occurs.

Syntax :COMMunicate:WAIT <Register>
<Register>=0 to 65535 (Extended event register; refer to page 6-4.)

Example :COMMUNICATE:WAIT 65535

Description COMMunicate: For a description of the synchronizing method using "WAIT," refer to page 4-8.

:COMMunicate:WAIT?

Function Generates a response when one of the specified extended events occurs.

Syntax :COMMunicate:WAIT? <Register>
<Register>=0 to 65535 (Extended event register; refer to page 6-4.)

Example :COMMUNICATE:WAIT? 65535→1

Operation pending status register/overlap enable register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	HST	0	ACS	PRN	0	0	0	0	0	0

When bit 5 (PRN) = 1:

Printer operation not completed

When bit 6 (ACS) = 1:


Medium not accessed


When bit 8 (HST) = 1:

History search not completed


5.8 CURSor Group

The commands in the CURSor group are used to make cursor measurement settings and queries. This allows you to make the same settings that you can make using the CURSOR key on the front panel.

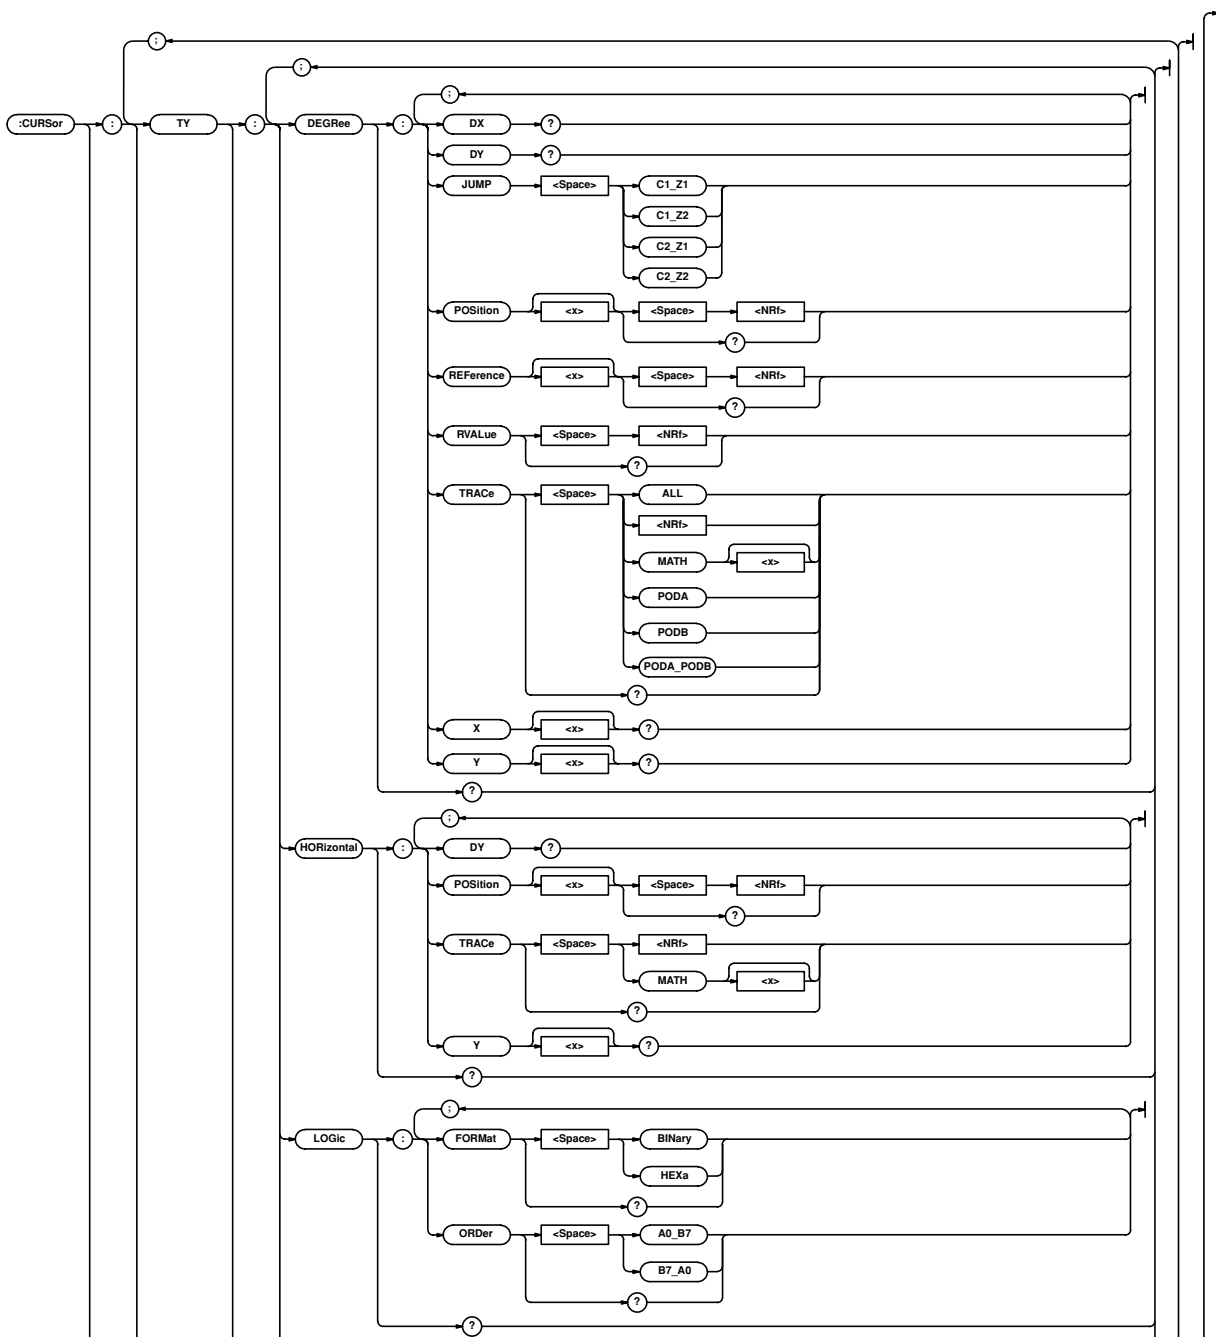

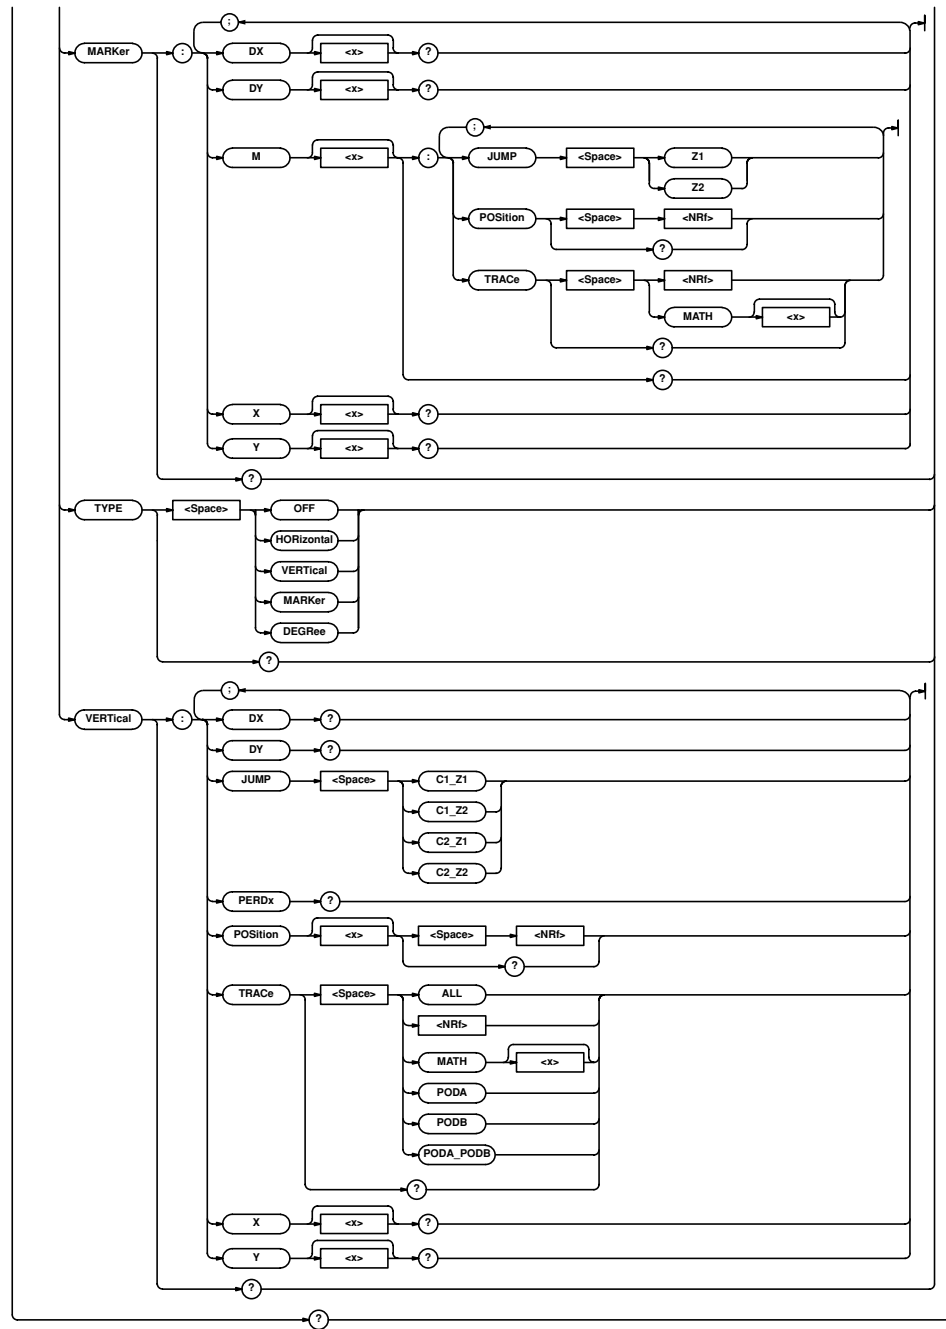

5.8 CURSOR Group

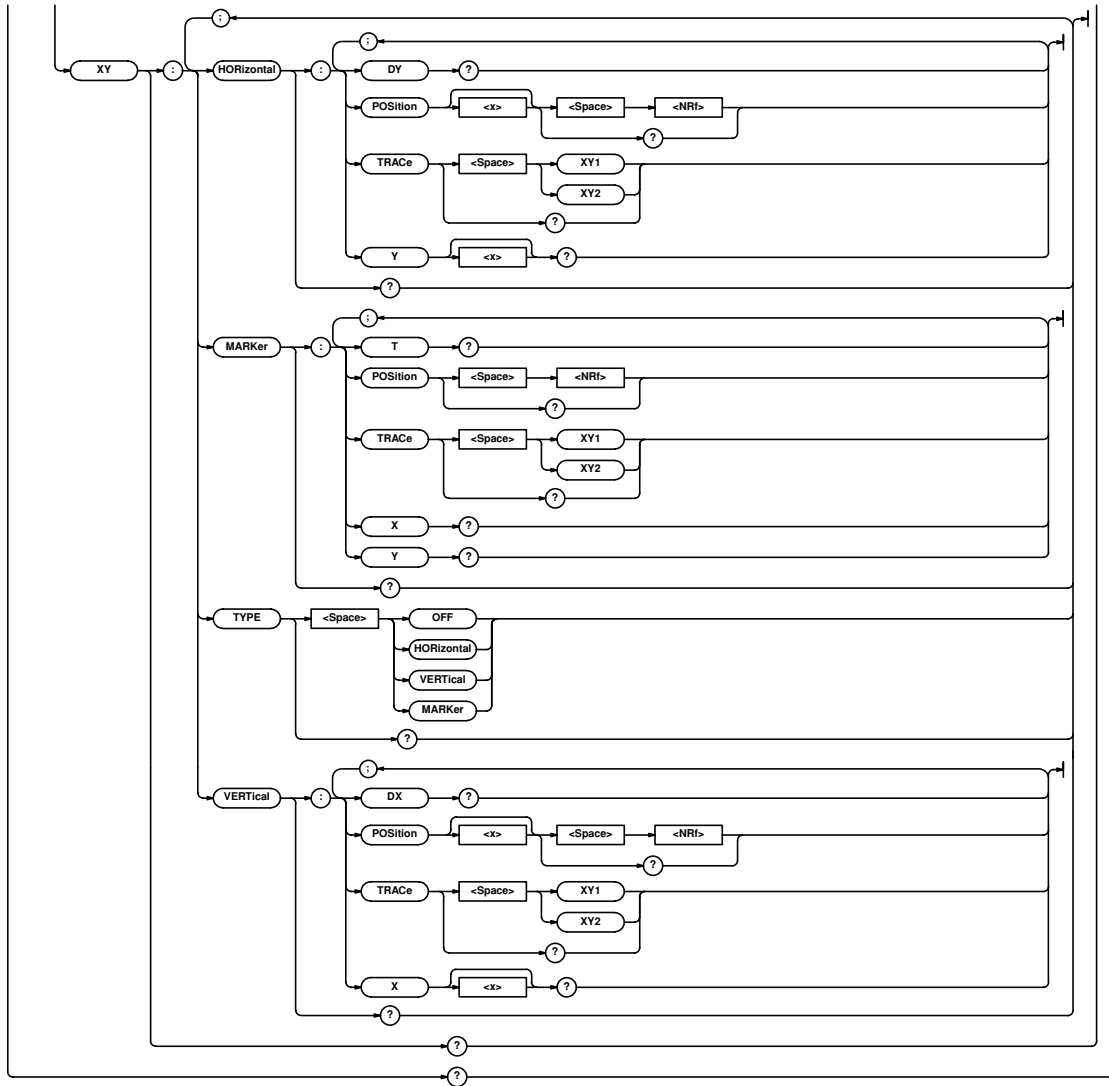

:CURSOR?

Function Queries all settings related to cursor measurements.

Syntax :CURSOR?

Example :CURSOR?→:CURSOR:TY:TYPE OFF;
HORIZONTAL:TRACE 1;POSITION1 3.00;
POSITION2 -3.00;:CURSOR:TY:VERTICAL:
TRACE 1;POSITION1 -4.0000000;
POSITION2 4.0000000;:CURSOR:TY:MARKER:
M1:TRACE 1;POSITION -3.0000000;:CURSOR:
TY:MARKER:M2:TRACE 2;
POSITION -1.0000000;:CURSOR:TY:MARKER:
M3:TRACE 3;POSITION 1.0000000;:CURSOR:
TY:MARKER:M4:TRACE 4;
POSITION 3.0000000;:CURSOR:TY:DEGREE:
TRACE 1;POSITION1 -4.0000000;
POSITION2 4.0000000;
REFERENCE1 -2.0000000;
REFERENCE2 2.0000000;RVALUE 90;:CURSOR:
TY:LOGIC:FORMAT BINARY;ORDER A0_B7;:
CURSOR:XY:TYPE OFF;HORIZONTAL:TRACE XY1;
POSITION1 3.00;POSITION2 -3.00;:
CURSOR:XY:VERTICAL:TRACE XY1;
POSITION1 -3.00;POSITION2 3.00;:CURSOR:
XY:MARKER:TRACE XY1;POSITION -3.0000000

:CURSOR:TY?

Function Queries all settings related to the cursor in the T-Y display.

Syntax :CURSOR:TY?

Example :CURSOR:TY?→:CURSOR:TY:TYPE OFF;
HORIZONTAL:TRACE 1;POSITION1 3.00;
POSITION2 -3.00;:CURSOR:TY:VERTICAL:
TRACE 1;POSITION1 -4.0000000;
POSITION2 4.0000000;:CURSOR:TY:MARKER:
M1:TRACE 1;POSITION -3.0000000;:CURSOR:
TY:MARKER:M2:TRACE 2;
POSITION -1.0000000;:CURSOR:TY:MARKER:
M3:TRACE 3;POSITION 1.0000000;:CURSOR:
TY:MARKER:M4:TRACE 4;
POSITION 3.0000000;:CURSOR:TY:DEGREE:
TRACE 1;POSITION1 -4.0000000;
POSITION2 4.0000000;
REFERENCE1 -2.0000000;
REFERENCE2 2.0000000;RVALUE 90;:CURSOR:
TY:LOGIC:FORMAT BINARY;ORDER A0_B7

:CURSOR:TY:DEGREE?

Function Queries all settings related to angle cursors in the T-Y display.

Syntax :CURSOR:TY:DEGREE?

Example :CURSOR:TY:DEGREE?→:CURSOR:TY:DEGREE:
TRACE 1;POSITION1 -4.0000000;
POSITION2 4.0000000;
REFERENCE1 -2.0000000;
REFERENCE2 2.0000000;RVALUE 90

:CURSOR:TY:DEGREE:DX?

Function Queries the angle difference, ΔD , between angle cursors in the T-Y display.

Syntax :CURSOR:TY:DEGREE:DX?

Example :CURSOR:TY:DEGREE:DX?→:CURSOR:TY:
DEGREE:DX 180.00000E+00

:CURSOR:TY:DEGREE:DY?

Function Queries the angle difference, ΔV , between angle cursors in the T-Y display.

Syntax :CURSOR:TY:DEGREE:DY?

Example :CURSOR:TY:DEGREE:DY?→:CURSOR:TY:
DEGREE:DY 6.2500000E-03

:CURSOR:TY:DEGREE:JUMP

Function Moves the angle cursor in the T-Y display to the specified zoomed waveform.

Syntax :CURSOR:TY:DEGREE:JUMP {C1_Z1|C1_Z2|
C2_Z1|C2_Z2}

Example :CURSOR:TY:DEGREE:JUMP C1_Z1

Description The cursor jumps to the center position of the zoomed waveform.
C1 and C2 represent Cursor1 and Cursor2, respectively.

:CURSOR:TY:DEGREE:POSITION<x>

Function Sets the position of the angle cursor in the T-Y display or queries the current setting.

Syntax :CURSOR:TY:DEGREE:POSITION<x> {<NRf>}
:CURSOR:TY:DEGREE:POSITION<x>?
<x>=1 or 2
<NRf>=-5 to 5 (10 div/displayed record
length steps)

Example :CURSOR:TY:DEGREE:POSITION1 2
:CURSOR:TY:DEGREE:POSITION1?→:CURSOR:
TY:DEGREE:POSITION1 2.0000000

:CURSOR:TY:DEGREE:REFERENCE<x>

Function Sets the position of the angle reference start point (Reference1) or the end point (Reference2) in the T-Y display or queries the current setting.

Syntax :CURSOR:TY:DEGREE:REFERENCE<x> {<NRf>}
:CURSOR:TY:DEGREE:REFERENCE<x>?
<x>=1 or 2
<NRf>=-5 to 5 (10 div/displayed record
length steps)

Example :CURSOR:TY:DEGREE:REFERENCE1 -1
:CURSOR:TY:DEGREE:REFERENCE1?→:CURSOR:
TY:DEGREE:REFERENCE1 -1.0000000

5.8 CURSor Group

:CURSor:TY:DEGRee:RVALue

Function Sets the angle reference width or queries the current setting.

Syntax :CURSor:TY:DEGRee:RVALue {<NRf>}
:CURSor:TY:DEGRee:RVALue?
<NRf>=1 to 720

Example :CURSOR:TY:DEGREE:RVALUE 180
:CURSOR:TY:DEGREE:RVALUE?→:CURSOR:TY:
DEGREE:RVALUE 180

:CURSor:TY:DEGRee:TRACe

Function Sets the waveform on which to use the angle cursor in the T-Y display or queries the current setting.

Syntax :CURSor:TY:DEGRee:TRACe {<NRf>|MATH<x>|
PODA|PODB|PODA_PODB|ALL}
:CURSor:TY:DEGRee:TRACe?
<NRf>=1 to 4
<x>=1 or 2

Example :CURSOR:TY:DEGREE:TRACE 1
:CURSOR:TY:DEGREE:TRACE?→:CURSOR:TY:
DEGREE:TRACE 1

:CURSor:TY:DEGRee:X<x>?

Function Queries the angle at the angle cursor in the T-Y display.

Syntax :CURSor:TY:DEGRee:X<x>?
<x>=1 or 2

Example (This is an example in which Cursor1 is queried.)
:CURSOR:TY:DEGREE:X1?→:CURSOR:TY:
DEGREE:X1 -120.000000E+00

:CURSor:TY:DEGRee:Y<x>?

Function Queries the voltage value at the angle cursor in the T-Y display.

Syntax :CURSor:TY:DEGRee:Y<x>?
<x>=1 or 2

Example (This is an example in which Cursor1 is queried.)
:CURSOR:TY:DEGREE:Y1?→:CURSOR:TY:
DEGREE:Y1 10.000000E-03

Description When the specified trace is a logic waveform (option), this query returns a decimal value in which the MSB is bit0 (CH1) and the LSB is bit7 (CH8).

:CURSor:TY:HORizontal?

Function Queries all settings related to H cursors in the T-Y display.

Syntax :CURSor:TY:HORizontal?

Example :CURSOR:TY:HORIZONTAL?→:CURSOR:TY:
HORIZONTAL:TRACE 1;POSITION1 3.00;
POSITION2 -3.00

:CURSor:TY:HORizontal:DY?

Function Queries the Y-axis value between the H cursors in the T-Y display.

Syntax :CURSor:TY:HORizontal:DY?

Example :CURSOR:TY:HORIZONTAL:DY?→:CURSOR:TY:
HORIZONTAL:DY 3.000000E+00

Description When the linear scaling is ON, the scaled value is queried.

:CURSor:TY:HORizontal:POSition<x>

Function Sets the H cursor position in the T-Y display or queries the current setting.

Syntax :CURSor:TY:HORizontal:POSition<x>
{<NRf>}
:CURSor:TY:HORizontal:POSition<x>?
<x>=1 or 2
<NRf>=-4 to 4div (1/100 steps)

Example :CURSOR:TY:HORIZONTAL:POSITION1 2
:CURSOR:TY:HORIZONTAL:POSITION1?→
:CURSOR:TY:HORIZONTAL:POSITION1 2.00

Description The <NRf> value is accurate to two digits beyond the decimal.

:CURSor:TY:HORizontal:TRACe

Function Sets the waveform on which to use the H cursor in the T-Y display or queries the current setting.

Syntax :CURSor:TY:HORizontal:TRACe {<NRf>|
MATH<x>}
:CURSor:TY:HORizontal:TRACe?
<NRf>=1 to 4
<x>=1 or 2

Example :CURSOR:TY:HORIZONTAL:TRACE 1
:CURSOR:TY:HORIZONTAL:TRACE?→:CURSOR:
TY:HORIZONTAL:TRACE 1

:CURSor:TY:HORizontal:Y<x>?

Function Queries the Y-axis value of the H cursor in the T-Y display.

Syntax :CURSor:TY:HORizontal:Y<x>?
<x>=1 or 2

Example :CURSOR:TY:HORIZONTAL:Y1?→:CURSOR:TY:
HORIZONTAL:Y1 -1.500000E+00

Description When the linear scaling is ON, the scaled value is queried.

:CURSor:TY:LOGic?

Function Sets/queries all settings related to the cursor in the logic T-Y display.

Syntax :CURSor:TY:LOGic?

Example :CURSOR:TY:LOGIC:?→:CURSOR:TY:LOGIC:
FORMAT BINARY;ORDER A0_B7

:CURSOR:TY:LOGIC:FORMAT

Function Sets/queries the data format in the logic T-Y display.

Syntax :CURSOR:TY:LOGIC:FORMAT {BINARY|HEXA}
:CURSOR:TY:LOGIC:FORMAT?

Example :CURSOR:TY:LOGIC:FORMAT BINARY
:CURSOR:TY:LOGIC:FORMAT?→:CURSOR:TY:
LOGIC:FORMAT BINARY

:CURSOR:TY:LOGIC:ORDER

Function Queries the bit order of logic in the T-Y display.

Syntax :CURSOR:TY:LOGIC:ORDER {A0_B7|B7_A0}
:CURSOR:TY:LOGIC:ORDER?

Example :CURSOR:TY:LOGIC:ORDER A0_B7
:CURSOR:TY:LOGIC:ORDER?→:CURSOR:TY:
LOGIC:ORDER A0_B7

:CURSOR:TY:MARKER?

Function Queries all settings related to marker cursors in the T-Y display.

Syntax :CURSOR:TY:MARKER?

Example :CURSOR:TY:MARKER?→:CURSOR:TY:MARKER:
M1:TRACE 1;POSITION -3.0000000;:CURSOR:
TY:MARKER:M2:TRACE 2;
POSITION -1.0000000;:CURSOR:TY:MARKER:
M3:TRACE 3;POSITION 1.0000000;:CURSOR:
TY:MARKER:M4:TRACE 4;POSITION 3.0000000

:CURSOR:TY:MARKER:DX<x>?

Function Queries the X-axis value between the marker cursors in the T-Y display.

Syntax :CURSOR:TY:MARKER:DX<x>?
<x>=1 to 4

Example :CURSOR:TY:MARKER:DX1?→:CURSOR:TY:
MARKER:DX1 0.0000000E+00

Description

- **When the time base is set to internal clock**
The query is for the time between the markers in the time domain and the frequency between the markers in the frequency domain.
- **When the time base is set to external clock**
The number of points between the marker cursors is queried.

:CURSOR:TY:MARKER:DY<x>?

Function Queries the physical value of the Y-axis difference between the marker cursors in the T-Y display.

Syntax :CURSOR:TY:MARKER:DY<x>?
<x>=1 to 4

Example :CURSOR:TY:MARKER:DY2?→:CURSOR:TY:
MARKER:DY2 500.00000E-03

Description When the linear scaling is ON, the scaled value is queried.

:CURSOR:TY:MARKER:M<x>?

Function Queries all settings related to the specified marker cursor.

Syntax :CURSOR:TY:MARKER:M<x>?
<x>=1 to 4

Example :CURSOR:TY:MARKER:M1?→:CURSOR:TY:MARKER:
M1:TRACE 1;POSITION -3.0000000

:CURSOR:TY:MARKER:M<x>:JUMP

Function Moves the marker cursor in the T-Y display to the specified zoomed waveform.

Syntax :CURSOR:MARKER:M<x>:JUMP {Z1|Z2}
<x>=1 to 4

Example :CURSOR:TY:MARKER:M1:JUMP Z1

Description The cursor jumps to the center position of the zoomed waveform.

:CURSOR:TY:MARKER:M<x>:POSITION

Function Sets the X-axis position of the marker cursor in the T-Y display or queries the current setting.

Syntax :CURSOR:TY:MARKER:M<x>:POSITION {<NRf>}
:CURSOR:TY:MARKER:M<x>:POSITION?
<x>=1 to 4
<NRf>=-5 to 5 div (10 div/displayed
record length steps)

Example :CURSOR:TY:MARKER:M1:POSITION -1
:CURSOR:TY:MARKER:M1:POSITION?→
:CURSOR:TY:MARKER:M1:POSITION -1.0000000

:CURSOR:TY:MARKER:M<x>:TRACE

Function Sets the waveform on which to use the marker cursor in the T-Y display or queries the current setting.

Syntax :CURSOR:TY:MARKER:M<x>:TRACE {<NRf>|
MATH<x>}
:CURSOR:TY:MARKER:M<x>:TRACE?
<x>=1 to 4
<NRf>=1 to 4
The <x> in MATH<x>=1 or 2

Example :CURSOR:TY:MARKER:M1:TRACE1 1
:CURSOR:TY:MARKER:M1:TRACE1?→:CURSOR:
TY:MARKER:M1:TRACE1 1

5.8 CURSor Group

:CURSor:TY:MARKer:X<x>?

Function	Queries the X-axis position of the marker cursor in the T-Y display.
Syntax	:CURSor:TY:MARKer:X<x>? <x>=1 to 4
Example	:CURSOR:TY:MARKER:X1?→:CURSOR:TY: MARKER:X1 -4.5000E-03
Description	<ul style="list-style-type: none">• When the time base is set to internal clock The query is for the time in the time domain and frequency in the frequency domain.• When the time base is set to external clock The query is for the number of points with respect to delay 0 in the time domain and the number of points from the beginning of the memory in the frequency domain.

:CURSor:TY:MARKer:Y<x>?

Function	Queries the Y-axis position of the marker cursor in the T-Y display.
Syntax	:CURSor:TY:MARKer:Y<x>? <x>=1 to 4
Example	:CURSOR:TY:MARKER:Y1?→:CURSOR:TY: MARKER:Y1 1.5000E-03
Description	When the linear scaling is ON, the scaled value is queried.

:CURSor:TY:TYPE

Function	Sets the type of cursor in the T-Y display or queries the current setting.
Syntax	:CURSor:TY:TYPE {OFF HOrizontal VERTical MARKer DEGRee} :CURSor:TY:TYPE?
Example	:CURSOR:TY:TYPE HORIZONTAL :CURSOR:TY:TYPE?→:CURSOR:TY: TYPE HORIZONTAL

:CURSor:TY:VERTical?

Function	Queries all settings related to V cursors in the T-Y display.
Syntax	:CURSor:TY:VERTical?
Example	:CURSOR:TY:VERTICAL→:CURSOR:TY: VERTICAL:TRACE 1;POSITION1 -4.0000000; POSITION2 4.0000000

:CURSor:TY:VERTical:DX?

Function	Queries the X-axis value between V cursors in the T-Y display.
Syntax	:CURSor:TY:VERTical:DX?
Example	:CURSOR:TY:VERTICAL:DX?→:CURSOR:TY: VERTICAL:DX 2.50E-06
Description	<ul style="list-style-type: none">• When the time base is set to internal clock The query is for the time between the markers in the time domain and the frequency between the markers in the frequency domain.• When the time base is set to external clock The number of points between the marker cursors is queried.

:CURSor:TY:VERTical:DY?

Function	Queries the Y-axis value between V cursors in the T-Y display.
Syntax	:CURSor:TY:VERTical:DY?
Example	:CURSOR:TY:VERTICAL:DY?→:CURSOR:TY: VERTICAL:DY 1.50E+03
Description	<ul style="list-style-type: none">• When the linear scaling of the Y trace is ON, the scaled value is queried.• When the specified trace is a logic waveform (option), "NAN(Not A Number)" is returned.

:CURSor:TY:VERTical:JUMP

Function	Moves the V cursor in the T-Y display to the specified zoomed waveform.
Syntax	:CURSor:TY:VERTical:JUMP {C1_Z1 C1_Z2 C2_Z1 C2_Z2}
Example	:CURSOR:TY:VERTICAL:JUMP C1_Z1
Description	The cursor jumps to the center position of the zoomed waveform. C1 and C2 represent V cursors, Cursor1 and Cursor2, respectively.

:CURSor:TY:VERTical:PERDt?

Function	Queries the $1/\Delta T$ value between V cursors in the T-Y display.
Syntax	:CURSor:TY:VERTical:PERDt?
Example	:CURSOR:TY:VERTICAL:PERDT?→:CURSOR:TY: VERTICAL:PERDT 2.50E+06
Description	When the specified trace is in the frequency domain or the trace is a logic waveform (option), "NAN(Not A Number)" is returned.

:CURSOR:TY:VERTICAL:POSITION<x>

Function	Sets the V cursor position in the T-Y display or queries the current setting.
Syntax	:CURSOR:TY:VERTICAL:POSITION<x> {<NRF>} :CURSOR:TY:VERTICAL:POSITION<x>? <x>=1 or 2 <NRF>=-5 to 5 div (10 div/displayed record length steps)
Example	:CURSOR:TY:VERTICAL:POSITION1 2 :CURSOR:TY:VERTICAL:POSITION1?→:CURSOR:TY:VERTICAL:POSITION1 2.00E+00

:CURSOR:TY:VERTICAL:TRACE

Function	Sets the waveform on which to use the V cursor in the T-Y display or queries the current setting.
Syntax	:CURSOR:TY:VERTICAL:TRACE {<NRF> MATH<x> ALL PODA PODB PODA_PODB} :CURSOR:TY:VERTICAL:TRACE? <NRF>=1 to 4 <x>=1 or 2
Example	:CURSOR:TY:VERTICAL:TRACE 1 :CURSOR:TY:VERTICAL:TRACE?→:CURSOR:TY:VERTICAL:TRACE 1

:CURSOR:TY:VERTICAL:X<x>?

Function	Queries the X-axis position of the V cursor in the T-Y display.
Syntax	:CURSOR:TY:VERTICAL:X<x>? <x>=1 or 2
Example	:CURSOR:TY:VERTICAL:X1?TY::CURSOR:TY:VERTICAL:X1 -2.50E-06
Description	<ul style="list-style-type: none"> • When the time base is set to internal clock The query is for the time in the time domain and frequency in the frequency domain. • When the time base is set to external clock The query is for the number of points with respect to delay 0 in the time domain and the number of points from the beginning of the memory in the frequency domain. • When the specified trace is a logic waveform (option), "NAN(Not A Number)" is returned.

:CURSOR:TY:VERTICAL:Y<x>?

Function	Queries the Y-axis position of the V cursor in the T-Y display.
Syntax	:CURSOR:TY:VERTICAL:Y<x>? <x>=1 or 2
Example	:CURSOR:TY:VERTICAL:Y1?→:CURSOR:TY:VERTICAL:Y1 2.50E+03
Description	When the specified trace is a logic waveform (option), this query returns a decimal value in which the MSB is bit0 (CH1) and the LSB is bit7 (CH8).

:CURSOR:XY?

Function	Queries all settings related to the cursors in the X-Y display.
Syntax	CURSOR:XY?
Example	CURSOR:XY?→:CURSOR:XY:TYPE OFF; HORIZONTAL:TRACE XY1;POSITION1 3.00; POSITION2 -3.00;:CURSOR:XY:VERTICAL:TRACE XY1;POSITION1 -3.00; POSITION2 3.00;:CURSOR:XY:MARKER:TRACE XY1;POSITION -3.0000000

:CURSOR:XY:HORIZONTAL?

Function	Queries all settings related to the H cursors in the X-Y display.
Syntax	:CURSOR:XY:HORIZONTAL?
Example	:CURSOR:XY:HORIZONTAL?→:CURSOR:XY:HORIZONTAL:TRACE XY1;POSITION1 3.00; POSITION2 -3.00

:CURSOR:XY:HORIZONTAL:DY?

Function	Queries the Y-axis value of the H cursor of the X-Y display.
Syntax	:CURSOR:XY:HORIZONTAL:DY?
Example	:CURSOR:XY:HORIZONTAL:DY?→:CURSOR:XY:HORIZONTAL:DY 3.0000000E+00
Description	When the linear scaling is ON, the scaled value is queried.

:CURSOR:XY:HORIZONTAL:POSITION<x>

Function	Sets the H cursor position of the X-Y display or queries the current setting.
Syntax	:CURSOR:XY:HORIZONTAL:POSITION<x> {<NRF>} :CURSOR:XY:HORIZONTAL:POSITION<x>? <x>=1 or 2 <NRF>=-4 to 4div (1/100 steps)
Example	:CURSOR:XY:HORIZONTAL:POSITION1 2 :CURSOR:XY:HORIZONTAL:POSITION1?→ :CURSOR:XY:HORIZONTAL:POSITION1 2.00

:CURSOR:XY:HORIZONTAL:TRACE

Function	Sets the waveform on which to use the H cursor in the X-Y display or queries the current setting.
Syntax	:CURSOR:XY:HORIZONTAL:TRACE {XY1 XY2} :CURSOR:XY:HORIZONTAL:TRACE?
Example	:CURSOR:XY:HORIZONTAL:TRACE XY1 :CURSOR:XY:HORIZONTAL:TRACE?→:CURSOR:XY:HORIZONTAL:TRACE XY1

5.8 CURSor Group

:CURSor:XY:HORizontal:Y?

Function Queries the Y-axis value of the H cursor of the X-Y display.

Syntax :CURSor:XY:HORizontal:Y?

Example :CURSOR:TY:HORIZONTAL:Y?→:CURSOR:TY:HORIZONTAL:Y -1.500000E+00

Description When the linear scaling is ON, the scaled value is queried.

:CURSor:XY:MARKer?

Function Queries all settings related to the marker cursors in the X-Y display.

Syntax :CURSor:XY:MARKer?

Example :CURSOR:XY:MARKER?→:CURSOR:XY:MARKER:DISPLAY 1;TRACE XY1;POSITION -3.000000

:CURSor:XY:MARKer:POSition

Function Sets the X-axis position of the marker cursor in the X-Y display or queries the current setting.

Syntax :CURSor:XY:MARKer:POSition {<NRF>}
:CURSor:XY:MARKer:POSition?
<NRF>=-5 to 5 div (10 div/displayed record length steps)

Example :CURSOR:XY:MARKER:POSITION -1
:CURSOR:XY:MARKER:POSITION?→:CURSOR:XY:MARKER:POSITION -1.000000

:CURSor:XY:MARKer:T?

Function Queries the time value of the marker cursor in the X-Y display.

Syntax CURSor:XY:MARKer:T?

Example :CURSOR:XY:MARKER:T?→:CURSOR:XY:MARKER:T 100.00E-03

:CURSor:XY:MARKer:TRACe

Function Sets the waveform on which to use the marker cursor in the X-Y display or queries the current setting.

Syntax :CURSor:XY:MARKer:TRACe {XY1|XY2}
:CURSor:XY:MARKer:TRACe?

Example :CURSOR:XY:MARKER:TRACE XY1
:CURSOR:XY:MARKER:TRACE?→:CURSOR:XY:MARKER:TRACE XY1

:CURSor:XY:MARKer:X?

Function Queries the X-axis position of the marker cursor in the X-Y display.

Syntax :CURSor:XY:MARKer:X?

Example :CURSOR:XY:MARKER:X1?→:CURSOR:XY:MARKER:X -4.5000E-03

Description When the linear scaling is ON, the scaled value is queried.

:CURSor:XY:MARKer:Y?

Function Queries the Y-axis position of the marker cursor in the X-Y display.

Syntax :CURSor:XY:MARKer:Y?

Example :CURSOR:XY:MARKER:Y?→:CURSOR:XY:MARKER:Y 1.5000E-03

Description When the linear scaling is ON, the scaled value is queried.

:CURSor:XY:TYPE

Function Sets the cursor type of the X-Y display or queries the current setting.

Syntax :CURSor:XY:TYPE {OFF|HORizontal|VERTICAL|MARKer}
:CURSor:XY:TYPE?

Example :CURSOR:XY:TYPE VERTICAL
:CURSOR:XY:TYPE?→:CURSOR:XY:TYPE VERTICAL

:CURSor:XY:VERTical?

Function Queries all settings related to V cursors in the X-Y display.

Syntax :CURSor:XY:VERTical?

Example :CURSOR:XY:VERTICAL→:CURSOR:XY:VERTICAL:TRACE XY1;POSITION1 -3.00;POSITION2 3.00

:CURSor:XY:VERTical:DX?

Function Queries the X-axis value between the V cursors in the X-Y display.

Syntax :CURSor:XY:VERTical:DX?

Example :CURSOR:XY:VERTICAL:DX?→:CURSOR:XY:VERTICAL:DX 2.50E-06

Description When the linear scaling of the X trace is ON, the scaled value is queried.

:CURSor:XY:VERTical:POSition<x>

Function Sets the V cursor position of the X-Y display or queries the current setting.

Syntax :CURSor:XY:VERTical:POSition<x> {<NRF>}
:CURSor:XY:VERTical:POSition<x>?
<x>=1 or 2
<NRF>=-4 to 4div (1/100 steps)

Example :CURSOR:XY:VERTICAL:POSITION1 2
:CURSOR:XY:VERTICAL:POSITION1?→
:CURSOR:XY:VERTICAL:POSITION1 2.00E+00

:CURSor:XY:VERTical:TRACe

Function Sets the waveform on which to use the V cursor in the X-Y display or queries the current setting.

Syntax :CURSor:XY:VERTical:TRACe {XY1|XY2}
:CURSor:XY:VERTical:TRACe?

Example :CURSOR:XY:VERTICAL:TRACE XY1;CURSOR:XY:VERTICAL:TRACE?→:CURSOR:XY:VERTICAL:TRACE XY1

:CURSor:XY:VERTical:X<x>?


Function Queries the X-axis position of the V cursor in the X-Y display.


Syntax :CURSor:XY:VERTical:X<x>?
 <x>=1 or 2

Example :CURSOR:XY:VERTICAL:X1?→:CURSOR:XY:
 VERTICAL:X1 -2.50E-06

5.9 DISPlay Group

The commands in the DISPlay group are used to set or query the display parameters. This allows you to make the same settings that can be made using the DISPLAY and MISC key.

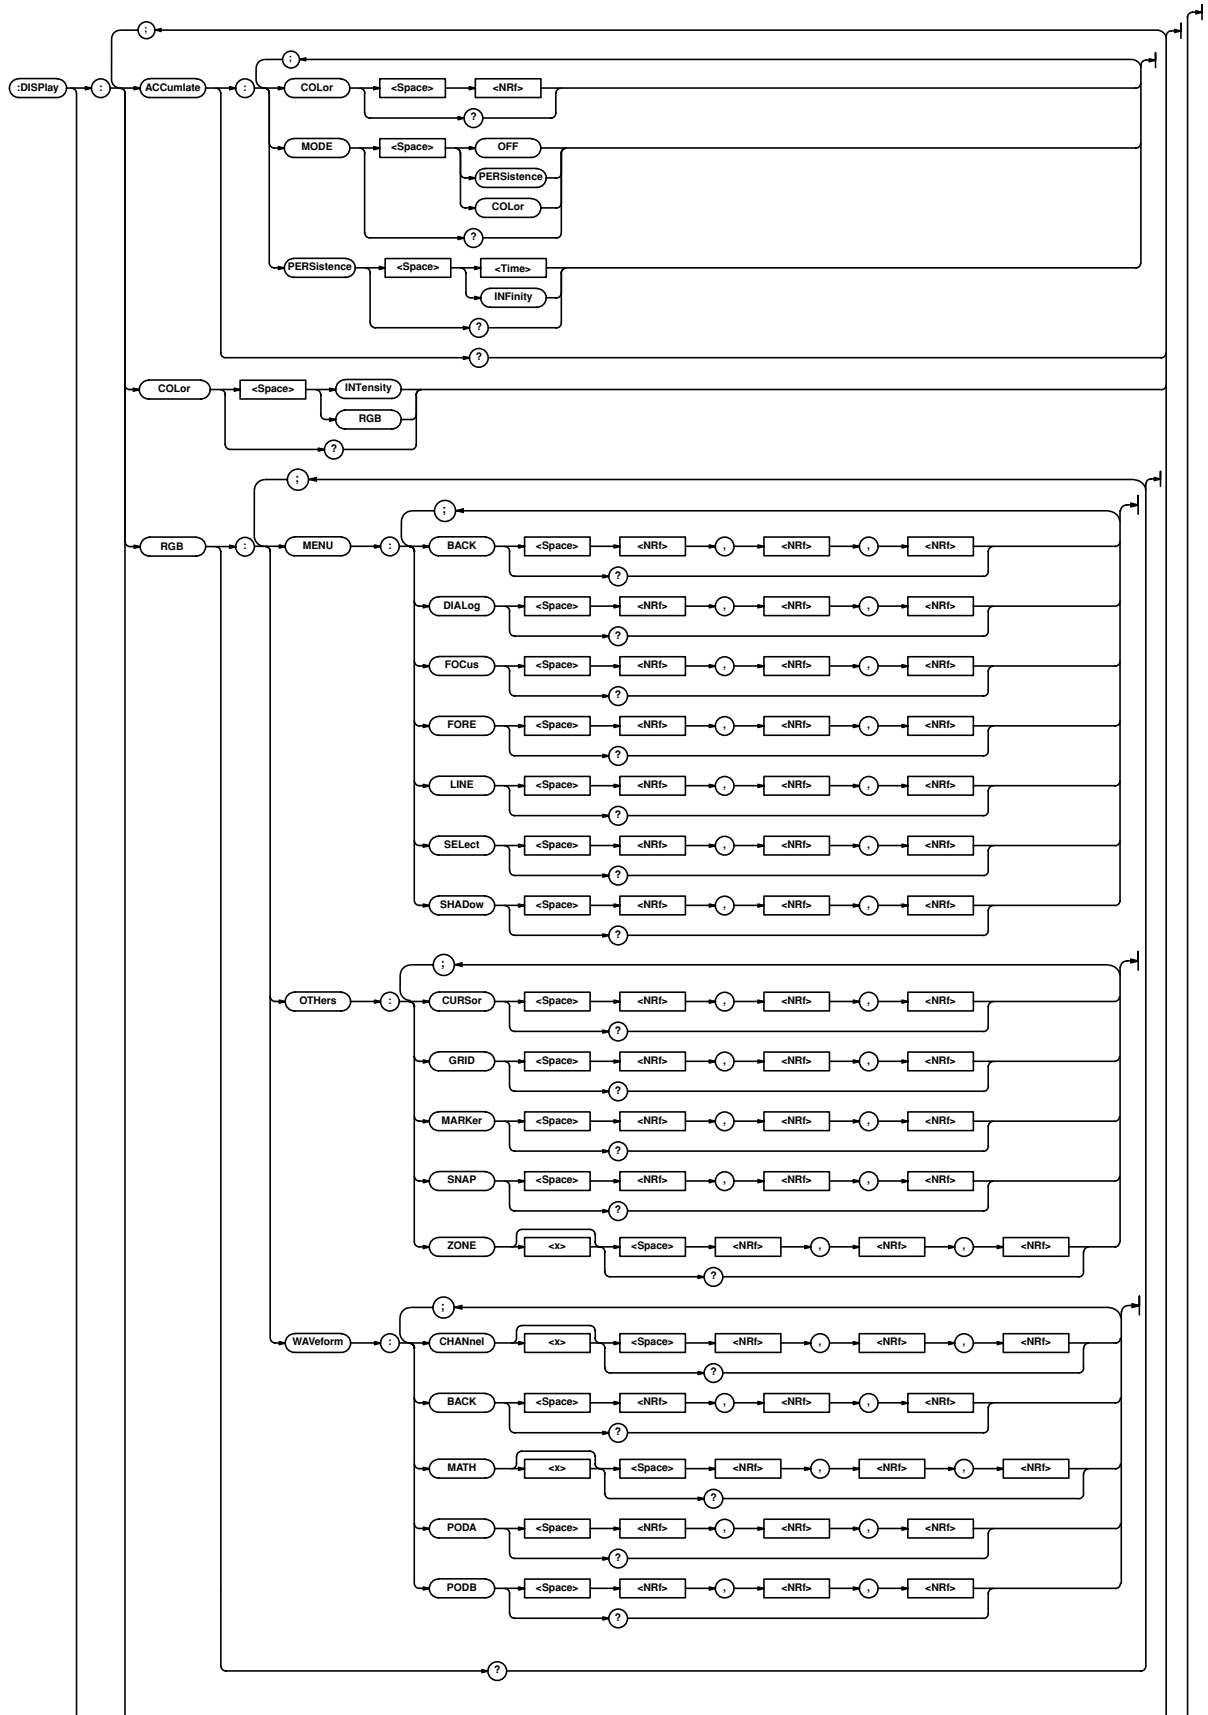

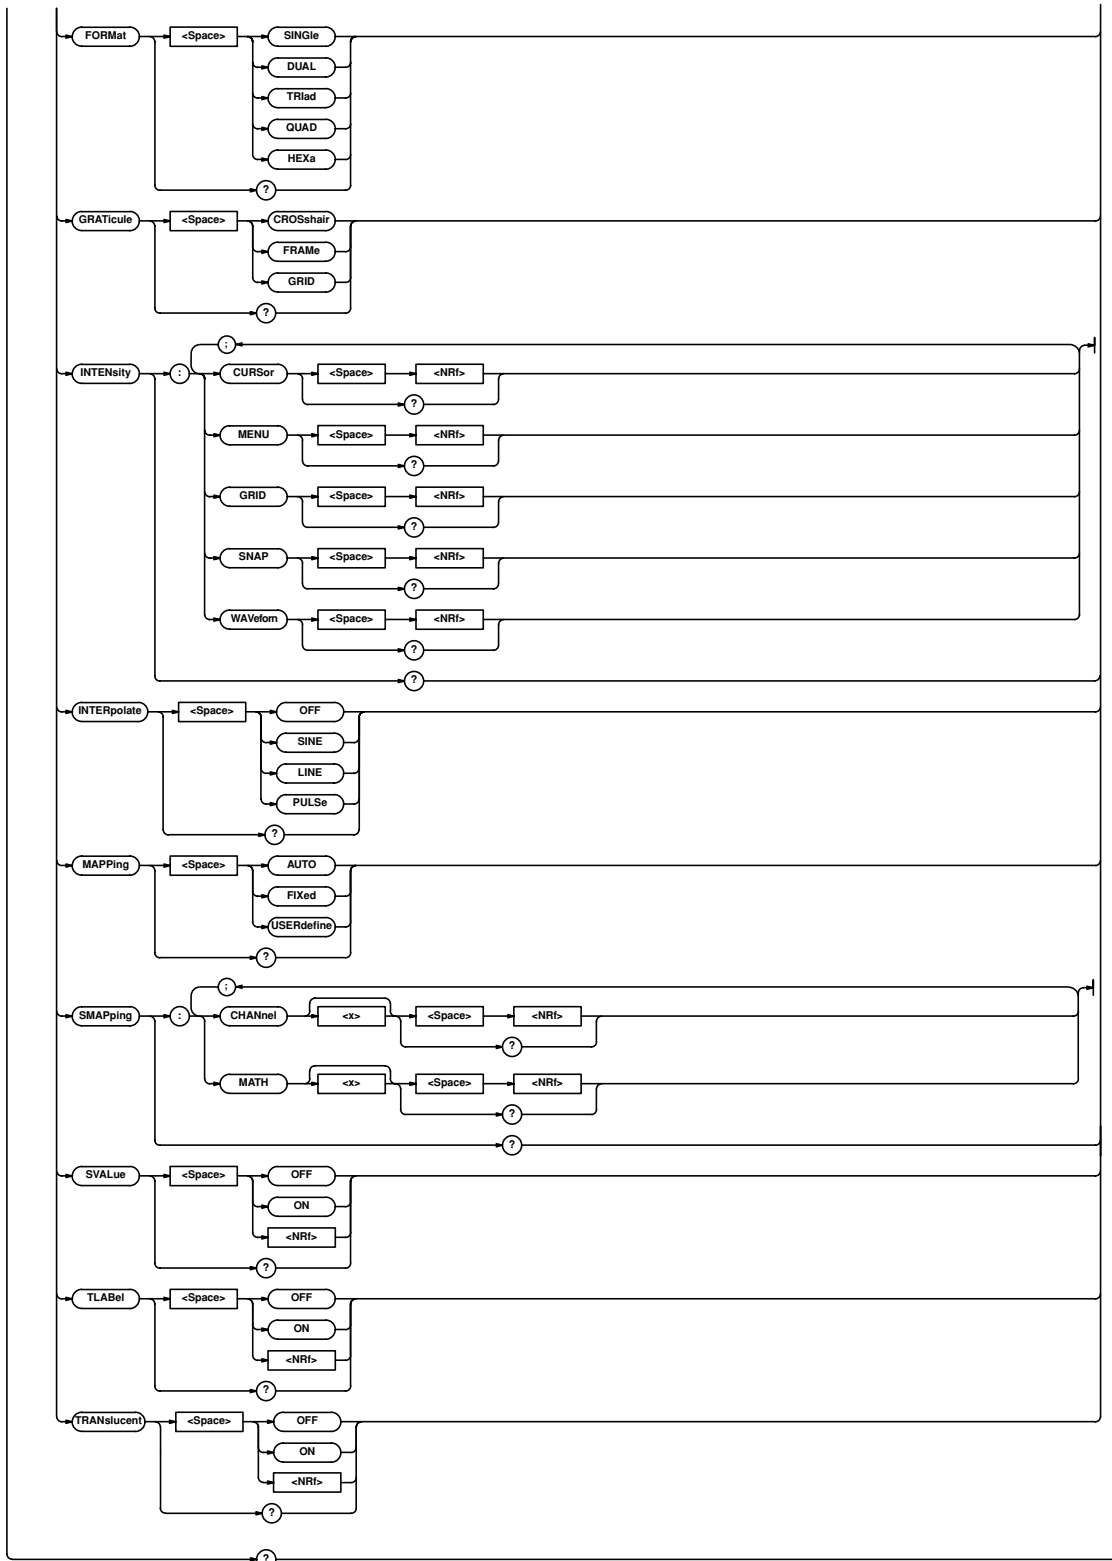

5.9 DISPlay Group

:DISPlay?

Function Queries all display settings.
Syntax :DISPlay?
Example :DISPLAY?→:DISPLAY:FORMAT QUAD;
INTERPOLATE SINE;GRATICULE GRID;
SVALUE 0;TLABEL 0;ACCUMULATE:MODE OFF;
PERSISTENCE 100.0E-03;COLOR 16;:
DISPLAY:TRANSLUCENT 0;MAPPING AUTO;
SMAPPING:CHANNEL1 0;CHANNEL2 1;
CHANNEL3 2;CHANNEL4 3;MATH1 4;MATH2 5;:
DISPLAY:COLOR INTENSITY;INTENSITY:
MENU 10;WAVEFORM 10;SNAP 10;GRID 10;
CURSOR 10;:DISPLAY:RGB:MENU:
FORE 15,15,15;BACK 0,0,7;FOCUS 0,0,7;
SELECT 0,7,15;DIALOG 7,7,7;SHADOW 0,0,0;
LINE 15,15,15;:DISPLAY:RGB:WAVEFORM:
CHANNEL1 15,15,0;CHANNEL2 0,15,0;
CHANNEL3 15,0,15;CHANNEL4 0,15,15;
MATH1 15,0,0;MATH2 15,7,0;PODA 5,5,15;
PODB 11,4,15;BACK 0,0,0;:DISPLAY:RGB:
OTHERS:SNAP 15,15,15;ZONE1 0,0,15;
ZONE2 15,4,11;ZONE3 11,15,4;
ZONE4 0,7,15;GRID 8,8,8;CURSOR 13,13,13;
MARKER 15,15,15

:DISPlay:ACCumulate?

Function Queries all accumulation settings.
Syntax :DISPlay:ACCumulate?
Example :DISPLAY:ACCUMULATE?→:DISPLAY:
ACCUMULATE:MODE OFF;
PERSISTENCE 100.0E-03;COLOR 16

:DISPlay:ACCumulate:COLor

Function Sets/queries the color grading width.
Syntax :DISPlay:ACCumulate:COLor {<NRf>}
:DISPlay:ACCumulate:COLor?
<NRf>=2 to 2048 (in steps of 2ⁿ)
Example :DISPLAY:ACCUMULATE:COLOR 16
:DISPLAY:ACCUMULATE:COLOR?→:DISPLAY:
ACCUMULATE:COLOR 16

:DISPlay:ACCumulate:MODE

Function Selects/queries the accumulation mode.
Syntax :DISPlay:ACCumulate:MODE {COLor|OFF|
PERSistence}
:DISPlay:ACCumulate:MODE?
Example :DISPLAY:ACCUMULATE:MODE PERSISTENCE
:DISPLAY:ACCUMULATE:MODE?→:DISPLAY:
ACCUMULATE:MODE PERSISTENCE

:DISPlay:ACCumulate:PERSistence

Function Sets/queries the accumulation time.
Syntax :DISPlay:ACCumulate:PERSistence {<Time>|
INFinity}
:DISPlay:ACCumulate:PERSistence?
<Time>=100 ms to 50 s (in 1-2-5 steps)
Example :DISPLAY:ACCUMULATE:PERSISTENCE 100MS
:DISPLAY:ACCUMULATE:PERSISTENCE?→
:DISPLAY:ACCUMULATE:
PERSISTENCE 100.0E-03

:DISPlay:COLor

Function Sets whether to change the screen color using
RGB or brightness or queries the current
setting.
Syntax :DISPlay:COLor {INTensity|RGB}
:DISPlay:COLor?
Example :DISPLAY:COLOR INTENSITY
:DISPLAY:COLOR?→:DISPLAY:
COLOR INTENSITY

:DISPlay:RGB?

Function Queries all settings related to the screen color.
Syntax :DISPlay:RGB?
Example :DISPLAY:RGB?→:DISPLAY:RGB:MENU:
FORE 15,15,15;BACK 0,0,7;FOCUS 0,0,7;
SELECT 0,7,15;DIALOG 7,7,7;SHADOW 0,0,0;
LINE 15,15,15;:DISPLAY:RGB:WAVEFORM:
CHANNEL1 15,15,0;CHANNEL2 0,15,0;
CHANNEL3 15,0,15;CHANNEL4 0,15,15;
MATH1 15,0,0;MATH2 15,7,0;PODA 5,5,15;
PODB 11,4,15;BACK 0,0,0;:DISPLAY:RGB:
OTHERS:SNAP 15,15,15;ZONE1 0,0,15;
ZONE2 15,4,11;ZONE3 11,15,4;
ZONE4 0,7,15;GRID 8,8,8;CURSOR 13,13,13;
MARKER 15,15,15

:DISPlay:RGB:MENU?

Function Queries all settings related to colors used in the
menu.
Syntax :DISPlay:RGB:MENU?
Example :DISPLAY:RGB:MENU?→:WAVEFORM::DISPLAY:
RGB:MENU:FORE 15,15,15;BACK 0,0,7;
FOCUS 0,0,7;SELECT 0,7,15;DIALOG 7,7,7;
SHADOW 0,0,0;LINE 15,15,15

:DISPlay:RGB:MENU:{BACK|DIALog|FOCUS|FORE|LINE|SElect|SHADow}

Function Sets the color of the characters, background, focus, select, dialog, shade, and lines of the menu screen or queries the current setting.

Syntax :DISPlay:RGB:MENU:{BACK|DIALog|FOCUS|FORE|LINE|SElect|SHADow} {<NRf>,<NRf>,<NRf>}
:DISPlay:RGB:MENU:{BACK|DIALog|FOCUS|FORE|LINE|SElect|SHADow}?
<NRf>=0 to 15 (R, G, B, in that order)

Example :DISPlay:RGB:MENU:BACK 15,15,15
:DISPlay:RGB:MENU:BACK?→:DISPlay:RGB:MENU:BACK 15,15,15

:DISPlay:RGB:OTHerS?

Function Queries all settings related to the colors of other items.

Syntax :DISPlay:RGB:OTHerS?

Example :DISPlay:RGB:OTHerS?→:DISPlay:RGB:OTHerS:SNAP 15,15,15;ZONE1 0,0,15;ZONE2 15,4,11;ZONE3 11,15,4;ZONE4 0,7,15;GRID 8,8,8;CURSOR 13,13,13;MARKER 15,15,15

:DISPlay:RGB:OTHerS:{CURSor|GRID|MARKer|SNAP|ZONE<x>}

Function Sets the color for cursors, grid, markers, and snapshot waveforms or queries the current setting.

Syntax :DISPlay:RGB:OTHerS:{CURSor|GRID|MARKer|SNAP|ZONE<x>} {<NRf>,<NRf>,<NRf>}
:DISPlay:RGB:OTHerS:{CURSor|GRID|MARKer|SNAP|ZONE<x>}?
<x>=1 or 2
<NRf>=0 to 15 (R, G, B, in that order)

Example :DISPlay:RGB:OTHerS:CURSOR 0,0,0
:DISPlay:RGB:OTHerS:CURSOR?→:DISPlay:RGB:OTHerS:CURSOR 0,0,0

:DISPlay:RGB:WAVeform?

Function Queries all settings related to the waveform colors.

Syntax :DISPlay:RGB:WAVeform?

Example :DISPlay:RGB:WAVeform?→:DISPlay:RGB:WAVeform:CHANNEL1 15,15,0;CHANNEL2 0,15,0;CHANNEL3 15,0,15;CHANNEL4 0,15,15;MATH1 15,0,0;MATH2 15,7,0;PODA 5,5,15;PODB 11,4,15;BACK 0,0,0

:DISPlay:RGB:WAVeform:{CHANnel<x>|BACK|MATH<x>|PODA|PODB}

Function Sets the colors for waveform, computation, and logic channels and the background or queries the current setting.

Syntax :DISPlay:RGB:WAVeform:{CHANnel<x>|BACK|MATH<x>|PODA|PODB} {<NRf>,<NRf>,<NRf>}
:DISPlay:RGB:WAVeform:{CHANnel<x>|BACK|MATH<x>|PODA|PODB}
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2
<NRf>=0 to 15 (R, G, B, in that order)

Example :DISPlay:RGB:WAVeform:CHANNEL1 0,0,0
:DISPlay:RGB:WAVeform:CHANNEL1?→:DISPlay:RGB:WAVeform:CHANNEL1 0,0,0

:DISPlay:FORMat

Function Sets/queries the display format.

Syntax :DISPlay:FORMat {SINGLe|DUAL|TRIad|QUAD|HEXa}
:DISPlay:FORMat?

Example :DISPlay:FORMat QUAD
:DISPlay:FORMat?→:DISPlay:FORMat QUAD

:DISPlay:GRATicule

Function Sets/queries the graticule.

Syntax :DISPlay:GRATicule {CROSShair|FRAME|GRID}
:DISPlay:GRATicule?

Example :DISPlay:GRATicule GRID
:DISPlay:GRATicule?→:DISPlay:GRATicule GRID

:DISPlay:INTENsity?

Function Queries all settings related to the brightness of the displayed items.

Syntax :DISPlay:INTENsity?

Example :DISPlay:INTENsity?→:DISPlay:INTENsity:MENU 10;WAVeform 10;SNAP 10;GRID 10;CURSOR 10

:DISPlay:INTENsity:{CURSor|MENU|GRID|SNAP|WAVeform}

Function Sets the brightness of each display item or queries the current setting.

Syntax :DISPlay:INTENsity:{CURSor|MENU|GRID|SNAP|WAVeform} {<NRf>}
:DISPlay:INTENsity:{CURSor|MENU|GRID|SNAP|WAVeform}?
<NRf>=1 to 15

Example (The following example is for the cursor.)
:DISPlay:INTENsity:CURSOR 6
:DISPlay:INTENsity:CURSOR?→:DISPlay:INTENsity:CURSOR 6

5.9 DISPlay Group

:DISPlay:INTERpolate

Function Selects/queries the interpolation method.
Syntax :DISPlay:INTERpolate {LINE|OFF|PULSE|
 SINE}
 :DISPlay:INTERpolate?
Example :DISPLAY:INTERPOLATE LINE
 :DISPLAY:INTERPOLATE?→:DISPLAY:
 INTERPOLATE LINE

:DISPlay:MAPPING

Function Sets/queries the mapping mode.
Syntax :DISPlay:MAPPING {AUTO|FIXED|USERdefine}
 :DISPlay:MAPPING?
Example :DISPLAY:MAPPING AUTO
 :DISPLAY:MAPPING?→:DISPLAY:MAPPING AUTO

:DISPlay:SMAPPING?

Function Queries all settings relating to the assignment
 of the waveforms to the split window.
Syntax :DISPlay:SMAPPING?
Example :DISPLAY:SMAPPING?→:DISPLAY:SMAPPING:
 CHANNEL1 0;CHANNEL2 1;CHANNEL3 2;
 CHANNEL4 3;MATH1 4;MATH2 5

:DISPlay:SMAPPING:{CHANnel<x>|MATH<x>} (Set Mapping)

Function Sets/queries the assignment of the waveforms
 to the split window.
Syntax :DISPlay:SMAPPING:{CHANnel<x>|MATH<x>}
 {<Nrf>}
 :DISPlay:SMAPPING:{CHANnel<x>|MATH<x>}?
 CHANnel<x>=1 to 4
 <x> of MATH<x>=1, 2
 <Nrf>=0 to 5
Example (Below is an example of CH1.)
 :DISPLAY:SMAPPING:CHANNEL1
 0:DISPLAY:SMAPPING:CHANNEL1?→:DISPLAY:
 SMAPPING:CHANNEL1 0

:DISPlay:SVALue (Scale VALUE)

Function Selects/queries whether scaling values are
 displayed.
Syntax :DISPlay:SVALue {<Boolean>}
 :DISPlay:SVALue?
Example :DISPLAY:SVALUE OFF
 :DISPLAY:SVALUE?→:DISPLAY:SVALUE 0

:DISPlay:TLABEL (Trace LABEL)


Function Selects/queries whether waveform labels are
 displayed.
Syntax :DISPlay:TLABEL {<Boolean>}
 :DISPlay:TLABEL?
Example :DISPLAY:TLABEL ON
 :DISPLAY:TLABEL?→:DISPLAY:TLABEL 1
Description You can set a user defined waveform label
 using the ":CHANnel<x>:LABEL" command.

:DISPlay:TRANslucent


Function Sets/queries the ON/OFF condition of the
 translucent mode of the pop-up menu.
Syntax :DISPlay:TRANslucent {<Boolean>}
 :DISPlay:TRANslucent?
Example :DISPLAY:TRANSLUCEENT ON
 :DISPLAY:TRANSLUCEENT?→:DISPLAY:
 TRANSLUCEENT 1


5.10 FILE Group

These commands control operation of floppy disks, MO disks, and external SCSI devices. This allows you to make the same settings and queries that can be made using the FILE key.

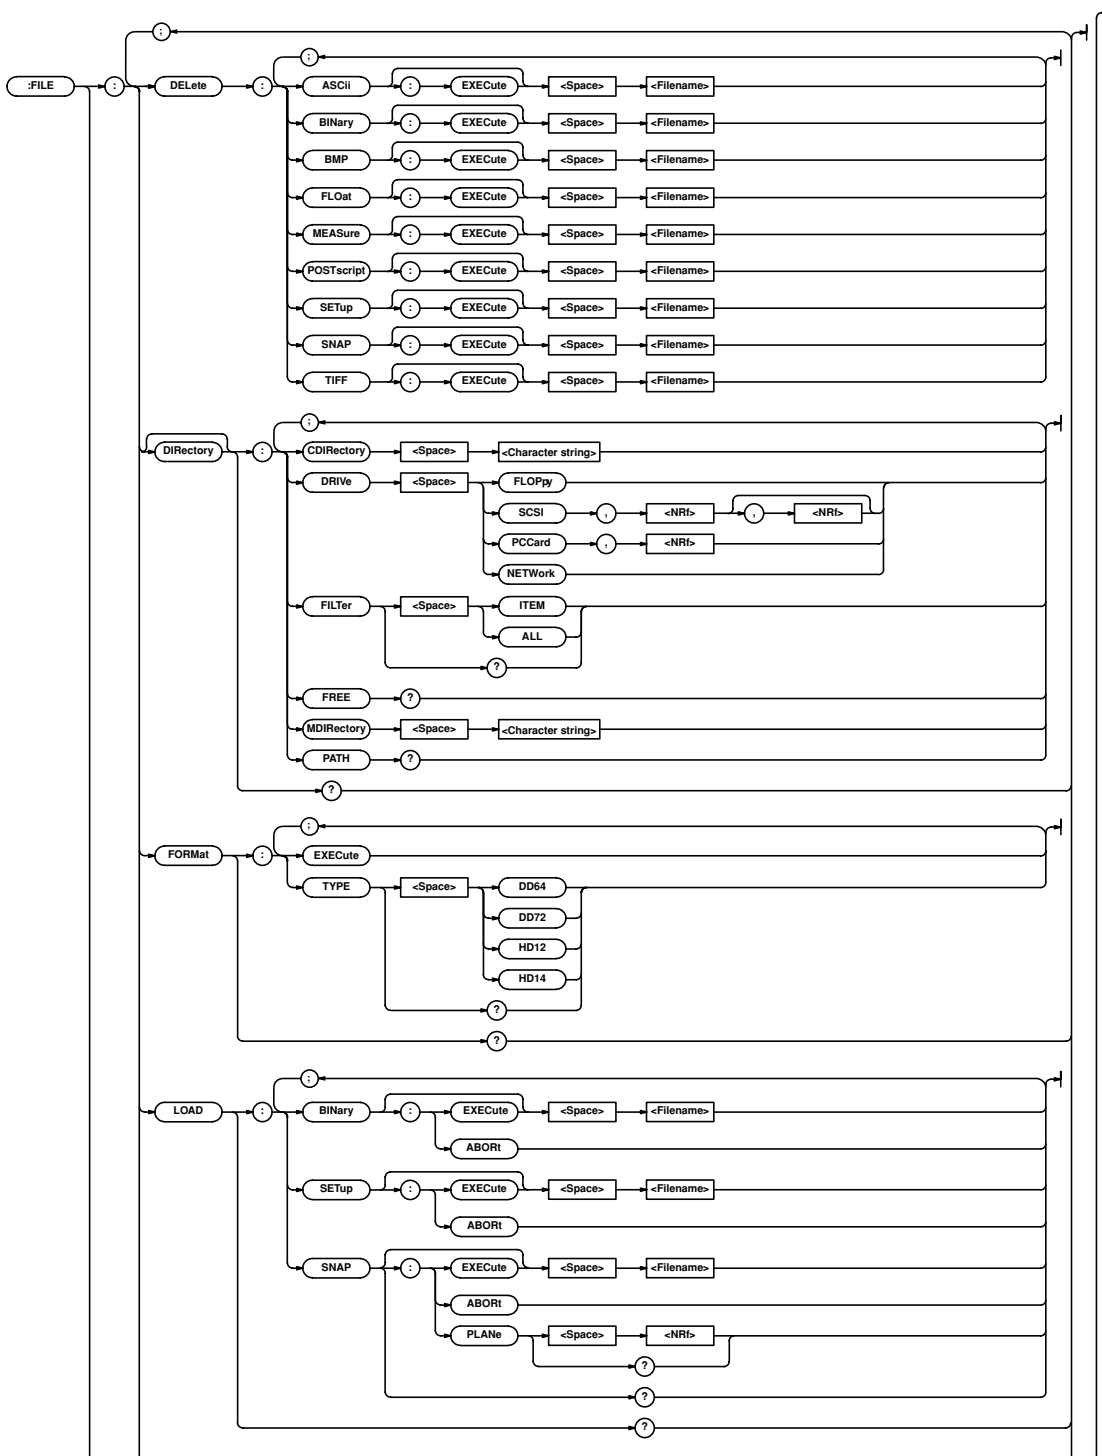

5.10 FILE Group

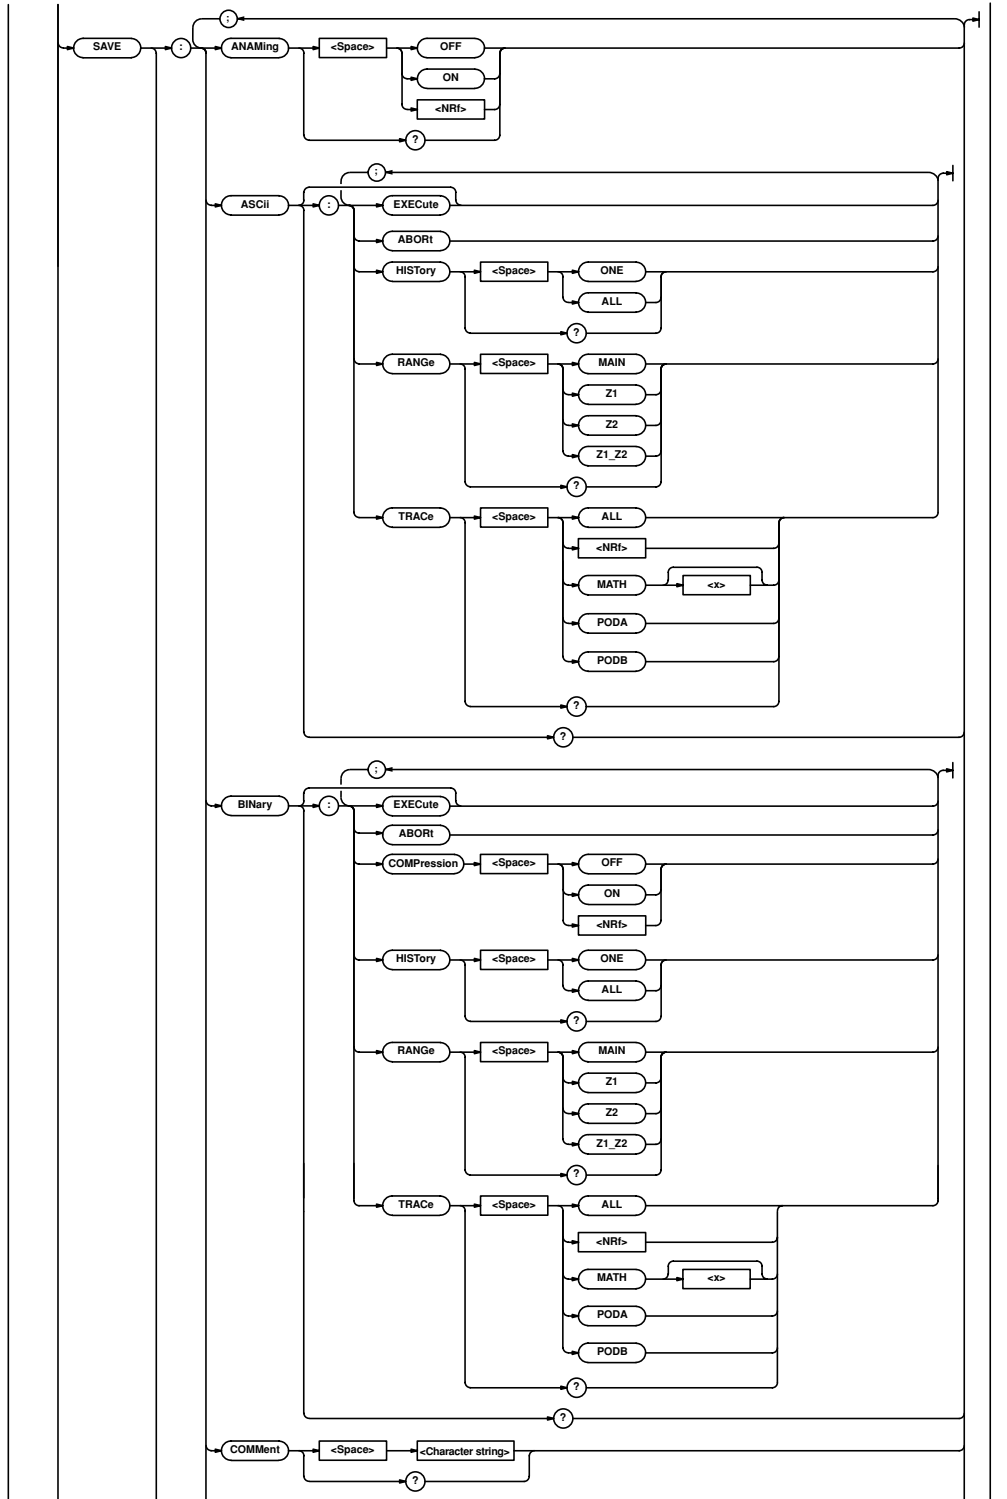

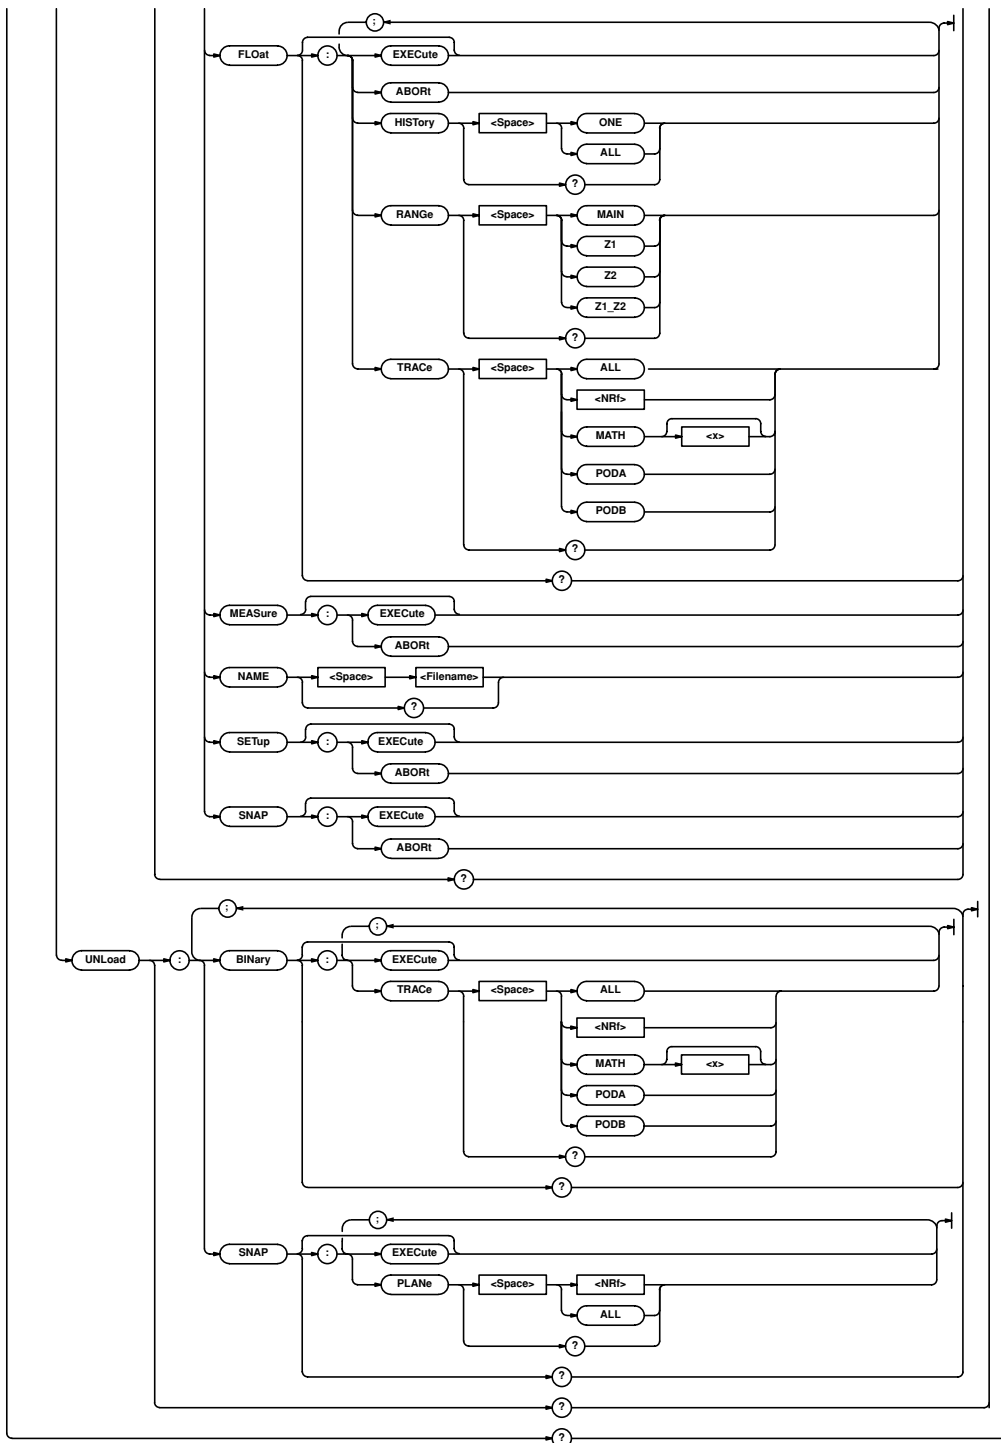

5.10 FILE Group

:FILE?

Function Queries the settings for the specified medium.
Syntax :FILE?
Example :FILE?→:FILE:DIRECTORY:FILTER ITEM;:
FILE:SAVE:BINARy:TRAcE 1;RANGE MAIN;
HISTORy ONE;COMPRESSIOn 0;:FILE:ASCIi:
TRAcE 1;RANGE MAIN;HISTORy ONE;:FILE:
FLOAt:TRAcE 1;RANGE MAIN;HISTORy ONE;:
SAVE:ANAMING 0;:NAME "SAVED1";:
COMMENT "TEST1";:FILE:LOAD:SNAP:
PLANE 1;:FILE:UNLOAD:BINARy:TRAcE 1;
FILE:UNLOAD:SNAP:PLANE 1;:FILE:COPI:
DISTINATIOn:DRIVE FLOPPY;:FILE:FORMAt:
TYPE HD14

:FILE:DELeTe:{ASCIi|BINARy|BMPIFLOAt| MEASure|POSTscript|SETup|SNAP|TIFF}; [EXECute]

Function Deletes various types of data files. This is an overlap command.
Syntax :FILE:DELeTe:{ASCIi|BINARy|BMPIFLOAt|
MEASure|POSTscript|SETup|SNAP|TIFF};
[EXECute] <Filename>
Example (The following example is for the setup data.)
:FILE:DELeTe:SETUP "COPIED1"
Description Select the medium using the
":FILE:DIRectory:DRIVE" command.

:FILE:DIRectory?

Function Queries all settings related to the current medium.
Syntax :FILE:DIRectory?
Example :FILE:DIRectory?→:FILE:DIRectory:
FILTER ITEM

:FILE[:DIRectory]:CDIRectory (Change Directory)

Function Changes the current directory.
Syntax :FILE[:DIRectory]:CDIRectory <Character string>
Example :FILE[:DIRectory]:CDIRectory "NO_1"

:FILE[:DIRectory]:DRIVE

Function Selects the current medium.
Syntax :FILE[:DIRectory]:DRIVE {FLOPPy|SCSI,
<NRf>[,<NRf>]IPCCard,<NRf>|NETWork}
The first <NRf>=SCSI address (0 to 7)
The second <NRf>=Partitions (0 to 4)
PCCard's <NRf>=Partitions (0 to 4)
Example :FILE[:DIRectory]:DRIVE SCSI,0,2
Description If the drive does not contain partitions, omit the
second <NRf>. "PC Card" can only be set for
models with the PC Card option installed.
"Network" can be set on a DL7200 or on a
DL7100 with firmware version 2.01 and later.

:FILE[:DIRectory]:FILTer

Function Sets a filter on the current file or queries the current setting.
Syntax :FILE[:DIRectory]:FILTer {ITEM|ALL}
:FILE[:DIRectory]:FILTer?
Example :FILE[:DIRectory]:FILTer ITEM
:FILE[:DIRectory]:FILTer?→:FILE[:
DIRectory]:FILTer ITEM

:FILE[:DIRectory]:FREE?

Function Queries the free space (number of bytes) on the current medium.
Syntax :FILE[:DIRectory]:FREE?
Example :FILE:DIRectory:FREE?→:FILE:DIRectory:
FREE 65536

:FILE[:DIRectory]:MDIRectory (Make Directory)

Function Creates a directory in the current directory. This is an overlap command.
Syntax :FILE[:DIRectory]:MDIRectory <Character string>
Example :FILE:DIRectory:MDIRectory "NO_1"

:FILE[:DIRectory]:PATH?

Function Queries the current path.
Syntax :FILE[:DIRectory]:PATH?
Example :FILE[:DIRectory]:PATH?→:FILE[:
DIRectory]:PATH "PATH = FD0"

:FILE:FORMAt?

Function Queries all settings related to the formatting of the floppy disk.
Syntax :FILE:FORMAt?
Example :FILE:FORMAt?→:FILE:FORMAt:TYPE HD14

:FILE:FORMat:EXECute

Function Formats the floppy disk. This is an overlap command.

Syntax :FILE:FORMat:EXECute

Example :FILE:FORMat:EXECUTE

Description Only the medium that is selected with the "FILE:FORMat:DRIVE" command is formatted.

:FILE:FORMat:TYPE

Function Sets the format type for the floppy disk or queries the current setting.

Syntax :FILE:FORMat:TYPE {DD64|DD72|HD12|HD14}

Example :FILE:FORMat:TYPE HD12

:FILE:FORMat:TYPE?→:FILE:FORMat:TYPE HD12

:FILE:LOAD?

Function Queries all settings related to file loading.

Syntax :FILE:LOAD?

Example :FILE:LOAD?→:FILE:LOAD:SNAP:PLANE 1

:FILE:LOAD:{BINary|SETup|SNAP}:ABORT

Function Aborts loading the data.

Syntax :FILE:LOAD:{BINary|SETup|SNAP}:ABORT

Example (The following example is for the setup data.)

:FILE:LOAD:SETUP:ABORT

:FILE:LOAD:{BINary|SETup|SNAP}[:EXECute]

Function Loads the data. This is an overlap command.

Syntax :FILE:LOAD:{BINary|SETup|SNAP}[:EXECute] <Filename>

Example (The following example is for the setup data.)

:FILE:LOAD:SETUP:EXECUTE "CASE1"

:FILE:LOAD:PLANE

Function Sets the plane number of the snapshot waveform data or queries the current setting.

Syntax :FILE:LOAD:SNAP:PLANE {<NRF>}

:FILE:LOAD:SNAP:PLANE? <NRF>=1 to 4

Example :FILE:LOAD:SNAP:PLANE 1

:FILE:LOAD:SNAP:PLANE?→:FILE:LOAD:SNAP:PLANE 1

Description This query is the same as the ":FILE:LOAD?" and ":FILE:LOAD:SNAP?" queries.

:FILE:LOAD:SNAP?

Function Queries all settings related to the loading of the snapshot waveform data.

Syntax :FILE:LOAD:SNAP?

Example :FILE:LOAD:SNAP?→:FILE:LOAD:SNAP:PLANE 1

:FILE:SAVE?

Function Queries all settings related to file saving.

Syntax :FILE:SAVE?

Example :FILE:SAVE?→:FILE:SAVE:BINARY:TRACE 1; RANGE MAIN;HISTORY ONE;COMPRESSION ON;:FILE:ASCII:TRACE 1;RANGE MAIN;HISTORY ONE;:FILE:FLOAT:TRACE 1; RANGE MAIN;HISTORY ONE;:SAVE:ANAMING OFF;:NAME "SAVED1";:COMMENT "TEST1"

:FILE:SAVE:ANAMing

Function Turns the auto naming function of files ON/OFF or queries the current setting.

Syntax :FILE:SAVE:ANAMing {<Boolean>}

Example :FILE:SAVE:ANAMing ON

:FILE:SAVE:ANAMING?→:FILE:SAVE:ANAMING 1

:FILE:SAVE:{ASCIi|BINary|FLOat}?

Function Queries all settings related to various types of data.

Syntax :FILE:SAVE:{ASCIi|BINary|FLOat}?

Example :FILE:SAVE:BINARY?→:FILE:SAVE:BINARY:TRACE 1;RANGE MAIN;HISTORY ONE;COMPRESSION ON

:FILE:SAVE:{ASCIi|BINary|FLOat|MEASure|SETup|SNAP}:ABORT

Function Aborts saving the data.

Syntax :FILE:SAVE:{ASCIi|BINary|FLOat|MEASure|SETup|SNAP}:ABORT

Example (The following example is for the waveform data.)

:FILE:SAVE:BINARY:ABORT

:FILE:SAVE:{ASCIi|BINary|FLOat|MEASure|SETup|SNAP}[:EXECute]

Function Saves the data. This is an overlap command.

Syntax :FILE:SAVE:{ASCIi|BINary|FLOat|MEASure|SETup|SNAP}[:EXECute]

Example (The following example is for the waveform data.)

:FILE:SAVE:BINARY:EXECUTE

:FILE:SAVE:{ASCIi|BINary|FLOat}:HISTory

Function Sets the number of histories to save or queries the current setting.

Syntax :FILE:SAVE:{ASCIi|BINary|FLOat}:HISTory {ONE|ALL}

Example :FILE:SAVE:BINARY:HISTORY ALL

:FILE:SAVE:BINARY:HISTORY?→:FILE:SAVE:BINARY:HISTORY ALL

5.10 FILE Group

:FILE:SAVE:{ASCIi|BINary|FLOat}:RANGe

Function Sets the range of data to be saved or queries the current setting.

Syntax :FILE:SAVE:{ASCIi|BINary|FLOat}:RANGe {MAIN|Z1|Z2|Z1_Z2}

Example :FILE:SAVE:{ASCIi|BINary|FLOat}:RANGe?
:FILE:SAVE:BINARY:RANGE MAIN
:FILE:SAVE:BINARY:RANGE?→:FILE:SAVE:BINARY:RANGE MAIN

:FILE:SAVE:{ASCIi|BINary|FLOat}:TRACe

Function Sets the waveform to be saved or queries the current setting.

Syntax :FILE:SAVE:{ASCIi|BINary|FLOat}:TRACe {ALL|<NRF>|MATH<x>}

Example :FILE:SAVE:{ASCIi|BINary|FLOat}:TRACe?<NRF>=1 to 4
<x>=1 or 2
:FILE:SAVE:ASCII:TRACE 1
:FILE:SAVE:ASCII:TRACE?→:FILE:SAVE:ASCII:TRACE 1

:FILE:SAVE:BINary:COMPReSSion

Function Sets data compression on the waveform to be saved or queries the current setting.

Syntax :FILE:SAVE:BINary:COMPReSSion {<Boolean>}

Example :FILE:SAVE:BINARY:COMPReSSion?
:FILE:SAVE:BINARY:COMPReSSion ON
:FILE:SAVE:BINARY:COMPReSSion?→:FILE:SAVE:BINARY:COMPReSSion 1

Description

- The range of data that is saved is the Main screen.
- Only binary data can be compressed.

:FILE:SAVE:COMMeNt

Function Sets comments or queries the current setting.

Syntax :FILE:SAVE:COMMeNt <Character string>

Example :FILE:SAVE:COMMeNt?<Character string>=Up to 25 characters
:FILE:SAVE:COMMeNt "THIS IS TEST. "
:FILE:SAVE:COMMeNt?→:FILE:SAVE:COMMeNt "THIS IS TEST. "

Description Only the characters and symbols on the keyboard that appear on the instrument's screen can be used.
The "Ω" and "μ" symbols are represented by ASCII codes "1EH" and "1FH," respectively.

:FILE:SAVE:NAME

Function Sets the name of the file to be saved or queries the current setting.

Syntax :FILE:SAVE:NAME <Filename>

Example :FILE:SAVE:NAME "CASE1"
:FILE:SAVE:NAME?→:FILE:SAVE:NAME "CASE1"

:FILE:UNLoad?

Function Queries all settings related to clearing the loaded data.

Syntax :FILE:UNLoad?

Example :FILE:UNLOAD?→:FILE:UNLOAD:BINARY:TRACE 1;SNAP:PLANE 1

:FILE:UNLoad:{BINary|SNAP}?

Function Queries all settings related to clearing of loaded data.

Syntax :FILE:UNLoad:{BINary|SNAP}?

Example :FILE:UNLOAD:BINARY?→:FILE:UNLOAD:BINARY:TRACE 1

:FILE:UNLoad:{BINary|SNAP}[:EXECute]

Function Clears the loaded data. This is an overlap command.

Syntax :FILE:UNLoad:{BINary|SNAP}[:EXECute]

Example :FILE:UNLOAD:BINARY:EXECUTE

:FILE:UNLoad:BINary:TRACe

Function Sets the waveform to be cleared from the loaded binary data or queries the current setting.

Syntax :FILE:UNLoad:BINary:TRACe {ALL|<NRF>|MATH<x>|PODA|PODB}

Example :FILE:UNLOAD:BINARY:TRACE 1
:FILE:UNLOAD:BINARY:TRACE?→:FILE:UNLOAD:BINARY:TRACE 1

:FILE:UNLoad:SNAP:PLANE


Function Sets the plane number to be cleared from the loaded snapshot data or queries the current setting.

Syntax :FILE:UNLoad:SNAP:PLANE {ALL|<NRF>}


Example :FILE:UNLOAD:SNAP:PLANE ALL
:FILE:UNLOAD:SNAP:PLANE?→:FILE:UNLOAD:SNAP:PLANE ALL

5.11 GONogo Group

The commands in the GONogo group deal with the GO/NO-GO determination. These commands can be used to make the same settings and inquiries as when the GO/NOGO key on the front panel is pressed.

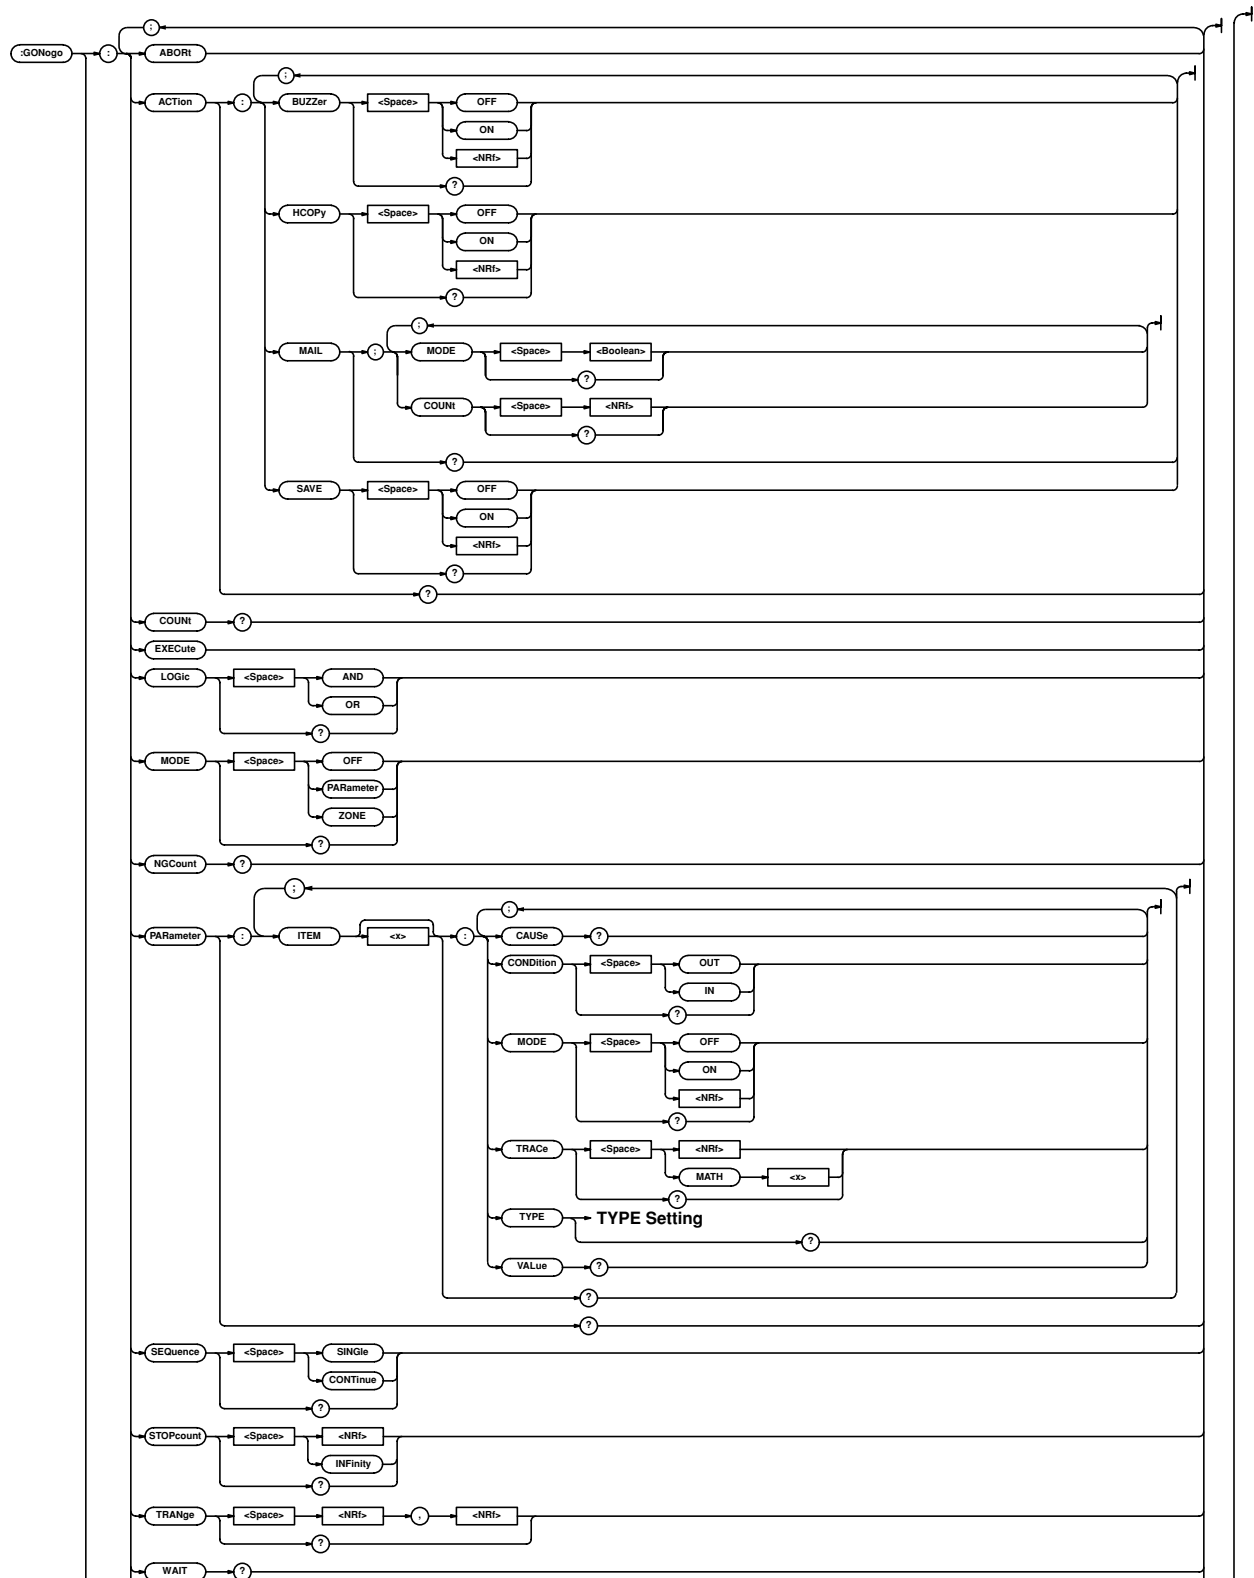

5.11 GONogo Group

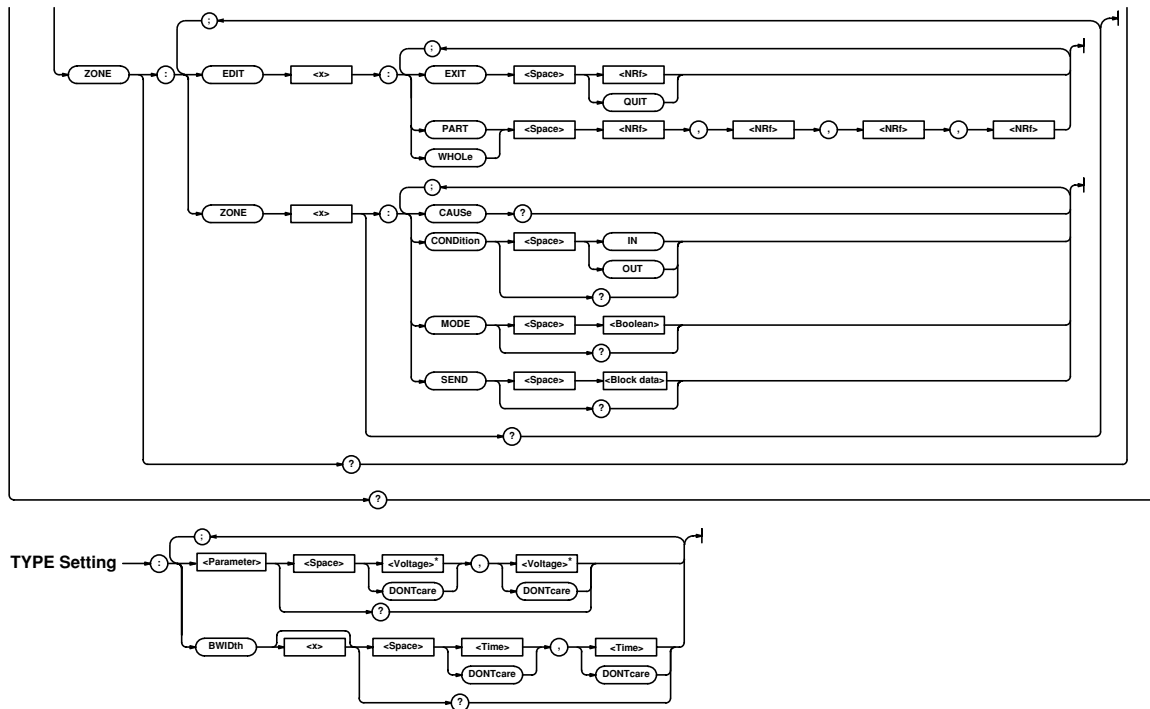

* The data value is (1) <voltage> when <parameter> is AVERage, HIGH, LOW, MAXimum, MINimum, PTOPeak, RMS, or SDEviation (however, the value is <NRf> when the parameter is being linearly scaled), (2) <time> when <parameter> is AVGPPeriod, BWIDth1, BWIDth2, DELay, FALL, NWIDth, PERiod, PWIDth, or RISE, (3) <frequency> when <parameter> is AVGFreq or FREQUency, and (4) <NRf> when <parameter> is DUTYcycle, NOVershoot, PNUMber, POVershoot, TY1Integ, TY2Integ, XY1Integ, or XY2Integ.

:GONogo?

Function Queries all settings related to GO/NO-GO determination.

Syntax :GONogo?

Example :GONOGO?→:GONOGO:MODE OFF;PARAMETER:ITEM1:MODE 0;TRACE 1;TYPE:MAXIMUM DONTCARE,DONTCARE;:GONOGO:PARAMETER:ITEM1:CONDITION OUT;:GONOGO:PARAMETER:ITEM2:MODE 0;TRACE 1;TYPE:MINIMUM DONTCARE,DONTCARE;:GONOGO:PARAMETER:ITEM2:CONDITION OUT;:GONOGO:PARAMETER:ITEM3:MODE 0;TRACE 1;TYPE:RMS DONTCARE,DONTCARE;:GONOGO:PARAMETER:ITEM3:CONDITION OUT;:GONOGO:PARAMETER:ITEM4:MODE 0;TRACE 1;TYPE:AVERAGE DONTCARE,DONTCARE;HIGH DONTCARE,DONTCARE;:GONOGO:PARAMETER:ITEM4:CONDITION OUT;:GONOGO:ZONE:ZONE1:MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE2:MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE3:MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE4:MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE5:MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE6:MODE 0;CONDITION OUT;:GONOGO:LOGIC AND;SEQUENCE SINGLE;STOPCOUNT INFINITE;ACTION:SAVE 0;HCOPY 0;BUZZER 0;:GONOGO:TRANGE -5.0000000,5.0000000

:GONogo:ABORt

Function Aborts GO/NO-GO determination.

Syntax :GONogo:ABORt

Example :GONOGO:ABORt

:GONogo:ACTIon?

Function Queries all settings related to the action to be performed when the result of the determination is NO-GO and also the determination criteria.

Syntax :GONogo:ACTIon?

Example :GONOGO:ACTIon?→:GONOGO:ACTIon:BUZZER 0;HCOPY 0;SAVE 0

:GONogo:ACTIon:BUZZer

Function Sets whether or not to sound an alarm when the determination is NO-GO or queries the current setting.

Syntax :GONogo:ACTIon:BUZZer {<Boolean>}
:GONogo:ACTIon:BUZZer?

Example :GONOGO:ACTIon:BUZZER OFF
:GONOGO:ACTIon:BUZZER?→:GONOGO:ACTIon:BUZZER 0

:GONogo:ACTion:HCOPY (Hard COPY)

Function Sets whether or not to make a hard copy to the built-in printer (option) when the determination results in NO-GO or queries the current setting.

Syntax :GONogo:ACTion:HCOPY {<Boolean>}
:GONogo:ACTion:HCOPY?

Example :GONOGO:ACTion:HCOPY OFF
:GONOGO:ACTion:HCOPY?→:GONOGO:ACTion:HCOPY 0

:GONogo:ACTion:MAIL?

Function Queries the all settings for an e-mail to be sent when the determination is NO-GO.

Syntax :GONogo:ACTion:MAIL?

Example :GONOGO:ACTion:MAIL?→:GONOGO:ACTion:MAIL:MODE 1;COUNT 100

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:GONogo:ACTion:MAIL:COUNT

Function Sets/queries the maximum number of e-mail to be sent when the determination is NO-GO.

Syntax :GONogo:ACTion:MAIL:COUNT {<Nrf>}
:GONogo:ACTion:MAIL:COUNT?
<Nrf>=1 to 1000

Example :GONOGO:ACTion:MAIL:COUNT 100
:GONOGO:ACTion:MAIL:COUNT?→:GONOGO:ACTion:MAIL:COUNT 100

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:GONogo:ACTion:MAIL:MODE

Function Sets/queries whether an e-mail report is sent when the determination is NO-GO.

Syntax :GONogo:ACTion:MAIL:MODE {<Boolean>}
:GONogo:ACTion:MAIL:MODE?

Example :GONOGO:ACTion:MAIL:MODE OFF
:GONOGO:ACTion:MAIL:MODE?→:GONOGO:ACTion:MAIL:MODE 0

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:GONogo:ACTion:SAVE

Function Sets whether or not to save the NO-GO result to the medium or queries the current setting.

Syntax :GONogo:ACTion:SAVE {<Boolean>}
:GONogo:ACTion:SAVE?

Example :GONOGO:ACTion:SAVE OFF
:GONOGO:ACTion:SAVE?→:GONOGO:ACTion:SAVE 0

Description Use the ":FILE:DIRECTORY:DRIVE" command to set or query the medium type.

:GONogo:COUNT?

Function Queries the actual number of times the GO/NO-GO determination has been performed.

Syntax :GONogo:COUNT?

Example :GONOGO:COUNT?→:GONOGO:COUNT 100

:GONogo:EXECute

Function Executes GO/NO-GO determination. This is an overlap command.

Syntax :GONogo:EXECute

Example :GONOGO:EXECUTE

:GONogo:LOGic

Function Sets the GO/NO-GO determination logic or queries the current setting.

Syntax :GONogo:LOGic {<AND|OR>}
:GONogo:LOGic?

Example :GONOGO:LOGIC AND
:GONOGO:LOGIC?→:GONOGO:LOGIC AND

:GONogo:MODE

Function Sets the GO/NO-GO determination type or queries the current setting.

Syntax :GONogo:MODE {<OFF|PARAMETER|ZONE>}
:GONogo:MODE?

Example :GONOGO:MODE PARAMETER
:GONOGO:MODE?→:GONOGO:MODE PARAMETER

:GONogo:NGCount?

Function Queries the number of NO-GO results.

Syntax :GONogo:NGCount?

Example :GONOGO:NGCOUNT?→:GONOGO:NGCOUNT 5

:GONogo:PARAmeter?

Function Queries all settings related to the parameter determination.

Syntax :GONogo:PARAmeter?

Example :GONOGO:PARAmeter?→:GONOGO:PARAmeter:ITEM1:MODE 0;TRACE 1;TYPE:MAXIMUM 1.0000E+00,-1.0000E+00;:GONOGO:PARAmeter:ITEM1:CONDITION OUT;:GONOGO:PARAmeter:ITEM2:MODE 0;TRACE 1;TYPE:MINIMUM 1.0000E+00,-1.0000E+00;:GONOGO:PARAmeter:ITEM2:CONDITION OUT;:GONOGO:PARAmeter:ITEM3:MODE 0;TRACE 1;TYPE:RMS 1.0000E+00,-1.0000E+00;:GONOGO:PARAmeter:ITEM3:CONDITION OUT;:GONOGO:PARAmeter:ITEM4:MODE 0;TRACE 1;TYPE:AVERAGE 1.0000E+00,-1.0000E+00;:GONOGO:PARAmeter:ITEM4:CONDITION OUT

5.11 GONogo Group

:GONogo:PARAmeter:ITEM<x>?

Function Queries all settings related to waveform parameters.

Syntax :GONogo:PARAmeter:ITEM<x>?
<x>=1 to 4

Example :GONOGO:PARAMETER:ITEM1?→:GONOGO:PARAMETER:ITEM1:MODE 0;TRACE 1;TYPE:MAXIMUM 1.0000E+00,-1.0000E+00;:GONOGO:PARAMETER:ITEM1:CONDITION OUT

:GONogo:PARAmeter:ITEM<x>:CAUSE?

Function Queries whether or not the waveform parameter is the cause of the NO-GO result.

Syntax :GONogo:PARAmeter:ITEM<x>:CAUSE?
<x>=1 to 4

Example :GONOGO:PARAMETER:ITEM1:CAUSE?→:GONOGO:PARAMETER:ITEM1:CAUSE 1

Description The query returns a "1" if the parameter is the cause of the NO-GO result or a "0" if it is not.

:GONogo:PARAmeter:ITEM<x>:CONDition

Function Sets the criteria for each waveform parameter or queries the current setting.

Syntax :GONogo:PARAmeter:ITEM<x>:CONDition {IN|OUT}
:GONogo:PARAmeter:ITEM<x>:CONDition?
<x>=1 to 4

Example :GONOGO:PARAMETER:ITEM1:CONDITION OUT
:GONOGO:PARAMETER:ITEM1:CONDITION?→
:GONOGO:PARAMETER:ITEM1:CONDITION OUT

:GONogo:PARAmeter:ITEM<x>:MODE

Function Turns the waveform parameter ON/OFF or queries the current setting.

Syntax :GONogo:PARAmeter:ITEM<x>:MODE {<Boolean>}
:GONogo:PARAmeter:ITEM<x>:MODE?
<x>=1 to 4

Example :GONOGO:PARAMETER:ITEM<x>:MODE OFF
:GONOGO:PARAMETER:ITEM<x>:MODE?→
:GONOGO:PARAMETER:ITEM<x>:MODE 0

:GONogo:PARAmeter:ITEM<x>:TRACe

Function Sets the waveform on which to use the waveform parameter or queries the current setting.

Syntax :GONogo:PARAmeter:ITEM<x>:TRACe {<NRF>|MATH<x>}
:GONogo:PARAmeter:ITEM<x>:TRACe?
The <x> in ITEM<x>=1 to 4
<NRF>=1 to 4
The <x> in MATH<x>=1 or 2

Example :GONOGO:PARAMETER:ITEM1:TRACE 1
:GONOGO:PARAMETER:ITEM1:TRACE?→
:GONOGO:PARAMETER:ITEM1:TRACE 1

:GONogo:PARAmeter:ITEM<x>:TYPE?

Function Queries the waveform parameter and the upper and lower limits.

Syntax :GONogo:PARAmeter:ITEM<x>:TYPE?
<x>=1 to 4

Example :GONOGO:PARAMETER:ITEM1:TYPE?→:GONOGO:PARAMETER:ITEM1:TYPE:
PTOPEAK 2.000E+00,1.000E+00

:GONogo:PARAmeter:ITEM<x>:TYPE:<parameter>

Function Sets the upper and lower limits of each waveform parameter or queries the current setting.

Syntax :GONogo:PARAmeter:ITEM<x>:TYPE:<parameter> {<{voltage|DONTcare}>,<{voltage|DONTcare}>|<{time|DONTcare}>,<{time|DONTcare}>|<{frequency|DONTcare}>,<{frequency|DONTcare}>|<{<NRF>}|DONTcare}>,<{<NRF>}|DONTcare}>}
:GONogo:PARAmeter:ITEM<x>:TYPE:<parameter>?
<parameter>={AVERAge|AVGFreq|AVGPeriod|BWiDth1|BWiDth2|DELay|DUTYcycle|FALL|FREQuency|HIGH|LOW|MAXimum|MINimum|NOVershoot|NWiDth|PERIOD|PNUMBER|POVershoot|PTOPeak|PWiDth|RISE|RMS|SDEVIation|TY1Integ|TY2Integ|XY1Integ|XY2Integ}
<voltage>,<time>,<frequency>,<NRF>=
See the IM701410-01E User's Manual.

Example :GONOGO:PARAMETER:ITEM1:TYPE:AVERAGE
100mV,-100mV
:GONOGO:PARAMETER:ITEM1:TYPE:AVERAGE?→
:GONOGO:PARAMETER:ITEM1:TYPE:
AVERAGE 100.0E-03,-100.0E-03

Description Only the parameters that are set using this command can be queried.

:GONogo:PARAmeter:ITEM<x>:VALue?

Function Queries the measured value of each waveform parameter.

Syntax :GONogo:PARAmeter:ITEM<x>:VALue?
<x>=1 to 4

Example :GONOGO:PARAMETER:ITEM1:VALUE?→
:GONOGO:PARAMETER:ITEM1:VALUE 1.98E-03

Description If the measurement is not possible (the mode is OFF, for example), "NAN(Not A Number)" is returned.

:GONogo:SEQuence

Function Selects single or continuous action or queries the current setting.

Syntax :GONogo:SEQuence {CONTInuous|SINGle}
:GONogo:SEQuence?

Example :GONOGO:SEQUENCE SINGLE
:GONOGO:SEQUENCE?→:GONOGO:
SEQUENCE SINGLE

:GONogo:STOPcount

Function Sets the number of waveform acquisitions on which to perform GO/NO-GO determination or queries the current setting.

Syntax :GONogo:STOPcount {<Nrf>|INfInity}
:GONogo:STOPcount?
<Nrf>=1 to 65536

Example :GONOGO:PARAMETER:STOPCOUNT 10
:GONOGO:PARAMETER:STOPCOUNT?→:GONOGO:
STOPCOUNT 10

:GONogo:TRANge

Function Sets the range over which to perform GO/NO-GO determination or queries the current setting.

Syntax :GONogo:TRANge {<Nrf>},{<Nrf>}
:GONogo:TRANge?
<Nrf>=-5.00 to 5.00 (10 div/displayed
record length steps)

Example :GONOGO:TRANGE -5.00,5.00
:GONOGO:TRANGE?→:GONOGO:
TRANGE -5.00,5.00

:GONogo:WAIT?

Function Waits for the GO/NO-GO determination to complete with a timeout.

Syntax :GONogo:WAIT? {<Nrf>}
<Nrf>=0 to 8640000 (in units of 10 ms)

Example (Set the timeout to 5 s.)
:GONOGO:WAIT? 500→:GONOGO:WAIT 0

Description Returns "1" if it times out, "0" if it completes before timing out.

:GONogo:ZONE?

Function Queries all settings related to zone determination.

Syntax :GONogo:ZONE?

Example :GONOGO:ZONE?→:GONOGO:ZONE:ZONE1:
MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE2:
MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE3:
MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE4:
MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE5:
MODE 0;CONDITION OUT;:GONOGO:ZONE:ZONE6:
MODE 0;CONDITION OUT;:GONOGO:LOGIC AND

:GONogo:ZONE:EDIT<x>:EXIT

Function Exits from the edit menu of the zone for zone determination.

Syntax :GONogo:ZONE:EDIT<x>:EXIT {<Nrf>|QUIT}
<X>=1 to 12 (1 to 4 are traces; 5 and 6
is MATH1 and 2; 7 to 12 are
determination zones 1 to 6.)
<Nrf>=1 to 6 (destination zone No. for
saving the zone being edited)

Example :GONOGO:ZONE:EDIT1:EXIT 1

Description This command must be issued to keep the zones specified using "GONogo:ZONE:EDIT<x>:{PART|WHOLE}." An error occurs if this command is issued when the zone is not being edited.

:GONogo:ZONE:EDIT<x>:PART

Function Edits a portion of the zone for zone determination.

Syntax :GONogo:ZONE:EDIT<x>:PART {<Nrf>,<Nrf>,
<Nrf>,<Nrf>}
<X>=1 to 12 (1 to 4 are traces; 5 and 6
is MATH1 and 2; 7 to 12 are
determination zones 1 to 6.)
<Nrf>=-5.00 to 5.00 (div, 0.01 steps: T1
and T2 cursor)
-8.00 to 8.00 (div, 0.05 steps: up
and down)
(in the order T1, T2, ↑, and ↓)

Example :GONOGO:ZONE:EDIT1:PART -2.50,2.50,1.00,
1.00

Description When you finish editing, you must exit the edit mode using the "GONogo:ZONE:EDIT<x>:EXIT" command to keep the new zone.

:GONogo:ZONE:EDIT<x>:WHOLE

Function Edits the zone for zone determination.

Syntax :GONogo:ZONE:EDIT<x>:WHOLE {<Nrf>,<Nrf>,
<Nrf>,<Nrf>}
<X>=1 to 12 (1 to 4 are traces; 5 and 6
is MATH1 and 2; 7 to 12 are
determination zones 1 to 6.)
<Nrf>=0 to 5.00 (div, 0.01 steps: left
and right)
0 to 8.00 (div, 0.05 steps: up and
down)
(in the order ←,→,↑, and ↓)

Example :GONOGO:ZONE:EDIT1:WHOLE -2.50,2.50,
1.00,1.00

Description When you finish editing, you must exit the edit mode using the "GONogo:ZONE:EDIT<x>:EXIT" command to keep the new zone.

5.11 GONogo Group

:GONogo:ZONE:ZONE<x>?

Function Queries all settings related to zone determination of the specified zone.

Syntax :GONogo:ZONE:ZONE<x>?
<x>=1 to 6

Example :GONOGO:ZONE:ZONE1?→:GONOGO:ZONE:ZONE1:
MODE 0;CONDITION OUT

:GONogo:ZONE:ZONE<x>:CAUSE?

Function Queries whether or not the specified zone for zone determination is the cause of the NO-GO result.

Syntax :GONogo:ZONE:ZONE<x>:CAUSE?
<x>=1 to 6

Example :GONOGO:ZONE:ZONE1:CAUSE?→:GONOGO:ZONE:
ZONE1:CAUSE 1

Description The query returns a "1" if the zone is the cause of the NO-GO result or a "0" if it is not.

:GONogo:ZONE:ZONE<x>:CONDition

Function Sets the criteria for the zone for zone determination or queries the current setting.

Syntax :GONogo:ZONE:ZONE<x>:CONDition {IN|OUT}
:GONogo:ZONE:ZONE<x>:CONDition?
<x>=1 to 6

Example :GONOGO:ZONE:ZONE1:CONDITION IN
:GONOGO:ZONE:ZONE1:CONDITION?→:GONOGO:
ZONE:ZONE1:CONDITION IN

:GONogo:ZONE:ZONE<x>:MODE

Function Turns ON/OFF the determination of the zone or queries the current setting.

Syntax :GONogo:ZONE:ZONE<x>:MODE {<Boolean>}
:GONogo:ZONE:ZONE<x>:MODE?
<x>=1 to 6

Example :GONOGO:ZONE:ZONE1:MODE ON
:GONOGO:ZONE:ZONE1:MODE?→:GONOGO:ZONE:
ZONE1:MODE 1

:GONogo:ZONE:ZONE<x>:SEND

Function Sets the zone data specified for the determination zone or queries the current setting.

Syntax :GONogo:ZONE:ZONE<x>:SEND #6004028
(data string)
:GONnogo:ZONE:ZONE<x>:SEND?
<x>=1 to 6


Example :GONOGO:ZONE:ZONE1:SEND #6004028
(data string)
:GONOGO:ZONE:ZONE1:SEND?→:GONOGO:ZONE:
ZONE1:SEND #6004028(data string)

Description


- The (data string) consists of zone data of length 4028 bytes.
- Zone data consist of 8-bit data (0 to 255). This data string may contain ASCII codes "0AH" or "00H" that stand for "NL ." Hence, care must be taken when programming the controller.
- This command is used to save the zone data to the PC and set the data as zone data on the instrument.
- When this command is used to set the zone data to the instrument to perform the determination, issue the "GONogo:ZONE:ZONE<x>:MODE ON" command afterwards.

5.12 HCOPY Group

The commands in the HCOPY group are used to make settings and queries about screen image data output, for example, output to the optional built-in printer. You can make the same settings that you can make by pressing the SHIFT key, then pressing the COPY key.

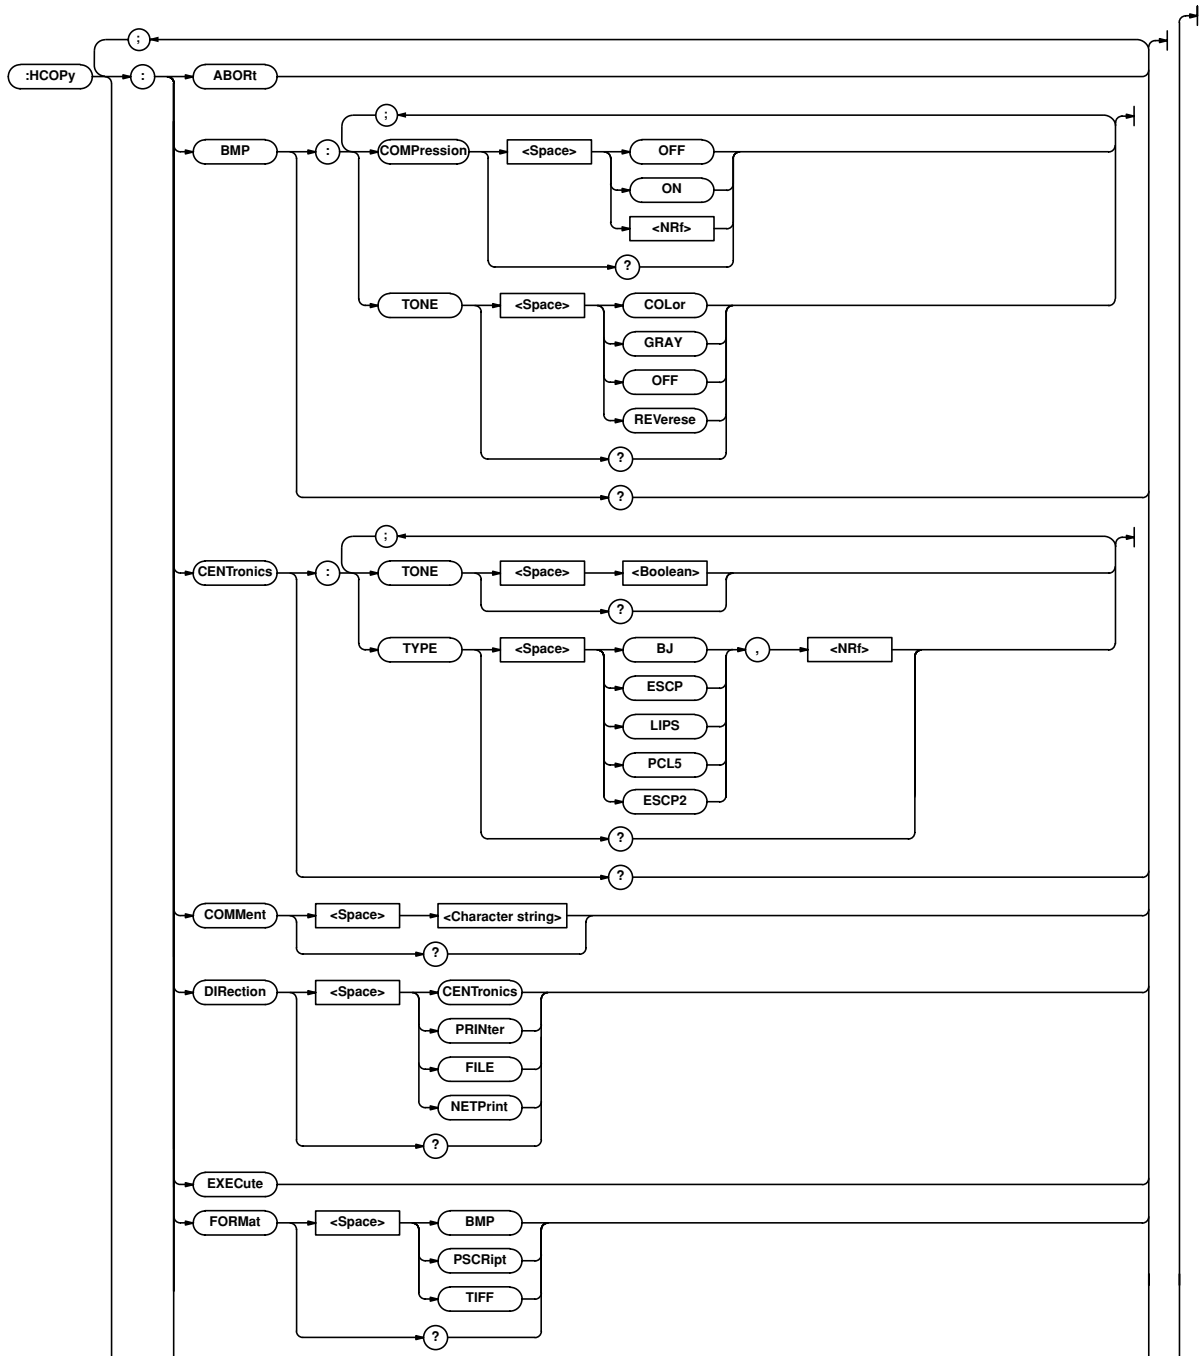

5.12 HCOPy Group

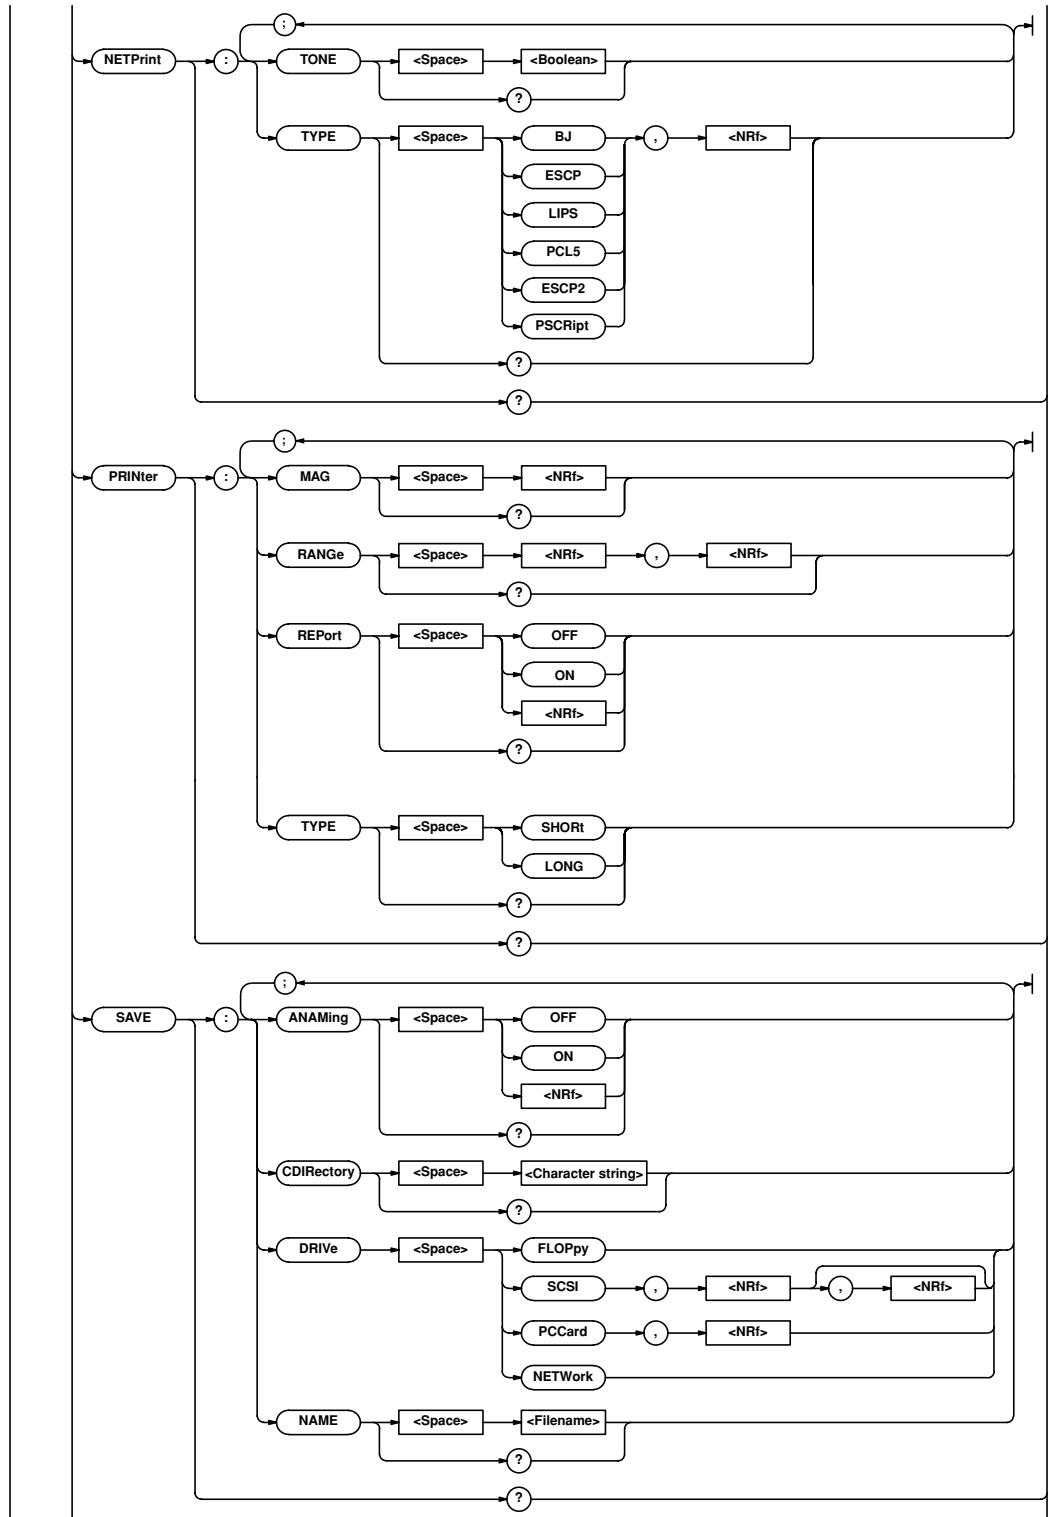

5.12 HCOPY Group

:HCOPY:COMment

Function Sets/queries the comment to be displayed at the screen.

Syntax :HCOPY:COMment <Character string>
:HCOPY:COMment?

Example <Character string>=Within 20 characters
:HCOPY:COMment "THIS IS TEST."
:HCOPY:COMment?→:HCOPY:
COMment "THIS IS TEST."

:HCOPY:DIRection

Function Sets/queries the data output destination.

Syntax :HCOPY:DIRection {CENTronics|PRINter|
FILE|NETPrint}
:HCOPY:DIRection?

Example :HCOPY:DIRection FILE
:HCOPY:DIRection?→:HCOPY:DIRection FILE

Description "NETPrint" can be set on a DL7200 or on a DL7100 with firmware version 2.01 and later.

:HCOPY:EXECute

Function Executes data output. This is an overlap command.

Syntax :HCOPY:EXECute

Example :HCOPY:EXECute

:HCOPY:FORMat

Function Sets the format of the image that is to be saved to the file or queries the current setting.

Syntax :HCOPY:FORMat {BMP|PSCRipt|TIFF}
:HCOPY:FORMat?

Example :HCOPY:FORMat BMP
:HCOPY:FORMat?→:HCOPY:FORMat BMP

Description This setting is void if "FILE" is not selected with the "HCOPY:DIRection" command.

:HCOPY:NETprint?

Function Queries all settings values involving output to network printers.

Syntax :HCOPY:NETPrint?

Example :HCOPY:NETPRINT?→:HCOPY:NETPRINT:
TYPE POSTSCRIPT;TONE 1

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:HCOPY:NETprint:TONE

Function Sets/queries halftones for output to network printers.

Syntax :HCOPY:NETPrint:TONE {<Boolean>}
:HCOPY:NETPrint:TONE?

Example :HCOPY:NETPRINT:TONE ON
:HCOPY:NETPRINT:TONE?→:HCOPY:NETPRINT:
TONE 1

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:HCOPY:NETprint:TYPE

Function Sets/queries command types for output to network printers.

Syntax :HCOPY:NETPrint:TYPE {BJ|ESCP|LIPS|PCL5|
ESCP2|PSCRipt,<Nrf>}
:HCOPY:NETPrint:TYPE?

Example :HCOPY:NETPRINT:TYPE PSCRIPT
:HCOPY:NETPRINT:TYPE?→:HCOPY:NETPRINT:
TYPE PSCRIPT

Description <Nrf> is specified only when the type is set to "BJ." This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:HCOPY:PRINter?

Function Queries all settings relating to the built-in printer.

Syntax :HCOPY:PRINter?

Example :HCOPY:PRINter?→:HCOPY:PRINter:
TYPE SHORT;REPORT 0;RANGE -5.00,5.00;
MAG 2

:HCOPY:PRINter:MAG

Function Sets the zoom rate to use when using the long copy function to print to the built-in printer or queries the current setting.

Syntax :HCOPY:PRINter:MAG {<Nrf>}
:HCOPY:PRINter:MAG?
<Nrf>=2 to 250000 (See the IM701410-01E
User's Manual.)

Example :HCOPY:PRINter:MAG 1
:HCOPY:PRINter:MAG?→:HCOPY:PRINter:
MAG 1

:HCOPY:PRINter:RANGE

Function Sets the output range when using the long copy function to print to the built-in printer or queries the current setting.

Syntax :HCOPY:PRINter:RANGE {<Nrf>},{<Nrf>}
:HCOPY:PRINter:RANGE?
<Nrf>=-5.00 to 5.00 (10 div/displayed
record length steps)

Example :HCOPY:PRINter:RANGE -2.50,2.50
:HCOPY:PRINter:RANGE?→:HCOPY:PRINter:
RANGE -2.50,2.50

:HCOPY:PRINter:REPort

Function Sets whether or not to output additional information to the built-in printer or queries the current setting.

Syntax :HCOPY:PRINter:REPort {<Boolean>}
:HCOPY:PRINter:REPort?

Example :HCOPY:PRINter:REPort ON
:HCOPY:PRINter:REPort?→:HCOPY:PRINter:
REPort 1

:HCOPY:PRINter:TYPE

Function Selects short copy or long copy when printing to the built-in printer or queries the current setting.

Syntax :HCOPY:PRINter:TYPE {LONG|SHORT}
:HCOPY:PRINter:TYPE?

Example :HCOPY:PRINter:TYPE SHORT
:HCOPY:PRINter:TYPE?→:HCOPY:PRINter:
TYPE SHORT

:HCOPY:SAVE?

Function Queries all file saving settings.

Syntax :HCOPY:SAVE?

Example :HCOPY:SAVE?→:HCOPY:SAVE:DRIVE FLOPPY;
DIRECTORY "NO_1";ANAMING 0;NAME "DISP_1"

:HCOPY:SAVE:ANAMing

Function Enables/disables/queries automatic naming of output files.

Syntax :HCOPY:ANAMing {<Boolean>}
:HCOPY:SAVE:ANAMing?

Example :HCOPY:ANAMING ON
:HCOPY:SAVE:ANAMING?→:HCOPY:SAVE:
ANAMING 1

:HCOPY:SAVE:CDIRectory

Function Changes the directory.

Syntax :HCOPY:SAVE:DIRectory <Character string>
<Character string>=Within 8 characters.

Example :HCOPY:SAVE:DIRECTORY "NO_1"

:HCOPY:SAVE:DRIVe

Function Selects the medium on which to create the file.

Syntax :HCOPY:SAVE:DRIVe {FLOPPy|SCSI,<NRf>
[,<NRf>]|PCCard[,<NRf>]}
:HCOPY:SAVE:DRIVe?
The first <NRf> of SCSI= SCSI address (0
to 7)
The second <NRf> of SCSI=Partitions (0
to 4)
<NRf> of PCCard=Partitions (0 to 4)

Example :HCOPY:SAVE:DRIVE FLOPPY
:HCOPY:SAVE:DRIVE?→:HCOPY:SAVE:
DRIVE FLOPPY

Description If the drive does not contain partitions, omit the <NRf> corresponding to partitions.

:HCOPY:SAVE:NAME

Function Sets/queries the name of the file to be created.


Syntax :HCOPY:SAVE:NAME <Filename>
:HCOPY:SAVE:NAME?


Example :HCOPY:SAVE:NAME "DISP_1"
:HCOPY:SAVE:NAME?→:HCOPY:SAVE:
NAME "DISP_1"

5.13 HISTory Group

5.13 HISTory Group

The commands in the HISTory group are used to make settings and queries about recalling of data from the history memory. You can make the same settings that you can make using the HISTORY key on the front panel.

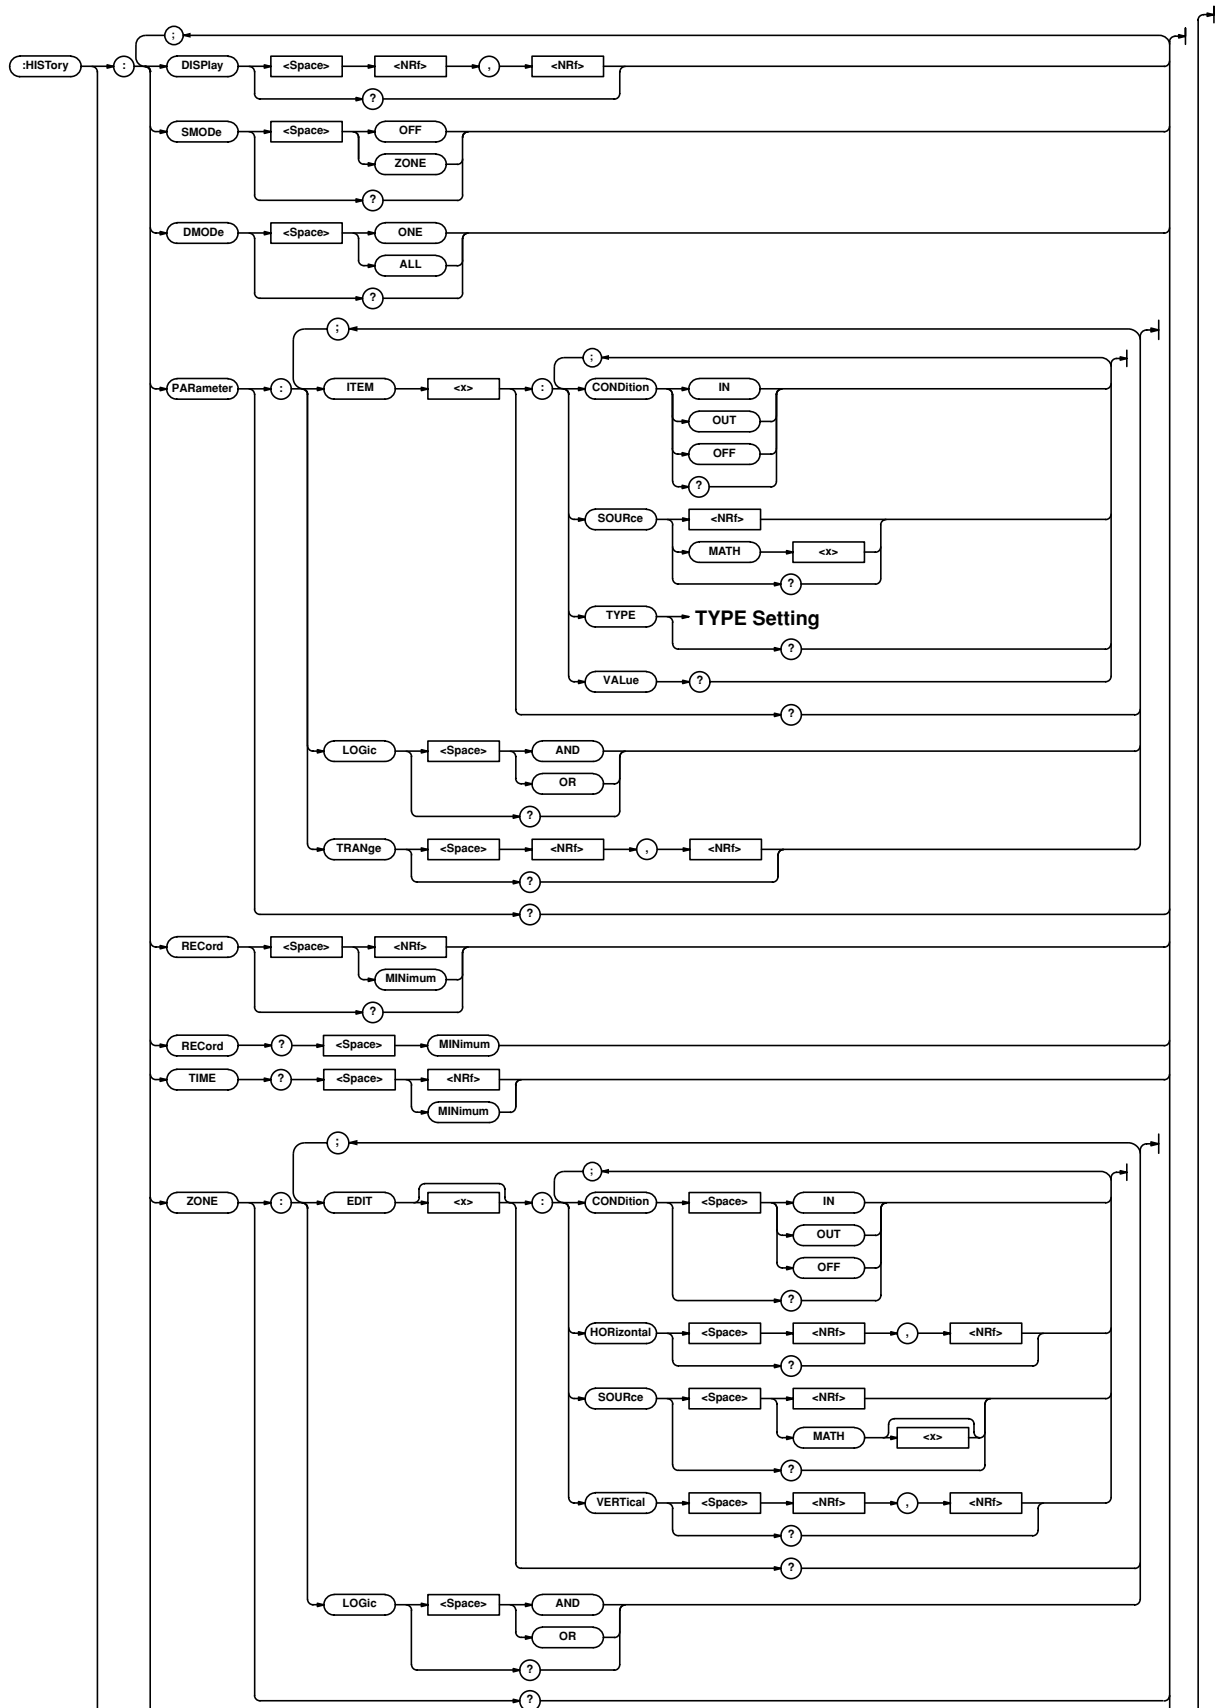

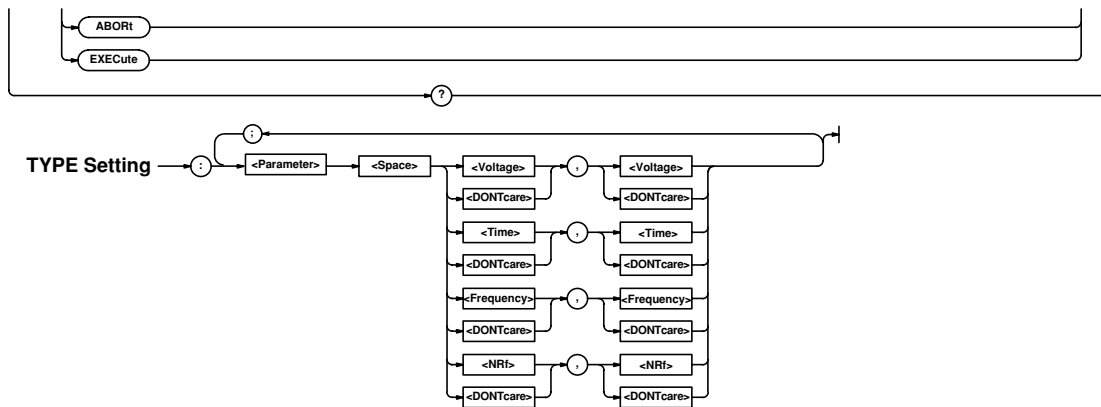**:HISTory?**

Function Queries all settings relating to the history memory function.

Syntax :HISTory?

Example :HISTORY?→:HISTORY:RECORD 0;DMODE ONE; DISPLAY 0, -127;SMODE OFF;ZONE:EDIT1: CONDITION OFF;SOURCE 1;HORIZONTAL 0.50, -0.50;VERTICAL -3.0000000, -2.5000000; :HISTORY:ZONE:EDIT2:CONDITION OFF; SOURCE 1;HORIZONTAL 0.50, -0.50; VERTICAL -1.0000000, -0.5000000; :HISTORY: ZONE:EDIT3:CONDITION OFF;SOURCE 1; HORIZONTAL 0.50, -0.50; VERTICAL 1.0000000, 1.5000000; :HISTORY: ZONE:EDIT4:CONDITION OFF;SOURCE 1; HORIZONTAL 0.50, -0.50; VERTICAL 3.0000000, 3.5000000; :HISTORY: ZONE:LOGIC AND; :HISTORY:PARAMETER:ITEM1: CONDITION OFF;SOURCE 1;TYPE: PTOPEAK DONTCARE, DONTCARE; :HISTORY: PARAMETER:ITEM2:CONDITION OFF;SOURCE 1; TYPE:MAXIMUM DONTCARE, DONTCARE; :HISTORY: PARAMETER:ITEM3:CONDITION OFF;SOURCE 1; TYPE:MINIMUM DONTCARE, DONTCARE; :HISTORY: PARAMETER:ITEM4:CONDITION OFF;SOURCE 1; TYPE:RMS DONTCARE, DONTCARE; :HISTORY: PARAMETER:LOGIC AND;TRANGE -5.0000000, 5.0000000

:HISTory:ABORT

Function Aborts the search.

Syntax :HISTory:ABORT

Example :HISTORY:ABORT

:HISTory:DISPlay

Function Sets the start/end number of the display record or queries the current setting.

Syntax :HISTory:DISPlay {<NRf>, <NRf>}
:HISTory:DISPlay?

Example :HISTORY:DISPLAY 0, -100
:HISTORY:DISPLAY?→:HISTORY:DISPLAY 0, -100

Description The number of records that can be specified varies depending on the acquisition setting and the model. For details, see the IM701410-01E User's Manual.

:HISTory:EXECute

Function Executes the search. This is an overlap command.

Syntax :HISTory:EXECute

Example :HISTORY:EXECUTE

:HISTory:SMODE (Search Mode)

Function Sets the history memory's search mode or queries the current setting.

Syntax :HISTory:SMODE {OFF|ZONE}
:HISTory:SMODE?

Example :HISTORY:SMODE ZONE
:HISTORY:SMODE?→:HISTORY:SMODE ZONE

:HISTory:DMODE (Display Mode)

Function Sets whether to display one record or all records or queries the current setting.

Syntax :HISTory:DMODE {ONE|ALL}
:HISTory:DMODE?

Example :HISTORY:DMODE ALL
:HISTORY:DMODE?→:HISTORY:DMODE ALL

Description If "ALL" is specified, the records that are specified with the ":HISTory:DISPlay" command are accumulated on the screen.

5.13 HISTory Group

:HISTory:PARAmeter?

Function Queries all settings related to the parameter search.

Syntax :HISTory:PARAmeter?

Example :HISTORY:PARAMETER?→:HISTORY:PARAMETER:
ITEM1:CONDITION OFF;SOURCE 1;TYPE:
PTOPEAK DONTCARE,DONTCARE;:HISTORY:
PARAMETER:ITEM2:CONDITION OFF;SOURCE 1;
TYPE:MAXIMUM DONTCARE,DONTCARE;:HISTORY:
PARAMETER:ITEM3:CONDITION OFF;SOURCE 1;
TYPE:MINIMUM DONTCARE,DONTCARE;:HISTORY:
PARAMETER:ITEM4:CONDITION OFF;SOURCE 1;
TYPE:RMS DONTCARE,DONTCARE;:HISTORY:
PARAMETER:LOGIC AND;TRANGE -5.0000000,
5.0000000

:HISTory:PARAmeter:ITEM<x>?

Function Queries all settings related to the specified parameter of the parameter search.

Syntax :HISTory:PARAmeter:ITEM<x>?
<x>=1 to 4

Example :HISTORY:PARAMETER:ITEM1?→:HISTORY:
PARAMETER:ITEM1:CONDITION OFF;SOURCE 1;
TYPE:PTOPEAK DONTCARE,DONTCARE

:HISTory:PARAmeter:ITEM<x>:CONDition

Function Sets the criteria for the specified parameter of the parameter search or queries the current setting.

Syntax :HISTory:PARAmeter:ITEM<x>:
CONDition {OFF|IN|OUT}
:HISTory:PARAmeter:ITEM<x>:CONDition?
<x>=1 to 4

Example :HISTORY:PARAMETER:ITEM1:CONDITION IN
:HISTORY:PARAMETER:ITEM1:CONDITION?→:
HISTORY:PARAMETER:ITEM1:CONDITION IN

:HISTory:PARAmeter:ITEM<x>:SOURce

Function Sets the trace on which to perform the parameter search of the specified parameter or queries the current setting.

Syntax :HISTory:PARAmeter:ITEM<x>:
SOURce {<NRF>|MATH<x>}
:HISTory:PARAmeter:ITEM<x>:SOURce?
The <x> in ITEM<x>=1 to 4
<NRF>=1 to 4
The <x> in MATH<x>=1 or 2.

Example :HISTORY:PARAMETER:ITEM1:SOURCE 1
:HISTORY:PARAMETER:ITEM1:SOURCE?→:
HISTORY:PARAMETER:ITEM1:SOURCE 1

:HISTory:PARAmeter:ITEM<x>:TYPE: <parameter>

Function Sets the upper and lower limits for the specified parameter of the parameter search or queries the current setting.

Syntax :HISTory:PARAmeter:ITEM<x>:TYPE:
<parameter> {<{voltage|DONTcare}>,
<{voltage|DONTcare}>|<{time|DONTcare}>,
<{time|DONTcare}>|<{frequency|
DONTcare}>,<frequency|DONTcare}>|
<{{<NRF>}|DONTcare}>,<{{<NRF>}|
DONTcare}>}
:HISTory:PARAmeter:ITEM<x>:TYPE?
<x>=1 to 4
<parameter>={AVERAge|AVGFreq|AVGPeriod|
BWIDth1|BWIDth2|DELay|
DUTYcycle|FALL|FREQuency|
HIGH|LOW|MAXimum|MINimum|
NOVershoot|NWIDTH|PERiod|
PNUMBER|POVershoot|PTOPeak|
PWIDTH|RISE|RMS|SDEVIation|
TY1Integ|TY2Integ|XY1Integ|
XY2Integ}
<voltage>,<time>,<frequency>,<NRF>=See
the IM701410-01E User's Manual.

Example :HISTORY:PARAMETER:ITEM1:TYPE:
AVERAGE 1.00,-1.00

:HISTory:PARAmeter:ITEM<x>:VALue?

Function Queries the measured value of the specified parameter of the parameter search or queries the current setting.

Syntax :HISTory:PARAmeter:ITEM<x>:VALue?
<x>=1 to 4

Example :HISTORY:PARAMETER:ITEM1:VALUE?→:
HISTORY:PARAMETER:ITEM1:VALUE 1.00E-03

:HISTory:PARAmeter:LOGic

Function Sets the determination logic of the parameter search or queries the current setting.

Syntax :HISTory:PARAmeter:LOGic {AND|IOR}
:HISTory:PARAmeter:LOGic?

Example :HISTORY:PARAMETER:LOGIC AND
:HISTORY:PARAMETER:LOGIC?→:HISTORY:
PARAMETER:LOGIC AND

:HISTory:PARAmeter:TRANge

Function Sets the range over which to perform the parameter search or queries the current setting.

Syntax :HISTory:PARAmeter:TRANge {<NRF>,<NRF>}
:HISTory:PARAmeter:TRANge?
<NRF>=-5.00 to 5.00 (10 div/displayed
record length steps)

Example :HISTORY:PARAMETER:TRANGE -5.00,5.00
:HISTORY:PARAMETER:TRANGE?→:HISTORY:
PARAMETER:TRANGE -5.00,5.00

:HISTory:RECOrd

Function	Sets the target record or queries the current setting.
Syntax	:HISTory:RECOrd {<NRf> MINimum} :HISTory:RECOrd? <NRf>=0 to -2047 (DL7100) 0 to -4095 (DL7200)
Example	:HISTORY:RECORD 0 :HISTORY:RECORD?→:HISTORY:RECORD 0
Description	<ul style="list-style-type: none"> • If "MINimum" is specified, the minimum record number is selected. • The selectable target record varies depending on the model, record length, and interleave mode settings. For details, see the IM701410-01E User's Manual.

:HISTory:RECOrd? MINimum

Function	Queries the minimum record number.
Syntax	:HISTory:RECOrd? MINimum
Example	:HISTORY:RECORD? MINIMUM→-999
Description	The minimum record number varies depending on the model, record length, and interleave mode settings. For details, see the IM701410-01E User's Manual.

:HISTory:TIME?

Function	Queries the time of the specified record number.
Syntax	:HISTory:TIME? {<NRf> MINimum}
Example	:HISTORY:TIME? -100→:HISTORY:TIME "-0100 10:20:30.40"
Description	If "MINimum" is specified, the minimum record number is selected.

:HISTory:ZONE?

Function	Queries all settings related to zone search.
Syntax	:HISTory:ZONE?
Example	:HISTORY:ZONE?→:HISTORY:ZONE:EDIT1: CONDITION OFF;SOURCE 1; HORIZONTAL 0.50,-0.50; VERTICAL -3.0000000,-1.0000000;:HISTORY: ZONE:EDIT2:CONDITION OFF;SOURCE 1; HORIZONTAL 0.50,-0.50; VERTICAL -1.0000000,1.0000000;:HISTORY: ZONE:EDIT3:CONDITION OFF;SOURCE 1; HORIZONTAL 0.50,-0.50; VERTICAL 1.0000000,3.0000000;:HISTORY: ZONE:EDIT4:CONDITION OFF;SOURCE 1; HORIZONTAL 0.50,-0.50; VERTICAL 3.0000000,-2.5000000;: HISTORY:ZONE:LOGIC AND

:HISTory:ZONE:EDIT<x>

Function	Queries all settings related to all zone cursors.
Syntax	:HISTory:ZONE:EDIT<x>? <x>=1 to 4
Example	:HISTORY:ZONE:EDIT1?→:HISTORY:ZONE: EDIT1:CONDITION OFF;SOURCE 1; HORIZONTAL 0.50,-0.50; VERTICAL -3.0000000,-1.0000000

:HISTory:ZONE:EDIT<x>:CONDition

Function	Sets the search condition of the zone cursor or queries the current setting.
Syntax	:HISTory:ZONE:EDIT<x>:CONDition {OFF IN OUT} :HISTory:ZONE:EDIT<x>:CONDition? <x>=1 to 4
Example	:HISTORY:ZONE:EDIT1:CONDITION IN :HISTORY:ZONE:EDIT1:CONDITION?→ :HISTORY:ZONE:EDIT1:CONDITION IN
Description	Use EDIT<x> to specify the zone cursor.

:HISTory:ZONE:EDIT<x>:HORIZontal

Function	Sets the vertical position (upper and lower values) of the specified zone cursor or queries the current setting.
Syntax	:HISTory:ZONE:EDIT<x>:HORIZontal {<NRf>, <NRf>} :HISTory:ZONE:EDIT<x>:HORIZontal? <x>=1 to 4 <NRf>=-4 to 4 div (0.01 steps, in the order Upper and Lower)
Example	:HISTORY:ZONE:EDIT1: HORIZONTAL 4.00,-4.00 :HISTORY:ZONE:EDIT1:HORIZONTAL?→ :HISTORY:ZONE:EDIT1: HORIZONTAL 4.00,-4.00
Description	Use EDIT<x> to specify the zone cursor.

:HISTory:ZONE:EDIT<x>:SOURce

Function	Sets the waveform on which to use the specified zone cursor or queries the current setting.
Syntax	:HISTory:ZONE:EDIT<x>:SOURce {<NRf> MATH<x>} :HISTory:ZONE:EDIT<x>:SOURce? <x>=1 to 4 <NRf>=1 to 4 The <x> in MATH<x>=1 or 2
Example	:HISTORY:ZONE:EDIT1:SOURCE 1 :HISTORY:ZONE:EDIT1:SOURCE?→:HISTORY: ZONE:EDIT1:SOURCE 1
Description	Use EDIT<x> to specify the zone cursor.

5.13 HISTory Group

:HISTory:ZONE:EDIT<x>:VERTical


Function	Sets the horizontal position (left and right values) of the specified zone cursor or queries the current setting.
Syntax	:HISTory:ZONE:EDIT<x>:VERTical {<Nrf>,<Nrf>} :HISTory:ZONE:EDIT<x>:VERTical? <x>=1 to 4 <Nrf>=-5 to 5 div (10 div/displayed record length steps, in the order left and right)
Example	:HISTory:ZONE:EDIT1:VERTical -2,2 :HISTory:ZONE:EDIT1:VERTical?→:HISTory:ZONE:EDIT1:VERTical -2.0000000,2.0000000
Description	Use EDIT<x> to specify the zone cursor.

:HISTory:ZONE:LOGic

Function	Sets the search logic between zone cursors or queries the current setting.
Syntax	:HISTory:ZONE:LOGic {AND OR} :HISTory:ZONE:LOGic?
Example	:HISTory:ZONE:LOGic AND :HISTory:ZONE:LOGic?→:HISTory:ZONE:LOGic AND

5.14 IMAGE Group

Use this group to set or query the screen image data output settings. There are no corresponding front-panel keys for these operations.

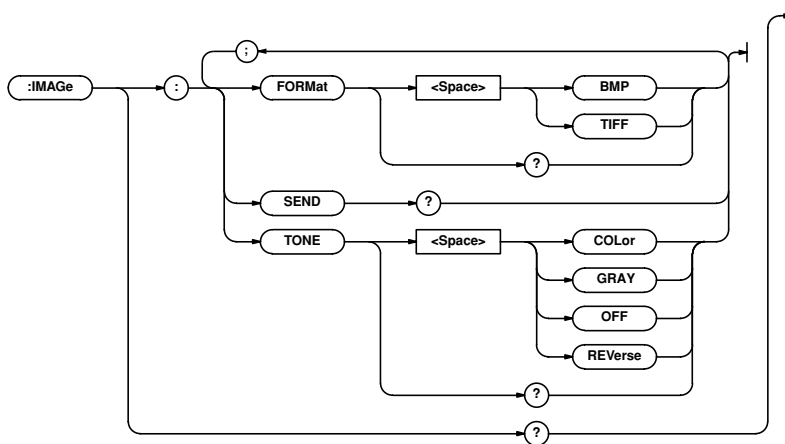

:IMAGE?

Function Queries all screen image data output settings.
 Syntax IMAGE?
 Example :IMAGE?→:IMAGE:TONE OFF;FORMAT TIFF

:IMAGE:FORMat

Function Sets/queries the screen image data output format.
 Syntax :IMAGE:FORMat {TIFF|BMP}
 :IMAGE:FORMat?
 Example :IMAGE:FORMat TIFF
 :IMAGE:FORMat?→:IMAGE:FORMat TIFF

:IMAGE:SEND?


Function Queries screen image data.
 Syntax :IMAGE:SEND?
 Example :IMAGE:SEND?→#6 (number of bytes[6-digit value]) (Data byte string) (Block data)
 Description Number of bytes in <block data> is {(2+6+Number of data+1(delimiter))}. For information about block data, refer to page 4-6.

:IMAGE:TONE

Function Sets/queries the color tone of the BMP (TIFF) format of the screen image data to output.
 Syntax :IMAGE:TONE {COLor|OFF|REVerse|GRAY}
 :IMAGE:TONE?
 Example :IMAGE:TONE COLOR
 :IMAGE:TONE?→:IMAGE:TONE COLOR

5.15 INITIALize Group

 The commands in the INITIALize group are related to initializing. You can make the same settings using the Initialize menu of the SETUP key on the front panel.



:INITIALize:EXECute

Function Executes initializing.
 Syntax :INITIALize:EXECute
 Example :INITIALIZE:EXECUTE


:INITIALize:UNDO

Function Nullifies initializing.
 Syntax :INITIALize:UNDO
 Example :INITIALIZE:UNDO

5.16 LOGic Group (Option)

5.16 LOGic Group (Option)

The commands in the LOGic group deal with the logic probe. These commands can be used to make the same settings and inquiries as when the LOGIC key on the front panel is pressed. However, if the logic probe is not installed, these settings and inquiries cannot be made.

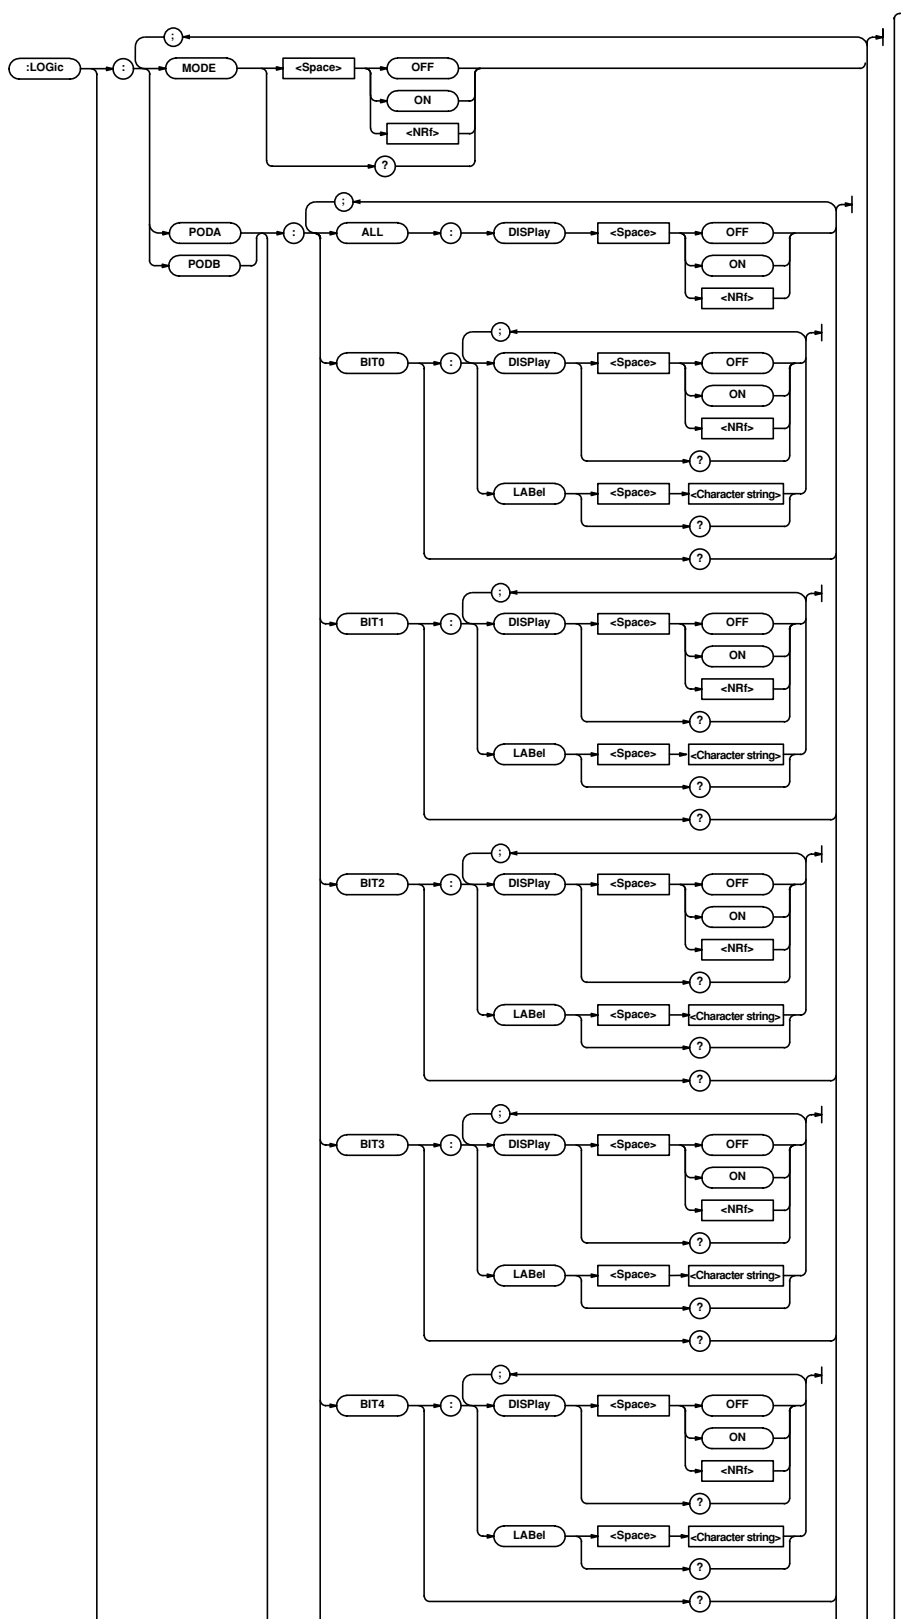

5.16 LOGic Group (Option)

:LOGic?

Function Queries all settings related to the logic probe.

Syntax :LOGic?

Example :LOGIC?→:LOGIC:MODE
1;:PODA:BIT0:DISPLAY 0;LABEL "A-0";
LOGIC:PODA:BIT1:DISPLAY 0;LABEL "A-1";
LOGIC:PODA:BIT2:DISPLAY 0;LABEL "A-2";
LOGIC:PODA:BIT3:DISPLAY 0;LABEL "A-3";
LOGIC:PODA:BIT4:DISPLAY 0;LABEL "A-4";
LOGIC:PODA:BIT5:DISPLAY 0;LABEL "A-5";
LOGIC:PODA:BIT6:DISPLAY 0;LABEL "A-6";
LOGIC:PODA:BIT7:DISPLAY 0;LABEL "A-7";
LOGIC:PODA:THRESHOLD:TYPE TTL;
USERLEVEL 1.4E+00;:LOGIC:PODB:BIT0:
DISPLAY 0;LABEL "B-0";:LOGIC:PODB:BIT1:
DISPLAY 0;LABEL "B-1";:LOGIC:PODB:BIT2:
DISPLAY 0;LABEL "B-2";:LOGIC:PODB:BIT3:
DISPLAY 0;LABEL "B-3";:LOGIC:PODB:BIT4:
DISPLAY 0;LABEL "B-4";:LOGIC:PODB:BIT5:
DISPLAY 0;LABEL "B-5";:LOGIC:PODB:BIT6:
DISPLAY 0;LABEL "B-6";:LOGIC:PODB:BIT7:
DISPLAY 0;LABEL "B-7";:LOGIC:PODB:
THRESHOLD:TYPE TTL;USERLEVEL 1.4E+00

Description An error results if the model does not support the logic probe (option).

:LOGic:MODE

Function Turns the logic mode ON/OFF or queries the current setting.

Syntax :LOGic:MODE {<Boolean>}
:LOGic:MODE?

Example :LOGIC:MODE ON
:LOGIC:MODE?→:LOGIC:MODE 1

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB}?

Function Queries all settings related to the specified logic probe.

Syntax :LOGic:{PODA|PODB}?

Example :LOGIC:PODA?→:LOGIC:PODA:BIT0:
DISPLAY 0;LABEL "A-0";:LOGIC:PODA:BIT1:
DISPLAY 0;LABEL "A-1";:LOGIC:PODA:BIT2:
DISPLAY 0;LABEL "A-2";:LOGIC:PODA:BIT3:
DISPLAY 0;LABEL "A-3";:LOGIC:PODA:BIT4:
DISPLAY 0;LABEL "A-4";:LOGIC:PODA:BIT5:
DISPLAY 0;LABEL "A-5";:LOGIC:PODA:BIT6:
DISPLAY 0;LABEL "A-6";:LOGIC:PODA:BIT7:
DISPLAY 0;LABEL "A-7";:LOGIC:PODA:
THRESHOLD:TYPE TTL;USERLEVEL 1.4E+00

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB}:ALL:DISPlay

Function Turns the display of all the bits of the specified logic probe ON/OFF.

Syntax :LOGic:ALL:DISPlay {<Boolean>}

Example :LOGIC:ALL:DISPLAY ON

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB};{BIT0|BIT1|BIT2|BIT3|BIT4|BIT5|BIT6|BIT7}:DISPlay

Function Displays the bits of the specified logic probe or queries the current setting.

Syntax :LOGic:{PODA|PODB}:{BIT0|BIT1|BIT2|BIT3|BIT4|BIT5|BIT6|BIT7}:DISPlay {<Boolean>}
:LOGic:{PODA|PODB}:{BIT0|BIT1|BIT2|BIT3|BIT4|BIT5|BIT6|BIT7}:DISPlay?

Example :LOGIC:PODA:BIT1:DISPLAY ON
:LOGIC:PODA:BIT1:DISPLAY?→:LOGIC:PODA:
BIT1:DISPLAY 1

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB};{BIT0|BIT1|BIT2|BIT3|BIT4|BIT5|BIT6|BIT7}:LAbel

Function Sets a label to the bits of the specified logic probe or queries the current setting.

Syntax :LOGic:{PODA|PODB}:{BIT0|BIT1|BIT2|BIT3|BIT4|BIT5|BIT6|BIT7}:LAbel <Character string>
:LOGic:{PODA|PODB}:{BIT0|BIT1|BIT2|BIT3|BIT4|BIT5|BIT6|BIT7}:LAbel?
<Character string>=Within 8 characters.

Example :LOGIC:PODA:BIT1:LABEL "NO_1"
:LOGIC:PODA:BIT1:LABEL?→:LOGIC:PODA:
BIT1:LABEL 1

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB}:THReshold?

Function Queries all settings related to the threshold level.

Syntax :LOGic:{PODA|PODB}:THReshold?

Example :LOGIC:PODA:THRESHOLD?→:LOGIC:PODA:
THRESHOLD:TYPE TTL;USERLEVEL 1.400E+00

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB}:THReshold:TYPE

Function Executes the threshold level preset or queries the current setting.

Syntax :LOGic:{PODA|PODB}:THReshold:TYPE {ECL|TTL|USERdefine}

:LOGic:{PODA|PODB}:THReshold:TYPE?

Example :LOGIC:PODA:THRESHOLD:TYPE ECL

:LOGIC:PODA:THRESHOLD:TYPE?→:LOGIC:

PODA:THRESHOLD:TYPE ECL

Description An error results if the model does not support the logic probe (option).

:LOGic:{PODA|PODB}:THReshold:USERlevel

Function Sets the user-defined threshold level or queries the current setting.

Syntax :LOGic:{PODA|PODB}:THReshold:USERlevel {<voltage>}

:LOGic:{PODA|PODB}:THReshold:USERlevel?

<voltage>=-10 to 10 V (0.1 V steps)

Example :LOGIC:PODA:THRESHOLD:USERLEVEL 1V


:LOGIC:PODA:THRESHOLD:USERLEVEL?→

:LOGIC:PODA:THRESHOLD:USERLEVEL 1.0E+00

Description An error results if the model does not support the logic probe (option).

5.17 MATH Group

The commands in the MATH group are used to make settings and queries about computation. You can make the same settings that you can make using the MATH key on the front panel.

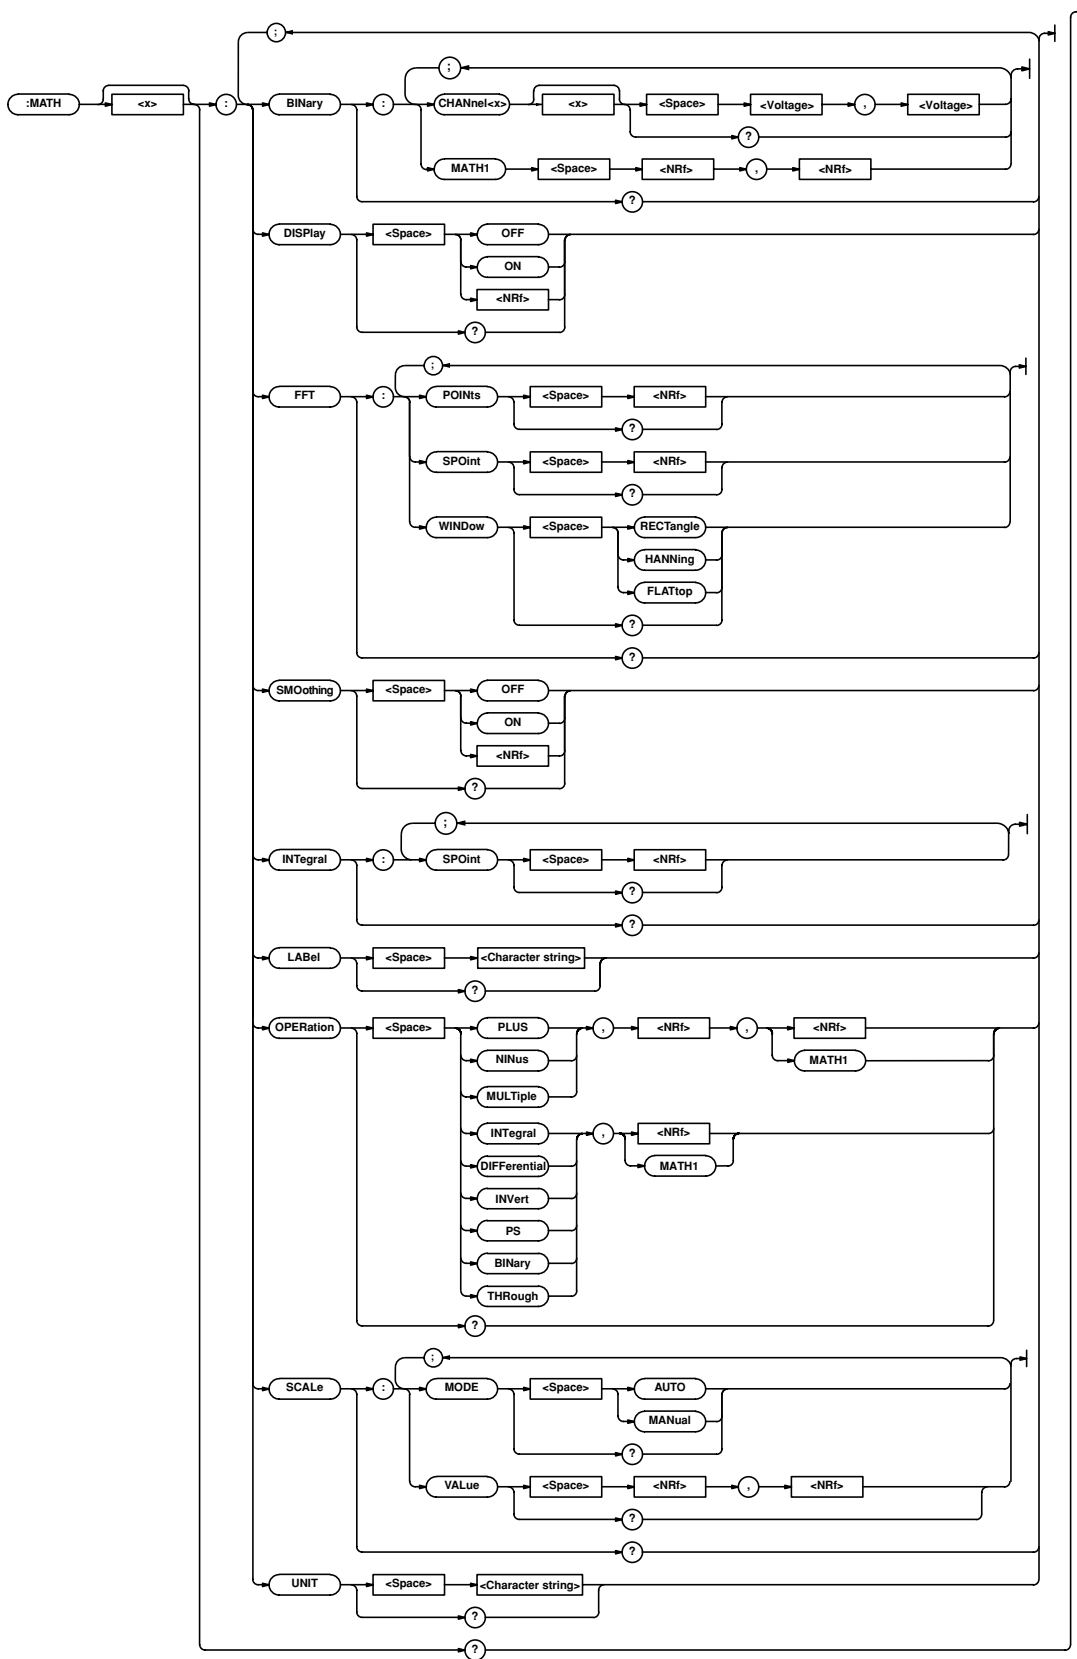

:MATH<x>?

Function Queries all settings relating to computation.
 Syntax :MATH<x>?
 <x>=1, 2
 Example :MATH1?→:MATH1:DISPLAY 0;SCALE:
 MODE AUTO;
 VALUE 400.000E+00,-400.000E+00;;
 MATH1:OPERATION PLUS,1,2;FFT:
 POINTS 1000;WINDOW HANNING;
 SPOINT -5.0000000;;MATH1:BINARy:
 CHANNEL1 0.0E+00,0.0E+00;
 CHANNEL2 0.0E+00,0.0E+00;
 CHANNEL3 0.0E+00,0.0E+00;
 CHANNEL4 0.0E+00,0.0E+00;
 MATH1 0.00,0.00;;MATH1:INTEGRAL:
 SPOINT -5.0000000;;MATH1:SMOOTHING 0;
 UNIT "EU";LABEL "Math1"

:MATH<x>:BINARy?

Function Queries all settings relating to binary computation.
 Syntax :MATH<x>:BINARy?
 <x>=1 or 2
 Example :MATH1:BINARy?→:MATH1:BINARy:
 CHANNEL1 0.0E+00,0.0E+00;
 CHANNEL2 0.0E+00,0.0E+00;
 CHANNEL3 0.0E+00,0.0E+00;
 CHANNEL4 0.0E+00,0.0E+00;MATH1 0.00,0.00

:MATH<x>:BINARy:{CHANNeL<x>|MATH1}

Function Sets/queries the threshold level for binary computation of the channel.
 Syntax :MATH<x>:BINARy:{CHANNeL<x>|MATH1}
 {<Voltage>,<Voltage>|<NRf>,<NRf>}
 :MATH<x>:BAINARy:{CHANNeL<x>|MATH1}?
 The <x> in MATH <x>=1 or 2
 The <x> in CHANNeL <x>=1 to 4
 <Voltage>= 8 div on the screen (0.01 div steps)
 <NRf>=-4 to 4 div (0.01 div steps)
 Example :MATH1:BINARy:CHANNeL1 0V,0V
 :MATH1:BINARy:CHANNeL1?→:MATH1:
 BINARy:CHANNeL1 0.000E+00,0.000E+00
 Description The ":MATH<x>:BINARy:MATH1" command can be used when <x>=2. If <x>=1 an error occurs.

:MATH<x>:DISPly

Function Sets whether or not to display computation waveforms or queries the current setting.
 Syntax :MATH<x>:DISPly {<Boolean>}
 :MATH<x>:DISPly?
 <x>=1 or 2
 Example :MATH1:DISPly ON
 :MATH1:DIPSLAY?→:MATH1:DISPly 1

:MATH<x>:FFT?

Function Queries all FFT computation settings.
 Syntax :MATH<x>:FFT?
 <x>=1 or 2
 Example :MATH1:FFT?→:MATH1:FFT:POINTs 1000;
 WINDOW RECTANGLE;SPOINT -5.0000000

:MATH<x>:FFT:POINT

Function Sets/queries the number of points for FFT computation.
 Syntax :MATH<x>:FFT:POINT {<NRf>}
 :MATH<x>:FFT:POINT?
 <x>=1 or 2
 <NRf>=1000, 10000
 Example :MATH1:FFT:POINT 1000
 :MATH1:FFT:POINT?→:MATH1:FFT:POINT 1000

:MATH<x>:FFT:SPOINT (Start Point)

Function Sets the start point of the FFT or queries the current setting.
 Syntax :MATH<x>:FFT:SPOINT {<NRf>}
 :MATH<x>:FFT:POINT?
 <x>=1 or 2
 <NRf>=-5 to 5 div (10 div/displayed record length steps)
 Example :MATH1:FFT:SPOINT 1.5
 :MATH1:FFT:SPOINT?→:MATH1:FFT:
 SPOINT 1.5000000

:MATH<x>:FFT:WINDow

Function Sets/queries FFT window function.
 Syntax :MATH<x>:FFT:WINDow {FLATtop|HANNING|RECTangle}
 :MATH<x>:FFT:WINDow?
 <x>=1 or 2
 Example :MATH1:FFT:WINDow HANNING
 :MATH1:FFT:WINDow?→:MATH1:FFT:
 WINDow HANNING

:MATH<x>:INTEGRal?

Function Queries all settings related to integration.
 Syntax :MATH<x>:INTEGRal?
 <x>=1 or 2
 Example :MATH1:INTEGRAl?→:MATH1:INTEGRAl:
 SPOINT -5.0000000

5.17 MATH Group

:MATH<x>:INTEGRAL:SPOINT (Start Point)

Function	Sets the start point of the integration or queries the current setting.
Syntax	:MATH<x>:INTEGRAL:SPOINT {<NRf>} :MATH<x>:INTEGRAL:POINT? <x>=1 or 2 <NRf>=-5 to 5 div (10 div/displayed record length steps)
Example	:MATH1:INTEGRAL:SPOINT 1.5 :MATH1:INTEGRAL:SPOINT?→:MATH1:INTEGRAL:SPOINT 1.500000

:MATH<x>:LABEL

Function	Sets/queries the math's
Syntax	:MATH<x>:LABEL {<Character string>} :MATH<x>:LABEL? <x>=1 or 2 <Character string>=Within 8 characters
Example	:MATH1:LABEL "MATH1" :MATH1:LABEL?→:MATH1:LABEL "MATH1"

:MATH<x>:OPERATION

Function	Sets the type of computation or queries the current setting.
Syntax	:MATH<x>:OPERATION {PLUS MINUS MULTIPLE BINARY INVERT DIFFERENTIAL INTEGRAL PS THROUGH}, {<NRf>} [, {<NRf> MATH1}] :MATH<x>:OPERATION? <x>=1 or 2 <NRf>=1 to 4
Example	:MATH1:OPERATION PLUS,1,2 :MATH1:OPERATION?→:MATH1:OPERATION PLUS,1,2
Description	<ul style="list-style-type: none">• For unary operators (BINARY INVERT DIFFERENTIAL INTEGRAL PS THROUGH), select the waveform in the first <NRf>.• For binomial operators (PLUS MINUS MULTIPLE), select the first waveform in the first <NRf> and the second waveform in the second <NRf>.

:MATH<x>:SCALE?

Function	Queries all scaling setting values.
Syntax	:MATH<x>:SCALE? <x>=1 to 8
Example	:MATH1:SCALE?→:MATH1:SCALE:MODE AUTO; VALUE 200.000E+00,0.0E+00

:MATH<x>:SCALE:MODE

Function	Sets/queries the scaling method.
Syntax	:MATH<x>:SCALE:MODE {AUTO MANUAL} :MATH<x>:SCALE:MODE? <x>=1 or 2
Example	:MATH1:SCALE:MODE AUTO :MATH1:SCALE:MODE?→:MATH1:SCALE:MODE AUTO

:MATH<x>:SCALE:VALUE

Function	Sets/queries the upper and lower limits for the manual scaling.
Syntax	:MATH<x>:SCALE:VALUE {<NRf>,<NRf>} :MATH<x>:SCALE:VALUE? <x>=1 or 2 <NRf>=-1.0000E+30 to 1.0000E+30
Example	:MATH1:SCALE:VALUE 1,-1 :MATH1:SCALE:VALUE?→:MATH1:SCALE:VALUE 1.0000E+00,-1.0000E+00
Description	The larger of the two values automatically becomes the upper limit.

:MATH<x>:SMOOTHING


Function	Turns smoothing ON/OFF or queries the current setting.
Syntax	:MATH<x>:SMOOTHING {<Boolean>} :MATH<x>:SMOOTHING? <x>=1 or 2
Example	:MATH1:SMOOTHING ON :MATH1:SMOOTHING?→:MATH1:SMOOTHING 1
Description	This command is void, if "PS" is selected with the "MATH<x>:OPERATION" command.

:MATH<x>:UNIT


Function	Sets/queries the dimensional unit appended to computation result.
Syntax	:MATH<x>:UNIT {<Character string>} :MATH<x>:UNIT? <x>=1 or 2 <Character string>=Within 4 characters
Example	:MATH1:UNIT "EU" :MATH1:UNIT?→:MATH1:UNIT "EU"
Description	The unit is reflected in the scale value. The unit setting has no effect on the calculation result.

5.18 MEASure Group

The commands in the MEASure group are used to make settings and queries about automatic measurement of waveform parameters. You can make the same settings which you can make using the MEASURE key on the front panel.

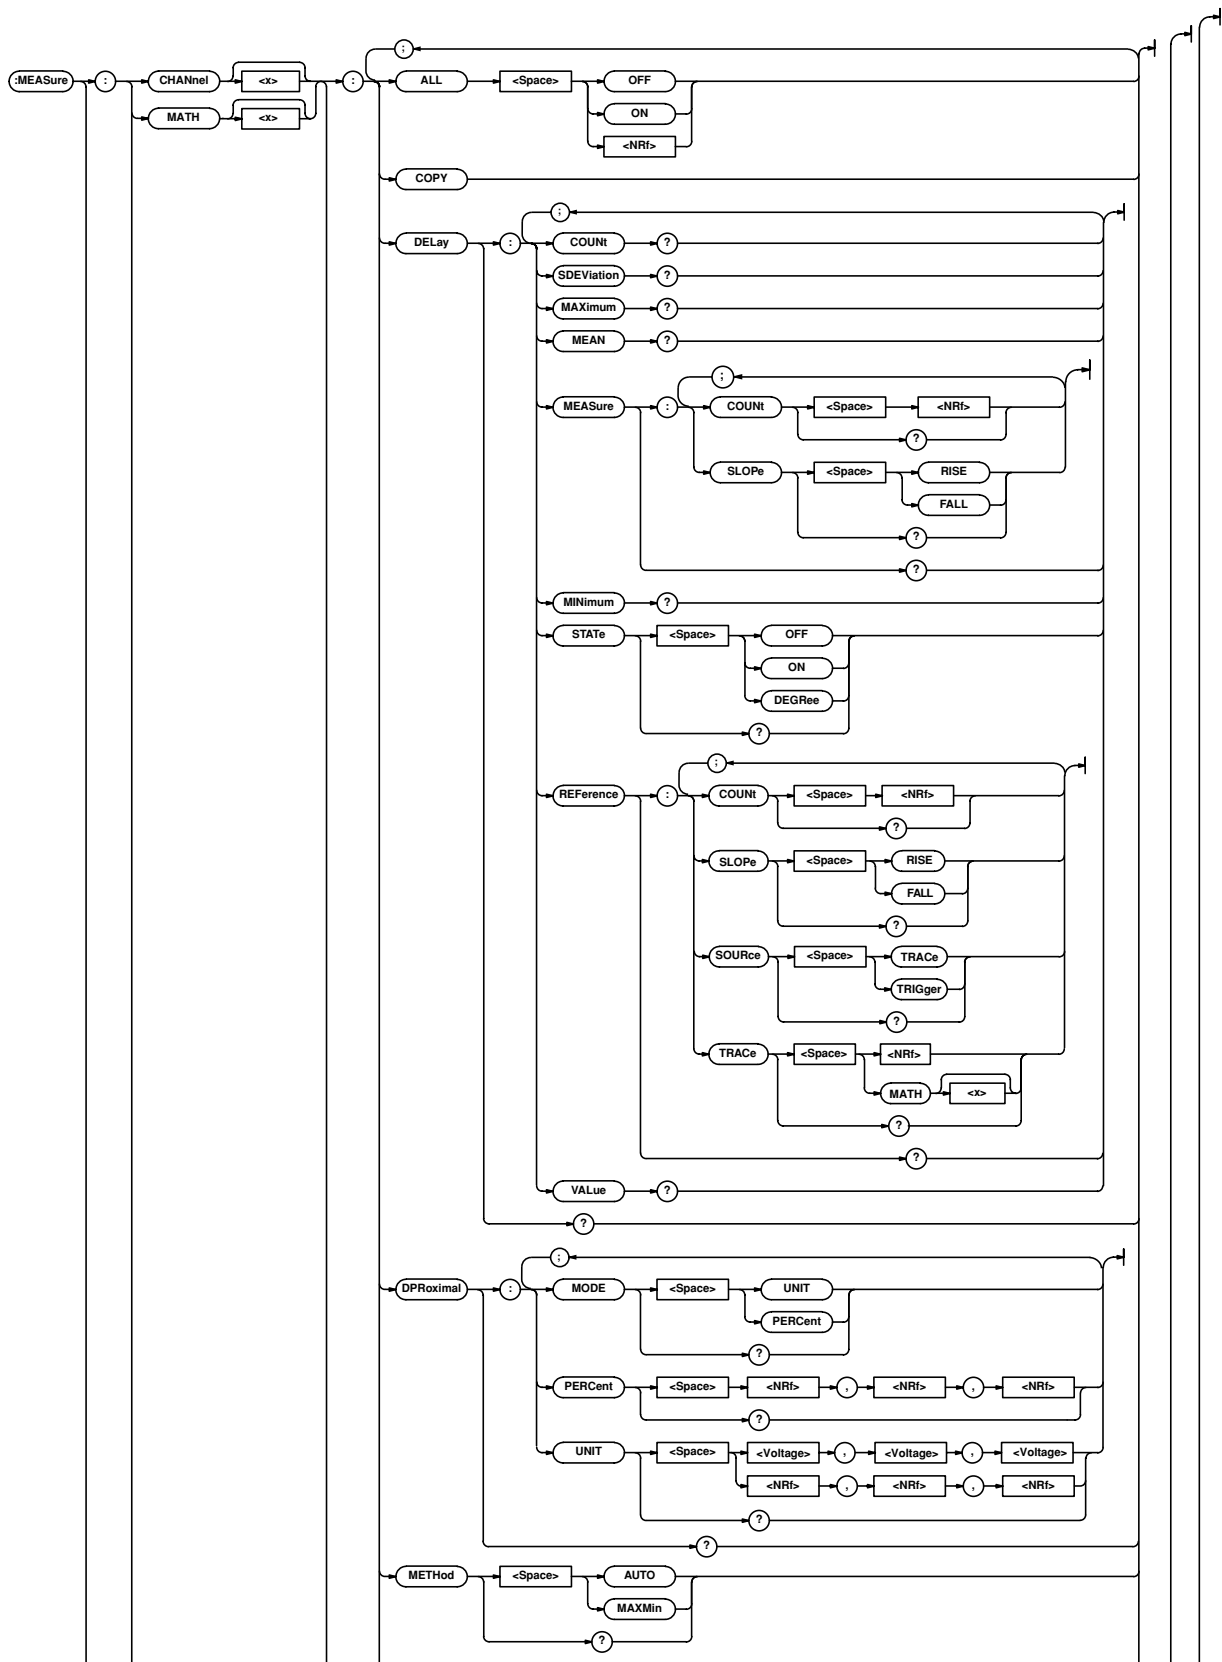

5.18 MEASure Group

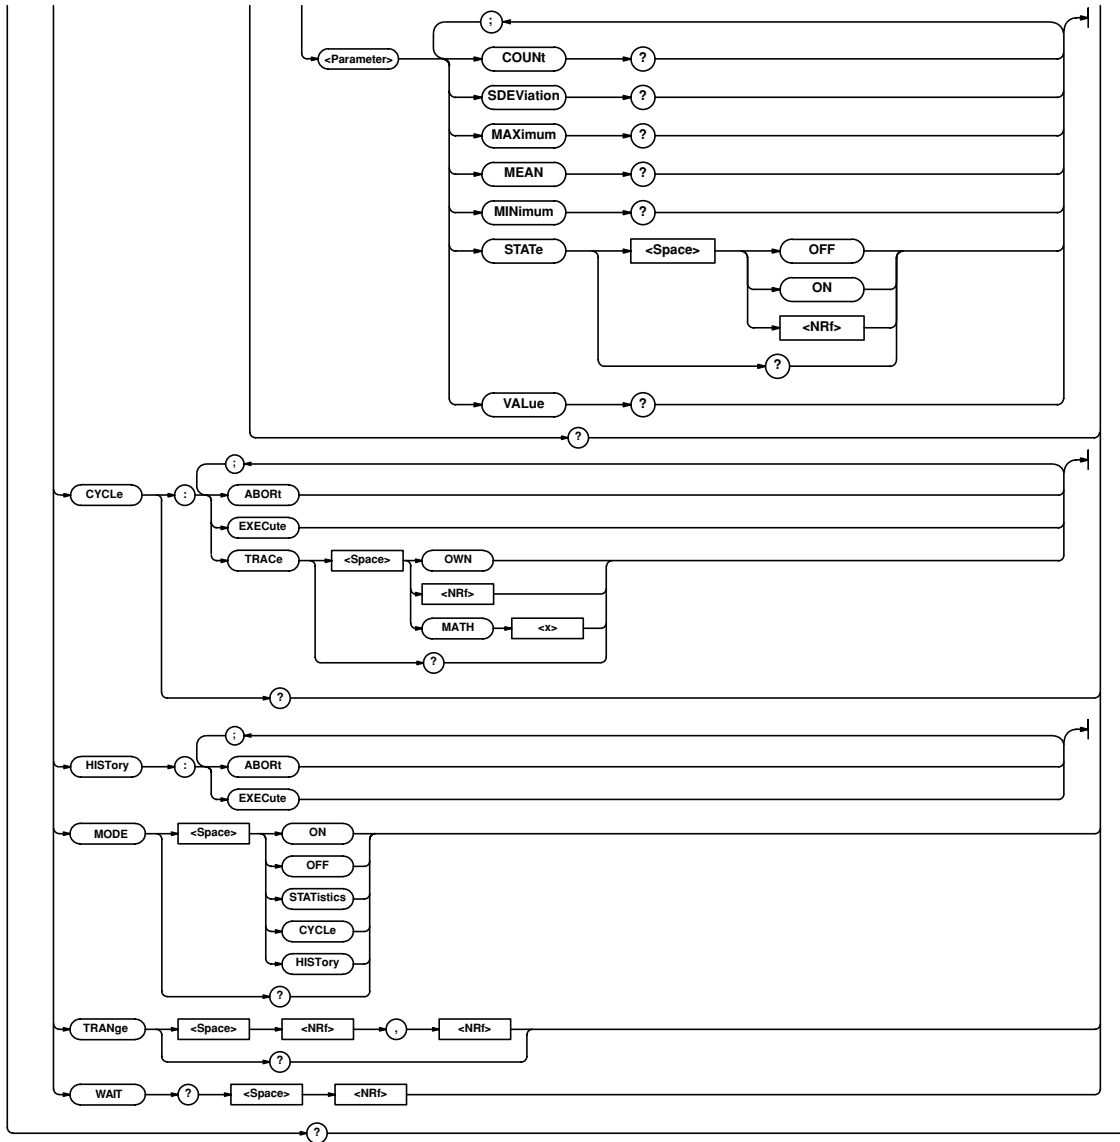

:MEASure?

Function Queries all settings relating to automatic measurement of waveform parameters.

Syntax :MEASure?

Example :MEASURE?→:MEASURE:MODE OFF;CHANNEL1:AVERAGE:STATE 0;:MEASURE:CHANNEL1:AVGFREQ:STATE 0;:MEASURE:CHANNEL1:AVGPERIOD:STATE 0;:MEASURE:CHANNEL1:BWIDTH1:STATE 0;:MEASURE:CHANNEL1:BWIDTH2:STATE 0;:MEASURE:CHANNEL1:DUTYCYCLE:STATE 0;:MEASURE:CHANNEL1:FALL:STATE 0;:MEASURE:CHANNEL1:FREQUENCY:STATE 0;:MEASURE:CHANNEL1:HIGH:STATE 0;:MEASURE:CHANNEL1:LOW:STATE 0;:MEASURE:CHANNEL1:MAXIMUM:STATE 0;:MEASURE:CHANNEL1:MINIMUM:STATE 0;:MEASURE:CHANNEL1:NOVERSHOOT:STATE 0;:MEASURE:CHANNEL1:NWIDTH:STATE 0;:MEASURE:CHANNEL1:PERIOD:STATE 0;:MEASURE:CHANNEL1:PNUMBER:STATE 0;:MEASURE:CHANNEL1:POVERSHOOT:STATE 0;:MEASURE:CHANNEL1:PTOPEAK:STATE 0;:MEASURE:CHANNEL1:PWIDT:STATE 0;:MEASURE:CHANNEL1:RISE:STATE 0;:MEASURE:CHANNEL1:RMS:STATE 0;:MEASURE:CHANNEL1:SDEVIATION:STATE 0;:MEASURE:CHANNEL1:TY1INTEG:STATE 0;:MEASURE:CHANNEL1:TY2INTEG:STATE 0;:MEASURE:CHANNEL1:XY1INTEG:STATE 0;:MEASURE:CHANNEL1:XY2INTEG:STATE 0;:MEASURE:CHANNEL1:DELAY:STATE 0;MEASURE:SLOPE RISE;COUNT 1;:MEASURE:CHANNEL1:DELAY:REFERENCE:TRACE 1;SLOPE RISE;COUNT 1;:MEASURE:CHANNEL1:DPROXIMAL:MODE PERCENT;PERCENT 10.0,50.0,90.0;UNIT -150.000E+00,0.0E+00,150.000E+00;:MEASURE:CHANNEL1:METHO AUTO;:MEASURE:CHANNEL2:AVERAGE:STATE 0;:MEASURE:CHANNEL2:AVGFREQ:STATE 0;:MEASURE:CHANNEL2:AVGPERIOD:STATE 0;:MEASURE:CHANNEL2:BWIDTH1:STATE 0;:MEASURE:CHANNEL2:BWIDTH2:STATE 0;:MEASURE:CHANNEL2:DUTYCYCLE:STATE 0;:MEASURE:CHANNEL2:FALL:STATE 0;:MEASURE:CHANNEL2:FREQUENCY:STATE 0;:MEASURE:CHANNEL2:HIGH:STATE 0;:MEASURE:CHANNEL2:LOW:STATE 0;:MEASURE:CHANNEL2:MAXIMUM:STATE 0;:MEASURE:CHANNEL2:MINIMUM:STATE 0;:MEASURE:CHANNEL2:NOVERSHOOT:STATE 0;:MEASURE:CHANNEL2:NWIDTH:STATE 0;:MEASURE:CHANNEL2:PERIOD:STATE 0;:MEASURE:CHANNEL2:PNUMBER:STATE 0;:MEASURE:CHANNEL2:POVERSHOOT:STATE 0;:MEASURE:CHANNEL2:PTOPEAK:STATE 0;:MEASURE:CHANNEL2:PWIDT:STATE 0;:MEASURE:CHANNEL2:RISE:STATE 0;:MEASURE:

CHANNEL2:RMS:STATE 0;:MEASURE:CHANNEL2:SDEVIATION:STATE 0;:MEASURE:CHANNEL2:TY1INTEG:STATE 0;:MEASURE:CHANNEL2:TY2INTEG:STATE 0;:MEASURE:CHANNEL2:XY1INTEG:STATE 0;:MEASURE:CHANNEL2:XY2INTEG:STATE 0;:MEASURE:CHANNEL2:DELAY:STATE 0;MEASURE:SLOPE RISE;COUNT 1;:MEASURE:CHANNEL2:DELAY:REFERENCE:TRACE 2;SLOPE RISE;COUNT 1;:MEASURE:CHANNEL2:DPROXIMAL:MODE PERCENT;PERCENT 10.0,50.0,90.0;UNIT -150.000E+00,0.0E+00,150.000E+00;:MEASURE:CHANNEL2:METHO AUTO;:MEASURE:CHANNEL3:AVERAGE:STATE 0;:MEASURE:CHANNEL3:AVGFREQ:STATE 0;:MEASURE:CHANNEL3:AVGPERIOD:STATE 0;:MEASURE:CHANNEL3:BWIDTH1:STATE 0;:MEASURE:CHANNEL3:BWIDTH2:STATE 0;:MEASURE:CHANNEL3:DUTYCYCLE:STATE 0;:MEASURE:CHANNEL3:FALL:STATE 0;:MEASURE:CHANNEL3:FREQUENCY:STATE 0;:MEASURE:CHANNEL3:HIGH:STATE 0;:MEASURE:CHANNEL3:LOW:STATE 0;:MEASURE:CHANNEL3:MAXIMUM:STATE 0;:MEASURE:CHANNEL3:MINIMUM:STATE 0;:MEASURE:CHANNEL3:NOVERSHOOT:STATE 0;:MEASURE:CHANNEL3:NWIDTH:STATE 0;:MEASURE:CHANNEL3:PERIOD:STATE 0;:MEASURE:CHANNEL3:PNUMBER:STATE 0;:MEASURE:CHANNEL3:POVERSHOOT:STATE 0;:MEASURE:CHANNEL3:PTOPEAK:STATE 0;:MEASURE:CHANNEL3:PWIDT:STATE 0;:MEASURE:CHANNEL3:RISE:STATE 0;:MEASURE:CHANNEL3:RMS:STATE 0;:MEASURE:CHANNEL3:SDEVIATION:STATE 0;:MEASURE:CHANNEL3:TY1INTEG:STATE 0;:MEASURE:CHANNEL3:TY2INTEG:STATE 0;:MEASURE:CHANNEL3:XY1INTEG:STATE 0;:MEASURE:CHANNEL3:XY2INTEG:STATE 0;:MEASURE:CHANNEL3:DELAY:STATE 0;MEASURE:SLOPE RISE;COUNT 1;:MEASURE:CHANNEL3:DELAY:REFERENCE:TRACE 3;SLOPE RISE;COUNT 1;:MEASURE:CHANNEL3:DPROXIMAL:MODE PERCENT;PERCENT 10.0,50.0,90.0;UNIT -150.000E+00,0.0E+00,150.000E+00;:MEASURE:CHANNEL3:METHO AUTO;:MEASURE:CHANNEL4:AVERAGE:STATE 0;:MEASURE:CHANNEL4:AVGFREQ:STATE 0;:MEASURE:CHANNEL4:AVGPERIOD:STATE 0;:MEASURE:CHANNEL4:BWIDTH1:STATE 0;:MEASURE:CHANNEL4:BWIDTH2:STATE 0;:MEASURE:CHANNEL4:DUTYCYCLE:STATE 0;:MEASURE:CHANNEL4:FALL:STATE 0;:MEASURE:CHANNEL4:FREQUENCY:STATE 0;:MEASURE:CHANNEL4:HIGH:STATE 0;:MEASURE:CHANNEL4:LOW:STATE 0;:MEASURE:CHANNEL4:MAXIMUM:STATE 0;:MEASURE:CHANNEL4:MINIMUM:

5.18 MEASure Group

STATE 0;:MEASURE:CHANNEL4:NOVERSHOOT:
STATE 0;:MEASURE:CHANNEL4:NWIDTH:
STATE 0;:MEASURE:CHANNEL4:PERIOD:
STATE 0;:MEASURE:CHANNEL4:PNUMBER:
STATE 0;:MEASURE:CHANNEL4:POVERSHOOT:
STATE 0;:MEASURE:CHANNEL4:PTOPEAK:
STATE 0;:MEASURE:CHANNEL4:PWIDITH:
STATE 0;:MEASURE:CHANNEL4:RISE:STATE 0;:
MEASURE:CHANNEL4:RMS:STATE 0;:MEASURE:
CHANNEL4:SDEVIATION:STATE 0;:MEASURE:
CHANNEL4:TY1INTEG:STATE 0;:MEASURE:
CHANNEL4:TY2INTEG:STATE 0;:MEASURE:
CHANNEL4:XY1INTEG:STATE 0;:MEASURE:
CHANNEL4:XY2INTEG:STATE 0;:MEASURE:
CHANNEL4:DELAY:STATE 0;MEASURE:
SLOPE RISE;COUNT 1;:MEASURE:CHANNEL4:
DELAY:REFERENCE:TRACE 4;SLOPE RISE;
COUNT 1;:MEASURE:CHANNEL4:DPROXIMAL:
MODE PERCENT;PERCENT 10.0,50.0,90.0;
UNIT -150.000E+00,0.0E+00,150.000E+00;:
MEASURE:CHANNEL4:METHOD AUTO;:MEASURE:
MATH1:AVERAGE:STATE 0;:MEASURE:MATH1:
AVGFREQ:STATE 0;:MEASURE:MATH1:
AVGPERIOD:STATE 0;:MEASURE:MATH1:
BWIDTH1:STATE 0;:MEASURE:MATH1:BWIDTH2:
STATE 0;:MEASURE:MATH1:DUTYCYCLE:
STATE 0;:MEASURE:MATH1:FALL:STATE 0;:
MEASURE:MATH1:FREQUENCY:STATE 0;:
MEASURE:MATH1:HIG:STATE 0;:MEASURE:
MATH1:LOW:STATE 0;:MEASURE:MATH1:
MAXIMUM:STATE 0;:MEASURE:MATH1:MINIMUM:
STATE 0;:MEASURE:MATH1:NOVERSHOOT:
STATE 0;:MEASURE:MATH1:NWIDTH:STATE 0;:
MEASURE:MATH1:PERIOD:STATE 0;:MEASURE:
MATH1:PNUMBER:STATE 0;:MEASURE:MATH1:
POVERSHOOT:STATE 0;:MEASURE:MATH1:
PTOPEAK:STATE 0;:MEASURE:MATH1:PWIDITH:
STATE 0;:MEASURE:MATH1:RISE:STATE 0;:
MEASURE:MATH1:RMS:STATE 0;:MEASURE:
MATH1:SDEVIATION:STATE 0;:MEASURE:MATH1:
TY1INTEG:STATE 0;:MEASURE:MATH1:
TY2INTEG:STATE 0;:MEASURE:MATH1:
XY1INTEG:STATE 0;:MEASURE:MATH1:
XY2INTEG:STATE 0;:MEASURE:MATH1:DELAY:
STATE 0;MEASURE:SLOPE RISE;COUNT 1;:
MEASURE:MATH1:DELAY:REFERENCE:
TRACE MATH1;SLOPE RISE;COUNT 1;:MEASURE:
MATH1:DPROXIMAL:MODE PERCENT;
PERCENT 10.0,50.0,90.0;
UNIT -3.00,0.00,3.00;:MEASURE:MATH1:
METHOD AUTO;:MEASURE:MATH2:AVERAGE:
STATE 0;:MEASURE:MATH2:AVGFREQ:STATE 0;:
MEASURE:MATH2:AVGPERIOD:STATE 0;:
MEASURE:MATH2:BWIDTH1:STATE 0;:MEASURE:
MATH2:BWIDTH2:STATE 0;:MEASURE:MATH2:
DUTYCYCLE:STATE 0;:MEASURE:MATH2:FALL:
STATE 0;:MEASURE:MATH2:FREQUENCY:

STATE 0;:MEASURE:MATH2:HIG:STATE 0;:
MEASURE:MATH2:LOW:STATE 0;:MEASURE:
MATH2:MAXIMUM:STATE 0;:MEASURE:MATH2:
MINIMUM:STATE 0;:MEASURE:MATH2:
NOVERSHOOT:STATE 0;:MEASURE:MATH2:
NWIDTH:STATE 0;:MEASURE:MATH2:PERIOD:
STATE 0;:MEASURE:MATH2:PNUMBER:STATE 0;:
MEASURE:MATH2:POVERSHOOT:STATE 0;:
MEASURE:MATH2:PTOPEAK:STATE 0;:MEASURE:
MATH2:PWIDITH:STATE 0;:MEASURE:MATH2:
RISE:STATE 0;:MEASURE:MATH2:RMS:
STATE 0;:MEASURE:MATH2:SDEVIATION:
STATE 0;:MEASURE:MATH2:TY1INTEG:
STATE 0;:MEASURE:MATH2:TY2INTEG:
STATE 0;:MEASURE:MATH2:XY1INTEG:
STATE 0;:MEASURE:MATH2:XY2INTEG:
STATE 0;:MEASURE:MATH2:DELAY:STATE 0;:
MEASURE:SLOPE RISE;COUNT 1;:MEASURE:
MATH2:DELAY:REFERENCE:TRACE MATH2;
SLOPE RISE;COUNT 1;:MEASURE:MATH2:
DPROXIMAL:MODE PERCENT;
PERCENT 10.0,50.0,90.0;
UNIT -3.00,0.00,3.00;:MEASURE:MATH2:
METHOD AUTO;:MEASURE:CYCLE:TRACE 1;:
MEASURE:TRANGE -4.000000,4.000000

:MEASure:{CHANnel<x>|MATH<x>}?

Function Queries all specified parameter ON/OFF settings.

Syntax :MEASure:{CHANnel<x>|MATH<x>}?
 <x> (CHANnel)=1 to 4
 <x> (MATH)=1 or 2

Example (An example for CH1 is given below.)
 :MEASURE:CHANNEL1?→:MEASURE:CHANNEL1:
 AVERAGE:STATE 0;;MEASURE:CHANNEL1:
 AVGFREQ:STATE 0;;MEASURE:CHANNEL1:
 AVGPERIOD:STATE 0;;MEASURE:CHANNEL1:
 BWIDTH1:STATE 0;;MEASURE:CHANNEL1:
 BWIDTH2:STATE 0;;MEASURE:CHANNEL1:
 DUTYCYCLE:STATE 0;;MEASURE:CHANNEL1:
 FALL:STATE 0;;MEASURE:CHANNEL1:
 FREQUENCY:STATE 0;;MEASURE:CHANNEL1:
 HIGH:STATE 0;;MEASURE:CHANNEL1:LOW:
 STATE 0;;MEASURE:CHANNEL1:MAXIMUM:
 STATE 0;;MEASURE:CHANNEL1:MINIMUM:
 STATE 0;;MEASURE:CHANNEL1:NOVERSHOOT:
 STATE 0;;MEASURE:CHANNEL1:NWIDTH:
 STATE 0;;MEASURE:CHANNEL1:PERIOD:
 STATE 0;;MEASURE:CHANNEL1:PNUMBER:
 STATE 0;;MEASURE:CHANNEL1:POVERSHOOT:
 STATE 0;;MEASURE:CHANNEL1:PTOPEAK:
 STATE 0;;MEASURE:CHANNEL1:PWIDTh:
 STATE 0;;MEASURE:CHANNEL1:RISE:STATE 0;;
 MEASURE:CHANNEL1:RMS:STATE 0;;MEASURE:
 CHANNEL1:SDEVIATION:STATE 0;;MEASURE:
 CHANNEL1:TY1INTEG:STATE 0;;MEASURE:
 CHANNEL1:TY2INTEG:STATE 0;;MEASURE:
 CHANNEL1:XY1INTEG:STATE 0;;MEASURE:
 CHANNEL1:XY2INTEG:STATE 0;;MEASURE:
 CHANNEL1:DELAY:STATE 0;MEASURE:
 SLOPE RISE;COUNT 1;MEASURE:CHANNEL1:
 DELAY:REFERENCE:TRACE 1;SLOPE RISE;
 COUNT 1;MEASURE:CHANNEL1:DPROXIMAL:
 MODE PERCENT;PERCENT 10.0,50.0,90.0;
 UNIT -150.000E+00,0.0E+00,150.000E+00;;
 MEASURE:CHANNEL1:METHOD AUTO 0

:MEASure:{CHANnel<x>|MATH<x>}:ALL

Function Turns all the measurement parameters of the waveform ON/OFF at once.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:ALL
 {<Boolean>}
 The <x> in CHANnel<x>=1 to 4
 The <x> in MATH<x>=1 or 2

Example (The following example is for CH1.)
 :MEASURE:CHANNEL1:ALL OFF

:MEASure:{CHANnel<x>|MATH<x>}:COPY

Function Copies the ON/OFF state of all measurement parameters of one waveform to all other waveforms.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:COPY
 The <x> in CHANnel<x>=1 to 4
 The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:COPY

:MEASure:{CHANnel<x>|MATH<x>}:DELAY?

Function Queries all settings related to the delay between waveform channels.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELAy?
 The <x> in CHANnel<x>=1 to 4
 The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAy?→:MEASURE:
 CHANNEL1:DELAy:STATE 0;MEASURE:
 SLOPE RISE;COUNT 1;MEASURE:CHANNEL1:
 DELAY:REFERENCE:TRACE 1;SLOPE RISE;
 COUNT 1

:MEASure:{CHANnel<x>|MATH<x>}:DELAy:MEASure?

Function Queries all settings related to the measured waveform when measuring the delay between channels.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELAy:
 MEASure?
 The <x> in CHANnel<x>=1 to 4
 The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAy:MEASure?→
 :MEASURE:CHANNEL1:MEASure:SLOPE RISE;
 COUNT 1

:MEASure:{CHANnel<x>|MATH<x>}:DELAy:MEASure:COUNT

Function Sets the edge count of the measured waveform when measuring the delay between channels or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELAy:
 MEASure:COUNT {<NRF>}
 :MEASure:{CHANnel<x>|MATH<x>}:DELAy:
 MEASure:COUNT?
 The <x> in CHANnel<x>=1 to 4
 The <x> in MATH<x>=1 or 2
 <NRF>=1 to 9

Example :MEASURE:CHANNEL1:DELAy:MEASure:COUNT 2
 :MEASURE:CHANNEL1:DELAy:MEASure:
 COUNT?→:MEASURE:CHANNEL1:DELAy:MEASure:
 COUNT 2

**:MEASure:{CHANnel<x>|MATH<x>}:DELay:
MEASure:SLOPe**

Function Sets the slope of the measured waveform when measuring the delay between channels or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELay:
MEASure:SLOPe {RISE|FALL}
:MEASure:{CHANnel<x>|MATH<x>}:DELay:
MEASure:SLOPe?

The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAY:MEASURE:
SLOPE RISE
:MEASURE:CHANNEL1:DELAY:MEASURE:
SLOPE?→:MEASURE:CHANNEL1:DELAY:MEASURE:
SLOPE RISE

**:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence?**

Function Queries all settings related to the reference waveform when measuring the delay between channels.

Syntax :MEASURE:{CHANnel<x>|MATH<x>}:DELay:
REFerence?

The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAY:REFERENCE?→
:MEASURE:CHANNEL1:DELAY:REFERENCE:
TRACE 1;SLOPE RISE;COUNT 1

**:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:COUNT**

Function Sets the edge count of the reference waveform when measuring the delay between channels or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:COUNT {<Nrf>}
:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:COUNT?

The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2
<Nrf>=1 to 9

Example :MEASURE:TRACE1:DELAY:REFERENCE:COUNT 2
:MEASURE:TRACE1:DELAY:REFERENCE:COUNT?→
:MEASURE:TRACE1:DELAY:REFERENCE:COUNT 2

**:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:SLOPe**

Function Sets the slope of the reference waveform when measuring the delay between channels or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:SLOPe {RISE|FALL}
:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:SLOPe?

The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAY:REFERENCE:
SLOPE RISE
:MEASURE:CHANNEL1:DELAY:REFERENCE:
SLOPE?→:MEASURE:CHANNEL1:DELAY:
REFERENCE:SLOPE RISE

**:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:SOURce**

Function Sets whether or not to set the reference to the trigger point or the waveform when measuring the delay between channels or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:SOURce {TRACe|TRIGger}
:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:SOURce?

The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAY:REFERENCE:
SOURCE TRACE
:MEASURE:CHANNEL1:DELAY:REFERENCE:
SOURCE?→:MEASURE:CHANNEL1:DELAY:
REFERENCE:SOURCE TRACE

**:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:TRACe**

Function Sets the reference trace when measuring the delay between channels or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:TRACe {<Nrf>|MATH<x>}
:MEASure:{CHANnel<x>|MATH<x>}:DELay:
REFerence:TRACe?

The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2

Example :MEASURE:CHANNEL1:DELAY:REFERENCE:
TRACE 2
:MEASURE:CHANNEL1:DELAY:REFERENCE:
TRACE?→:MEASURE:CHANNEL1:DELAY:
REFERENCE:TRACE 2

:MEASure:{CHANnel<x>|MATH<x>}:DELay:STATe

Function	Turns the delay parameter ON/OFF and sets the display format or queries the current setting.
Syntax	:MEASure:{CHANnel<x> MATH<x>}:DELay:STATe {OFF ON DEGREE} :MEASure:{CHANnel<x> MATH<x>}:DELay:STATe?
	The <X> in CHANnel<x>=1 to 4 The <X> in MATH<x>=1 or 2
Example	:MEASURE:CHANNEL1:DELAY:STATE ON :MEASURE:CHANNEL1:DEALY:STATE?→: MEASURE:CHANNEL1:DELAY:STATE ON

:MEASure:{CHANnel<x>|MATH<x>}:DPRoximal?

Function	Queries all settings related to distal, mesial, and proximal values.
Syntax	MEASure:{CHANnel<x> MATH<x>}:DPRoximal? The <x> in CHANnel<x>=1 to 4 The <x> in MATH<x>=1 or 2
Example	:MEASURE:CHANNEL1:DPROXIMAL?→:MEASURE:CHANNEL1:DPROXIMAL:MODE PERCENT; PERCENT 10.0,50.0,90.0; UNIT -2.000E+00,0.0E+00,2.000E+00

:MEASure:{CHANnel<x>|MATH<x>}:DPRoximal:MODE

Function	Sets the distal, mesial, and proximal mode or queries the current setting.
Syntax	:MEASure:{CHANnel<x> MATH<x>}:DPRoximal:MODE {PERCENT UNIT} :MEASure:{CHANnel<x> MATH<x>}:DPRoximal:MODE?
	The <x> in CHANnel<x>=1 to 4 The <x> in MATH<x>=1 or 2
Example	:MEASURE:CHANNEL1:DPROXIMAL:MODE PERCENT :MEASURE:CHANNEL1:DPROXIMAL:MODE?→ :MEASURE:CHANNEL1:DPROXIMAL:MODE PERCENT

:MEASure:{CHANnel<x>|MATH<x>}:DPRoximal:PERCent

Function	Sets the distal, mesial, and proximal points in terms of a percentage or queries the current setting.
Syntax	:MEASure:{CHANnel<x> MATH<x>}:DPRoximal:PERCent {<NRf>,<NRf>,<NRf>} :MEASure:{CHANnel<x> MATH<x>}:DPRoximal:PERCent?
	The <x> in CHANnel<x>=1 to 4 The <x> in MATH<x>=1 or 2 <NRf>=0 to 100 (% , 1% steps)
Example	:MEASURE:CHANNEL1:DPROXIMAL:PERCENT 80,60,40 :MEASURE:CHANNEL1:DPROXIMAL:PERCENT?→ :MEASURE:CHANNEL1:DPROXIMAL:PERCENT 80,60,40

:MEASure:{CHANnel<x>|MATH<x>}:DPRoximal:UNIT

Function	Sets the distal, mesial, and proximal points in terms of a voltage or queries the current setting.
Syntax	:MEASure:{CHANnel<x> MATH<x>}:DPRoximal:UNIT {<voltage>,<voltage>,<voltage> <NRf>,<NRf>,<NRf>} :MEASure:{CHANnel<x> MATH<x>}:DPRoximal:UNIT?
	The <x> in CHANnel<x>=1 to 4 The <x> in MATH<x>=1 or 2 <voltage>= 8 div on the screen (0.01 div steps) <NRf>=-4 to 4 div (0.01 div steps)
Example	:MEASURE:CHANNEL1:DPROXIMAL:UNIT 50V,0V,-50V :MEASURE:CHANNEL1:DPROXIMAL:UNIT?→ :MEASURE:CHANNEL1:DPROXIMAL:UNIT 50.0E+00,0.0E+00,-50.0E+00

:MEASure:{CHANnel<x>|MATH<x>}:METHod

Function	Sets the High and Low points or queries the current setting.
Syntax	:MEASure:{CHANnel<x> MATH<x>}:METHod {AUTO MAXMin} :MEASure:{CHANnel<x> MATH<x>}:METHod?
	The <x> in CHANnel<x>=1 to 4 The <x> in MATH<x>=1 or 2
Example	:MEASURE:CHANNEL1:METHOD AUTO :MEASURE:CHANNEL1:METHOD?→:MEASURE:CHANNEL1:METHOD AUTO

:MEASure:{CHANnel<x>|MATH<x>}: <parameter>?

Function Queries all settings related to the parameters of each waveform.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:
<parameter>?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2
<parameter>= {AVERAge|AVGFreq|AVGPeriod|
BWIDth1|BWIDth2|DUTYcycle|
FALL|FREQuency|HIGH|LOW|
MAXimum|MINimum|NOVershoot|
NWIDth|PERiod|PNUMBER|
POVershoot|PTOPeak|PWIDth|
RISE|RMS|SDEVIation|
TY1Integ|TY2Integ|XY1Integ|
XY2Integ}

Example (The following example is for the average value of CH1.)
:MEASURE:CHANNEL1:AVERAGE?→:MEASURE:
CHANNEL1:AVERAGE:STATE 1

:MEASure:{CHANnel<x>|MATH<x>}: <parameter>:COUNT?

Function Queries the number of statistical processing of each parameter.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:
<parameter>:COUNT?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2
<parameter>= {AVERAge|AVGFreq|AVGPeriod|
BWIDth1|BWIDth2|DElay|
DUTYcycle|FALL|FREQuency|
HIGH|LOW|MAXimum|MINimum|
NOVershoot|NWIDth|PERiod|
PNUMBER|POVershoot|PTOPeak|
PWIDth|RISE|RMS|SDEVIation|
TY1Integ|TY2Integ|XY1Integ|
XY2Integ}

Example (The following example is for the average value of CH1.)
:MEASURE:CHANNEL1:AVERAGE:COUNT?→
:MEASURE:CHANNEL1:AVERAGE:COUNT 100

:MEASure:{CHANnel<x>|MATH<x>}: <parameter>:{MAXimum|MEAN|MINimum| SDEVIation}?

Function Queries the statistics of each parameter.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:
<parameter>:{MAXimum|MEAN|MINimum|
SDEVIation}?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2
<parameter>= {AVERAge|AVGFreq|AVGPeriod|
BWIDth1|BWIDth2|DElay|
DUTYcycle|FALL|FREQuency|
HIGH|LOW|MAXimum|MINimum|
NOVershoot|NWIDth|PERiod|
PNUMBER|POVershoot|PTOPeak|
PWIDth|RISE|RMS|SDEVIation|
TY1Integ|TY2Integ|XY1Integ|
XY2Integ}

Example (The following example is for the maximum value.)
:MEASURE:CHANNEL1:AVERAGE:MAXIMUM?→
:MEASURE:CHANNEL1:AVERAGE:
MAXIMUM -40.0000E-06

Description If the statistics cannot be found, "NaN(Not A Number)" is returned.

:MEASure:{CHANnel<x>|MATH<x>}: <parameter>:STATE

Function Turns the parameter ON/OFF one by one or queries the current setting.

Syntax :MEASure:{CHANnel<x>|MATH<x>}:
<parameter>:STATE {<Boolean>}
:MEASure:{CHANnel<x>|MATH<x>}:
<parameter>:STATE?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2
<parameter>= {AVERAge|AVGFreq|AVGPeriod|
BWIDth1|BWIDth2|DUTYcycle|
FALL|FREQuency|HIGH|LOW|
MAXimum|MINimum|NOVershoot|
NWIDth|PERiod|PNUMBER|
POVershoot|PTOPeak|PWIDth|
RISE|RMS|SDEVIation|
TY1Integ|TY2Integ|XY1Integ|
XY2Integ}

Example (The following example is for the average value of CH1.)
:MEASURE:CHANNEL1:AVERAGE:STATE ON
:MEASURE:CHANNEL1:AVERAGE:STATE?→
:MEASURE:CHANNEL1:AVERAGE:STATE 1

**:MEASure:{CHANnel<x>|MATH<x>}:
<parameter>:VALue?**

Function	Queries the value of the automated measurement of each parameter.
Syntax	:MEASure:{CHANnel<x> MATH<x>}: <parameter>:VALue? The <x> in CHANnel<x>=1 to 4 The <x> in MATH<x>=1 or 2 <parameter>= {AVERAge AVGFreq AVGPeriod BWIDth1 BWIDth2 DELay DUTYcycle FALL FREQuency HIGH LOW MAXimum MINimum NOVershoot NWIDth PERiod PNUmber POVershoot PTOPeak PWIDth RISE RMS SDEVIation TY1Integ TY2Integ XY1Integ XY2Integ}
Example	(The following example is for the average value of CH1.) :MEASURE:CHANNEL1:AVERAGE:VALUE?→ :MEASURE:CHANNEL1:AVERAGE: VALUE 4.950E+00
Description	If the measurement is not possible, "NaN(Not A Number)" is returned.

:MEASure:CYCLE?

Function	Queries all settings related to the periodic statistical processing of the automated measurement of waveform parameters.
Syntax	:MEASure:CYCLE?
Example	:MEASURE:CYCLE?→:MEASURE:CYCLE:TRACE 1

:MEASure:CYCLE:ABORt

Function	Aborts the periodic statistical processing of the automated measurement of waveform parameters.
Syntax	:MEASure:CYCLE:ABORt
Example	:MEASURE:CYCLE:ABORT

:MEASure:CYCLE:EXECute

Function	Executes the periodic statistical processing of the automated measurement of waveform parameters.
Syntax	:MEASure:CYCLE:EXECute
Example	:MEASURE:CYCLE:EXECUTE

:MEASure:CYCLE:TRACe

Function	Sets the waveform used to determine the period for the periodic statistical processing of automated measurement of waveform parameters or queries the current setting.
Syntax	:MEASure:CYCLE:TRACe {OWN <NRF> MATH<x>} :MEASure:CYCLE:TRACe? <NRF>=1 to 4 <x>=1 or 2
Example	:MEASURE:CYCLE:TRACE 1 :MEASURE:CYCLE:TRACE?→:MEASURE:CYCLE: TRACE 1

:MEASure:HISTory:ABORt

Function	Aborts the statistical processing within the historical data of the automated measurement of waveform parameters.
Syntax	:MEASure:HISTory:ABORt
Example	:MEASURE:HISTORY:ABORT

:MEASure:HISTory:EXECute

Function	Executes the statistical processing within the historical data of the automated measurement of waveform parameters.
Syntax	:MEASure:HISTory:EXECute
Example	:MEASURE:HISTORY:EXECUTE

:MEASure:MODE

Function	Turns the automated measurement of waveform parameters ON/OFF and sets the statistical processing or queries the current setting.
Syntax	:MEASure:MODE {OFF ON STATistics CYCLE HISTory} :MEASure:MODE?
Example	:MEASURE:MODE ON :MEASURE:MODE?→:MEASURE:MODE ON

:MEASure:TRANGe (Time Range)

Function	Sets the measurement range or queries the current setting.
Syntax	:MEASure:TRANGe {<NRF>,<NRF>} :MEASure:TRANGe? <NRF>=-5 to 5 div (10 div/displayed record length steps)
Example	:MEASURE:TRANGE -4,4 :MEASURE:TRANGE?→:MEASURE: TRANGE -4.00E+00,4.00E+00


5.18 MEASure Group/5.19 PHASe Group

:MEASure:WAIT?

Function	Waits for the completion of the automated measurement with a timeout.
Syntax	:MEASure:WAIT? {<NRf>} <NRf>=1 to 360000 (timeout period, 10 ms steps)
Example	:MEASURE:WAIT? 100→:MEASURE:WAIT 1
Description	<ul style="list-style-type: none"> Returns "0" if the automated measurement completes within the timeout period or "1" if it is not complete or automated measurement is not in progress. Even if the timeout period is sufficiently long, "0" is returned when the automated measurement completes.

5.19 PHASe Group

The commands in the PHASe group deal with the phase shift function. These commands can be used to make the same settings and inquiries as when the SHIFT key + MATH key on the front panel is pressed.

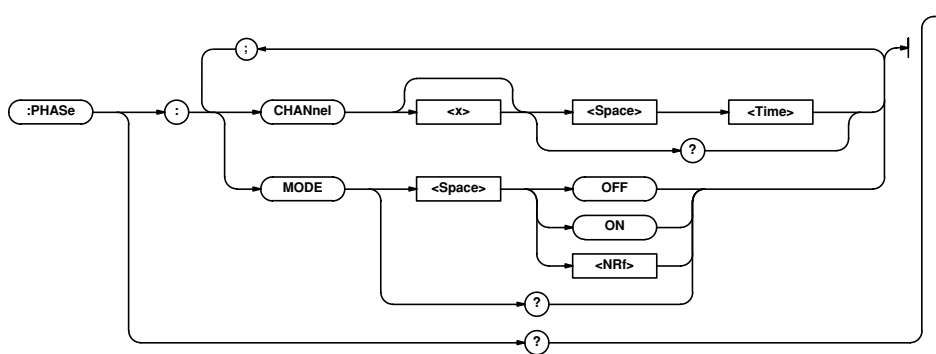

:PHASe?

Function	Queries all settings related to the phase shift function.
Syntax	:PHASe?
Example	:PHASe?→:PHASE:MODE 0;CHANNEL1 0.0E+00; CHANNEL2 0.0E+00;CHANNEL3 0.0E+00; CHANNEL4 0.0E+00

:PHASe:CHANnel<x>


Function	Sets the amount of phase shift of the waveform or queries the current setting.
Syntax	:PHASe:CHANnel<x> {<time>} :PHASe:CHANnel<x>? <x>=1 to 4 <time>=time between -T/div*5 and T/div*5
Example	:PHASE:CHANNEL2 1us :PHASE:CHANNEL2?→:PHASE: CHANNEL2 1.000000E-06
Description	<ul style="list-style-type: none"> Phase shift may not be possible on some channels depending on the interleave mode setting. When the time base is set to external clock, the setting and query is made in terms of the number of points.

:PHASe:MODE

Function	Turns the phase shift function ON/OFF or queries the current setting.
Syntax	:PHASe:MODE {<Boolean>} :PHASe:MODE?
Example	:PHASE:MODE ON :PHASE:MODE?→:PHASE:MODE 1

5.20 PRESet Group

The commands in the PRESet group deal with the preset function. These commands can be used to make the same settings and inquiries as when the PRESET key on the front panel is pressed.

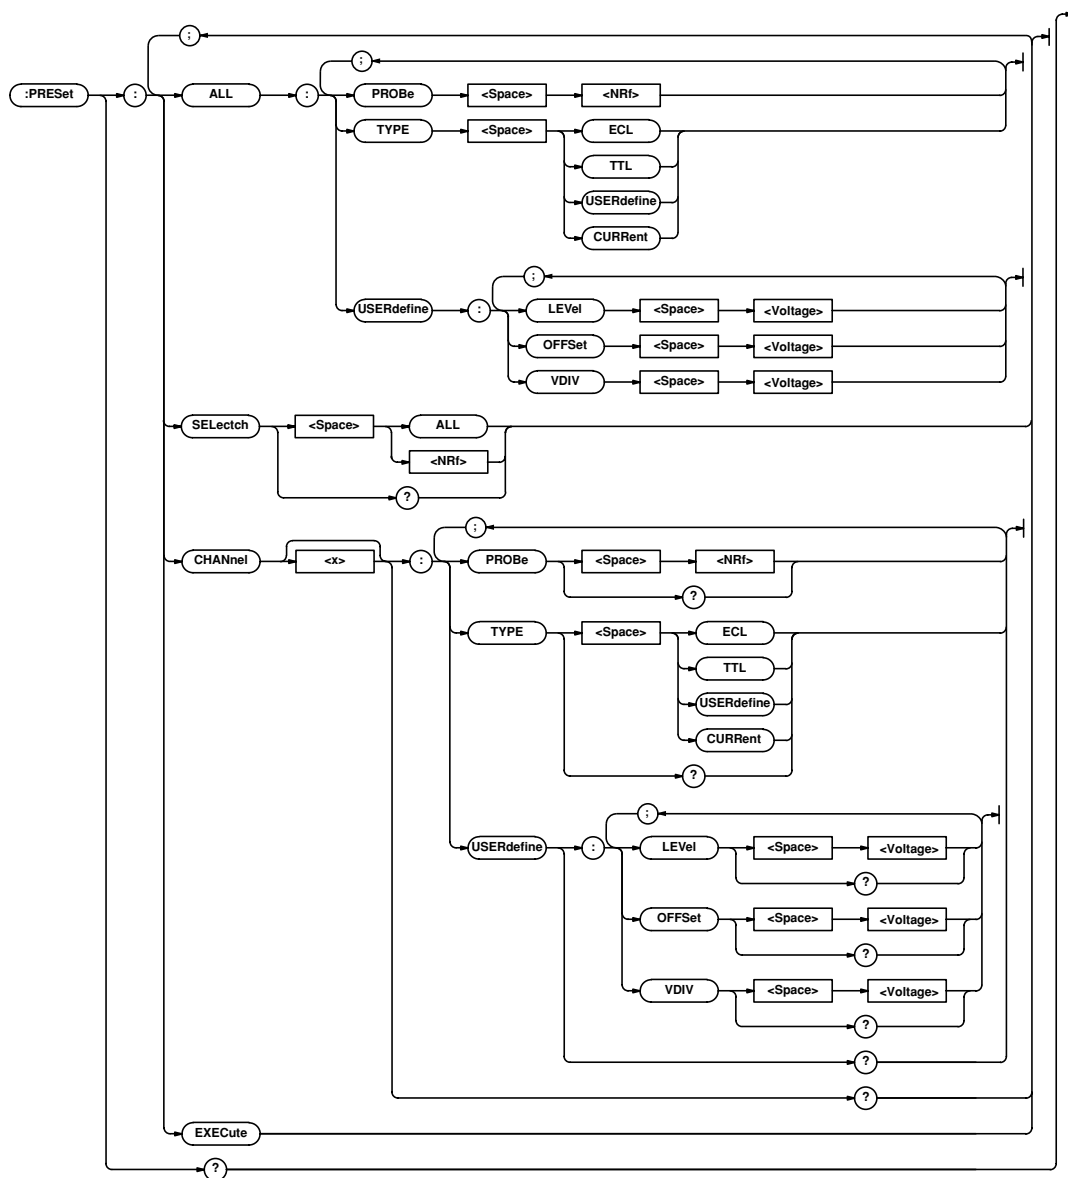

5.20 PRESet Group

:PRESet?

Function Queries all settings related to the preset function.

Syntax :PRESet?

Example :PRESET?→:PRESET:SELECTCH 1;CHANNEL1:TYPE TTL;USERDEFINE:VDIV 50.000E+00;LEVEL 0.0E+00;OFFSET 0.0E+00;;PRESET:CHANNEL1:PROBE 10;;PRESET:CHANNEL2:TYPE TTL;USERDEFINE:VDIV 50.000E+00;LEVEL 0.0E+00;OFFSET 0.0E+00;;PRESET:CHANNEL2:PROBE 10;;PRESET:CHANNEL3:TYPE TTL;USERDEFINE:VDIV 50.000E+00;LEVEL 0.0E+00;OFFSET 0.0E+00;;PRESET:CHANNEL3:PROBE 10;;PRESET:CHANNEL4:TYPE TTL;USERDEFINE:VDIV 50.000E+00;LEVEL 0.0E+00;OFFSET 0.0E+00;;PRESET:CHANNEL4:PROBE 10

:PRESet:ALL:PROBe

Function Sets the preset values of the probe attenuation of all channels.

Syntax :PRESet:ALL:PROBe {<Nrf>}
<Nrf>=1,10,100,1000

Example :PRESET:ALL:PROBE 10

:PRESet:ALL:TYPE

Function Sets preset values to all channels.

Syntax :PRESet:ALL:TYPE {ECLITTL|USERdefine|CURRENT}

Example :PRESET:ALL:TYPE USERDEFINE

:PRESet:ALL:USERdefine:LEVel

Function Sets the preset trigger level of all channels.

Syntax :PRESet:ALL:USERdefine:LEVel {<voltage>}
<voltage>= 8 div on the screen (0.01 div steps)

Example :PRESET:ALL:USERDEFINE:LEVEL 0V

:PRESet:ALL:USERdefine:OFFSet

Function Sets the preset offset voltage of all channels.

Syntax :PRESet:ALL:USERdefine:OFFSet {<voltage>}
<voltage>= See the IM701410-01E User's Manual.

Example :PRESET:ALL:USERDEFINE:OFFSET 0V

:PRESet:ALL:USERdefine:VDIV

Function Sets the preset V/div value of all channels.

Syntax :PRESet:ALL:USERdefine:VDIV {<voltage>}
<voltage>= 2 mV to 10 V (when the probe attenuation is 1:1, See the IM701410-01E User's Manual.)

Example :PRESET:ALL:USERDEFINE:VDIV 2V

:PRESet:CHANnel<x>?

Function Queries the preset information of an arbitrary channel.

Syntax :PRESet:CHANnel<x>?
<x>=1 to 4

Example :PRESET:CHANNEL1?→:PRESET:CHANNEL1:TYPE TTL;USERDEFINE:VDIV 50.000E+00;LEVEL 0.0E+00;OFFSET 0.0E+00;;PRESET:CHANNEL1:PROBE 10

:PRESet:CHANnel<x>:PROBe

Function Sets the preset probe attenuation of an arbitrary channel or queries the current setting.

Syntax :PRESet:CHANnel<x>:PROBe {<Nrf>}
:PRESet:CHANnel<x>:PROBe?
<x>=1 to 4
<Nrf>=1,10,100,1000

Example :PRESET:CHANNEL1:PROBE 1
:PRESET:CHANNEL1:PROBE?→:PRESET:CHANNEL1:PROBE 1

:PRESet:CHANnel<x>:TYPE

Function Sets the preset type to the channel or queries the current setting.

Syntax :PRESet:CHANnel<x>:TYPE {ECLITTL|USERdefine|CURRENT}
:PRESet:CHANnel<x>:TYPE?
<x>=1 to 4

Example :PRESET:CHANNEL1:TYPE USERDEFINE
:PRESET:CHANNEL1:TYPE?→:PRESET:CHANNEL1:TYPE USERDEFINE

:PRESet:CHANnel<x>:USERdefine?

Function Queries all preset values when using User preset.

Syntax :PRESet:CHANnel<x>:USERdefine?
<x>=1 to 4

Example :PRESET:CHANNEL1:USERDEFINE?→:PRESET:CHANNEL1:USERDEFINE:VDIV 50.000E+00;LEVEL 0.0E+00;OFFSET 0.0E+00

:PRESet:CHANnel<x>:USERdefine:LEVel

Function Sets the preset trigger level of the channel or queries the current setting.

Syntax :PRESet:CHANnel<x>:USERdefine:LEVel {<voltage>}
:PRESet:CHANnel<x>:USERdefine:LEVel?
<x>=1 to 4
<voltage>= 8 div on the screen (0.01 div steps)

Example :PRESET:CHANNEL1:USERDEFINE:LEVEL 0V
:PRESET:CHANNEL1:USERDEFINE:LEVEL?→
:PRESET:CHANNEL1:USERDEFINE:LEVEL 0.000E+00

:PRESet:CHANnel<x>:USERdefine:OFFSet

Function Sets the preset offset voltage of the channel or queries the current setting.

Syntax :PRESet:CHANNEL<x>:USERdefine:OFFSet
{<voltage>}
:PRESet:CHANNEL<x>:USERdefine:OFFSet?
<x>=1 to 4
<voltage>= See the IM701410-01E User's Manual.

Example :PRESET:CHANNEL1:USERDEFINE:OFFSET 0V
:PRESET:CHANNEL1:USERDEFINE:OFFSET?→
:PRESET:CHANNEL1:USERDEFINE:
OFFSET 0.000E+00

:PRESet:CHANnel<x>:USERdefine:VDIV

Function Sets the preset V/div value of the channel or queries the current setting.

Syntax :PRESet:CHANNEL<x>:USERdefine:VDIV
{<voltage>}
:PRESet:CHANNEL<x>:USERdefine:VDIV?
<x>=1 to 4
<voltage>= 2 mV to 10 V(when the probe attenuation is 1:1, See the IM701410-01E User's Manual.)

Example :PRESET:CHANNEL1:USERDEFINE:VDIV 2V
:PRESET:CHANNEL1:USERDEFINE:VDIV?→
:PRESET:CHANNEL1:USERDEFINE:
VDIV 2.000E+00

:PRESet:EXECute

Function Executes preset.

Syntax :PRESet:EXECute

Example :PRESET:EXECUTE

Description Preset the channel which is selected by the "PRESet:SElectch" command.

:PRESet:SElectch


Function Sets the channel to be preset or queries the current setting.


Syntax :PRESet:SElectch {ALL|<Nrf>}
:PRESet:SElectch?
<Nrf>=1 to 4

Example :PRESET:SELECTCH 1
:PRESET:SELECTCH?→:PRESET:SELECTCH 1


5.21 SEARCh Group


The commands in the SEARCh group are used to search an arbitrary pattern in the acquired waveform. These commands can be used to carry out the same operations or to make the same settings and inquiries as when the SHIFT key + ZOOM key on the front panel is pressed.

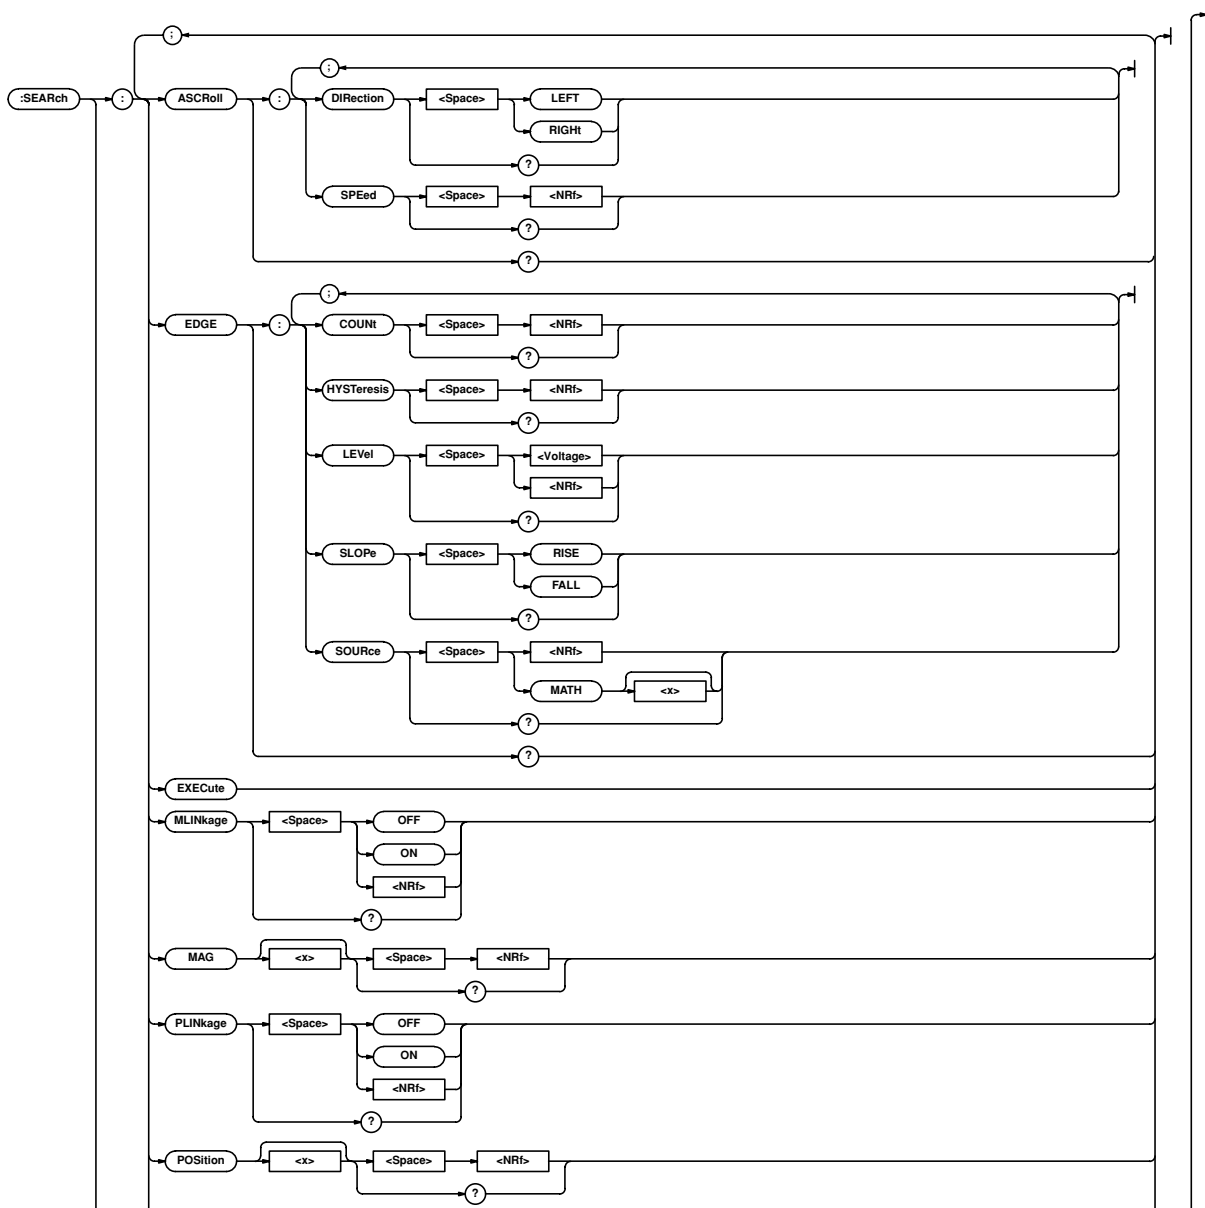

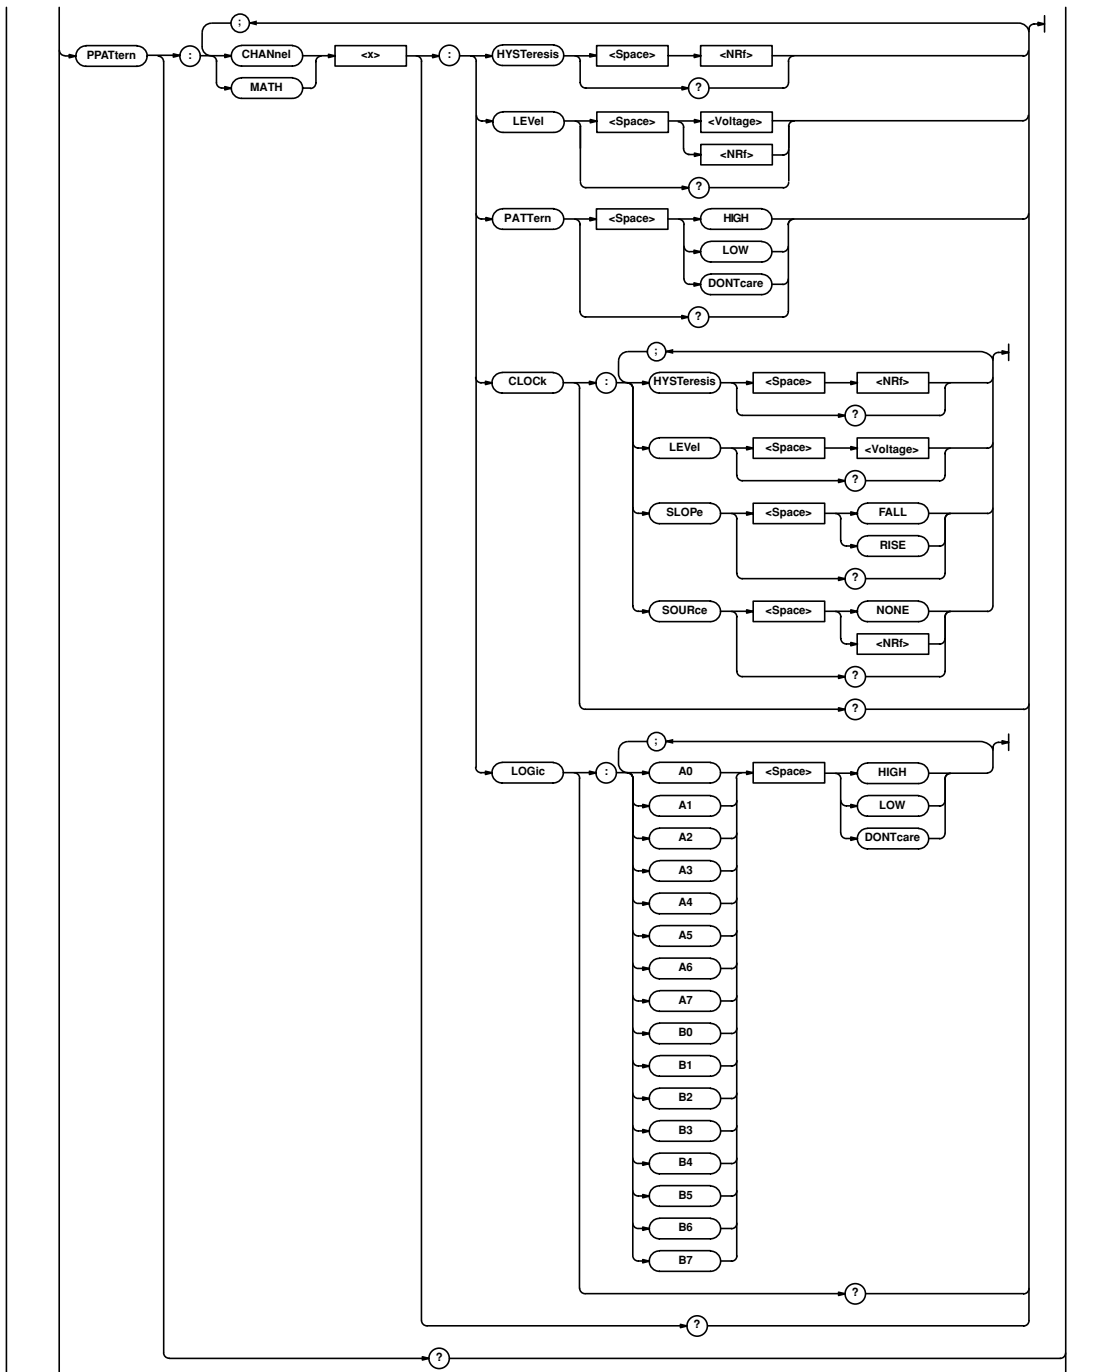

5.21 SEARCh Group

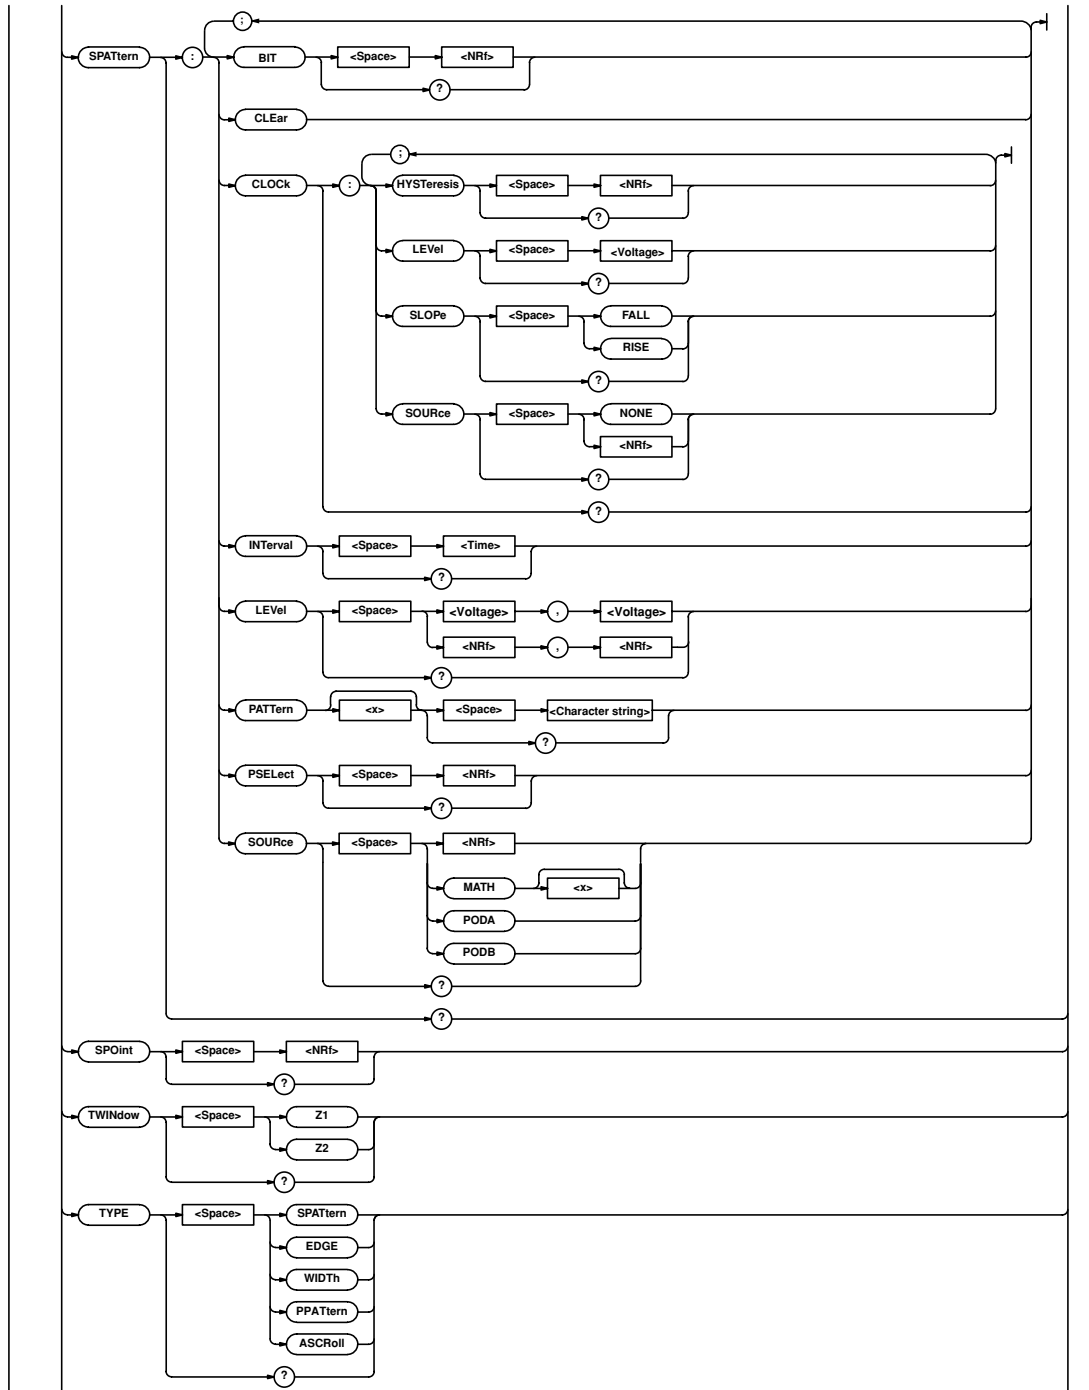

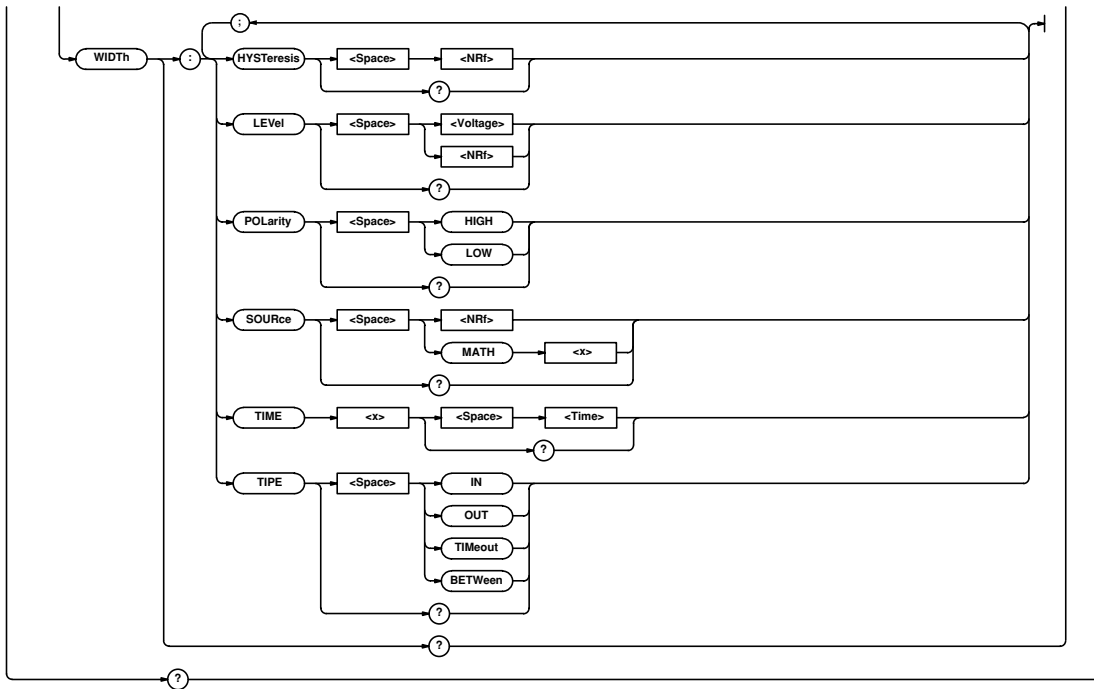

5.21 SEARCh Group

:SEARCh?

Function Queries all settings related to the search function.

Syntax :SEARCh?

Example :SEARCH?→:SEARCH:TYPE EDGE;EDGE:SOURCE 1;LEVEL 0.0E+00;SLOPE RISE;HYSTERESIS 0.30;COUNT 1;:SEARCH:SPATTERN:CLOCK:SOURCE NONE;:SEARCH:SPATTERN:INTERVAL 10.000E-09;SOURCE 1;LEVEL 0.0E+00,0.0E+00;PSELECT 1;PATTERN1 "XXXXXXXX";PATTERN2 "XXXXXXXX";PATTERN3 "XXXXXXXX";PATTERN4 "XXXXXXXX";PATTERN5 "XXXXXXXX";PATTERN6 "XXXXXXXX";PATTERN7 "XXXXXXXX";PATTERN8 "XXXXXXXX";BIT 0;:SEARCH:WIDTH:TYPE IN;SOURCE 1;LEVEL 0.0E+00;POLARITY HIGH;HYSTERESIS 0.30;TIME1 1.000000E-06;TIME2 1.000000E-06;:SEARCH:PPATTERN:CLOCK:SOURCE NONE;:SEARCH:PPATTERN:CHANNEL1:LEVEL 0.0E+00;HYSTERESIS 0.30;PATTERN HIGH;:SEARCH:PPATTERN:CHANNEL2:LEVEL 0.0E+00;HYSTERESIS 0.30;PATTERN DONTCARE;:SEARCH:PPATTERN:CHANNEL3:LEVEL 0.0E+00;HYSTERESIS 0.30;PATTERN DONTCARE;:SEARCH:PPATTERN:CHANNEL4:LEVEL 0.0E+00;HYSTERESIS 0.30;PATTERN DONTCARE;:SEARCH:PPATTERN:MATH1:LEVEL 0.00;HYSTERESIS 0.30;PATTERN DONTCARE;:SEARCH:PPATTERN:MATH2:LEVEL 0.00;HYSTERESIS 0.30;PATTERN DONTCARE;:SEARCH:PPATTERN:LOGIC:A0 DONTCARE;A1 DONTCARE;A2 DONTCARE;A3 DONTCARE;A4 DONTCARE;A5 DONTCARE;A6 DONTCARE;A7 DONTCARE;B0 DONTCARE;B1 DONTCARE;B2 DONTCARE;B3 DONTCARE;B4 DONTCARE;B5 DONTCARE;B6 DONTCARE;B7 DONTCARE;:SEARCH:ASCROLL:DIRECTION RIGHT;SPEED 0;:SEARCH:TWINDOW Z1;MLINKAGE 1;MAG1 2.0;MAG2 2.0;PLINKAGE 0;POSITION1 0.0000000;POSITION2 0.0000000;SPOINT -5.0000000;SELECT NAN

:SEARCh:ASCROLL?

Function Queries all settings related to the auto scroll function.

Syntax :SEARCh:ASCROLL?

Example :SEARCH:ASCROLL?→:SEARCH:ASCROLL:DIRECTION RIGHT;SPEED 0

:SEARCh:ASCROLL:DIRection

Function Sets the direction for moving the zoom box of the auto scroll or queries the current setting.

Syntax :SEARCh:ASCROLL:DIRection {LEFT|RIGHT}

Example :SEARCH:ASCROLL:DIRECTION LEFT
:SEARCH:ASCROLL:DIRECTION?→:SEARCH:ASCROLL:DIRECTION LEFT

:SEARCh:ASCROLL:SPEEd

Function Sets the speed for moving the zoom box of the auto scroll or queries the current setting.

Syntax :SEARCh:ASCROLL:SPEEd {<Nrf>}
:SEARCh:ASCROLL:SPEEd?
<Nrf>=1 to 7

Example :SEARCH:ASCROLL:SPEED 1
:SEARCH:ASCROLL:SPEED?→:SEARCH:ASCROLL:SPEED 1

:SEARCh:EDGE?

Function Queries all settings related to the edge search.

Syntax :SEARCh:EDGE?

Example :SEARCH:EDGE?→:SEARCH:EDGE:SOURCE 1;LEVEL 0.0E+00;SLOPE RISE;HYSTERESIS LOW;COUNT 1

:SEARCh:EDGE:COUNT

Function Sets the edge search count or queries the current setting.

Syntax :SEARCh:EDGE:COUNT {<Nrf>}
:SEARCh:EDGE:COUNT?
<Nrf>=1 to 1000000

Example :SEARCH:EDGE:COUNT 100
:SEARCH:EDGE:COUNT?→:SEARCH:EDGE:COUNT 100

:SEARCh:EDGE:HYSTeresis

Function Sets the hysteresis on the edge search level or queries the current setting.

Syntax :SEARCh:EDGE:HYSTeresis {<Nrf>}
:SEARCh:EDGE:HYSTeresis?
<Nrf>=0.3 to 4 div (0.1 steps)

Example :SEARCH:EDGE:HYSTERESIS 1
:SEARCH:EDGE:HYSTERESIS?→:SEARCH:EDGE:HYSTERESIS 1.0

:SEARCh:EDGE:LEVEL

Function Sets the edge search level or queries the current setting.

Syntax :SEARCh:EDGE:LEVEL {<voltage>|<NRf>}
:SEARCh:EDGE:LEVEL?
<voltage>=8 div on the screen (0.01 div steps)
<NRf>=-4 to 4 div (0.01 div steps)

Example :SEARCH:EDGE:LEVEL -10mV
:SEARCH:EDGE:LEVEL?→:SEARCH:EDGE:LEVEL -10.00E-03

Description Specify a voltage when the ":SEARCh:EDGE:SOURce" is set to channel, <NRf> when it is set to MATH.

:SEARCh:EDGE:SLOPe

Function Sets the slope of the edge search or queries the current setting.

Syntax :SEARCh:EDGE:SLOPe {FALL|RISE}
:SEARCh:EDGE:SLOPe?

Example :SEARCH:EDGE:SLOPE RISE
:SEARCH:EDGE:SLOPE?→:SEARCH:EDGE:SLOPE RISE

:SEARCh:EDGE:SOURce

Function Sets the waveform on which to perform the edge search or queries the current setting.

Syntax :SEARCh:EDGE:SOURce {<NRf>|MATH<x>}
:SEARCh:EDGE:SOURce?
<NRf>=1 to 4
<x>=1 or 2

Example :SEARCH:EDGE:SOURCE MATH1
:SEARCH:EDGE:SOURCE?→:SEARCH:EDGE:SOURCE MATH1

:SEARCh:EXECute

Function Executes the search. This is an overlap command.

Syntax :SEARCh:EXECute

Example :SEARCH:EXECUTE

:SEARCh:MLINKage (Mag Linkage)

Function Turns the link ON/OFF when changing the zoom rate or queries the current setting.

Syntax :SEARCh:MLINKage {<Boolean>}
:SEARCh:MLINKage?

Example :SEARCH:MLINKAGE ON
:SEARCH:MLINKAGE?→:SEARCH:MLINKAGE 1

:SEARCh:MAG<x>

Function Sets the zoom rate of the zoom window or queries the current setting.

Syntax :SEARCh:MAG<x> {<NRf>}
:SEARCh:MAG<x>?
<x>=1 or 2
<NRf>=Up to the point in which 40 points are displayed, See the IM701410-01E User's Manual.

Example :SEARCH:MAG1 100
:SEARCH:MAG1?→:SEARCH:MAG1 100

:SEARCh:PLINKage (Position Linkage)

Function Turns the link ON/OFF when moving the zoom box or queries the current setting.

Syntax :SEARCh:PLINKage {<Boolean>}
:SEARCh:PLINKage?

Example :SEARCH:PLINKAGE OFF
:SEARCH:PLINKAGE?→:SEARCH:PLINKAGE 0

:SEARCh:POSition<x>

Function Sets the zoom box position or queries the current setting.

Syntax :SEARCh:POSition<x> {<NRf>}
:SEARCh:POSition<x>?
<x>=1 or 2
<NRf>=-5 to 5 div (10 div/displayed record length steps)

Example :SEARCH:POSITION1 2.5
:SEARCH:POSITION1?→:SEARCH:POSITION1 2.5000000

5.21 SEARCh Group

:SEARCh:PPATtern?

Function Queries all settings related to the parallel pattern search.

Syntax :SEARCh:PPATtern?

Example :SEARCH:PPATTERN?→:SEARCH:PPATTERN:
CLOCK:SOURCE NONE;:SEARCH:PPATTERN:
CHANNEL1:LEVEL 0.0E+00;HYSTERESIS 0.30;
PATTERN HIGH;:SEARCH:PPATTERN:CHANNEL2:
LEVEL 0.0E+00;HYSTERESIS 0.30;
PATTERN DONTCARE;:SEARCH:PPATTERN:
CHANNEL3:LEVEL 0.0E+00;HYSTERESIS 0.30;
PATTERN DONTCARE;:SEARCH:PPATTERN:
CHANNEL4:LEVEL 0.0E+00;HYSTERESIS 0.30;
PATTERN DONTCARE;:SEARCH:PPATTERN:
MATH1:LEVEL 0.00;HYSTERESIS 0.30;
PATTERN DONTCARE;:SEARCH:PPATTERN:
MATH2:LEVEL 0.00;HYSTERESIS 0.30;
PATTERN DONTCARE;:SEARCH:PPATTERN:LOGIC:
A0 DONTCARE;A1 DONTCARE;A2 DONTCARE;
A3 DONTCARE;A4 DONTCARE;A5 DONTCARE;
A6 DONTCARE;A7 DONTCARE;B0 DONTCARE;
B1 DONTCARE;B2 DONTCARE;B3 DONTCARE;
B4 DONTCARE;B5 DONTCARE;B6 DONTCARE;
B7 DONTCARE

:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}?

Function Queries all settings related to the waveform of the parallel pattern search.

Syntax :SEARCh:PPATtern:{CHANnel<x>|MATH<x>}?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2.

Example :SEARCH:PPATTERN:CHANNEL1?→:SEARCH:
PPATTERN:CHANNEL1:LEVEL 0.0E+00;
HYSTERESIS 0.30;PATTERN HIGH

:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}: HYSTeresis

Function Sets the hysteresis on the waveform on which to perform the parallel pattern search or queries the current setting.

Syntax :SEARCh:PPATtern:{CHANnel<x>|MATH<x>}:
HYSTeresis {<NRf>}
:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}:
HYSTeresis?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2.
<NRf>=0.3 to 4 div (0.1 steps)

Example :SEARCH:PPATTERN:CHANNEL1:HYSTERESIS 0.3
:SEARCH:PPATTERN:CHANNEL1:HYSTERESIS?→:
SEARCH:PPATTERN:CHANNEL1:HYSTERESIS 0.30

:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}: LEVel

Function Sets the search level on the waveform on which to perform the parallel pattern search or queries the current setting.

Syntax :SEARCh:PPATtern:{CHANnel<x>|MATH<x>}:
LEVel {<voltage>|<NRf>}
:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}:
LEVel?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2.
<voltage>=8 div on the screen (when the
waveform is CH1 to CH4)
<NRf>=-4 to 4 div (0.01 steps when the
waveform is MATH1 or MATH2)

Example :SEARCH:PPATTERN:CHANNEL1:LEVEL 1v
:SEARCH:PPATTERN:CHANNEL1:LEVEL?→:
SEARCH:PPATTERN:CHANNEL1:LEVEL 1.000E+00

:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}: PATTern

Function Sets the search pattern on the waveform on which to perform the parallel pattern search or queries the current setting.

Syntax :SEARCh:PPATtern:{CHANnel<x>|MATH<x>}:
PATTern {HIGH|LOW|DONTcare}
:SEARCh:PPATtern:{CHANnel<x>|MATH<x>}:
PATTern?
The <x> in CHANnel<x>=1 to 4
The <x> in MATH<x>=1 or 2.

Example :SEARCH:PPATTERN:CHANNEL1:PATTERN HIGH
:SEARCH:PPATTERN:CHANNEL1:PATTERN?→:
SEARCH:PPATTERN:CHANNEL1:PATTERN HIGH

:SEARCh:PPATtern:CLOCK?

Function Queries all settings related to the clock channel of the parallel pattern search.

Syntax :SEARCh:PPATtern:CLOCK?

Example :SEARCH:PPATTERN:CLOCK?→:SEARCH:
PPATTERN:CLOCK:SOURCE 1;LEVEL 1.000E+00;
HYSTERESIS 0.30;SLOPE RISE

:SEARCh:PPATtern:CLOCK:HYSYeresis

Function	Sets the hysteresis on the clock channel of the parallel pattern search or queries the current setting.
Syntax	:SEARCh:PPATtern:CLOCK:HYSYeresis {<NRF>} :SEARCh:PPATtern:CLOCK:HYSYeresis?<NRF>=>0.3 to 4 div (0.1 steps)
Example	:SEARCH:PPATTERN:CLOCK:HYSTERESIS 4.0 :SEARCH:PPATTERN:CLOCK:HYSTERESIS?->:SEARCH:PPATTERN:CLOCK:HYSTERESIS 4.00
Description	An error occurs if "SEARCh:PPATtern:CLOCK:SOURce" is set to "NONE."

:SEARCh:PPATtern:CLOCK:LEVel

Function	Sets the search level of the clock channel of the parallel pattern search or queries the current setting.
Syntax	:SEARCh:PPATtern:CLOCK:LEVel {<voltage>} :SEARCh:PPATtern:CLOCK:LEVel?<voltage>=0.01 to 8 divisions within the screen (0.01 division steps).
Example	:SEARCH:PPATTERN:CLOCK:LEVEL 1v :SEARCH:PPATTERN:CLOCK:LEVEL?->:SEARCH:PPATTERN:CLOCK:LEVEL 1.000E+00
Description	An error occurs if "SEARCh:PPATtern:CLOCK:SOURce" is set to "NONE."

:SEARCh:PPATtern:CLOCK:SLOPe

Function	Sets the slope of the clock channel of the parallel pattern search or queries the current setting.
Syntax	:SEARCh:PPATtern:CLOCK:SLOPe {FALL RISE} :SEARCh:PPATtern:CLOCK:SLOPe?
Example	:SEARCH:PPATTERN:CLOCK:SLOPE FALL :SEARCH:PPATTERN:CLOCK:SLOPE?->:SEARCH:PPATTERN:CLOCK:SLOPE FALL
Description	An error occurs if "SEARCh:PPATtern:CLOCK:SOURce" is set to "NONE."

:SEARCh:PPATtern:CLOCK:SOURce

Function	Sets the waveform used as the clock channel of the parallel pattern search or queries the current setting.
Syntax	:SEARCh:PPATtern:CLOCK:SOURce {NONE <NRF>} :SEARCh:PPATtern:CLOCK:SOURce?
Example	:SEARCH:PPATTERN:CLOCK:SOURce 1 :SEARCH:PPATTERN:CLOCK:SOURce?->:SEARCH:PPATTERN:CLOCK:SOURce 1

:SEARCh:PPATtern:LOGic?

Function	Queries all settings related to the logic channel of the parallel pattern search.
Syntax	:SEARCh:PPATtern:LOGic?
Example	:SEARCH:PPATTERN:LOGIC?->:SEARCH:PPATTERN:LOGIC:A0 DONTCARE;A1 DONTCARE;A2 DONTCARE;A3 DONTCARE;A4 DONTCARE;A5 DONTCARE;A6 DONTCARE;A7 DONTCARE;B0 DONTCARE;B1 DONTCARE;B2 DONTCARE;B3 DONTCARE;B4 DONTCARE;B5 DONTCARE;B6 DONTCARE;B7 DONTCARE

:SEARCh:PPATtern:LOGic:{A0|A1|A2|A3|A4|A5|A6|A7|B0|B1|B2|B3|B4|B5|B6|B7}

Function	Sets the bit condition of the clock channel of the parallel pattern search or queries the current setting.
Syntax	:SEARCh:PPATtern:LOGic:{A0 A1 A2 A3 A4 A5 A6 A7 B0 B1 B2 B3 B4 B5 B6 B7} {HIGH LOW DONTcare}
Example	:SEARCH:PPATTERN:LOGIC:A0 DONTcare :SEARCH:PPATTERN:LOGIC:A0?->:SEARCH:PPATTERN:LOGIC:A0 DONTCARE

:SEARCh:SElect

Function	Queries the storage number of the found position and the position that is stored in the specified storage number.
Syntax	:SEARCh:SElect {<NRF> MAXimum} :SEARCh:SElect?<NRF>=1 to 1000
Example	:SEARCH:SELECT 1 :SEARCH:SELECT?->:SEARCH:SELECT 2.5000000
Description	If no positions are found, "NAN" is returned.

:SEARCh:SElect? MAXimum

Function	Queries the maximum storage number of the found positions.
Syntax	:SEARCh:SElect? {MAXimum}
Example	:SEARCH:SELECT? MAXIMUM->:SEARCH:SELECT 100
Description	If no positions are found, "NAN" is returned.

5.21 SEARCh Group

:SEARCh:SPATtern? (Serial Pattern)

Function Queries all settings related to the serial pattern search.

Syntax :SEARCh:SPATtern?

Example :SEARCH:SPATTERN?→:SEARCH:SPATTERN:
CLOCK:SOURCE NONE;:SEARCH:SPATTERN:
INTERVAL 1.0E-06;SOURCE 1;LEVEL 0.0E+00;
PSELECT 1;PATTERN1 "HXXXXXXXX";
PATTERN2 "XXXXXXXX";PATTERN3 "XXXXXXXX";
PATTERN4 "XXXXXXXX";PATTERN5 "XXXXXXXX";
PATTERN6 "XXXXXXXX";PATTERN7 "XXXXXXXX";
PATTERN8 "XXXXXXXX"

:SEARCh:SPATtern:BIT

Function Sets the bit of the logic waveform to be searched or queries the current setting.

Syntax :SEARCh:SPATtern:BIT {<NRf>}
:SEARCh:SPATtern:BIT?
<NRf>=Bit 0 to 7

Example :SEARCH:SPATTERN:BIT 0
:SEARCH:SPATTERN:BIT?→:SEARCH:SPATTERN:
BIT 0

:SEARCh:SPATtern:CLEar

Function Clears all search patterns (Don't care).

Syntax :SEARCh:SPATtern:CLEar

Example :SEARCH:SPATTERN:CLEar

:SEARCh:SPATtern:CLOCK?

Function Queries all settings related to the clock channel.

Syntax :SEARCh:SPATtern:CLOCK?

Example :SEARCH:SPATTERN:CLOCK?→:SEARCH:
SPATTERN:CLOCK:SOURCE 1;LEVEL 0.0E+00;
SLOPE RISE;HYSTERESIS 0.3

:SEARCh:SPATtern:CLOCK:HYSTeresis

Function Sets the hysteresis of the clock channel or queries the current setting.

Syntax :SEARCh:SPATtern:CLOCK:
HYSTeresis {<NRf>}
:SEARCh:SPATtern:CLOCK:HYSTeresis?
<NRf>=0.3 to 4 div (0.1 steps)

Example :SEARCH:SPATTERN:CLOCK:HYSTERESIS 1
:SEARCH:SPATTERN:CLOCK:HYSTERESIS?→
:SEARCH:SPATTERN:CLOCK:HYSTERESIS 1.0

Description An error occurs if "SEAECh:SPATtern:CLOCK:
SOURCE" is set to "NONE."

:SEARCh:SPATtern:CLOCK:LEVEL

Function Sets the level of the clock channel or queries the current setting.

Syntax :SEARCh:SPATtern:CLOCK:LEVEL {<voltage>}
:SEARCh:SPATtern:CLOCK:LEVEL?
<voltage>= 8 div on the screen (0.01 div
steps)

Example :SEARCH:SPATTERN:CLOCK:LEVEL -10mV
:SEARCH:SPATTERN:CLOCK:LEVEL?→:SEARCH:
SPATTERN:CLOCK:LEVEL -10.00E-03

Description An error occurs if "SEAECh:SPATtern:CLOCK:
SOURCE" is set to "NONE."

:SEARCh:SPATtern:CLOCK:SLOPe

Function Sets the slope of the clock channel or queries the current setting.

Syntax :SEARCh:SPATtern:CLOCK:SLOPe {FALL|RISE}
:SEARCh:SPATtern:CLOCK:SLOPe?

Example :SEARCH:SPATTERN:CLOCK:SLOPE RISE
:SEARCH:SPATTERN:CLOCK:SLOPE?→:SEARCH:
SPATTERN:CLOCK:SLOPE RISE

Description An error occurs if "SEAECh:SPATtern:CLOCK:
SOURCE" is set to "NONE."

:SEARCh:SPATtern:CLOCK:SOURce

Function Sets the clock channel source waveform or queries the current setting.

Syntax :SEARCh:SPATtern:CLOCK:SOURce {<NRf>|
NONE}
:SEARCh:SPATtern:CLOCK:SOURce?
<NRf>=1 to 4

Example :SEARCH:SPATTERN:CLOCK:SOURCE 1
:SEARCH:SPATTERN:CLOCK:SOURCE?→:SEARCH:
SPATTERN:SOURCE 1

:SEARCh:SPATtern:INTerval

Function Sets the search interval of the waveform to be searched or queries the current setting.

Syntax :SEARCh:SPATtern:INTerval {<time>}
:SEARCh:SPATtern:INTerval?
<time>=10 ps to 500 s

Example :SEARCH:SPATTERN:INTERVAL 100us
:SEARCH:SPATTERN:INTERVAL?→:SEARCH:
SPATTERN:INTERVAL 100.00E-06

:SEARCH:SPATtern:LEVel

Function Sets the upper and lower limits of the search level of the waveform to be searched or queries the current setting.

Syntax :SEARCH:SPATtern:LEVel {<voltage>, <voltage>|<NRf>,NRf}&
:SEARCH:SPATtern:LEVel?&
<voltage>=8 div on the screen (when the waveform is CH1 to CH4)&
<NRf>=-4 to 4 div (0.01 steps when the waveform is MATH1 or MATH2)

Example :SEARCH:SPATtern:LEVel -1V,1V&
:SEARCH:SPATtern:LEVel?→:SEARCH:SPATtern:LEVel -1.000E+00,1.000E+00

:SEARCH:SPATtern:PATtern<x>

Function Sets the search pattern or queries the current setting.

Syntax :SEARCH:SPATtern:PATtern<x> <Character string>&
:SEARCH:SPATtern:PATtern<x>?&
<x>=1 to 8&
<Character string>=8 characters of the combination of 'H', 'L', and 'X' (The left most character represents the smallest bit. Total of 8 bits.)

Example :SEARCH:SPATtern:PATtern1 "HLXHLXHL"&
:SEARCH:SPATtern:PATtern1?→:SEARCH:SPATtern:PATtern1 "HLXHLXHL"

Description

- <x> represents the 8 bit block number. Thus, when <x>=1, the left most character represents bit 0 and the right most character represents bit 7. The relationship between <x> and the character string is as follows.
 - <x>=1: <character string>=bits 0 to 7,
 - <x>=2: <character string>=bits 8 to 15,
 - <x>=3: <character string>=bits 16 to 23,
 - <x>=4: <character string>=bits 24 to 31,
 - <x>=5: <character string>=bits 32 to 39,
 - <x>=6: <character string>=bits 40 to 47,
 - <x>=7: <character string>=bits 48 to 55,
 - <x>=8: <character string>=bits 56 to 63
- The pattern is assigned the pattern number that is selected with the ":SEARCH:SPATtern:PSElect" command.

:SEARCH:SPATtern:PSElect (Pattern Select)

Function Selects the pattern number to which the search pattern is to be set or queries the current setting.

Syntax :SEARCH:SPATtern:PSElect {<NRf>}&
:SEARCH:SPATtern:PSElect?&
<x>=1 to 4

Example :SEARCH:SPATtern:PSElect 1

Description The values 1 to 4 of <x> correspond to pattern A to D.

:SEARCH:SPATtern:SOURce

Function Sets the waveform on which to perform the serial pattern search or queries the current setting.

Syntax :SEARCH:SPATtern:SOURce {<NRf>|MATH<x>|PODA|PODB}&
:SEARCH:SPATtern:SOURce?&
<NRf>=1 to 4&
<x>=1 or 2

Example :SEARCH:SPATtern:SOURce 1&
:SEARCH:SPATtern:SOURce?→:SEARCH:SPATtern:SOURce 1

:SEARCH:SPOint (Start Point)

Function Sets the start position of the search or queries the current setting.

Syntax :SEARCH:SPOint {<NRf>}&
:SEARCH:SPOint?&
<NRf>=-5 to 5 div (10 div/displayed record length steps)

Example :SEARCH:SPOint 3&
:SEARCH:SPOint?→:SEARCH:SPOint 3.0000000

:SEARCH:TWInDow (Target WInDow)

Function Sets the zoom window in which to display the sections that are found or queries the current setting.

Syntax :SEARCH:TWInDow {Z1|Z2}&
:SEARCH:TWInDow?

Example :SEARCH:TWInDow Z1:SEARCH:TWInDow?→:SEARCH:TWInDow Z1

:SEARCH:TYPE

Function Sets the search type or queries the current setting.

Syntax :SEARCH:TYPE {SPATtern|EDGE|WIDTh|PPATtern|ASCROLL|CANBus|SPIBus}&
:SEARCH:TYPE?

Example :SEARCH:TYPE SPATtern&
:SEARCH:TYPE?→:SEARCH:TYPE SPATtern

Description ":SEARCH:TYPE CANBus" cannot be specified unless the CAN Bus signal analysis function (option) is connected.

5.21 SEARCh Group

:SEARCh:WIDTh?

Function Queries all settings related to the
Syntax :SEARCh:WIDTh?
Example :SEARCH:WIDTh?→:SEARCH:WIDTh:TYPE IN;
SOURCE 1;LEVEL 0.0E+00;POLARITY HIGH;
HYSTERESIS 0.30;TIME1 1.000000E-06;
TIME2 1.000000E-06

:SEARCh:WIDTh:HYSTeresis

Function Sets the hysteresis on the pulse width search level or queries the current setting.
Syntax :SEARCh:WIDTh:HYSTeresis {<NRf>}
:SEARCh:WIDTh:HYSTeresis?
<NRf>=0.3 to 4.0div (0.1 steps)
Example :SEARCH:WIDTh:HYSTeresis 0.3
:SEARCH:WIDTh:HYSTeresis?→:SEARCH:WIDTh:HYSTeresis 0.30

:SEARCh:WIDTh:LEVel

Function Sets the pulse width search level or queries the current setting.
Syntax :SEARCh:WIDTh:LEVel {<voltage>|<NRf>}
:SEARCh:WIDTh:LEVel?
<voltage>=8 div on the screen (0.01div steps)
<NRf>=-4 to 4div(0.01div steps)
Example :SEARCH:WIDTh:LEVel 1V
:SEARCH:WIDTh:LEVel?→:SEARCH:WIDTh:LEVel 1.000E+00

:SEARCh:WIDTh:POLarity

Function Sets the pulse width search level's polarity or queries the current setting.
Syntax :SEARCh:WIDTh:POLarity {HIGH|LOW}
:SEARCh:WIDTh:POLarity?
Example :SEARCH:WIDTh:POLarity HIGH
:SEARCH:WIDTh:POLarity?→:SEARCH:WIDTh:POLarity HIGH

:SEARCh:WIDTh:SOURce

Function Sets the search source for the pulse width search or queries the current setting.
Syntax :SEARCh:WIDTh:SOURce {<NRf>|MATH<x>}
:SEARCh:WIDTh:SOURce?
<NRf>=1 to 4
<x>=1 or 2
Example :SEARCH:WIDTh:SOURce 1
:SEARCH:WIDTh:SOURce?→:SEARCH:WIDTh:SOURce 1

:SEARCh:WIDTh:TIME<x>


Function Sets the pulse width when using the pulse width search or queries the current setting.
Syntax :SEARCh:WIDTh:TIME<x> {<time>}
:SEARCh:WIDTh:TIME<x>?
<x>=1 or 2
<time>=10ps to 500s(when <x>=1 and "T1<Pulse<T2" is not true))
10ps to 499.95s(when <x>=1 and "T1<Pulse<T2")
20ps to 500s(when <x>=2 and "T1<Pulse<T2")
Example :SEARCH:WIDTh:TIME1 20ps
:SEARCH:WIDTh:TIME1?→:SEARCH:WIDTh:TIME1 20.0E-12

:SEARCh:WIDTh:TYPE

Function Sets the search type when using the pulse width search or queries the current setting.
Syntax :SEARCh:WIDTh:TYPE {IN|OUT|TIMEout|BETWEEen}
:SEARCh:WIDTh:TYPE?
Example :SEARCH:WIDTh:TYPE IN
:SEARCH:WIDTh:TYPE?→:SEARCH:WIDTh:TYPE IN

5.22 SNAP Group

 The SNAP command is used to execute a snapshot. The same function can be performed using the SNAPSHOT key on the front panel.




:SNAP

Function Executes a snapshot.
 Syntax :SNAP
 Example :SNAP

5.23 SStart Group

 The commands in the SStart group are used to execute the single start operation. It operates in the same fashion as the single trigger.



:SStart?

Function Starts the data acquisition with the trigger mode set to single. If the operation is stopped within the specified time period, 0 is returned. Otherwise, 1 is returned.

Syntax :SStart? {<NRf>}
 <NRf>=1 to 360000 (10 ms resolution: wait period, START and wait)
 0 (START only. No wait.)
 -360000 to -1 (10 ms resolution: wait period, START and wait)

 
Example :SStart? 100→:SStart 0

Description

- If the specified time period is positive, data acquisition is started in the SINGLE TRIGGER mode and waits for the operation to stop.
- If the specified time period is 0, data acquisition is started and 0 is returned without waiting for the operation to stop.
- If the specified time period is negative, the instrument simply waits for the operation to stop. Data acquisition is not started.

5.24 START Group

The START command is used to start acquisition. The same function can be performed by pressing the START/STOP key on the front panel.




:START

Function Starts acquisition.
 Syntax :START
 Example :START
 Description To stop acquisition, use "STOP."

5.25 STATus Group

The commands in the STATus group are used to make settings and queries about the status report. There is no front panel key for this function. For details of the status report, refer to Chapter 6.

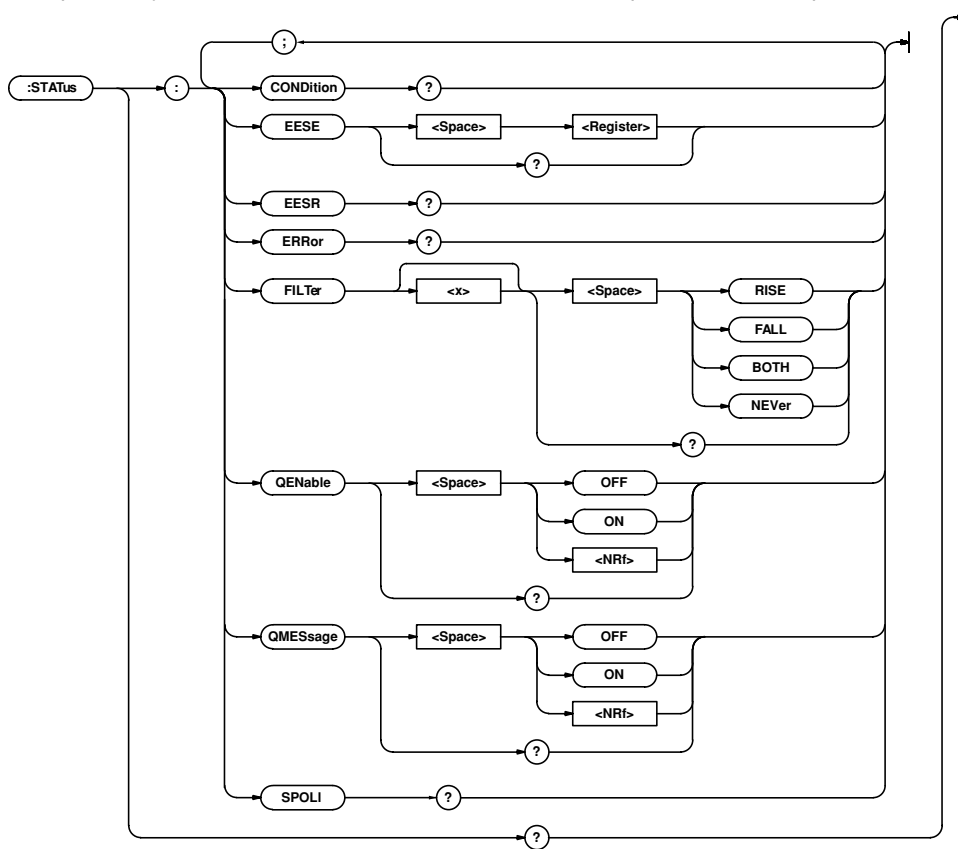

:STATus?

Function Inquires about all the settings relating to the communications status function.

Syntax :STATus?

Example :STATus?→:STATus:EESr 0;FiLTer1 NEVer;
 FiLTer2 NEVer;FiLTer3 NEVer;
 FiLTer4 NEVer;FiLTer5 NEVer;
 FiLTer6 NEVer;FiLTer7 NEVer;
 FiLTer8 NEVer;FiLTer9 NEVer;
 FiLTer10 NEVer;FiLTer11 NEVer;
 FiLTer12 NEVer;FiLTer13 NEVer;
 FiLTer14 NEVer;FiLTer15 NEVer;
 FiLTer16 NEVer;QENABLE 1;QMESsAGE 1

:STATus:CONDition?

Function Queries the contents of the condition register, and clears the register.

Syntax :STATus:CONDition?

Example :STATus:CONDition?→16

Description For a description of the event register, refer to chapter 6.

:STATus:EESr

Function Sets/queries the extended event enable register.

Syntax :STATus:EESr <Register>
 :STATus:EESr?
 <Register>=0 to 65535

Example :STATus:EESr #B00000000
 :STATus:EESr?→:STATus:EESr 0

Description For a description of the event register, refer to chapter 6.

:STATus:EEsr?

Function Queries the content of the extended event register, and clears the register.

Syntax :STATus:EEsr?

Example :STATus:EEsr?→1

Description For a description of the event register, refer to chapter 6.

:STATUS:ERROR?

Function Queries the code and message (at the beginning of the error queue) of the error which has occurred.

Syntax :STATUS:ERROR?

Example :STATUS:ERROR?→"113",Undefined header"

:STATUS:FILTer<x>

Function Sets/queries the transit filter.

Syntax :STATUS:FILTer<x> {RISE|FALL|BOTH|NEVer}
:STATUS:FILTer<x>?
<x>=1 to 16

Example :STATUS:FILTer2 RISE
:STATUS:FILTer2?→:STATUS:FILTer2 RISE

Description For a description of the event register, refer to chapter 6.

:STATUS:QENable

Function Selects/queries whether messages other than errors are stored in the error queue.

Syntax :STATUS:QENable {<Boolean>}
:STATUS:QENable?

Example :STATUS:QENABLE ON
:STATUS:QENABLE?→:STATUS:QENABLE 1

:STATUS:QMESsage

Function Selects/queries whether message content is appended to responses to "STATUS:ERROR?".

Syntax :STATUS:QMESsage {<Boolean>}
:STATUS:QMESsage?

Example :STATUS:QMESsage ON
:STATUS:QMESsage?→:STATUS:QMESsage 1

:STATUS:SPOLI? (Serial Poll)

Function Executes the serial polling.

 
Syntax :STATUS:SPOLI?

Example :STATUS:SPOLI?→:STATUS:SPOLI 0

Description This is an exclusive command for the serial (RS-232) interface.

5.26 STOP Group

The STOP command is used to stop acquisition. The same function can be performed using the START/STOP key on the front panel.

**:STOP**

Function Stops acquisition.


Syntax :STOP

Example :STOP

Description To start acquisition, use "START."

5.27 SYSTem Group

The commands in the SYSTem group are used to make settings and queries about the system. The same settings can be made using the System Config menu obtained when the MISC key on the front panel is pressed.

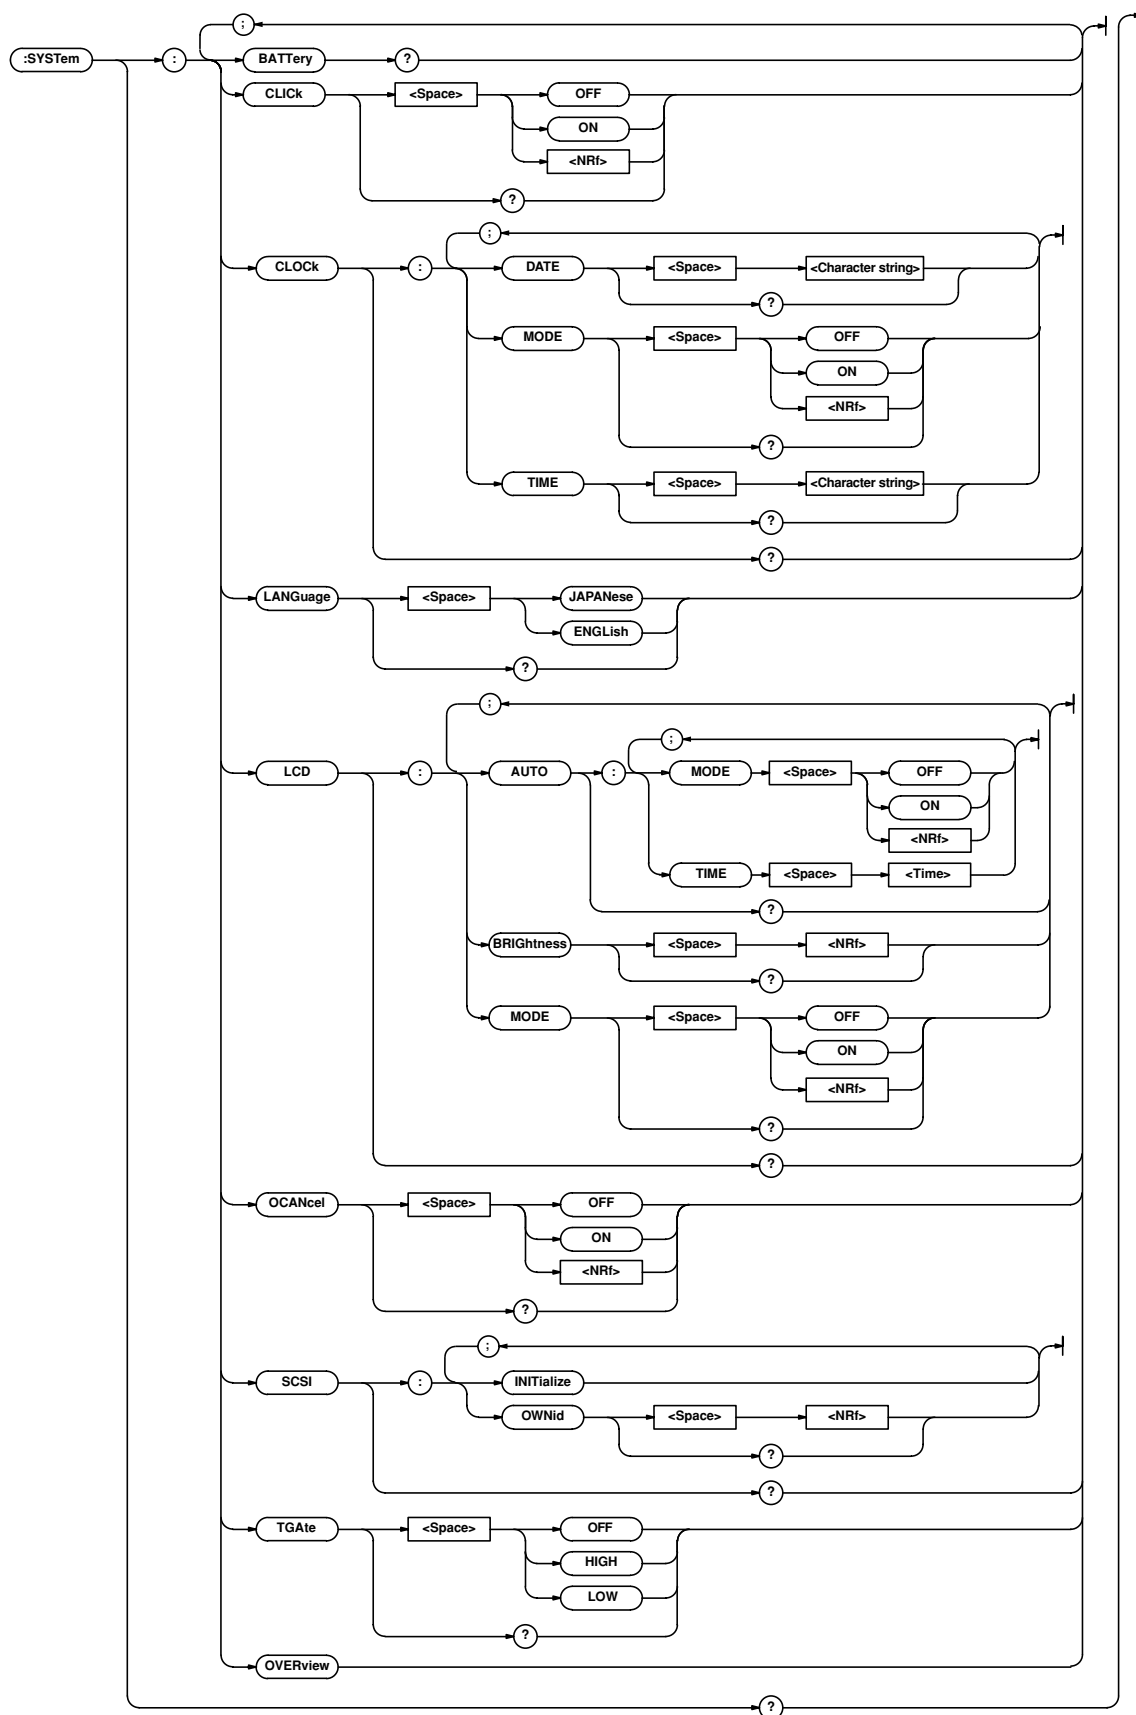

:SYSTem?

Function Queries all system settings.
 Syntax :SYSTem?
 Example :SYSTem?→:SYSTem:SCSI:OWNID 0;:SYSTem:
 CLOCK:MODE 1;DATE "1999/06/19";
 TIME "17:47:17";:SYSTem:
 LANGUAGE JAPANESE;CLICK 1;TGATE OFF;LCD:
 MODE 1;BRIGHTNESS 7;AUTO:MODE 0;TIME 1;:
 SYSTem:OCANCEL 0

:SYSTem:BATTery?

Function Queries the condition of the internal lithium
 battery.
 Syntax :SYSTem:BATTery?
 Example :SYSTem:BATTery?→:SYSTem:BATTERY 1
 Description "1" is returned if the battery is functioning, and
 "0" is returned if the battery has run out.

:SYSTem:CLICK

Function Sets the click sound ON or OFF, or queries the
 current setting.
 Syntax :SYSTem:CLICK {<Boolean>}
 :SYSTem:CLICK?
 Example :SYSTem:CLICK ON
 :SYSTem:CLICK?→:SYSTem:CLICK 1

:SYSTem:CLOCK?

Function Queries all settings related to date and time.
 Syntax :SYSTem:CLOCK?
 Example :SYSTem:CLOCK?→:SYSTem:CLOCK:MODE 1;
 DATE "1999/06/19";TIME "17:47:17"

:SYSTem:CLOCK:DATE

Function Sets/queries the date.
 Syntax :SYSTem:CLOCK:DATE <Character string>
 :SYSTem:CLOCK:DATE?
 <Character string>=YY/MM/DD, refer to
 User's Manual
 IM701410-01E
 Example :SYSTem:CLOCK:DATE "1999/09/30"
 :SYSTem:CLOCK:DATE?→:SYSTem:CLOCK:
 DATE "1999/09/30"

:SYSTem:CLOCK:MODE

Function Turns the date and time display ON/OFF or
 queries the current setting.
 Syntax :SYSTem:CLOCK:MODE {<Boolean>}
 :SYSTem:CLOCK:MODE?
 Example :SYSTem:CLOCK:MODE ON
 :SYSTem:CLOCK:MODE?→:SYSTem:CLOCK:
 MODE 1

:SYSTem:CLOCK:TIME

Function Sets the time or queries the current setting.
 Syntax :SYSTem:CLOCK:TIME <Character string>
 :SYSTem:CLOCK:TIME?
 <Character string>=HH:MM:SS, See the
 IM701410-01E User's
 Manual.
 Example :SYSTem:CLOCK:TIME "14:30:00"
 :SYSTem:CLOCK:TIME?→:SYSTem:CLOCK:
 TIME "14:30:00"

:SYSTem:LANGUage

Function Sets/queries the message language.
 Syntax :SYSTem:LANGUage {ENGLISH|JAPANESE}
 :SYSTem:LANGUage?
 Example :SYSTem:LANGUage JAPANESE
 :SYSTem:LANGUage?→:SYSTem:
 LANGUage JAPANESE

:SYSTem:LCD?

Function Queries all settings related to the LCD monitor.
 Syntax :SYSTem:LCD?
 Example :SYSTem:LCD?→:SYSTem:LCD:MODE 1;
 BRIGHTNESS 1;AUTO:MODE 0;TIME 1

:SYSTem:LCD:AUTO?

Function Queries all settings related to the LCD backlight
 auto-off function.
 Syntax :SYSTem:LCD:AUTO?
 Example :SYSTem:LCD:AUTO?→:SYSTem:LCD:AUTO:
 MODE 0;TIME 1

:SYSTem:LCD:AUTO:MODE

Function Turns the LCD backlight ON/OFF or queries the
 current setting.
 Syntax :SYSTem:LCD:AUTO:MODE {<Boolean>}
 :SYSTem:LCD:AUTO:MODE?
 Example :SYSTem:LCD:AUTO:MODE ON
 :SYSTem:LCD:AUTO:MODE?→:SYSTem:LCD:
 AUTO:MODE 1

:SYSTem:LCD:AUTO:TIME

Function Sets the time for the LCD backlight to
 automatically turn OFF or queries the current
 setting.
 Syntax :SYSTem:LCD:AUTO:TIME {<NRF>}
 :SYSTem:LCD:AUTO:TIME?
 <NRF>=1 to 60 (s)
 Example :SYSTem:LCD:AUTO:TIME 1
 :SYSTem:LCD:AUTO:TIME?→:SYSTem:LCD:
 AUTO:TIME 1

5.27 SYSTem Group

:SYSTem:LCD:BRIGHtness

Function Sets/queries the brightness of the screen.
Syntax :SYSTem:LBRIghtness{<NRf>}
:SYSTem:LBRIghtness?
<NRf>=0 to 7
Example :SYSTEM:LCD:BRIGHtNESS 2
:SYSTEM:LCD:BRIGHtNESS?→:SYSTEM:
LCD:BRIGHtNESS 2

:SYSTem:LCD:MODE

Function Turns the LCD backlight ON/OFF or queries the current setting.
Syntax :SYSTem:LCD:MODE {<Boolean>}
:SYSTem:LCD:MODE?
Example :SYSTEM:LCD:MODE OFF
:SYSTEM:LCD:MODE?→:SYSTEM:LCD:MODE 0

:SYSTem:OCANcel (Offset Cancel)

Function Sets whether or not to reflect the offset voltage to the measured results or the computed results (ON/OFF) or queries the current setting.
Syntax :SYSTem:OCANcel {<Boolean>}
:SYSTem:OCANcel?
Example :SYSTEM:OCANCEL ON
:SYSTEM:OCANCEL?→:SYSTEM:OCANCEL 0

:SYSTem:OVERview

Function Displays the system information.
Syntax :SYSTem:OVERview
Example :SYSTEM:OVERVIEW

:SYSTem:SCSI?

Function Queries all SCSI-ID settings.
Syntax :SYSTem:SCSI?
Example :SYSTEM:SCSI?→:SYSTEM:SCSI:OWNID 0

:SYSTem:SCSI:INITialize

Function Initializes the SCSI.
Syntax :SYSTem:SCSI:INITialize
Example :SYSTEM:SCSI:INITIALIZE
Description This command should always be issued following change of the oscilloscope's SCSI-ID (by the ":SYSTem:SCSI:OWNid" command).

:SYSTem:SCSI:OWNid


Function Sets/queries own SCSI-ID.
Syntax :SYSTem:SCSI:OWNid {<NRf>}
:SYSTem:SCSI:OWNid?
<NRf>=0 to 7
Example :SYSTEM:SCSI:OWNID 7
:SYSTEM:SCSI:OWNID?→:SYSTEM:SCSI:
OWNID 7

:SYSTem:TGATe (Trigger Gate)

Function Sets the external trigger gate or queries the current setting.
Syntax :SYSTem:TGAte {<OFF|HIGH|LOW>}
:SYSTem:TGAte?
Example :SYSTEM:TGATE OFF
:SYSTEM:TGATE?→:SYSTEM:TGATE 0

5.28 TIMEbase Group

The commands in the TIMEbase group are used to make settings and queries about the time base. These settings and inquiries can also be made using the TIME/DIV knob on the front panel.

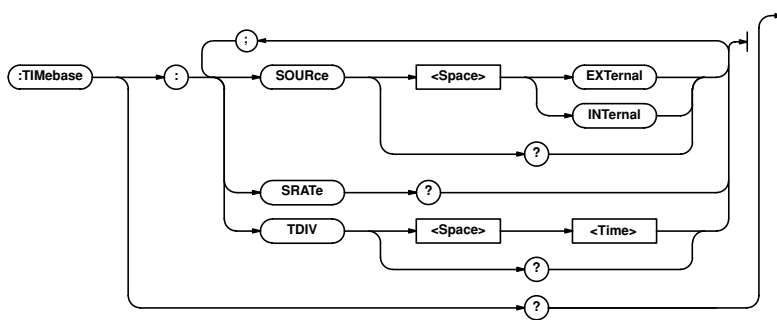

:TIMEbase?

Function Queries all the time base settings.

Syntax :TIMEbase?

Example :TIMEBASE?→:TIMEBASE:SOURCE INTERNAL;
TDIV 500.0E-06

:TIMEbase:SOURCE

Function Sets the time base or queries the current setting.

Syntax :TIMEbase:SOURCE {EXTernal|INTernal}
:TIMEbase:SOURCE?

Example :TIMEBASE:SOURCE INTERNAL
:TIMEBASE:SOURCE?→:TIMEBASE:
SOURCE INTERNAL

:TIMEbase:SRATe? (Sample RATE)

Function Queries the sampling rate.

Syntax :TIMEbase:SRATe?

Example :TIMEBASE:SRATE?→:TIMEBASE:
SRATE 1.0E+09

:TIMEbase:TDIV


Function Sets/queries the T/div setting.


Syntax :TIMEbase:TDIV {<Time>}
:TIMEbase:TDIV?

<Time>=1 ns to 50 s
Example :TIMEBASE:TDIV 1MS
:TIMEBASE:TDIV?→:TIMEBASE:
TDIV 1.000E-03


5.29 TRIGger Group


The commands in the TRIGger group are used to make settings and queries about the trigger. The same settings can be made using the TRIGGER group keys (the SIMPLE and ENHANCED keys, and LEVEL nob, and POSITION/DELAY keys).

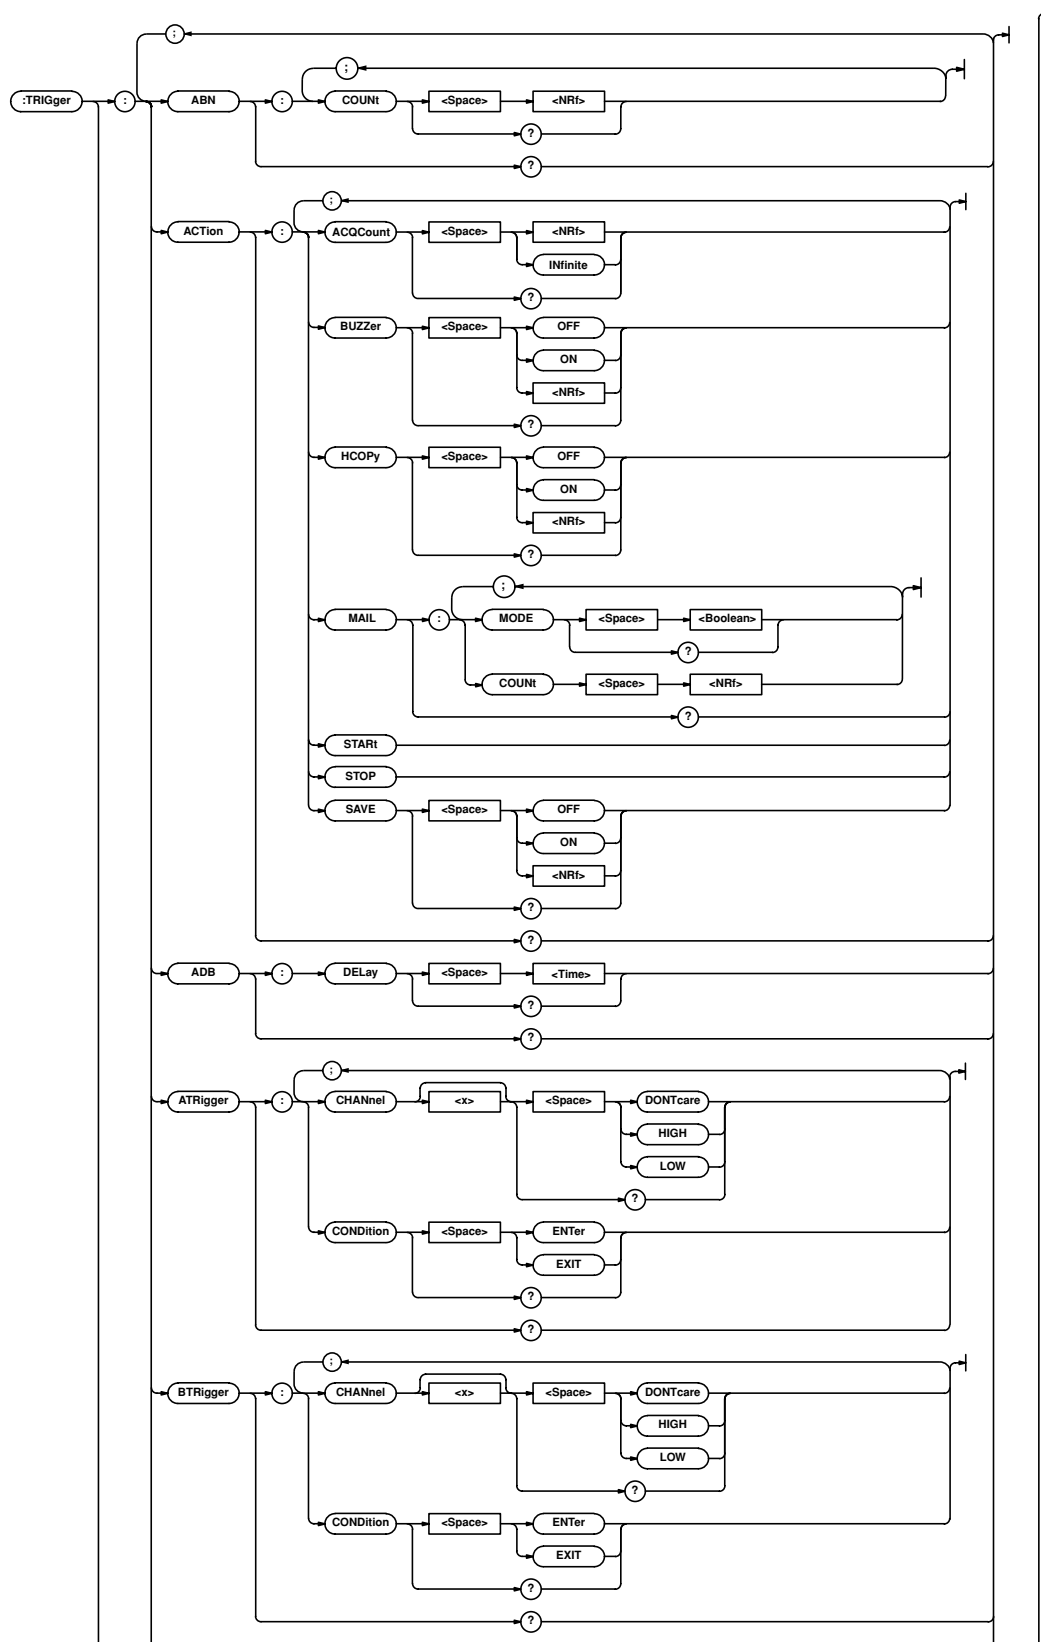

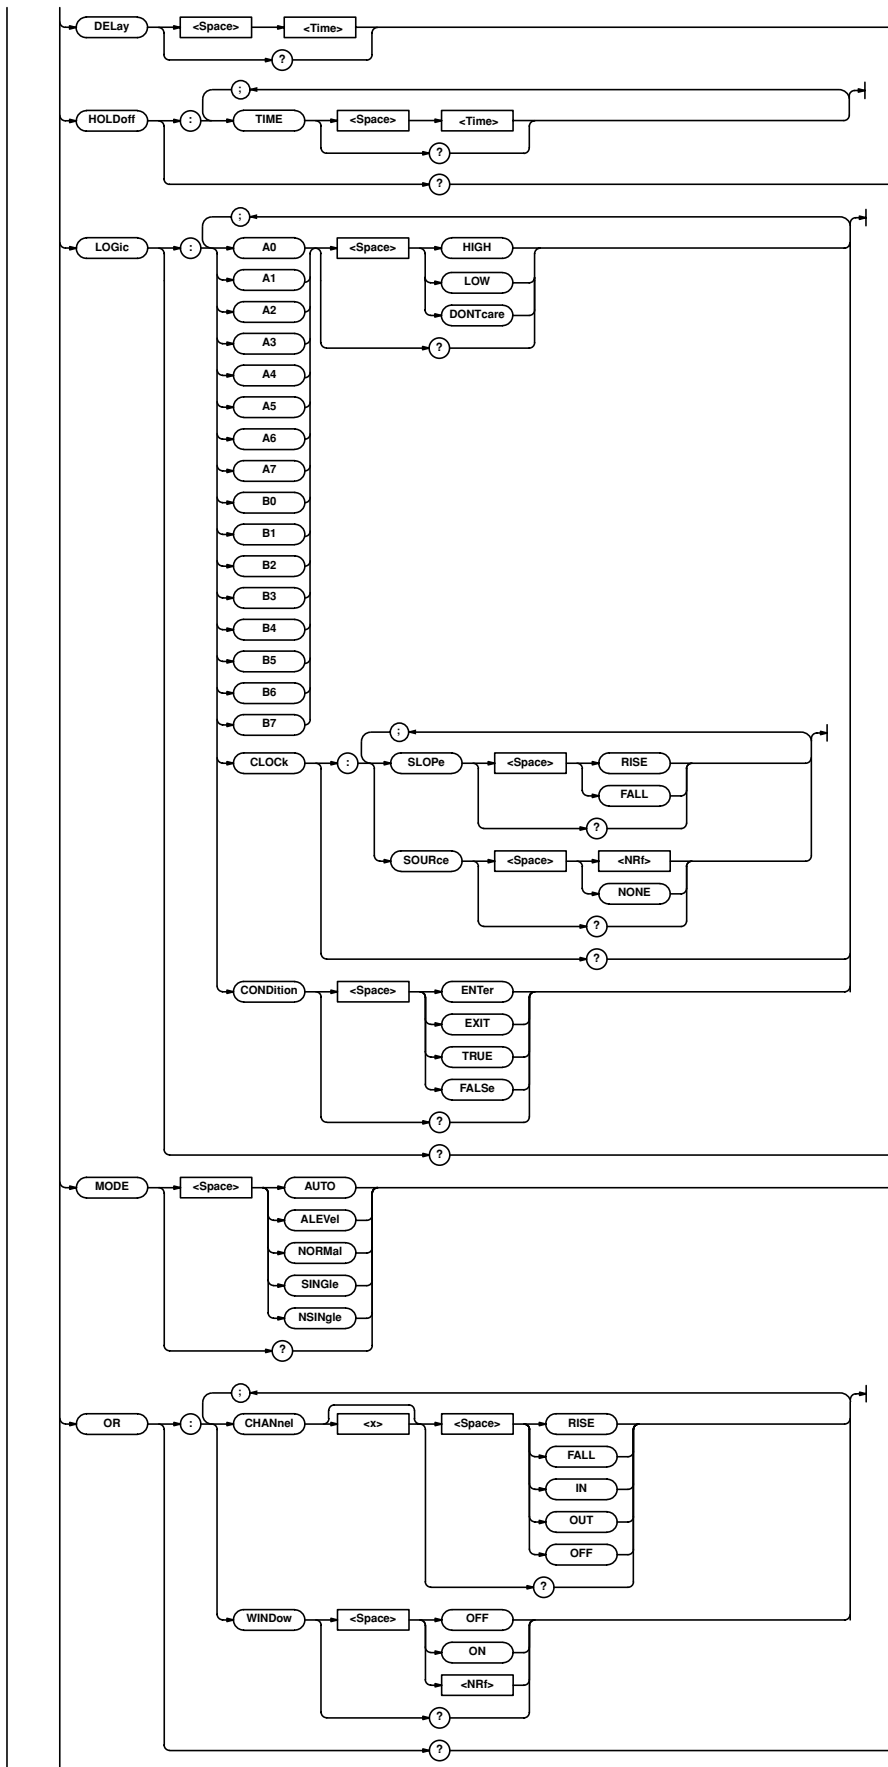


5.29 TRIGger Group

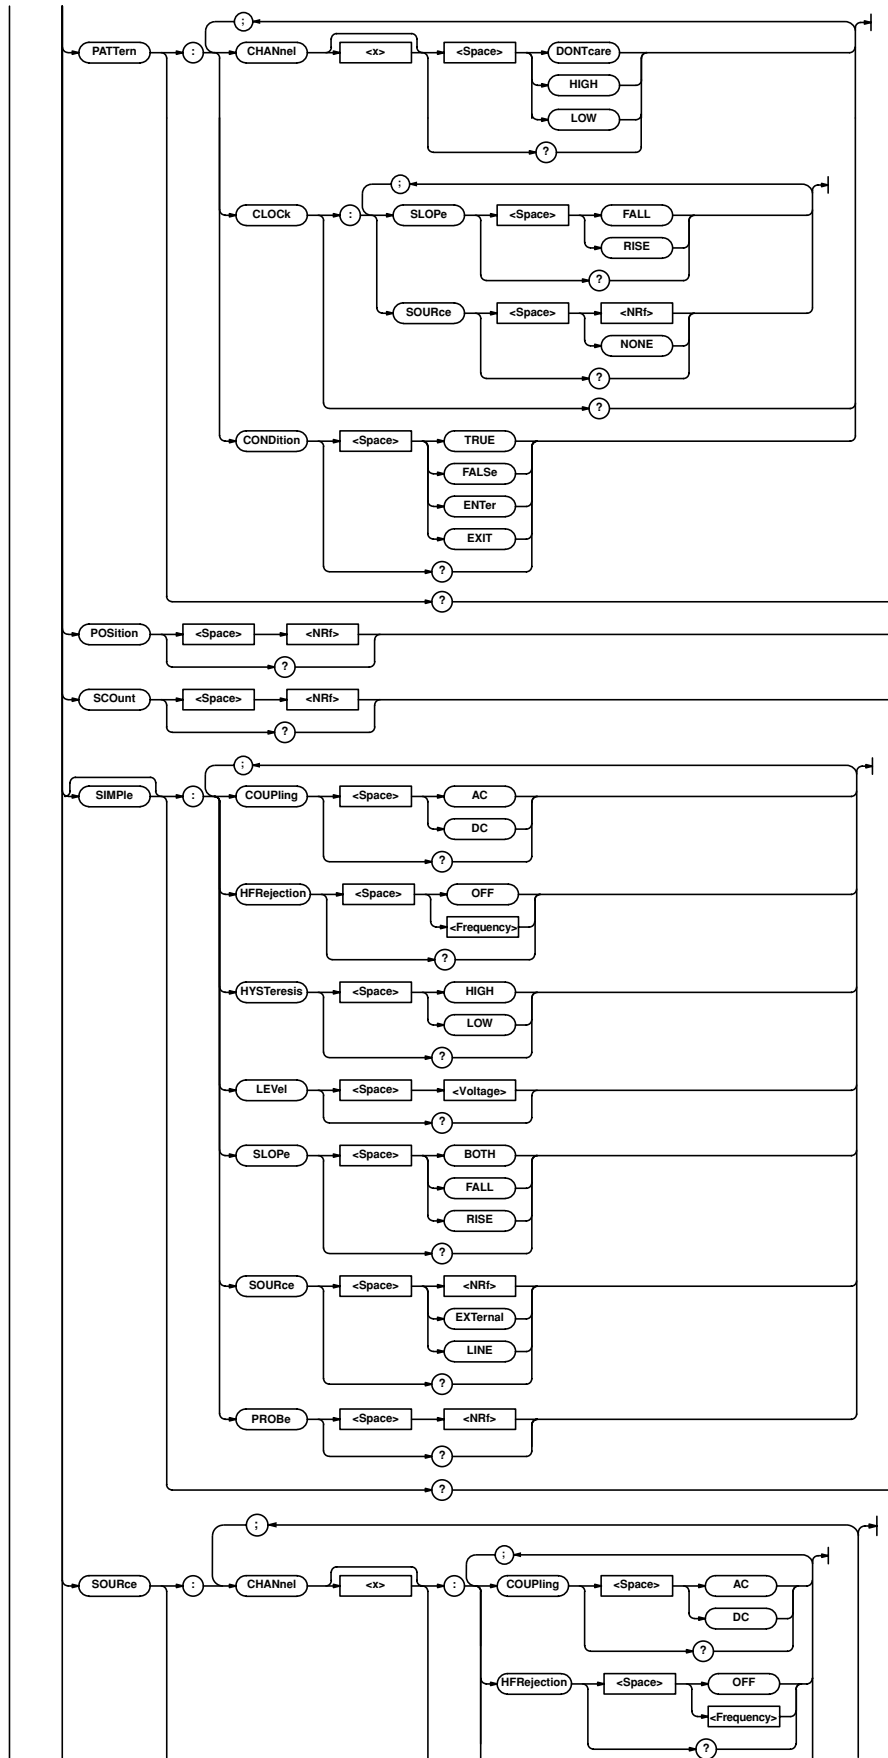

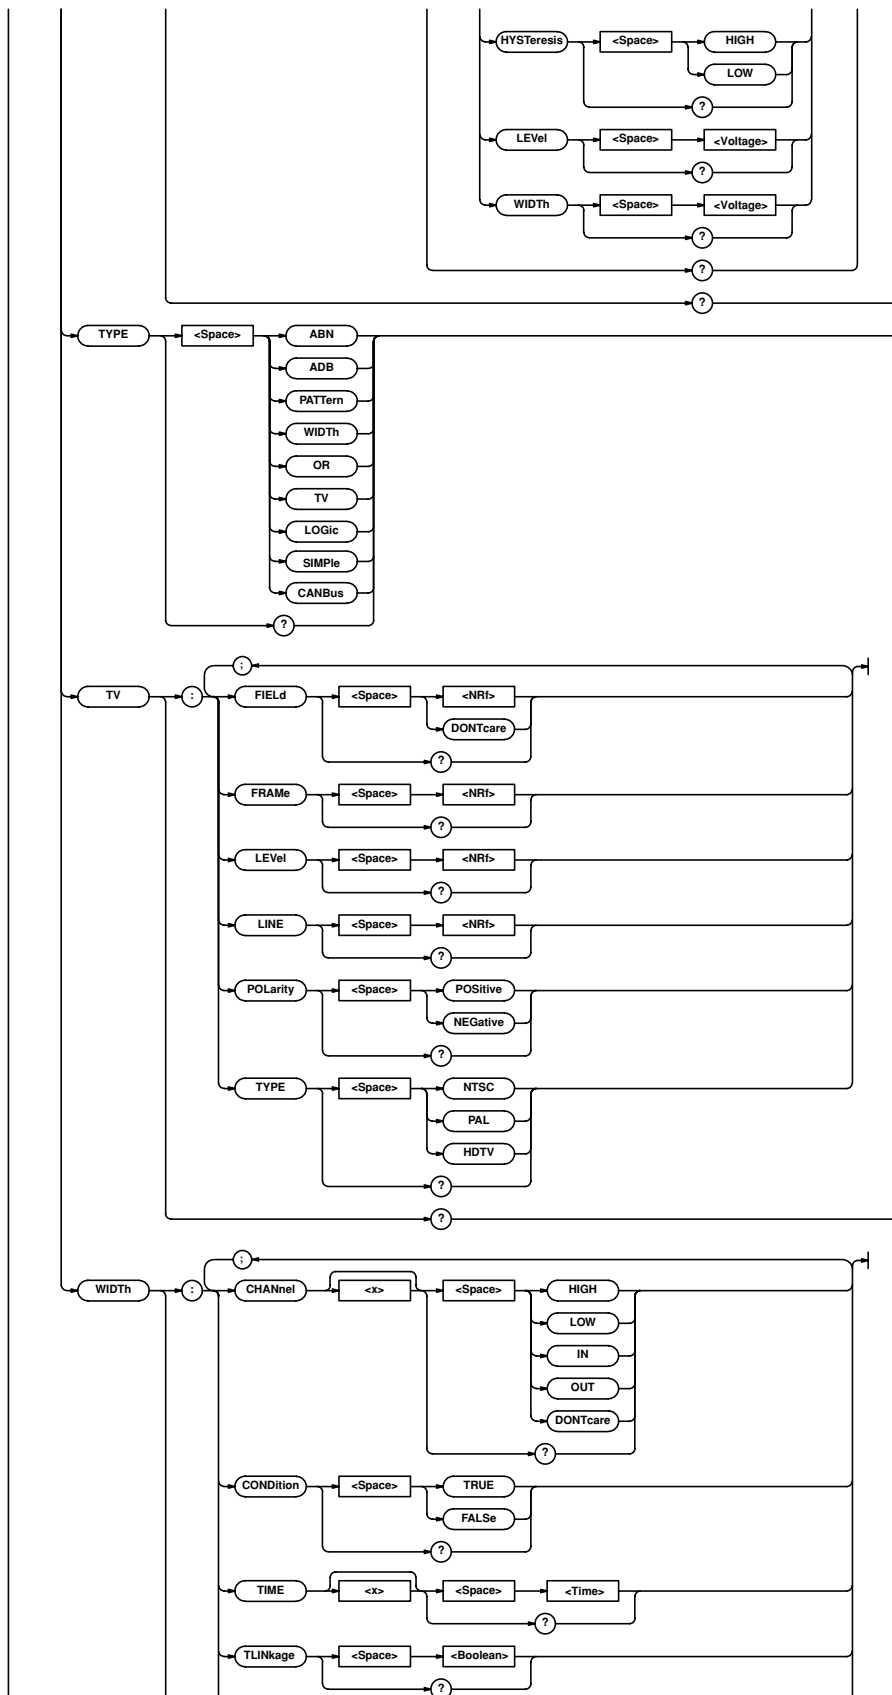

5.29 TRIGger Group

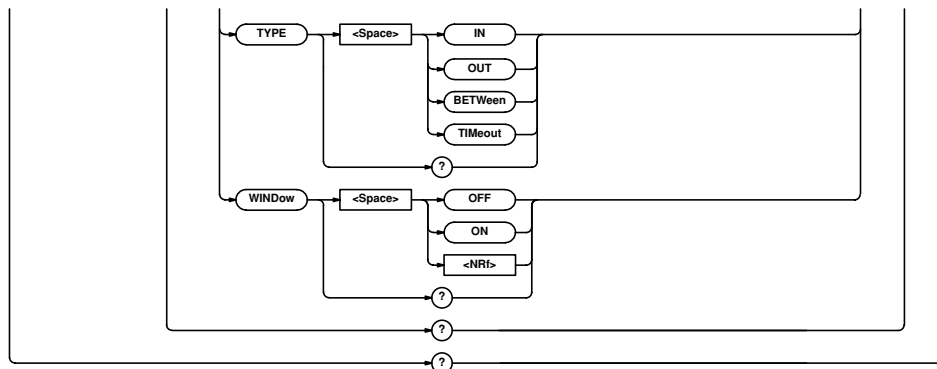

:TRIGger?

Function Queries all trigger settings.

Syntax :TRIGger?

Example :TRIGGER?→:TRIGGER:ACTION:BUZZER 0;
 SAVE 0;HCOPY 0;ACQCOUNT INFINITE;;
 TRIGGER:SIMPLE:SOURCE 1;LEVEL 0.0E+00;
 SLOPE RISE;COUPLING DC;HFREJECTION OFF;
 HYSTERESIS LOW;PROBE 1;;:TRIGGER:SOURCE:
 CHANNEL1:LEVEL 0.0E+00;COUPLING DC;
 HFREJECTION OFF;HYSTERESIS LOW;
 WIDTH 500.000E-03;;:TRIGGER:SOURCE:
 CHANNEL2:LEVEL 0.0E+00;COUPLING DC;
 HFREJECTION OFF;HYSTERESIS LOW;
 WIDTH 50.000E+00;;:TRIGGER:SOURCE:
 CHANNEL3:LEVEL 0.0E+00;COUPLING DC;
 HFREJECTION OFF;HYSTERESIS LOW;
 WIDTH 1.000E+00;;:TRIGGER:SOURCE:
 CHANNEL4:LEVEL 0.0E+00;COUPLING DC;
 HFREJECTION OFF;HYSTERESIS LOW;
 WIDTH 50.000E+00;;:TRIGGER:ABN:COUNT 1;;
 TRIGGER:HOLDOFF:TIME 80.000E-09;;
 TRIGGER:ADB:DELAY 1.000E-09;;:TRIGGER:
 DELAY 0.0E+00;PATTERN:CLOCK:SOURCE 1;
 SLOPE RISE;;:TRIGGER:PATTERN:
 CHANNEL1 HIGH;CHANNEL2 DONTCARE;
 CHANNEL3 DONTCARE;CHANNEL4 DONTCARE;
 CONDITION TRUE;;:TRIGGER:POSITION 50.000;
 MODE AUTO;WIDTH:TYPE IN;CHANNEL1 HIGH;
 CHANNEL2 HIGH;CHANNEL3 HIGH;
 CHANNEL4 HIGH;CONDITION TRUE;TLINKAGE 0
 TIME1 1.000E-09;TIME2 1.000E-09;
 WINDOW 0;;:TRIGGER:OR:WINDOW 0;
 CHANNEL1 RISE;CHANNEL2 OFF;CHANNEL3 OFF;
 CHANNEL4 OFF;;:TRIGGER:SCOUNT 2;TV:
 TYPE NTSC;POLARITY NEGATIVE;
 LEVEL 5000000.0;FIELD 1;LINE 5;FRAME 1;;
 TRIGGER:TYPE SIMPLE;LOGIC:CLOCK:
 SOURCE 1;SLOPE RISE;;:TRIGGER:LOGIC:
 CONDITION TRUE;A0 HIGH;A1 DONTCARE;
 A2 DONTCARE;A3 DONTCARE;A4 DONTCARE;
 A5 DONTCARE;A6 DONTCARE;A7 DONTCARE;
 B0 DONTCARE;B1 DONTCARE;B2 DONTCARE;
 B3 DONTCARE;B4 DONTCARE;B5 DONTCARE;
 B6 DONTCARE;B7 DONTCARE;;:TRIGGER:

```

  ATRIGGER:CHANNEL1 HIGH;
  CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;
  CHANNEL4 DONTCARE;CONDITION ENTER;;
  TRIGGER:BTRIGGER:CHANNEL1 DONTCARE;
  CHANNEL2 HIGH;CHANNEL3 DONTCARE;
  CHANNEL4 DONTCARE;CONDITION ENTER
  
```

:TRIGger:ABN? (A→B (n))

Function Queries all A→B (n) trigger settings.

Syntax :TRIGger:ABN?

Example :TRIGGER:ABN?→:TRIGGER:ABN:COUNT 1

:TRIGger:ABN:COUNT

Function Sets/queries the number of times the pattern for the A→B (n) trigger should become true.

Syntax :TRIGger:ABN:COUNT {<NRF>}
 :TRIGger:ABN:COUNT?
 <NRF>=1 to 100000000

Example :TRIGGER:ABN:COUNT 1
 :TRIGGER:ABN:COUNT?→:TRIGGER:ABN:
 COUNT 1

:TRIGger:ACTion?

Function Queries all settings relating to the action on trigger.

Syntax :TRIGger:ACTion?

Example :TRIGGER:ACTION?→:TRIGGER:ACTION:
 BUZZER 0;SAVE 0;HCOPY 0;
 ACQCOUNT INFINITE

:TRIGger:ACTion:ACQCount

Function Sets the number of times to perform the action for the action-on-trigger or queries the current setting.

Syntax :TRIGger:ACTion:ACQCount {<NRF|
 INFinite>}
 :TRIGger:ACTion:ACQCount?
 <NRF>=1 to 65536

Example :TRIGGER:ACTION:ACQCOUNT 10
 :TRIGGER:ACTION:ACQCOUNT?→:TRIGGER:
 ACTION:ACQCOUNT 10

:TRIGger:ACTion:BUZZer

Function Sets/queries the ON/OFF condition of the buzzer at the time of the trigger action.

Syntax :TRIGger:ACTion:BUZZer {<Boolean>}
:TRIGger:ACTion:BUZZer?

Example :TRIGGER:ACTION:BUZZER ON
:TRIGGER:ACTION:BUZZER?→:TRIGGER:ACTION:BUZZER 1

:TRIGger:ACTion:HCOPY

Function Sets/queries whether the screen image data is output at the time of the trigger action.

Syntax :TRIGger:ACTion:HCOPY {<Boolean>}
:TRIGger:ACTion:HCOPY?

Example :TRIGGER:ACTION:HCOPY ON
:TRIGGER:ACTION:HCOPY?→:TRIGGER:ACTION:HCOPY 1

:TRIGger:ACTion:MAIL?

Function Queries all the setting values for mail reports sent as an ACTION.

Syntax :TRIGger:ACTion:MAIL?

Example :TRIGGER:ACTION:MAIL:MODE?→:TRIGGER:ACTION:MAIL:MODE 0;COUNT 100

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:TRIGger:ACTion:MAIL:COUNT

Function Sets/queries the limit for the number of reports that are sent as an ACTION.

Syntax :TRIGger:ACTion:MAIL:COUNT {<Nrf>}
:TRIGger:ACTion:MAIL:COUNT?
<Nrf>=1 to 1000

Example :TRIGGER:ACTION:MAIL:COUNT 100
:TRIGGER:ACTION:MAIL:COUNT?→:TRIGGER:ACTION:MAIL:COUNT 100

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:TRIGger:ACTion:MAIL:MODE

Function Sets/queries whether mail reports are sent as an ACTION.

Syntax :TRIGger:ACTion:MAIL:MODE {<Boolean>}
Example :TRIGGER:ACTION:MAIL:MODE OFF
:TRIGGER:ACTION:MAIL:MODE?→:TRIGGER:ACTION:MAIL:MODE 0

Description This function is supported by the DL7200 and the DL7100 firmware version 2.01 or later.

:TRIGger:ACTion:SAVE

Function Sets/queries whether the waveform data is saved to the medium at the time of the trigger action.

Syntax :TRIGger:ACTion:SAVE {<Boolean>}
:TRIGger:ACTion:SAVE?

Example :TRIGGER:ACTION:SAVE ON
:TRIGGER:ACTION:SAVE?→:TRIGGER:ACTION:SAVE 1

:TRIGger:ACTion:START

Function Starts action-on-trigger.

Syntax :TRIGger:ACTion:START

Example :TRIGGER:ACTION:START

Description Use TRIGger:ACTion:STOP to abort the trigger action.

:TRIGger:ACTion:STOP

Function Aborts action-on-trigger.

Syntax :TRIGger:ACTion:STOP

Example :TRIGGER:ACTION:STOP

Description This command only aborts the trigger action. It does not cancel the settings. The TRIGger:ACTion:START command can be used to resume the trigger action.

:TRIGger:ADB? (A Delay B)

Function Queries all A Delay B trigger settings.

Syntax :TRIGger:ADB?

Example :TRIGGER:ADB?→:TRIGGER:ADB:DELAY 0.000E+00

:TRIGger:ADB:DELAy

Function Sets/queries the delay time for pattern B for an A Delay B trigger.

Syntax :TRIGger:ADB:DELAy {<Time>}
:TRIGger:ADB:DELAy?
<Time>=3 ns to 5 s

Example :TRIGGER:ADB:DELAY 1NS
:TRIGGER:ADB:DELAY?→:TRIGGER:ADB:DELAY 1.0E-09

:TRIGger:ATRigger?

Function Queries all the pattern A settings.

Syntax :TRIGger:ATRigger?

Example :TRIGGER:ATRIGGER?→:TRIGGER:ATRIGGER:CHANNEL1 HIGH;CHANNEL2 DONTCARE;
CHANNEL3 DONTCARE;CHANNEL4 DONTCARE;
CONDITION ENTER

5.29 TRIGger Group

:TRIGger:ATriGger:CHANnel<x>

Function Sets/queries the channel condition for pattern A.

Syntax :TRIGger:ATriGger:CHANnel<x> {DONTcare|HIGH|LOW}
:TRIGger:ATriGger:CHANnel<x>?
<x>=1 to 4

Example (An example for CH1 is given below.)
:TRIGGER:ATRIGGER:CHANNEL1 HIGH
:TRIGGER:ATRIGGER:CHANNEL1?→:TRIGGER:ATRIGGER:CHANNEL1 HIGH

:TRIGger:ATriGger:CONDition

Function Sets/queries the conditions under which pattern A should become true.

Syntax :TRIGger:ATriGger:CONDition {ENTER|EXIT}
:TRIGger:ATriGger:CONDition?

Example :TRIGGER:ATRIGGER:CONDITION ENTER
:TRIGGER:ATRIGGER:CONDITION?→:TRIGGER:ATRIGGER:CONDITION ENTER

Description This command is valid when the trigger type is "ABN" or "ADB."

:TRIGger:BTriGger?

Function Queries all pattern B settings.

Syntax :TRIGger:BTriGger?

Example :TRIGGER:BTRIGGER?→:TRIGGER:BTRIGGER:CHANNEL1 DONTCARE;CHANNEL2 HIGH;CHANNEL3 DONTCARE;CHANNEL4 DONTCARE;CONDITION ENTER

:TRIGger:BTriGger:CHANnel<x>

Function Sets/queries the channel condition for pattern B.

Syntax :TRIGger:BTriGger:CHANnel<x> {DONTcare|HIGH|LOW}
:TRIGger:BTriGger:CHANnel<x>?
<x>=1 to 4

Example (An example for CH1 is given below.)
:TRIGGER:BTRIGGER:CHANNEL1 HIGH
:TRIGGER:BTRIGGER:CHANNEL1?→:TRIGGER:BTRIGGER:CHANNEL1 HIGH

:TRIGger:BTriGger:CONDition

Function Sets/queries the conditions under which pattern B becomes true.

Syntax :TRIGger:BTriGger:CONDition {ENTER|EXIT}
:TRIGger:BTriGger:CONDition?

Example :TRIGGER:BTRIGGER:CONDITION ENTER
:TRIGGER:BTRIGGER:CONDITION?→:TRIGGER:BTRIGGER:CONDITION ENTER

Description This command is valid when the trigger type is "ABN" or "ADB."

:TRIGger:DElay

Function Sets/queries the trigger delay (time between trigger point and trigger position).

Syntax :TRIGger:DElay {<Time>}
:TRIGger:DElay?
<Time>=0 to 4 s (1/sampling rate steps)

Example :TRIGGER:DELLAY 2US
:TRIGGER:DELAY?→:TRIGGER:DELAY 2.00E-06

Description If timebase is external clock, the value is fixed at 0.
On this oscilloscope, the delay is the time difference between the trigger point and the trigger position. You can set/query the trigger position using the ":TRIGger:POSition" command.

:TRIGger:HOLDoff?

Function Queries all settings related to the hold off.

Syntax :TRIGger:HOLDoff?

Example :TRIGGER:HOLDOFF?→:TRIGGER:HOLDOFF:TIME 80.0E-09

:TRIGger:HOLDoff:TIME

Function Sets the hold off time or queries the current setting.

Syntax :TRIGger:HOLDoff:TIME {<time>}
:TRIGger:HOLDoff:TIME?
<time>=80 ns to 10 s

Example :TRIGGER:HOLDOFF:TIME 80NS
:TRIGGER:HOLDOFF:TIME?→:TRIGGER:HOLDOFF:TIME 80.0E-09

:TRIGger:LOGic?

Function Queries all settings related to logic trigger edge.

Syntax :TRIGger:LOGic?

Example :TRIGGER:LOGIC?→:TRIGGER:LOGIC:CLOCK:SOURCE NONE;:TRIGGER:LOGIC:CONDITION TRUE;:TRIGGER:LOGIC:A0 HIGH;A1 DONTCARE;A2 DONTCARE;A3 DONTCARE;A4 DONTCARE;A5 DONTCARE;A6 DONTCARE;A7 DONTCARE;B0 DONTCARE;B1 DONTCARE;B2 DONTCARE;B3 DONTCARE;B4 DONTCARE;B5 DONTCARE;B6 DONTCARE;B7 DONTCARE

Description Query is not possible if the logic probe is not connected.

:TRIGger:LOGic:{A0|A1|A2|A3|A4|A5|A6|A7|B0|B1|B2|B3|B4|B5|B6|B7}

Function	Sets the condition of each bit or queries the current setting.
Syntax	:TRIGger:LOGic:{A0 A1 A2 A3 A4 A5 A6 A7 B0 B1 B2 B3 B4 B5 B6 B7}{DONTcare HIGH LOW}
Example	:TRIGger:LOGic:{A0 A1 A2 A3 A4 A5 A6 A7 B0 B1 B2 B3 B4 B5 B6 B7}? :TRIGGER:LOGIC:A0 HIGH :TRIGGER:LOGIC:A0?→:TRIGGER:LOGIC:A0 HIGH
Description	Query/Setting is not possible if the logic probe is not connected.

:TRIGger:LOGic:CLOCK?

Function	Queries all settings related to the clock channel when using the logic trigger.
Syntax	:TRIGger:LOGic:CLOCK?
Example	:TRIGGER:LOGIC:CLOCK?→:TRIGGER:LOGIC:CLOCK:SOURCE 1;SLOPE RISE
Description	Query is not possible if the logic probe is not connected.

:TRIGger:LOGic:CLOCK:SLOPe

Function	Sets the slope of the clock channel when using the logic trigger or queries the current setting.
Syntax	:TRIGger:LOGic:CLOCK:SLOPe {RISE FALL}
Example	:TRIGGER:LOGIC:CLOCK:SLOPE RISE :TRIGGER:LOGIC:CLOCK:SLOPE?→:TRIGGER:LOGIC:CLOCK:SLOPE RISE
Description	<ul style="list-style-type: none"> Query/Setting is not possible if the logic probe is not connected. An error results if "TRIGger:CLOCK:SOURCE NONE" is specified.

:TRIGger:LOGic:CLOCK:SOURce

Function	Sets the clock channel when using the logic trigger or queries the current setting.
Syntax	:TRIGger:LOGic:CLOCK:SOURce {<Nrf> NONE}
Example	:TRIGGER:LOGIC:CLOCK:SOURCE 1 :TRIGGER:LOGIC:CLOCK:SOURCE?→:TRIGGER:LOGIC:CLOCK:SOURCE 1
Description	Query/Setting is not possible if the logic probe is not connected.

:TRIGger:LOGic:CONDition

Function	Sets the trigger condition when using the logic trigger or queries the current setting.
Syntax	:TRIGger:LOGic:CONDition {ENTER EXIT FALSE TRUE}
Example	:TRIGger:LOGic:PATtern:CONDition? :TRIGGER:LOGIC:CONDITION ENTER :TRIGGER:LOGIC:CONDITION?→:TRIGGER:LOGIC:CONDITION ENTER
Description	<ul style="list-style-type: none"> Query/Setting is not possible if the logic probe is not connected. Select the condition from {ENTER EXIT} when "TRIGger:LOGic:CLOCK:SOURCE NONE" is specified and from {FALSE TRUE}, otherwise.

:TRIGger:MODE

Function	Sets the trigger mode or queries the current setting.
Syntax	:TRIGger:MODE {AUTO ALEVeL NORMAl SINGLe NSINGLe}
Example	:TRIGger:MODE? :TRIGGER:MODE AUTO :TRIGGER:MODE?→:TRIGGER:MODE AUTO
Description	Use the ":TRIGger:SCount" command to query the count when "NSINGLe" is selected.

:TRIGger:OR?

Function	Queries all settings related to the OR trigger.
Syntax	:TRIGger:OR?
Example	:TRIGGER:OR?→:TRIGGER:OR:WINDOW 0; CHANNEL1 OFF;CHANNEL2 OFF;CHANNEL3 OFF; CHANNEL4 OFF

:TRIGger:OR:CHANnel<x>

Function	Sets the edge of the OR trigger of each channel or queries the current setting.
Syntax	:TRIGger:OR:CHANnel<x> {OFF RISE FALL IN OUT}
Example	:TRIGger:OR:CHANnel<x>? <x>=1 to 4 (The following example is for CH1.) :TRIGGER:OR:CHANNEL1 RISE :TRIGGER:OR:CHANNEL1?→:TRIGGER:OR:CHANNEL1 RISE
Description	Select from {IN OUT} when "TRIGger:OR:WINDOW ON" is specified and from {FALL RISE}, otherwise.

5.29 TRIGger Group

:TRIGger:OR:WINDow

Function Turns the OR trigger window ON/OFF or queries the current setting.

Syntax :TRIGger:OR:WINDow {<Boolean>}
:TRIGger:OR:WINDow?

Example :TRIGGER:OR:WINDOW ON
:TRIGGER:OR:WINDOW?→:TRIGGER:OR:
WINDOW 1

:TRIGger:PATtern?

Function Queries all settings related to the pattern trigger.

Syntax :TRIGger:PATtern?

Example :TRIGGER:PATTERN?→:TRIGGER:PATTERN:
CLOCK:SOURCE NONE;:TRIGGER:PATTERN:
CHANNEL1 HIGH;CHANNEL2 DONTCARE;
CHANNEL3 DONTCARE;CHANNEL4 DONTCARE;
CONDITION ENTER

:TRIGger:PATtern:CHANnel<x>

Function Sets the state of each channel when using the pattern trigger or queries the current setting.

Syntax :TRIGger:PATtern:CHANnel<x> {DONTcare|
HIGH|LOW}
:TRIGger:PATtern:CHANnel<x>?
<x>=1 to 4

Example :TRIGGER:PATTERN:CHANNEL1 DONTCARE
:TRIGGER:PATTERN:CHANNEL1?→:TRIGGER:
PATTERN:CHANNEL1 DONTCARE

:TRIGger:PATtern:CLOCK?

Function Queries all settings related to the clock channel when using the pattern trigger.

Syntax :TRIGger:PATtern:CLOCK?

Example :TRIGGER:PATTERN:CLOCK?→:TRIGGER:
PATTERN:CLOCK:SOURCE 1;SLOPE RISE

:TRIGger:PATtern:CLOCK:SLOPe

Function Sets the slope of the clock channel when using the pattern trigger or queries the current setting.

Syntax :TRIGger:PATtern:CLOCK:SLOPe{FALL|RISE}
:TRIGger:PATtern:CLOCK:SLOPe?

Example :TRIGGER:PATTERN:CLOCK:SLOPE RISE
:TRIGGER:PATTERN:CLOCK:SLOPE?→:TRIGGER:
SIMPLE:PATTERN:CLOCK:SLOPE RISE

Description An error results if
"TRIGger:PATtern:CLOCK:SOURCE NONE" is
specified.

:TRIGger:PATtern:CLOCK:SOURce

Function Sets the clock channel when using the pattern trigger or queries the current setting.

Syntax :TRIGger:PATtern:CLOCK:SOURce {<Nrf>|
NONE}

:TRIGger:PATtern:CLOCK:SOURce?
<Nrf>=1 to 4

Example :TRIGGER:PATTERN:CLOCK:SOURCE 1
:TRIGGER:PATTERN:CLOCK:SOURCE?→
:TRIGGER:PATTERN:CLOCK:SOURCE 1

:TRIGger:PATtern:CONDition

Function Sets the trigger condition when using the pattern trigger or queries the current setting.

Syntax :TRIGger:PATtern:CONDition {ENTER|EXIT|
FALSE|TRUE}

:TRIGger:PATtern:CONDition?

Example :TRIGGER:PATTERN:CONDITION ENTER
:TRIGGER:PATTERN:CONDITION?→:TRIGGER:
PATTERN:CONDITION ENTER

Description Select the condition from {ENTER|EXIT} when
"TRIGger:PATtern:CLOCK:SOURCE NONE" is
specified and from {FALSE|TRUE}, otherwise.

:TRIGger:POSition

Function Sets the trigger position or queries the current setting.

Syntax :TRIGger:POSition {<Nrf>}
:TRIGger:POSition?

<Nrf>=0 to 100 (% , 0.1 steps)

Example :TRIGGER:POSITION 50
:TRIGGER:POSITION?→:TRIGGER:
POSITION 50.000

:TRIGger:SCOUNT (Single (N) Count)

Function Sets the number of times the trigger is activated when the trigger mode is set to Single (N) or queries the current setting.

Syntax :TRIGger:SCOUNT {<Nrf>}
:TRIGger:SCOUNT?

<Nrf>=1 to 2048 (DL7100)
1 to 4096 (DL7200)

Example :TRIGGER:SCOUNT 100
:TRIGGER:SCOUNT?→:TRIGGER:SCOUNT 100

:TRIGger[:SIMple]?

Function Queries all settings related to the simple trigger.

Syntax :TRIGger:SIMple?

Example :TRIGGER:SIMPLE?→:TRIGGER:SIMPLE:
SOURCE 1;LEVEL 0.0E+00;SLOPE RISE;
COUPLING DC;HFREJECTION OFF;
HYSTERESIS LOW

:TRIGger[:SIMPlE]:COUPLing

Function Sets the trigger coupling for the simple trigger or queries the current setting.

Syntax :TRIGger[:SIMPlE]:COUPLing {AC|DC}
:TRIGger[:SIMPlE]:COUPLing?

Example :TRIGGER:SIMPLE:COUPLING DC
:TRIGGER:SIMPLE:COUPLING?→:TRIGGER:
SIMPLE:COUPLING DC

Description Setting/Querying is not possible when the trigger source is set to "EXTErnal" or "LINE."

**:TRIGger[:SIMPlE]:HFRejection
(HighFrequencyREJECTION)**

Function Turns the low-pass filter (HF rejection) for the trigger signal ON/OFF or queries the current setting.

Syntax :TRIGger[:SIMPlE]:HFRejection {OFF|
<frequency>}
:TRIGger[:SIMPlE]:HFRejection?
{<frequency>}=20MHz,15KHz

Example :TRIGGER:SIMPLE:HFREJECTION 20MHZ
:TRIGGER:SIMPLE:HFREJECTION?→:TRIGGER:
SIMPLE:HFREJECTION 20.0E+06

Description Setting/Querying is not possible when the trigger source is set to "EXTErnal" or "LINE."

:TRIGger[:SIMPlE]:HYSTeresis

Function Sets the hysteresis on the search level of the simple trigger or queries the current setting.

Syntax :TRIGger[:SIMPlE]:HYSTeresis {HIGH|LOW}
:TRIGger[:SIMPlE]:HYSTeresis?

Example :TRIGGER:SIMPLE:HYSTERESIS HIGH
:TRIGGER:SIMPLE:HYSTERESIS?→:TRIGGER:
SIMPLE:HYSTERESIS HIGH

Description Setting/Querying is not possible when the trigger source is set to "EXTErnal" or "LINE."

:TRIGger[:SIMPlE]:LEVel

Function Sets the trigger level of the channel specified with the "TRIGger[:SIMPlE]:SOURce" command or queries the current setting.

Syntax :TRIGger[:SIMPlE]:LEVel {<voltage>}
:TRIGger[:SIMPlE]:LEVel?
<voltage>= See the IM701410-01E User's
Manual.

Example :TRIGGER:SIMPLE:LEVEL 0V
:TRIGGER:SIMPLE:LEVEL?→:TRIGGER:SIMPLE:
LEVEL 0.000E+00

Description Setting/Querying is not possible when the trigger source is set to "LINE."

:TRIGger[:SIMPlE]:PROBE

Function Sets the probe when the trigger source is set to "EXTErnal" or queries the current setting.

Syntax :TRIGger[:SIMPlE]:PROBE {<NRf>}
:TRIGger[:SIMPlE]:PROBE?
<NRf>=1,10

Example :TRIGGER:SIMPLE:PROBE 1
:TRIGGER:SIMPLE:PROBE→:TRIGGER:SIMPLE:
PROBE 1

Description Setting/Querying is not possible unless the trigger source is set to "EXTErnal."

:TRIGger[:SIMPlE]:SLOPe

Function Sets the trigger slope of the channel specified with the "TRIGger[:SIMPlE]:SOURce" command or queries the current setting.

Syntax :TRIGger[:SIMPlE]:SLOPe {BOTH|FALL|RISE}
:TRIGger[:SIMPlE]:SLOPe?

Example :TRIGGER:SIMPLE:SLOPE RISE
:TRIGGER:SIMPLE:SLOPE?→:TRIGGER:SIMPLE:
SLOPE RISE

Description Setting/Querying is not possible when the trigger source is set to "LINE."

:TRIGger[:SIMPlE]:SOURce

Function Sets the trigger source for the simple trigger or queries the current setting.

Syntax :TRIGger[:SIMPlE]:SOURce {<NRf>|
EXTErnal|LINE}
:TRIGger[:SIMPlE]:SOURce?
<NRf>=1 to 4

Example :TRIGGER:SIMPLE:SOURCE 1
:TRIGGER:SIMPLE:SOURCE?→:TRIGGER:
SIMPLE:SOURCE 1

Description Within the :TRIGger:SIMPlE series of commands, "SIMPlE" may be omitted except in the case of the :TRIGger:SIMPlE:SOURce command.

5.29 TRIGger Group

:TRIGger:SOURce?

Function Enhanced Queries all settings related to the trigger source for the enhanced trigger.

Syntax :TRIGger:SOURce?

Example :TRIGGER:SOURCE?→:TRIGGER:SOURCE:
CHANNEL1:LEVEL 0.0E+00;COUPLING DC;
HFREJECTION OFF;HYSTERESIS HIGH;
CENTER 0.0E+00;WIDTH 2.000E+00;:TRIGGER:
SOURCE:CHANNEL2:LEVEL 0.0E+00;
COUPLING DC;HFREJECTION OFF;
HYSTERESIS HIGH;CENTER 0.0E+00;
WIDTH 20.000E+00;:TRIGGER:SOURCE:
CHANNEL3:LEVEL 0.0E+00;COUPLING DC;
HFREJECTION OFF;HYSTERESIS HIGH;
CENTER 0.0E+00;WIDTH 2.000E+00;:TRIGGER:
SOURCE:CHANNEL4:LEVEL 0.0E+00;
COUPLING DC;HFREJECTION OFF;
HYSTERESIS HIGH;CENTER 0.0E+00;
WIDTH 50.000E+00

:TRIGger:SOURce:CHANnel<x>?

Function Queries all settings related to the trigger source of the enhanced trigger of the specified channel.

Syntax :TRIGger:SOURce:CHANnel<x>?
<x>=1 to 4

Example :TRIGGER:SOURCE:CHANNEL1?→:TRIGGER:
SOURCE:CHANNEL1:LEVEL 0.0E+00;
COUPLING DC;HFREJECTION OFF;
HYSTERESIS LOW;CENTER 0.0E+00;
WIDTH 2.000E+00

:TRIGger:SOURce:CHANnel<x>:COUPLing

Function Sets the trigger coupling of each channel when using the enhanced trigger or queries the current setting.

Syntax :TRIGger:SOURce:CHANnel<x>:COUPLing {AC|DC}
:TRIGger:SOURce:CHANnel<x>:COUPLing?
<x>=1 to 4

Example :TRIGGER:SOURCE:CHANNEL1:COUPLING DC
:TRIGGER:SOURCE:CHANNEL1:COUPLING?→
:TRIGGER:SOURCE:CHANNEL1:COUPLING DC

:TRIGger:SOURce:CHANnel<x>:HFRejection (HighFrequencyREJECTION)

Function Sets the low-pass filter when using the enhanced trigger or queries the current setting.

Syntax :TRIGger:SOURce:CHANnel<x>:HFRejection
{OFF|<frequency>}
:TRIGger:SOURce:CHANnel<x>:HFRejection?
<x>=1 to 4
<frequency>=20 MHz, 15 KHz

Example :TRIGGER:SOURCE:CHANNEL1:
HFREJECTION 15KHZ
:TRIGGER:SOURCE:CHANNEL1:HFREJECTION?→
:TRIGGER:SOURCE:CHANNEL1:
HFREJECTION 15.0E+03

:TRIGger:SOURce:CHANnel<x>:HYSTeresis

Function Sets the hysteresis on the search level when using the enhanced trigger or queries the current setting.

Syntax :TRIGger:SOURce:CHANnel<x>:HYSTeresis
{HIGH|LOW}
:TRIGger:SOURce:CHANnel<x>:HYSTeresis?
<x>=1 to 4

Example :TRIGGER:SOURCE:CHANNEL1:HYSTERESIS HIGH
:TRIGGER:SOURCE:CHANNEL1:HYSTERESIS?→
:TRIGGER:SOURCE:CHANNEL1:HYSTERESIS HIGH

:TRIGger:SOURce:CHANnel<x>:LEVel

Function Sets the trigger level of each channel when using the enhanced trigger or queries the current setting.

Syntax :TRIGger:SOURce:CHANnel<x>:LEVel
{<voltage>}
:TRIGger:SOURce:CHANnel<x>:LEVel?
<x>=1 to 4
<voltage>= See the IM701410-01E User's Manual.

Example :TRIGGER:SOURCE:CHANNEL1:LEVEL 0V
:TRIGGER:SOURCE:CHANNEL1:LEVEL?→
:TRIGGER:SOURCE:CHANNEL1:LEVEL 0.000E+00

:TRIGger:SOURce:CHANnel<x>:WIDTh

Function Sets the width of the window trigger or queries the current setting.

Syntax :TRIGger:SOURce:CHANnel<x>:WIDTh
{<voltage>}
:TRIGger:SOURce:CHANnel<x>:WIDTh?
<x>=1 to 4
<voltage>= one to eight times V/div (1/100 of V/div steps)

Example :TRIGGER:SOURCE:CHANNEL1:WIDTH 5V
:TRIGGER:SOURCE:CHANNEL1:WIDTH?→
:TRIGGER:SOURCE:CHANNEL1:WIDTH 5.0E+00

:TRIGger:TV?

Function Queries all settings related to the TV trigger.
 Syntax :TRIGger:TV?
 Example :TRIGGER:TV?→:TRIGGER:TV:TYPE NTSC;
 POLARITY NEGATIVE;LEVEL 0.5;FIELD 1;
 LINE 5;FRAME 1
 Description The trigger source for the TV trigger is fixed to CH1.

:TRIGger:TV:FIELD

Function Sets the field on which to activate the TV trigger or queries the current setting.
 Syntax :TRIGger:TV:FIELD {DONTcare|<NRf>}
 :TRIGger:TV:FIELD?
 <NRf>=1 or 2
 Example :TRIGGER:TV:FIELD DONTCARE
 :TRIGGER:TV:FIELD?→:TRIGGER:TV:
 FIELD DONTCARE

:TRIGger:TV:FRAME

Function Sets the frame skip function of the TV trigger or queries the current setting.
 Syntax :TRIGger:TV:FRAME {<NRf>}
 :TRIGger:TV:FRAME?
 <NRf>=1, 2, 4, or 8
 Example :TRIGGER:TV:FRAME 2
 :TRIGGER:TV:FRAME?→:TRIGGER:TV:FRAME 2

:TRIGger:TV:LEVEL

Function Sets the trigger level of the TV trigger or queries the current setting.
 Syntax :TRIGger:TV:LEVEL {<NRf>}
 :TRIGger:TV:LEVEL?
 <NRf>=0.1 to 2 div (0.1 div steps)
 Example :TRIGGER:TV:LEVEL 0.1
 :TRIGGER:TV:LEVEL?→:TRIGGER:TV:
 LEVEL 0.1

:TRIGger:TV:LINE

Function Sets the line on which to activate the TV trigger or queries the current setting.
 Syntax :TRIGger:TV:LINE {<NRf>}
 :TRIGger:TV:LINE?
 <NRf>=5 to 1054 (for NTSC)
 2 to 1251 (for PAL)
 2 to 2251 (for HDTV)
 Example :TRIGGER:TV:LINE 5
 :TRIGGER:TV:LINE?→:TRIGGER:TV:LINE 5

:TRIGger:TV:POLarity

Function Sets the TV trigger's input polarity or queries the current setting.
 Syntax :TRIGger:TV:POLarity {POSitive|NEGative}
 :TRIGger:TV:POLarity?
 Example :TRIGGER:TV:POLARITY POSITIVE
 :TRIGGER:TV:POLARITY?→:TRIGGER:TV:
 POLARITY POSITIVE

:TRIGger:TV:TYPE

Function Sets the TV trigger's input type or queries the current setting.
 Syntax :TRIGger:TV:TYPE {HDTV|NTSC|PAL}
 :TRIGger:TV:TYPE?
 Example :TRIGGER:TV:TYPE NTSC
 :TRIGGER:TV:TYPE?→:TRIGGER:TV:TYPE NTSC
 Description The trigger source for the TV trigger is fixed to CH1.

:TRIGger:TYPE

Function Sets the trigger type or queries the current setting.
 Syntax :TRIGger:TYPE {ABN|ADB|PATTERN|WIDTH|OR|
 TV|LOGic|SIMPLe|CANBus}
 :TRIGger:TYPE?
 Example :TRIGGER:TYPE
 SIMPLE:TRIGGER:TYPE?→:TRIGGER:
 TYPE SIMPLE
 Description ":TRIGger:TYPE LOGic" cannot be specified unless the logic probe (option) is connected.
 ":TRIGger:TYPE CANBus" cannot be specified unless the CAN Bus signal analysis function (option) is connected.

:TRIGger:WIDTH?

Function Queries all settings related to the pulse width trigger.
 Syntax :TRIGger:WIDTH?
 Example :TRIGGER:WIDTH?→:TRIGGER:WIDTH:TYPE IN;
 CHANNEL1 HIGH;CHANNEL2 HIGH;
 CHANNEL3 HIGH;CHANNEL4 HIGH;
 CONDITION TRUE;TLINKAGE 0;TIME1 1.0E-09;
 TIME2 2.0E-09;WINDOW 0

5.29 TRIGger Group

:TRIGger:WIDTh:CHANnel<x>

Function Sets the trigger condition of each channel when using the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:CHANnel<x> {HIGH|LOW|IN|OUT|DONTcare}
:TRIGger:WIDTh:CHANnel<x>?
<x>=1 to 4

Example :TRIGGER:WIDTH:CHANNEL1 IN
:TRIGGER:WIDTH:CHANNEL1?→:TRIGGER:
WIDTH:CHANNEL1 IN

Description Select from {IN|OUT} when "TRIGger:OR:WINDow ON" is specified and from {FALL|RISE}, other wise.

:TRIGger:WIDTh:CONDition

Function Sets the trigger condition when using the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:CONDition{TRUE|FALSE}
:TRIGger:WIDTh:CONDition?

Example :TRIGGER:WIDTH:CONDITION TRUE
:TRIGGER:WIDTH:CONDITION?→:TRIGGER:
WIDTH:CONDITION TRUE

:TRIGger:WIDTh:TIME<x>

Function Sets the pulse width when using the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:TIME<x> <time>
:TRIGger:WIDTh:TIME<x>?
<x>=1 or 2
<time>=1 ns to 1 s (when <x>=1 and
"T1<Pulse<T2" is not true)
1 ns to 0.999999999 s (when <x>=1
and "T1<Pulse<T2")
2 ns to 1 s (when <x>=2 and
"T1<Pulse<T2")

Example :TRIGGER:WIDTH:TIME1 10NS
:TRIGGER:WIDTH:TIME1?→:TRIGGER:WIDTH:
TIME1 10.0E-09

:TRIGger:WIDTh:TLINKage

Function Turns the link ON/OFF when changing the pulse width for the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:TLINKage {<Boolean>}
:TRIGger:WIDTh:TLINKage?

Example :TRIGGER:WIDTH:TLINKAGE ON
:TRIGGER:WIDTH:TLINKAGE?→:TRIGGER:
WIDTH:TLINKAGE 1

:TRIGger:WIDTh:TYPE

Function Sets the trigger type when using the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:TYPE {IN|OUT|BETWEEN|
TIMEout}
:TRIGger:WIDTh:TYPE?

Example :TRIGGER:WIDTH:TYPE BETWEEN
:TRIGGER:WIDTH:TYPE?→:TRIGGER:WIDTH:
TYPE BETWEEN

:TRIGger:WIDTh:WINDow


Function Turns the window ON/OFF when using the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:WINDow {<Boolean>}
:TRIGger:WIDTh:WINDow?

Example :TRIGGER:WIDTH:WINDOW ON
:TRIGGER:WIDTH:WINDOW?→:TRIGGER:WIDTH:
WINDOW 1

5.30 WAVEform Group

The commands in the WAVEform group are used to make settings and queries about acquired waveform data. There is no front panel key for this function.

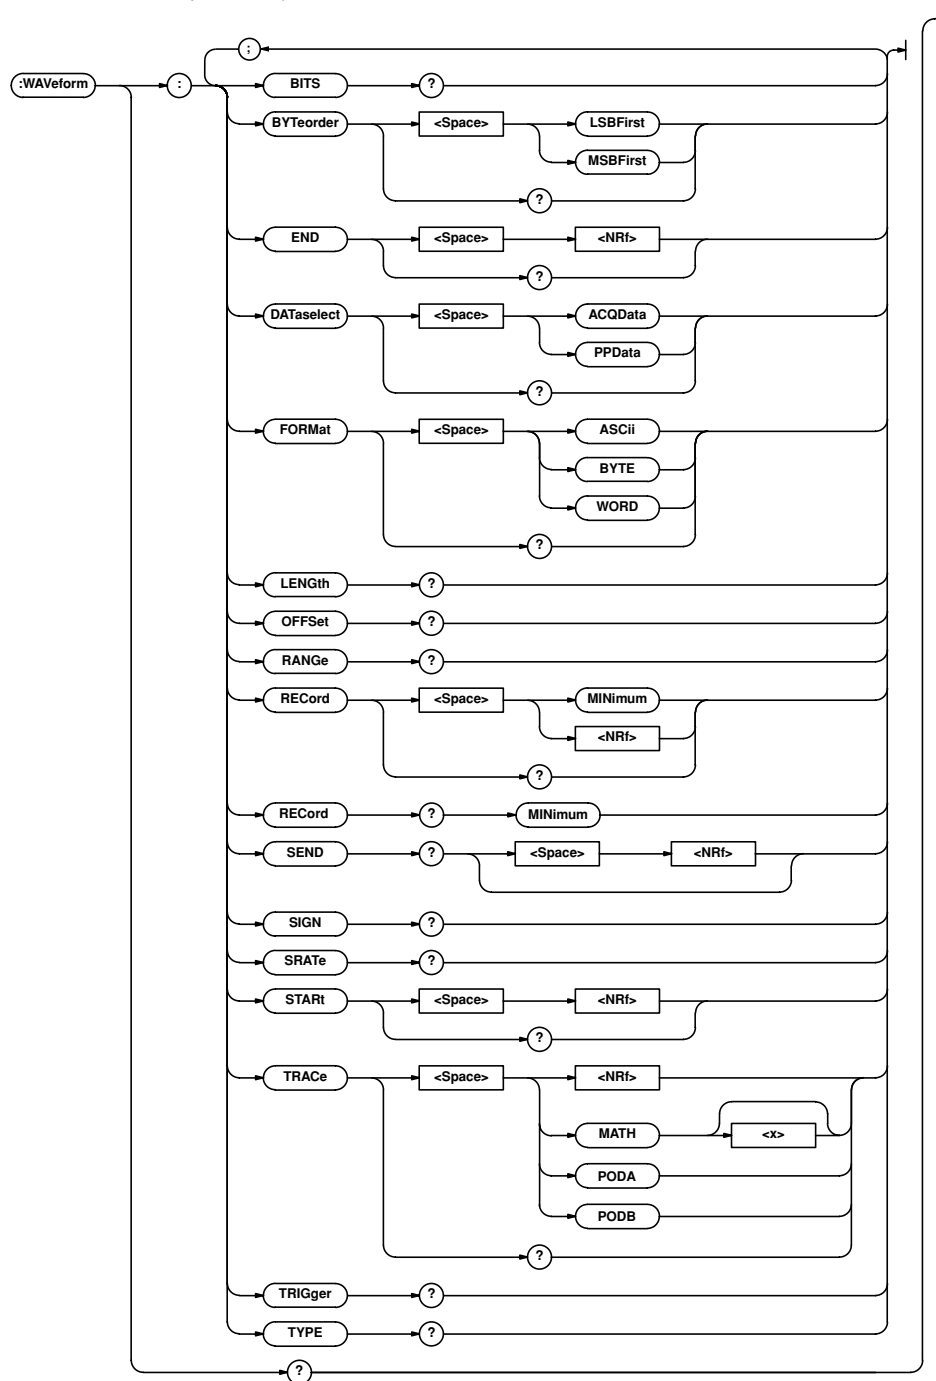

:WAVEform?

Function Queries all information relating to the waveform data.

Syntax :WAVEform?

Example :WAVEFORM?→:WAVEFORM:TRACE 1;RECORD 0;
START 0;END 0;DATASELECT ACQDATA;
FORMAT WORD;BYTEORDER LSBFIRST

:WAVEform:BITS?

Function Queries the bit length of the waveform data designated by "WAVEform:TRACE."

Syntax :WAVEform:BITS?

Example :WAVEFORM:BITS?→:WAVEFORM:BITS 16

5.30 WAVEform Group

:WAVEform:BYTeorder

Function Sets/queries the order used to transmit words consisting of multiple bytes.

Syntax :WAVEform:BYTeorder {LSBFirst|MSBFirst}
:WAVEform:BYTeorder?

Example :WAVEFORM:BYTEORDER LSBFIRST
:WAVEFORM:BYTEORDER?→:WAVEFORM:
BYTEORDER LSBFIRST

:WAVEform:DATaselect

Function Sets whether to use the ACQ data or P-P data when querying the waveform that is specified with the "WAVEform:TRACe" command or queries the current setting.

Syntax :WAVEform:DATaselect {ACQData|PPData}
:WAVEform:DATaselect?

Example :WAVEFORM:DATASELECT ACQDATA
:WAVEFORM:DATASELECT?→:WAVEFORM:
DATASELECT ACQDATA

:WAVEform:END

Function Sets/queries the point at which the last item of data of the waveform designated by "WAVEform:TRACe" is to be located.

Syntax :WAVEform:END {<Nrf>}
:WAVEform:END?

Example :WAVEFORM:END 1001
:WAVEFORM:END?→:WAVEFORM:END 1001

Description You can query total data length (points) with the " :WAVEform:LENGth" command.

:WAVEform:FORMat

Function Sets/queries the format in which the data is to be transmitted.

Syntax :WAVEform:FORMat {ASCIi|BYTE|WORD}
:WAVEform:FORMat?

Example :WAVEFORM:FORMAT ASCII
:WAVEFORM:FORMAT?→:WAVEFORM:
FORMAT ASCII

Description For information on the different formats selected with this command, refer to the Description section of "WAVEform:SEND?".

:WAVEform:LENGth?

Function Queries the number of records (total number of data points) in the waveform designated by "WAVEform:TRACe."

Syntax :WAVEform:LENGth?

Example :WAVEFORM:LENGTH?→:WAVEFORM:LENGTH 1002

:WAVEform:OFFSet?

Function Queries the offset value that is used when converting the waveform specified by the "WAVEform:TRACe" command to physical values.

Syntax :WAVEform:OFFSet?

Example :WAVEFORM:OFFSET?→0.000E+00

Description This offset value is used when converting the <block data> that are output by the "WAVEform:SEND?" command to physical values.

:WAVEform:RANGe?

Function Queries the range that is used when converting the waveform specified by the " :WAVEform:TRACe" command to physical values.

Syntax :WAVEform:RANGe?

Example :WAVEform:RANGe?→5.000E+00

Description This value is used when converting the <block data> that is output with the "WAVEform:SEND?" command to physical values.

:WAVEform:RECOrd

Function Sets/queries the target record No. for the WAVEform group.

Syntax :WAVEform:RECOrd {MINimum|<Nrf>}
:WAVEform:RECOrd?
<Nrf>=0 to -2047 (DL7100)
0 to -4095 (DL7200)

Example :WAVEFORM:RECORD 0
:WAVEFORM:RECORD?→:WAVEFORM:RECORD 0

Description If "MINimum" is specified, the record number is set to the minimum value. The record numbers that can be selected vary depending on the extension memory and the acquisition settings. For details, see the IM701410-01E User's Manual.

:WAVEform:RECOrd? MINimum

Function Queries the smallest record number of the history of the channel.

Syntax :WAVEform:RECOrd? MINimum

Example :WAVEFORM:RECORD?
MINimum→:WAVEFORM:RECORD -1023

:WAVEform:SEND?

Function	Queries the waveform data specified with the "WAVEform:TRACe" command.
Syntax	:WAVEform:SEND? [{<NRf>}] <NRf>=0 to 2048 (DL7100) 0 to 4096 (DL7200) (depends on the record length setting)
Example	:WAVEFORM:SEND?→#8 (number of bytes, 8 digits)(data string) or, <NRf>,<NRf>,
Description	The output format of "WAVEform:SEND?" varies depending on the "WAVEform:FORMat" setting. (1)When set to "AScii" <ul style="list-style-type: none"> When the "WAVEform:TRACe" is 1 to 4 and the linear scaling is OFF, the values are returned in the following format: <voltage>, <voltage>, ...<voltage> When the "WAVEform:TRACe" is a logic probe, the values are returned in the following format: <NR1>, <NR1>, ..., <NR1> <NR1> is an 8-bit pattern (bit 7 to 0) that has been made into a decimal. For all other cases, the values are returned in the form: <NRf>, <NRf>, ..., <NRf>. (2)When set to "BYTE" or "WORD" The values are returned in the <block data> format. <ul style="list-style-type: none"> When the "WAVEform:TRACe" is not set to a logic probe, the following equation can be used to convert the values. Voltage (computed value) = (Range × data ÷ division*) + offset * "BYTE":Division = 12 "WORD":Division = 3072 Query is not possible if "WAVEform:TRACe" set to MATH1 or MATH2 and the computation is turned OFF. When the "WAVEform:TRACe" is a logic probe An 8-bit pattern (bits 7 to 0) is placed in the MSB byte when "WORD" is selected. An 8-bit pattern (bits 7 to 0) is placed in the byte. <NRf> can be omitted. If <NRf> is added, waveform data are queried <NRf> times from the record number specified by the ":WAVEform:RECOrd" command - <NRf> in order.

:WAVEform:SIGN?

Function	Queries the presence of the sign, when querying the waveform specified with "WAVEform:TRACe" in binary data form.
Syntax	:WAVEform:SIGN?
Example	:WAVEFORM:SIGN?→:WAVEFORM:SIGN 1

:WAVEform:SRATE? (Sample RATE)

Function	Queries the sampling rate for the record designated by "WAVEform:RECOrd".
Syntax	:WAVEform:SRATE?
Example	:WAVEFORM:SRATE?→:WAVEFORM:SRATE 1.0E+09

:WAVEform:START

Function	Sets/queries the point at which the first item of data of the waveform designated by "WAVEform:TRACe" is to be located.
Syntax	:WAVEform:START {<NRf>} :WAVEform:START? <NRf>=0 to 16031999
Example	:WAVEFORM:START 0 :WAVEFORM:START?→:WAVEFORM:START 0

:WAVEform:TRACe

Function	Sets/queries the target waveform for the WAVEform group.
Syntax	:WAVEform:TRACe {<NRf> MATH<x> PODA PODB} :WAVEform:TRACe? <x>=1 or 2 <NRf>=1 to 4
Example	:WAVEFORM:TRACE 1 :WAVEFORM:TRACE?→:WAVEFORM:TRACE 1

:WAVEform:TRIGger?


Function	Queries the trigger point for the record designated by "WAVEform:RECOrd".
Syntax	:WAVEform:TRIGger?
Example	:WAVEFORM:TRIGGER?→:WAVEFORM:TRIGGER 2000
Description	Returns the number of points between the record start and the trigger position.

:WAVEform:TYPE?

Function	Queries the acquisition mode for the waveform specified by the "WAVEform:TRACe" command.
Syntax	:WAVEform:TYPE?
Example	:WAVEFORM:TYPE?→:WAVEFORM:TYPE NORMAL

5.31 XY Group

The commands in the XY group are used to make settings and queries about the XY display. You can make the same settings that can make using the X-Y key (SHIFT+DISPLAY) on the front panel.

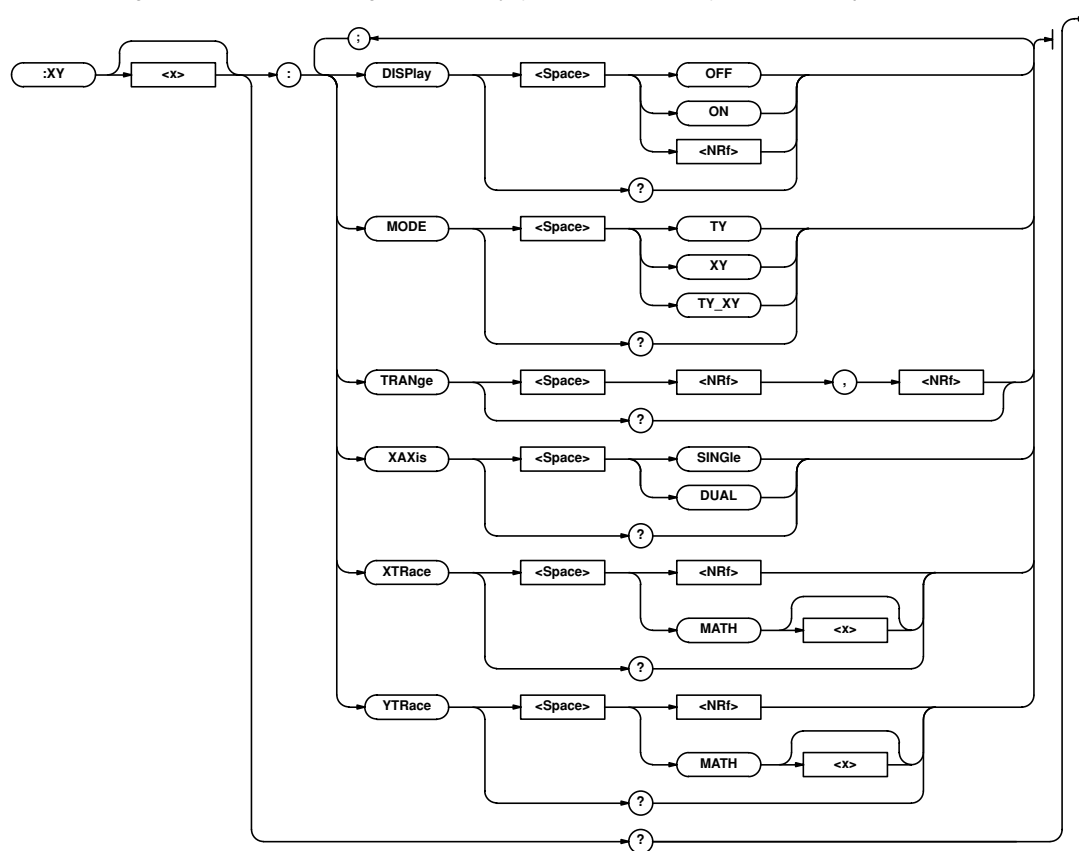

:XY<x>?

Function Queries all settings related to the X-Y display.
 Syntax :XY<x>?
 <x>=1 or 2
 Example :XY1?→:XY1:MODE XY;XAXIS SINGLE;
 DISPLAY 1;TRANGE -5.00,5.00;XTRACE 1;
 YTRACE 2

:XY<x>:DISPlay

Function Sets whether or not to display the X-Y waveform or queries the current setting.
 Syntax :XY<x>:DISPlay {<Boolean>}
 :XY<x>:DISPlay?
 <x>=1 or 2
 Example :XY1:DISPlay ON
 :XY1:DISPlay?→:XY1:DISPlay 1

:XY<x>:MODE

Function Sets the display mode or queries the current setting.
 Syntax :XY<x>:MODE {T-Y|TY_XY|XY}
 :XY<x>:MODE?
 <x>=1 or 2
 Example :XY1:MODE XY
 :XY1:MODE?→:XY1:MODE XY
 Description The setting or query is the same whether <x> is set to 1 or 2.

:XY:TRANge (Time Range)

Function Sets the range of the T-Y waveform to be used in the X-Y display or queries the current setting.
 Syntax :XY<x>:TRANge {<NRf>,<NRf>}
 :XY<x>:TRANge?
 <x>=1 or 2
 <NRf>=-5 to 5 div (10 div/displayed record length steps)
 Example :XY1:TRANGE -4,4
 :XY1:TRANGE?→:XY1:TRANGE -4.00,4.00

:XY<x>:XAXis

Function	Sets whether or not use the same channel for the X-axis for XY1 and XY2 in the X-Y display.
Syntax	:XY<x>:XAXis {SINGLE DUAL} :XY<x>:XAXis? <x>=1 or 2
Example	:XY1:XAXIS SINGLE :XY1:XAXIS?→:XY1:XAXIS SINGLE
Description	The setting or query is the same whether <x> is set to 1 or 2.

:XY<x>:XTRace

Function	Sets the channel that is to be assigned to the X-axis in the X-Y display or queries the current setting.
Syntax	:XY<x>:XTRace {<NRf> MATH<x>} :XY<x>:XTRace? The <x> in XY<x>=1 or 2 The <x> in MATH<x>=1 or 2 <NRf>=1 to 4
Example	:XY1:XTRACE 1 :XY1:XTRACE?→:XY1:XTRACE 1
Description	<ul style="list-style-type: none"> When "XY<x>:XAXis" is set to SINGLE <NRf>=1 to 4 The <x> in MATH<x>=1 or 2 When "XY<x>:XAXis" is set to DUAL If XY<x>=XY1: <NRf>=1 or 2 The <x> in MATH<x>=1 If XY<x>=XY2: <NRf>=3 or 4 The <x> in MATH<x>=2

:XY<x>:YTRace

Function	Sets the channel that is to be assigned to the Y-axis in the X-Y display or queries the current setting.
Syntax	:XY<x>:YTRace {<NRf> MATH<x>} :XY<x>:YTRace? The <x> in XY<x>=1 or 2 When the <x> in XY<x> is 1: <NRf>=1 or 2 The <x> in MATH<x>=1 When the <x> in XY<x> is 2: <NRf>=3, 4 The <x> in MATH<x>=2
Example	:XY1:YTRACE 1 :XY1:YTRACE?→:XY1:YTRACE 1

:ZOOM?

Function Queries all waveform zoom settings.
 Syntax :ZOOM?
 Example :ZOOM?→:ZOOM:MODE MAIN;FORMAT MAIN;
 ALLOCATION:CHANNEL1 1;CHANNEL2 0;
 CHANNEL3 0;CHANNEL4 0;MATH1 0;MATH2 0;
 PODA 0;PODB 0;:ZOOM:MLINKAGE ON;
 MAG1 2.0E+00;MAG2 2.0E+00;PLINKAGE OFF;
 POSITION1 0.0000000;POSITION2 0.0000000

:ZOOM:ALLOcation?

Function Queries settings for the zoomed waveform.
 Syntax :ZOOM:ALLOcation?
 Example :ZOOM:ALLOCATION?→:ZOOM:ALLOCATION:
 CHANNEL1 1;CHANNEL2 0;CHANNEL3 0;
 CHANNEL4 0;MATH1 0;MATH2 0;PODA 0;PODB 0

:ZOOM:ALLOcation:ALL

Function Selects all waveforms to be zoomed.
 Syntax :ZOOM:ALLOcation:ALL {<Boolean>}
 Example :ZOOM:ALLOCATION:ALL ON

:ZOOM:ALLOcation:{CHANnel<x>|MATH<x>}

Function Selects/queries the zoomed waveform.
 Syntax :ZOOM:ALLOcation:{CHANnel<x>|MATH<x>}
 {<Boolean>}
 :ZOOM:ALLOcation:{CHANnel<x>|MATH<x>}?
 <x>(CHANnel)=1 to 4
 <x>(MATH)=1 or 2
 Example :ZOOM:ALLOCATION:CHANNEL1 ON
 :ZOOM:ALLOCATION:CHANNEL1?→:ZOOM:
 ALLOCATION:CHANNEL1 1

:ZOOM:ALLOcation:{PODA|PODB}

Function Sets the pod to be zoomed or queries the current setting.
 Syntax :ZOOM:ALLOcation:{PODA|PODB} {<Boolean>}
 :ZOOM:ALLOcation:{PODA|PODB}?
 Example :ZOOM:ALLOCATION:PODA ON
 :ZOOM:ALLOCATION:PODA?→:ZOOM:
 ALLOCATION:PODA 1
 Description Setting/Querying is not possible if the logic probe is not connected.

:ZOOM:FITMeasure

Function Changes the range of the automated measurement of waveform parameters to the ends of the zoom box.
 Syntax :ZOOM:FITMeasure {Z1|Z2}
 :ZOOM:FITMeasure?
 Example :ZOOM:FITMEASURE Z1
 :ZOOM:FITMEASURE?→:ZOOM:FITMEASURE Z1

:ZOOM:FORMat

Function Sets/queries the zoom display format.
 Syntax :ZOOM:FORMat {MAIN|SINGle|DUAL|TRIad|
 QUAD|HEXa}
 :ZOOM:FORMat?
 Example :ZOOM:FORMAT SINGLE
 :ZOOM:FORMAT?→:ZOOM:FORMAT SINGLE

:ZOOM:MLINKage (Mag Linkage)

Function Enables/disables/queries zoom ratio linkage.
 Syntax :ZOOM:MLINKage {<Boolean>}
 :ZOOM:MLINKage?
 Example :ZOOM:MLINKAGE ON
 :ZOOM:MLINKAGE?→:ZOOM:MLINKAGE 1

:ZOOM:MAG<x>

Function Sets/queries the zoom ratio.
 Syntax :ZOOM:MAG<x> {<NRF>}
 :ZOOM:MAG<x>?
 <x>=1, 2
 <NRF>=magnification up to 40 points.
 See the IM701410-01E User's
 Manual.
 Example :ZOOM:MAG1 2.5
 :ZOOM:MAG1?→:ZOOM:MAG1 2.5

:ZOOM:MODE

Function Sets/queries the zoom display mode.
 Syntax :ZOOM:MODE {MAIN|MAIN_Z1|MAIN_Z2|
 MAIN_Z1_Z2|Z1_Z2|Z1|Z2}
 :ZOOM:MODE?
 Example :ZOOM:MODE MAIN_Z1_Z2
 :ZOOM:MODE?→:ZOOM:MODE MAIN_Z1_Z2

:ZOOM:PLINKage (Position Linkage)


Function Turns the link ON/OFF when moving the zoom box or queries the current setting.
 Syntax :ZOOM:PLINKage {<Boolean>}
 :ZOOM:PLINKage?
 Example :ZOOM:PLINKAGE ON
 :ZOOM:PLINKAGE?→:ZOOM:PLINKAGE 1

:ZOOM:POSition<x>

Function Sets/queries the zoom box position.
 Syntax :ZOOM:POSition<x> {<NRF>}
 :ZOOM:POSition<x>?
 <x>=1, 2
 <NRF>=-5 to 5 div(in steps of 10 div/
 display-record-length)
 Example :ZOOM:POSITION1 2
 :ZOOM:POSITION1?→:ZOOM:
 POSITION1 2.00E+00

5.33 Common Command Group

The commands in the common command group are independent of the instrument's functions, and are specified in IEEE 488.2-1987. There is no front panel key that corresponds to this group.

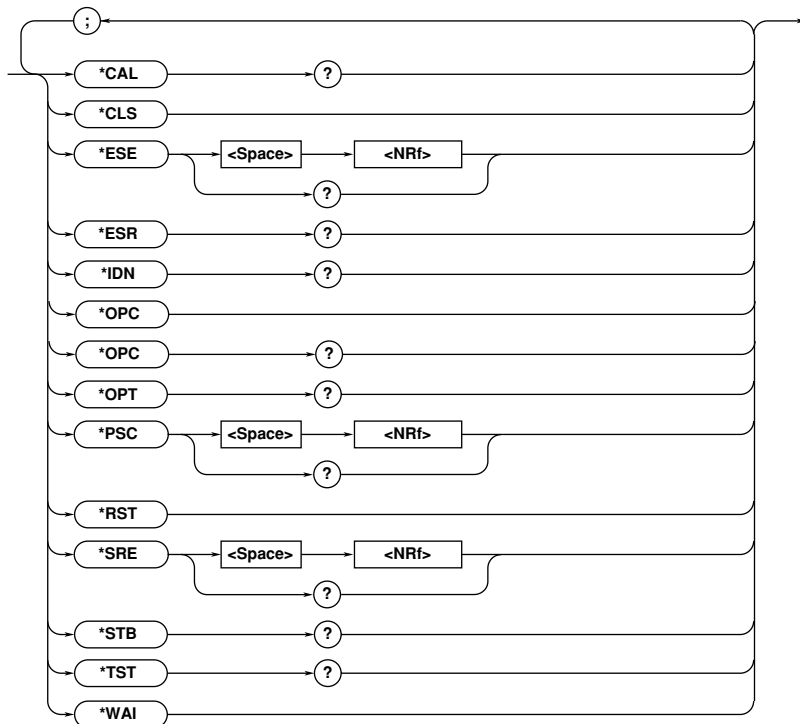

*CAL? (CALibrate)

Function Performs calibration and queries about the result.

Syntax *CAL?

Example *CAL?→0

Description "0" will be returned if calibration is completed properly, and "1" will be returned if an abnormality has been detected during calibration.

*CLS (CLear Status)

Function Clears the standard event register, extended event register and error queue.

Syntax *CLS

Example *CLS

Description

- The output queue will also be cleared if a *CLS command is appended after the program message terminator.
- For details of the registers and queue, refer to Chapter 6.

*ESE (standard Event Status Enable register)

Function Sets the value for the standard event enable register/queries about the current setting.

Syntax *ESE {<NRf>}
*ESE?

Example *ESE 251
*ESE?→251

Description

- <NRf> is the sum of the bits expressed as a decimal number.
- For example, if "*ESE 251" is set, the standard event enable register will be set to "11111011." This means that bit 2 of the standard event register is disabled so that bit 5 (ESB) of the status byte register will not be set to "1," even if an query error occurs.
- Default is "*ESE 0," i.e. all bits are disabled.
- The standard event enable register will not be cleared, even if an query is made using "*ESE?."
- For details of the standard event enable register, refer to page 6-3.

***ESR? (standard Event Status Register)**

Function Queries about the value of the standard event register and clears it at the same time.

Syntax *ESR?

Example *ESR?→32

Description

- The sum of the bits is returned as a decimal value.
- It is possible to ascertain the type of event which has occurred, while SRQ is occurring.
- For example, if "32" is returned, this means that the standard event register is "00100000," i.e. the SRQ has occurred due to a command syntax error.
- If an query is made using "*ESR?," the standard event register will be cleared.
- For details of the standard event register, refer to page 6-3.

***IDN? (IDeNtify)**

Function Queries about the instrument model.

Syntax *IDN?

Example *IDN?→YOKOGAWA,701410,0,F1.10

Description A reply consists of the following sequence: <Manufacturer>, <Model>, <Serial No.> and <Firmware version>. "0" is always returned as the <Serial No.>.

```
<Model>: DL7100 2 M model: 701410
          8 M model: 701420
          DL7200 4 M model: 701430
          16 M model: 701440
```

***LRN? (LeaRN)**

Function Queries about all the current settings for the following command groups.

ACQuire, CHANnel<x>, TIMEbase, TRIGger

Syntax *LRN?

Example *LRN?→:ACQUIRE:RLENGTH 10000;
MODE NORMAL;AVERAGE:COUNT
INFINITY;EWEIGHT 16;:ACQUIRE:
COUNT INFINITY;INTERLEAVE 0;
REPETITIVE 0;CLOCK INTERNAL;:CHANNEL1:
DISPLAY 1;VDIV 50.000E+00;POSITION 0.00;
COUPLING DC;PROBE 10;OFFSET 0.0E+00;
BWIDTh FULL;VARIABLE 50.000E+00;
LSCALE:MODE 0;AVALUE 1.00000E+00;
BVALUE 0.00000E+00;UNIT "";:CHANNEL1:
LABEL "CH1";:CHANNEL2:DISPLAY 1;V
DIV 50.000E+00;POSITION 0.00;
COUPLING DC;PROBE 10;OFFSET 0.0E+00;
BWIDTh FULL;VARIABLE 50.000E+00;LSCALE:
MODE 0;AVALUE 1.00000E+00;
BVALUE 0.00000E+00;UNIT
"";:CHANNEL2:LABEL "CH2";:CHANNEL3:
DISPLAY 1;VDIV 50.000E+00;POSITION 0.00;
COUPLING DC;PROBE 10;OFFSET 0.0E+00;
BWIDTh FULL;VARIABLE50.000E+00;LSCALE:

```
MODE 0;AVALUE 1.00000E+00;  
BVALUE 0.00000E+00;UNIT "";:CHANNEL3:  
LABEL "CH3";:CHANNEL4:DISPLAY 1;  
VDIV 50.000E+00;POSITION 0.00;  
COUPLING DC;PROBE 10;OFFSET 0.0E+00;  
BWIDTh FULL;VARIABLE 50.000E+00;LSCALE:  
MODE 0;AVALUE 1.00000E+00;  
BVALUE 0.00000E+00;UNIT  
"";:CHANNEL4:LABEL "CH4";:TIMEBASE:  
SOURCE INTERNAL;TDIV 1.0E-03;:TRIGGER:  
ACTION:BUZZER 0;SAVE 0;HCOPY 0;  
ACQCOUNT INFINITE;:TRIGGER:SIMPLE:  
SOURCE 1;LEVEL 0.0E+00;SLOPE RISE;  
COUPLING DC;HFREJECTION OFF;  
HYSTERESIS LOW;PROBE 1;:TRIGGER:SOURCE:  
CHANNEL1:LEVEL 0.0E+00;COUPLING DC;  
HFREJECTION OFF;HYSTERESIS LOW;  
WIDTH 50.000E+00;:TRIGGER:SOURCE:  
CHANNEL2:LEVEL 0.0E+00;COUPLING DC;  
HFREJECTION OFF;HYSTERESIS LOW;  
WIDTH 50.000E+00;:TRIGGER:SOURCE:  
CHANNEL3:LEVEL 0.0E+00;COUPLING DC;  
HFREJECTION OFF;HYSTERESIS LOW;  
WIDTH 50.000E+00;:TRIGGER:SOURCE:  
CHANNEL4:LEVEL 0.0E+00;COUPLING DC;  
HFREJECTION OFF;HYSTERESIS LOW;  
WIDTH 50.000E+00;:TRIGGER:ABN:COUNT 1;:  
TRIGGER:HOLDOFF:TIME 80.000E-09;:  
TRIGGER:ADB:DELAY 1.000E-09;:TRIGGER:  
DELAY 0.0E+00;PATTERN:CLOCK:SOURCE 1;  
SLOPE RISE;:TRIGGER:PATTERN:  
CHANNEL1 HIGH;CHANNEL2 DONTCARE;  
CHANNEL3 DONTCARE;CHANNEL4 DONTCARE;  
CONDITION TRUE;:TRIGGER:POSITION 50.000;  
MODE AUTO;WIDTH:TYPE IN;CHANNEL1 HIGH;  
CHANNEL2 HIGH;CHANNEL3 HIGH;  
CHANNEL4 HIGH;CONDITION TRUE;  
TIME1 1.000E-09;TIME2 1.000E-09;  
WINDOW 0;:TRIGGER:OR:WINDOW 0;  
CHANNEL1 RISE;CHANNEL2 OFF;CHANNEL3 OFF;  
CHANNEL4 OFF;:TRIGGER:SCOUNT 2;TV:  
TYPE NTSC;POLARITY NEGATIVE;  
LEVEL 500000.0;FIELD 1;LINE 5;FRAME 1;:  
TRIGGER:TYPE SIMPLE;LOGIC:CLOCK:  
SOURCE 1;SLOPE RISE;:TRIGGER:LOGIC:  
CONDITION TRUE;A0 HIGH;A1 DONTCARE;  
A2 DONTCARE;A3 DONTCARE;A4 DONTCARE;  
A5 DONTCARE;A6 DONTCARE;A7 DONTCARE;  
B0 DONTCARE;B1 DONTCARE;B2 DONTCARE;  
B3 DONTCARE;B4 DONTCARE;B5 DONTCARE;  
B6 DONTCARE;B7 DONTCARE;:TRIGGER:  
ATRIGGER:CHANNEL1 HIGH;  
CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;  
CHANNEL4 DONTCARE;CONDITION ENTER;:  
TRIGGER:BTRIGGER:CHANNEL1 DONTCARE;  
CHANNEL2 HIGH;CHANNEL3 DONTCARE;  
CHANNEL4 DONTCARE;CONDITION
```

5.33 Common Command Group

*OPC (OPeration Complete)

Function	Sets bit 0 (OPC bit) of the standard event register to "1" when execution of an overlap command is completed.
Syntax	*OPC
Example	*OPC
Description	<ul style="list-style-type: none">• For a description of the synchronization method using "*OPC," refer to page 4-8.• Designation of an overlap command is performed using "COMMunicate:OPSE."• Operation is not guaranteed if "*OPC" is not appended to the end of the message.

*OPC? (OPeration Complete)

Function	After "*OPC?" is sent, "1" (ASCII) will be returned if execution of the designated overlap command has been completed.
Syntax	*OPC?
Example	*OPC?→1
Description	<ul style="list-style-type: none">• For a description of the synchronization method using "*OPC?," refer to page 4-8.• Designation of an overlap command is performed using "COMMunicate:OPSE."• Operation is not guaranteed if "*OPC" is not appended to the end of the message.

*OPT? (OPTion)

Function	Queries the installed options.
Syntax	*OPT?
Example	*OPT?→CH8MW,PRINTER,LOGIC
Description	<ul style="list-style-type: none">• Returns the existence of the <memory model>, <printer>, <logic option>, and <ethernet>.• The "*OPT?" command must be the last query in a program message. Otherwise, an error results.

*PSC (Power-on Status Clear)

Function	Selects/queries whether following registers are cleared when power is turned ON. However, they cannot be cleared if the parameter is "0" when rounded. <ul style="list-style-type: none">• Standard event enable register• Extended event enable register• Transit filter
Syntax	*PSC {<Nrf>} *PSC? <Nrf>=0(does not clear the registers), a value other than 0 (clears the registers)
Example	*PSC 1 *PSC?→1
Description	For details of each register, refer to Chapter 6.

*RST (ReSeT)

Function	Resets the current settings of the following groups at once. ACCumulate, ACQuire, CHANnel<x>, TIMEbase, TRIGger
Syntax	*RST
Example	*RST
Description	Previously sent *OPC and *OPC? commands are also cleared.

*SRE (Service Request Enable register)

Function	Sets the value of the service request enable register/inquires about the current setting.
Syntax	*SRE <Nrf> *SRE? <Nrf>=0 to 255
Example	*SRE 239 *SRE?→239
Description	<ul style="list-style-type: none">• <Nrf> is the sum of the bits expressed as a decimal number. For example, if "*ESE 239" is set, the service request enable register will be set to "11101111." This means that bit 4 of the service request enable register is disabled, so that bit 5 (ESB) of the status byte register will not be set to "1," even if the output queue is not empty. However, bit 6 (MSS) of the status byte register is the MSS bit, so it will be ignored.• Default is "*SRE 0," i.e. all bits are disabled.• The service request enable register will not be cleared, even if a query is made using "*SRE?."• For details of the service request enable register, refer to page 6-1.

*STB? (STatus Byte)

Function	Queries about the value of the status byte register.
Syntax	*STB?
Example	*STB?→4
Description	<ul style="list-style-type: none">• The sum of the bits expressed as a decimal value is returned.• Bit 6 is MSS not RQS, since the register is read without serial polling. For example, if "4" is returned, the status byte register is set to "00000100," i.e. the error queue is not empty (an error has occurred).• The status byte register will be cleared, even if a query is made using "*STB?."• For details of the status byte register, refer to page 6-2.

***TST?**

Function Executes self test and queries the result. The self test involves internal memory tests.

Syntax *TST?

Example *TST?→0

Description "0" is returned if the self test is successful, "1" if it is not.

***WAI (Wait)**

Function Waits for the command following "*WAI" until execution of the designated overlap command is completed.

Syntax *WAI

Example *WAI


Description

- For a description of the synchronization method using "*WAI," refer to page 4-8.
- Designation of overlap commands can be performed using "COMMunicate:OPSE."

Chapter 6 Status Report

6.1 Overview of the Status Report

The figure below shows the status report which is read by a serial poll. This is an extended version of the one specified in IEEE 488.2-1992.

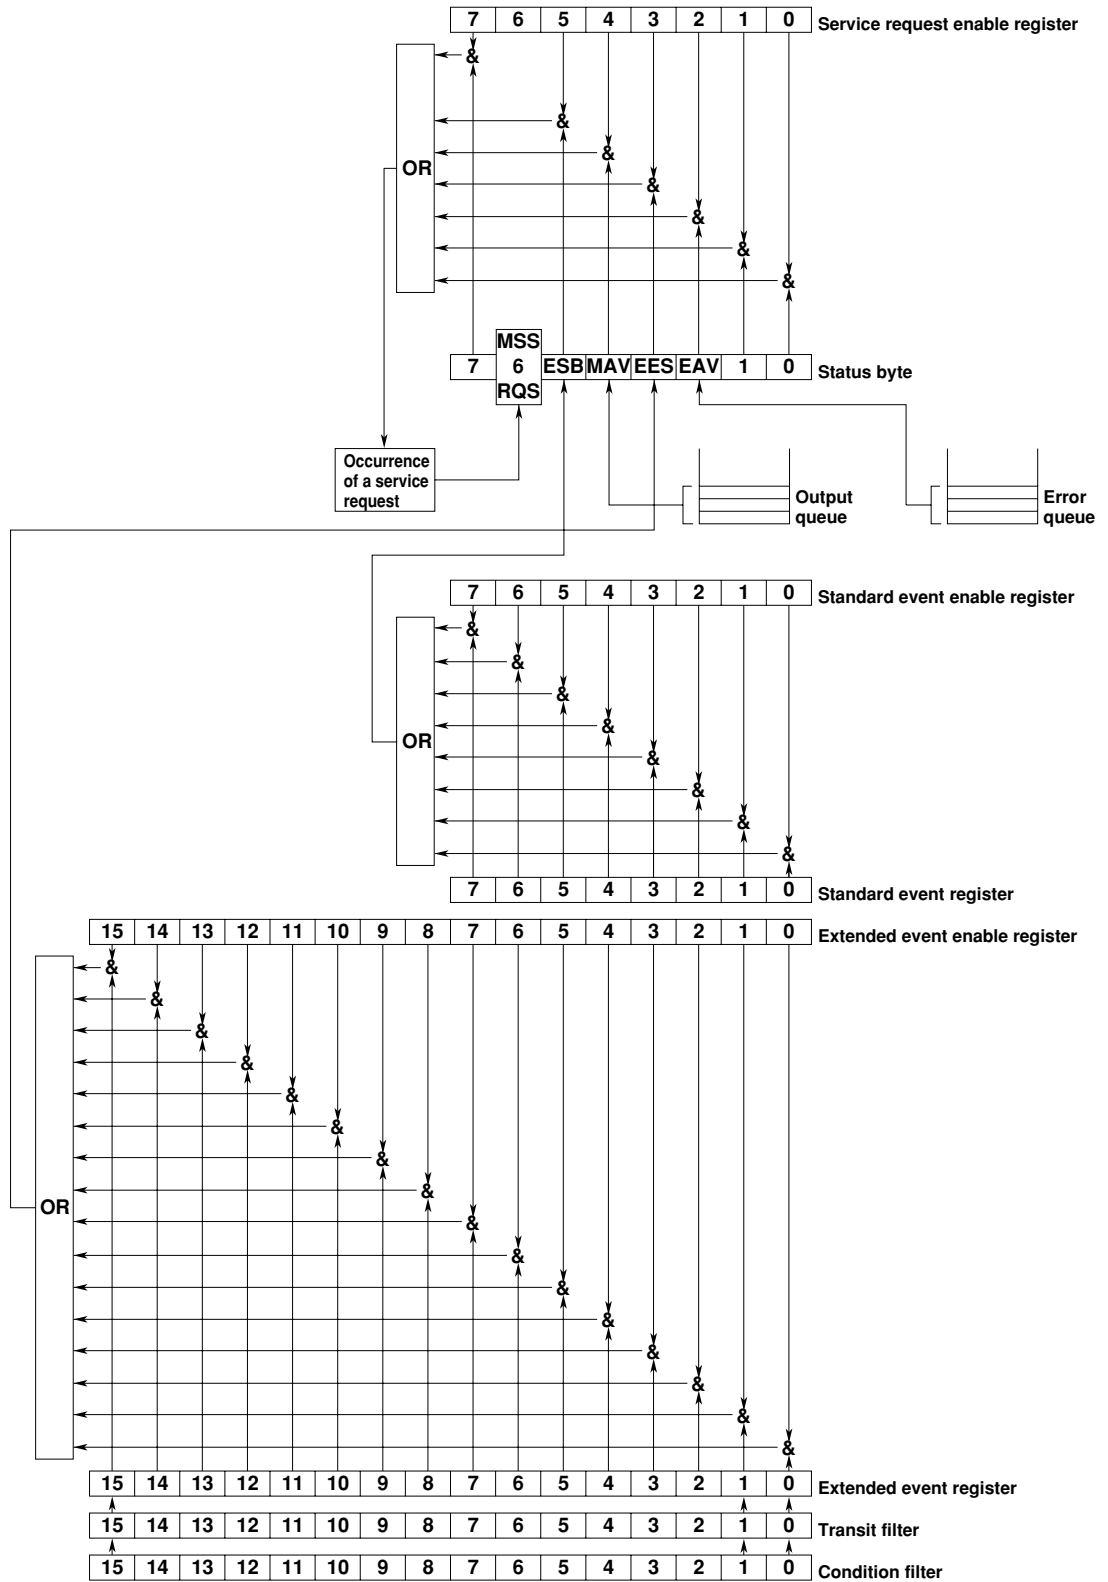

6.1 Overview of the Status Report/6.2 Status Byte

Overview of Registers and Queues

Name	Function	Writing	Reading
Status byte		—	Serial poll (RQS), *STB?(MSS)
Service request enable register	Masks status byte.	*SRE	*SRE?
Standard event register	Change in device status	—	*ESR?
Standard event enable register	Masks standard event register	*ESE	*ESE?
Extended event register	Change in device status	—	STATUS:EEER?
Extended event enable register	Masks standard event register	STATUS:EESE	STATUS:EESE?
Condition register	Current instrument status	—	STATUS:CONDition?
Transit filter	Extended event occurrence conditions	STATUS:FILTer <x>	STATUS:FILTer<x>?
Output queue	Stores response message to a query.	All executable queues	
Error queue	Stores error Nos. and messages.	—	STATUS:ERRor?

Registers and Queues which Affect the Status Byte

Registers which affect each bit of the status byte are shown below.

Standard event register : Sets bit 5 (ESB) of status byte to "1" or "0."
 Output queue : Sets bit 4 (MAV) of status byte to "1" or "0."
 Extended event register : Sets bit 3 (EES) of status byte to "1" or "0."
 Error queue : Sets bit 2 (EAV) of status byte to "1" or "0."

Enable Registers

Registers which mask a bit so that the bit does not affect the status byte, even if the bit is set to "1," are shown below.

Status byte : Masks bits using the service request enable register.
 Standard event register : Masks bits using the standard event enable register.
 Extended event register : Masks bits using the extended event enable register.

Writing/Reading from Registers

The *ESE command is used to set bits in the standard event enable register to "1" or "0," and the *ESE query is used to check whether bits in that register are set to "1" or "0." For details of these commands, refer to Chapter 5.

6.2 Status Byte

Overview of Status Byte



Bits 0, 1 and 7

Not used (always "0")

Bit 2 EAV (Error Available)

Set to "1" when the error queue is not empty, i.e. when an error occurs. For details, refer to page 6-5.

Bit 3 EES (Extended Event Summary Bit)

Sets to "1" when the logical "AND" of an Extended Event Register bit and the corresponding Enable Register bit is equal to "1."—that is, when an event takes place in the instrument. Refer to page 6-4.

Bit 4 MAV (Message Available)

Set to "1" when the output queue is not empty, i.e. when there is data which is to be output when an query is made. Refer to page 6-5.

Bit 5 ESB (Event Summary Bit)

Set to "1" when the logical AND of the standard event register and the corresponding enable register is "1," i.e. when an event takes place in the instrument. Refer to page 6-3.

Bit 6 RQS (Request Status)/MSS (Master Summary Status)

Sets to "1" when the logical "AND" of any one of the Status Byte bits (other than bit 6) and the corresponding Service Request Enable Register bit becomes "1"—that is, when the instrument is requesting service from the controller.

RQS is set to "1" when MSS changes from "0" to "1," and is cleared when a serial poll is performed or when MSS changes to "0."

Bit Masking

To mask a bit in the status byte so that it does not cause an SRQ, set the corresponding bit of the service request enable register to "0."

For example, to mask bit 2 (EAV) so that no service will be requested, even if an error occurs, set bit 2 of the service request enable register to "0." This can be done using the *SRE command. To query whether each bit of the service request enable register is "1" or "0," use *SRE?. For details of the *SRE command, refer to Chapter 5.

Operation of the Status Byte

A service request is issued when bit 6 of the status byte becomes "1." Bit 6 becomes "1" when any of the other bits becomes "1" (or when the corresponding bit in the service request enable register becomes "1").

For example, if an event takes place and the logical OR of each bit of the standard event register and the corresponding bit in the enable register is "1," bit 5 (ESB) will be set to "1." In this case, if bit 5 of the service request enable register is "1," bit 6 (MSS) will be set to "1," thus requesting service from the controller.

It is also possible to check what type of event has occurred by reading the contents of the status byte.

Reading from the Status Byte

The following two methods are provided for reading the status byte.

- **Inquiry using the *STB? query**
Making an query using the *STB? query sets bit 6 to MSS. This causes the MSS to be read. After completion of the read-out, none of the bits in the status byte will be cleared.
- **Serial poll**
Execution of a serial poll changes bit 6 to RQS. This causes RQS to be read. After completion of the read-out, only RQS is cleared. Using a serial poll, it is not possible to read MSS.

Clearing the Status Byte

No method is provided for forcibly clearing all the bits in the status byte. Bits which are cleared are shown below.

- **When an query is made using the *STB? query**
No bit is cleared.
- **When a serial poll is performed**
Only the RQS bit is cleared.
- **When the *CLS command is received**
When the *CLS command is received, the status byte itself is not cleared, but the contents of the standard event register (which affects the bits in the status byte) are cleared. As a result, the corresponding bits in the status byte are cleared, except bit 4 (MAV), since the output queue cannot be emptied by the *CLS command. However, the output queue will also be cleared if the *CLS command is received just after a program message terminator.

6.3 Standard Event Register

Overview of the Standard Event Register

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Bit 7 PON (Power ON)

Bit 7 PON (Power ON) Set to "1" when power is turned ON

Bit 6 URQ (User Request)

Not used (always "0")

Bit 5 CME (Command Error)

Set to "1" when the command syntax is incorrect.

Examples: Incorrectly spelled command name; "9" used in octal data.

Bit 4 EXE (Execution Error)

Set to "1" when the command syntax is correct but the command cannot be executed in the current state.

Examples: Parameters are outside the setting range: an attempt is made to make a hard copy during acquisition.

Bit 3 DDE (Device Dependent Error)

Set to "1" when execution of the command is not possible due to an internal problem in the instrument that is not a command error or an execution error.

Example: The circuit breaker is reset.

Bit 2 QYE (Query Error)

Set to "1" if the output queue is empty or if the data is missing even after a query has been sent.

Examples: No response data; data is lost due to an overflow in the output queue.

Bit 1 RQC (Request Control)

Not used (always "0")

Bit 0 OPC (Operation Complete)

Set to "1" when the operation designated by the *OPC command has been completed. Refer to Chapter 5.

Bit Masking

To mask a bit in the standard event register so that it does not cause bit 5 (ESB) of the status byte to change, set the corresponding bit in the standard event enable register to "0."

For example, to mask bit 2 (QYE) so that ESB will not be set to "1," even if a query error occurs, set bit 2 of the standard event enable register to "0." This can be done using the *ESE command. To inquire whether each bit of the standard event enable register is "1" or "0," use the *ESE?. For details of the *ESE command, refer to Chapter 5.

6.3 Standard Event Register/6.4 Extended Event Register

Operation of the Standard Event Register

The standard event register is provided for eight different kinds of event which can occur inside the instrument. Bit 5 (ESB) of the status byte is set to "1" when any of the bits in this register becomes "1" (or when the corresponding bit of the standard event enable register becomes "1").

Examples

1. A query error occurs.
2. Bit 2 (QYE) is set to "1."
3. Bit 5 (ESB) of the status byte is set to "1" if bit 2 of the standard event enable register is "1."

It is also possible to check what type of event has occurred inside the instrument by reading the contents of the standard event register.

Reading from the Standard Event Register

The contents of the standard event register can be read by the *ESR command. After completion of the read-out, the register will be cleared.


Clearing the Standard Event Register

The standard event register is cleared in the following three cases.

- When the contents of the standard event register are read using *ESR?
- When the *CLS command is received
- When power is turned ON again

6.4 Extended Event Register

Reading the extended event register tells you whether changes in the condition register (reflecting internal conditions) have occurred. A filter can be applied which allows you to decide which events are reported to the extended event register.

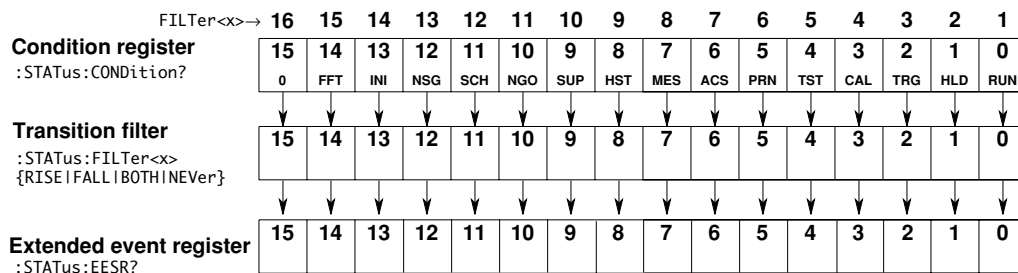

The meaning of each bit of the condition register is as follows.

Bit 0 RUN (Running)	Set to "1" during acquisition.
Bit 1 HLD (Hold)	Set to "1" for waveforms loaded from a storage medium.
Bit 2 TRG (Awaiting trigger)	Set to "1" when waiting for a trigger.
Bit 3 CAL (Calibrating)	Set to "1" during calibration.
Bit 4 TST (Testing)	Set to "1" during self-test.
Bit 5 PRN (Printing)	Set to "1" while the built-in printer is in operation.
Bit 6 ACS (Accessing)	Sets to "1" while floppy drive, or external SCSI device is being accessed.
Bit 7 MES (Measuring)	Set to "1" when automated measurement of waveform parameters or cursor measurement is in progress.
Bit 8 HST (History Search)	Set to "1" while executing history search.
Bit 9 SUP (Set-up)	Set to "1" during auto set-up.
Bit 10 NGO (Go/No-go)	Set to "1" while performing GO/NO-GO determination.
Bit 11 SCH (Search)	Set to "1" while executing edge/pattern search.
Bit 12 NSG (N-Single)	Set to "1" during continuous acquisition when the trigger mode is set to single (N).
Bit 13 INI (Initializing)	Sets to "1" during initialization.
Bit 14 FFT	Set to "1" while performing the FFT.

The filter is applied to each bit of the condition register separately, and can be selected from the following.

Note that the numbering of the bits used in the filter setting differs from the actual bit number (1 to 16 vs. 0 to 15).

Rise	The bit of the extended event register becomes "1" when the bit of the condition register changes from "0" to "1."
Fall	The bit of the extended event register becomes "1" when the bit of the condition register changes from "1" to "0."
Both	The bit of the extended event register becomes "1" when the bit of the condition register changes from "0" to "1," or from "1" to "0."
Never	The bit of the extended event register is disabled and always "0."

6.5 Output Queue and Error Queue


Overview of the Output Queue

The output queue is provided to store response messages to queries. For example, when the WAVEform:SEND? query is sent to request output of the acquired waveform, the response data will be stored in the output queue until it is read out.

The example below shows that data is stored record by record in the output queue, and is read out oldest item first, newest item last. The output queue is emptied in the following cases (in addition to when read-out is performed).

- When a new message is received from the controller
- When dead lock occurs (page 4-2)
- When a device clear command (DCL or SDC) is received
- When power is turned ON again

The output queue cannot be emptied using the *CLS command. To see whether the output queue is empty or not, check bit 4 (MAV) of the status byte.

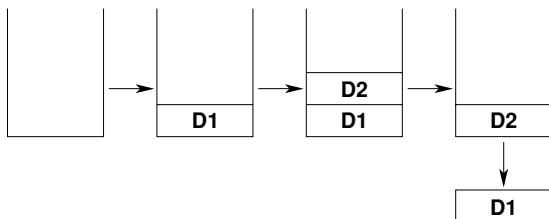

Overview of the Error Queue

The error queue stores the error No. and message when an error occurs. For example, if the controller sends an incorrect program message, the number, "113, "Undefined header", " and the error message are stored in the error queue, when the error is displayed.

The contents of the error queue can be read using the STATus:ERRor? query. As with the output queue, messages are read oldest first, newest last (refer to the previous page).

If the error queue becomes full, the final message will be replaced by message "350, "Queue overflow"."

The error queue is emptied in the following cases (in addition to when read-out is performed).

- When the *CLS command is received
- When power is turned ON again

To see whether the error queue is empty or not, check bit 2 (EAV) of the status byte.

Chapter 7 Sample Program

7.1 Before Programming

Environment

Model: MS-DOS/V Computer
 Language: Visual BASIC Ver5.0 Professional Edition or more
 GP-IB board: AT-GPIB/TNT IEEE-488.2 board from National Instruments.

Setting up the Visual Basic

Component: MSComm
 Standardmodule: Niglobal.bas
 Vbib-32.bas

Setting up the DL7100/DL7200

- **GPIB**


All the sample programs given in this chapter use address 1 for the DL7100/DL7200, so be sure to assign the instrument to address 1 as described on page 1-6.

- **Serial (RS232)**

All the sample programs in this chapter assume the below settings, so be sure to set parameters as described on page 2-8.

Baud Rate	19200
Handshake	CTS-RTS
Parity Check	NO
Stop Bit	1
Character Length	8
Terminator	LF

7.2 Image of Sample Program

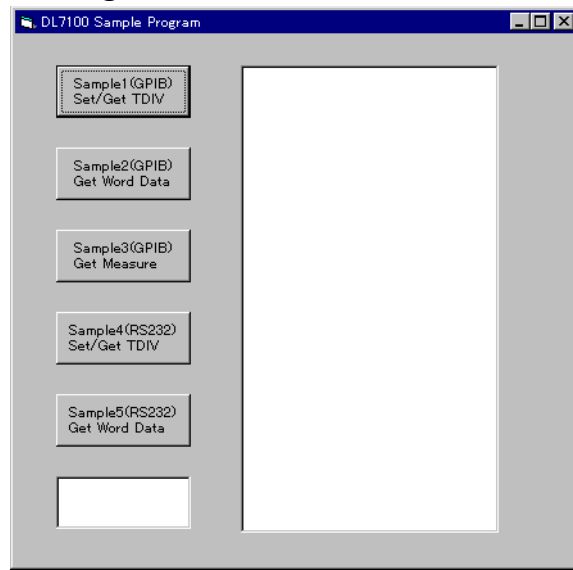

7.3 Initialize/Error/Execute

```

Option Explicit
Dim StartFlag As Integer           'Start Flag
Dim TimerCount As Integer         'Timeout(RS232)
Dim Addr As Integer              'GPiB Address
Dim Timeout As Integer           'Timeout
Dim Dev As Integer               'Device ID(GPiB)
Dim CtsFlag As Integer           'CTS Flag
Dim Term As String               'Terminator
Dim Query(3) As String           'Query String
Dim WaveBuffer(20070) As Integer 'WaveData Buffer(GPiB)
Dim Dummy As Integer

Private Function InitGpib() As Integer
    Dim eos As Integer           'EOS
    Dim eot As Integer           'EOI
    Dim brd As Integer           'GPiB Board ID
    Dim sts As Integer

    eos = &HC0A                  'Terminator = LF
    eot = 1                       'EOI = Enable
    Term = Chr(10)
    Timeout = T10s                'Timeout = 10s

    brd = ilfind("GPiB0")
    If (brd < 0) Then
        Call DisplayGPiBError(brd, "ilfind")
        InitGpib = 1
        Exit Function
    End If
    Dev = ildev(0, Addr, 0, Timeout, eot, eos)
    If (Dev < 0) Then
        Call DisplayGPiBError(Dev, "ildev")
        InitGpib = 1
        Exit Function
    End If
    sts = ilsic(brd)              'Set IFC
    If (sts < 0) Then
        Call DisplayGPiBError(sts, "ilsic")
        InitGpib = 1
        Exit Function
    End If
    InitGpib = 0
End Function

Private Function InitSerial() As Integer
    Dim rat As String

    MSComm1.CommPort = 1          'Port = COM1
    rat = "19200,N,8,1"          'Rate = 19200, NoParity, 8Bit,
    1Stopbit

    MSComm1.Settings = rat

    MSComm1.Handshaking = comRTS 'Handshake = CTS-RTS
    MSComm1.RTSEnable = True     'RTS = TRUE
    CtsFlag = 1
    Term = Chr(10)               'Terminator = LF
    Timeout = 10                 'Timeout = 10s
    InitSerial = 0
End Function

Private Sub DisplayGPiBError(ByVal sts As Integer, ByVal msg As String)
    Dim wrn As String
    Dim ers As String
    Dim ern As Integer

    If (sts And TIMO) Then
        wrn = "Time out" + Chr(13)
    Else
        wrn = ""
    End If
    If (sts And EERR) Then
        ern = iberr
        If (ern = EDVR) Then
            ers = "EDVR:System error"
        ElseIf (ern = ECIC) Then
            ers = "ECIC:Function requires GPiB board to be CIC"
        ElseIf (ern = ENOL) Then
            ers = "ENOL:No Listeners on the GPiB"
        ElseIf (ern = EADR) Then
            ers = "EADR:GPiB board not addressed correctly"
        ElseIf (ern = EARG) Then
            ers = "EARG:Invalid argument to function call"
        ElseIf (ern = ESAC) Then
            ers = "ESAC:GPiB board not System Controller as required"
        End If
    End If

```


7.3 Initialize/Error/Execute

```
ElseIf (ern = EABO) Then
    ers = "EABO:I/O operation aborted(timeout)"
ElseIf (ern = ENEB) Then
    ers = "ENEB:Nonexistent GPIB board"
ElseIf (ern = EDMA) Then
    ers = "EDMA:DMA error"
ElseIf (ern = EOIP) Then
    ers = "EOIP:I/O operation started before previous operation completed"
ElseIf (ern = ECAP) Then
    ers = "ECAP:No capability for intended operation"
ElseIf (ern = EFSO) Then
    ers = "EFSO:File system operation error"
ElseIf (ern = EBUS) Then
    ers = "EBUS:GPIB bus error"
ElseIf (ern = ESTB) Then
    ers = "ESTB:Serial poll status byte queue overflow"
ElseIf (ern = ESRQ) Then
    ers = "ESRQ:SRQ remains asserted"
ElseIf (ern = ETAB) Then
    ers = "ETAB:The return buffer is full"
ElseIf (ern = ELCK) Then
    ers = "ELCK:Address or board is locked"
Else
    ers = ""
End If
Else
    ers = ""
End If

MsgBox ("Status No. " + Str(sts) + Chr(13) + wrn + "Error No. " + Str(ern) + Chr(13)
+ ers + Chr(13) + msg), vbExclamation, "Error!"
Call ibonl(Dev, 0)
Dev = -1
End Sub
```

```
Private Sub DisplayRS232Error(ByVal erm As String, Optional ByVal msg As String = "")
    MsgBox (erm + Chr(13) + msg), vbExclamation, "Error!"
End Sub
```

```
Private Sub Command1_Click()
    Dim sts As Integer

    If (StartFlag = 1) Then
        Exit Sub
    End If
    StartFlag = 1
    Text1.Text = "START"
    List1.Clear
    Dummy = DoEvents()
    sts = GpibTdiv                                     'Run Sample1(GPIB) Set/Get TDIV
    If (sts = 0) Then
        List1.AddItem Query(0)
    End If
    Text1.Text = "END"
    StartFlag = 0
End Sub
```

```
Private Sub Command2_Click()
    Dim sts As Integer

    If (StartFlag = 1) Then
        Exit Sub
    End If
    StartFlag = 1
    Text1.Text = "START"
    List1.Clear
    Dummy = DoEvents()
    sts = GpibGetWord                                 'Run Sample2(GPIB) Get Word Data
    If (sts = 0) Then
        List1.AddItem "END"
    End If
    Text1.Text = "END"
    StartFlag = 0
End Sub
```

```
Private Sub Command3_Click()
    Dim sts As Integer

    If (StartFlag = 1) Then
        Exit Sub
    End If
    StartFlag = 1
    Text1.Text = "START"
    List1.Clear
    Dummy = DoEvents()
    sts = GpibGetMeasure                               'Run Sample3(GPIB) Get Measure
    If (sts = 0) Then
        List1.AddItem Query(0)
        List1.AddItem Query(1)
        List1.AddItem Query(2)
    End If
End Sub
```

```

Text1.Text = "END"
StartFlag = 0
End Sub

```

```

Private Sub Command4_Click()
Dim sts As Integer

If (StartFlag = 1) Then
Exit Sub
End If
StartFlag = 1
Text1.Text = "START"
List1.Clear
sts = RS232Tdiv 'Run Sample4(RS232) Set/Get TDIV
If (sts = 0) Then
List1.AddItem Query(0)
End If
Text1.Text = "END"
StartFlag = 0
End Sub

```

```

Private Sub Command5_Click()
Dim sts As Integer

If (StartFlag = 1) Then
Exit Sub
End If
StartFlag = 1
Text1.Text = "START"
List1.Clear
sts = RS232GetWord 'Run Sample5(RS232) Get Word Data
If (sts = 0) Then
List1.AddItem "END"
End If
Text1.Text = "END"
StartFlag = 0
End Sub

```

```

Private Sub Form_Load()

StartFlag = 0 'Clear Start Flag
Dev = -1 'Clear device id
Addr = 1 'GPiB Address = 1
Timer1.Interval = 0
Command1.Caption = "Sample1(GPiB)" + Chr(13) + "Set/Get TDIV"
Command2.Caption = "Sample2(GPiB)" + Chr(13) + "Get Word Data"
Command3.Caption = "Sample3(GPiB)" + Chr(13) + "Get Measure"
Command4.Caption = "Sample4(RS232)" + Chr(13) + "Set/Get TDIV"
Command5.Caption = "Sample5(RS232)" + Chr(13) + "Get Word Data"
Text1.Text = ""
End Sub

```

```

Private Sub MSComm1_OnComm()
Dim evt As Integer

evt = MSComm1.CommEvent
Select Case evt
'Error
Case comBreak
Call DisplayRS232Error("comBreak:Break received")
Case comCDTO
Call DisplayRS232Error("comCDTO CD(RLSD) timeout")
Case comCTSTO
Call DisplayRS232Error("comCTSTO:CTS timeout")
Case comDSRTO
Call DisplayRS232Error("commDSRTO:DSR timeout")
Case comFrame
Call DisplayRS232Error("comFrame:Frame error")
Case comOverrun
Call DisplayRS232Error("comOverrun:Overrun")
Case comRxOver
Call DisplayRS232Error("comRxOver:Receive buffer overflow")
Case comRxParity
Call DisplayRS232Error("commRxParity:Parity error")
Case comTxFull
Call DisplayRS232Error("comTxFull:Send buffer overflow")
'Event
Case comEvReceive
Case comEvCD
Case comEvCTS
Case comEvDSR
Case comEvRing
Case comEvSend
End Select
End Sub

```

```

Private Sub Timer1_Timer()
TimerCount = TimerCount + 1
End Sub

```

7.4 Sets/Queries the T/Div

Sample1(GPIB) Set/Get TDIV

```

Private Function GpibTdiv() As Integer
    Dim msg As String
    Dim qry As String
    Dim sts As Integer

    'Command buffer
    'Query biffer

    msg = Space$(100)
    qry = Space$(100)

    sts = InitGpib
    'Initialize GPIB
    If (sts <> 0) Then
        GpibTdiv = 1
        Exit Function
    End If

    msg = "TIMEBASE:TDIV 2ms" + Term
    'Set T/div = 2ms
    sts = ilwrt(Dev, msg, Len(msg))
    'Send Command
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibTdiv = 1
        Exit Function
    End If

    msg = "TIMEBASE:TDIV?" + Term
    'Get T/div value
    sts = ilwrt(Dev, msg, Len(msg))
    'Send Command
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibTdiv = 1
        Exit Function
    End If

    sts = ilrd(Dev, qry, Len(qry))
    'Receive Query
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibTdiv = 1
        Exit Function
    End If
    Query(0) = Left(qry, ibcntl - 1)
    Call ibonl(Dev, 0)
    GpibTdiv = 0
End Function

```

Sample4(RS232) Set/Get TDIV

```

Private Function RS232Tdiv() As Integer
    Dim msg As String
    Dim qry As String
    Dim sts As Integer

    'Command buffer
    'Query biffer

    msg = Space$(100)
    qry = CStr(Empty)

    sts = InitSerial
    'Initialize RS232
    If (sts <> 0) Then
        Exit Function
    End If

    MSComm1.InputLen = 0
    MSComm1.InputMode = comInputModeText
    MSComm1.PortOpen = True
    MSComm1.OutBufferCount = 0
    MSComm1.InBufferCount = 0
    Timer1.Interval = 1000
    'Receive All Data
    'Text Mode
    'Port Open
    'Out Buffer Clear
    'In Buffer Clear

    If CtsFlag = 1 Then
        TimerCount = 1
        'If CTS = FALSE
        'Wait until CTS = TRUE
        Do
            Dummy = DoEvents()
            If (TimerCount >= Timeout) Then
                Call DisplayRS232Error("CTS Timeout")
                RS232Tdiv = 1
                GoTo finish
            End If
        Loop Until MSComm1.CTSHolding = True
    End If

    msg = "TIMEBASE:TDIV 2ms" + Term
    'Set T/div = 2ms
    MSComm1.Output = msg
    'Send Command

    TimerCount = 1
    'Wait until OutBufferCount = 0
    Do
        Dummy = DoEvents()
        If (TimerCount >= Timeout) Then
            Call DisplayRS232Error("Send Timeout", msg)
            RS232Tdiv = 1
            GoTo finish
        End If
    End If

```

```

Loop Until MSComm1.OutBufferCount = 0

msg = "TIMEBASE:TDIV?" + Term           'Get T/div value
MSComm1.Output = msg                    'Send Command

TimerCount = 1
Do                                     'Wait until OutBufferCount = 0
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
    RS232Tdiv = 1
    GoTo finish
  End If
Loop Until MSComm1.OutBufferCount = 0


TimerCount = 1
Do                                     'Receive Query
  qry = qry + MSComm1.Input             'Wait until End Data = Terminator
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Receive Timeout", msg)
    RS232Tdiv = 1
    GoTo finish
  End If
Loop Until Right$(qry, 1) = Term

Query(0) = Left$(qry, Len(qry) - 1)
RS232Tdiv = 0
finish:
MSComm1.PortOpen = False               'Port Close
Timer1.Interval = 0

End Function


```

GP-IB

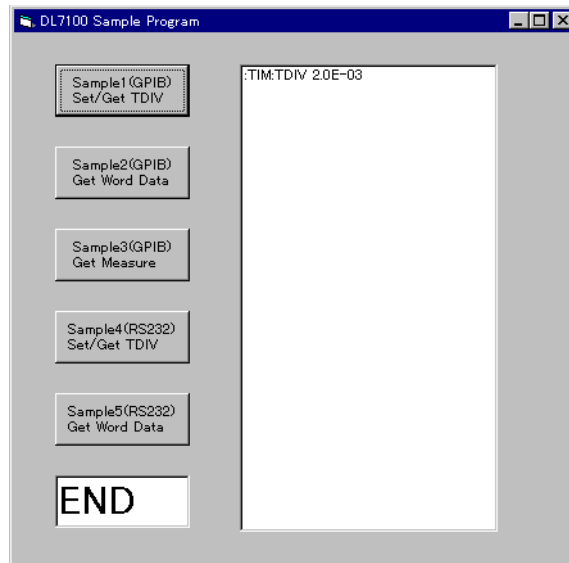

7.4 Sets/Queries the T/Div

RS-232

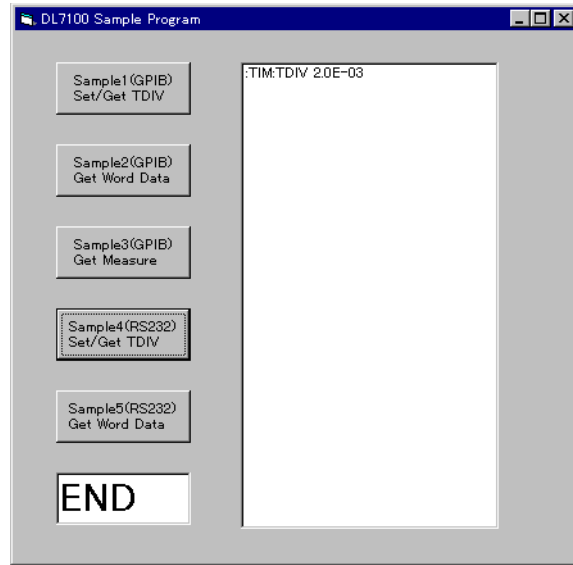

7.5 Data Output in Word Format

Sample2(GPIB) Get Word Data

```

Private Function GpibGetWord() As Integer
    Dim msg As String           'Command buffer
    Dim qry As String           'Query biffer
    Dim sts As Integer
    Dim vdv As Variant          'Vdiv value
    Dim ofs As Variant          'Offset value
    Dim eos As Integer          'EOS
    Dim hlg As Integer          'Block Header Length
    Dim dlq As Integer          'Block Data Length
    Dim dat As Variant          'Data
    Dim i As Integer

    msg = Space$(100)
    qry = Space$(100)

    sts = InitGpib              'Initialize GPIB
    If (sts <> 0) Then
        GpibGetWord = 1
        Exit Function
    End If

    msg = "STOP" + Term         'Stop Acquisition
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "COMMUNICATE:HEADER OFF" + Term 'Query Header Off(for Get V/div)
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "WAVEFORM:TRACE 1" + Term     'Trace = 1
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "WAVEFORM:RECORD 0" + Term    'Record number = 0
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "WAVEFORM:FORMAT WORD" + Term  'Data Format = WORD
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "WAVEFORM:BYTEORDER LSBFIRST" + Term 'Data Byte order = LSB First(for
Little Endian)
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "WAVEFORM:START 0;END 1001" + Term 'START 0,END 1001(Length = 1002)
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    msg = "WAVEFORM:RANGE?" + Term       'Get V/div value
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    sts = ilrd(Dev, qry, Len(qry))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetWord = 1
        Exit Function
    End If

    vdv = Val(qry)
    msg = "WAVEFORM:OFFSET?" + Term      'Get Offset value

```

7.5 Data Output in Word Format

```
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
ofs = Val(qry)

eos = 0
sts = ileos(Dev, eos)                                'Terminator = None(for Binary Data)
If (sts < 0) Then
  Call DisplayGPIBError(sts, "ileos")
  GpibGetWord = 1
  Exit Function
End If
msg = "WAVEFORM:SEND?" + Term                        'Receive Waveform Data
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
sts = ilrd(Dev, qry, 2)                              'Receive "#X"
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
hlg = Val(Mid$(qry, 2, 1))                            'Receive Block Header
sts = ilrd(Dev, qry, hlg)
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
dlg = Val(Left$(qry, hlg))                            'dlg = Data Byte Length
sts = ilrdi(Dev, WaveBuffer(), dlg + 1)               'Receive Waveform Data + LF
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
For i = 0 To (dlg / 2 - 1) Step 1
  dat = WaveBuffer(i) * vdv / 3072 + ofs
  List1.AddItem CStr(i) + ":" + CStr(dat)
Next i

eos = &HC0A
sts = ileos(Dev, eos)                                'Terminator = LF
If (sts < 0) Then
  Call DisplayGPIBError(sts, "ileos")
  GpibGetWord = 1
  Exit Function
End If
msg = "COMMUNICATE:HEADER ON" + Term                 'Query Header On
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetWord = 1
  Exit Function
End If
Call ibonl(Dev, 0)
GpibGetWord = 0
End Function
```

Sample5(RS232) Get Word Data

```

Private Function RS232GetWord() As Integer
    Dim msg As String           'Command buffer
    Dim qry As String           'Query biffer
    Dim sts As Integer
    Dim vdv As Variant          'V/div value
    Dim ofs As Variant          'Offset value
    Dim hlg As Integer          'Block Header Length
    Dim dlq As Integer          'Block Data Length
    Dim buf As Variant          'temporary buffer
    Dim dat As Variant          'data buffer
    Dim i As Integer

    msg = Space$(100)
    qry = CStr(Empty)

    sts = InitSerial            'Initialize RS232
    If (sts <> 0) Then
        Exit Function
    End If

    MSComm1.InputLen = 0        'Receive All Data
    MSComm1.InputMode = comInputModeText 'Text Mode
    MSComm1.PortOpen = True    'Port Open
    MSComm1.OutBufferCount = 0 'Out Buffer Clear
    MSComm1.InBufferCount = 0  'In Buffer Clear
    Timer1.Interval = 1000

    If CtsFlag = 1 Then         'If CTS = FALSE
        TimerCount = 1          'Wait until CTS = TRUE
        Do
            Dummy = DoEvents()
            If (TimerCount >= Timeout) Then
                Call DisplayRS232Error("CTS Timeout")
                RS232GetWord = 1
                GoTo finish
            End If
        Loop Until MSComm1.CTSHolding = True
    End If

    msg = "STOP" + Term        'Stop Acquisition
    MSComm1.Output = msg
    TimerCount = 1
    Do
        Dummy = DoEvents()
        If (TimerCount >= Timeout) Then
            Call DisplayRS232Error("Send Timeout", msg)
            RS232GetWord = 1
            GoTo finish
        End If
    Loop Until MSComm1.OutBufferCount = 0

    msg = "COMMUNICATE:HEADER OFF" + Term 'Query Header Off(for Get V/div)
    MSComm1.Output = msg
    TimerCount = 1
    Do
        Dummy = DoEvents()
        If (TimerCount >= Timeout) Then
            Call DisplayRS232Error("Send Timeout", msg)
            RS232GetWord = 1
            GoTo finish
        End If
    Loop Until MSComm1.OutBufferCount = 0

    msg = "WAVEFORM:TRACE 1" + Term      'Trace = 1
    MSComm1.Output = msg
    TimerCount = 1
    Do
        Dummy = DoEvents()
        If (TimerCount >= Timeout) Then
            Call DisplayRS232Error("Send Timeout", msg)
            RS232GetWord = 1
            GoTo finish
        End If
    Loop Until MSComm1.OutBufferCount = 0

    msg = "WAVEFORM:RECORD 0" + Term     'Record number = 0
    MSComm1.Output = msg
    TimerCount = 1
    Do
        Dummy = DoEvents()
        If (TimerCount >= Timeout) Then
            Call DisplayRS232Error("Send Timeout", msg)
            RS232GetWord = 1
            GoTo finish
        End If
    Loop Until MSComm1.OutBufferCount = 0

    msg = "WAVEFORM:FORMAT WORD" + Term 'Data Format = WORD
    MSComm1.Output = msg

```


7.5 Data Output in Word Format

```
TimerCount = 1
Do
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until MSComm1.OutBufferCount = 0

msg = "WAVEFORM:BYTEORDER LSBFIRST" + Term      'Data Byte order = LSB First(for
Little Endian)
MSComm1.Output = msg
TimerCount = 1
Do
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until MSComm1.OutBufferCount = 0

msg = "WAVEFORM:START 0;END 1001" + Term      'START 0,END 1001(Length = 1002)
MSComm1.Output = msg
TimerCount = 1
Do
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until MSComm1.OutBufferCount = 0

qry = CStr(Empty)
msg = "WAVEFORM:RANGE?" + Term                'Get V/div value
MSComm1.Output = msg
TimerCount = 1
Do
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until MSComm1.OutBufferCount = 0
TimerCount = 1
Do
  qry = qry + MSComm1.Input
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Receive Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until Right$(qry, 1) = Term
vdv = Val(qry)

qry = CStr(Empty)
msg = "WAVEFORM:OFFSET?" + Term                'Get Offset value
MSComm1.Output = msg
TimerCount = 1
Do
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until MSComm1.OutBufferCount = 0
TimerCount = 1
Do
  qry = qry + MSComm1.Input
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Receive Timeout", msg)
    RS232GetWord = 1
    GoTo finish
  End If
Loop Until Right$(qry, 1) = Term
ofs = Val(qry)

msg = "WAVEFORM:SEND?" + Term                  'Receive Waveform Data
MSComm1.Output = msg

TimerCount = 1
Do
  Dummy = DoEvents()
  If (TimerCount >= Timeout) Then
    Call DisplayRS232Error("Send Timeout", msg)
```

```

        RS232GetWord = 1
        GoTo finish
    End If
Loop Until MSComm1.OutBufferCount = 0

MSComm1.InputLen = 2           'Receive "#X"
TimerCount = 1
Do Until MSComm1.InBufferCount >= 1
    Dummy = DoEvents()
    If (TimerCount >= Timeout) Then
        Call DisplayRS232Error("Receive Timeout", msg)
        RS232GetWord = 1
        GoTo finish
    End If
Loop
qry = MSComm1.Input
hlg = Val(Mid$(qry, 2, 1))

MSComm1.InputLen = hlg       'Receive Block Header
TimerCount = 1
Do Until MSComm1.InBufferCount >= hlg
    Dummy = DoEvents()
    If (TimerCount >= Timeout) Then
        Call DisplayRS232Error("Receive Timeout", msg)
        RS232GetWord = 1
        GoTo finish
    End If
Loop
qry = MSComm1.Input
dlg = Val(Left$(qry, hlg))   'leng% = Data Byte Length

MSComm1.InputMode = comInputModeBinary
MSComm1.InputLen = 2       'Receive Waveform Data(2 Byte)

For i = 0 To (dlg / 2 - 1) Step 1   'Loop(dlg)
    TimerCount = 1
    Do Until MSComm1.InBufferCount >= 2
        Dummy = DoEvents()
        If (TimerCount >= Timeout) Then
            Call DisplayRS232Error("Receive Timeout", msg)
            RS232GetWord = 1
            GoTo finish
        End If
    Loop
    buf = MSComm1.Input           'Receive 1 Data(2 Byte)
    dat = buf(1) * 256 + buf(0)
    If (dat > 32767) Then
        dat = dat - 65536
    End If
    dat = dat * vdv / 3072 + ofs
    List1.AddItem CStr(i) + ":" + CStr(dat)
Next i

msg = "COMMUNICATE:HEADER ON" + Term   'Query Header On
MSComm1.Output = msg
TimerCount = 1
Do
    Dummy = DoEvents()
    If (TimerCount >= Timeout) Then
        Call DisplayRS232Error("Send Timeout", msg)
        RS232GetWord = 1
        GoTo finish
    End If
Loop Until MSComm1.OutBufferCount = 0


RS232GetWord = 0
finish:
MSComm1.PortOpen = False           'Port Close
Timer1.Interval = 0

End Function


```

7.5 Data Output in Word Format

GP-IB

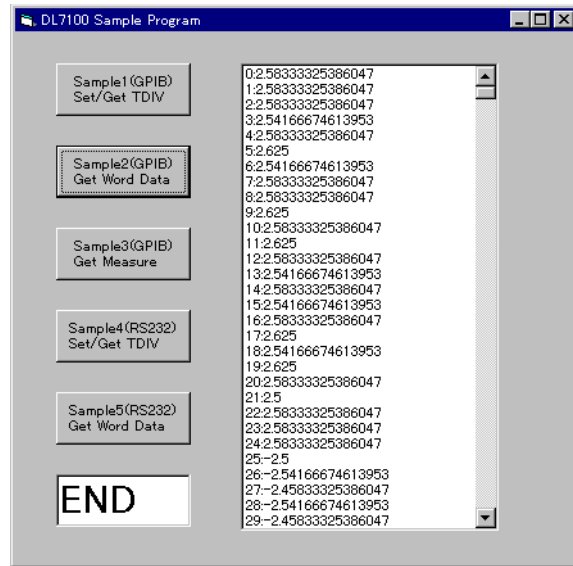

RS-232

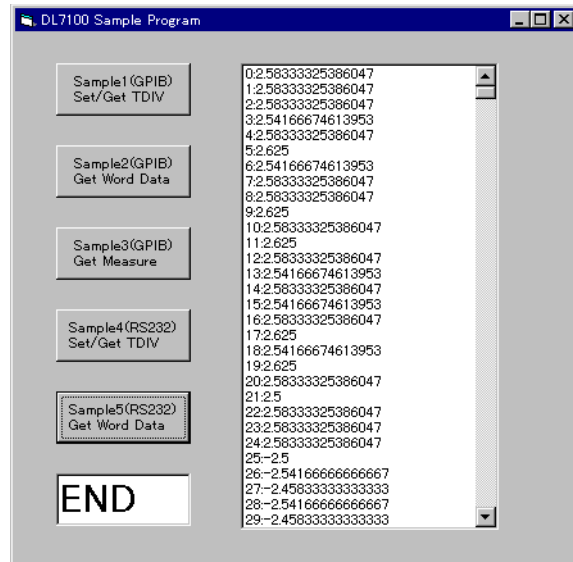

7.6 Sets/Queries Measure Value

Sample3(GPIB) Get Measure value

```

Private Function GpibGetMeasure() As Integer
    Dim msg As String
    Dim qry As String
    Dim sts As Integer

    msg = Space$(100)
    qry = Space$(100)

    sts = InitGpib
    If (sts <> 0) Then
        GpibGetMeasure = 1
        Exit Function
    End If

    msg = "STOP" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "COMMUNICATE:HEADER OFF" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "MEASURE:MODE OFF" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "TRIGGER:MODE SINGLE;;STOP" + Term
    Acquisition = Stop
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "STATUS:FILTER1 FALL" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "CHANNEL:DISPLAY ON" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "CHANNEL:PROBE 10" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "CHANNEL:VDIV 500mV" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "ACQUIRE:MODE NORMAL;RLENGTH 1000" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If
    msg = "TIMEBASE:TDIV 100ms" + Term
    sts = ilwrt(Dev, msg, Len(msg))
    If (sts < 0) Then
        Call DisplayGPIBError(sts, msg)
        GpibGetMeasure = 1
        Exit Function
    End If

```

7.6 Sets/Queries Measure Value

```
msg = "TRIGGER:SIMPLE:LEVEL 500mV" + Term      'Trigger level = 500mV
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "MEASURE:CHANNEL1:PTOPEAK:STATE ON" + Term
                                                    'Measure P-P On
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "MEASURE:CHANNEL1:AVERAGE:STATE ON" + Term
                                                    'Measure Average On
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "MEASURE:CHANNEL1:FREQUENCY:STATE ON" + Term
                                                    'Measure Frequency On
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "MEASURE:TRANGE -5,5" + Term              'Measure Time Range -5,5
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "STATUS:EESR?" + Term                    'Clear Extended Event Register
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If

msg = "START" + Term                          'Start Acquisition(Single)
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "COMMUNICATE:WAIT? 1" + Term            'Wait until stop Acquisition
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If

msg = "MEASURE:MODE ON" + Term                'Start Measure
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
msg = "MEASURE:WAIT? 100" + Term              'Wait until stop Measure
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
    Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
    Call DisplayGPIBError(sts, msg)
    GpibGetMeasure = 1
```

```

Exit Function
End If


msg = "MEASURE:CHANNEL1:PTOPEAK:VALUE?" + Term 'Get P-P value
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
Query(0) = "Peak To Peak:" + Left$(qry, ibcntl - 1)

msg = "MEASURE:CHANNEL1:AVERAGE:VALUE?" + Term 'Get Average value
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
Query(1) = "Average:" + Left$(qry, ibcntl - 1)

msg = "MEASURE:CHANNEL1:FREQUENCY:VALUE?" + Term 'Get Freq value
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
sts = ilrd(Dev, qry, Len(qry))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
Query(2) = "Frequency:" + Left$(qry, ibcntl - 1)

msg = "COMMUNICATE:HEADER ON" + Term 'Query Header On
sts = ilwrt(Dev, msg, Len(msg))
If (sts < 0) Then
  Call DisplayGPIBError(sts, msg)
  GpibGetMeasure = 1
  Exit Function
End If
Call ibonl(Dev, 0)
GpibGetMeasure = 0
End Function

```

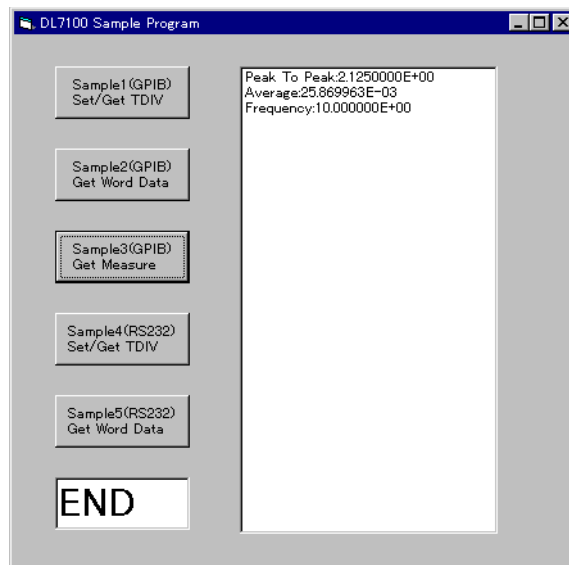


Appendix

Appendix 1 ASCII Character Code

ASCII character codes are given below.

	0	1	2	3	4	5	6	7
0	0 NUL	20 DEL	40 SP	60 0	100 @	120 P	140 ,	160 p
1	1 SOH	21 DC1	41 !	61 1	101 A	121 Q	141 a	161 q
2	2 STX	22 DC2	42 "	62 2	102 B	122 R	142 b	162 r
3	3 ETX	23 DC3	43 #	63 3	103 C	123 S	143 c	163 s
4	4 EOT	24 DC4	44 \$	64 4	104 D	124 T	144 d	164 t
5	5 ENQ	25 NAK	45 %	65 5	105 E	125 U	145 e	165 u
6	6 ACK	26 SYN	46 &	66 6	106 F	126 V	146 f	166 v
7	7 BEL	27 ETB	47 ,	67 7	107 G	127 W	147 g	167 w
8	10 BS	30 CAN	50 (70 8	110 H	130 X	150 h	170 x
9	11 HT	31 EM	51)	71 9	111 I	131 Y	151 i	171 y
A	12 LF	32 SUB	52 *	72 :	112 J	132 Z	152 j	172 z
B	13 VT	33 ESC	53 +	73 ;	113 K	133 [153 k	173 {
C	14 FF	34 FS	54 ,	74 <	114 L	134 \	154 l	174
D	15 CR	35 GS	55 -	75 =	115 M	135]	155 m	175 }
E	16 SO	36 RS	56 .	76 >	116 N	136 ^	156 n	176 ~
F	17 SI	37 US	57 /	77 ?	117 O	137 _	157 o	177 DEL (RUBOUT)
	Address Command	Universal Command	Listener Address		Talker Address		Secondary Command	

 Example



Appendix 2 Error Messages

Error messages related to communications are given below.

- The instrument allows error messages to be displayed in either Japanese or English, however, they are shown only in English when they are displayed on a personal computer.
- When servicing is required, contact your nearest YOKOGAWA representative, given on the back cover of this manual.
- Only error messages relating to communications are given. For other error messages, refer to the User's Manual IM 701410-01E.

Errors in communication command (100 to 199)

Code	Message	Action	Reference Page
102	Syntax error	Incorrect syntax.	Chapter 4 , 5
103	Invalid separator	Insert a comma between data items to separate them.	4-1
104	Data type error	Refer to pages 4-5 to 4-6 and enter using the correct data format.	4-5 to 4-6
105	GET not allowed	GET is not supported as response to an interface message.	1-9
108	Parameter not allowed	Check the number of parameters.	4-5, Chapter 5
109	Missing parameter	Enter required parameters.	4-5, Chapter 5
111	Header separator error	Insert a space between header and data to separate them.	4-1
112	Program mnemonic too long	Check the mnemonic (a character string consisting of letters and numbers).	Chapter 5
113	Undefined header	Check the header.	Chapter 5
114	Header suffix out of range	Check the header.	Chapter 5
120	Numeric data error	Numeric value must be entered for <NRf> format.	4-5
123	Exponent too large	Use a smaller exponent for <NR3> format.	4-5, Chapter 5
124	Too many digits	Limit the number of digits to 255 or less.	4-5, Chapter 5
128	Numeric data not allowed	Enter in a format other than <NRf> format.	4-5, Chapter 5
131	Invalid suffix	Check the unit for <Voltage>, <Time> and <Frequency>.	4-5
134	Suffix too long	Check the units for <Voltage>, <Time> and <Frequency>.	4-5
138	Suffix not allowed	No units are allowed other than <Voltage>, <Time> and <Frequency>.	4-5
141	Invalid character data	Enter one of the character strings in {...}.	Chapter 5
144	Character data too long	Check the character strings in {...}.	Chapter 5
148	Character data not allowed	Enter in a format other than in {...}.	Chapter 5
150	String data error	<Character string> must be enclosed by double quotation marks or single quotation marks.	4-6
151	Invalid string data	<Character string> is too long or contains characters which cannot be used.	Chapter 5
158	String data not allowed	Enter in a data format other than <Character string>.	Chapter 5
161	Invalid block data	<Block data> is not allowed.	4-6, Chapter 5
168	Block data not allowed	<Block data> is not allowed.	4-6, Chapter 5
171	Invalid expression	Equation is not allowed.	Chapter 5
178	Expression data not allowed	Equation is not allowed.	Chapter 5
181	Invalid outside macro definition	Does not conform to the macro function specified in IEEE488.2. —	

Error in communications execution (200 to 299)

Code	Message	Action	Reference Page
221	Setting conflict	Check the relevant setting.	Chapter 5
222	Data out of range	Check the setting range.	Chapter 5
223	Too much data	Check the data byte length.	Chapter 5
224	Illegal parameter value	Check the setting range.	Chapter 5
241	Hardware missing	Check availability of options.	—
260	Expression error	Equation is not allowed.	—
270	Macro error	Does not conform to the macro function specified in IEEE488.2.	—
272	Macro execution error	Does not conform to the macro function specified in IEEE488.2.	—
273	Illegal macro label	Does not conform to the macro function specified in IEEE488.2.	—
275	Macro definition too long	Does not conform to the macro function specified in IEEE488.2.	—
276	Macro recursion error	Does not conform to the macro function specified in IEEE488.2.	—
277	Macro redefinition not allowed	Does not conform to the macro function specified in IEEE488.2.	—
278	Macro header not found	Does not conform to the macro function specified in IEEE488.2.	—

Error in communications Query (400 to 499)

Code	Message	Action	Reference Page
410	Query INTERRUPTED	Check transmission/reception order.	4-2
420	Query UNTERMINATED	Check transmission/reception order.	4-2
430	Query DEADLOCKED	Limit the length of the program message including <PMT> to 1024 bytes or less.	4-2
440	Query UNTERMINATED after	Do not enter any query after *IDN? and *OPT?. indefinite response	—

Error in System Operation (912 to 914)

Code	Message	Action	Reference Page
912	Fatal error in Communication-driver	Servicing is required.	—
914	Time out occurs in Communication	Receive data within time-out time. The communications line may be faulty.	—
915	Can't detect listener	Check GP-IB connector Place the plotter or AG in listen-only mode then connect it.	—

Warning

Code	Message	Action	Reference Page
5	*0PC/? exists in message	Place the *0PC or *0PC? at the end of the program message.	—

Other errors (350 and 390)

Code	Message	Action	Reference Page
350	Queue overflow	Read the error queue. Code 350 occurs when the error queue is full up. This message is output only for the STATus:ERRor? query and is not displayed on the screen.	6-5
390	Overrun error (only RS-232)	Execute with a lower baud rate.	—

Note

Code 350 indicates overflow of error queue. This code is returned as a response to the "STATus:ERRor?" query; it does not appear on the screen.

Appendix 3 Overview of IEEE 488.2-1992

The GP-IB interface provided with DL7100/DL7200 conforms to IEEE 488.2-1992. This standard requires the following 23 points be stated in this document. This Appendix describes these points.

- 1 Subsets supported by IEEE 488.1 interface functions**
Refer to Section 1.4 "GP-IB Interface Specifications".
- 2 Operation of device when the device is assigned to an address other than addresses 0 to 30.**
The DL7100 does not allow assignment to an address other than 0 to 30.
- 3 Reaction when the user changes the address**
The current address is changed when a new address is set using the MISC key. The newly set address is valid until another new address is set.
- 4 Device set-up at power ON. Commands which can be used at power ON**
Basically, the previous settings (i.e. the settings which were valid when power was turned OFF) are valid. All commands are available at power ON.
- 5 Message transmission options**
 - a Input buffer size**
1024 bytes
 - b Queries which return multiple response messages**
Refer to Chapter 5, "Command List".
 - c Queries which generate response data during analysis of the syntax**
Every query generates a response data when analysis of the syntax is completed.
 - d Queries which generate response data during reception**
No query generates response data when the query is received by the controller.
 - e Commands consisting of parameters which restrict one other**
Some commands, like the CHANneL<x>:VOLTage:PROBe and VDIV, have parameters which restrict unilaterally, but no commands have parameters which restrict bilaterally.
- 6 Options included in command function elements and composite header elements**
Refer to Chapters 4 and 5.
- 7 Buffer size which affects transmission of block data**
During transmission of block data, the output queue is extended according to the size of the data blocks.
- 8 List of program data elements which can be used in equations, and nesting limit**
No equations can be used.
- 9 Syntax of response to queries**
Refer to the description of the commands given in Chapter 5.
- 10 Communications between devices which do not follow the response syntax**
Not supported.

- 11 Size of data block of response data**
1 to 16032000 bytes
- 12 List of supported common commands**
Refer to Section 5.33 "Common Command Group".
- 13 Condition of device when calibration is successfully completed**
Same as the one under which measurements are performed
- 14 Maximum length of block data which can be used for definition of *DDT trigger macro**
Not supported
- 15 Maximum length of macro label used in definition of macro, maximum length of block data which can be used for definition of macro, processing when recursion is used in definition of macro**
Macro functions are not supported.
- 16 Response to *IDN?**
Refer to Section 5.33 "Common Command Group".
- 17 Size of storage area for protected user data for PUD and *PUD?**
*PUD and *PUD? are not supported.
- 18 Length of *RDT and *RDT? resource name**
*RDT and *RDT? are not supported.
- 19 Change in status due to *RST, *LRN?, *RCL and *SAV**
*RST, *LRN?
Refer to Section 5.33 "Common Command Group".
*RCL, *SAV
These commands are not supported.
- 20 Execution range of self-test using the *TST?**
All the memory tests (for each internal memory) given in the Self Test menu displayed using the MISC key can be executed.
- 21 Structure of extended return status**
Refer to Chapter 6.
- 22 To find out whether each command is performed in parallel or sequentially**
Refer to Section 4.5 "Synchronization with the Controller" and to Chapter 5.
- 23 Description of execution of each command**
Refer to Chapter 5 of this manual and to the User's Manual IM 701410-01E.

Index

Symbols

*OPC command	4-8
*OPC? query	4-9
*WAI command	4-8

A

A Delay B trigger	5-105
AÆB (n) trigger	5-104
abbreviated form	4-5
accumulation	5-36
ACQuire group	5-15
action on trigger	5-104
address	1-6
address command	1-8
angle cursor	5-27
ASETup group	5-16
auto calibration	5-17
auto-setup	5-16
automatic measurement of waveform parameters	5-71
averaging	5-15

B

backlight	5-98
baud rate	2-8
binary computation	5-67
bit length of the waveform data	5-113
Block data	4-7
brightness of the screen	5-98

C

CALibrate group	5-17
calibration	5-17
CHANnel group	5-18
character data	4-6
Character string	4-7
CLear group	5-20
click sound	5-97
Common Command Group	5-120
common command header	4-3
COMMunicate group	5-21
COMMunicate:OVERlap command	4-8
COMMunicate:WAIT command	4-10
compound header	4-3
condition filter	6-1
condition register	5-94, 6-4

connection example	2-4
connection method	1-2
connection procedure	3-4
connector	2-3
continuous action (GO/NO-GO)	5-49
current path	5-42
cursor (X-Y display)	5-31
CURSor group	5-24

D

data	4-5
data bit	2-7
data format	2-7, 2-8
data search function	5-86
data transfer speed	3-2
date and time	5-97
DCL	1-7
dead lock	4-2
delay between waveform channels	5-73
display format	5-37
DISPlay group	5-34
display ON/OFF	5-19
distal	5-75

E

edge search	5-86
error message	App-2
error queue	6-5
extended event enable register	5-94, 6-1
extended event register	4-9, 5-94, 6-1, 6-4
external printer	5-53

F

FFT computation	5-67
FILE group	5-39
file loading	5-43
Filename	4-7
format type	5-43
front panel	1-1, 2-1, 3-1

G

GO/NO-GO determination	5-46
GONogo group	5-45
GP-IB Cable	1-2
GP-IB interface	1-5

Index

graticule 5-37
group 4-3
GTL 1-7

H

H cursor 5-28
handshaking 2-5
handshaking method 2-8
hard copying 5-54
HCOPy group 5-51
header 4-1, 4-5
HF rejection 5-109
HISTory group 5-56
history memory 5-57
hold off 5-106
hysteresis (ENHANCED) 5-110
hysteresis (SIMPLE) 5-109

I

IFC 1-7
IMAGe group 5-61
INITialize group 5-61
initializing 5-61
input coupling 5-19
input filter 5-19
inquiry about waveform data 5-115
integration 5-67
interface message 1-7
interleave mode 5-16
interpolation method 5-38

L

linear scaling 5-19
listener function 1-4
lithium battery 5-97
LLO 1-7
loading data 5-43
local 1-4, 2-2, 3-2
local lockout 5-21
LOGic group 5-62
logic probe 5-64
logic trigger 5-106
long copy 5-54

M

manual scaling 5-68
mapping mode 5-38
marker cursor 5-29

MATH group 5-66
MEASure group 5-69
measurement range 5-77
mesial 5-75
message 4-1
message language 5-97
mnemonic 4-3
multi-line message 1-8

N

network interface 3-2
number of waveform acquisition 5-16
number of waveform acquisition (GO/NO-GO) 5-49

O

offset voltage 5-20, 5-98
OR trigger 5-107
output of screen image data 5-53
output queue 6-5
overlap command 4-8

P

parity bit 2-7
password 3-5
pattern trigger 5-108
PHASe group 5-78
phase shift 5-78
preset function 5-80
PRESet group 5-79
probe attenuation 5-20
program data 4-1
program message 4-1
proximal 5-75
pulse width trigger 5-111

R

range (GO/NO-GO) 5-49
rear panel 1-1, 2-1, 3-1
record length 5-16
remote 1-4, 2-2, 3-2
REN 1-7
repetitive sampling mode 5-16
response data 4-2
response header 4-2
response message 4-1

S

sampling rate 5-99

saving data	5-43
scaling	5-68
scaling value	5-38
screen image data output	5-61
SCSI	5-98
SDC	1-7
search (history memory)	5-57
search condition (history memory)	5-59
search function	5-86
SEARCh group	5-82
sequential command	4-8
serial interface	2-2
serial pattern search	5-90
serial poll	6-3
serial polling	5-95
service request enable register	6-1
simple header	4-3
simple trigger	5-108
single action (GO/NO-GO)	5-49
skew compensation	5-17
smoothing	5-68
SNAP group	5-93
snapshot	5-93
SPD	1-7
SPE	1-7
SStArt Group	5-93
standard event enable register	6-1
standard event register	6-1, 6-3
start bit	2-7
STARt group	5-93
statistical processing	5-76
statistics	5-76
status byte	6-1, 6-2
status byte register	5-122
STATus group	5-94
status report	6-1
STATus:CONDition? query	4-9
stop bit	2-7
STOP group	5-95
SYStem group	5-96
T	
T/div	5-99
talker function	1-4
TCP/IP	3-5
terminator	2-8, 4-1
time base	5-16, 5-99
time out	3-5
TIMebase group	5-99
U	
transit filter	5-95, 6-1
trigger	5-104
trigger coupling (ENHANCED)	5-110
trigger coupling (SIMPLE)	5-109
trigger delay	5-106
TRIGger group	5-100
trigger level (ENHANCED)	5-110
trigger position	5-108
trigger source (ENHANCED)	5-110
trigger source (SIMPLE)	5-109
TV trigger	5-111
V	
uni-line message	1-7
unit	4-6
universal command	1-8
upper-level query	4-4
user name	3-5
user verification function	3-3
W	
V cursor	5-31
V/div	5-20
vertical position	5-20
voltage sensitivity	5-20
X	
WAVeform group	5-113
waveform label	5-19, 5-38
window trigger	5-110
Y	
X-Y display	5-116
XY group	5-116
Z	
zone search (history memory)	5-59
zoom	5-119
zoom box	5-119
ZOOM group	5-118
zoom ratio	5-119