

Part F Installation

This part of the manual is divided into the sections listed below. These sections give a brief description of the basic rack mounting and wiring procedures for the T855 receiver, T856 transmitter, T857 exciter and T858/859 power amplifiers.

Section	Title	Page
1	T855/856/857 Installation	1.1
1.1	Rack Mounting	1.1
1.2	Rack Wiring	1.2
1.3	T856/857 Non-standard D-Range Connections	1.3
1.4	Power Supply	1.3
1.5	Reverse Polarity Protection	1.3
2	T858/859 Installation	2.1
2.1	Rack Mounting	2.1
2.2	Rack Wiring	2.2
2.3	Power Supply	2.3
2.4	Reverse Polarity Protection	2.3

Figure	Title	Page
1.1	T800 Series Guide	1.1
1.2	T855/856 Chassis Connectors	1.1
1.3	T857 Chassis Connectors	1.1
1.4	T855 D-Range Wiring - Rear View	1.2
1.5	T856/857 D-Range Wiring - Rear View	1.2
2.1	T858/859 Guide	2.1
2.2	T858 Chassis Connectors	2.1
2.3	T859 Chassis Connectors	2.1
2.4	T858/859 Latched Position	2.2
2.5	T858/859 D-Range Wiring - Rear View	2.2

