

## 5 T837 Fault Finding



**Caution:** This equipment contains CMOS devices which are susceptible to damage from static charges. Refer to Section 1.2 in Part A for more information on anti-static procedures when handling these devices.

The following test procedures and fault finding flow charts may be used to help locate a hardware problem, however they are by no means a complete fault finding procedure. If you still cannot trace the fault after progressing through them in a logical manner, contact your nearest Tait Dealer or Customer Service Organisation. If necessary, you can get additional technical help from Customer Support, Radio Systems Division, Tait Electronics Ltd, Christchurch, New Zealand (full contact details are on page 2).

**Note:** Unless otherwise specified, the term "PGM800Win" used in this and following sections refers to version 2.00 and later of the software.

Refer to Section 6 where the parts lists, grid reference index and diagrams will provide detailed information on identifying and locating components and test points on the main PCB. The parts list and diagrams for the VCO PCB are in Part E.

The following topics are covered in this section:

Section	Title	Page
5.1	Visual Checks	5.3
5.2	Component Checks	5.3
5.3	Front Panel LED Indicator	5.3
5.4	DC Checks	5.4
5.4.1	Power Rails	5.4
5.4.2	VCO Locking	5.4
5.5	RF Checks	5.5
5.5.1	Output Power	5.5
5.6	PGM800Win Generated Errors	5.6
5.7	Fault Finding Charts	5.7
5.7.1	Microcontroller	5.7
5.7.1.1	Basic Checks	5.7
5.7.1.2	Serial Communications	5.8
5.7.2	Regulator	5.9
5.7.3	Synthesiser	5.10
5.7.4	Exciter Drive Amplifier	5.13

<b>Figure</b>	<b>Title</b>	<b>Page</b>
5.1	RF Diode Probe Circuit	5.5

## 5.1 Visual Checks

Remove the covers from the T837 and inspect the PCB for damaged or broken components, paying particular attention to the surface mounted devices (SMD's).

Check for defective solder joints. If repair or replacement is considered necessary, refer to Section 3 of Part A.

## 5.2 Component Checks

If you suspect a transistor is faulty, you can assess its performance by measuring the forward and reverse resistance of the junctions. Unless the device is completely desoldered, first make sure that the transistor is not shunted by some circuit resistance. Use a good quality EVM (e.g. Fluke 75) for taking the measurements (or a 20k ohm/V or better multimeter, using only the medium or low resistance ranges).

The collector current drawn by multi-junction transistors is a further guide to their performance.

If an IC is suspect, the most reliable check is to measure the DC operating voltages. Due to the catastrophic nature of most IC failures, the pin voltages will usually be markedly different from the recommended values in the presence of a fault. The recommended values can be obtained from either the circuit diagram or the component data catalogue.

## 5.3 Front Panel LED Indicator

The green "Supply" LED on the T837 front panel will flash according to the conditions described in the following table:

Flash Rate	Condition
<p style="text-align: center;">fast            - - - - - (1/3 sec. on/1/3 sec. off approx.)</p>	T837 is linked with PGM800Win
<p style="text-align: center;">unequal            - - - - - (1/3 sec. on/1 sec. off approx.)</p>	microcontroller has detected an internal communications error - refer to Section 5.7.1

Where two or more conditions occur at the same time, the precedence is in the order shown above (i.e. T837 linked has the highest priority, followed by internal error).

## 5.4 DC Checks

### 5.4.1 Power Rails

Refer to the top side PCB layout diagram in Section 6 or Figure 4.2 for test point locations, and to the regulator fault finding chart (Section 5.7.2) for fault diagnosis.

Check the 13.8V (TP601) and 9V (TP602) supplies at their test points in the regulator compartment with a DMM.

Check the 5V (TP604) and 20V (TP603) rails at their respective test points in the regulator compartment.

Check that Tx-Reg. (TP310 in the paging modulator compartment) comes up to 8.8V when the exciter is keyed.

Check the +5V digital regulator output (TP607 in the regulator compartment).

Check for short circuits.

### 5.4.2 VCO Locking

Key the exciter.

Using a DMM, monitor the VCO control voltage at PL4-1 or the junction of L1 and R1 on the VCO PCB.


If the synthesiser is locked and the VCO aligned, the voltage at this point should be between 5 and 13V.

If the VCO is not locked, refer to the synthesiser fault finding chart (Section 5.7.3).

## 5.5 RF Checks

In-circuit RF levels may be measured with an RF probe on which the earth lead has been shortened to a minimum (i.e. 13mm). Refer to the circuit diagrams for typical levels.

Figure 5.1 shows a suitable RF probe circuit.

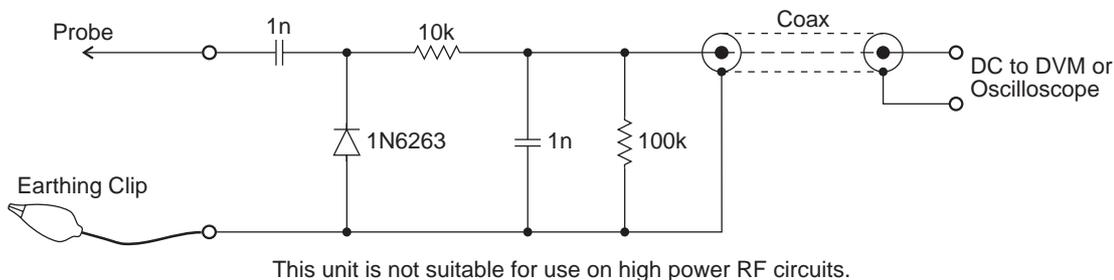

**Figure 5.1 RF Diode Probe Circuit**

### 5.5.1 Output Power

Refer to the exciter drive amplifier fault finding chart (Section 5.7.4).

Ensure that the VCO locks (refer to Section 5.4.2).

Connect the exciter output to a power meter and key the exciter.

Check that the output power is between 600 and 1000mW.

**Note:** If the synthesiser is out of lock, the lock detector (synthesiser IC740 and comparator IC750) will prevent the RF signal from reaching the PA by switching the supply to the exciter amplifier (Q340, Q345).

## 5.6 PGM800Win Generated Errors

The following errors are those most likely to occur using PGM800Win. Refer to the PGM800Win software user's manual for a complete list of error messages.

### Channel Switch Set

The programmed default channel change was not accepted by the base station because a channel is selected externally. Try turning the external channel switch off to change the default channel in PGM800Win.

### Synth Out Of Lock

The synthesiser received incorrect data, or the data was corrupted. Enter a frequency within the VCO switching range, or tune the VCO.

### Internal Error

Data could not be read from the base station due to an internal error. Check for shorts or open circuits on the SDA, SCK, SYNTH and EPOT lines. The SDA, SCK and SYNTH are normally high.

### Write/Read To An Unlinked Module

The link to the module does not exist. Undefined error.


## 5.7 Fault Finding Charts

**Note:** The standard test point designations used in this section are as follows:


TP601	13.8V
TP602	9V
TP603	20V
TP604	5V

### 5.7.1 Microcontroller (IC810)


#### 5.7.1.1 Basic Checks

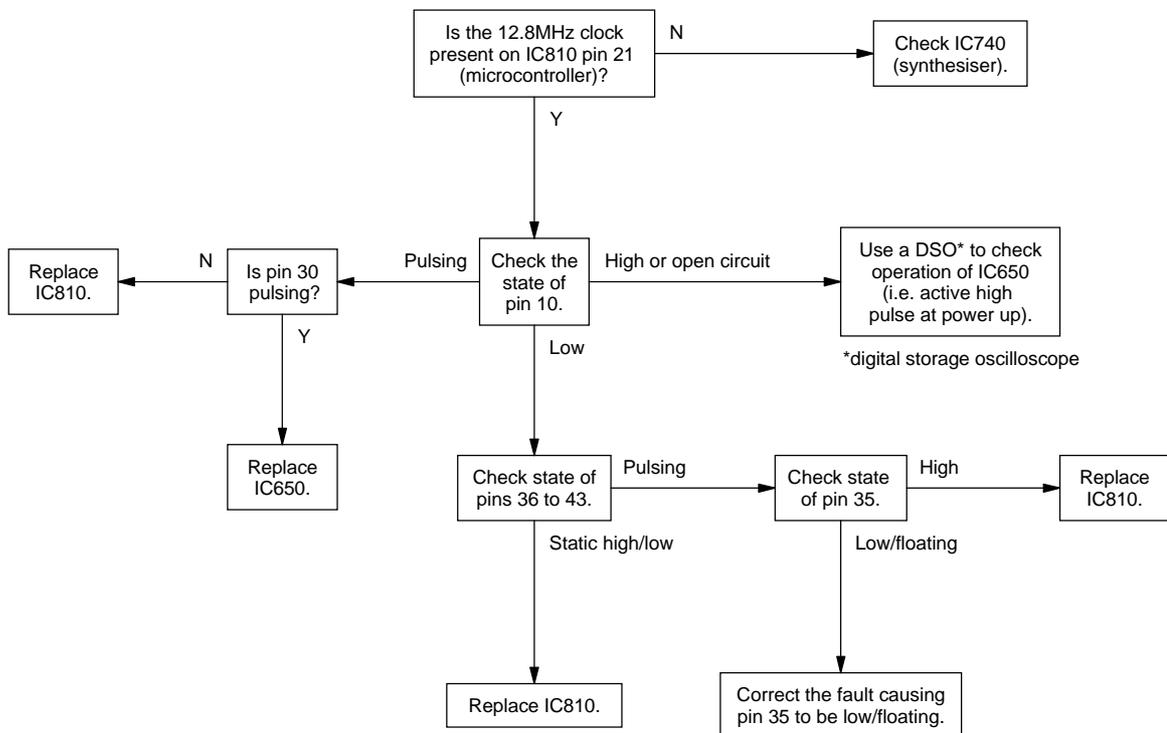

5.7.1.2 Serial Communication

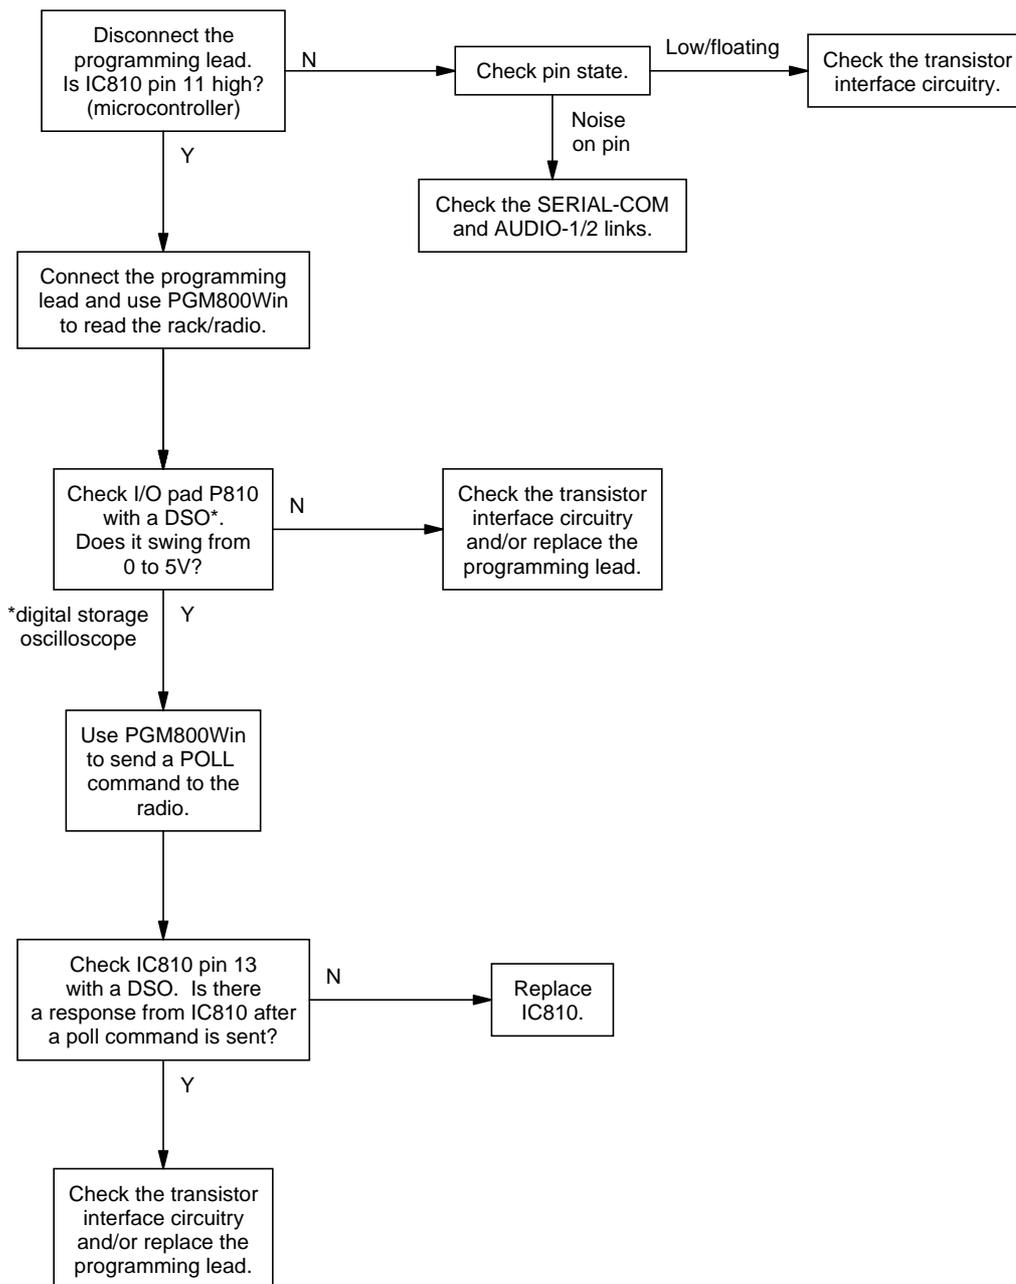


## 5.7.2 Regulator

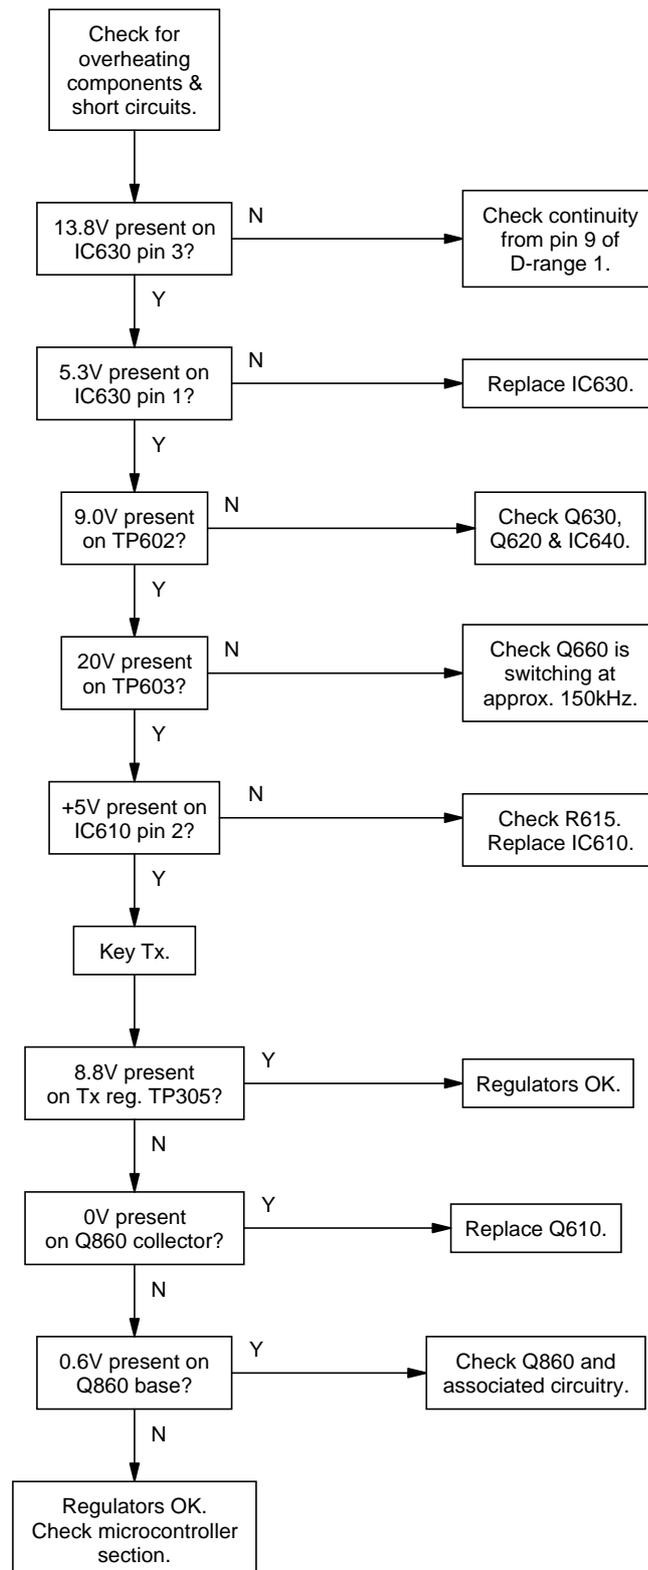



### 5.7.3 Synthesiser

Refer to the synthesiser circuit diagram (sheet 7) in Section 6 and the VCO circuit diagram in Part E.

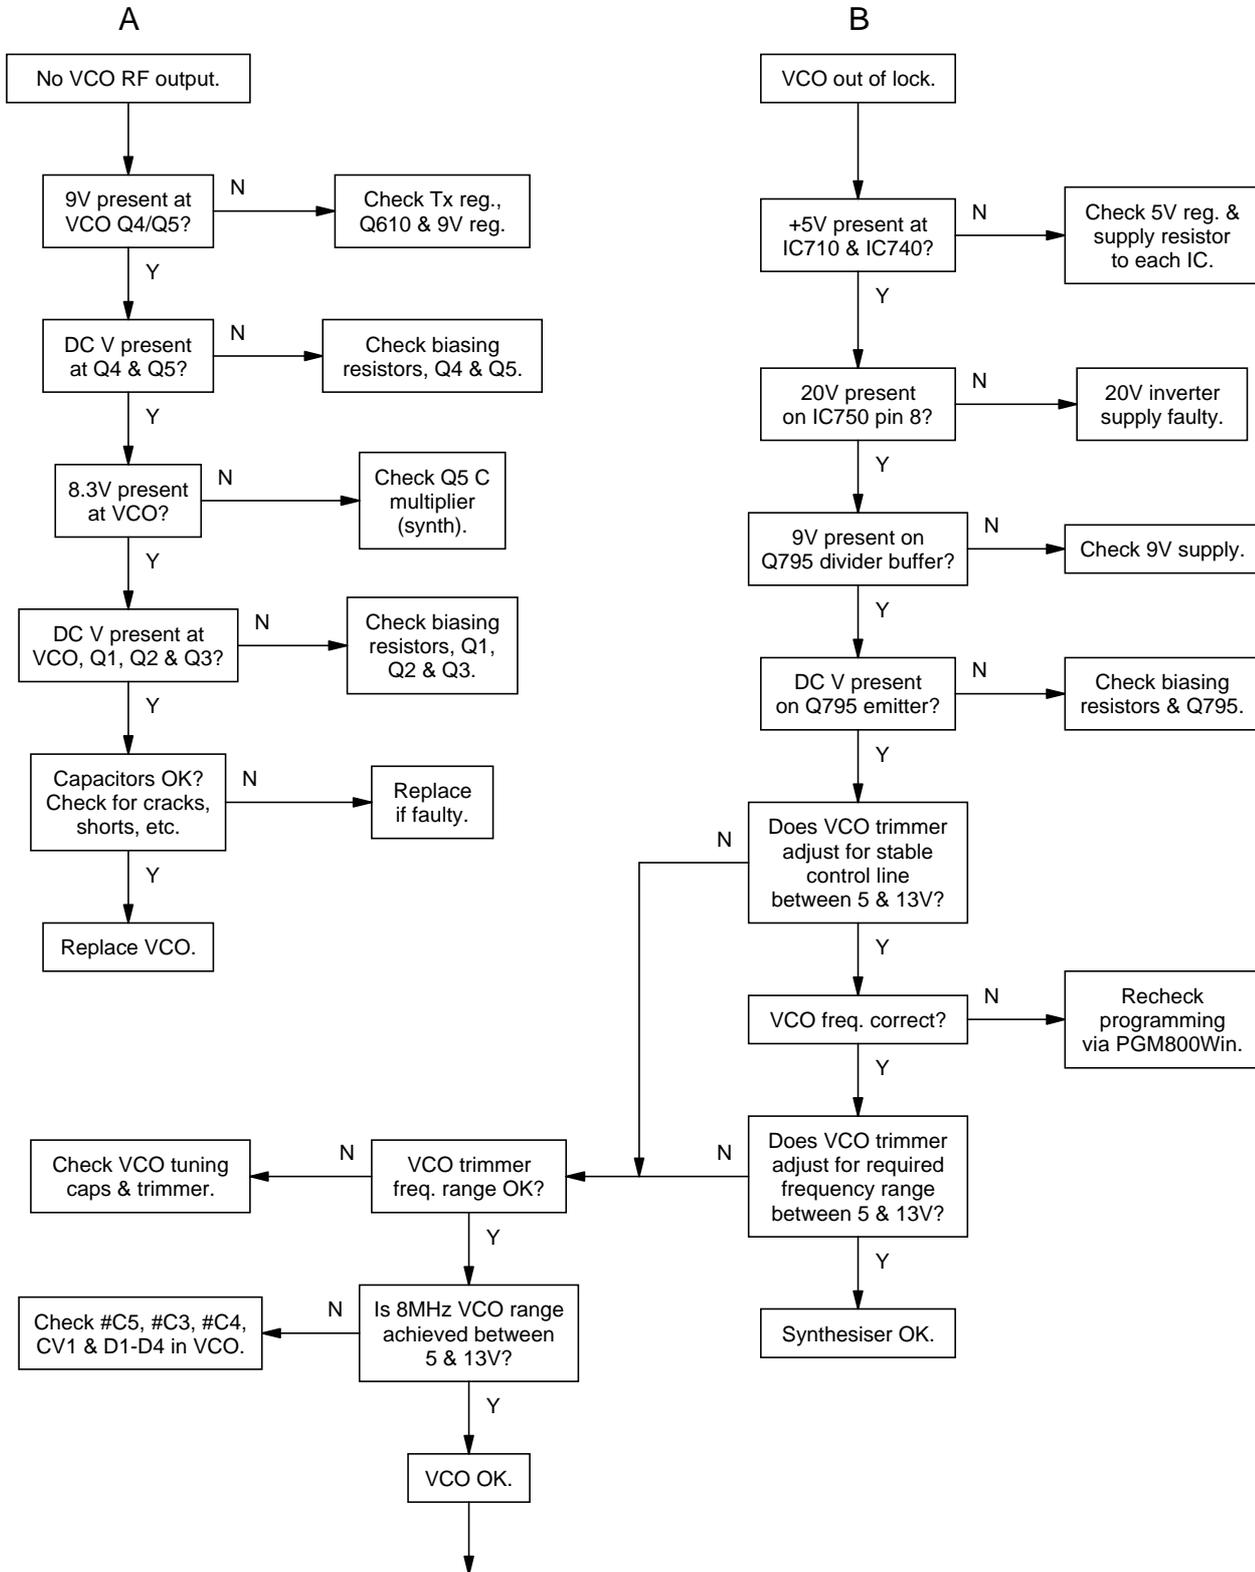

Continued on the next page

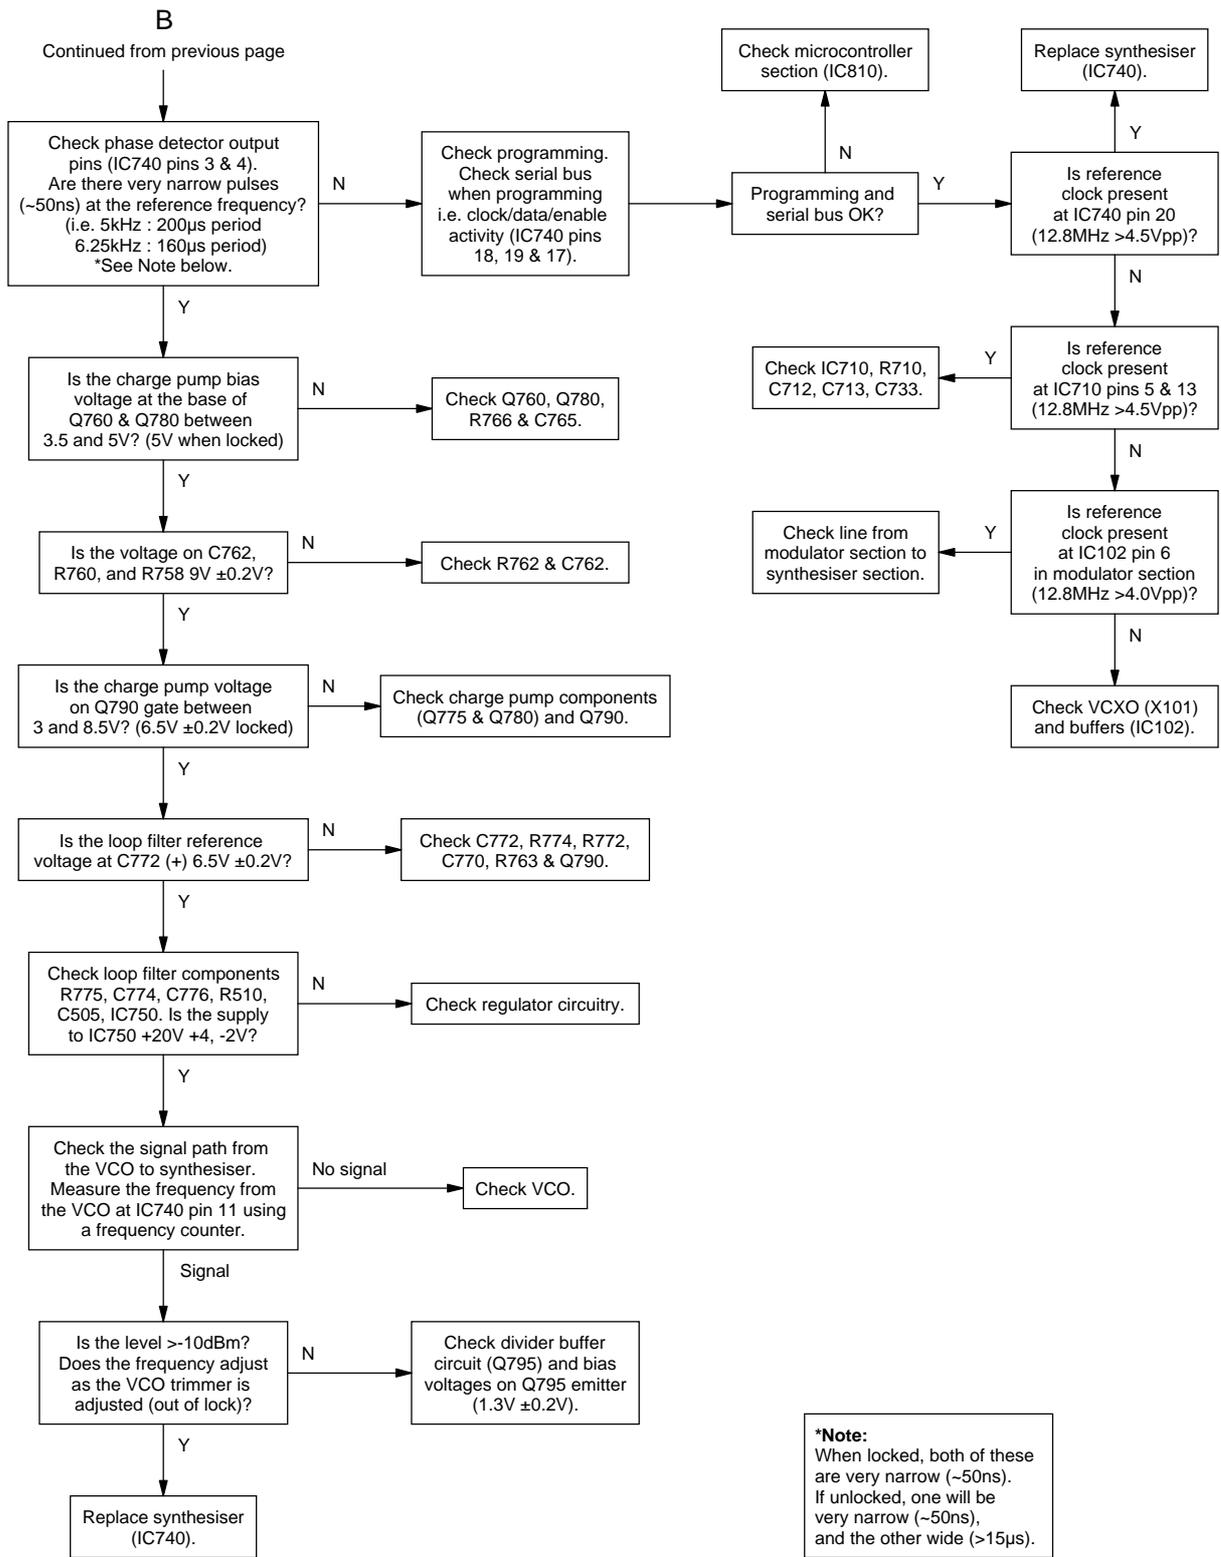

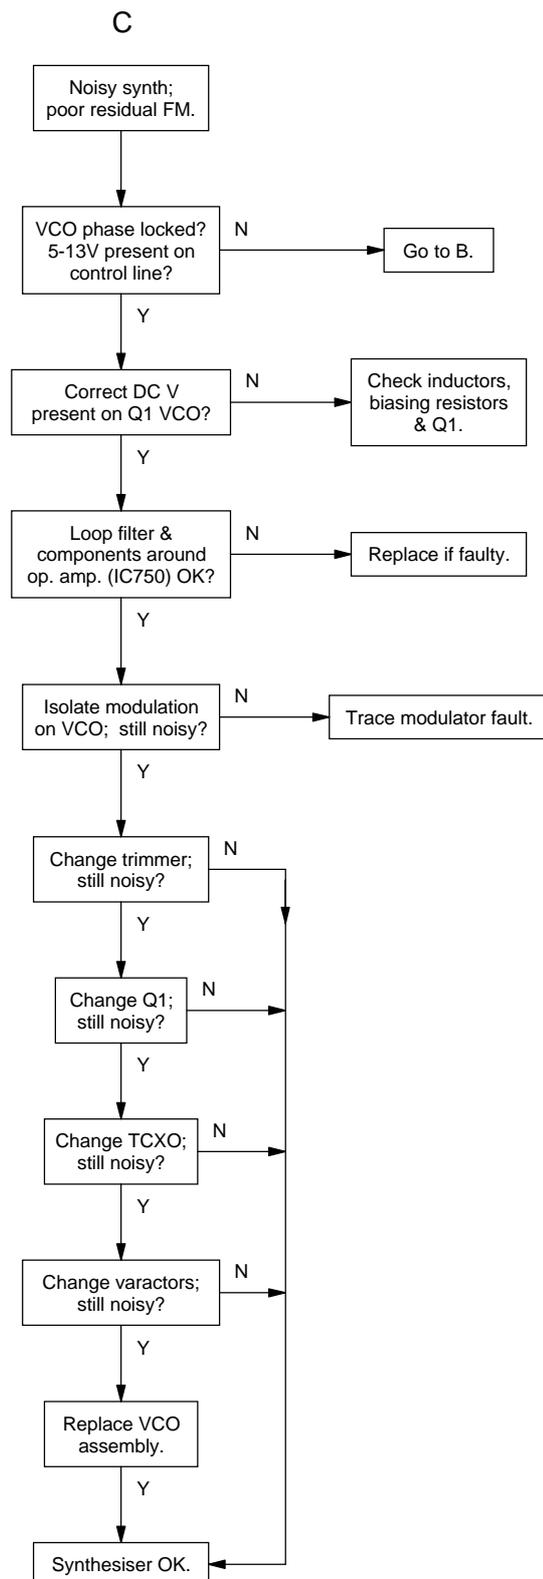

## 5.7.4 Exciter Drive Amplifier

