

Part F Installation

This part of the manual is divided into the sections listed below. These sections give a brief description of the basic rack mounting and wiring procedures for the T855 receiver, T856 transmitter, T857 exciter and T858/859 power amplifiers.

Section	Title	Page
1	T855 Installation	1.1
1.1	Rack Mounting	1.1
1.2	Rack Wiring	1.1
1.3	Power Supply	1.2
1.4	Reverse Polarity & Overvoltage Protection	1.2
2	T856/857 Installation	2.1
2.1	Rack Mounting	2.1
2.2	Rack Wiring	2.1
2.3	Power Supply	2.2
2.4	Reverse Polarity & Overvoltage Protection	2.2
3	T858/859 Installation	3.1
3.1	Rack Mounting	3.1
3.2	Rack Wiring	3.1
3.3	Power Supply	3.2
3.4	Reverse Polarity & Overvoltage Protection	3.2
4	N-Type Connector Assembly	4.1

Figure	Title	Page
1.1	T800-41-0002 Double Guide Kit	1.1
1.2	T855 Chassis Connectors	1.1
1.3	T855 D-Range 1 Wiring - Rear View	1.1
1.4	T855 D-Range 2 Wiring - Rear View (T800-03-0000 Kit)	1.1
2.1	T800-41-0002 Double Guide Kit	2.1
2.2	T856/857 Chassis Connectors	2.1
2.3	T856/857 D-Range 1 Wiring - Rear View	2.1
2.4	T856/857 D-Range 2 Wiring - Rear View (T800-03-0000 Kit)	2.1

Figure	Title	Page
3.1	T800-45-0001 PA Guide Kit	3.1
3.2	T858/859 Chassis Connectors	3.1
3.3	T858/859 PA In Latched Position	3.1
3.4	T858/859 D-Range Wiring - Rear View	3.1
4.1	N-Type Plug Assembly Details	4.1