

TB7100 repeater plus link – jumper settings

J401 2-3	RX gate disconnected from internal TX key.
J400 1-2	TX key disconnected from internal gate.
J507 1-2	Balanced line connected to TX_MIC_AUD.
J502 1-2	Unbalanced line connected to AUDIO_TAP_IN.
J503 2-3	AUDIO_TAP_OUT connected to balanced/unbalanced outputs.
J500 2-3	Balanced line output set to de-emphasised response.
J501 2-3	Balanced line input set to pre-emphasised response.
W300 open	Separate TX_AUX_GPIO5 from RX_AUX_GPIO5.