

Installing the TMAA03-18 Cradle and Radio

This document describes the installation of the TMAA03-18 cradle. For wiring instructions, refer to the radio's User's Guide.


Before installing the cradle, ensure that the site you have chosen for the installation meets the following criteria:

- The site has enough space in front of the radio to allow it to be easily fitted and removed. Allow sufficient space for manipulation.
- The site has enough depth for the radio. Check that the front and rear overhang of the radios will fit where you are mounting the cradle.
- The site allows for good air circulation, particularly at the rear of the radio.
- Drilling will not damage existing wires.




Important: When installing the cradle, ensure that it is well secured, otherwise there is a risk that the whole assembly may become loose, either due to vibration over time, or as a result of serious impact.


Once you have identified a suitable site, install as follows:

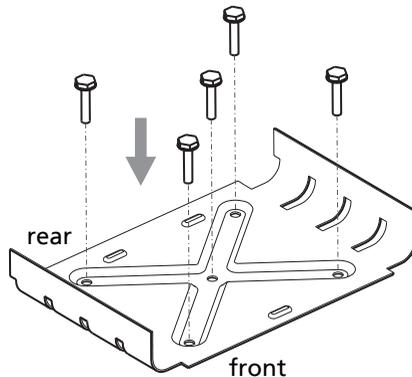

1. Use the drilled half of the metal cradle cover as a template to mark the holes for drilling.
2. Drill 4mm holes.
3. Drill any other holes required for wiring.
4. Secure the metal cradle cover using the five self drilling tek screws supplied.
5. Assemble the the cradle over the mounted cover plate, taking care to place the plastic ribs over their mating slots. Gentle pressure will be required. They will not fit if the cradle is back to front.

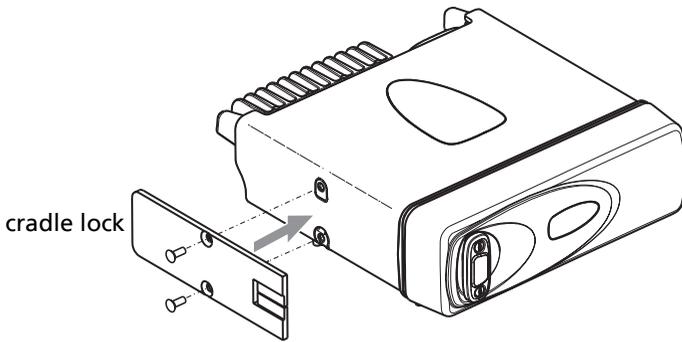

6. Attach the Cradle Lock to the side of the radio using the countersunk Torx M4×10 screws supplied, ensuring the recessed section is to the front, and facing out.

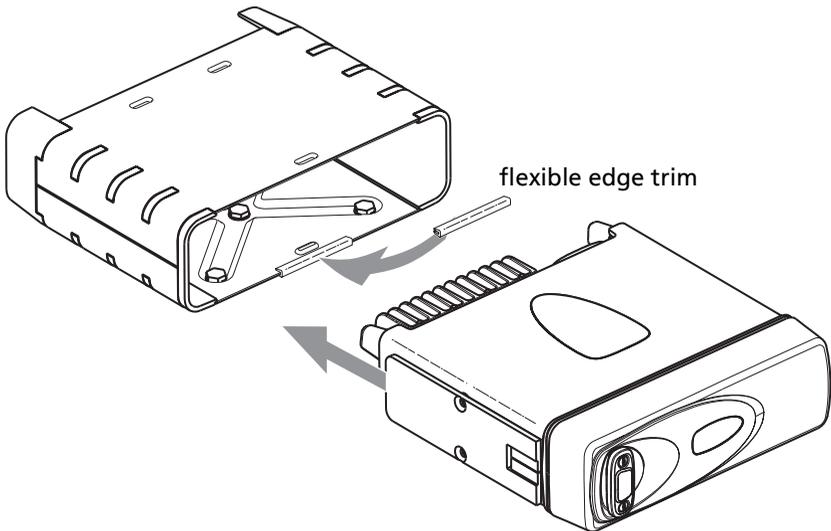

7. Slide the flexible edge trim onto the lower front edge of the cradle.
8. Slide the radio into the cradle and give it a firm push until it 'clicks'.

Removing a Radio from the Cradle

Remove the radio from the cradle as follows:

1. Slide the plastic key provided into the space between the radio and the cradle.
2. Slide the radio out of the cradle.