


DO NOT SCALE


LAY C1 FLAT & FORM LEADS SUCH THAT C1 IS BELOW DISPLAY

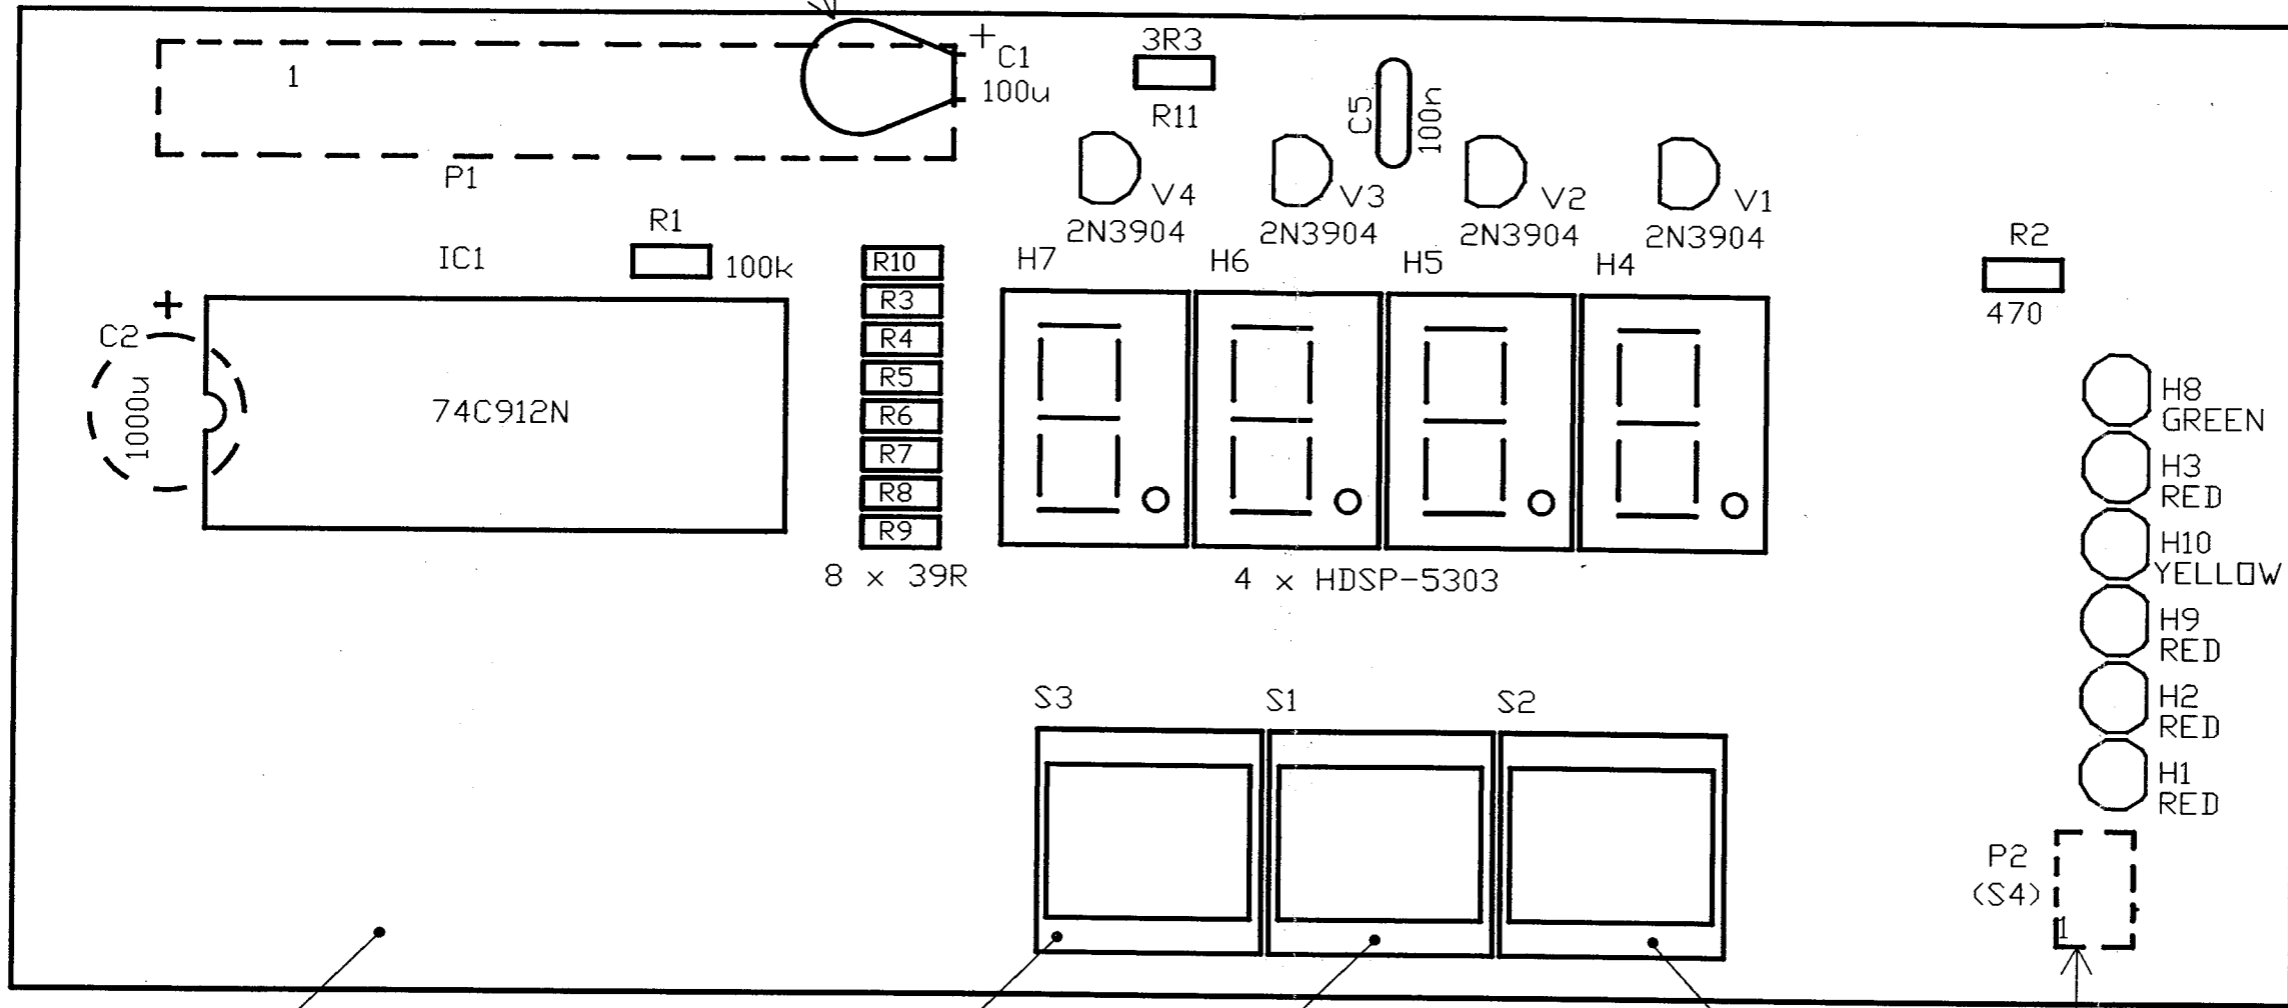

NOTES:

1. FIT COMPONENTS C2, P1 & P2 TO SOLDER SIDE (SIDE 1) OF PCB.
2. ASSEMBLE H1 - H3 & H8 - H10 TO PCB, USING FRONT SUB PANEL (05-PM243) AS JIG.

3. CAUTION: OBSERVE CONTOUR ORIENTATION BEFORE FITTING SWITCH BUTTONS.

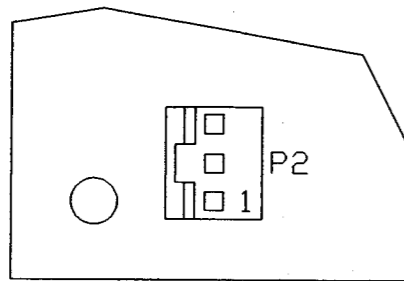

DETAIL A
SHOWS P2 FITTED TO SIDE 1
VIEWED FROM SOLDER SIDE (SIDE 1)

SEE DETAIL A

CONTROLLED Volume No. 960-1 IF NOT IN RED CHECK STATUS

PCB : 07-PB102, ISSUE 1
ASSY : 08-PA102-001

ISSUE 1:
C/R24269
"CODAN" IN TITLE
BLOCK WAS PERTH
COMM.
NOTE 3 & SCRAP
VIEW ADDED.
8-5-95 CM

ISSUE 2
C1 MTG ORIENTATION
CHANGED.
C/R 25842
22-12-98 AC

ISSUE 3:
C1 ROTATED 180°
C/R 25931
8-3-99 AJC

ISSUE 4:
PCB REF WAS 07-PB102
ISSUE A, NOW ISSUE 1
C/R 26165
1-7-99

FILE No.
08\PA102_4.DWG

MASTER

	SCALE 2:1		© CODAN PTY LTD, A.C.N. 007 590 605: 1995		
	DRN	C G	TITLE		
MATERIAL	CHKD	IBW	DISPLAY PCB ASSEMBLY		
IF NOT IN RED CHECK STATUS	APPD	CM	DRAWING/DOC NO.		
	TOLERANCES UNLESS OTHERWISE STATED			A3 08-PA102	
FINISH	2 PLACES DEC. ±0.25			ISS	
	1 PLACE DEC. ±0.5				
	0 PLACE DEC. ±1				
	ANGULAR ±2				
				4	SHT. 1 OF 1