


DO NOT SCALE

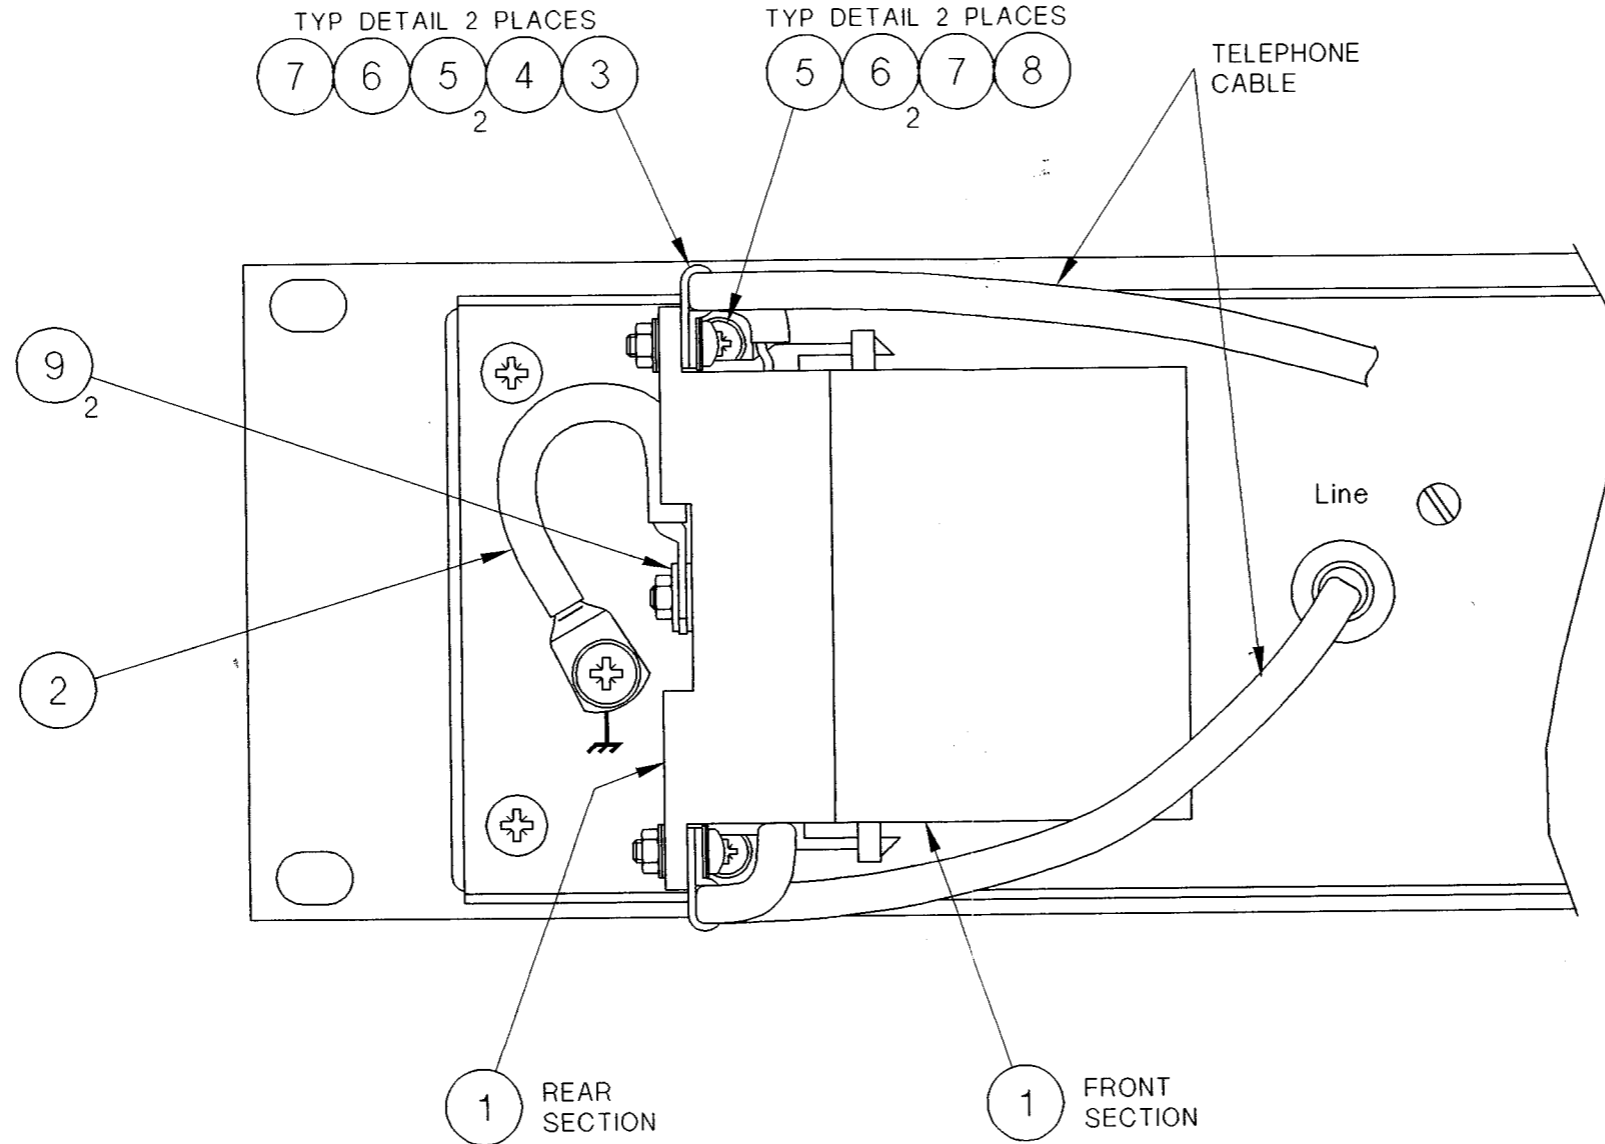

**NOTES**

1. CAREFULLY SEPARATE TRANSIENT BARRIER (ITEM 1) FRONT SECTION FROM THE REAR SECTION.
2. FIX ONE END OF THE EARTH BRAID (ITEM 2) TO THE EARTHING SCREW ON THE REAR SECTION OF ITEM 1, FITTING 2 WASHERS (ITEM 9) EITHER SIDE OF THE LUG.
3. SECURE THE REAR SECTION OF ITEM 1 TO THE IPC500 REAR PANEL WITH THE M3x10 SCREWS, FLAT WASHERS, SPRING WASHERS & NUTS (ITEMS 5, 6, 7 & 8).
4. FIX THE FREE END OF THE EARTH BRAID TO THE EARTHING SCREW ON THE IPC500 REAR PANEL.
5. CUT THE TELEPHONE CABLE 160mm FROM THE 'LINE' GROMMET ON THE IPC500 REAR PANEL.
6. TERMINATE THE EQUIPMENT SIDE OF THE CABLE TO THE E1 & E2 TERMINALS (BOTTOM, E1 - GREEN, E2 - RED).
7. TERMINATE THE LINE SIDE OF THE CABLE TO THE L1 & L2 TERMINALS (TOP, L1 - GREEN, L2 - RED).
8. SECURE EACH CABLE TO THE TOP & BOTTOM OF THE REAR SECTION OF ITEM 1 USING THE 'P' CLIPS, M3x10 SCREWS, FLAT WASHERS, SPRING WASHERS & NUTS (ITEMS 3, 4, 5, 6 & 7), ENSURING THE CABLES REMAIN WITHIN THE CONFINES OF THE EQUIPMENT FOOTPRINT.
9. MATE THE FRONT SECTION OF ITEM 1 TO THE REAR SECTION.

DIMENSIONS IN mm

MASTER IF NOT IN RED  
CHECK STATUS  
CODAN

FILE No.  
15\10457\_AA.DWG

<p><b>CODAN</b> Volume No. 15-10457-001 CHECK STATUS</p>			SCALE 1:1	© CODAN PTY LTD, A.C.N. 007 590 605: 1997 TITLE OPTION TB, TRANSIENT BARRIER FITTING INSTRUCTIONS				
	MATERIAL	DRN	DB	DATE 6-5-97	DRAWING/DOC NO. 15-10457-001			
	FINISH	CHKD	AMJ	13-5-97				
	TOLERANCES UNLESS OTHERWISE STATED		APPD	TH	14-12-97	A3		
2 PLACES DEC. ±0.25 1 PLACE DEC. ±0.5 0 PLACE DEC. ±1 ANGULAR ±2°		ISS		AA X 1				SHT. 1 OF 1