

Please open and fit to the supplied Ring Binder

Creation date 1-May-96

**Part number 46882-106P
Issue 12**

**RF and MICROWAVE TEST SETS
6200A SERIES**

for

Operating Manual

Contains pages for



RF and MICROWAVE TEST SETS

6200A SERIES

Includes information on 6200 Series Microwave Test Sets and 6210 Reflection Analyzer

© Marconi Instruments Ltd. 1996

No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, or recorded by any information storage or retrieval system, without permission in writing by Marconi Instruments Ltd.

Printed in the UK

Manual Part No. 46882-106P
Issue 12

1-May-96



PRECAUTIONS








WARNINGS, CAUTIONS and NOTES

These terms have specific meanings in this manual:

WARNINGS contain information to prevent personal injury.
CAUTIONS contain information to prevent damage to the equipment.
Notes contain important general information.

HAZARD SYMBOLS

The meaning of hazard symbols appearing on the equipment is as follows:

Symbol	Nature of hazard	Reference in manual
	Dangerous voltage	Page vii
	Beryllia	Page viii
	Static sensitive component	Page ix
	Fire hazard	Page viii
	Heavy instrument	Page viii
	Lithium batteries are used in this equipment. Appropriate caution should be exercised when handling these items	Page viii
	This is a general warning which appears whenever care is necessary to prevent damage to the equipment, a typical example being the front panel precision connector.	Page ix

SAFETY

This product has been designed and tested in accordance with BS4743 'Specification for safety requirements for electronic measuring apparatus' and IEC Publication 348 'Safety requirements for electronic measuring apparatus'.

WARNING - ELECTRICAL HAZARDS

AC supply voltage

This equipment conforms with IEC Safety Class 1, meaning that it is provided with a protective grounding lead. To maintain this protection the mains supply lead must always be connected to the source of supply via a socket with a grounding contact.

Be aware that the supply filter contains capacitors that may remain charged after the equipment is disconnected from the supply. Although the stored energy is within the approved safety requirements, a slight shock may be felt if the plug pins are touched immediately after removal.

Fuses

Note that there are supply fuses in both the live and neutral wires of the supply lead. If only one of these fuses should rupture, certain parts of the equipment could remain at supply potential.

Removal of covers

Disconnect the supply before removing the covers so as to avoid the risk of exposing high voltage parts. If any internal adjustment or servicing has to be carried out with the supply on, it must only be performed by a skilled person who is aware of the hazard involved.

WARNING - FIRE HAZARD

Make sure that only fuses of the correct rating and type are used for replacement.

If an integrally fused plug is used on the supply lead, ensure that the fuse rating is commensurate with the current requirements of this equipment. See under 'Performance Data' in Chapter 1 for power requirements.

WARNING - HEAVY INSTRUMENT

The 6200 Series MTS or 6200A Series MTS fitted with a 6210 exceeds the 18 kg (40 lb) guideline for manual handling by a single person. To avoid the risk of injury, an assessment should be carried out prior to handling which takes account of the load, workplace environment and individual capability, in accordance with European Directive 90/269/EEC and associated National Regulations.

WARNING - OTHER HAZARDS

Some of the components used in this equipment include resins and other chemicals which give off toxic fumes if incinerated. appropriate precautions should therefore be taken in the disposal of these items.

Beryllia

Beryllia (beryllium oxide) is used in the construction of some of the components in this equipment. This material, if incorrectly handled, could cause a danger to health - refer to the Maintenance part of the Service Manual for safe handling precautions.

Lithium battery

A Lithium battery (or a Lithium battery contained within an IC) is used in this equipment.

As lithium is a toxic substance, the battery should in no circumstances be crushed, incinerated or disposed of in normal waste.

If the battery is rapidly charged or discharged, there is a risk of explosion. Take care therefore to avoid short-circuiting it.

The following warning only applies to 6200 Series instruments (i.e. cathode ray tube displays):

WARNING - CATHODE RAY TUBE

When exposing or handling the tube, take care to prevent implosion and possible scattering of glass fragments. Handling should only be carried out by experienced personnel and the use of a safety mask and gloves is recommended. A defective tube should be disposed of in a safe manner by an authorized waste contractor.

CAUTION - PRECISION CONNECTOR

The precision connectors fitted to this equipment may be damaged by mating with a non-precision type. Damage to the connectors may also occur if the connector interface parameters are not within specification. This should be checked with an appropriate gauging tool. Refer to Chapter 2 for further information on connector care.

CAUTION - CALIBRATION KIT HANDLING PRECAUTIONS

The calibration kit used for reflection analyzer measurements requires special handling precautions to be observed. Refer to Appendix E for full details.

CAUTION - STATIC SENSITIVE COMPONENTS

This equipment contains static sensitive components which may be damaged by handling - refer to the Maintenance manual for handling precautions.

WARNING - TILT FACILITY

When the instrument is in the tilt position, it is inadvisable, for stability reasons, to stack other instruments on top of it.

CAUTION - CLEANING OF LCD WINDOW

The LCD window should be cleaned by wiping a slightly damp, soft, lint-free cloth gently over the surface. To remove grease or smears, use a clean cotton cloth moistened with Heptane. No other cleaning agents should be used. Clean the window using either horizontal or vertical strokes, NEVER a circular action.

CAUTION - CLEANING OF CRT SCREEN (6200 Series instruments)

The CRT display is fitted with a contrast enhancing filter, which should not be cleaned with alcohol-based cleaning fluids. Household cleaners (ammonia-based) are suitable.

PRECAUTIONS






WARNINGS, CAUTIONS and NOTES

Les termes suivants ont, dans ce manuel, des significations particulières:

- WARNINGS** contient des informations pour éviter toute blessure au personnel.
- CAUTIONS** contient des informations pour éviter les dommages aux équipements.
- Notes** contient d'importantes informations d'ordre général.

SYMBOLS SIGNALANT UN RISQUE

La signification des symboles liés à cet équipement est la suivante:

Symbole	Nature du risque	Référence dans le manuel
	Tension dangereuse	Page x
	Beryllia	Page xi
	Risque lié au feu	Page xi
	Instrument lourd	Page xi
	Piles au Lithium utilisées dans cet équipement. Des précautions particulières son à prendre lors de la manipulation de ces composants.	Page xi

SECURITE

Cet appareil a été conçu et testé conformément aux normes BS4743 "Spécifications des conditions de sécurité pour instruments de mesure électronique" et CEI Publication 348 "Conditions de sécurité pour instruments de mesure électronique".

WARNING - SECURITE ELECTRIQUE

Tension d'alimentation alternative

Cet appareil est protégé conformément à la norme CEI de sécurité class 1, c'est-à-dire que sa prise secteur comporte un fil de protection à la terre. Pour maintenir cette protection, le câble d'alimentation doit toujours être branché à la source d'alimentation par l'intermédiaire d'une prise comportant une borne terre. Notez que les filtres d'alimentation contiennent des condensateurs qui peuvent encore être chargés lorsque l'appareil est débranché. Bien que l'énergie contenue soit conforme aux exigences de sécurité, il est possible de ressentir un léger choc si l'on touche les bornes s'itôt après débranchement.

Fusibles

Notez qu'il y a deux fusibles, l'un pour la phase et l'autre pour le neutre du câble d'alimentation. Si un seul fusible est coupé, certaines parties de l'appareil peuvent rester au potentiel d'alimentation.

Retrait des couvercles

L'appareil doit être débranché avant de retirer les couvercles afin d'éviter tout contact avec les éléments haute tension. Si toutefois un réglage interne ou une réparation nécessitent la présence de l'alimentation, ils devront être effectués par une personne qualifiée et avisée des risques encourus.

WARNING - RISQUE LIE AU FEU

Lors du remplacement des fusibles vérifiez l'exactitude de leur type et de leur valeur.

Si le câble d'alimentation comporte une prise fusible intégré, assurez vous que sa valeur est compatible avec les besoins en courant de l'appareil. Pour la consommation, reportez-vous au Chapitre I "Spécifications".

WARNING - INSTRUMENT LOURD

Les systèmes de test hyperfréquence séries 6200 et 6200A équipés du 6210, ont un poids supérieur à la limite de 18 kg (40 lb), fixée pour le transport par une seule personne. Afin d'éviter tout risque de blessure, il est nécessaire de faire, avant le transport, une évaluation de la charge, des contraintes de l'environnement et des capacités de l'individu, en conformité avec la Directive Européenne 90/269/EEC ainsi que les recommandations Nationales concernées.

WARNING - AUTRES RISQUES

Certains composants utilisés dans cet appareil peuvent contenir des résines et d'autres matières qui dégagent des fumées toxiques lors de leur incinération. Les précautions d'usages doivent donc être prises lorsqu'on se débarrasse de ce type de composant.

Le beryllia

Le Beryllia (oxyde de Beryllium) entre dans la composition de certains composants de cet appareil. Cette matière peut représenter un danger pour la santé s'il elle n'est pas manipulée de façon correcte - se référer à la partie "Maintenance" du "Manuel de Maintenance" pour les précautions de manipulation.

Lithium

Une pile au Lithium ou un CI contenant une pile au Lithium est utilisé dans cet équipement.

Le Lithium est une substance toxique; en conséquence on ne doit l'écraser, l'incinérer ou la jeter dans la "poubelle".

Ne pas essayer de la recharger, ne pas la court-circuiter, une forte décharge rapide risque de provoquer une surchauffe voire l'explosion de celle-ci.

L'avertissement suivant concerne les instruments de la série 6200 (c'est-à-dire avec écran cathodique).

WARNING - TUBE CATHODIQUE

Lorsque le tube cathodique est exposé ou manipulé, il convient de faire très attention aux risques d'implosion ou de projection de fragments de verre. Seul un personnel expérimenté doit faire ces manipulations et il est recommandé d'utiliser un masque de sécurité et des gants. Un tube défectueux doit être cédé, avec précautions, à une entreprise spécialisée dans le traitement de ce type de déchets.

WARNING - POSITION INCLINEE

Lorsque l'appareil est dans une position inclinée, il est recommandé, pour des raisons des stabilité, de ne pas y empiiler d'autres appareils.

VORSICHTSMASSNAHMEN






WARNINGS, CAUTIONS and NOTES

Diese Hinweise haben eine bestimmte Bedeutung in diesem Handbuch:

WARNINGS dienen zur Vermeidung von Verletzungsrisiken.
CAUTIONS dienen dem Schutz der Geräte.
Notes enthalten wichtige Informationen.

GEFAHRENSYMBOL

Die Gefahrensymbole auf den Geräten sind wie folgt:

Symbol	Gefahrenart	Im Handbuch
	Gefährliche Spannung	Seite xii
	Beryllium	Seite xiii
	Feuergefährlich	Seite xiii
	Schweres Gerät	Seite xiii
	Lithium Batterien - Vorsicht bei Austausch o.ä.	Seite xiii

SICHERHEIT

Dieses Gerät wurde in Übereinstimmung mit BS4743 und IEC 348 entwickelt und geprüft.

WARNING - ELEKTRISCHE SCHLÄGE

Wechselspannungsversorgung

Das Gerät entspricht IEC Sicherheitsklasse I mit einem Schutzleiter nach Erde. Das Netzkabel muß stets an eine Steckdose mit Erdkontakt angeschlossen werden.

Filterkondensatoren in der internen Spannungsversorgung können auch nach Unterbrechung der Spannungszuführung noch geladen sein. Obwohl die darin gespeicherte Energie innerhalb der Sicherheitsmargen liegt, kann ein leichter Spannungsschlag bei Berührung kurz nach der Unterbrechung erfolgen.

Sicherungen

Es ist zu beachten, daß es Sicherungen in beiden (spannungsführenden und neutralen) Zuleitungen gibt. Wenn nur eine von diesen Sicherungen schmilzt, so bleiben einige Geräteile immer noch auf Spannungspotential.

Abnahme von Abdeckungen

Die Spannungsversorgung muß vor Abnahme von Gehäuseabdeckungen unterbrochen sein, damit hochspannungsführende Teile gefahrlos zugänglich sind. Falls Abteile oder Servicearbeiten unter Spannung notwendig werden, dürfen solche Arbeiten nur von fachkundigem Personal durchgeführt werden, das die Gefahren kennt.

WARNING - FEUERGEFAHR

Es dürfen nur Ersatzsicherungen vom gleichen Typ mit den korrekten Spezifikationen entsprechend der Stromaufnahme des Gerätes verwendet werden. Siehe hierzu die Leistungsdaten (Performance Data) in Kapitel 1.

WARNING - SCHWERES GERÄT

Zusammen mit einem 6210 Pack liegt das Gewicht von Geräten der Serie 6200 MTS oder 6200A MTS über der 18 kg (40 lb) Grenze für Transport durch eine einzelne Person. Zur Vermeidung von Verletzungen sollten vor einem Transport die Arbeitsumgebung und die persönlichen Möglichkeiten im Verhältnis zur Last abgewogen werden, wie in der EU-Regelung 90/269/EBC und nationalen Normen beschrieben.

WARNING - ANDERE GEFAHREN

In einigen Bauelementen dieses Geräts können Epoxyharze oder andere Materialien enthalten sein, die im Brandfall giftige Gase erzeugen. Bei der Entsorgung müssen deshalb entsprechende Vorsichtsmaßnahmen getroffen werden.

Beryllium Oxid

Beryllium Oxid wird in einigen Bauelementen verwendet.

Bei inkorrektter Handhabung kann dieses Material Gesundheitsschäden verursachen. Siehe hierzu die Hinweise zur Handhabung im Service-Handbuch.

Lithium

Eine Lithium Batterie oder eine Lithium Batterie innerhalb eines IC ist in diesem Gerät eingebaut.

Da Lithium ein giftiges Material ist, sollte es als Sondermüll entsorgt werden.

Diese Batterie darf auf keinen Fall geladen werden. Nicht kurzschließen, da sie dabei überhitzt werden und explodieren kann.

Der folgende Hinweis bezieht sich nur auf Meßgeräte der Serie 6200 (.d.h. mit Kathoden-Strahlröhren).

WARNING - KATHODENSTRAHLRÖHREN

Bei Handhabung der Röhre ist auf Implosion und Glasbruch zu achten. Das Fachpersonal sollte dabei Sicherheitsmasken und Handschuhe tragen. Eine fehlerhafte Röhre sollte von einem autorisierten Fachbetrieb entsorgt werden.

WARNING - SCHRÄGSTELLUNG

Bei Schrägstellung des Geräts sollten aus Stabilitätsgründen keine anderen Geräte darauf gestellt werden.






WARNINGS, CAUTIONS and NOTES

Questi termini vengono utilizzati in questo manuale con significati specifici:

WARNINGS riportano informazioni atte ad evitare possibili pericoli alla persona.
CAUTIONS riportano informazioni per evitare possibili pericoli all'apparecchio-chiatura.
Notes riportano importanti informazioni di carattere generale.

SIMBOLI DI PERICOLO

Significato dei simboli di pericolo utilizzati nell'apparato:

Simbolo	Tipo di pericolo	Riferimento nel manuale
	Tensione pericolosa	Pagina xiv
	Berillio	Pagina xv
	Pericolo d'incendio	Pagina xv
	Strumento pesante	Pagina xv
	Batterie al litio. Opportune precauzioni devono essere prese prima di maneggiarle.	Pagina xv

SICUREZZA

Questo prodotto è stato progettato e provato secondo le norme BS4743 "Specification for safety requirements for electronic measuring apparatus" e la pubblicazione IEC 348 "Safety requirements for electronic measuring apparatus".

WARNING - PERICOLI DA ELETRICITÀ

Alimentazione c.a.

Quest' apparato è provvisto del collegamento di protezione di terra e rispetta le norme di sicurezza IEC, classe I. Per mantenere questa protezione è necessario che il cavo, la spina e la presa d'alimentazione siano tutti provvisti di terra.

Il circuito d'alimentazione contiene dei filtri i cui condensatori possono restare carichi anche dopo aver rimosso l'alimentazione. Sebbene l'energia immagazzinata è entro i limiti di sicurezza, purtuttavia una leggera scossa può essere avvertita toccando i capi della spina subito dopo averla rimossa.

Fusibili

Notare che entrambi i capi del cavo d'alimentazione sono provvisti di fusibili. In caso di rottura di uno solo dei due fusibili, alcune parti dello strumento potrebbero restare sotto tensione.

Rimozione dei coperchi

Prima di rimuovere i coperchi occorre scollegare la spina d'alimentazione onde evitare il rischio di esposizione di parti ad alta tensione. Eventuali operazioni di manutenzione che richiedono la presenza dell'alimentazione dovranno essere eseguite solo da parte di personale specializzato ed a conoscenza dei pericoli coinvolti.

WARNING - PERICOLO D'INCENDIO

Assicurarsi che, in caso di sostituzione, vengano utilizzati solo fusibili della portata e del tipo prescritto. Se viene usata una spina con fusibili, assicurarsi che questi siano di portata adeguata coi requisiti di alimentazione richiesti dallo strumento. Tali requisiti sono riportati nel cap. I "Performance data".

WARNING - STRUMENTO PESANTE

Ciascun MTS della serie 6200 o 6200A corredato dell'opzione 6210 supera il peso limite di 18kg quindi considerare il carico complessivo, le condizioni di trasporto e le capacità individuali in accordo con la direttiva comunitaria 90/269/EEC e con eventuali regolamenti locali.

WARNING - ALTRI PERICOLI

Alcuni dei componenti usati in questo strumento possono contenere resine o altri materiali che, se bruciati, possono emettere fumi tossici. Prendere quindi le opportune precauzioni nell'uso di tali parti.

Berillio

Berillio (ossido di berillio) è utilizzato nella costruzione di alcuni componenti di quest'apparato.

Questo materiale, se maneggiato non correttamente, può causare danni alla salute. Far riferimento ai capitoli di manutenzione del Manuale di Servizio per le precauzioni richieste.

Litio

Quest'apparato incorpora una batteria al litio o un circuito integrato contenente una batteria al litio.

Poiché il litio è una sostanza tossica, la batteria non deve essere mai né rotta, né incenerita, né gettata tra i normali rifiuti.

Questo tipo di batteria non può essere sottoposto né a ricarica né a corto-circuito o scarica forzata. Queste azioni possono provocare surriscaldamento, fuoriuscita di gas o esplosione della batteria.

Il seguente avviso è da riferirsi solo agli strumenti della serie 6200 (tubo a raggi catodici).

WARNING - TUBO A RAGGI CATODICI

Fare attenzione nell'esporre o nel maneggiare il tubo per evitare implosioni ed il lancio dei frammenti di vetro. I tubi dovrebbero essere maneggiati solo da personale specializzato ed usando guanti ed occhiali di sicurezza. Un eventuale tubo difettoso va eliminato tramite ditte specializzate.

WARNING - POSIZIONAMENTO INCLINATO

Quando lo strumento è in posizione inclinata e raccomandato, per motivi di stabilità, non sovrapporre altri strumenti.

PRECAUCIONES






WARNINGS, CAUTIONS and NOTES

Estos términos tienen significados específicos en este manual:

WARNINGS	contienen información referente a prevención de daños personales.
CAUTIONS	contienen información referente a prevención de daños en equipos.
Notes	contienen información general importante.

SÍMBOLOS DE PELIGRO

Los significados de los símbolos de peligro que aparecen en los equipos son los siguientes:

Referencia en manual	Naturaleza del peligro	Símbolo
Página xvi	Voltaje peligroso	
Página xvii	Berllo	
Página xvii	Peligro de incendio	
Página xvii	Instrumento pesado	
Página xvii	Utiliza baterías de Litio. Debe de aplicarse cuidados especiales al manipularlas	

Seguridad

Este producto ha sido diseñado y probado según las normas, BS4743 Especificaciones de los requisitos de seguridad para instrumentos electrónicos de medida, e IEC publicación 348 Requisitos de seguridad para instrumentos electrónicos de medida.

WARNING - NIVEL PELIGROSO DE ELECTRICIDAD

Tensión de red

Este equipo cumple las normas IEC Seguridad Clase 1, lo que significa que va provisto de un cable de protección de masa. Para mantener esta protección, el cable de alimentación de red debe de conectarse siempre a una clavija con terminal de masa.

Tenga en cuenta que el filtro de red contiene condensadores que pueden almacenar carga una vez desconectado el equipo. Aunque la energía almacenada está dentro de los requisitos de seguridad, pudiera sentirse una ligera descarga al tocar la clavija de alimentación inmediatamente después de su desconexión de red.

Fusibles

Se hace notar que el Equipo está dotado de fusibles tanto en el activo como el neutro de alimentación. Si sólo uno de estos fusibles fundiera, existen partes del equipo que pudieran permanecer a tensión de red.

Para retirar las tapas

Desconectar de red antes de retirar las tapas para evitar el riesgo que supone tener accesibles aquellas partes del equipo expuestas a alta tensión. Aquellas operaciones que requieran tener alimentación con las tapas abiertas para mantenimiento o ajuste deben de ser realizadas por personal cualificado, que esté al tanto de los riesgos implicados.

WARNING - Peligro de incendio

Asegúrese de utilizar sólo fusibles del tipo y valores especificados como recuento. Si se utiliza una clavija con fusible incorporado, asegúrese de que los valores del fusible corresponden a los requeridos por el equipo. Ver sección de especificaciones del capítulo I para comprobar los requisitos de alimentación.

WARNING - Instrumento pesado

Los MTS de las series 6200 o 6200A, si llevan instalado el mod. 6210, exceden de los 18 Kg. (40lb), lo que debe tenerse en cuenta si va a ser transportado manualmente por una sola persona. Para evitar el riesgo de lesiones, antes de mover el equipo deberá evaluar la carga, el entorno de trabajo y la propia capacidad, de acuerdo con la Directiva Europea 90/269/EBC y el Reglamento Nacional Asociado.

WARNING - Otros peligros

Alguno de los componentes utilizados en este equipo pudieran incluir resinas u otro tipo de materiales que al arder producirían sustancias tóxicas. Por tanto, tome las debidas precauciones en la manipulación de esas piezas.

Berilio

Berilio (óxido de berilio) Este material es utilizado en la fabricación de alguno de los componentes de este equipo.

Si se manipula incorrectamente podría causar daños a la salud - En la sección de mantenimiento y reparación encontrará normas de manejo de seguridad.

Litio

En este equipo se utiliza una batería de **litio** (o contenida dentro de un CI).

Dada que el **litio** es una sustancia tóxica las baterías de este material no deben ser aplastadas, quemadas o arrojadas junto a basuras ordinarias.

No trate de recargar este tipo de baterías. No las cortocircuite o fuerce su descarga ya que puede dar lugar a que la esta emita gases, se recaliente o explote.

El siguiente aviso solo es de aplicación para instrumentos de la serie 6200 (con pantalla de tubo de rayos catódicos).

WARNING - TUBO DE RAYOS CATÓDICOS

Tubo de rayos catódicos. Al manipular un tubo, se recomienda hacerlo con cuidado para evitar su implosión y el posible desprendimiento de fragmentos de vidrio. La manipulación será realizada por personal cualificado, haciendo uso de mascarillas y guantes de seguridad. Los tubos defectuosos serán llevados de forma segura a una compañía de residuos autorizada.

WARNING - Tener en cuenta con el equipo inclinado

Si utiliza el equipo en posición inclinada, se recomienda, por razones de estabilidad, no apilar otros equipos encima de él.

Chapter 1 GENERAL INFORMATION

CONTENTS

PURPOSE AND FEATURES OF EQUIPMENT	1-1
Introduction	1-1
Main Features	1-2
Operator Interface	1-2
Results Output	1-2
System Connections	1-3
Memory Card System	1-3
6210 Reflection Analyzer	1-3
SPECIAL TERMS USED IN THIS MANUAL	1-3
ASSOCIATED PUBLICATIONS	1-4
PERFORMANCE DATA - 6200A SERIES MTS	1-5
VERSIONS AND ACCESSORIES - 6200A SERIES MTS	1-22
ASSOCIATED EQUIPMENT	1-25
PERFORMANCE DATA - 6210 REFLECTION ANALYZER	1-26
OPTIONS AND ACCESSORIES - 6210 REFLECTION ANALYZER	1-31

Page

PURPOSE AND FEATURES OF EQUIPMENT

Introduction

The 6200A Series RF and Microwave Test Sets are portable microwave measurement instruments, which integrate a synthesized sweep generator, a four input scalar analyzer, frequency counter and a power meter into a single compact case. Four versions are available: the 6201A covers 10 MHz to 8 GHz, the 6200A covers 10 MHz to 20 GHz, the 6203A covers 10 MHz to 26.5 GHz and the 6204A has coverage to 46 GHz. The 6202A covers 10 MHz to 2 GHz, and is especially suitable for users working exclusively in the RF band. Whereas the other instruments are called Microwave Test Sets, the 6202A is an RF Test Set. Throughout this and other manuals, however, the series of instruments will be referred to collectively as Microwave Test Sets (MTS).

A 70 dB step attenuator option is available for all versions of the MTS, which provides synthesizer outputs over a wide amplitude range. The 6210 Reflection Analyzer adapter can be fitted to the MTS, which enables the instrument to display the complex reflection coefficient at the input of a device, and also the time domain response.

The small size, integrated functions and ease of use of the MTS make the system ideal for development and production testing, installation and commissioning and field service applications. Integrating many functions into one unit not only provides convenience of operation, it also enables a number of specialized measurements to be made with ease. Typical applications for the MTS are:

- Measurement of insertion loss and return loss of passive components.

- Gain, gain compression and return loss of active components.

- Power and frequency measurements.

- Measurements on mixers and VCOs.

- Location of faults in waveguide and coaxial transmission lines is possible using the Fault Location facility. This utilizes advanced processing techniques to improve distance and magnitude accuracy and reduce measurement uncertainty.

Main Features

The MTS uses a fully synthesized frequency source. The swept signal it provides combines the speed and convenience of an analogue sweep generator with the precision of a synthesized sweep. High frequency stability and a resolution of 1 Hz ensures that even narrow filters can be measured with accuracy and confidence.

Power level is settable over a 40 dB range with a maximum guaranteed levelled power of +7 dBm. With the step attenuator option, amplitudes down to -90 dBm may be set for the characterization of amplifiers and other active devices.

Self calibration of the synthesizer's power and frequency is possible using the integral power meter and frequency counter of the MTS. Two user calibration stores can be used to perform power calibrations over a limited frequency range.

The four input scalar analyzer has typically 85 dB dynamic range and a high resolution colour display. As well as the conventional 10x10 graticules two separate 10x10 graticules can be selected. Two display channels, each capable of displaying up to two swept measurements are provided. The channels may be coupled together for the simultaneous update of up to four traces, or they can be uncoupled so that each channel can display a different frequency range, allowing simultaneous display of pass-band and stop-band characteristics, for example.

The power meter has a high dynamic range (-70 dBm to +35 dBm) and wide frequency coverage (30 kHz to 40 GHz). One input of the scalar analyzer can be configured to be a power sensor input, and the measured power level is displayed as a digital readout when the readout mode is selected. A wide range of power sensors is available. Power sensors can be calibrated using the 50 MHz internal calibrator output provided on the front panel.

The frequency counter measures frequency from 10 MHz to 20 GHz (6200A and 6201A), 10 MHz to 26.5 GHz (6203A and 6204A) or 10 MHz to 2 GHz (6202A). A digital readout of the frequency can be displayed when the readout mode is selected. In the swept mode, the vertical axis can be set to record the frequency of a device under test as the voltage stimulus provided by the programmable voltage/current output is swept, a typical example being automatic VCO characterization.

Operator Interface

The MTS firmware controls the functions of the synthesized source, scalar analyzer, frequency counter and power meter. Operator interaction with the system is performed a colour liquid crystal display (LCD) and the front panel controls. Menus, instructions, error messages and help text are displayed on the LCD, and menu selection is accomplished via a set of eight soft keys adjacent to the display.

The measurement to be performed is defined using a simple menu system. Non-volatile storage is provided for ten measurement setups and four results traces for future use. Stores are also provided for calibration and linearity factor data for up to ten power sensors.

GPIB commands are provided enabling full control of the system via the GPIB interface. This interface also enables the MTS to control an HPGL plotter and an additional MTS synthesized source. The GPIB complies with IEEE 488.2 and follows the SCPI convention (Standard Commands for Programmable Instrumentation).

A Macro facility allows a sequence of key presses and control codes to be stored so that complex measurement sequences can be stored.

Results Output

Measurement results, either current or stored, may be output to any HPGL GPIB plotter, or to a suitable printer via the Centronics parallel interface. The operator has extensive control of hard copy formatting, with facilities for generating titles. The printer can also be used to obtain hard copy output of tabular data, such as current or stored instrument settings, and information relating to the displayed measurement.

System Connections

Because the MTS incorporates several instruments in one case, there are no interconnections to make, other than the connections to the device or system under test. This provides more reliable and repeatable results, and saves time in setting up and re-deploying equipment.

Similar advantages are obtained when a Fault Location Test Head or Transmission Line Test Head is used for fault location measurements; this integrates most of the necessary microwave components (such as detectors, dividers) into a small housing. The Test Head is supplied with a length of cable for connection to the MTS scalar inputs, and an optional length of ruggedised cable connects the Test Head to the MTS RF output. This allows the Test Head to gain access to difficult to reach test points.

Memory Card System

Memory cards containing battery-backed non-volatile RAM are available which can be used for additional storage of measurement setups and results data. If required, this information can then be transferred to other instruments, ensuring repeatability and time saving in setting up a number of identical test stations. The MTS enables the user to configure blank cards to set the number of stores of each type within the available memory capacity of the card.

6210 Reflection Analyzer

If the optional 6210 Reflection Analyzer is fitted to a 6200A series MTS, the system has the additional capability of making measurements of the complex reflection coefficient (i.e. magnitude and phase) at the input of a test device; this is the S_{11} S-parameter. The results can be presented in several formats, enabling, for example, measurements of magnitude, phase, VSWR and impedance. The frequency range over which the 6210 operates is from 250 MHz to 26.5 GHz, the upper limit depending on that of the MTS. Note that although the 6204A MTS operates up to 46 GHz, the upper limit of the 6210 is still 26.5 GHz.

The system can also transform frequency domain measurements into the time domain, enabling measurement of the performance of a device as a function of time. Both band pass and low pass transforms are available, and the MTS can display the response of the system under test to a simulated impulse or step function. In addition, the 6210's gating facility allows the selective removal of time domain responses (due to connectors, for example), and the effect on the frequency response can be seen on returning to the frequency domain. See Appendix D for an overview of time domain measurements.

SPECIAL TERMS USED IN THIS MANUAL

Sweep is a series of consecutive measurements taken over a sequence of source stimulus values corresponding to each measurement point. The number of points per sweep can be set by the user.

Input. The instrument has four scalar detector inputs A, B, C and D; the D input can also be defined as a power meter sensor input. A counter input is also available for measuring frequency.

Display Channel (or Channel) is a signal path associated with the display, and should not be confused with the term 'Input', defined above. The instrument is capable of displaying one or two channels simultaneously. Each channel can be defined to be either a swept channel (e.g. scalar or fault location) which is capable of displaying either one or two measurement traces, or as a readout channel which can display either one or two digital readouts derived from the power meter or counter. Thus a total of four traces/readouts can be displayed simultaneously.

Domain. For swept measurements, the domain is the variable plotted on the X (horizontal) axis of the channel graticule (e.g. frequency, power, distance). A swept channel is capable of displaying one or two traces of the same domain, i.e. both traces share the same x-axis annotation.

Response. For swept measurements, response is the measurement (e.g. power, voltage, frequency) that is displayed on the Y (vertical) axis of the graticule.

Measurement point is a single piece of data representing a measurement at a single source stimulus value.

Power Sensor. Power sensors are connected to the instrument's power meter via Input D of the MTS, and provide a signal representing the RF power incident upon them. The power measurement is displayed as a digital reading on a readout channel.

Detector. A detector provides a DC voltage representing the RF power incident upon it, but has a wide dynamic range and fast response time, making it suitable for swept measurements.

The following terms are associated with fault location measurements:

Distance resolution is the minimum separation at which two peaks can be distinguished, and is inversely proportional to the measurement bandwidth.

Amplitude error occurs when a time domain peak falls between two adjacent points, leading to an underestimate of the amplitude of the peak. Amplitude error is a function of point spacing: the more measurement points there are the smaller the error.

Point spacing is the time interval between adjacent points on a swept display; the higher the number of measurement (domain) points, the smaller the point spacing. Point spacing is important for both amplitude accuracy and the accurate location of discontinuities in fault location measurements.

ASSOCIATED PUBLICATIONS

Two other manuals are supplied with the MTS, which provide the following information:

- **The GPIB Operating Manual** covers remote operations of the MTS. A full description is given of the GPIB command set and the conventions used in the implementation of the commands. The manual assumes familiarity with local operation of the instrument.
- **The Getting Started Manual** shows how the instrument is used by providing examples of some typical measurement situations.

PERFORMANCE DATA - 6200A SERIES MTS

Synthesized Sweep Generator

FREQUENCY

Range	Resolution	CW Accuracy	Typical Swept Accuracy	Levelling Power Range
6200A	10 MHz to 26.5 GHz	10 MHz to 26.5 GHz	10 MHz to 2 GHz	6200A/6201A/6202A/6203A standard
6201A	10 MHz to 8 GHz	2 GHz to 8 GHz	2 GHz to 8 GHz	6204A
6202A	10 MHz to 2 GHz	10 MHz to 18 GHz	8 GHz to 18 GHz	6204A
6203A	10 MHz to 26.5 GHz	18 GHz to 20 GHz	20 GHz to 26.5 GHz	6204A
6204A	10 MHz to 46 GHz	26.5 GHz to 46 GHz	40 GHz to 46 GHz	6204A
	1 Hz			
	2 Hz			
		<±50 Hz ±Frequency standard accuracy		
		<±100 Hz ±Frequency standard accuracy		
			Step time: 250 μs	
			<5 kHz	
			<100 kHz	
			<1.5 kHz	
			<50 Hz	
			<50 Hz	
			10 ms	

POWER

6200A/6201A/6202A/6203A standard	6204A	All versions + Option 001 (step attenuator)
10 MHz to 2 GHz	10 MHz to 2 GHz	10 MHz to 2 GHz
2 GHz to 8 GHz	2 GHz to 8 GHz	2 GHz to 8 GHz
8 GHz to 18 GHz	8 GHz to 18 GHz	8 GHz to 18 GHz
18 GHz to 20 GHz	18 GHz to 20 GHz	18 GHz to 20 GHz
20 GHz to 26.5 GHz	20 GHz to 26.5 GHz	20 GHz to 26.5 GHz
26.5 GHz to 40 GHz	26.5 GHz to 40 GHz	26.5 GHz to 40 GHz
40 GHz to 46 GHz	40 GHz to 46 GHz	40 GHz to 46 GHz
Guaranteed power	Guaranteed power	Guaranteed power
-10 dBm to +7 dBm	-10 dBm to +6 dBm	-80 dBm to +5 dBm
-10 dBm to +6 dBm	-10 dBm to +5 dBm	-80 dBm to +4 dBm
-10 dBm to +5 dBm	-10 dBm to +5 dBm	-80 dBm to +3 dBm
-10 dBm to +5 dBm	-10 dBm to +5 dBm	-80 dBm to +2 dBm
-10 dBm to +3 dBm	-10 dBm to +3 dBm	-80 dBm to +1 dBm
-10 dBm to 0 dBm	-10 dBm to 0 dBm	-80 dBm to -3 dBm
-10 dBm to -3 dBm typical	-10 dBm to -3 dBm typical	-80 dBm to -3 dBm
Max. power typical	Max. power typical	Max. power typical
+11 dBm	+10 dBm	+9 dBm
+8 dBm	+8 dBm	+6 dBm
+10 dBm	+8 dBm	+7 dBm
+6 dBm	+6 dBm	+5 dBm
+6 dBm	+6 dBm	+4 dBm
+2 dBm	+2 dBm	0 dBm
-1 dBm	-1 dBm	-5 dBm

For Option 002 (field replaceable RF connector, available for 6200A, 6201A, 6202A and 6203A) guaranteed levelled output is reduced by 0.5 dB.

6203A	0 °C to 20°C	< 0.1 dB/°C
	20 °C to 30°C	< 0.08 dB/°C
	30 °C to 50°C	< 0.06 dB/°C
	0 °C to 20°C	< 0.02 dB/°C
	20 °C to 40°C	< 0.04 dB/°C
	40 °C to 50°C	< 0.08 dB/°C

Typical values following power calibration at operating temperature. Self-calibration with a power sensor removes temperature effects.

POWER STABILITY WITH TEMPERATURE

6200A/6201A/6202A

EXTERNAL LEVELLING

Via rear panel BNC input socket. Accepts signals from a detector (positive or negative) or from the analogue output of a power meter (0 to ±1 V). Accuracy depends on levelling technique.

<±1 dB ±0.3 dB ±2% of attenuator setting in dB, whichever is greater.

<±1 dB (±1 dB or ±4% of attenuator setting in dB, whichever is greater).

<±1.5 dB (±1 dB or 4% of attenuator setting in dB, whichever is greater).

26.5 GHz to 40 GHz	Linearity
10 MHz to 8 GHz	With Option 001
8 GHz to 26.5 GHz	(including Option 002 if fitted)
0 dBm	Accuracy (including flatness at
	0 dBm)

10 MHz to 26.5 GHz	Accuracy (including flatness at
26.5 GHz to 40 GHz	0 dBm)
40 GHz to 46 GHz	

INTERNAL LEVELLING

<±1 dB, <±0.5 dB typical	Standard
<±1.5 dB, <±0.7 dB typical	With Option 001
<±3 dB typical	

>25 dB	Standard
>10 dB	With Option 001
>80 dB	

Power sweep range (from maximum levelled power)

Standard	Resolution
With Option 001	0.01 dB
Settable power range	
Standard	
With Option 001	
Settable power range	

-20 dBm to +20 dBm	Standard
-90 dBm to +20 dBm	With Option 001

Reverse input power

100 mW maximum.
 Precision N (female), 50 Ω.
 MPC (Marconi Precision Connector) 3.5 mm (female),
 50 Ω.
 Precision 2.92 mm (female), 50 Ω.
 Field replaceable, 50 Ω precision 3.5 mm (female)
 and N-type (female).

Option 002
 6204A

6203A
 6200A/6201A/6202A

Type

OUTPUT CONNECTOR

10 MHz to 2 GHz
 2 GHz to 26.5 GHz
 26.5 GHz to 46 GHz

<1 kHz peak
 <(500F) Hz peak where F is the frequency in GHz.
 <(1000F) Hz peak where F is the frequency in GHz.

Residual FM

10 MHz to 2 GHz
 2 GHz to 8 GHz
 8 GHz to 12 GHz
 12 GHz to 20 GHz
 20 GHz to 26.5 GHz
 26.5 GHz to 40 GHz

In 100 kHz bandwidth in CW mode

<-90 dBc/Hz
 <-78 dBc/Hz
 <-74 dBc/Hz
 <-70 dBc/Hz
 <-67 dBc/Hz
 <-57 dBc/Hz

Phase noise

10 MHz to 2 GHz
 2 GHz to 8 GHz
 8 GHz to 26.5 GHz
 26.5 GHz to 40 GHz

Typical values measured in 1 Hz bandwidth at 20 kHz
 offset from the carrier in CW mode.

There are no sub-harmonics for frequencies above
 2 GHz.

<-50 dBc
 <-60 dBc
 <-60 dBc
 <-60 dBc
 <-50 dBc
 <-60 dBc
 <-50 dBc
 <-40 dBc

Spurious signals (typical)

2 GHz to 26.5 GHz
 26.5 GHz to 40 GHz

None
 <-40 dBc typical

Sub-harmonics

10 MHz to 2 GHz
 2 GHz to 8 GHz
 8 GHz to 26.5 GHz
 26.5 GHz to 40 GHz

<-27 dBc, -35 dBc typical.
 <-35 dBc, -40 dBc typical.
 <-40 dBc, -50 dBc typical.
 <-20 dBc typical

Harmonics

0 °C to 20°C
 20 °C to 30°C
 30 °C to 50°C

<0.12 dB/C
 <0.15 dB/C
 <0.05 dB/C
 <0.06 dB/C

6204A

10 MHz to 2 GHz
 2 GHz to 40 GHz

VOLTAGE RAMP OUTPUT

0 to +10 V ramp output proportional to the start and stop values of a frequency or power sweep, available from rear panel BNC Voltage/Current output.

Linearity
 Range
 1 V or 0.5 V/GHz selectable (20 V maximum in 1 V/GHz mode).
 ±15 mV.

Voltage proportional to frequency available from rear panel BNC Voltage/Current output.

VOLTS/GHZ

With option 001 minimum return loss specification degrades by up to 5 dB.
 With option 002 minimum return loss specification degrades by up to 3 dB.

Source match (internally levelled) 6200A/6201A/6202A/6203A	6204A	VSWR (minimum)	Typical Return Loss (dB)	Minimum Return Loss (dB)
10 MHz to 50 MHz	< 1.45 : 1	> 17	> 15	> 15
50 MHz to 2 GHz	< 1.11 : 1	> 33	> 26	> 26
2 GHz to 8 GHz	< 1.2 : 1	> 30	> 21	> 21
8 GHz to 12 GHz	< 1.35 : 1	> 25	> 16.5	> 16.5
12 GHz to 26.5 GHz	< 1.45 : 1	> 20	> 15	> 15
10 MHz to 40 GHz	< 1.93 : 1	> 12	> 10	> 10
40 GHz to 46 GHz	< 1.93 : 1	> 10	> 10	> 10

Programmable Voltage/Current Source

VOLTAGE OUTPUT

Range
-15 V to +15 V
Resolution
1 mV
Accuracy
±15 mV

Total power supplied not to exceed 2.5 W.

CURRENT OUTPUT

Range
-150 mA to +150 mA
Resolution
10 µA
Accuracy
±300 µA
Stability with temperature
10 µA/°C

Total power supplied not to exceed 1.25 W.

OUTPUT CONNECTOR

Rear panel BNC.

Scalar Analyzer

NUMBER OF INPUTS

Four (A, B, C and D)

DETECTION MODES

AC and DC.

DYNAMIC RANGE

AC detection
80 dB (-60 to +20 dBm), 85 dB typical (-65 to +20 dBm)
DC detection
70 dB (-50 to +20 dBm)

NUMBER OF MEASUREMENT POINTS

User selectable from 2 to 1601.

NUMBER OF CHANNELS

Two. Two measurements may be made per channel allowing a total of four simultaneous measurements.

SWEEP TIME

Settable range
40 ms to 500 s, automatically selected or manually entered.

DIRECT VOLTAGE INPUT RANGE

Measurement times
401 points
1601 points
Input A, B and C
0 to +4.5 V or 0 to +4.5 V, depending on accessory cable used
Input D
0 to -9 V or 0 to +9 V, depending on accessory cable used

NOISE REDUCTION

Averaging
Smoothing
1 to 1000 (applied per measurement).
Aperture settable from 0.01 to 20% of span, resolution 0.01%

CALIBRATION

Path calibration (normalization) types
Through, short/open, short.

INSTRUMENTATION ACCURACY

±0.05%

SYSTEM ACCURACY

Refer to individual specifications for detectors and Return Loss Bridges.

Fault Location

DISTANCE

Units

Accuracy

Full scale

Minimum resolution

- 6200A
- 6201A
- 6202A
- 6203A
- 6204A

Metres or feet.

0.1% of range or 3 mm, whichever is the larger (for a single fault up to 1 km range).

Up to 25 km depending on cable or waveguide loss.

For two equal amplitude discontinuities using maximum sweep width.

- $1.82 \times V_r$ cm.
- $4.54 \times V_r$ cm
- $18.2 \times V_r$ cm
- $1.37 \times V_r$ cm
- $0.91 \times V_r$ cm

where V_r is relative velocity.

DYNAMIC RANGE

AC detection
DC detection

10 MHz to 26.5 GHz **26.5 to 40 GHz**
80 dB >40 dB typical
70 dB >40 dB typical

MEASUREMENT TIME
(401 points)

Normal mode
Enhanced mode

> 250 ms
> 500 ms

NUMBER OF MEASUREMENT POINTS

User selectable from 51 to 512.

Power Meter

Input D may be defined either as a power meter sensor input or as a scalar detector input.

FREQUENCY RANGE 30 kHz to 40 GHz, dependent upon sensor used.

POWER RANGE -70 dBm (100 pW) to +35 dBm (3 W), dependent upon sensor used.

INSTRUMENTATION ACCURACY

±0.05%

CORRECTION

Calibration Factor
Range
Resolution

0.01 to 200%
0.01%

Linearity Factor

0.1 to 15

Range
Resolution

0.1

POWER REFERENCE

Used for Power Sensor correction.

Output Connector

N (female) 50 Ω. Adapters are supplied with 75 Ω and MPC (Marconi Precision Connector) 3.5 mm Power Sensors.

Frequency

50 MHz ±0.01 MHz.

Level

1 mW.

Uncertainty

±0.7% traceable to National Standards.

Accuracy

±1.2% worst case for one year.

AUTO-ZERO

Set

Removes DC offset from signal input.

6910 Series

±200 nW.

6920 Series

±100 pW.

6930 Series

±6 μW.

Drift over 1 hr at constant temperature

6910 Series

±10 nW.

6920 Series

±100 pW.

6930 Series

±300 nW.

Noise

6910 Series
6920 Series
6930 Series

±100 nW.
±100 pW.
±3 µW.

RESPONSE TIME

< 100 ms.

AVERAGING

1 to 1000 selected automatically or manually entered.
Also selectable by resolution: 0.01, 0.1 or 1 dB

RESOLUTION

2 to 4 digits, user selectable

CHART RECORDER

Rear panel voltage/current BNC output gives a voltage
proportional to measured power.

Sensitivity

0 to 5 V. 0 V level dependent upon type of detector or
sensor used.

Log mode

1 V per decade.

Linear mode

Scaling dependent on detector or sensor.

Frequency Counter

FREQUENCY RANGE

6202A
6200A/6201A/
6203A/6204A

10 MHz to 2 GHz
10 MHz to 20 GHz.
10 MHz to 26.5 GHz.

RESOLUTION

Readout mode

Selectable from 1 Hz to 100 MHz in decade steps.

Swept mode

6 digits

ACCURACY

Readout mode

<±25 Hz ± frequency standard error.

Swept mode

(6 significant figures or ±100 Hz whichever is greater) ± frequency standard error.

SENSITIVITY

(typical)

25 MHz to 10 GHz
10 GHz to 20 GHz
20 GHz to 26.5 GHz

< -20 dBm
< -15 dBm
< -10 dBm
< -19 dBm
< -14 dBm
< -8 dBm

MAXIMUM INPUT LEVEL

+5 dBm typical.

DAMAGE LEVEL

+27 dBm peak.

INPUT CONNECTOR

Type

6200A/6201A/6202A
6203A/6204A
Option 002

Precision N Type (female).
MPC (Marconi Precision Connector) 3.5 mm (female) and
Field replaceable, 50 Ω precision 3.5 mm (female) and
N-type (female).

Input impedance

50 Ω nominal.

FM TOLERANCE

Readout mode

20 MHz peak to peak at 45 Hz to 10 MHz rate.

Swept mode

1.5 MHz peak to peak at 75 Hz to 10 MHz rate.

AM TOLERANCE

Readout mode

Typically 2s for frequencies greater than 300 MHz, at
1 Hz resolution.

Swept mode

Typically 150 ms per point.

SELECTIVITY

Typically 25 dB.

Display
TYPE

Colour active matrix TFT liquid crystal display
16.5 cm (6.5 inch) visible diagonal. External colour
monitor (VGA) output available on rear panel.

NUMBER OF CHANNELS

Two. A channel may be configured either as a swept
channel for displaying traces or a readout channel for
displaying readouts of values such as power and
frequency.

NUMBER OF TRACES/READOUTS

Four. Maximum of two per channel.

TITLES

Screen title plus individual measurement titles.
Individual title coded to each trace/readout.

Swept channel characteristics

The horizontal and vertical axes can be configured to display a variety of different measurements. The horizontal axes, referred to as 'Domain', may be defined to display the stimulus such as frequency, power, voltage, current and distance. The vertical axis, referred to as 'response', may display frequency, power and voltage.

DOMAIN (Horizontal axis)

Frequency modes CW, start/stop, centre/span, alternate sweep.
 Frequency resolution Settable to 1 Hz, displayed as 6 digits.

Frequency offset Frequency offset between source and display can be entered to characterize frequency changing devices such as mixers.

Frequency scaling Multiplication factor between source and display can be entered to characterize frequency multipliers and dividers.

Power sweep range Range depends on Option - refer to Synthesized Sweep Generator section.

Power offset Power offset between source and display can be entered for use when measuring amplifiers and attenuators.

RESPONSE (Vertical axis)

Units dBm, dB, pW to kW, nV to V, VSWR, Hz to GHz.
 Scaling Manual auto-scale (single shot), continuous auto-scale (every sweep) or user selectable.

Reference level position Reference level may be set to any graticule line.
 Reference level value -199.99 to +199.99 all units except VSWR. 1 to 100 VSWR.

MEASUREMENT MANIPULATION

Scalar detector and counter inputs

Display live measurement.
 Display trace memory.
 Display live measurement relative to trace memory.
 Measurement hold may be applied for each trace.

Scalar detector inputs only

Any input or ratio of inputs may be assigned to any one or more than one of the traces. A trace may display absolute power, power relative to a path calibration or power minus a trace memory.

Complex limit lines

Four stores of 12 segments each. Each segment defines an upper and a lower limit line or point. Any store can be applied to any trace.

Input offsets

An offset in the range -99.99 to +99.99 dB in 0.01 dB steps may be applied per detector input.

MARKER RESOLUTION

Domain (Horizontal)	Frequency	Power	Voltage	Current	Response (Vertical)	Power	Frequency	Voltage
------------------------	-----------	-------	---------	---------	------------------------	-------	-----------	---------

Marker, delta marker, minimum, maximum, search left, search right, N dB bandwidth (with centre frequency). Peak to peak response value and optional test against limit. dB/Octave and dB/Decade. Tracking for Max/Min, Peak to Peak and Bandwidth functions. Bandwidth function has ability to show centre frequency/delta frequency ratio.

Six digits with over-ride to give 1 Hz resolution.

0.01 dB.	1 mV.	10 μ A.	0.01 dB.	Six digits.	1 nV.
----------	-------	-------------	----------	-------------	-------

Marker functions

MARKERS

Eight per channel plus a separate delta marker.

Readout channel characteristics

RESOLUTION

Power	2 to 4 digits, user selectable.
Frequency	1 Hz. to 100 MHz, user selectable.
Voltage	Four digits.

UNITS

Power	dBm, dB, pW to kW.
Frequency	Hz to GHz.
Voltage	nV, uV, mV, V, kV.

MEASUREMENT MANIPULATION

Marker readout	Spot readings may be made at the domain value specified by the active marker.
Limit checking	Upper and lower test limits may be entered.
Relative measurement	To display the measured offset from a previously entered measured reading.
Max/min hold	To display maximum and minimum values over a period of time for drift measurements.
Duty cycle	To display peak power given by average power measured/duty cycle. Range: 0.001 to 100%
Peaking meter display	Analogue display to assist when adjusting power levels.
Input offsets	An offset in the range -99.99 to +99.99 dB in 0.01 dB steps may be applied per detector or sensor input.

Auxiliary Inputs and Outputs

GPB INTERFACE

GPB is IEEE 488.1 and 488.2 compatible. The interface has three applications:

- Instrument control with full talk and listen capability.
- Control of a plotter using HPGL. Plotter output is buffered to permit measurements to proceed whilst plotting.
- Control of a second MTS for mixer measurements. The instruments may be set to sweep with a fixed frequency offset between them.

MEMORY CARD INTERFACE

For external storage of data.

PARALLEL PRINTER OUTPUT

Compatible with Epson FX, Hewlett Packard DeskJet/LaserJet or Canon BJ series printers. A mechanism is provided to select which type of printer is connected. Output is buffered to allow further measurements whilst printing.

FREQUENCY STANDARD IN/OUT BNC

1 or 10 MHz input or 10 MHz output (nominally 2 V pk-pk into 50 Ω) selectable from front panel.

EXTERNAL LEVELLING INPUT BNC

For connection of remote detector or power meter for source levelling.

VOLTAGE/CURRENT OUTPUT BNC

User definable to be:

Volts/GHz

Fixed

Swept V/I

Chart recorder

Ramp output

EXTERNAL MONITOR

Output to a VGA 640 x 480 standard colour monitor. Rear panel 15 way "high density" D-type female connector.

0 to +10 V ramp output proportional to the start and stop values of a frequency or power sweep.

Voltage proportional to power level of scalar detector or power meter sensor input.

Swept voltage or current for voltage/current domain measurements.

Fixed voltage or current output for bias measurements.

Voltage proportional to frequency output from source.

General

FREQUENCY STANDARD

For synthesized sweep generator and frequency counter.

Internal

30 MHz VCXO.

Temperature stability

Better than ± 0.5 ppm/ $^{\circ}$ C.

Ageing

Better than ± 1 in 10^6 per year.

External

1 or 10 MHz standard rear panel BNC input socket.

MEMORIES

Standard

Trace memories

4

Settings stores

10

Power sensor cal stores

Stores for 10 sets of power sensor calibration and linearity factor data.

Memory card

Extra stores available on memory card.

REAL TIME CLOCK

Date and time.

Used to date-stamp hard copies and to determine instrument operating hours.

ELECTRO-MAGNETIC COMPATIBILITY

Conforms with the protection requirements of EEC Council Directive 89/336/EEC.

Complies with the limits specified in the following standards:

EN55011 Class B CISPR 11

EN50082-1 IEC 801-2,3,4

EN60555-2 IEC 555-2

Complies with IEC 348.

SAFETY

RATED RANGE OF USE (over which full specification is met)

Temperature

0 to 50 $^{\circ}$ C.

Humidity

93% RH at 40 $^{\circ}$ C

CONDITIONS OF STORAGE AND TRANSPORT

Temperature

-40 to +70 $^{\circ}$ C.

Humidity

93% RH at 40 $^{\circ}$ C.

DIMENSIONS AND WEIGHT

Height	Width	Depth	Weight
197 mm (7.75 in)	389 mm (15.3 in)	546 mm (21.5 in)	16 kg (35 lb)
			15 kg (33 lb)
			14.5 kg (32 lb)
			16.25 kg (36 lb)
			17 kg (37.9 lb)

POWER REQUIREMENTS

Switchable voltage ranges	AC Supply
115 V set	45 to 440 Hz, 500 VA maximum.
230 V set	
90 to 132 V	
188 to 265 V	

NOTES:

Guaranteed Power Range, Power Accuracy and VSWR are calibrated for the temperature range 0 to 50°C and are subject to the availability of National Standards. Typical performance figures are non-warranted.

VERSIONS AND ACCESSORIES - 6200A SERIES MTS

Ordering numbers	Options
6200A	Option 001
6201A	Option 002
6202A	
6203A	
6204A	

10 MHz to 20 GHz Microwave Test Set
 10 MHz to 8 GHz Microwave Test Set
 10 MHz to 2 GHz RF Test Set
 10 MHz to 26.5 GHz Microwave Test Set
 10 MHz to 46 GHz Microwave Test Set

70 dB step attenuator
 Field replaceable RF output connector (3.5 mm and N-type) (Not available for 6204A.)

SUPPLIED ACCESSORIES

43123-076Y	AC supply lead
06950-081W	2 m power sensor cable
46882-106P	Operating manual
06950-069	Input socket cap
46882-256E	GPIB Operating Manual
46882-257U	Getting Started Manual

OPTIONAL ACCESSORIES

6230 Series Scalar Detectors

56230-501T	10 MHz to 20 GHz, N type (m)
56233-501K	10 MHz to 26.5 GHz, MPC (Marconi Precision Connector) 3.5 mm (m)
56234-501F	10 MHz to 40 GHz, 2.92 mm (m)

Power Meter Sensors

6910 Series (-30 dBm to +20 dBm)

56910-900L	10 MHz to 20 GHz, N type (m)
56911-900X	10 MHz to 20 GHz, APC 7.
56912-900U	30 kHz to 4.2 GHz, N type (m)
56913-900D	10 MHz to 26.5 GHz, MPC (Marconi Precision Connector) 3.5 mm (m)
56914-001R	10 MHz to 40 GHz, 2.92 mm (m)
56914-002B	10 MHz to 40 GHz, 2.92 mm (m) plus waveguide 22 transformer
56919-900Y	30 kHz to 3 GHz, N type 75 Ω. (m)

6920 Series (-70 dBm to -20 dBm)

56920-900J	10 MHz to 20 GHz, N type (m)
56923-900T	10 MHz to 26.5 GHz, MPC (Marconi Precision Connector) 3.5 mm (m)
56924-001B	10 MHz to 40 GHz, 2.92 mm (m)
56924-002K	10 MHz to 40 GHz, 2.92 mm (m) plus waveguide 22 transformer

6930 Series (-15 dBm to +35 dBm)

56930-900F
56932-900N
56934-001K
56934-002A
10 MHz to 18 GHz, N type (m)
30 kHz to 4.2 GHz, N type (m)
10 MHz to 40 GHz, 2.92 mm (m)
10 MHz to 40 GHz, 2.92 mm (m) plus waveguide 22
transformer

Transmission Line Test Heads

56581-001T
56583-001S
20 GHz Transmission Line Test Head, 6581
26.5 GHz Transmission Line Test Head, 6583 (usable
to 40 GHz for fault location).

Fault Location Test Heads

56581-002P
56583-002W
20 GHz Fault Location Test Head, 6581E
26.5 GHz Fault Location Test Head, 6583E (usable to
40 GHz for fault location).

Pulse Modulator

56145-001A
54441-019A
70 MHz to 20 GHz Pulse Modulator, 6145
AC power supply

Sensor/Detector Cables

06950-086M
06950-087C
06950-088R
03964-325P
54311-111E
54311-113Y
54311-112U
54311-170B
54311-118G
54311-120F
5 m Power sensor cable
15 m Power sensor cable
50 m Power sensor cable
5 m Detector extension cable
15 m Detector extension cable
25 m Detector extension cable
Negative Voltage measurement cable
Positive Voltage measurement cable
1.5 m extension cable for Transmission Line Test
Head.
1.5 m extension cable for Fault Location Test Head.

Miscellaneous Electrical Cables

43129-189U
43126-012S
46884-560M
GPIB Cable
50 Ω BNC(m) to BNC(m), 1.5 m
Parallel printer interface cable

Microwave Cables

54311-109U
54311-110H
54311-116I
54311-117F
Ruggedized cable N(m) to N(m), 1.5 m (for
Fault location)
Ruggedized Cable 3.5 mm (m) to 3.5 mm (m) 3 m (for
location)
Ruggedized cable N(m) to N(m) 3 m (for Fault
location)
Ruggedized cable 3.5 mm (m) for 3.5 mm (m), 1.5 m
Location)
Ruggedized cable 3.5 mm (m) for 3.5 mm (m), 1.5 m
(for Fault Location)
Cable N(m) to N(m) 0.5 m
Cable 3.5 mm (m) to 3.5 mm (m) 0.5 m
Cable 2.92 mm (m) to 2.92 mm(m) 0.5 m

Return Loss Bridges (Autotesters)

59999-151W	10 MHz to 18 GHz 7 mm
59999-158R	10 MHz to 18 GHz N(f)
59999-159B	10 MHz to 18 GHz N(m)
59999-152D	10 MHz to 26.5 GHz W SMA (m)
59999-166H	10 MHz to 26.5 GHz W SMA (f)
59999-168V	10 MHz to 40 GHz 2.92 mm (m)
59999-169V	10 MHz to 40 GHz 2.92 mm (f)
59999-170E	5 MHz to 2 GHz N (f)

Power Splitters

54311-123S	Power splitter DC to 18 GHz Type N
54311-124W	Power splitter DC to 26.5 GHz 3.5 mm
54311-161T	Power splitter DC to 40 GHz 2.92 mm
54311-187S	Power divider DC to 18 GHz
54311-188W	Power divider DC to 26.5 GHz

Applications and Memory Cards

59000-181G	32K blank memory card
59000-182V	128K blank memory card
59000-186T	512K blank memory card
59000-264R	Transmission Line Database
59000-265B	Gain Compression Application
59000-280L	Guided Measurements Application
54211-009X	Memory card reader/writer unit
54441-016R	AC adapter - UK style for reader/writer
54441-017B	AC adapter - European style for reader/writer
54441-018K	AC adapter - USA style for reader/writer

Miscellaneous

54127-309Z	Rack mounting kit
54127-311A	Additional rack mounting kit when a 6210 is fitted.
54124-027S	Front storage cover
54417-002R	Waveguide 22 to 2.92 mm transformer
54121-034F	Detector input socket cap
54112-160G	Hard flight case for 6200 and 6210
54112-161V	Hard flight case for 6200
54112-157G	Soft carrying case
46882-239T	6200A Series Maintenance Manual

ASSOCIATED EQUIPMENT

The following items of equipment are recommended for use with the MTS, since they are known to operate satisfactorily with the instrument.

HPGL GPIB Plotters
HP 7440A
HP 7470A
HP 7475A

Epson FX Series Printers
Epson FX-105
Epson FX-800
Epson FX-850
Epson FX-1000
Hewlett Packard Deskjet/Laserjet Series Printers
Canon BJ Series Printers
Canon BJ10EX
Canon BJ10SX
Canon BJ330
HP Deskjet 500
HP Deskjet 500C
HP Laserjet 4L
HP Laserjet 4P

VGA 640 x 480 standard colour monitors
Mitsubishi! FA3415 ETKL
Taxan 770 Plus

The monitor cable must be specified for use with a VGA interface, and must have a 15-way D-type female connector, for connection to the EXT MONITOR input of the MTS.

PERFORMANCE DATA - 6210 REFLECTION ANALYZER

NUMBER OF TEST PORTS

One, for the measurement of S_{11} .

FREQUENCY RANGE

When used with:

6202A	250 MHz to 2 GHz
6201A	250 MHz to 8 GHz
6200A	250 MHz to 20 GHz
6203A/6204A	250 MHz to 26.5 GHz

DYNAMIC RANGE (Noise Floor)

(Source set to +3 dBm)

250 MHz to 500 MHz	>50 dB, 60 dB typical
500 MHz to 18 GHz	>60 dB
18 GHz to 26.5 GHz	>50 dB, 60 dB typical

INSERTION LOSS FROM RF INPUT TO TEST PORT

Typically $5 + (8 \times f/26.5)$ dB where f is the set frequency in GHz.

NUMBER OF MEASUREMENT POINTS

1 to 800, user selectable.

SWEEP TIME

Auto
Sweep time is as fast as possible for the attributes selected.

Manual

Sweep time will never be less than the sweep time entered and may be greater depending on constraints imposed by the system hardware, number of points and measurement software processing overhead.

Fastest time (401 points)

300 ms

Settable range

40 ms to 500 s

NOISE REDUCTION

Averaging

1 to 1000 (applied instrument wide).

Smoothing

0.01% to 20% of span, resolution 0.01%.

CALIBRATION

Calibration types

1 port

Coax

Short, Open, Fixed Load
Short, Open, Sliding Load

Waveguide

Short, Offset Short, Fixed Load
Short, 2 x Offset Shorts
Short, Offset Short, Sliding Load

In addition, the ability to specify sex and connector type of the test port.

Dependent on calibration kit used. Specifications assume a 2 hour warm up period from power on, and an ambient temperature of 23°C ±3°C.

Additional storage is available via memory card (optional accessory).

Four

Type N and 3.5 mm
Type N, 3.5 mm and 7 mm

Same as number of measurement points.

REFLECTION ANALYZER SYSTEM PERFORMANCE

Calibration kits (optional)

Number of cal points

Economy
Full

Calibration stores

N type cal kit (economy)

Directivity

<2 GHz
2 GHz to 18 GHz

>40 dB
>30 dB

Source match

<2 GHz
2 GHz to 18 GHz

>30 dB
>24 dB

Frequency response

Within ±0.25 dB

N type cal kit (full)

Directivity

>40 dB

Source match

Within ±0.2 dB

7 mm type cal kit (full)

Directivity

>50 dB

Source match

Within ±0.1 dB

3.5 mm type cal kit (economy)

Directivity

>40 dB

<2 GHz
2 GHz to 26.5 GHz

>25 dB

Source match

<2 GHz
2 GHz to 26.5 GHz

>30 dB
>22 dB

Frequency response

Within ±0.4 dB

Directivity	>40 dB
Source match	>30 dB
Frequency response	Within ± 0.2 dB

REFLECTION ANALYZER CHANNEL FEATURES

DOMAINS

Frequency

Modes

CW, F1-F2, centre/span, frequency list sweep, harmonic frequency sweep, waveguide frequency sweep.

Ability to blank frequency information.

1 Hz settable.

Six digits displayed on graticule

Power

Sweep range

25 dB
85 dB with MTS step attenuator option

Resolution

0.01 dB settable.

Offset

Ability to enter offset (per channel) between source and display.

Time

Time domain domain response for impedance discontinuity analysis.

Stimuli

Low-pass step
Low-pass impulse
Band-pass impulse

Resolution

(26.5 GHz sweep)

Reflection (in air

0.7 cm, low-pass.
1.4 cm, band-pass.

Point spacing

<0.01 cm

Windowing

Kaiser Bessel, user definable.

Gating

User definable start, stop and shape.

Fencing

User definable start, stop and shape.

Voltage/current

Ability to sweep MTS rear panel V/I output in the range

-15 V to +15 V (± 15 mV, 2.5 W max)

or

-150 mA to +150 mA (± 300 μ A, 1.25 W max

1 mV

10 μ A

RESPONSE

Format

Cartesian

Logarithmic magnitude, linear magnitude, phase, VSWR, real, imaginary, impedance.

Polar

Logarithmic magnitude, linear magnitude, Smith, inverse Smith.

Scaling

Magnitude

0.01 dB/div to 20 dB/div in 1,2,5 sequence.
10⁻¹² units/div to 10³ units/div.

Log format
Lin format

Phase

Cartesian
Polar

0.1 $^\circ$ /div to 180 $^\circ$ /div
45 $^\circ$ /div

Any graticule line.

Reference level position

-99.99 to +99.99 all units except VSWR.
1 to 100 VSWR.

Reference level value

MEASUREMENT MANIPULATION

Display

Display live measurement.

Display trace memory.

Display user-defined expressions involving subtraction and division on a live measurement and a trace memory.

Measurement hold applied per trace.

Four stores of 12 segments each. Each segment defines an upper and a lower limit line. Any store can be applied to any trace.

Eight per trace, any one of which can be enabled to become the active marker, plus a separate delta marker.

Complex limit lines

Markers

DIMENSIONS AND WEIGHT

Height 46 mm (1.8 in)
 Width 325 mm (12.8 in)
 Depth 450 mm (17.7 in)
 Weight 6.5 kg (14.3 lb)

POWER CONSUMPTION

50 W maximum (in addition to MTS consumption).

Type
 Maximum input power

Ruggedised precision 3.5 mm male.
 0.5 W

TEST PORT CONNECTOR

Waveguide cutoff frequency

User definable.

Characteristic impedance

User definable; default 50 Ω .

Non-dispersive media

Relative velocity (V_r) and relative permittivity (ϵ_r) may be entered.

Electrical delay
 Phase offset

Ability to enter delay as either physical length (m) or electrical delay (s).

± 1 s maximum or $\pm 300,000$ km
 $\pm 360^\circ$ maximum

Reference plane extension

User definable

Marker functions

Active marker, delta marker, minimum, maximum, search left, search right, N-dB bandwidth, peak-to-peak response.

Phase

0.01°

Magnitude

0.01 dB, log format.
 Six digits, lin format.

Marker response resolution

Marker response

Current

10 μ A

Voltage

1 mV

Power

0.01 dB

Frequency

Six digits with over-ride to give 1 Hz resolution.

Marker domain resolution

Marker domain

OPTIONS AND ACCESSORIES - 6210 REFLECTION ANALYZER

Options

Option 011 Bias Tee
 Option 012 Retrofit version

Note....

The 6210 can be supplied as part of a system with one of the 6200A Series Microwave Test Sets (MTS) or as a retrofit version for fitting to an existing MTS. The MTS must be fitted with software issue 2.0 or higher; software upgrades are available if required.

SUPPLIED ACCESSORIES

43138-328X	Auxiliary signal channel cable
43138-283G	Auxiliary data cable
43138-284V	Auxiliary power cable
54311-180Y	RF interconnection cable, N type
54311-181N	RF interconnection cable, 3.5 mm

OPTIONAL ACCESSORIES

Cal Kit, Type N - economy version

54424-005X

Comprising:

2 x short circuit (male and female)
 2 x open circuit (male and female)
 2 x fixed load (male and female)
 Ruggedised 3.5 mm to N(m) adapter
 Ruggedised 3.5 mm to N(f) adapter

Fixed load return loss:

<2 GHz 40 dB
 2 GHz to 18 GHz 30 dB

Optional Accessories:

Gauge kit (N-type), comprising:
 2 x gauges, (m) and (f)
 Adapter and gauge blocks
 N-type male/male matched adapter
 N-type male/female matched adapter
 N-type female/female matched adapter

54425-004E

Cal Kit, Type N - full version

54424-003T

Comprising:

As economy kit plus
 2 x sliding load (male and female)

Optional Accessory:

Precision 30 cm airline (N-type)

54425-002D

Cal Kit, 3.5 mm - economy version

54424-009

Comprising:

2 x short circuit (male and female)
2 x open circuit (male and female)
2 x fixed load (male and female)
Female/female precision adapter

Fixed load return loss:

<2 GHz 40 dB
2 GHz to 26.5 GHz 25 dB

Optional Accessories:

Gauge kit (3.5 mm), comprising:
2 x gauges (m) and (f)
Adapter and gauge blocks
3.5 mm torque wrench
3.5 mm male/male matched adapter
3.5 mm male/female matched adapter

Cal Kit, 3.5 mm - full version

54424-007C

Comprising:

As economy kit plus
2 x sliding load (male and female)

Optional Accessory:

Precision 15 cm airline (3.5 mm)

Cal Kit, 7 mm - full version

54424-001W

Comprising:

Short circuit
Open circuit
Fixed load
Sliding load
Gauge and gauge block
Ruggedised 3.5 mm (f) to 7 mm adapter
Collet extractor
Torque wrench

Fixed load return loss:

<2 GHz 50 dB
2 GHz to 18 GHz 30 dB

Optional Accessories:


Precision 30 cm airline (7 mm)
Ruggedised 3.5 mm (f) to 7 mm adapter
Fixed matched load (return loss as above)

54425-001A

54425-163C

54425-009J

Test Port Cables	54311-155S 54311-156W 54311-157D 54311-158T 54311-159P	50 Ω Fixed Loads	54421-009D 54421-010S 54421-011W 54421-012D 54421-013T	Miscellaneous	54112-157G 54124-028W	Note...	Calibration kits and accessories carry a one year warranty excluding wear and tear and mis-use.
Ruggedised 3.5 mm (f) to 7 mm							
Ruggedised 3.5 mm (f) to N-type (m)							
Ruggedised 3.5 mm (f) to N-type (f)							
Ruggedised 3.5 mm (f) to ruggedised 3.5 mm (m)							
Ruggedised 3.5 mm (f) to standard 3.5 mm (f)							
7 mm Fixed Load							
3.5 mm (f) Fixed Load							
3.5 mm (m) Fixed Load							
N-type (f) Fixed Load							
N-type (m) Fixed Load							
Soft carrying case							
Front storage cover for assembled MTS and 6210							

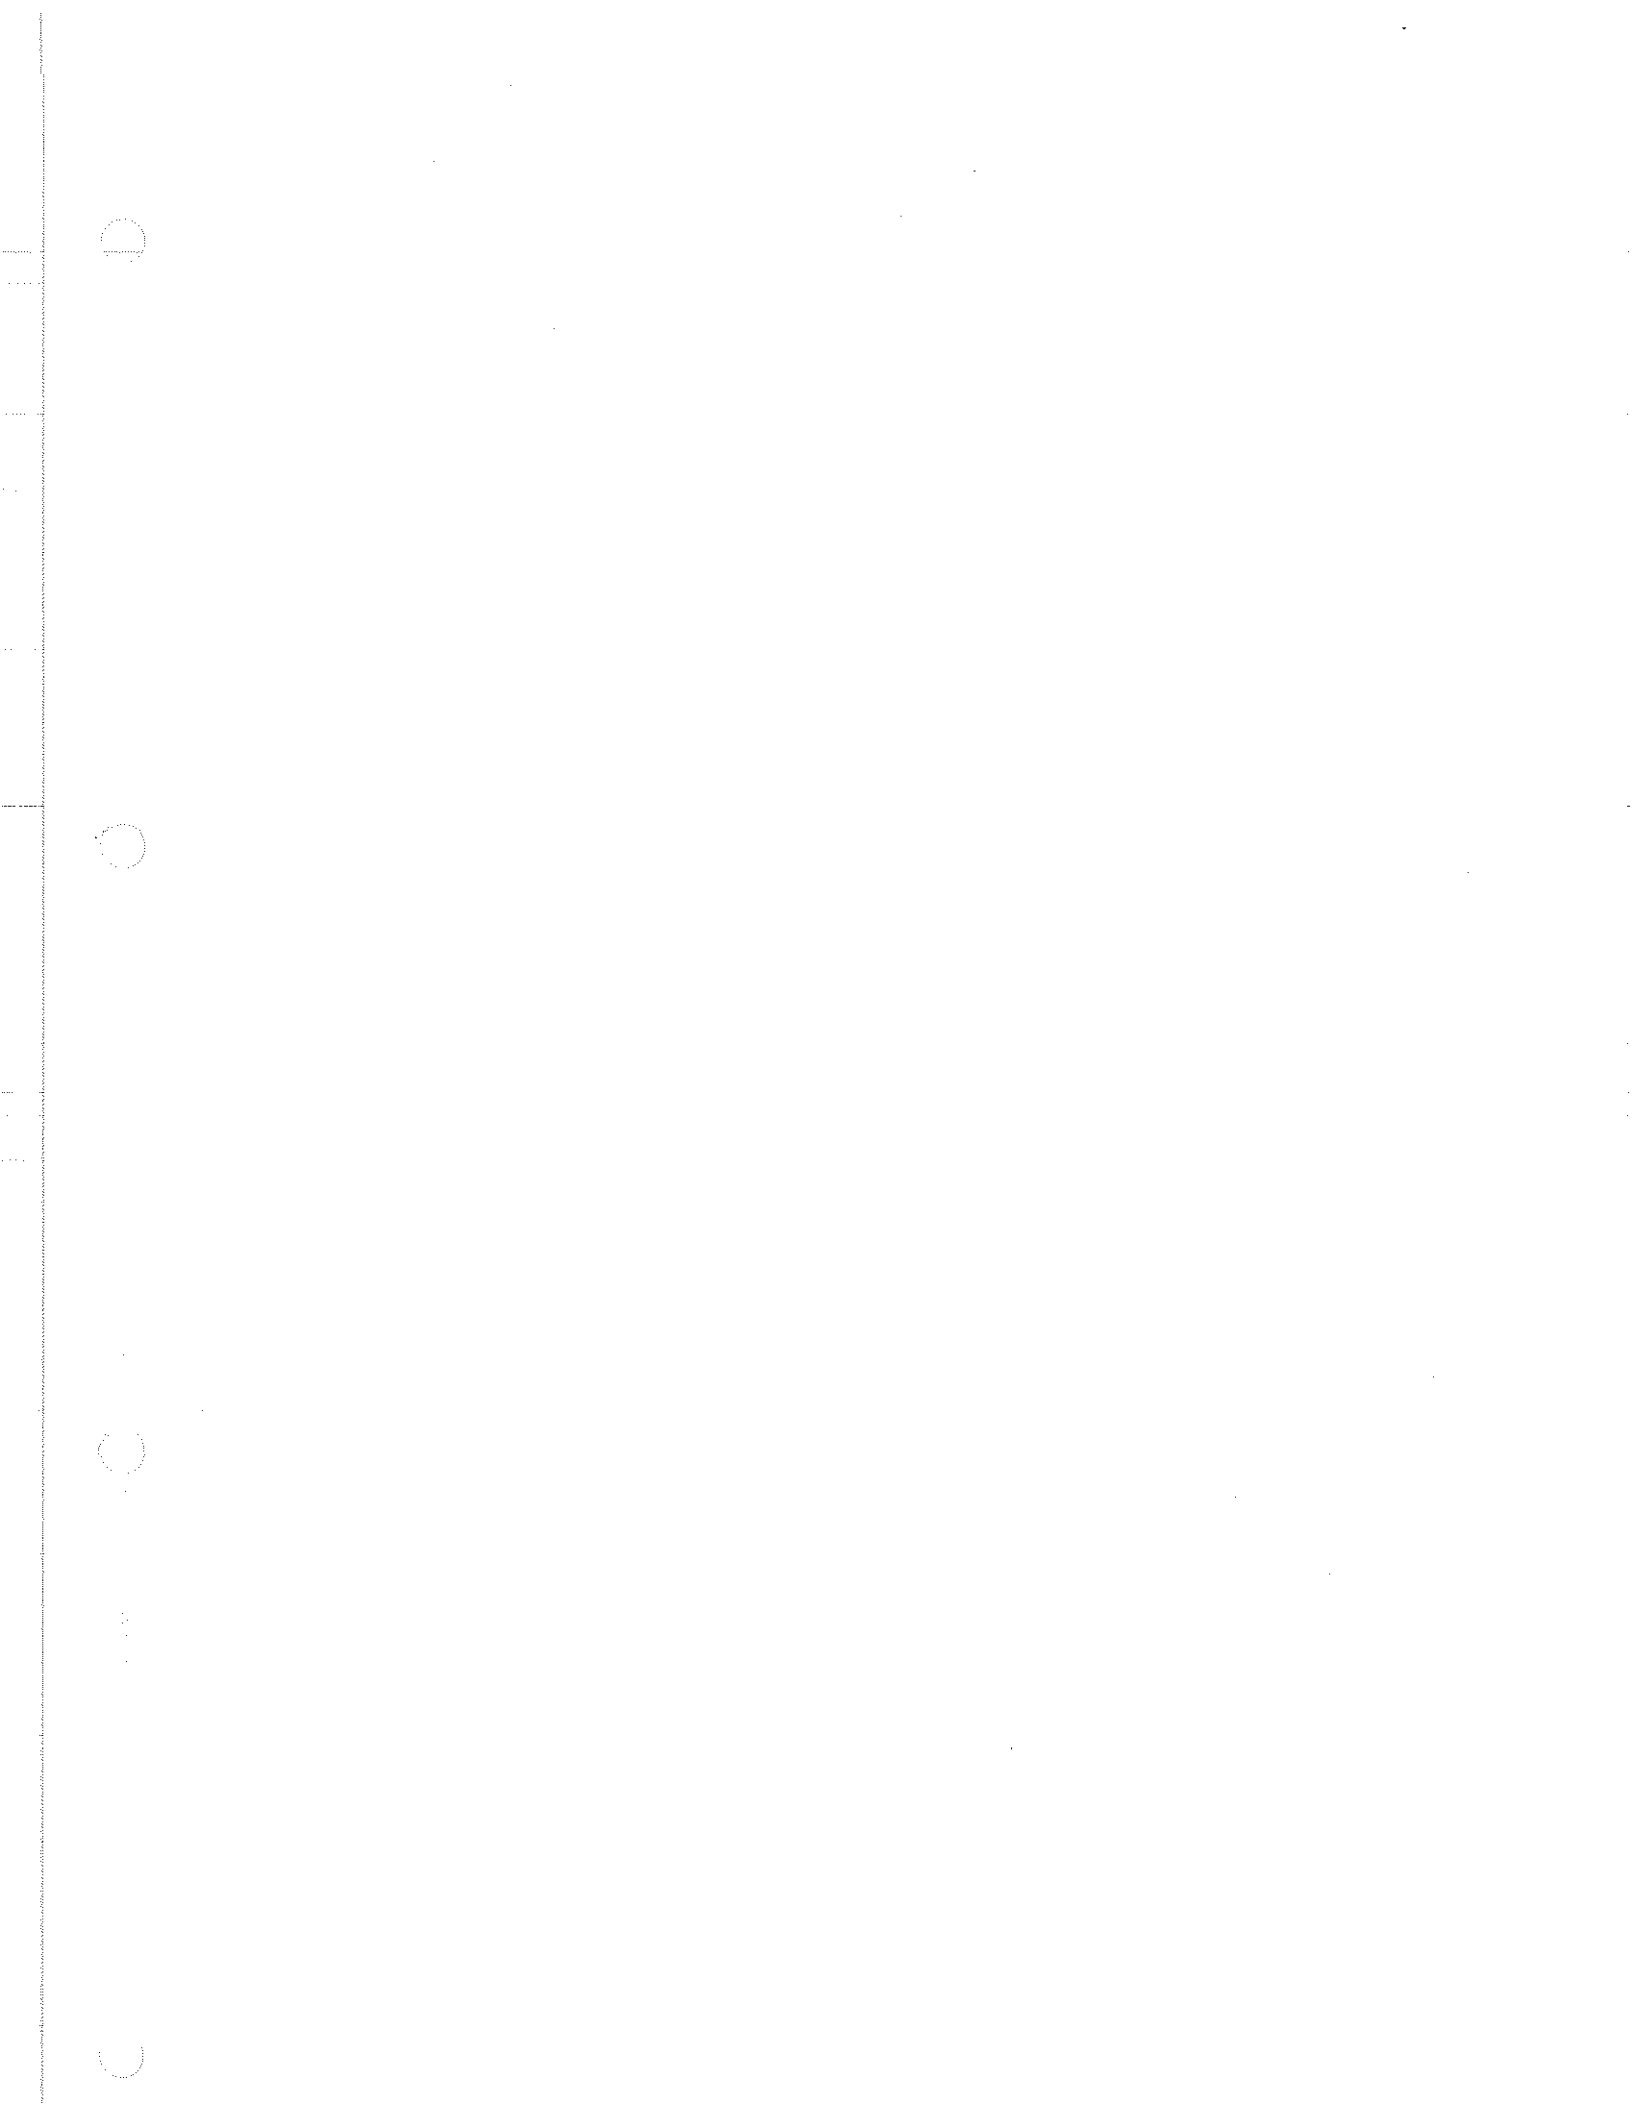

Chapter 2 INSTALLATION

CONTENTS

2-1	INITIAL VISUAL INSPECTION
2-1	AC POWER SUPPLY
2-2	SAFETY TESTING
2-2	GOODS-IN CHECKS
2-2	MOUNTING ARRANGEMENTS
2-3	RACK MOUNTING
2-3	INSTALLATION OF THE 6210 REFLECTION ANALYZER
2-4	ROUTINE MAINTENANCE
2-7	Microwave Connectors
2-7	Cleaning the LCD Window
2-7	BATTERY REPLACEMENT
2-7	Instrument Battery
2-7	Memory Card Battery
2-8	ROUTINE SAFETY TESTING AND INSPECTION
2-8	PUTTING INTO STORAGE
2-10	

LIST OF FIGURES

2-2	Fig. 2-1 Location of Supply Voltage Selector Switch
2-2	Fig. 2-2 Removal of Bail Arm Prior to Rack Mounting
2-3	Fig. 2-3 Side View of a 6210 Fitted to the MTS
2-5	Fig. 2-4 Front and Rear Views of 6200A/6210

INITIAL VISUAL INSPECTION

Immediately after unpacking, thoroughly inspect the instrument for signs of physical damage that may have occurred during shipping. If any damage is found, or if the instrument fails the Goods-In Checks (see below), the instrument must be returned to the following address:

Marconi Instruments Ltd.
The Airport
LUTON
Bedfordshire LU2 9NS

Attach a label indicating the service required, type or model number, serial number and your return address. Use the container and packing materials that were used to ship the instrument.

AC POWER SUPPLY

The instrument requires an AC supply of 90 to 132 V or 188 to 265 V, 45 to 440 Hz, 500 VA. The required supply fuses (time lag) are 4 A for 90 to 132 V operation or 2.5 A for 188 to 265 V operation. Before switching on, ensure that the rear panel voltage selector switch (located above the AC supply connector) is in the

If the fault involves the data acquisition system, another, more specific message may be displayed, such as 'Data acquisition main amp failed'. In this case also, the test results should be examined. In addition, certain hardware failures are reported at power on via the parallel printer port. This allows diagnostic information to be obtained from an instrument which otherwise may appear "dead", e.g. if the graphics system has failed. Further details of the power-on self tests can be found in the Test Results Menu description in Chapter 3.

[UTILITY/Service/Status/Display Test Results]

To examine the record of the test results, use

Self-test failed. Examine power-on test results

The following Goods-In-Check verifies that the MTS is functioning correctly, but does not verify conformance to the listed specification. To verify that the instrument conforms to the specification given in Chapter 1, refer to Chapter 5, Acceptance Testing. For the purpose of the Goods-in-Check, the instrument's self test facility is used. Self tests are performed by the instrument at power on. If a failure occurs, an error report is written to a self test results store held in non-volatile memory (assuming that the failure does not prevent this). In addition, an error message (marked with the 'system failure' icon) is displayed, i.e.

GOODS-IN CHECKS


This product has been safety tested in accordance with BS4743 and IEC Publication 348.

SAFETY TESTING

- EARTH (ground) - Green/Yellow
- NEUTRAL - Blue
- LIVE (phase) - Brown


The AC supply cable is fitted at one end with a female plug which mates with the AC connector at the rear of the instrument. When fitting a supply plug ensure that the connections are as follows:

Fig. 2-1 Location of Supply Voltage Selector Switch

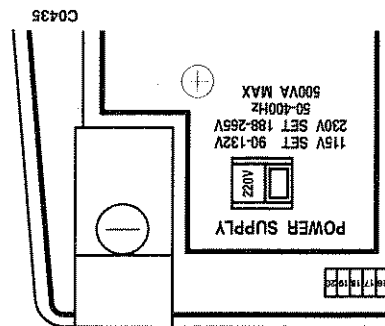

correct position and that the correct fuses are fitted. The switch is operated by inserting a screwdriver blade into the recessed slot and pushing the switch to one side (see Fig. 2-1).

Fig. 2-2 Removal of Bail Arm Prior to Rack Mounting

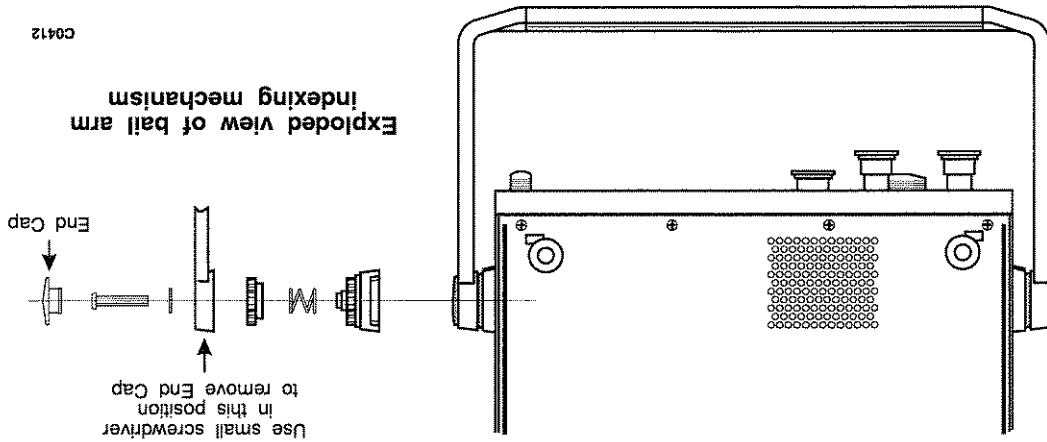

- (1) Unclip both end caps and loosen the screws at both sides.
- (2) Remove one screw and pull the bail arm away from the indexing mechanism. Remove the remaining screw and remove the bail arm.
- (3) If a 6210 is fitted, secure the support tray from kit 54127-311 to the rear of the rack so that it will support the rear of the instrument when it is fitted to the rack.
- (4) Fit the rack mounting brackets to the side rails of the instrument using the supplied M5 screws and washers, then fit the instrument into the rack.
- (5) If a 6210 is present, and the front blanking plate is fitted, ensure that the painted surface of the plate is on the outside.

A 6200 on its own can be mounted in a standard 19 inch rack which has a minimum depth of 550 mm. With a 6210 fitted, the rack depth must be between 550 mm and 800 mm.

Note...

The Microwave Test Set may be mounted in a standard 19 inch rack using the rack mounting kit 54127-309 available as an optional accessory. When a 6210 is fitted to the MTS, an additional mounting kit 54127-311 is needed to support the rear. It consists of a rack mounting tray, which is fitted to the rear of the rack, and a front blanking panel. In both cases the bail arm must first be removed.

RACK MOUNTING

Ensure that the air vent and other ventilation holes are not obstructed, otherwise the maximum temperature specification is reduced, resulting in impaired operation. Avoid standing the instrument or associated sensors/detectors in the vicinity of large transformers or other possible magnetic fields.

MOUNTING ARRANGEMENTS

- Check that the mains power supply line is providing power to the instrument.
 - Check that the rear panel power supply status LEDs are all OFF.
 - Check that the rear panel voltage selector switch matches the supply voltage.
 - Check that the mains fuses have not blown (accessible from the rear panel).
- If the instrument appears to be completely dead, carry out the following:

INSTALLATION OF THE 6210 REFLECTION ANALYZER

The following procedure enables the user to fit a 6210 Reflection Analyzer to a 6200A Series MTS. This will be necessary, for example, if the 6210 was not purchased as part of a 6200A/6210 system, or if the units have had to be separated for servicing purposes.


The Installation Kit supplied with the 6210 comprises the following items:

Description	Part No.	Qty.
Pillar assembly	41700/616	4
Rear support bar	41700/772	2
Clip, R.H.	35905/447	2
Clip, L.H.	35905/448	2
Tie bar	35907/293	1
Bracket	35907/294	2
Washer, plain, M4	21171/110	2
Screw, pan head, M4 x 10	21833/003	2
Screw, pan head, M4 x 8	21833/008	4
Screw, pan head, M4 x 12	21833/009	2
Screw, pan head, M5 x 40	21837/575	4
Nut, hex, M4	21882/110	2

Refer to Fig. 2-3.



- (1) Turn the MTS upside down. Pull off the studs covering the screws which hold the feet in place, and remove the four feet.
- (2) Place a clip over one of the holes where a foot was previously located, such that the lug of the clip is located in the slot adjacent to the hole. Note that there are two left hand clips and two right hand clips.
- (3) Screw a pillar assembly into the hole so that the clip is tightly secured between the pillar and the bottom cover of the instrument.
- (4) Repeat steps (2) and (3) at the other three locations.
- (5) Locate the 6210 over the pillar assemblies and screw the feet that were removed in step (1) into the pillar assemblies, thus securing the 6210. Refit the studs.
- (6) Remove the two rear supports on one side of the MTS. Discard the screws and plain washers but retain the lockwashers. Using the supplied M5x40 mm screws and the original lockwashers, re-attach the two rear supports together with one of the brackets.
- (7) Repeat step (6) at the other side of the instrument.
- (8) Attach a rear support bar to each of the brackets using M4x8 mm screws. The top end of the support bar is located in a slot in the upper rear support of the MTS.
- (9) Fix the tie bar to the lower end of the support bars using two M4x10 mm screws, nuts and plain washers, and to the rear of the 6210 using two M4x12 mm screws. Note that there is a strip of RF gasket material along one edge of the tie bar; this should be in contact with the bottom rear edge of the 6210.
- (10) Connect the four cable assemblies to the appropriate connectors as shown in Fig 2-4, which show the front and rear views of the 6200A/6210 combination.

Fig. 2-3 Side View of a 6210 Fitted to the MTS

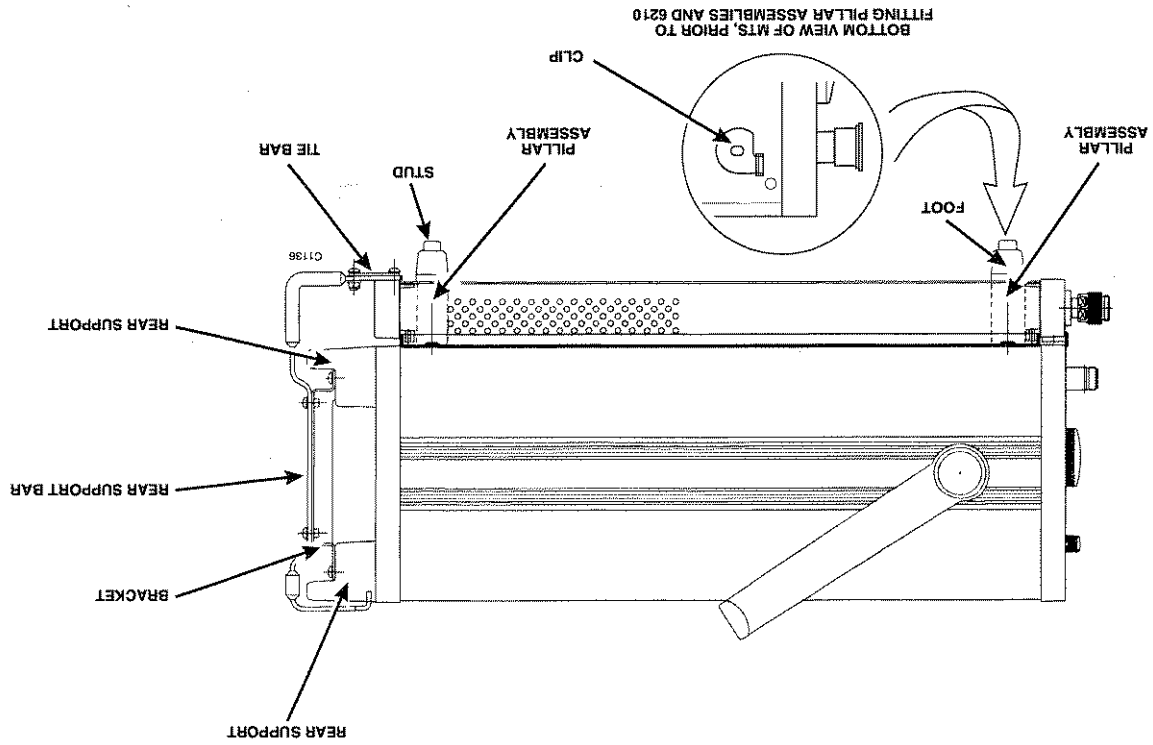

BOTTOM VIEW OF MTS, PRIOR TO
FITTING PILLAR ASSEMBLIES AND 6210

Fig. 2-4 Front and Rear Views of 6200A/6210

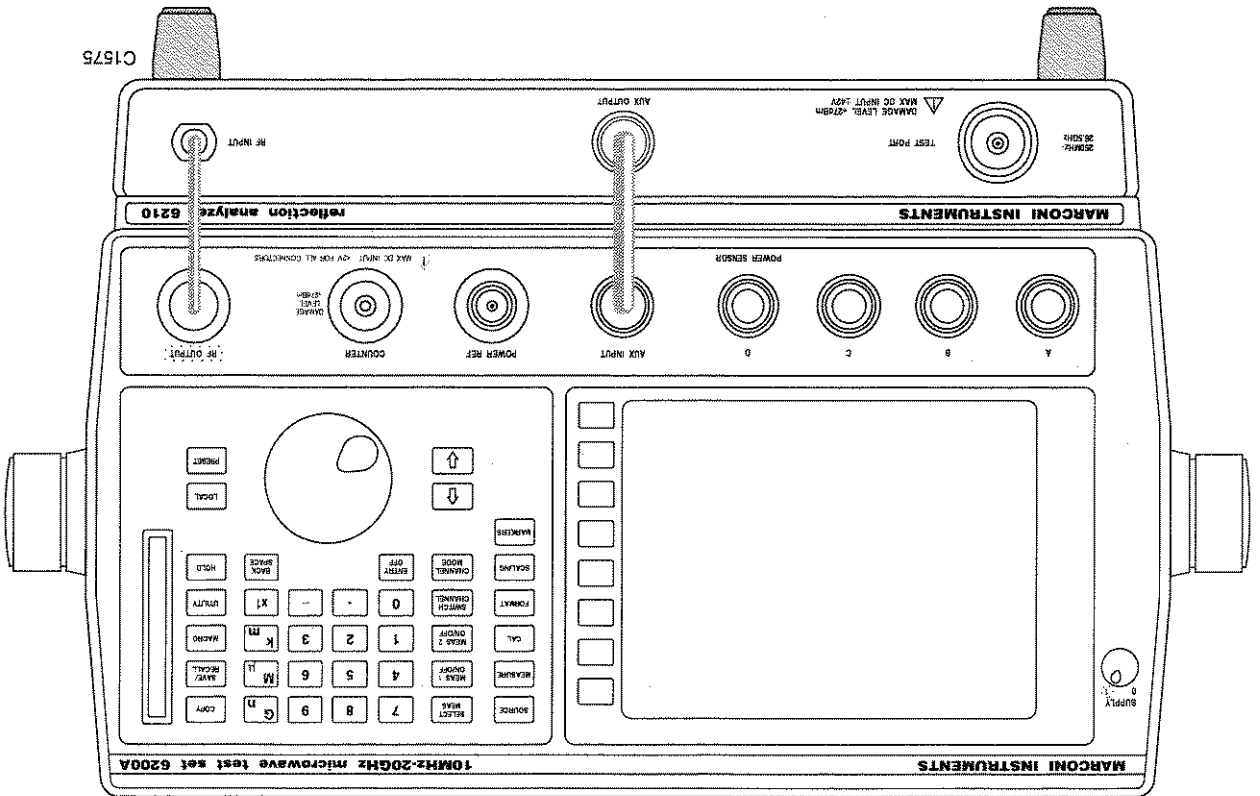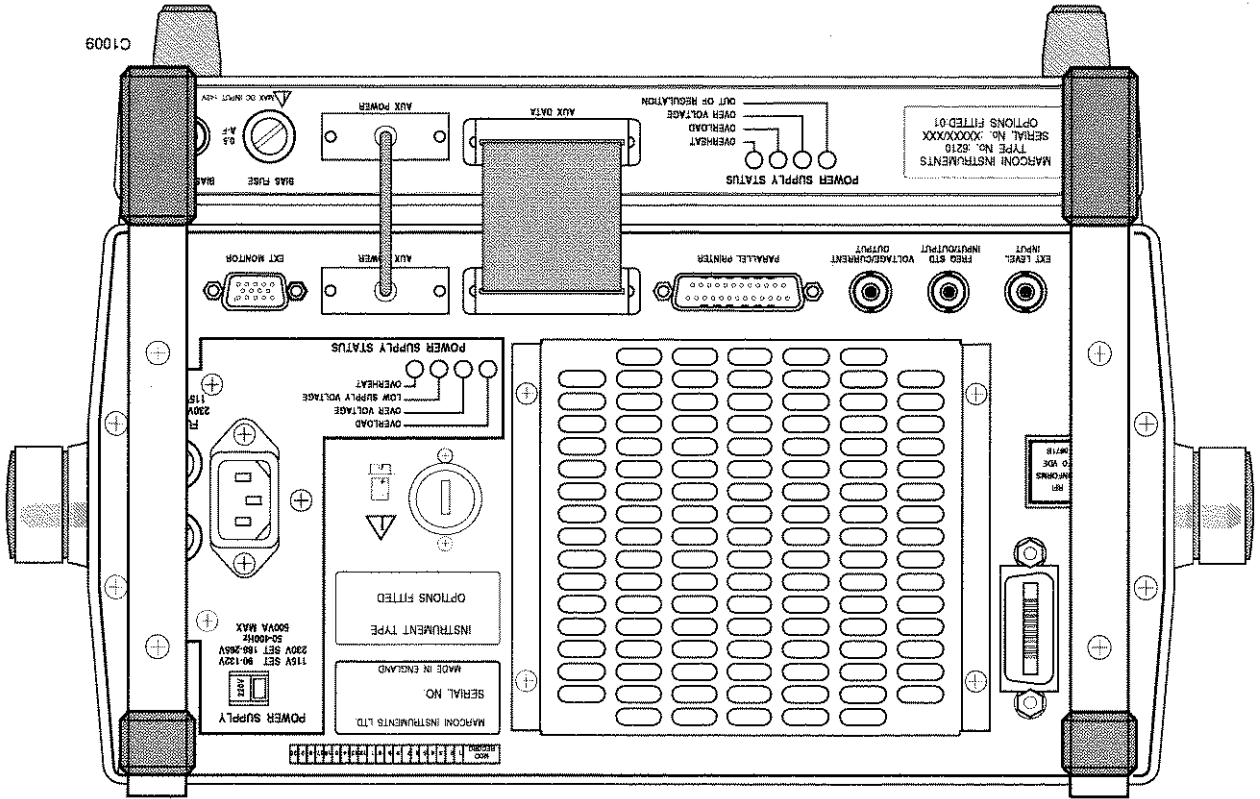

ROUTINE MAINTENANCE

Routine maintenance is limited to cleaning the display screen and taking proper care of microwave connectors.

Microwave Connectors

Care should be taken when using microwave connectors, both on the MTS and on any accessories that are used, such as cables, adapters, detectors, test heads, etc. Complying with the following precautionary notes will ensure longer component life and less equipment downtime due to connector or component failure.

- The precision connectors fitted to this equipment and its accessories may be damaged by mating with a non-precision type. Damage to the connectors may also occur if the connector interface parameters are not within specification. This should be checked with the appropriate gauging tool. It is strongly recommended that every connector be gauged prior to its first use and regularly thereafter, e.g. every 20 connections.
- The precise geometry of the connectors can be easily disturbed by dirt and other contamination adhering to connector interfaces. Alcohol is the recommended cleaning agent, and a clean, damp cotton swab is the recommended applicator. When not in use, keep the connectors covered with the protective caps provided.
- Always use the correct mating techniques. In particular, the two connectors to be mated should be pressed together such that the pin penetrates the collet prior to the nut being tightened. Never rotate one connector body relative to the other because this wears out the mating interfaces, thus reducing connector lifetime.
- Avoid over-torquing connectors during mating, because it may damage the connector centre pin or may cause the connector body to turn in its housing. Finger tight is usually sufficient.
- Avoid mechanical shock by dropping or otherwise roughly handling microwave components.

Cleaning the LCD Window

To prevent damage to the LCD window, care should be taken not to scratch the surface during use and also when cleaning. The LCD window should be cleaned by wiping a slightly damp, soft, lint-free cloth gently over the surface. To remove grease or smears, use a clean cotton cloth moistened with Heptane. No other cleaning agents should be used. Clean the window using either horizontal or vertical strokes, NEVER a circular action.

BATTERY REPLACEMENT

Instrument Battery

Both the MTS and the 6210 contain non-volatile memory which is powered by a lithium battery when the power is removed. Although battery life can extend to five years, this will depend on conditions of use, e.g. battery life is reduced as the temperature is increased. To avoid loss of data it is recommended that the battery is replaced every two years.

Replace the MTS battery as follows:

- (1) Ensure that the instrument is switched on; this will provide power for the non-volatile memory while the battery is replaced.
- (2) Using a coin or suitable tool, unscrew the battery compartment cover at the rear of the instrument.
- (3) Remove the battery and insert the replacement, then replace the battery compartment cover.

1. Visual inspection
2. Earth Bonding Test (Class I equipment only)
3. Insulation Resistance test.

sequence:

The recommended inspection and tests fall into three categories and should be carried out in the following

Prior to carrying out any inspection and tests the instruments must be disconnected from the mains supply and all external signal connections removed. All tests should include the instrument's own supply lead, all covers must be fitted and the supply switch must be in the 'ON' position.

The following electrical tests and inspection information is provided for guidance purposes and involves the use of voltages and currents that can cause injury. It is important that these tests are only performed by competent personnel.

In the UK the 'Electricity at Work Regulations' (1989) section 4(2) places a requirement on the users of equipment to maintain it in a safe condition. The explanatory notes call for regular inspections and tests together with a need to keep records.

ROUTINE SAFETY TESTING AND INSPECTION

Refer to 'Precautions' at the front of this manual for hazards relating to Lithium batteries.

Note...

The battery used is either a Lithium type 2016 or 2325, depending on the memory card

- (1) Insert the card into the memory card slot of a powered-up instrument. This ensures that the card receives power while the battery is replaced.
- (2) Remove the small screw at the edge of the card and slide out the battery holder (a suitable screwdriver is supplied with the card).
- (3) Remove the battery, insert the replacement and refit the battery holder.

As for the instrument battery, the memory card battery should be replaced every two years to ensure data integrity. The battery is replaced as follows:

The memory card circuits are powered from its own internal battery when not in use, but are powered from the MTS when the card is inserted into the memory card slot.

Memory Card Battery

The replacement battery should be SAFT L56 or equivalent. This is a Lithium 3.5 V type, rated at 1800 mAh, size AA. A suitable replacement battery can be obtained from Marconi Instruments (Part Number 23711-106Z).

- (1) Ensure that the 6210 is powered up, so that data is not lost while the battery is replaced.
- (2) Remove the four feet and the 6 screws that secure the 6210 bottom panel.
- (3) The battery is held in clips at the rear of the instrument. When replacing the battery, ensure that the outer plastic skin is not punctured by the clips as the battery is pushed in. Also ensure correct orientation, as indicated by the "+" sign on the board.

Replace the 6210 battery as follows:

1. Visual Inspection

A visual inspection should be carried out on a periodic basis. This interval is dependant on the operating environment, maintenance and use, and should be assessed in accordance with guidelines issued by the Health and Safety Executive (HSE). As a guide, this instrument when used indoors in a relatively clean environment would be classified as 'low risk' equipment and hence should be subject to safety inspections on an annual basis. If the use of the equipment is contrary to the conditions specified, you should review the safety re-test interval.

As a guide, the visual inspection should include the following where appropriate:

Check that the equipment has been installed in accordance with the instructions provided (e.g. that ventilation is adequate, supply isolators are accessible, supply wiring is adequate and properly routed).

The condition of the mains supply lead and supply connector(s).

Check that the mains supply switch isolates the instrument from the supply.

The correct rating and type of supply fuses.

Security and condition of covers and handles.

Check the supply indicator functions (if fitted).

Check the presence and condition of all warning labels and markings and supplied safety information.

Check the wiring in re-wireable plugs and appliance connectors.

If any defect is noted this should be rectified before proceeding with the following electrical tests.

2. Earth Bonding Tests (Class I Equipment only)

Earth bonding tests should be carried out using a 25A (12V maximum open circuit voltage) DC source. Tests should be limited to a maximum duration of 5 seconds and have a pass limit of 0.1 Ω after allowing for the resistance of the supply lead. Exceeding the test duration can cause damage to the equipment. The tests should be carried out between the supply earth and exposed case metalwork, no attempt should be made to perform the tests on functional earths (e.g. signal carrying connector shells or screen connections) as this will result in damage to the equipment.

3. Insulation Tests

A 500 VDC test should be applied between the protective earth connection and combined live and neutral supply connections with the equipment supply switch in the 'on' position. It is advisable to make the live/neutral link on the appliance tester or its connector to avoid the possibility of returning the instrument to the user with the live and neutral poles linked with an ad-hoc strap. The test voltage should be applied for 5 seconds before taking the measurement. Marconi Instruments products employ reinforced insulation in their construction and hence a minimum pass limit of 7 M Ω should be achieved during this test.

Where a DC power adapter is provided with the instrument the adapter must pass the 7 M Ω test limit.

We do not recommend dielectric flash testing during routine safety tests. Most portable appliance testers use AC for the dielectric strength test which can cause damage to the supply input filter capacitors.

It is recommended that the results from the above tests are recorded and checked during each repeat test. Significant differences between the previous readings and measured values should be investigated.

If any failure is detected during the above visual inspection or tests, the instrument should be disabled and the fault should be rectified by an experienced Service Engineer who is familiar with the hazards involved in carrying out such repairs.

Safety critical components should only be replaced with equivalent parts, using techniques and procedures recommended by Marconi Instruments Ltd.

The above information is provided for guidance only. Marconi Instruments products are designed and constructed in accordance with International Safety Standards such that in normal use they represent no hazard to the operator. Marconi Instruments Ltd reserve the right to amend the above information in the course of continuing its commitment to product safety.

PUTTING INTO STORAGE

If the instrument is to be put into storage, ensure that the following conditions are maintained:

Temperature range -40 to +70°C
Humidity Less than 93% at 40°C

Chapter 3 LOCAL OPERATION

CONTENTS

3-8	INTRODUCTION.....
3-8	FRONT PANEL FEATURES.....
3-10	FRONT PANEL KEYS AND SOFT KEY MENUS.....
3-12	Numeric Entry.....
3-13	Password Protection.....
3-13	Primary Password.....
3-14	User-defined Passwords.....
3-14	DISPLAY.....
3-14	Channels and Measurements.....
3-14	Sweep Channel.....
3-17	Readout Channel.....
3-19	General Information Area.....
3-20	Error Messages.....
3-20	Display Set-up.....
3-21	REAR PANEL FEATURES.....
3-23	6210 FRONT PANEL FEATURES.....
3-23	6210 REAR PANEL FEATURES.....
3-25	DISPLAY GROUP KEYS.....
3-25	[SELECT MEAS] KEY.....
3-25	[MEAS 1 ON/OFF] KEY.....
3-25	[MEAS 2 ON/OFF] KEY.....
3-25	[SWITCH CHANNEL] KEY.....
3-26	[CHANNEL MODE] KEY.....
3-26	Channel Mode.....
3-27	FUNCTION GROUP KEYS - SCALAR CHANNEL.....
3-27	[SOURCE] KEY.....
3-27	Channel Coupling.....
3-28	Source (Start/Stop Frequency Sweep Mode).....
3-29	Source (Centre/Span Frequency Sweep Mode).....
3-30	Source (CW Mode).....
3-31	Source (Power Sweep).....
3-32	Source (Voltage Sweep).....
3-33	Source (Current Sweep).....
3-34	Sweep Time.....
3-35	Source Mode.....
3-36	Source Funcs.....
3-37	Lev & F Sid.....
3-38	Int/Ext Source.....
3-39	VI Output.....
3-41	CW & Loop BW.....
3-42	CW Set-up.....
3-51	[MEASURE] KEY.....
3-52	Measure.....
3-53	Single Input.....
3-53	Input Ratio.....
3-54	Averaging.....
3-55	Smoothing.....
3-56	Lim Checking.....
3-58	Edit Spec.....
3-60	Edit Segment.....

Page

3-61 Add Segment.....

3-62 Gen Set-up.....

3-63 Input Config.....

3-64 Scale & Offset.....

3-65 Select Input.....

3-66 Input A (B, C or D).....

3-67 Sensor Corr.....

3-68 Cal & Lin Fact.....

3-69 Edit Specs.....

3-69 Edit Det Specs.....

3-70 Edit Spec.....

3-71 Edit Table.....

3-72 Edit Entry.....

3-73 Add Entry.....

3-83 Cal.....

3-84 Through PC.....

3-85 Short/Open PC.....

3-86 Short PC.....

3-87 Det/Sen Zero.....

3-88 Sensor Cal.....

3-91 [FORMAT] KEY.....

3-91 Format.....

3-93 [SCALING] KEY.....

3-94 Scaling.....

3-95 [MARKERS] KEY.....

3-96 Markers.....

3-97 Mkr Funcs.....

3-98 Max Min.....

3-98 dB/O dB/D.....

3-99 Peak to Peak.....

3-100 Search.....

3-101 Bandwidth.....

3-103 Set Up Mkrs.....

3-107 [SOURCE] KEY.....

3-107 [MEASURE] KEY.....

3-108 Measure.....

3-109 dB Rel.....

3-109 Freq Rel.....

3-110 Averaging.....

3-111 Input A (B, C or D).....

3-112 Meas Funcs.....

3-113 Single Input.....

3-113 Input Ratio.....

3-114 Input Diff.....

3-114 Duty Cycle.....

3-115 Lim Checking.....

3-115 Max Min Hold.....

3-116 Gen Set-up.....

3-117 Input Config.....

3-127 [CAL] KEY.....

3-128 Cal.....

3-129 [FORMAT] KEY.....

3-129 Format.....

contd/...

3-131	FUNCTION GROUP KEYS - FAULT LOCATION CHANNEL
3-131	[SOURCE] KEY
3-132	Source
3-135	[MEASURE] KEY
3-136	Measure
3-137	Config F Loc
3-137	Meas Def
3-138	Single Input
3-138	Input Ratio
3-139	Set Up Meas
3-142	Access Dbase
3-143	Set from Card
3-144	Select Subset
3-145	Menu
3-146	Cpy from Card
3-147	Edit Store
3-148	Edit Medium
3-149	Edit Attr Table
3-150	Set Params
3-151	F Loc Funcs
3-153	Enhance Mode
3-163	[CAL] KEY
3-164	Cal
3-167	[FORMAT] KEY
3-167	Format
3-168	[SCALING] KEY
3-169	Scaling
3-170	[MARKERS] KEY
3-171	Markers
3-172	Mkr Funcs
3-173	Max Min
3-173	Find Next Pk
3-174	Set Up Mkrs
3-177	FUNCTION GROUP KEYS - REFLECTION ANALYZER CHANNEL
3-177	[SOURCE] KEY
3-178	Source (Linear List Frequency Sweep)
3-179	Source (Waveguide Sweep)
3-180	Source (Low Pass Sweep)
3-181	Set Up List
3-183	Set Freqs
3-184	Source Mode (More)
3-191	[MEASURE] KEY
3-192	Measure
3-193	Gate/Fence
3-196	Gating Mode
3-196	G / F Shape
3-197	Time Dom Funcs
3-198	DC Extrap
3-199	Windowing
3-201	Display Domain
3-202	Display Zoom
3-203	Measure (More)
3-204	Elect Delay
3-205	Character Dev

CONTENTS (contd.)

3-209	[CAL] KEY	Cal
3-210		Cal
3-211		Reflect Cal
3-214		Set Up Cal
3-215		Edit Cal Kit
3-217		Connector
3-221	[FORMAT] KEY	Format
3-222		Format (Polar/Smith Formats)
3-223		Format
3-225	[SCALING] KEY	Scaling
3-226		Scaling
3-228	[MARKERS] KEY	Markers
3-229		Markers
3-230		Mkr Funcs
3-231		Search
3-231		Find Next Pk
3-232		Set Up Mkrs
3-237		SYSTEM GROUP KEYS
3-237	[COPY] KEY	Copy
3-238		Copy
3-239		Graph Attrib
3-241	[SAVE/RECALL] KEY	Save/Recall
3-242		Save/Recall
3-244		Memory Op (Scalar channel)
3-244		Memory Op (Reflection analyzer channel)
3-245		View Store
3-246	[MACRO] KEY	Macro
3-252		Macro
3-253		Save Macro
3-254		Copy Macro
3-254		Delete Macro
3-255		Edit Macro
3-256		Add Code
3-257		Pause
3-257		Disp Message
3-258		Run Macro
3-258		Edit Macro
3-259		Edit Macro
3-260		Edit
3-261		Save Macro
3-262		Loop & Branch
3-263		Case
3-263		Conditions
3-273	[UTILITY] KEY	Utility
3-273		Utility
3-274		GPIB
3-275		Titles
3-276		Screen Title
3-277		Chan 1 Titles
3-277		Chan 2 Titles
3-277		Display Set-up
3-278		Inc/Dec Steps
3-279		Inc/Dec Steps (More)
3-280		Store Ops
3-281		Inst Settings
3-281		Trace Memory

LIST OF FIGURES

Fig. 3-1 MTS Front Panel 3-8

Fig. 3-2 Definition of Terms 3-10

Fig. 3-3 Display - Swept Measurements 3-15

Fig. 3-4 Trace Information Area 3-16

Fig. 3-5 Display - Readout Measurements 3-17

Fig. 3-6 Format of Readout 3-18

Fig. 3-7 General Information Area 3-19

Fig. 3-8 MTS Rear Panel 3-21

Fig. 3-9 6210 Front and Rear Panels 3-23

Fig. 3-10 Channel Mode Menu 3-26

Fig. 3-11 SOURCE Menus - Scalar and Readout Channels (Sheet 1) 3-43

Fig. 3-12 SOURCE Menus - Scalar and Readout Channels (Sheet 2) 3-45

3-282 Sensor Cal 3-282

3-283 Src Pwr Cal 3-283

3-284 Reflect Cal 3-283

3-283 Cal Kit 3-283

3-284 Service 3-284

3-285 Set-up 3-285

3-286 Date & Time 3-286

3-287 Set Passwords 3-287

3-288 Config Card 3-288

3-289 Adapt Stores 3-289

3-290 Install S/W Opt 3-290

3-290 Status 3-290

3-291 Test Results 3-291

3-293 Instrument Cals 3-293

3-294 Freq Std Cal 3-294

3-294 Pwr Ref Cal 3-294

3-295 Src Power Cal 3-295

3-295 Adapter Cals 3-295

3-296 Power Cal 3-296

3-297 Power Cal 3-297

3-298 Transfer to Pri 3-298

3-298 Select Pwr Cal 3-298

3-299 Tests 3-299

3-300 Edit Specs 3-300

3-301 Diagnostics 3-301

3-301 Src Diag 3-301

3-302 Band Select 3-302

3-303 RF Path 3-303

3-304 Src Control 3-304

3-305 Ctr Funcs 3-305

3-305 Src Diag More 3-305

3-307 Dacq Diag 3-307

3-308 Set Up Input 3-308

3-309 Reflect Dacq 3-309

3-310 Set DACs 3-310

3-310 Counter Diag 3-310

3-311 Applications 3-311

3-325 [HOLD] KEY 3-325

3-325 [LOCAL] KEY 3-325

3-326 [PRESET] KEY 3-326

3-326 Preset 3-326

Fig. 3-13	SOURCE Menus - Scalar and Readout Channels (Sheet 3)	3-47
Fig. 3-14	SOURCE Menus - Scalar and Readout Channels (Sheet 4)	3-49
Fig. 3-15	Effect of Averaging on a Trace	3-54
Fig. 3-16	Effect of Smoothing on a Trace	3-55
Fig. 3-17	Limit Lines for Bandpass Filter Testing	3-56
Fig. 3-18	Limit Checking Specification Form	3-58
Fig. 3-19	View Input Configuration Screen	3-63
Fig. 3-20	Detector Types Table	3-66
Fig. 3-21	User Detector Correction Specification Form	3-69
Fig. 3-22	Sensor Cal Data Table	3-70
Fig. 3-23	MEASURE Menu - Scalar Channel (Sheet 1)	3-75
Fig. 3-24	MEASURE Menu - Scalar Channel (Sheet 2)	3-77
Fig. 3-25	MEASURE Menu - Scalar Channel (Sheet 3)	3-79
Fig. 3-26	MEASURE Menu - Scalar Channel (Sheet 4)	3-81
Fig. 3-27	CAL Menu - Scalar Channel	3-89
Fig. 3-28	FORMAT Menu - Scalar Channel	3-91
Fig. 3-29	SCALING Menu - Scalar Channel	3-93
Fig. 3-30	Bandwidth Measurement of a Band-pass Filter	3-102
Fig. 3-31	MARKERS Menus - Scalar Channel	3-105
Fig. 3-32	MEASURE Menu - Readout Channel (Sheet 1)	3-119
Fig. 3-33	MEASURE Menu - Readout Channel (Sheet 2)	3-121
Fig. 3-34	MEASURE Menu - Readout Channel (Sheet 3)	3-123
Fig. 3-35	MEASURE Menu - Readout Channel (Sheet 4)	3-125
Fig. 3-36	CAL Menu - Readout Channel	3-127
Fig. 3-37	FORMAT Menu - Readout Channel	3-129
Fig. 3-38	SOURCE Menu - Fault Location Channel	3-133
Fig. 3-39	Fault Location Parameters	3-139
Fig. 3-40	Effect of Data Windowing on a Fault Location Measurement	3-151
Fig. 3-41	Effect of Masking Correction on a Fault Location Measurement	3-152
Fig. 3-42	Effect of Enhanced Mode on a Fault Location Measurement	3-154
Fig. 3-43	MEASURE Menu - Fault Location Channel (Sheet 1)	3-155
Fig. 3-44	MEASURE Menu - Fault Location Channel (Sheet 2)	3-157
Fig. 3-45	MEASURE Fault Location Channel (Sheet 3)	3-159
Fig. 3-46	MEASURE Fault Location Channel (Sheet 4)	3-161
Fig. 3-47	CAL Menu - Fault Location Channel	3-165
Fig. 3-48	FORMAT Menu - Fault Location Channel	3-167
Fig. 3-49	SCALING Menu - Fault Location Channel	3-168
Fig. 3-50	MARKERS Menus - Fault Location Channel	3-175
Fig. 3-51	Linear List Sweep Specification Form	3-181
Fig. 3-52	Source Menu - Reflection Analyzer Channel (Sheet 1)	3-185
Fig. 3-53	Source Menu - Reflection Analyzer Channel (Sheet 2)	3-187
Fig. 3-54	Source Menu - Reflection Analyzer Channel (Sheet 3)	3-189
Fig. 3-55	Effect of Fencing on a Measurement	3-195
Fig. 3-56	Effect of Windowing on the Time Domain Response	3-200
Fig. 3-57	MEASURE Menu - Reflection Analyzer Channel	3-207
Fig. 3-58	Reflection Analyzer Calibration Details Form	3-212
Fig. 3-59	CAL Menu - Reflection Analyzer Channel	3-219
Fig. 3-60	FORMAT Menu - Reflection Analyzer Channel	3-221
Fig. 3-61	Typical Polar and Smith Format Displays	3-224
Fig. 3-62	SCALING Menu - Reflection Analyzer Channel	3-225
Fig. 3-63	MARKER Menu - Reflection Analyzer Channel	3-235
Fig. 3-64	COPY Menu	3-237
Fig. 3-65	Typical Plotter Output	3-238
Fig. 3-66	SAVE/RECALL Menus	3-241
Fig. 3-67	Example of Displayed Instrument Settings Store	3-242
Fig. 3-68	MACRO Menu (Sheet 1)	3-265

Fig. 3-69 MACRO Menu (Sheet 2) 3-267

Fig. 3-70 MACRO Menu (Sheet 3) 3-269

Fig. 3-71 MACRO Menu (Sheet 4) 3-271

Fig. 3-72 Editing a Screen Title 3-276

Fig. 3-73 Setting Date and Time 3-286

Fig. 3-74 Configuring a Memory Card 3-289

Fig. 3-75 Band Select Word Form 3-302

Fig. 3-76 UTILITY Menu (Sheet 1) 3-313

Fig. 3-77 UTILITY Menu (Sheet 2) 3-315

Fig. 3-78 UTILITY Menu (Sheet 3) 3-317

Fig. 3-79 UTILITY Menu (Sheet 4) 3-319

Fig. 3-80 UTILITY Menu (Sheet 5) 3-321

Fig. 3-81 UTILITY Menu (Sheet 6) 3-323

Fig. 3-82 PRESET Menu 3-326

This chapter explains how to operate the Microwave Test Set using the front panel controls and soft key menus. It provides illustrations and descriptions of the front panel features, the liquid crystal display and its labels, and the rear panel features and connectors. For a functional description and block diagram of the MTS refer to Chapter 4.

FRONT PANEL FEATURES

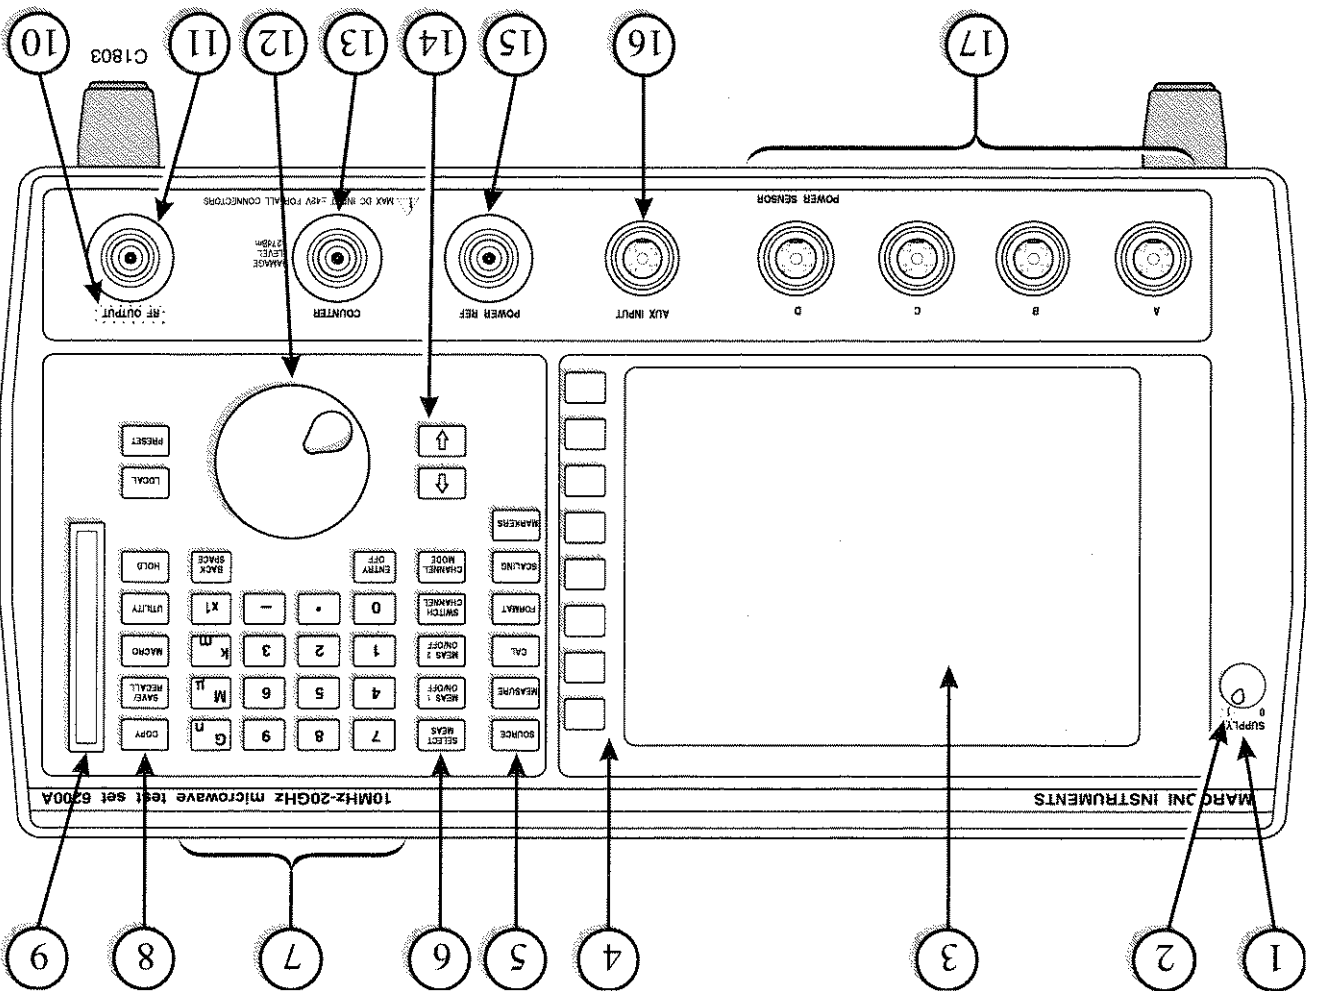


Fig. 3-1 MTS Front Panel

Fig. 3-1 illustrates the following features and function groups of the MTS front panel. These features are described in more detail later in this chapter.

- ① SUPPLY On/Off Switch. Controls the AC power to the MTS; clockwise = ON, anti-clockwise = OFF.
- ② SUPPLY "ON" indicator. This is an LED which is hidden until lit.

3
Liquid Crystal Display. This is used for display of measurement traces and annotations, soft key labels and other information. The display is divided into specific information areas, explained in detail later in this chapter.

4
Soft Keys. The eight soft keys are used to select the desired control and functional options presented by the various menus accessed through the function, display and system keys located on the front panel.

5
Function Keys. These keys are used to control the signal from the synthesized source, defining the measurement, calibrating the measurement system, formatting and scaling the display and setting up markers. The keys in this group are [SOURCE], [MEASURE], [CAL], [FORMAT], [SCALING] and [MARKERS].

6
Display Keys. These keys determine the number of channels and measurement that are displayed, the channel mode, and which channel or measurement is active. The keys in this group are [MEAS 1 ON/OFF], [MEAS 2 ON/OFF], [SELECT MEAS], [SWITCH CHANNEL] and [CHANNEL MODE].

7
Numeric Entry and Terminator Keys. These keys are used for entering values of numeric parameters and other numeric entries.

8
System Keys. The SYSTEM group keys control system functions including instrument preset, instrument settings save/reCALL functions, plotter and printer control, setting up the GPIB mode, and built-in diagnostic tests. The front panel keys in this group are [COPY], [SAVE/RECALL], [MACRO], [UTILITY], [HOLD], [LOCAL] and [PRESET].

9
Memory Card Slot. Accepts plug-in memory cards containing non-volatile RAM that can be used for extending the number of instrument stores and installing software options (e.g. Fault Location).

10
RF OUTPUT "ON" indicator. This is an LED which is hidden until lit.

11
RF OUTPUT Connector. This is a precision connector for the RF output signal.

12
Rotary Control. Adjustments may be made to a parameter value using the rotary control.

13
COUNTER Connector. This input is used when measuring the frequency of a signal.

14
Step Keys. The step keys (↓ and ↑) are used to step the current value of a parameter up or down.

15
POWER REF Connector. This connector provides a 50 MHz, 1 mW reference signal that is used to calibrate power sensors before taking any measurements.

16
AUX INPUT Connector. This is used to receive detector inputs from the 6210 Reflection Analyzer.

17
Input Connectors. Connectors A, B, C and D accept 12 pin connectors from the detector cable assemblies. Input D can also be configured to accept a power meter sensor when power meter accuracy is required.

FRONT PANEL KEYS AND SOFT KEY MENUS

The functions of the MTS are activated from the front panel by the operator using three groups of specific function keys (Function, Display and System groups), eight soft keys for accessing menu options, a numeric entry key group, a rotary control and step up/down keys.

Some of the more important terms relating to the operation of the instrument are defined below:

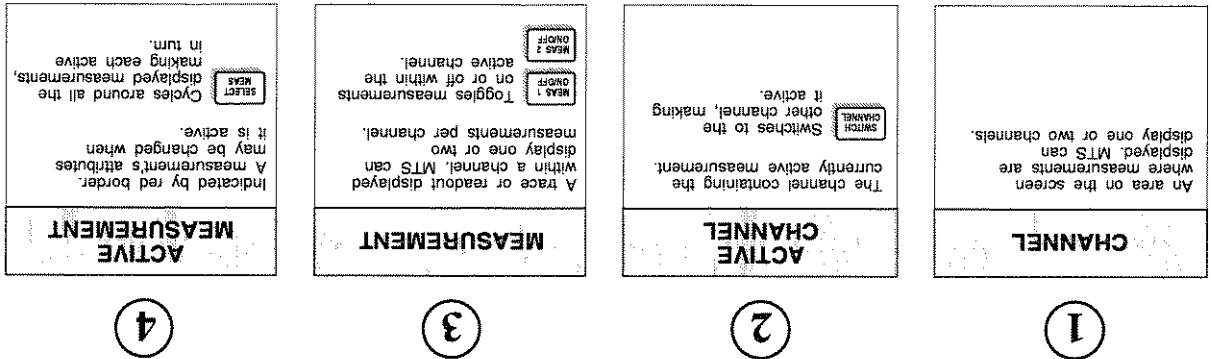
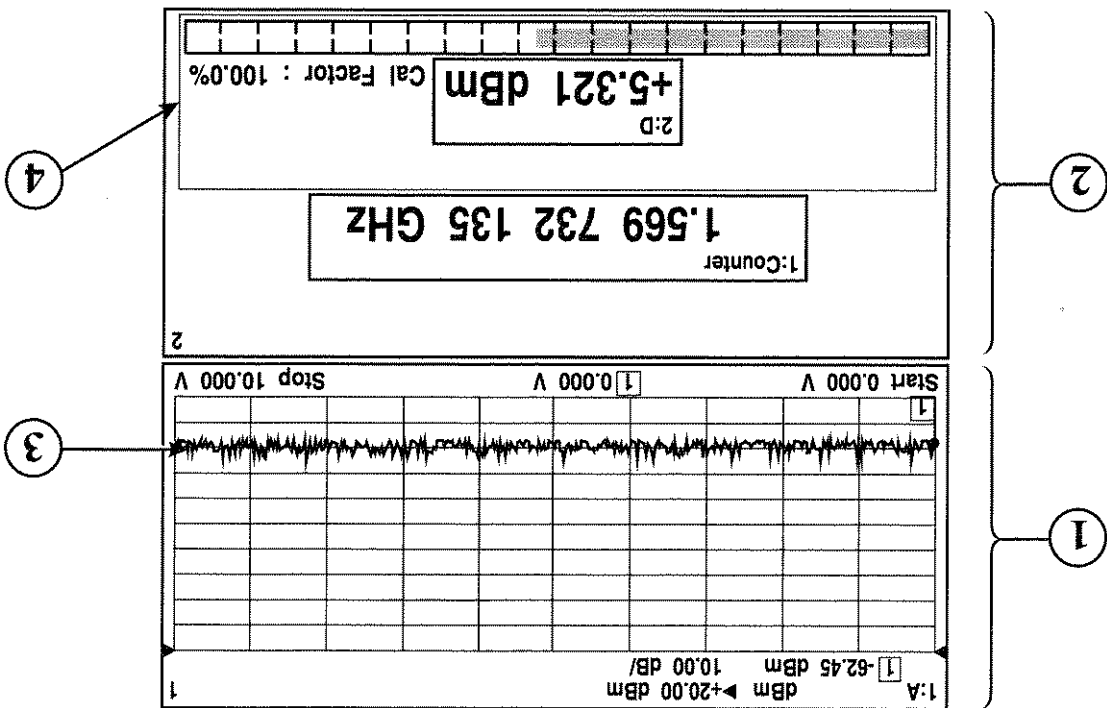
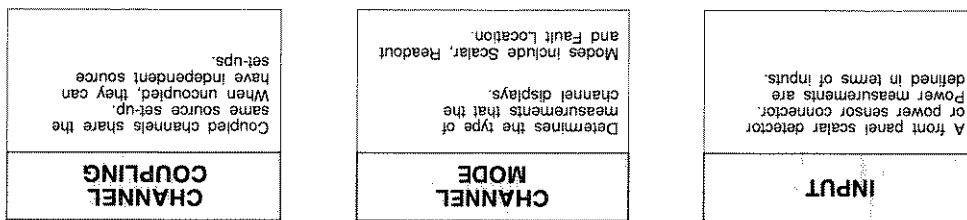


Fig. 3-2 Definition of Terms

C1142

In this manual all front panel keys are shown in brackets, e.g. [SOURCE]; soft key labels are shown in brackets in lower case italic type, e.g. [Source Functions].


The function currently activated is called the active function. As long as a function is active it can be modified with the numeric entry controls (explained later in this chapter). A function remains active until either another function is selected, [ENTRY OFF] is pressed, or the appropriate soft key is pressed that is provided for this purpose.

Front panel keys are used to change instrument functions directly or to provide access to additional functions available in soft key menus. These menus are displayed lists of related functions or choices for a particular function, with each choice corresponding to one of the eight soft keys located to the right of the LCD. Pressing one of the soft keys either executes the labelled function and makes it the active function, or changes the current status of a function, or presents another set of menu labels. The type of action is indicated by the shape of the box enclosing the soft key label, as shown below:

Indicates that selecting the soft key will immediately cause the instrument to perform the designated function, without any further interaction from the user.



Indicates that, after selecting this soft key, the user will be able to change a parameter. A dialogue box will be displayed on the screen containing a title indicating the parameter being changed, and an input field for entering the new value.

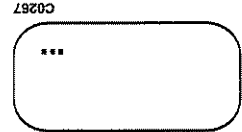

Indicates that selecting this soft key will toggle the indicated item on or off. The box contains a representation of an indicator lamp which 'lights up' to indicate that the item is on.



If the top and bottom edges are highlighted in green, this indicates that, out of two or more possible items, this one has been selected. Pressing it will have no effect, but selecting another of the same group will deselect it. The boxes representing soft keys in the same group are linked together by a vertical line.




Indicates that selecting this soft key will present the user with either a new menu or a dialogue box. The dialogue box is a window displayed on the screen to allow the user to change one or more parameters which make up the entries in the form. The soft keys are used to select, change, add or delete parameters, and various other operations according to the function involved.



This is always the bottom soft key of a menu, and is the 'return' key that returns the user to the previous level of the menu structure.



Unselectable items are indicated by a dotted outline.

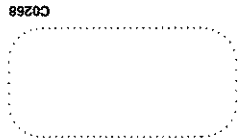

Top level menus, i.e. the ones displayed when a hard key is pressed, are indicated by surrounding the menu title with a box outline.

Most menus allow access to other top level menus simply by pressing the appropriate hard key. The user does not need to return to the top level menu from which the current one is derived. The exceptions to this are the editor menus such as those used for editing detector correction specifications and sensor calibration data tables. In these cases, the user must return back to the top level menu by pressing the appropriate return soft keys.

Detailed descriptions of all the MTS menus are given later in this chapter, grouped into three major sections, corresponding to the Display Group, Function Group and System Group keys.

The menu structure associated with the Function Group keys will depend upon the active channel type, e.g. scalar, readout or fault location etc. Since a particular measurement will be associated with one of these channel types, the menus for the keys in this group have been arranged accordingly, for ease of use.

At the start of each menu description is shown the path for that menu, i.e. the key presses the operator must make in order to access the menu. The menu title and soft key labels are listed on the left hand side of the page, exactly as they would be shown on the display. The right hand column contains the descriptions.

Numeric Entry

The numeric keypad, rotary control and step keys are used in conjunction with other front panel keys and soft keys to modify the active entry, to enter or change numeric data, and to change the domain value (i.e. x-axis position) of the active marker. In many cases, the keypad, rotary control and step keys can be used interchangeably. Numeric data is entered via a small window displayed in the top left-hand corner of the channel display. In some cases a parameter can be set from the active and delta markers displayed on the active measurement.

Before a function can be modified it must be made the active function by pressing a front panel key or soft key. It can then be modified directly with the step keys or rotary control, or the new value can be entered on the numeric keypad and followed by a terminator as described below.

The **Numeric Keypad** is used to enter digits, decimal point and minus sign for numeric entries, followed by a units terminator.

The **Units Terminator Keys** are the four keys to the right of the numeric keypad. These are used to specify the units for numeric entries from the keypad, and at the same time terminate the entries. A numeric entry is incomplete until a terminator is supplied. Some functions, for example where only a single digit entry is required, do not require a terminator. The units are abbreviated on the terminator keys as follows:

G ⁿ	=	Giga/Nano (10 ⁹ /10 ⁻⁹)
M ^μ	=	Mega/Micro (10 ⁶ /10 ⁻⁶)
k	=	kilo/milli (10 ³ /10 ⁻³)
×	=	basic units such as Hz, Volts etc; unitless entries, such as Averaging Number.

Functions can be terminated with any of the above terminator keys. The first three keys represent both positive and negative powers of ten, but the power represented by a particular terminator key at any given time is context dependent. That is, the parameter being changed determines whether positive or negative powers of ten apply (e.g. positive powers apply for frequency, and negative powers for voltage and current). Some parameters which have a particularly wide range will default to either positive or negative powers of ten, but may be changed by pressing [-] before pressing a terminator key. For example, power in Watts defaults to negative powers of ten (n, μ, m), but positive powers (G, M, k) can be achieved by first pressing [-] before terminating the numeric entry.

Within the menu descriptions, each function requiring numeric entry will indicate the valid terminator by use of the following conventions:

10+ indicates positive powers of ten, including the [×1] key.

10- indicates negative powers of ten, including the [×1] key.

Any indicates that any terminator key can be used.

A small checklist table will be used to indicate which terminators apply for numeric entry, and also whether the step keys or rotary control can be used. An example is shown below:

The Rotary Control is used to make continuous adjustments to current values for various functions. The sensitivity and rate of parameter update depends on the parameter being controlled. If the active marker is turned on, and no other function is active, the control can be used to adjust the marker domain value (x-axis position). Values changed by the rotary control are effective immediately, and require no units terminator. The control can also be used to move horizontally between input fields on the displayed forms of certain menus.

The Step Keys (↑ and ↓) are used to step the current value of the active function up or down. The step size can be independently set for various parameter types, such as frequency, power and voltage, by accessing the Utility menus. The keys autorepeat when held down. The step keys can also be used to move vertically between input fields on the displayed forms of certain menus.

[ENTRY OFF], When a numeric entry has been terminated with one of the units keys, the display is updated to reflect the new value. However, the numeric entry form remains to allow the parameter to be further modified, if required. Pressing **[ENTRY OFF]** removes the form, as well as any displayed prompts, error messages or warnings.

[BACK SPACE] deletes the last digit entered from the numeric keypad.

Parameter Entry Via Marker. Some parameters can be set from the position or response values of the active or active and delta markers displayed on the active measurement. This is done by pressing the soft key for the parameter, positioning the marker, then pressing **[X1]** on the numeric keypad. The following parameters can be set in this way:

Source start, stop, centre and span frequencies.

Display start, stop, centre and span frequencies.

(Enhance Menu - Fault Location Channel; Display Zoom Menu - Ref Analyzer Channel)

Reference level

Password Protection

Some of the functions accessed through the menus are password protected. A password protected function will prompt the user to enter a numeric authorisation code before the function is activated. There are three levels of password protection:

Primary

User-defined, Level 1

User-defined, Level 2

When entry of a password is required for a function, a form is displayed on the screen indicating the type of password protection. The numbers are not displayed on the screen as they are entered. The entry is terminated with any units key.

Primary Password

The Primary Password is a unique 6-digit authorisation code in the range 100000 to 999999, which is supplied with the instrument. The Primary Password is capable of enabling any password protected function, including the function that allows the user to change the user-defined passwords.

Each instrument leaves the factory with the Primary Password held in the screen title associated with instrument settings store 1. This can be viewed using **[SAVE/RECALL]** *[View Settings Store]*.

This information can be removed for security reasons as follows:

Recall instrument settings store 1 using `[Recall from Store]`.

Erase or overwrite the screen title using `[UTILITY][Titles][Set Screen Title]`.

Store the instrument settings back into store 1 using `[SAVE/RECALL][Save Settings][1][x1]`.

User-defined Passwords

Two levels of user-defined password are provided:

The Level 1 Password is a 4-digit code in the range 1000 to 9999, and protects those functions which cannot affect the instrument's factory calibration.

The Level 2 Password is a 6-digit code in the range 10000 to 999999, and protects the other functions.

DISPLAY

Channels and Measurements

The MTS has two channels for independent measurement and display of data. Two different measurements can be displayed simultaneously on the same channel, for example insertion loss and return loss of a device.

A channel can be defined to be either:

(a) A swept channel, e.g. a scalar channel, fault location channel or reflection analyzer channel. Up to two traces can be displayed on a swept channel.

or

(b) A readout channel, which will be capable of displaying either one or two digital readouts, which may be either a power meter readout or a frequency counter readout.

The display of channels and measurements is controlled using the Display Group keys (see page 3-25).

The MTS provides a facility for channel coupling, which enables parameters for the source and voltage/current output to be set up identically for both channels. See the `[SOURCE]` key description on page 3-27

Swept Channel

Fig. 3-3 illustrates the screen information area for one swept channel. If only one swept channel is being displayed, it occupies the whole of the screen, but if two channels are displayed, Channel 1 will be displayed in the top half of the screen, and Channel 2 will be similarly displayed in the lower half.

Start Value is the start value of the sweep in units appropriate to the domain of that measurement, e.g. start frequency for a frequency sweep or start power for a power sweep. This value corresponds to the left hand edge of the display graticule. When the source is in centre/span frequency sweep mode, the centre frequency is shown in this location. This value corresponds to the centre frequency graticule line, and is made bolder than the other graticule lines. The frequency value (and also the Stop Value, described below) can be blanked from the display, as described in the Display Set-up Menu, accessed via the `[UTILITY]` key.

Stop Value is the stop value of the sweep, and corresponds to the right hand edge of the display graticule. When the source is in centre/span frequency sweep mode, the frequency span is shown in this location. For fault location measurements, the stop value will either be the entered range in the normal display mode, or the stop distance when a sub-range is being displayed.

Reference Position Indicator points to the position on the vertical scale which remains fixed during scaling. The indicator for trace 1 is shown to the left of the graticule, in the same colour as trace 1; the indicator for trace 2 is shown on the right. The reference values corresponding to the indicator positions are displayed in the relevant Trace Information Areas (see below). The position and value of the reference position indicator is set using the [SCALING] key.

Channel Number indicates which channel is being displayed.

Pass/Fail displays the pass or fail status of a measurement compared to specified limits, as set up using the Limit Checking Menu, accessed via the [MEASURE] key. Each pass/fail window will only be displayed if limit checking is turned on for that trace.


Soft Key Labels are menu labels displayed on the screen that re-define the functions of the soft keys immediately to the right of the screen. The title of the menu is displayed at the top of the menu area to indicate where the user is within the menu structure. See 'Front Panel Keys and Soft Key Menus' for a description of menu operation.

Menu Title is the title of the currently displayed menu. If the instrument is set for GPIB (remote) operation, the title is removed and is replaced with the appropriate indicator (see 'General Information Area').

Measurement Title is a descriptive alpha-numeric title which is entered by using the Titles Menu, accessed via the [UTILITY] key. If two traces are displayed, the title for measurement 1 appears on the left, and measurement 2 on the right.

Active Marker shows the domain value (x-axis position) of the active marker, in units appropriate to the current measurement. In the delta marker mode, it is the domain value relative to the delta marker position. The measured response at the active marker position is displayed in the relevant Trace Information Area (see below).

Fig. 3-3 Display - Swept Measurements

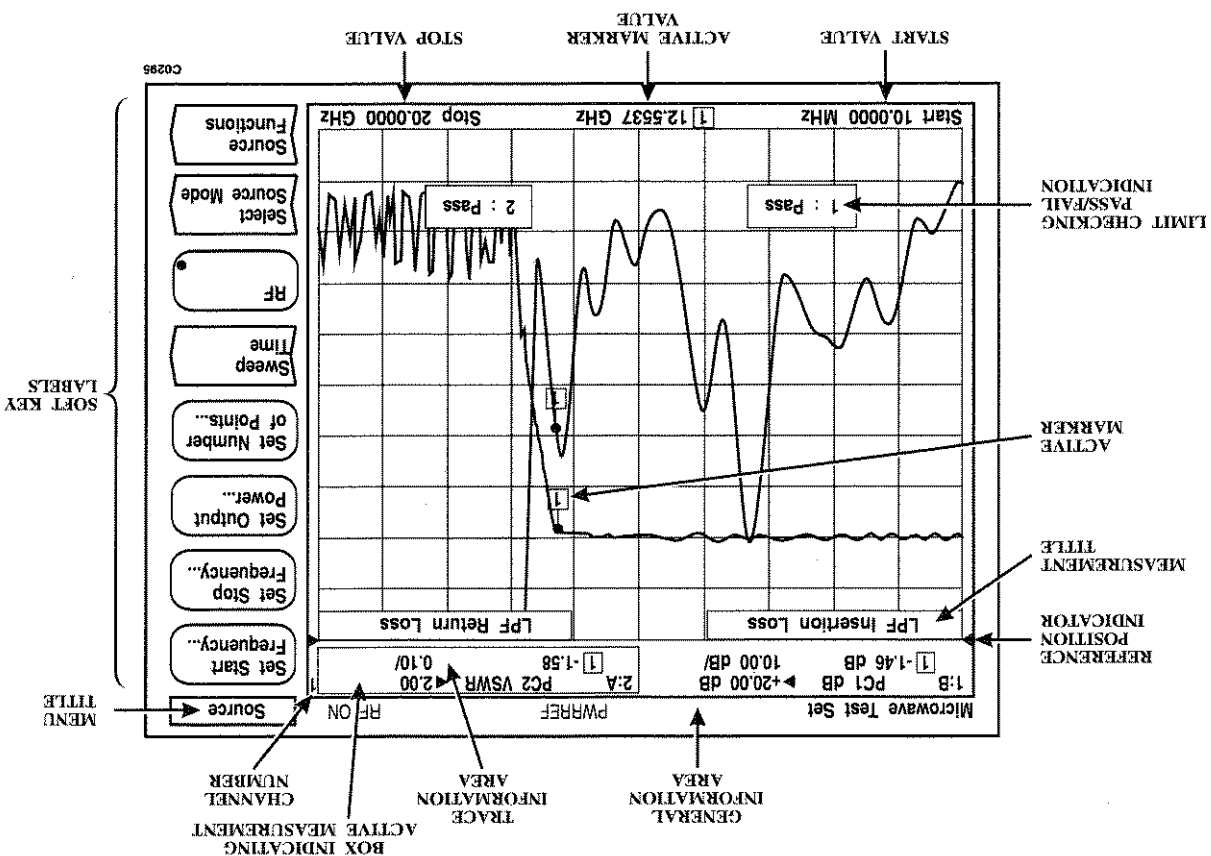

Markers. Up to eight markers per trace can be set using the [MARKERS] key, to identify specific points of importance on the domain (x) axis of the display and to perform various measurement functions. Markers are denoted by small numbers on the trace, in a colour corresponding to that of the measurement trace. Any of the markers can be enabled to become the active marker (indicated by enclosing the marker number in a box). In addition, a delta marker (represented by Δ) can be set.

Trace Information Area comprises two lines of text indicating what the corresponding trace is displaying. If a trace is turned off, its information will not be present. The trace information area for the currently active measurements is surrounded by a red box outline. A typical example of a trace information area is shown below.

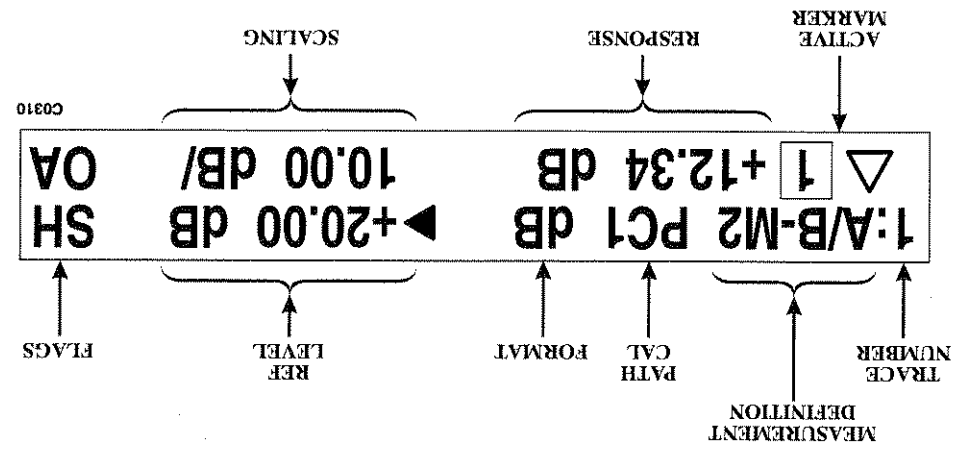


Fig. 3-4 Trace Information Area

Trace Number is the number of the trace (1 or 2) that the information refers to. **Measurement Definition** indicates the type of measurement that is being displayed, e.g. single input, ratio, relative to memory, counter etc.

Path Cal indicates that the measurement is relative to the specified path calibration store (PC1 to PC4). For a reflection analyzer channel, the calibration store is indicated by Call etc. A "r" after the calibration identify means that the calibration is not valid; this can occur if certain measurement parameters are changed subsequent to calibration. (See [CAL] key description.)

Format indicates the units of the measurement, e.g. dB, VSWR or Watts, as set up using the menus accessed via the [FORMAT] key. For counter measurements the word 'Freq' is displayed here.

Ref Level is the value corresponding to the position of the associated reference position indicator on the vertical scale. It is preceded by the reference indicator symbol as displayed at the side of the graticule. The Ref Level setting function is accessed via the [SCALING] key.

Flags provide the following information:

- S indicates smoothing is being applied to the measurement data.
- H indicates that the measurement is held (display frozen).
- O indicates that an offset is being applied to at least one input taking part in the measurement. For a reflection analyzer channel this is not relevant, so the 'G' and 'F' flags are shown here instead (see below).
- G indicates that gating is being applied to a reflection analyzer measurement. This is displayed in place of the 'O' flag.
- F indicates that fencing is being applied to a reflection analyzer measurement. This is displayed in place of the 'O' flag.
- A indicates averaging is being applied, and will be in lower case if the average number has not yet reached the target value set by the user through the Averaging Menu ([MEASURE] key).

Active Marker indicates the active marker type:

[1] represents an active marker.

Δ[1] represents active marker in delta mode.

The number within the box denotes the marker which has been designated the active marker.

Response is the value of the measured response at the active marker position, in units appropriate to the current measurement. In the delta marker mode, it is the measured response relative to the response at the current marker position. For a reflection analyzer channel displaying results in polar or Smith formats, two response values are displayed (i.e. real and imaginary components, or magnitude and phase).

Scaling shows the vertical scaling factor that has been selected, via the [SCALING] key, in units appropriate to the current measurement.

Readout Channel

Fig. 3-5 illustrates the screen information area for one readout channel. The display for a readout channel is split in half horizontally, with Readout 1 in the top half and Readout 2 in the lower. If a readout is turned off, the relevant display area is blank. If two channels are displayed, Channel 1 information will be displayed in the top half of the screen, and Channel 2 will be similarly displayed in the lower half.

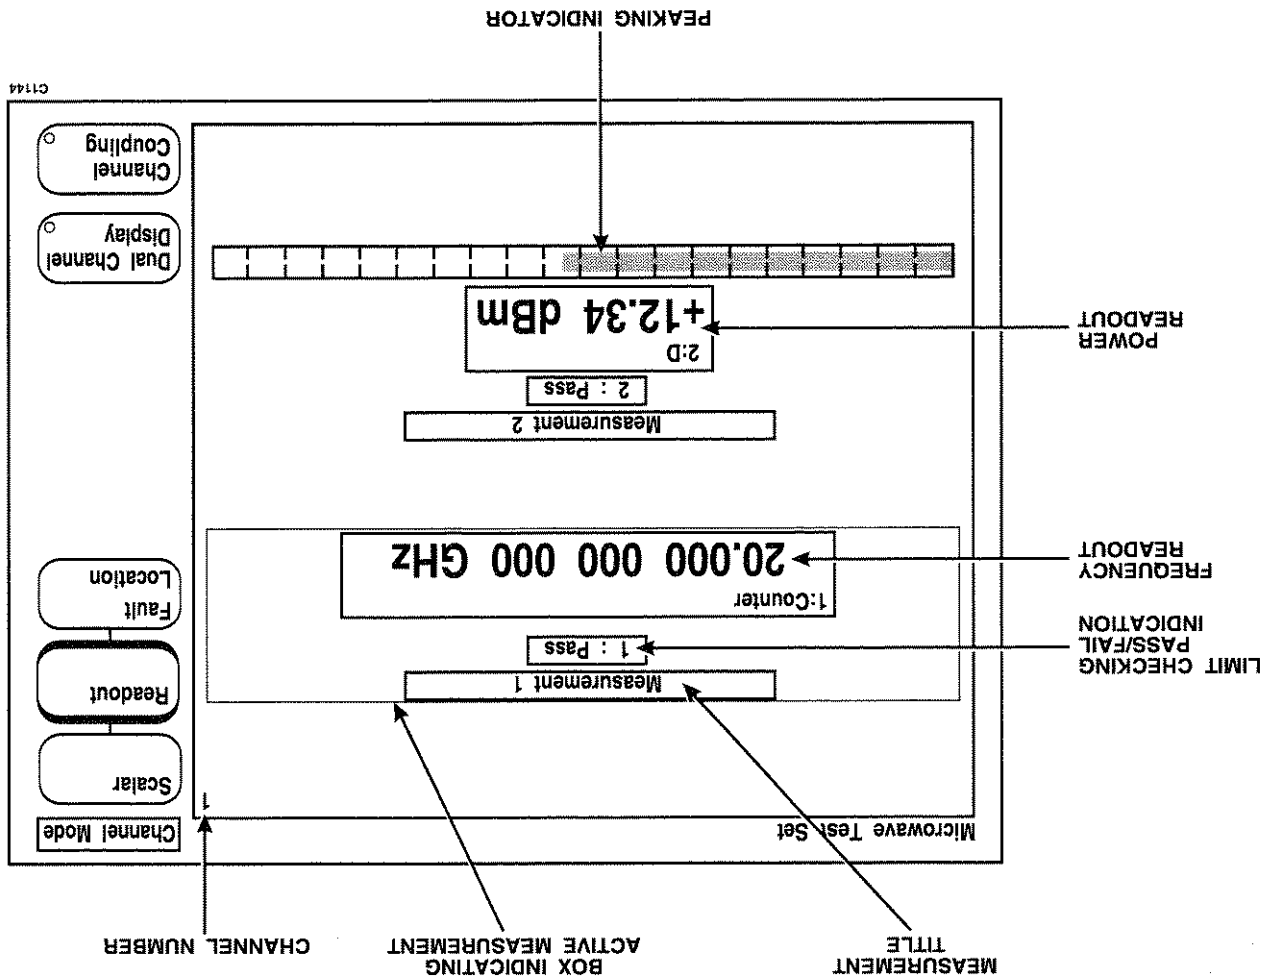


Fig. 3-5 Display - Readout Measurements

Channel Number indicates which channel is being displayed. Measurement Title is a descriptive alpha-numeric title which is entered by using the Titles Menu, accessed via the [UTILITY] key. Pass/Fail displays the pass or fail status of a measurement, in the same way as for a swept channel, described earlier.

Readout. The format of the readout depends on whether it is displaying a power meter or frequency measurement. In both cases the readout consists of a readout in large digits together with associated information. Power meter readings are displayed to a maximum of four significant figures with the display resolution selectable between 0.001 and 1 dB in decade steps. The display resolution of frequency readings is selectable between 1 Hz and 100 MHz in decade steps. The readout for the currently active measurement is surrounded by a red box outline. The two formats are shown in Fig. 3-6.

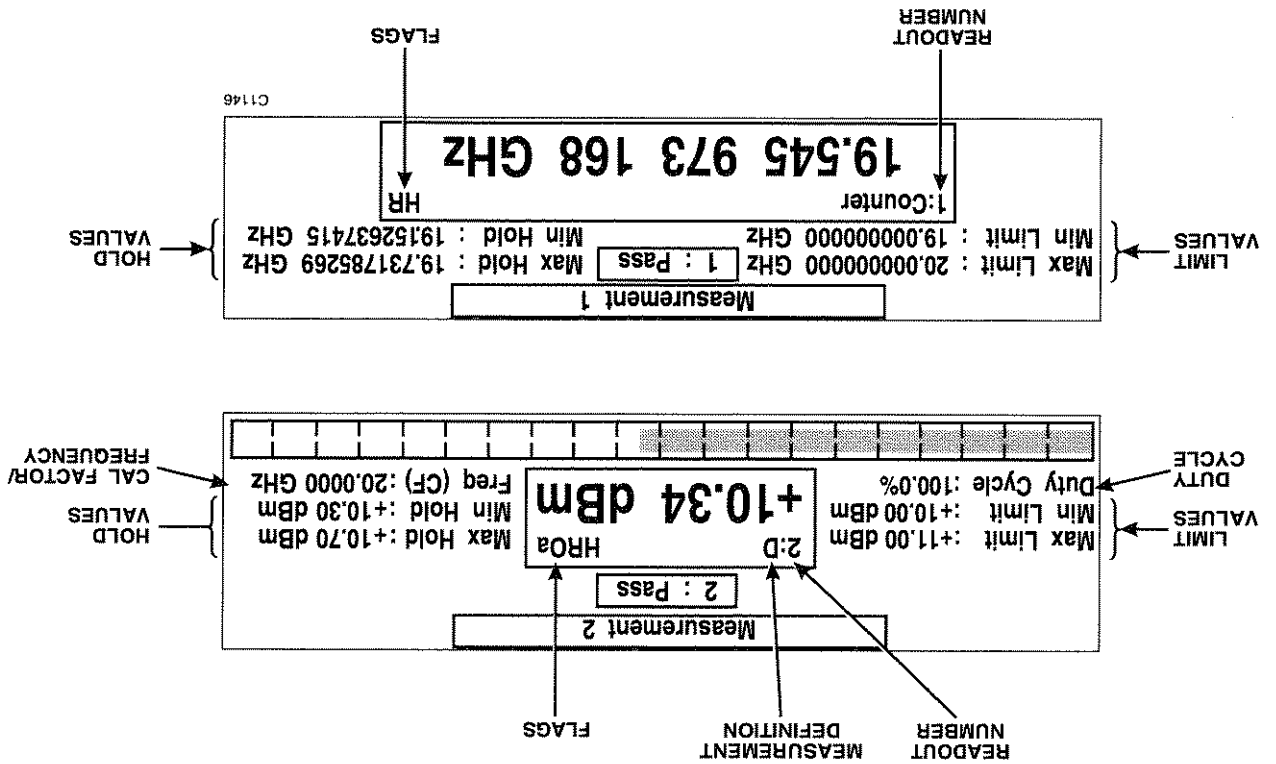


Fig. 3-6 Format of Readout

Limit Values. These are the maximum and minimum values used for limit checking, as set up using the Lim Checking Menu, accessed via the [MEASURE] key.

Hold Values. These are the maximum and minimum values the readout has reached whilst the max/min hold function has been turned on (via the [MEASURE] key).

Duty Cycle. This is the value that is being used in the duty cycle correction that is being applied to the power reading measurement, as set up using the Duty Cycle Menu, accessed via the [MEASURE] key.

Cal Factor/Frequency. This is only applicable if input D has been configured to take a power sensor. If the user has set a cal factor manually, the value is displayed here (labelled Cal Factor). If the cal factor has been chosen from a table using a manually entered frequency, or coupled to the active marker, the corresponding frequency is shown here (labelled Freq(CF)). If the device connected is a scalar detector, then the field is blank because these devices are not cal factor corrected.

Readout Number, Measurement Definition and Flags. The readout number (1 or 2) is followed by an indication of the measurement definition, e.g. single input, ratio or difference. Flags provide the following information:

- H indicates that the measurement is held (display frozen).
- R indicates a relative measurement.
- O indicates that an offset is being applied to at least one of the inputs (power measurements only).
- A indicates that averaging is being applied to at least one of the inputs. It is in lower case when the Average Number for at least one input has not yet reached the target value. This flag applies to power measurements only.

Peaking Indicator. This is a horizontal bar whose length varies depending upon the value of the power readout, and also on the value it was centred at (using the *[Reset Peak Indicator]* soft key of the Measure Menu). This analogue representation is not for measurement, but enables changes in the measurement to be seen more easily than with the digital display. The dynamic range of the indicator is approximately 10 dB.

General Information Area

This area is located at the top of the screen, and provides the user with general information concerning the measurement in progress. It is displayed in the format shown in Fig. 3-7.

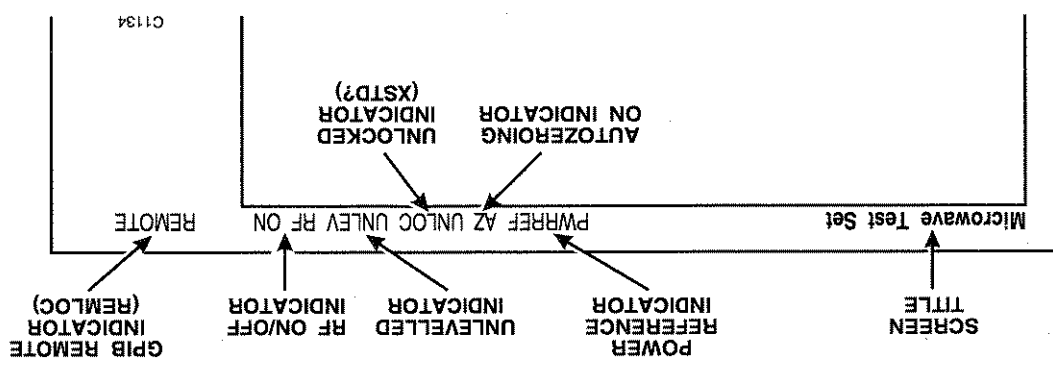


Fig. 3-7 General Information Area

Screen Title is the title of the screen which is entered by using the Titles Menu, accessed via the [UTILITY] key. Power Reference On Indicator (PWRREF) will be present if the power reference is switched on.

RF On Indicator (RF ON/RF OFF) indicates whether the synthesized source RF is on or off. If it is on, RF ON is displayed in red; if it is off, RF OFF is displayed in blue.

Unlocked Indicator (UNLOC) and External Standard State Indicator (XSTD?) UNLOC indicates that the frequency of the source is unlocked. XSTD? is displayed in this position if the instrument is set up for an external standard, but there is either no standard detected or it is the wrong frequency.

Detector Autozeroing On Indicator (AZ) indicates that detector autozeroing has been enabled.

Unlevelled Indicator (UNLEV) indicates that the source power is unlevelled.

GPB Remote Indicator (REMOTE) indicates that the instrument is in the GPB remote state. REMLOC is displayed if this is also local lockout mode, i.e. the front panel controls are locked out. The indicator is displayed in the area that would otherwise be used for displaying the menu title. When the instrument is returned to local mode, the indicator is removed and the menu title is again displayed.

Error Messages

During operation of the MTS, one of several types of error messages may be displayed on the screen. The message gives a description of the problem that has occurred and, where appropriate, the action that the operator can take to solve the problem. Appendix B lists all the possible error messages that the operator can receive.

Display Set-up

Facilities are provided to set the screen brightness and screen timeout for the LCD. The screen brightness can be set to either full or half brightness. The timeout facility enables the LCD backlight to be turned off automatically after a specified period of time. These functions are available from the Display Set-up Menu, accessed via the [UTILITY] key.

REAR PANEL FEATURES

Fig. 3-8 illustrates the following features and connectors of the rear panel

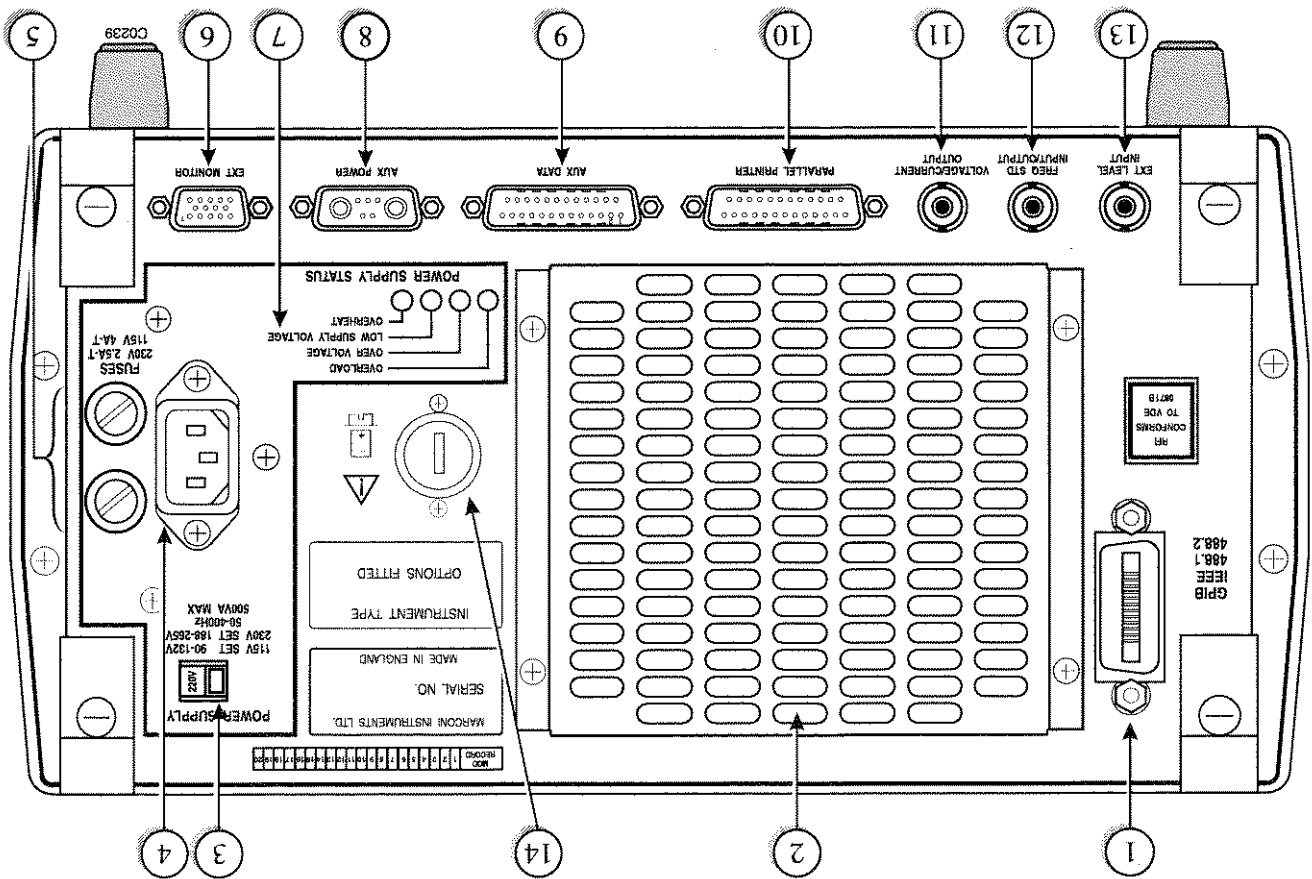


Fig. 3-8 MTS Rear Panel

- ① **GPIB Connector.** Connects the MTS to an external controller when the instrument is to be controlled through the GPIB. This connector is also used when the MTS is required to control a second MTS or an HPGL plotter. Refer to the GPIB Operating Manual for information on GPIB operation.
- ② **Cooling Fan.** The fan extracts the warm air generated by the instrument; it does not contain a filter as it is not necessary with this type of cooling.
- ③ **Supply Voltage Selector Switch.** This selects the AC supply voltage range. For more information refer to Chapter 2.
- ④ **Power Input Connector.** This is the connector for the AC mains power cable.
- ⑤ **Fuses.** For protection of the line and neutral lines of the supply input. The fuses are rated at 2.5A - T for 188 - 265 V operation, or 4A - T for 90 - 133 V operation.
- ⑥ **EXT MONITOR Connector.** This is used to connect a variable scan rate RGB colour monitor, if required.

Power Supply Status. Four LEDs indicate the following fault conditions within the instrument's power supply:

- Overload
- Over voltage
- Low supply voltage
- Overheat

If any of the LEDs illuminate, refer to the Maintenance Manual for remedial action.

AUX POWER Connector. This is used to provide a 25 V DC supply for the 6210 Reflection Analyzer

AUX DATA Connector. This is used to transfer digital data between the MTS and the AUX DATA port of the 6210 Reflection Analyzer.

PARALLEL PRINTER Connector. This is used to connect a suitable printer via the Centronics interface. Recommended printers are listed in Chapter 1, "Associated Equipment".

VOLTAGE/CURRENT OUTPUT Connector. This output can be defined by the user to be one of the following:

- Voltage proportional to the synthesized source output frequency (i.e. Volts/GHz).
- Voltage proportional to the power measured by the MTS, which is used to drive a chart recorder.
- Swept voltage or current for voltage/current domain measurements.
- Fixed voltage or current output for measurements with differing bias.

For details on how to configure this output refer to the V/I Output Menu (page 3-39).

FREQ STD INPUT/OUTPUT Connector. This BNC connector provides either a 10 MHz output derived from the internal frequency standard, or accepts either a 1 or 10 MHz input from an external standard, as selected from the front panel (refer to the Lev & F Std Menu, page 3-37).

EXT LEVEL INPUT Connector. Provides for the connection of a remote detector or power sensor for source leveling.

Battery Compartment Cover. Removal of this cover provides access to the Lithium battery that is used to power the instrument's non-volatile memory.

7

8

9

10

11

12

13

14

② **AUX DATA Connector.** This is used to transfer digital data between the 6210 and the AUX DATA port of the MTS.

If any of the LEDs illuminate, refer to the Maintenance Manual for remedial action.

① **Power Supply Status.** Four LEDs indicate the following fault conditions within the instrument's power supply:
 Overload
 Over voltage
 Low supply voltage
 Overheat

6210 REAR PANEL FEATURES



③ **RF INPUT Connector.** This is a precision 3.5 mm connector for the RF output signal from the MTS.

② **AUX OUTPUT Connector.** This connector is used to route the four 6210 detector outputs to the AUX INPUT connector of the MTS.

① **TEST PORT Connector.** This is a ruggedised 3.5 mm connector for connection to the device under test.

6210 FRONT PANEL FEATURES

Fig. 3-9 6210 Front and Rear Panels

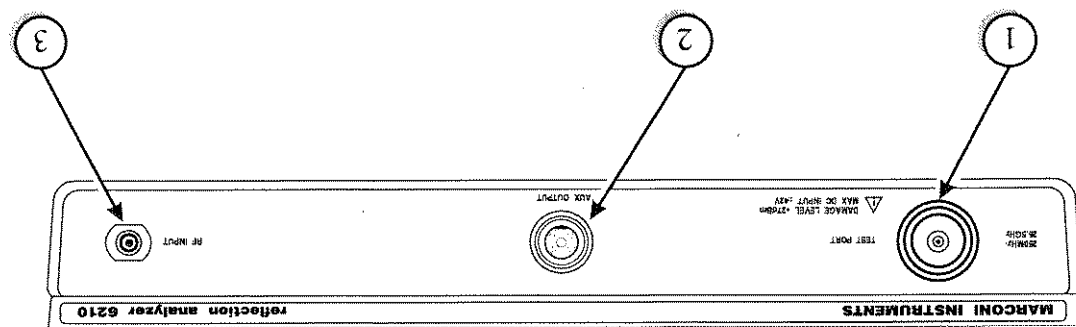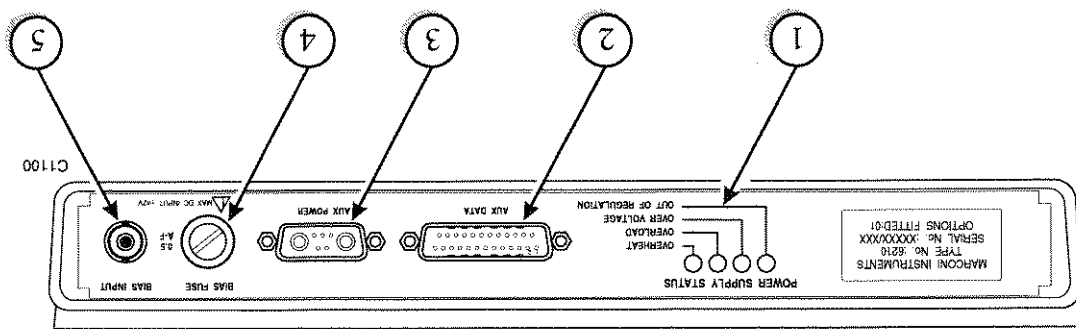

③ **AUX POWER Connector.** This connects the AUX POWER output of the MTS which provides 25 V DC for the 6210 power supply.

④ **Bias Fuse.** For protection of the bias input. The fuse is rated at 0.5 A. (This is only present on instruments which have the Bias Tee Option fitted.)

⑤ **BIAS INPUT Connector.** Provides for the input of a bias voltage, which the 6210 applies to the test port centre pin. The bias voltage can be obtained from the VOLTAGE/CURRENT OUTPUT connector at the rear of the MTS. The voltage source must be removed from the BIAS INPUT connector whilst any calibration pieces are connected to the 6210, otherwise damage to the calibration pieces may occur. (The BIAS INPUT Connector is only present on instruments which have the Bias Tee Option fitted.)

DISPLAY GROUP KEYS

The keys in this group determine how many measurements will be displayed, and the type of measurement that is to be performed by the currently active channel. Only the [CHANNEL MODE] key has an associated menu structure.

[SELECT MEAS] KEY

The [SELECT MEAS] key is used to select one of the displayed measurements to be the active measurement within the active channel. This is the trace or readout currently controlled by the front panel keys, and all measurement specific functions apply to the active measurement. Pressing this key cycles through the displayed measurements, making each one in turn the active measurement, which is indicated by surrounding the trace information area or readout with a red box outline. The currently displayed menu will change to the equivalent menu for the type of the new active measurement.

[MEAS 1 ON/OFF] KEY

The [MEAS 1 ON/OFF] key has a toggle active which determines whether or not Measurement 1 of the selected channel will be displayed. Since at least one measurement must be displayed in a channel, turning off Measurement 1 with only this measurement displayed will automatically turn on Measurement 2.

[MEAS 2 ON/OFF] KEY

The [MEAS 2 ON/OFF] key has a toggle active which determines whether or not Measurement 2 of the selected channel will be displayed. Since at least one measurement must be displayed in a channel, turning off Measurement 2 with only this measurement displayed will automatically turn on Measurement 1.

[SWITCH CHANNEL] KEY

The [SWITCH CHANNEL] key selects either Channel 1 or Channel 2 to be the active channel. This is the channel currently controlled by the front panel keys. All channel-specific functions apply to the active channel. When the key is pressed, the box outline surrounding the selected channel momentarily brights up in green, to provide an indication to the user that the channel has changed. The currently displayed menu will change to the equivalent menu for the mode of the new active channel.

- Channel Mode
- Scalar
- Readout
- Fault Location
- Reflection Analyzer
- Dual Channel Display
- Channel Coupling

Makes the currently active channel a scalar channel.

Makes the currently active channel a readout channel.

Makes the currently active channel a fault location channel.


Makes the currently active channel a reflection analyzer channel. This soft key will only be displayed if 6210 Reflection Analyzer is connected.

Toggles between dual channel and single channel display.

Toggles the channel coupling facility on or off. *This soft key is unselectable if the channel types are different. See page 3-27 for an explanation of channel coupling.*

CHANNEL MODE

Fig. 3-10 Channel Mode Menu

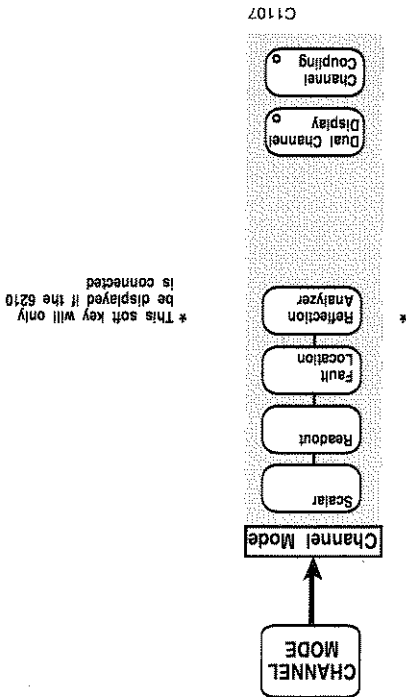

The [CHANNEL MODE] key presents the Channel Mode Menu, which enables the channel mode to be selected for the currently active channel. It also allows selection of dual channel display and channel coupling.

[CHANNEL MODE] KEY

[SOURCE] KEY

The [SOURCE] key provides access to the series of menus illustrated in Figs. 3-11 to 3-14, which are used to define and control all the source functions, e.g. the synthesized sweep generator and the programmable voltage/current output. When the [SOURCE] key is pressed, the Source Menu is displayed; this in turn provides access to the other soft key menus.

The [Select Source Mode] soft key is used to access the Source Mode Menu, and the required source mode is then selected by pressing the appropriate soft key. Pressing [Return to Source] will return the user to the source menu corresponding to the selected mode. There are therefore six source menus available for a scalar channel, one for each of the source modes that can be selected from the Source Mode Menu. The source modes available are:

- Start & Stop Frequency Sweep Mode (linear frequency sweep between user-defined start and stop values).
- Centre & Span Frequency Sweep Mode (linear frequency sweep defined by its centre frequency and span).
- CW Mode (continuous wave output at a user-defined frequency and power).
- Power Sweep Mode (power sweep between user-defined start and stop values).
- Voltage Sweep Mode (voltage sweep between user-defined start and stop values).
- Current Sweep Mode (current sweep between user-defined start and stop values).

The last three soft keys of the Source Menu are the same for each variant; the remaining five will vary to reflect the parameters required for the particular source mode.

Menus that occur more than once within the Source menu structure (e.g. Source Mode Menu and Source Funcs Menu) are described only once. For subsequent occurrences, a reference is made to the relevant part of the chapter.

The above applies to both the instrument's internal source and to an external source (e.g. a second MTS). If an external source is connected, it is set up by accessing the Int/Ext Source Menu ([Source] [Source Functions][Int/Ext Source]) and selecting [Ext Source Set-up]. The same functions are then available as for the internal source set up, except that the menus make reference to the external source rather than the internal one.

Channel Coupling

In many applications, there may be a requirement that the RF source set-up and the rear panel voltage/current output be the same for both channels. This can be achieved by setting channel coupling on from the Channel Mode Menu. When channels are coupled, the instrument will ensure that the RF source and voltage/current output are set up identically for both channels.

When channel coupling is first switched on, the RF source and voltage/current settings defined for the active channel will be duplicated for the other channel. Afterwards, any changes made to the source or voltage/current output on the active channel will be reflected in the other channel.

Should it be necessary to have independent source set-ups for each channel, channel coupling can be switched off.

Source
(Start/Stop
Frequency
Sweep Mode)

See Fig. 3-11. This menu enables the operator to set up the source to provide a linear frequency sweep between the start frequency and stop frequency values. If channel coupling is on (see Source Funcs Menu), the settings defined for the active channel will be duplicated on the other channel. See page 3-27 for an explanation of channel coupling and how sweep modes are selected.

The start and stop frequencies can also be set to the frequency value corresponding to the position of the active marker on the active measurement. This is done by pressing the appropriate soft key, positioning the active marker on the trace, then pressing the [X1] key on the numeric keypad.

Used to change the start frequency of the source for the currently active channel to a value within the range permitted for the particular MTS.

Rotary Control Step Keys Numeric Pad Terminator 10+

**Set Start
Frequency**

Similar to the above but applies to the stop frequency of the sweep.

**Set Stop
Frequency**

Used to change the output power of the source for the active channel.

**Set Output
Power**

Rotary Control Step Keys Numeric Pad Terminator Any

**Set Number
of Points**

Used to change the number of measurement points generated by the sweep for the currently active channel, up to a maximum of 1601 points.

Rotary Control Step Keys Numeric Pad Terminator Any

**Sweep
Time**

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.
See page 3-34.

RF

Toggles the RF output on or off.

**Select
Source Mode**

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.
See page 3-35.

**Source
Functions**

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.
See page 3-36.

Source
(Centre/Span
Frequency
Sweep Mode)

See Fig. 3-12. This menu enables the operator to set up the source to provide a linear frequency sweep by defining the centre and span of the sweep. If channel coupling is on (see Source Funcs Menu), the settings defined for the active channel will be duplicated on the other channel. See page 3-27 for an explanation of channel coupling and how sweep modes are selected.

The centre and span values of the frequency sweep can also be set from the positions of the active and delta markers displayed on the active measurement. To set the centre value, press [Set Cnr Frequency], position the active marker, then press the [X1] key on the numeric keypad. To set the span, press the [Set Span] soft key, position the delta marker to the appropriate point either side of the centre, then press the [X1] key. (If necessary, enable the delta marker from the Markers Menu.)

Used to change the centre frequency of the sweep for the currently active channel to a value within the range permitted for the particular MTS.

Rotary Control Step Keys Numeric Pad Terminator 10+

Similar to the above but applies to the span of the frequency sweep.

Set Span

Used to change the output power of the source for the currently active channel.

Set Output Power

Rotary Control Step Keys Numeric Pad Terminator Any

Used to change the number of measurement points generated by the sweep for the currently active channel, up to a maximum of 1601 points.

Set Number of Points

Rotary Control Step Keys Numeric Pad Terminator Any

Sweep Time

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.
Toggles the RF output on or off.

RF

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.

Select Source Mode

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.

Source Functions

See page 3-36.

See page 3-35.

Source
(CW Mode)

See Fig. 3-12. This menu enables the operator to set up the source to provide a continuous wave (CW) frequency. If channel coupling is on (see Source Funcs Menu), the settings defined for the active channel will be duplicated on the other channel. See page 3-27 for an explanation of channel coupling and how sweep modes are selected.

Note that the CW Mode is not suitable for measurements when the MTS is to be used as an independent source. The Source Only Mode (see page 3-36) should be used in these cases. The [CW] soft key description on page 3-35 give a full explanation of the difference between these two modes.

Used to change the CW frequency of the source for the currently active channel to a value within the range permitted for the particular MTS.

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

Set Output Power

Used to change the output power of the source for the currently active channel.

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

This soft key is unselectable in CW mode.

Sweep Time

Toggles the RF output on or off.

RF

Select Source Mode

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.

See page 3-35.

Source Functions

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.

See page 3-36.

Source
(Power Sweep)

See Fig. 3-13. This menu enables the operator to set up the source to provide a linear power sweep between the start power and stop power values. The settable power levels and power sweep range are given in the Performance Data section of Chapter 1. If channel coupling is on (see Source Funcs Menu), the settings defined for the active channel will be duplicated on the other channel. See page 3-27 for an explanation of channel coupling and how sweep modes are selected.

Used to change the start power level of the source for the currently active channel.

Rotary Control Step Keys Numeric Pad Terminator Any

Used to change the stop power level of the source for the currently active channel.

Rotary Control Step Keys Numeric Pad Terminator Any

Used to change the CW frequency of the source for the currently active channel to a value within the range permitted for the particular MTS.

Rotary Control Step Keys Numeric Pad Terminator 10+

Used to change the number of measurement points generated by the sweep for the currently active channel, up to a maximum of 1601 points.

Rotary Control Step Keys Numeric Pad Terminator Any

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically. See page 3-34.

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected. See page 3-35.

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement. See page 3-36.

Source Functions

Select Source Mode

RF

Toggles the RF output on or off.

Sweep Time

See page 3-34.

Source
(Voltage Sweep)

See Fig. 3-14. This menu enables the operator to set up the source to provide a linear voltage sweep between the start voltage and stop voltage values. The voltage sweep is available at the rear panel VOLTAGE/CURRENT OUTPUT connector. The voltage sweep range is given in the Performance Data section of Chapter 1. If channel coupling is on (see Source Funcs Menu), the settings defined for the active channel will be duplicated on the other channel. See page 3-27 for an explanation of channel coupling and how sweep modes are selected.

Rotary Control Step Keys Numeric Pad Terminator 10-

Used to change the start voltage of the source for the currently active channel.

Set Start Voltage

Rotary Control Step Keys Numeric Pad Terminator 10-

Used to change the stop voltage of the source for the currently active channel.

Set Stop Voltage

Leads to the CW Set-up Menu, which enables the source frequency and output power to be set up.

See page 3-42.

Set-up CW

Used to change the number of measurement points generated by the sweep for the currently active channel, up to a maximum of 1601 points.

Set Number of Points

Rotary Control Step Keys Numeric Pad Terminator Any

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.

See page 3-34.

Sweep Time

Toggles the RF output on or off. It will not be possible to obtain RF output while a frequency counter measurement is being made, although the soft key is still selectable.

RF

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.

See page 3-35.

Select Source Mode

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.

See page 3-36.

Source Functions

Source
(Current Sweep)

See Fig. 3-14. This menu enables the operator to set up the source to provide a linear current sweep between the start current and stop current values. The current sweep is available at the rear panel VOLTAGE/CURRENT OUTPUT connector. The current sweep range is given in the Performance Data section of Chapter 1. If channel coupling is on (see Source Funcs Menu), the settings defined for the active channel will be duplicated on the other channel. See page 3-27 for an explanation of channel coupling and how sweep modes are selected.

Set Start Current

Used to change the start current of the source for the currently active channel.

Rotary Control Step Keys Numeric Pad Terminator 10-

Set Stop Current

Used to change the stop current of the source for the currently active channel.

Rotary Control Step Keys Numeric Pad Terminator 10-

CW Set-up

Leads to the CW Set-up Menu, which enables the source frequency and output power to be set up (see previous menu).
See page 3-42.

Set Number of Points

Used to change the number of measurement points generated by the sweep for the currently active channel, up to a maximum of 1601 points.

Rotary Control Step Keys Numeric Pad Terminator Any

Sweep Time

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.
See page 3-34.

RF

Toggles the RF output on or off. It will not be possible to obtain RF output while a frequency counter measurement is being made, although the soft key is still selectable.

Select Source Mode

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.
See page 3-35.

Source Functions

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.
See page 3-36.

SOURCE

Sweep Time

Sweep Time See Fig. 3-11. The sweep time is the time taken for the source to complete one sweep, excluding retrace time and the time required for internal processing of the data. The setting determined by this menu will apply instrument-wide, i.e. to all displayed traces.

Longer sweep times may be necessary when testing certain devices, and also have the effect of reducing noise.

Automatic Sweep Time Sets the sweep time mode of the source to automatic. In this mode the sweep time automatically adjusts to the minimum sweep time available for the set frequency span and number of measurement points.

User Set Sweep Time Sets the sweep time mode to manual; the following soft key can then be pressed to allow the sweep time to be changed by the operator.

Set Sweep Time Allows the sweep time to be entered; the allowable range of values is given in the Performance Data section of Chapter 1. The MTS will generate an actual sweep time that will never be faster than the sweep time entered, but may be slower depending on constraints imposed by the number of measurement points, source frequency range and measurement definition.
This key will only be selectable if manual sweep time mode has been selected

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10-

Return to Source Returns control to the Source Menu.

See Fig. 3-11. This menu enables the MTS source to be set up to provide either a CW (continuous wave) output or a swept output. For swept measurements, the variable that is swept (domain) is plotted on the x-axis of the channel graphic. The frequency, power, voltage and current domains are supported. If two traces are displayed on the same channel, or if the two channels are coupled, they will share the same x-axis annotation. Only one of the following options can be selected at a time; pressing one of the soft keys automatically de-selects the current mode and selects the new one. The parameters of the source for the selected mode can be set up after returning to the Source Menu.

CW

Sets the source to the CW mode of operation, in which the frequency and power level can be defined by returning to the Source Menu.

The CW mode assumes that the source is to be used as part of an integrated measurement system (the MTS) where the source and data acquisition system are synchronized. To use the MTS as an independent general purpose microwave source, use the Source Only Mode, accessed from the Source Funcs Menu (page 3-36). In this mode the data acquisition system is turned off, and the instrument acts solely as a microwave source.

**Start & Stop
Freq Sweep**

Sets the source to the swept frequency mode of operation, in which the start and stop values of the frequency sweep and its power level can be defined by returning to the Source Menu. Similar to the above, but the sweep is defined by the centre frequency and its span.

**Ctrl & Span
Freq Sweep**

Sets the source to the power sweep mode of operation, in which the start and stop values of the power sweep and its frequency can be defined by returning to the Source Menu.

**Power
Sweep**

Sets the source to the voltage sweep mode of operation, in which the start and stop values of the voltage sweep can be defined by returning to the Source Menu. A CW RF output available at the rear panel VOLTAGE/CURRENT OUTPUT connector. The swept voltage is simultaneously available at the RF OUTPUT connector, which can be set up by returning to the Source Menu (CW Set-up] soft key). The voltage sweep mode applies instrument-wide.

**Voltage
Sweep**

Sets the source to the current sweep mode of operation, in which the start and stop values of the current sweep can be defined by returning to the Source Menu. The swept current is available at the rear panel VOLTAGE/CURRENT OUTPUT connector. A CW RF output is simultaneously available at the RF OUTPUT connector, which can be set up by returning to the Source Menu (CW Set-up] soft key). The current sweep mode applies instrument-wide.

**Current
Sweep**

This soft key will only be displayed if the 6210 Reflection Analyzer is connected, and will only be selectable if the active channel is a reflection analyzer channel. It leads to a submenu which provides additional sweep modes for a reflection analyzer channel (see page 3-184).

More

Returns control to the Source Menu.

**Return to
Source**

See Fig. 3-11. This menu enables various source functions to be set up according to the requirements of a particular measurement.

Source Funcs

Leads to the Lev & F Std Menu, which enables the levelling mode of the source to be selected, and the frequency standard to be set to internal or external.
See page 3-37.

Freq Std

This soft key has a toggle action and is used to enable/disable RF blanking. With RF blanking enabled, spurious RF signals are reduced at the RF output by blanking out the signal during the frequency change switching points.

RF Blanking

Leads to the Int/Ext Source Menu, which allows either the internal source of the MTS or an external source to be set up.
This soft key is unselectable if the instrument is in source only mode (see below), or if the currently active channel is a fault location channel.
See page 3-38.

Int/Ext Source

Leads to the V/I Output Menu, which enables the voltage/current output facility to be set up.
See page 3-39.

Voltage / Current O/P

Leads to the CW & Loop BW Menu, which enables the CW filter to be switched on or off and the synthesizer loop bandwidth to be varied.
See page 3-41.

CW Filter & Loop BW

Toggles the Source Only Mode on or off. In this mode the data acquisition system is turned off and the MTS acts solely as a source, and can be used, for example, as an external source for a second MTS, if desired. When this mode is turned on, a screen is displayed which allows all the parameters of the source to be set up. The Save/Recall and Utility menus are still available but all other menus are locked out and cannot be accessed until source only mode is turned off.

Source Only Mode

This soft key is unselectable if an external source is being controlled, or if the sweep type is linear list, low pass or waveguide. It is not present if the currently active channel is a fault location channel.

Return to Source

Returns control to the Source Menu.

See Fig. 3-11. This menu is used to select the levelling mode that is used to control the output power, and also allows the operator to select the frequency standard to be used by the synthesized source and frequency counter of the MTS.

Levelling Levelling is used for power level control, via a fast, closed-loop feedback system. The control (feedback) signal used to level the output can be derived from either the internal levelling detector of the MTS, or from an external detector or power meter, connected to the rear panel EXT LEVEL INPUT.

Internal levelling provides a constant signal at the MTS RF connector regardless of reflections by adjusting the level of the source, thus improving the source match. A further improvement in source match can be gained by using the external levelling mode, so that levelling is done at a point in the system closer to the test port. The emergent signal at the levelled point in the system is constant regardless of the signal travelling back towards the source; in this way the source appears matched.

Frequency Standard Under normal circumstances the internal crystal oscillator of the MTS would be used, but if necessary, an external frequency standard of higher accuracy and stability can be connected to the FREQ STANDARD INPUT/OUTPUT rear connector.

Sets the levelling mode of the source to internal.

Sets the levelling mode of the source to external, and requires a detector of positive polarity.

Sets the levelling mode of the source to external, and requires a detector of negative polarity.

Sets the levelling mode of the source to external, and requires a power meter levelling output of positive polarity.

Selects the internal crystal oscillator of the MTS as the frequency standard. In this mode, the MTS provides a 10 MHz reference output at the FREQ STANDARD INPUT/OUTPUT connector, derived from an internal oscillator.

Enables a 1 MHz external frequency to be used as the frequency standard.

Enables a 10 MHz external frequency to be used as the frequency standard.

Returns control to the Source Funcs Menu.

Return to Source Func

Ext Std 10 MHz

Ext Std 1 MHz

Int Std

Ext Levelling Power Meter

Ext Levelling -ve Det

Ext Levelling +ve Det

Int Levelling

SOURCE

Source Functions

Int / Ext Source

See Fig. 3-11. Measurements can be performed using either the internal synthesized source of the MTS, or an additional external source (a second MTS) connected to the instrument via the GPIB interface. Both internal and external sources can be controlled from either the front panel or using GPIB commands.

Allows the parameters of the internal source to be set up, after exiting from this menu.

Int Source Set-up

Allows the parameters of the external source to be set up, after exiting from this menu. The new parameters will not be transferred until external source control is turned on by using the [*Ext Source Control*] soft key.

Ext Source Set-up

Toggles external source control on or off. When it is turned off, the external source settings are held within the MTS, but are not sent to the external source. When it is turned on, all settings are transferred to the external source and the external source is kept up to date as changes are made by the user.

Ext Source Control

This soft key is unselectable if the external source is being set up.

Returns control to the Source Funcs Menu.

Return to Source Func

V/I Output

See Fig. 3-11. The VOLTAGE/CURRENT OUTPUT connector at the rear panel of the instrument can be programmed to provide a Volts/GHz output when performing swept frequency measurements, a 0-10 V ramp voltage for swept frequency or power measurements, a swept voltage/current output for voltage/current domain measurements, a constant bias voltage/current output, or a chart recorder output. This menu enables the user to set up the scaling of the Volts/GHz output and the value of the constant bias voltage/current. The parameters for the swept voltage/current sweep are set up using the voltage sweep or current sweep menus, accessed via the [SOURCE] key.

1.0 V/GHZ

Sets the voltage/current output to provide an output voltage proportional to the swept frequency, with a scale factor of 1 V/GHz. If the source mode is a power sweep or CW, the output will be set to the appropriate constant value. If the frequency exceeds 20 GHz, the output voltage will clip at 20 V. This parameter applies instrument-wide.

0.5 V/GHZ

Sets the voltage/current output to provide an output voltage proportional to the swept frequency, with a scale factor of 0.5 V/GHz. If the source mode is a power sweep or CW, the output will be set to the appropriate constant value. This parameter applies instrument-wide.

Constant
Voltage

Sets the voltage/current output to provide a constant voltage, as set by soft key 7; this will be labelled [Set Voltage] when constant voltage is selected. This mode applies instrument-wide.

Constant
Current

Sets the voltage/current output to provide a constant current, as set by soft key 7; this will be labelled [Set Current] when constant current is selected. This mode applies instrument-wide.

10 V Ramp

Sets the voltage/current output to provide a 0-10 V ramp voltage proportional to swept frequency or power. The output will be set to 0 V for CW mode.

Chart
Recorder

This facility is only available for power readouts. It sets the voltage/current output to provide a voltage proportional to the power level measured by either a power meter sensor connected to Input D, or a scalar detector connected to any input. This output can be used to drive a chart recorder. This mode applies instrument-wide.

If there is more than one readout displayed, the MTS will select the readout that is to be sent to the chart recorder from the following priority list:

- Active Channel - Active Readout (highest)
- Active Channel - Other Readout
- Other Channel - Active Readout
- Other Channel - Other Readout (lowest)

The format of the chart recorder output depends on the display format, as set up using the Format Menu ([FORMAT] key).

For Log format (dB/dBm), the chart recorder output scaling is 1 V/decade, i.e.

-7.0 V	-70 dB(m)
-1.0 V	-10 dB(m)
0 V	-0 dB(m)
1 V	+10 dB(m)

For Linear format (Watts), the chart recorder output will be in the range 0 to 5 V, with offset and scaling dependent on the type of sensor:

Type	5 Volts
6910 Series	+20 dBm (100 mW)
6920 Series	-20 dBm (10 μW)
6930 Series	+35 dBm (3.2 W)
6511/6230 Series detectors	+20 dBm (100 mW)

This soft key is labelled [Set Voltage] or [Set Current], depending on whether the voltage/current output mode is set to constant voltage or constant current. It is used to change the value of constant voltage or current available at the voltage/current output. The available range of values is given in the Performance Data section of Chapter 1. The value specified applies per channel.

This soft key will only be selectable for constant voltage and constant current modes.

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10-

Returns control to the Source Funcs Menu.

Return to Source Func

Set Voltage
or
Set Current

SOURCE

Source Functions
CW Filter & Loop BW

See Fig. 3-11. The CW filter is used to reduce the YIG oscillator tuning bandwidth and lower the residual FM to the values specified in the Performance Data section of Chapter 1. However, this also slows down the response due to the longer settling time. The Loop BW is the bandwidth of the frequency synthesizer phase-locked loop. Low bandwidth reduces the spurious signal content of the RF output but slows down the response; high bandwidth has the opposite effect. The soft keys have the following effect:

CW Filter Auto The CW filter is automatically turned ON for CW and power sweep modes, and turned OFF for frequency sweep modes. This is the default mode for the instrument.

CW Filter On The CW filter is always ON irrespective of the operating mode.

CW Filter Off The CW filter is always OFF irrespective of the operating mode.

Loop BW Auto The loop bandwidth is automatically set to LOW for CW and power sweep modes, and HIGH for frequency sweep modes. This is the default mode for the instrument.

Loop BW High The loop bandwidth is always HIGH irrespective of the operating mode.

Loop BW Low The loop bandwidth is always LOW irrespective of the operating mode.

Return to Source Func Returns control to the Source Funcs Menu.

CW Set-up
Set Output Power
Set Frequency
Return to Source

See Fig: 3-14 This menu enables the CW frequency and output power of the source to be set up for the voltage and current sweep modes

Used to change the output power of the source for the currently active channel. The power range available is given in the Performance Data section of Chapter 1.

Rotary Control v Step Keys v Numeric Pad v Terminator Any

Used to change the CW frequency of the source for the currently active channel to a value within the range permitted for the particular MTS.

Rotary Control v Step Keys v Numeric Pad v Terminator 10+

Returns control to the Source Menu.

CW Set-up

SOURCE

Fig. 3-11 SOURCE Menu - Scalar and Readout Channels (Sheet 1)

START & STOP
FREQUENCY
SWEEP MODE

SOURCE



Fig. 3-12 SOURCE Menus - Scalar and Readout Channels (Sheet 2)

**CW MODE,
CENTRE & SPAN
FREQUENCY SWEEP MODE**

SOURCE

Fig. 3-13 SOURCE Menu - Scalar and Readout Channels (Sheet 3)

POWER SWEEP MODE

SOURCE

Fig. 3-14 SOURCE Menus - Scalar and Readout Channels (Sheet 4)

VOLTAGE SWEEP MODE,
CURRENT SWEEP MODE

SOURCE

Fig. 3-23 SOURCE Menus - Scalar and Readout Channels (Sheet 1)

Fig. 3-24 MEASURE Menu - Scalar Channel (Sheet 2)

Input
Ratio

MEASURE

[MEASURE] KEY

The [MEASURE] key provides access to the series of menus illustrated in Figs. 3-23 to 3-26. These menus are used to define and set up the scalar measurement and apply various functions to aid examination of the results.

The current values or states for the major measurement functions of the active channel are displayed in specific locations on the screen (see 'Display' earlier in this chapter).

Measure See Fig. 3-23 This menu is used to specify whether the system is to measure the absolute power level of a single input or the ratio of two input power levels, and whether path calibration is to be applied. If the source has been set up to provide a voltage or current sweep, the menu will also allow frequency to be measured, which will be displayed on the vertical axis. The user can also apply averaging, smoothing or limit checking to the measurement.

Single Input
A, B, C or D

Leads to the Single Input Menu.
See page 3-53.

Input
Ratio

Leads to the Input Ratio Menu.
See page 3-53.

Counter

When this soft key is pressed, the quantity that will be measured and displayed on the vertical axis is the frequency of the signal present at the COUNTER input.
This soft key will only be selectable if the domain for the currently active channel is voltage or current (i.e. the source is set up for either a voltage sweep or a current sweep).

Averaging

Leads to the Averaging Menu, which enables averaging to be applied to the trace data.
See page 3-54.

Restart

Restarts the averaging process. See also the Averaging Menu (page 3-54).

Averaging

Leads to the Smoothing Menu, which enables smoothing to be applied to the trace data.
See page 3-55.

Smoothing

Limit

Leads to the Lim Checking Menu, which enables the displayed trace to be compared with user-defined limits.
See page 3-56.

Checking

General
Set-up

Leads to the Gen Set-up Menu, which enables the user to set up the input configuration and to compensate for detector/sensor characteristics.
See page 3-62.

Return to Measure	
A /	Selects input A as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (B, C or D).
B /	Selects input B as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, C or D).
C /	Selects input C as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, B or D).
D /	Selects input D as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, B or C).

It will not be possible to select input D if it is configured to be a power meter sensor input.

See Fig. 3-24. Enables the ratio of the power levels at two of the inputs to be measured by selecting the appropriate soft keys. The power ratio can be displayed in dB or VSWR, as selected from the Format Menu.

Input Ratio

MEASURE

Input Ratio

Return to Measure	
A	Selects input A for power measurement.
B	Selects input B for power measurement.
C	Selects input C for power measurement.
D	Selects input D for power measurement.

It will not be possible to select input D if it is configured to be a power meter sensor input.

See Fig. 3-23. Enables the power level at a selected input to be measured by pressing the appropriate soft key. The power level can be displayed in dBm, Watts or Volts, as selected from the Format Menu ([FORMAT] key).

Single Input

MEASURE

Single Input

Return to Measure

Set Average Number
Averaging

The averaging process can be re-started by using the [Restart Averaging] soft key in the Measure Menu.
Toggles averaging on or off for the currently active trace.
Enables selection of the average number to be used in the averaging function. Values in the range 1 to 1000 can be entered. When using the rotary control and step keys the average number will be incremented in powers of 2.

Rotary Control Step Keys Numeric Pad Terminator Any

Returns control to the Measure Menu.

Note...

Fig. 3-15 Effect of Averaging on a Trace

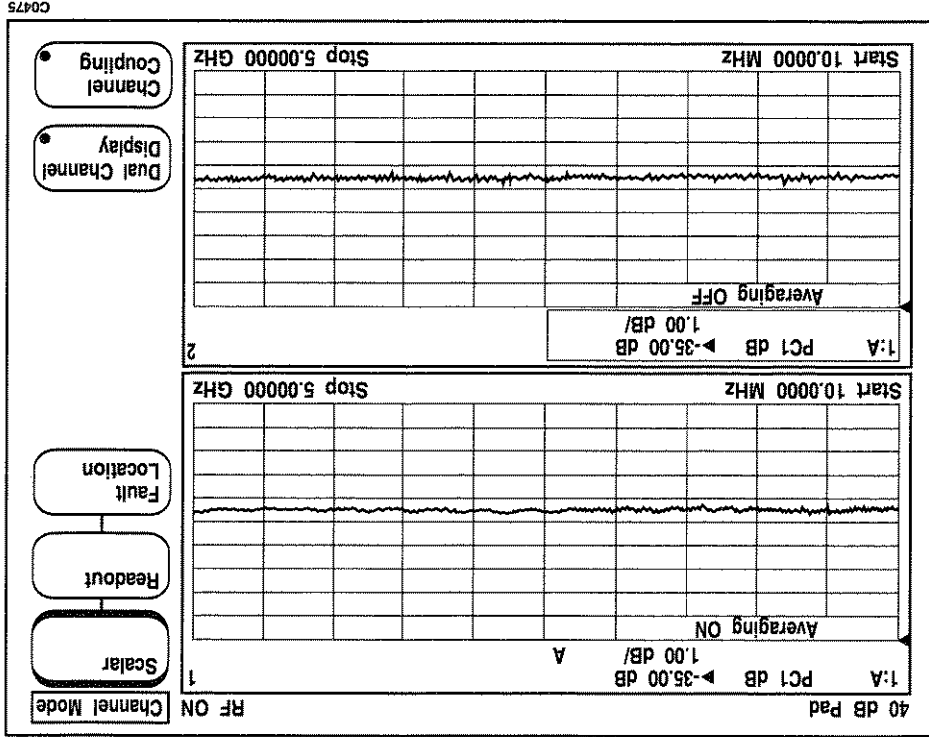


Fig. 3-15 illustrates the effect of averaging on a typical measurement trace.

The parameters in this menu apply per trace.
Each new sweep is averaged into the trace until the sweep count is equal to the user-entered average number, for a fully averaged trace. This condition is indicated by the 'A' flag in the relevant trace information area. The flag is in lower case until this condition is reached. It is absent if the averaging function is turned off.
See Fig. 3-23. This menu enables averaging to be applied to the measurement data, the amount of averaging being set by the user. Averaging is used to reduce the amount of noise on a trace. The minimum amount of averaging should be selected to reduce noise to an acceptable level, in order to maintain a sufficiently fast response.

Averaging

Smoothing

See Fig. 3-23. Smoothing is used to filter active trace data by performing a "moving average" on the data over a specified percentage of the sweep span. The parameter that specifies the percentage of the trace to be averaged for each data point is called the smoothing aperture.

Smoothing should be used to reduce ripple on a trace, e.g., to reduce relatively small peak-to-peak noise values on broadband measured data. Do not use smoothing for measurement of high resonance devices or other devices with wide variations in the trace, as it will introduce errors into the measurement.

Fig. 3-16 illustrates the effect of smoothing on a typical measurement trace.

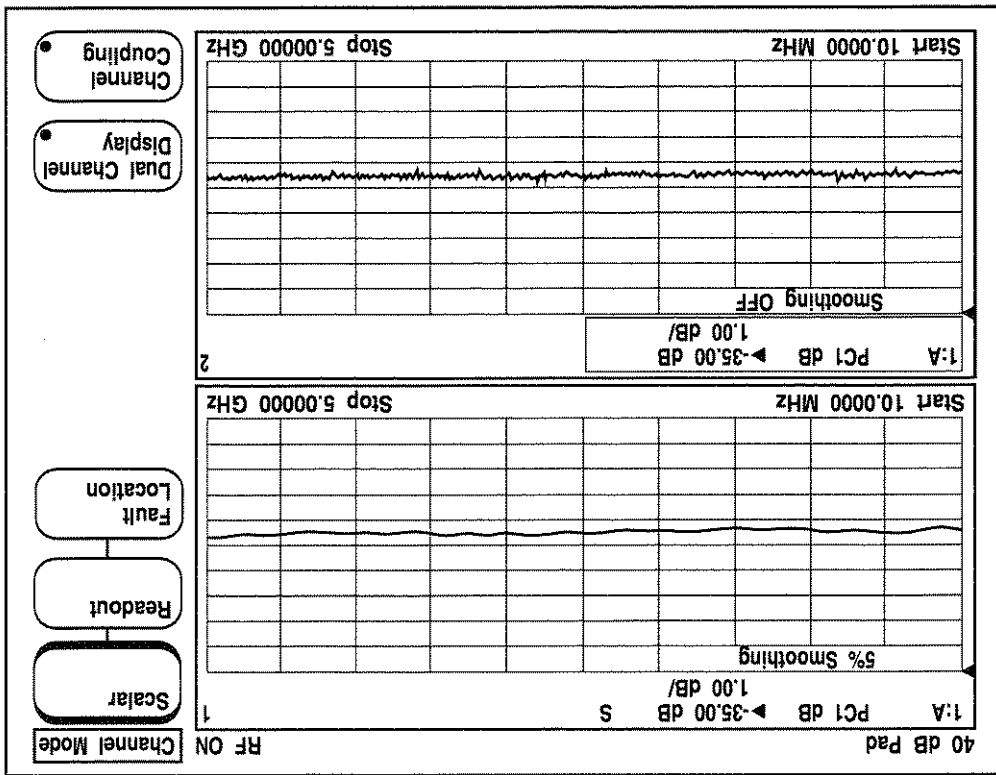


Fig. 3-16 Effect of Smoothing on a Trace

Smoothing

Toggles smoothing on or off for the currently active trace. If smoothing is applied to a trace, it is indicated in the relevant trace information area by an 'S' flag.

Enables selection of the smoothing aperture for the currently active trace. The smoothing aperture is a percentage of the span swept, up to a maximum of 20%.

Rotary Control Step Keys Numeric Pad Terminator Any

Set Aperture

Return to Measure

Returns control to the Measure Menu.

Lim Checking

See Fig. 3-23. This menu enables a limit checking facility to be implemented, allowing any displayed trace to be compared against upper and lower complex limit lines, defined by the user. Limit lines are lines drawn on the screen to represent upper and lower limits or device specifications with which to compare the device under test. Limits are defined in segments, where each segment is a portion of the source span. Each limit segment can be defined with the following parameters: start domain value, start upper and lower limits, stop domain value, stop upper and lower limits.

Three types of segments are available: flat line, sloping line and single point. A flat line segment has limit values which are constant with frequency or other domain value. A sloping line segment has limit values which change linearly with the domain value. A single point segment sets the limits at a specified domain value. Fig. 3-17 illustrates limit lines defined for a bandpass filter.

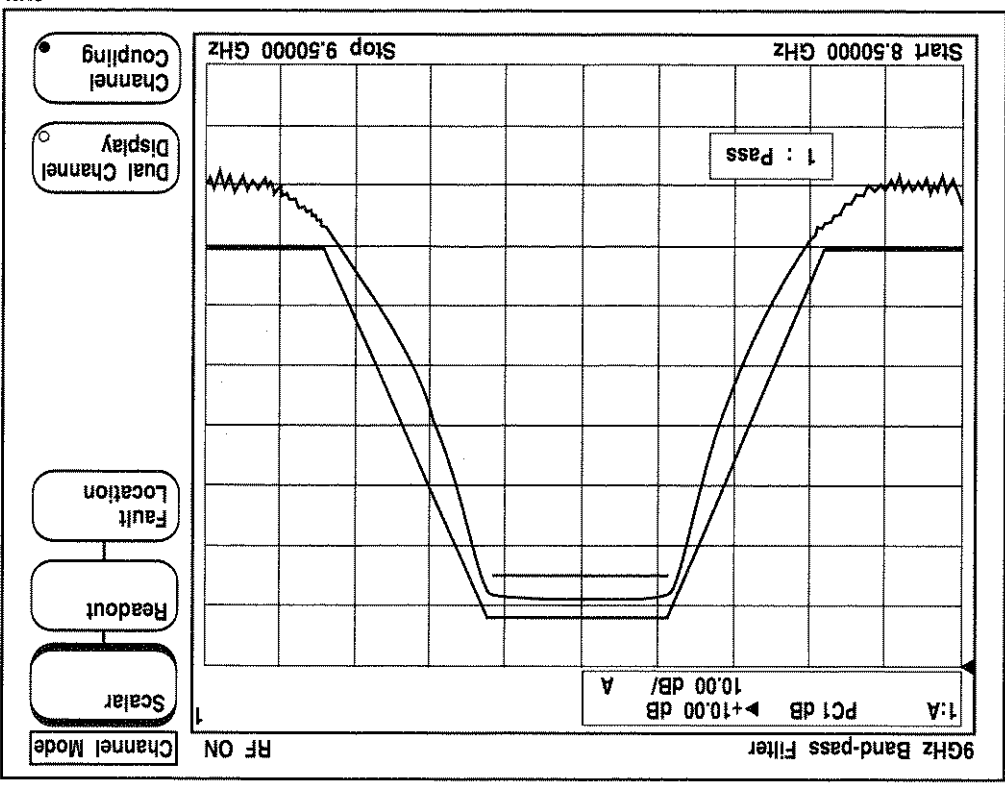


Fig. 3-17 Limit Lines for Bandpass Filter Testing

Limits can be defined independently for all displayed traces, with up to 12 segments for each trace. These can be in any combination of the three segment types.

Limit testing compares the measured data with the defined limits. If all measured data points for a trace are within limits, 1:Pass (for trace 1) or 2:Pass (for trace 2) is displayed on the screen, as appropriate. An out-of-limits test condition is indicated by 1:FAIL, (2:FAIL). Limits are checked only at the actual measured data points. It is possible for a device to be out of specification without a limit test failure indication if the point density is insufficient, therefore ensure that a high enough number of measurement points is specified in the Source Menu.

The limit lines are superimposed on the graticule when limit checking is enabled and the corresponding trace is switched on. The limit lines are displayed in colours corresponding to the associated trace colours.

The MTS allows four different limit specifications to be defined by the user. By default, each specification will be associated with a particular trace, but the user can specify one of the other limit specifications to be applied to a trace. A limit specification may be shared by more than one trace.

Toggles the limit checking facility on or off for the currently active trace.

Leads to the Edit Spec Menu.

See page 3-58.

Used to assign one of the four limit checking specifications to the currently active trace, by entering the desired specification number (1 to 4) from the keyboard.

Rotary Control X	Step Keys X	Numeric Pad V	Terminator Any
------------------	-------------	---------------	----------------

Returns control to the Measure Menu.

Return to Measure

Assign Spec 1-4

Edit Specification

Limit Checking

Segment Edit

Leads to the Edit Segment Menu. See page 3-60.

↑

Makes the next segment in the specification the active segment.

↓

Makes the previous segment in the specification the active segment.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Spec Select

Used to select a new limit checking specification for examination or editing, by entering the desired specification number (1 to 4). If the current specification has changed since it was last stored in memory, the user will be given the opportunity to store it before the new specification is presented.

An existing segment is selected for editing using the [↵] and [⇐] soft keys and then pressing the [Edit Segment] soft key. A new segment can be added by pressing the [Add Segment] soft key, or deleted by selecting it using the [↵] and [⇐] soft keys and then pressing the [Delete Segment] soft key.

Fig. 3-18 Limit Checking Specification Form

Limit Checking Specification 1					
Start	Upper	Lower	Stop	Upper	Lower
1	8.500000000G	-60.00	-60.00	8.680000000G	
2	8.680000000G	-60.00	-60.00	8.890000000G	2.00
3	8.890000000G	2.00	-5.00	9.125000000G	
4	9.125000000G	2.00	2.00	9.340000000G	-60.00
5	9.340000000G	-60.00	-80.00	9.500000000G	

C0421

Segment number, start domain value, stop upper limit and stop lower limit, stop domain value, start upper limit and stop lower limit.

See Fig. 3-23 This menu is used to set up or edit the current limit checking specification. In addition to soft key labels, a form is displayed on the screen showing the contents of the current limit checking specification, in segment order (Fig. 3-18). Each segment is defined by some or all of the following parameters, depending on the segment type:

Edit Spec

MEASURE

Limit Checking Edit Specification

Delete Segment

Deletes the active segment from the specification, after asking for confirmation. The segments below the active one will be moved upwards in the specification form and will be renumbered.

Add Segment

Leads to the Add Segment Menu.

See page 3-61.

Print Spec

Used to obtain a hard copy of the limit checking specification currently being edited.

Unselectable if there are no limit segments displayed.

Return to Lim Checking

The editing function is terminated and control returned to the Lim Checking Menu.

Edit Segment

See Fig. 3-23. A form is displayed on the screen which enables the user to edit the currently active segment. The [←] and [→] soft keys are used to move between the fields of the segments. The currently selected field is changed by entering the required value as follows:

Start/stop values

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

Upper/lower limit values

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	10-
----------------	---	-----------	---	-------------	---	------------	-----

After the value has been entered, the field to the right of the current one becomes the active field.

Note that a flat line segment does not use the stop upper/lower values, and a single point segment additionally does not use the stop domain value.

If no upper limit is required for a particular measurement, force the upper limit value out of range (for example +200 dB). If no lower limit is required, force the lower limit value out of range (for example -200 dB).

Defines the selected limit segment as a flat line.

Defines the selected limit segment as a sloping line.

Defines the selected limit segment as a single point.

Makes the next field in the segment the active field.

Makes the previous field in the segment the active field.

Makes the previous segment in the specification the active segment.

Makes the next segment in the specification the active segment.

Return to Edit Spec

Causes the currently active segment to be checked to ensure that the start domain value is lower than the stop domain value, and that each lower limit value is less than its corresponding upper limit value. If the checks fail a message will be displayed; the error must be corrected before the new data will be accepted. If the segment is passed, the segment editing function is terminated and control returns to the Edit Spec Menu.

Add Segment

See Fig. 3-23. This menu is used to add a new segment to the end of the list, which initially will be of the same type as the previous segment, with all its limit fields set to zero, and its domain values set to the stop domain value of the previous segment. The soft keys are used in the same way as for the Edit Segment Menu (see previous page), but there is now an additional [Add Segment] soft key.

MEASURE

- Limit
- Checking
- Edit
- Add
- Segment

Flat

Defines the selected limit segment as a flat line.

Slope

Defines the selected limit segment as a sloping line.

Point

Defines the selected limit segment as a single point.



Makes the next field in the segment the active field.



Makes the previous field in the segment the active field.

Add Segment

Pressing this soft key will cause the segment values to be checked for consistency, as in the Edit Segment Menu. If the checks fail, a message will be displayed and no new segment will be added. If the segment is passed, a new segment will be created at the end of the specification.

Return to Edit Spec

Causes the values of the currently active segment to be checked for consistency, as in the Edit Segment Menu. If the checks fail a message will be displayed; the error must be corrected before the new data will be accepted. If the segment is passed, the segment editing function is terminated and control returns to the Edit Spec Menu.

See Fig 3-25. This menu enables the user to set up the input configuration, apply domain offset/scaling and to compensate for non-ideal characteristics of detectors and sensors. Either AC or DC detection can be selected for scalar measurements.

Leads to the Input Config Menu, which is used to set up the input configuration for the measurement.
See page 3-63.

Input Configuration

Leads to the Scale & Offset Menu, which is used to apply an offset and scale factor for translating between internal frequencies and displayed frequencies. An offset can also be applied to the swept power range.
See page 3-64.

Domain Scale & Offset

Leads to the Select Input Menu, which is used to compensate for non-ideal detector characteristics.
See page 3-65.

Detector Correction

Leads to the Sensor Corr Menu, which is used to apply cal factor and linearity correction for the power sensor connected to the D input.
This soft key will only be selectable if Input D is configured for a power sensor.
See page 3-67

Sensor Correction

Leads to the Edit Specs Menu, which is used to modify detector correction specifications or sensor calibration data tables.
See page 3-69.

Det / Sensor Specs

Selects AC detection mode for scalar measurements. With AC detection, the RF output to the DUT is chopped, and the resulting pulsed RF output from the DUT is demodulated and processed in such a way that the effects of zero drift are effectively cancelled. The AC mode therefore gives more accurate results for low signal level swept measurements.

AC Detection

Selects DC detection mode for scalar measurements. In the DC detection mode, an unmodulated RF signal is used and the detector simply converts the incident RF to an equivalent DC output. This mode will have to be used, for example, when measuring amplifiers with automatic gain control which may behave differently in the presence of amplitude modulated signals. Power meter readings will always use the DC detection mode.

DC Detection

The DC detection mode applies instrument-wide.

Return to Measure

Returns control to the Measure Menu.

See Fig 3-25. This menu provides functions for setting up the configuration of the four inputs.

An offset to be applied to a corrected detector or power sensor measurement. The offset is effectively a fixed dB value that is added or subtracted from the reading. They are useful for compensating for attenuators or amplifiers between the DUT and detector/power sensor. Use a positive offset value to compensate for attenuation and a negative offset to compensate for gain.

An 'O' flag will be displayed in the trace information area if an offset is being applied to any of the inputs taking part in the measurement.

Configures all four inputs A, B, C and D to accept scalar detectors.

Configures inputs A, B and C to accept scalar detectors and input D to accept a power meter sensor.

Input A Offset

Rotary Control X Step Keys X Numeric Pad v Terminator Any

Enables the offset for Input A to be changed.

Input B Offset

Rotary Control X Step Keys X Numeric Pad v Terminator Any

Enables the offset for Input B to be changed.

Input C Offset

Rotary Control X Step Keys X Numeric Pad v Terminator Any

Enables the offset for Input C to be changed.

Input D Offset

Rotary Control X Step Keys X Numeric Pad v Terminator Any

Enables the offset for Input D to be changed.

View Current Configuration

Displays a form on the screen (Fig. 3-19) showing the detector or sensor type connected to each input, and whether manual or automatic correction will be applied (see Select Input Menu, page 3-65). Pressing the [Return to Input Config] soft key returns control to the Input Config Menu.

Return to Gen Set-up

Returns control to the Gen Set-up Menu.

Current Input Configuration
Input A : Automatic 6511 Series
Input B : Automatic Autotester Adaptor Cable
Input C : Automatic Voltage Measurement Cable
Input D : Automatic 6910 Series

Fig. 3-19 View Input Configuration Screen

Scale & Offset

See Fig 3-25. This menu enables an offset and scale factor to be entered for translating between displayed frequencies and the frequencies generated by the source at the RF OUTPUT connector. This may be required, for example, if the RF is applied to the DUT via a frequency conversion device. The display can then be set to display the actual frequency applied to the DUT, rather than the source output frequency.

When outputting frequencies to display, printer/plotter or GPIB:
 $f_{displayed} = (f_{source} \times \text{scale factor}) + f_{offset}$

When translating to source frequencies from keyboard or GPIB:
 $f_{source} = \frac{f_{displayed} - f_{offset}}{\text{scale factor}}$

The default values are scale factor = 1, $f_{offset} = 0$.

A power offset can also be applied for translation between the source swept power range and the displayed swept power range, as follows:

When outputting power domain values to display, printer/plotter or GPIB:
 $P_{displayed} = P_{source} + P_{offset}$

When translating to source power from keyboard or GPIB:
 $P_{source} = P_{displayed} - P_{offset}$

The default value is $P_{offset} = 0$ dB.

Frequency Offset

Used to change the frequency offset value for the currently active trace. A form is displayed on the screen showing the current offset. This parameter applies per channel. This soft key will only be selectable if the domain of the currently active channel is the frequency domain.

Rotary Control X Step Keys X Numeric Pad V Terminator 10+

Frequency Scaling

Used to change the frequency scaling factor for the currently active trace. A form is displayed on the screen showing the current scaling factor. This parameter applies per channel. This soft key will only be selectable if the domain of the currently active channel is the frequency domain.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Power
Offset

Used to change the power offset value for the currently active trace. A form is displayed on the screen showing the current offset. This parameter applies per channel. This soft key will only be selectable if the domain of the currently active channel is the power domain.

Rotary Control X Step Keys X Numeric Pad V Terminator 10-

Return to
Gen Set-up

Returns control to the Gen Set-up Menu.

Select Input

See Fig 3-25. Below a certain power level, detectors are assumed to obey a square law response, where the detector output voltage is directly proportional to the input power. Above that level, deviation from the square law results in power readings lower than expected, which are corrected for by using a table of correction specifications. This table, held in non-volatile memory, contains an entry for all the detector types supported by the MTS. A detector type is characterised by a sensitivity factor (in mV/mW) and a power factor.

The instrument permits either manual or automatic selection of a correction specification. For manual selection, the user enters the required specification number. When automatic selection is enabled, the instrument determines the required specification from a self-identification mechanism built into the detector. For detectors without the self-identification facility, automatic selection defaults to the correction table for 6511 detectors, and a warning message is displayed. Correction can be turned off, if required, e.g. when measuring voltage.

The soft keys in this menu are used to select the detector input to which correction is to be applied, and leads to a sub-menu.

Input
A

Leads to the Input A Menu.

Input
B

Leads to the Input B Menu.

Input
C

Leads to the Input C Menu.

Input
D

Leads to the Input D Menu.

Return to
Gen Set-up

Returns control to the Gen Set-up Menu.

MEASURE

General
Set-up

Detector
Correction

Temperature Correction
Return to Select Input

This soft key has a toggle action and is used to enable/disable scalar detector temperature correction. When enabled, temperature correction will apply to detectors for which temperature correction is available (e.g. the 6230 series). This function applies per input. Returns control to the Select Input Menu.

Fig. 3-20 Detector Types Table

Set Detector Type	
1	:6511
2	:6512
3	:6513
4	:6514
5	:6230
6	:6233
7	:6234
8	:Reserved
9	:Reserved
10	:Reserved
11	:Reserved
12	:USER1
13	:USER2
14	:USER3
15	:USER4

00776

Rotary Control X Step Keys X Numeric Pad v Terminator Any

Selects the type of detector that is to be corrected. When this soft key is pressed, a table is displayed listing all the possible detector types and their identity numbers (Fig. 3-20). Four entries in the table are reserved for user-specified values of sensitivity factor and power factor. These values can be set using the Edit Specs Menu (page 3-69). *This soft key is only selectable if manual entry of the detector type has been selected* (*Correction User Set* soft key).

Set Detector Type

Turns off detector correction.

Correction Off

Enables manual entry of the detector type, by using the [*Set Detector Type*] soft key.

Correction User Set

Sets the detector correction mode for the selected input to automatic.

Correction Auto Sense

See Fig 3-25. These four menus are identical, and are used to specify the type of correction and the detector type for the input.

Input A (B, C or D)

General Set-up
Detector Correction
Input A (B, C or D)

MEASURE

Sensor Corr

See Fig. 3-25. Calibration data for all sensors used with the MTS are stored in non-volatile memory. The power sensors have a self-identification mechanism built in to enable the instrument to determine the sensor type. The calibration data comprises a 50 MHz cal factor, a linearity factor and a cal factor table. Each entry in the cal factor table consists of a frequency and a corresponding cal factor, stored in ascending order of frequency.

The cal factor can either be entered manually or derived from a cal factor table. In order that a cal factor can be applied using a cal factor table, it is necessary to know the frequency at which the power measurement is being made. The following options are provided:

- Manual entry of frequency
- Frequency read from the counter
- Frequency defined by the source

If a counter is used to define the frequency, at least one readout must be configured for frequency measurement. A counter reading will be taken and stored once per measurement update. If a reading cannot be obtained for any reason, the most recent counter reading or manually entered frequency will be used.

If the source is used to define the frequency, channel coupling must be on. The frequency used will depend on the source mode. If the source mode is CW or a power sweep, the CW frequency will be used. If the source mode is a swept frequency, the position of the active marker is used to define the frequency.

The frequency as defined above will be used to extract a value of cal factor from the table using linear interpolation. If the frequency lies outside the range for which data is available, the cal factor corresponding to the frequency nearest to the required frequency will be used, and the user will be informed via the display.

The cal factor will be applied as follows:

$$\text{Corrected Power} = \frac{\text{Measured Power} \times 100}{\text{Cal Factor} (\%)}$$

Enables manual entry of the cal factor by using the [Cal Factor & Lin Factor] soft key.

Cal Factor User Set

Enables manual entry of the cal factor frequency by using the [Set Frequency] soft key.

Cal Factor User Freq

Applies a cal factor which corresponds to the frequency measured by the counter. This soft key is only selectable if at least one of the other measurements is a counter measurement.

Cal Factor Counter Freq

Applies a cal factor which corresponds to the frequency of the source.

Cal Factor Source Freq

Return to Sensor Corr

Returns control to the Sensor Corr Menu.

Rotary Control √ Step Keys √ Numeric Pad √ Terminator Any

Set Lin Factor

Used to change the linearity factor for the sensor.

Rotary Control √ Step Keys √ Numeric Pad √ Terminator Any

Set Cal Factor

Used to change the cal factor for the sensor.

Cal & Lin Fact

See Fig. 3-25. This menu enables manual entry of cal factor and linearity factor for a power sensor connected to input D.

General Set-up Sensor Correction Cal Factor & Lin Factor

MEASURE

Return to Gen Set-up

Returns control to the Gen Set-up Menu.

Rotary Control X Step Keys X Numeric Pad √ Terminator Any

Select Cal Fact Table

Used to select the cal factor table that the cal factor for input D will be selected from. A form is displayed listing the available cal factor tables, and the current cal factor table identity number.

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10+

Set Frequency

Used to change the frequency value that is used to obtain the cal factor for input D. This soft key is only selectable if manual entry of the cal factor frequency has been selected by using the [Cal Factor User Freq] soft key.

See below
 [Cal Factor User Set] soft key)
 This soft key is only selectable if manual entry of the cal factor has been selected using the to be specified.
 Leads to the Cal & Lin Fact Menu, which allows cal factor and linearity factor for a sensor

Cal Factor & Lin Factor

Edit Specs
Return to

Leads to a sub-menu and displays a form which enables an identity of up to ten characters to be entered. The method of entry is the same as that described for the Screen Title Menu (page 3-276). Terminates the editing function and writes the new data into the non-volatile memory which holds the correction specification. Control is then returned to the Edit Specs Menu.

Edit
Identity

Selects the active field for numeric entry.
Selects the active field for numeric entry.
Selects the previous user-defined detector.
Selects the next user-defined detector.




Fig. 3-21 User Detector Correction Specification Form

Detector Correction Specifications		
Identity	Sensitivity	Power Factor
USER1	349.1200 mV/mW	800.0m
USER2	393.9600 mV/mW	1.00
USER3	0.00000 V/mW	1.00
USER4	0.00000 V/mW	1.00

CO424

Edit Det Specs

See Fig 3-25. This menu is used to edit the sensitivity and power factor values of the four user-defined detector correction specifications. A form is displayed on the screen showing the sensitivity and power factor values for the detectors. The soft keys enable selection of the value that is to be changed. The new value is entered as follows:

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----



Service	Det / Sensor Specs	Edit Det Corr Spec
General	Det / Sensor Specs	Edit Det Corr Spec

Return to
Gen Set-up

Returns control to the Gen Set-up Menu.

Edit Sensor
Cal Data

Leads the Edit Spec Menu, which is used for editing the calibration data for the current sensor.

Edit Det
Corr Spec

Leads to the Edit Det Specs Menu, which enables editing of correction data for the user-defined detectors.

Edit Specs

See Fig 3-25. This menu is used to edit the sensitivity and power factor values of the four user-defined detector correction specifications, and to edit the power sensor calibration data tables.



General	Det / Sensor Specs
---------	--------------------

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Linearity Factor

Used to change the linearity factor for the sensor.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

50 MHz Cal Factor

Used to change the 50 MHz cal factor for the sensor.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Set Table Identity

Enables the entry of a text string as the identity of the table. The method of entry is the same as that described for the Screen Title Menu (page 3-276).

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Select Table

Used to select a new cal factor table that the cal factor for input D will be selected from. A form is displayed listing the sensor identities. If the current table has changed since it was last saved, the user will be given the opportunity to save it before the new table is presented.

Fig. 3-22 Sensor Cal Data Table

Power Sensor Cal Data 1	
Table Identity : 6910 Serial No. 138	
50 MHz Cal Factor : 100.00% Linearity Factor : 9.50	
Cal Factor	Frequency
99.04%	10.00000 MHz
100.00%	30.00000 MHz
100.00%	50.00000 MHz
99.37%	100.00000 MHz
100.00%	300.00000 MHz
99.99%	500.00000 MHz
99.63%	1.00000 GHz
98.48%	2.00000 GHz
98.04%	3.00000 GHz
97.68%	4.00000 GHz
96.83%	5.00000 GHz

C0425

See the Sensor Correction Menu description (page 3-67) for an explanation of how the calibration data is used for power sensor correction.

This menu and the associated sub-menus are used to edit the power sensor calibration data tables. A form is displayed on the screen (Fig. 3-22) showing the calibration data table contents for the current sensor.

Edit Spec

Service Det / Sensor Edit Sensor Cal Data Specs

General Set-up Det / Sensor Edit Sensor Cal Data Specs

UTILITY

OR

MEASURE

Leads to the Edit Table Menu, which provides facilities for editing the frequency and cal factor values in the table of entries.
See below:

Causes the current cal data table to be saved in non-volatile memory.

Initially checks whether the current cal data table has changed since it was last saved. If it has, a prompt will be displayed asking if the table is to be saved. The editing function will then be terminated and control returned to the Edit Specs Menu.

Edit Table

Save Table

Return to Edit Specs



General	Det / Sensor	Edit Sensor	Cal Data	Edit Table
Set-up	Specs	Edit Sensor	Cal Data	Edit Table
Service	Det / Sensor	Edit Sensor	Cal Data	Edit Table
	Specs			

Edit Table

See Fig. 3-26. This menu provides facilities for editing entries in the cal data table, and adding or deleting entries.

Edit Entry

Leads to the Edit Entry Menu.

Add Entry

Leads to the Add Entry Menu.

Delete Entry

Deletes the active entry from the specification after prompting for confirmations. The entries below the active one will be moved upwards and renumbered.

↓

Makes the previous entry in the table the active entry.

↑

Makes the next entry in the table the active entry.

Page Up

The previous page of entries in the table will be displayed.

Page Down

The next page of entries in the table will be displayed.

Return to Edit Spec

Returns control to the Edit Spec Menu.

Return to Edit Table

Returns the user to the Edit Table Menu.

Page Down

The next page of entries in the table will be displayed.

Page Up

The previous page of entries in the table will be displayed.

↑

Makes the next entry in the table the active entry.

↓

Makes the previous entry in the table the active entry.

Note that this menu only allows cal factor values to be edited. If a frequency is to be changed, the [Add Entry] soft key of the Edit Table Menu must be used to add a new entry with the required frequency, and the [Delete Entry] soft key used to remove the unwanted entry.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator Any

Edit Entry

See Fig. 3-26. This menu allows an entry in the cal data table to be edited. The new cal factor is changed as follows:

Service	Det / Sensor	Edit Sensor	Cal Data	Edit	Table	Edit	Entry
General	Det / Sensor	Edit Sensor	Cal Data	Edit	Table	Edit	Entry
Set-up	Specs						

UTILITY

MEASURE

Add Entry
Return to Edit Table

⇒ Selects the active field for numeric entry.
⇐ Selects the active field for numeric entry.
Inserts the entry into the appropriate place in the table (an existing entry that has the same frequency will be overwritten). The fields will then be set to their default values.
Terminates the add entry function and returns the user to the Edit Table Menu, after performing a check as above.

Rotary Control X Step Keys X Numeric Pad v Terminator 10+

Add Entry See Fig. 3-26. Enables a new entry to be added to the cal factor table. Initially, the frequency and cal factor fields contain the default values of 50 MHz and 100% respectively. Entry of cal factor values is the same as for the Edit Entry screen. Frequency values are entered as follows:

General Set-up	Det / Sensor Specs	Edit Sensor Cal Data	Edit Table	Add Entry
Service	Det / Sensor Specs	Edit Sensor Cal Data	Edit Table	Add Entry

MEASURE
OR
UTILITY

Fig. 3-23 SOURCE Menus - Scalar and Readout Channels (Sheet 1)

Fig. 3-24 MEASURE Menu - Scalar Channel (Sheet 2)

Input
Ratio


MEASURE

Fig. 3-25 MEASURE Menu - Scalar Channel (Sheet 3)


General
Set-up

MEASURE

Fig. 3-26 MEASURE Menu - Scalar Channel (Sheet 4)

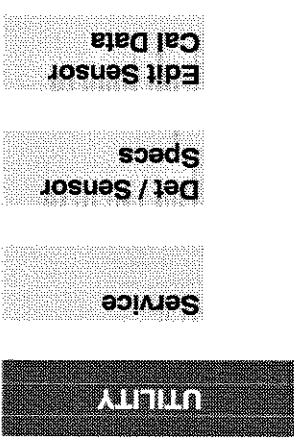

or

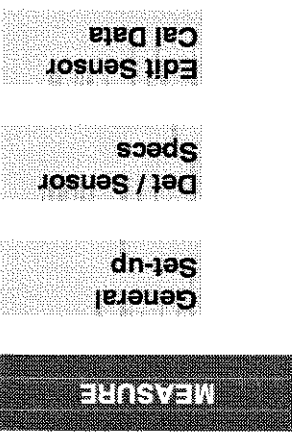

[CAL] KEY

The [CAL] key provides access to the calibration menu (Fig. 3-27). Calibration is used prior to a measurement in order to remove system errors that cause uncertainty in measuring a device under test.

Frequency variations in the components that comprise the measurement system (connectors, adapters, cables etc.) can be taken into account when making a component measurement. The MTS analyzes and stores the variations and automatically removes them from the measurement. This is known as path calibration since it calibrates out the frequency variations in each measurement path.

One of four stored path calibrations can be applied to the current measurement, which have previously been set up using the appropriate soft keys. The current measurement data is ratioed with the path calibration data before being formatted and displayed. The trace information area of the display indicates if path calibration is being applied to a trace, and the identity of the path calibration store. By default, each path calibration store is associated with a particular trace. However, it is possible for a trace to use one of the other path calibration stores, so that a single path cal can be shared by more than one trace.

If the calibration becomes invalid (e.g. due to subsequent changes in the source set-up) a warning message will be displayed and a "?" is displayed after the calibration identity.

Path calibration facilities are not available when making frequency measurements under swept conditions.

Power sensor calibration utilizes the 50 MHz, 1 mW power reference output available from the front panel. A sensor is calibrated by connecting it to the power reference output (via a 30 dB attenuator for 6920 series sensors) and pressing the [Sensor Cal] soft key. The system measures the difference between the sensor and reference outputs and uses this to correct subsequent measurements. The power reference will be switched on and off automatically as required by the calibration process.

Cal
See Fig. 3-27. This menu provides facilities for calibrating the measurement system for a scalar channel, and applying any of four stored path calibrations to a measurement. It also provides access to menus for detector/sensor zeroing and sensor calibration.

Through Path Cal
Leads to the Through PC Menu, which is used to carry out a through path calibration on the currently active scalar channel.
See page 3-85.

Short / Open Path Cal
Leads to the Short/Open PC Menu, which is used to carry out a short/open path calibration on the currently active scalar channel.
See page 3-86.

Short Path Cal
Leads to the Short PC Menu, which is used to carry out a path calibration on the currently active scalar channel by using a short circuit termination.
See page 3-86.

Apply Path Cal 1-4
Enables one of four path calibrations to be used in the measurement by entering the required identity number. The relevant trace information area will indicate if path calibration is being applied to a trace, and also the path cal store that is being used (see page 3-16).

Rotary Control X Step Keys X Numeric Pad V Terminator None

Turns off path calibration if it is not required.

Path Cal Off

Leads to the Det/Sen Zero Menu, which is used for zeroing detectors/sensors.
See page 3-87.

Det / Sensor Zero

Leads to the Sensor Cal Menu, which is used to zero the power sensor and to calibrate it against the reference.
This soft key will only be selectable if Input D is configured for a power sensor.
See page 3-88.

Sensor Cal

Toggles the power reference output on and off. The reference can be used, for example, to verify that the power sensor is functioning correctly. The Power Reference On indicator (PWRREF) will be present in the General Information Area at the top of the screen if a power reference signal is being output.

Power Ref

Through PC

See Fig. 3-27. This menu is used to carry out a through path calibration on the currently active scalar channel. It compensates for residual levelling errors in the source and frequency variations in the components that form the measuring system.

The user is prompted to make the through connection. The [Select Path Cal Store] soft key is used to specify the path calibration store that is to be used for storing the calibration data. The [Continue] soft key starts the calibration process. The user is informed when calibration data has been acquired and path calibration has been applied. The function then terminates and the user is returned to the initial Cal Menu.

Starts the calibration process.

Continue

Used to specify the path calibration store that is to be used for storing the calibration data by entering a number in the range 1 to 4.

Select Path Cal Store

Rotary Control X Step Keys X Numeric Pad v Terminator Any

Terminates the calibration process. The current path cal store will not be affected.

Abort Calibration



CAL

Short / Open Path Cal

Short/Open PC

See Fig. 3-27. This menu is used to carry out a short/open path calibration on the currently active scalar channel. It calibrates the system against a known reference when measuring return loss. Open circuit and short circuit terminations are chosen as both of these devices theoretically reflect 100% of the power incident upon them and therefore have a return loss of 0 dB. If only an open or short circuit is used for calibration, however, there is an uncertainty added to the measurements due to test port impedance mismatch. This uncertainty is minimized by calibrating the system against both open and short circuits and calculating the average path cal.

The user is prompted to connect the short. The [Select Path Cal Store] soft key is used to specify the path calibration store that is to be used for storing the calibration data. The [Continue] soft key starts the calibration process. When the short calibration data has been acquired, the user is prompted to connect the open termination and press [Continue] when ready. The user is informed when the open calibration data has been acquired and path calibration has been applied. The calibration data is stored in the specified path cal store. The function then terminates and the user is returned to the initial Cal Menu.

Continue

Starts the calibration process.

Select Path Cal Store

Used to specify the path calibration store that is to be used for storing the calibration data by entering a number in the range 1 to 4.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Abort Calibration

Used to terminate the calibration process at any time. The current path cal store will not be affected.

CAL

Short Path Cal

Short PC

See Fig. 3-27. This menu functions in a similar way to the Short/Open PC Menu, except that a path cal is performed using only a short circuit termination. This method would be used, for example, in waveguide measurements, since a practical open circuit is not achievable for waveguide systems.

Continue

Starts the calibration process.

Select Path Cal Store

Used to specify the path calibration store that is to be used for storing the calibration data by entering a number in the range 1 to 4.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Abort Calibration

Used to terminate the calibration process at any time. The current path cal store will not be affected.

Det/Sen Zero

This menu enables detector zeroing to be performed for all scalar detectors connected to the instrument. Zeroing is used to remove the effects of zero drift from the measurement. It is especially important for low level measurements (<-40 dBm). At very low levels (<-60 dBm), zeroing should be done every few minutes, but preferably using the autozeroing facility. The menu also enables power sensor zeroing to be performed.

Det / Sensor Zero

CAL

Detector Autozeroing

Toggles the autozeroing facility on or off. When enabled, the detectors will be zeroed automatically once every measurement update. The MTS momentarily turns off the RF in order to do this. The setting of this parameter applies instrument-wide. The AZ indicator is displayed in the General Information Area when autozeroing is on.

The autozero facility only operates if a manual zero has previously been performed (see [Zero Detectors]).

Zero Detectors

Initiates zeroing of the detectors. A zero will be performed on all inputs, including any that do not have a detector connected. If a detector is then connected to one of these previously unused inputs, the zero is no longer valid and misleading results could occur. It is therefore necessary to perform a detector zero each time a detector is connected to an input.

The source power will be automatically turned off during a detector zero. If a source other than the MTS is providing the RF signal, it must be turned off before performing a zero.

Zero Sensor D

Initiates zeroing of a power sensor connected to input D. The zero facility must only be used with no incident RF at the sensor. A horizontal bar indicator shows the percentage of the zeroing operation that has been completed.

This function is only selectable if input D has been configured to accept a power sensor.

Returns control to the Cal Menu.

Return to Cal

Abort Calibration

Terminates the calibration process.

Rotary Control Step Keys Numeric Pad Terminator Any

Set Lin Factor

Used to change the linearity factor for the sensor.
This soft key is only selectable if manual entry of the cal factor has been selected ([MEASURE][General Set-up][Sensor Correction][Cal Factor User Set]).

Rotary Control Step Keys Numeric Pad Terminator Any

Set Cal Factor

Used to change the cal factor for the sensor.
This soft key is only selectable if manual entry of the cal factor has been selected ([MEASURE][General Set-up][Sensor Correction][Cal Factor User Set]).

Rotary Control Step Keys Numeric Pad Terminator Any

Select Table

Used to select the cal factor table appropriate to the power sensor being used, by entering the cal factor table identity number.
This soft key is unselectable if manual entry of the cal factor has been selected (see Sensor Correction Menu - [MEASURE][General Set-up][Sensor Correction]).

Continue

Starts sensor calibration.

If an external power reference is used to calibrate the sensor, ensure that no power is present during the zeroing phase. When zeroing has completed, the MTS allows a period of 5s for the user to turn on the power reference for the calibration phase.

Note...

This menu is used to zero the power sensor and to calibrate it against the reference. The user is prompted to connect the power sensor to the reference output and press the [Continue] soft key when ready. The MTS turns off the power reference and a horizontal bar is displayed informing the user of the progress of the zeroing, as a percentage of the time to completion. The power reference is then turned on and the MTS performs sensor calibrations; a similar percentage indicator is displayed. When calibration has been completed the function terminates and the user is returned to the initial Cal menu.

Sensor Cal

UTILITY	Service	Instrument Calibrations	Source Power Cal	Narrowband Power Cal	Sensor Cal
OR					
UTILITY	Service	Instrument Calibrations	Source Power Cal	Broadband Power Cal	Sensor Cal
OR					
CAL	Sensor Cal				

Fig. 3-27 CAL Menu - Scalar Channel

[FORMAT] KEY

The [FORMAT] key enables the active measurement in the active channel to be displayed in the required format; i.e. the units in which the response (vertical axis) is scaled. The options available depend upon the input configuration.

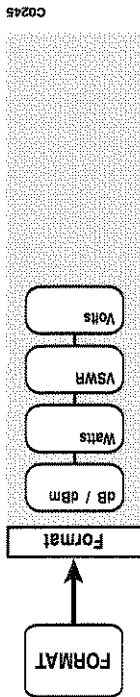


Fig. 3-28 **FORMAT** Menu - Scalar Channel

FORMAT

Format

The soft keys in this menu enable the following display formats to be selected:

Linear: Watts, VSWR, Volts

Log: dB/dBm

The display format can be set up independently for each trace of the active channel. The formats permitted depends upon the measurement

dB / dbm

Selects dB/dBm format. The instrument will automatically select dB or dBm depending on whether the measurement is a ratio of inputs (i.e. relative power measurement) or a single input (i.e. absolute power measurement). The dB format is also selected if path calibration is applied or if the measurement is made relative to a memory.

This soft key will only be selectable for absolute or relative power measurements.

Watts

Selects Watts format.

This soft key will only be selectable for absolute power measurements.

Volts

Selects Volts format. The instrument displays the DC voltage output from the detector (or voltage adaptor cable).
This soft key will only be selectable for single input power measurements.

VSWR

Selects VSWR format.
This soft key will only be selectable for relative power measurements (i.e. a ratio).

[SCALING] KEY

The [SCALING] key provides a menu which enables the user to adjust the positioning and scaling of the currently active trace in the currently active channel, or to allow the instrument to set the scaling automatically.



Fig. 3-29 SCALING Menu - Scalar Channel

Scaling

This menu enables the user to set the reference level and scaling for a trace. The reference position is the position on the vertical axis that remains fixed during scaling. This is indicated on the screen by the Reference Position Indicator (see the 'Display' Section). The reference level is the value corresponding to the position of the Reference Position Indicator on the vertical scale, and is displayed in the relevant trace information area.

The default values for reference level and scaling factor for each type of format are listed below. Except for the VSWR format the default reference position in each case is the top graticule line.

Format	Reference Level	Scale Factor
dB and dbm	+20.0	10.0 dB(m)/div
VSWR*	1	0.1 /div
mW	100	10.0 mW/div
Volts	1	0.1 V/div
Linear Frequency	20.0 GHz	2.0 GHz/div

*Reference position is the bottom graticule line.

The parameters in this menu apply per trace.

Allows the instrument to determine optimum values of scale and reference level. The value chosen for the scale factor will be selected from a 1,2,5 sequence. The value chosen for the reference level will be a multiple of the scaling factor. The reference position will remain unchanged.

Autoscale

Set Scale

Used to set the scale factor for a trace.

Rotary Control Step Keys Numeric Pad Terminator Any

VSWR, mV and Volts Formats

Rotary Control Step Keys Numeric Pad Terminator 10-

Linear Frequency Format

Rotary Control Step Keys Numeric Pad Terminator 10+

Set Ref Level

Used to set the reference level for a trace.

Numeric entry as above.

The reference level can also be set to the response measured at the active marker position, by pressing this soft key followed by the [$\times 1$] key on the numeric keypad.

Set Ref Position

Used to set the reference position for a trace. The reference position may be placed on any of the 11 horizontal lines on the graticule.

Rotary Control Step Keys Numeric Pad Terminator X

Continuous Autoscale

Toggles continuous autoscale on or off, in which autoscaling will be performed automatically once per measurement update.

[MARKERS] KEY

The MTS can display up to eight markers per trace, with each marker identified by a number. Any one of these can be designated the active marker, indicated by a box around the number to distinguish it from the normal markers. The active marker can be moved along the x-axis using the step keys, rotary control or by keyboard entry. The step keys and keyboard entry are only available through the Position Active Mkr and Position Delta Mkr functions of the Markers Menu. The rotary control can be used to move the active marker at any time whilst it is displayed, provided that no other from of numeric entry is active. The domain value (x-axis position) of the active marker is displayed below the graticule, and the measured response at this position is displayed in the relevant trace information area.

The delta marker mode provides an additional marker, designated the delta marker, and is represented by Δ on the display. In this mode, the domain value of the active marker is relative to the delta marker position. The measured response is relative to the response at the delta marker position, i.e.

$$\text{Domain value} = \text{Active Marker position} - \text{Delta Marker position}$$
$$\text{Response} = \text{Active Marker response} - \text{Delta Marker response}$$

The marker menus are shown in Fig. 3-31.

A tracking facility is available for the max/min, peak-to-peak and bandwidth functions. This enables the function to be automatically applied at each measurement update (i.e. at the end of each sweep).

This menu provides soft keys for setting up markers and using them to perform various types of measurement.

Active Mkr

Toggles the active marker on or off. Turning off the active marker also turns off the delta marker. Once the active marker is turned on it can be positioned anywhere along the graphic using the rotary control. To set the active marker to a specific domain value using the numeric keypad the [Position Active Mkr] soft key must be selected.

Place Mkr at Active

Used to place a marker at the active marker position by entering the required marker number.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	None
----------------	---	-----------	---	-------------	---	------------	------

This soft key will only be selectable if the active marker is turned on.

Position Active Mkr

Used to change the domain value (x-axis position) of the active marker, by entering the new value as follows:

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

Frequency

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

Power

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10-
----------------	---	-----------	---	-------------	---	------------	-----

Voltage, Current

This soft key will only be selectable if the active marker is turned on.

Delta Mkr

Toggles the delta marker on or off. Turning on the delta marker also turns on the active marker.

Position Delta Mkr

Used to change the position of the delta marker, using the same method as for the active marker.
This soft key will only be selectable if the delta marker is turned on.

All Mkrs Off

Turns off all the markers for the currently active trace.

Mkr Functions

Leads to the Mkr Funcs Menu, which enables various measurement functions to be carried out by means of the active marker and delta marker.
See page 3-97.

Set Up Mkrs

Leads to the Set Up Mkrs Menu, which allows the user to activate and position selected markers.
See page 3-103

Markers

This menu leads to sub-menu for locating the maximum and minimum points on a trace, measuring the peak to peak ripple, searching for a specified response value and performing bandwidth measurements, and measuring the slope of a trace.

Mkr Funcs

Marker to Max Min

Leads to the Max Min Menu.
See page 3-98.

dB/Octave dB/Decade

Leads to the dB/O dB/D Menu.
This soft key is only selectable if the domain is frequency, start frequency is < stop frequency, and format is dB/dBm.
See page 3-98.

Peak to Peak

Leads to the Peak to Peak Menu, which enables measurement of peak to peak ripple.
This soft key is only selectable if the format is dB/dBm.
See page 3-99.

Search

Leads to the Search Menu, which is used to locate a response value on the trace.
See page 3-100.

Bandwidth

Leads to the Bandwidth Menu, which is used for bandwidth measurements.
This soft key is only selectable if format is dB/dBm, and the sweep type is frequency.
See page 3-101.

Find Next Peak

Unselectable.

Return to Markers

Returns control to the Markers Menu.

MARKERS

dB/O dB/D

This menu enables the marker response to be set up to display the slope of the trace at the active marker position. This function applies per measurement.

dB/Octave

Enables the marker response to be displayed as dB per octave.

dB/Decade

Enables the marker response to be displayed as dB per decade.

Off

Restores normal marker response display.

Return to Mkr Funcs

Returns control to the Mkr Funcs Menu.

Mkr Functions
dB / Octave
dB / Decade

Return to Markers

Returns control to the Mkr Funcs Menu.

Tracking Off

Disables tracking.

Tracking Minimum

Applies tracking to the minimum function.

Tracking Maximum

Applies tracking to the maximum function.

Active Mkr to Minimum

Moves the active marker to the maximum point on the displayed trace.

Active Mkr to Maximum

Moves the active marker to the maximum point on the displayed trace.

When the tracking facility is turned on, the selected function as applied automatically at the end of each sweep, thus continually updating the maximum or minimum function.

This menu is used to locate the maximum and minimum points on a trace.

MARKERS

Mkr Functions
Marker to Max Min

Peak to Peak

This menu enables measurement of the peak to peak ripple of a displayed trace. The system performs this function by enabling the delta mode and positioning the active marker and delta marker at the trace maximum and minimum respectively. A limit check can be performed on the peak to peak measurement by comparing it with a user-defined limit value.

When the tracking facility is turned on, the peak to peak function is applied automatically at the end of each sweep, thus continually updating the peak-to-peak measurement.

Initiates the peak to peak measurement and displays the result in a form overlaying the graphic. If limit checking is enabled, a pass/fail indication is also displayed in this form. The form is removed if there is any change in the trace or markers, or if the [ENTRY OFF] key is pressed.

Used to set the limit value that the peak to peak measurement is to be checked against. A value in the range 0 to +99.99 dB can be entered.

Rotary Control Step Keys Numeric Pad Terminator Any

Toggles limit checking on or off.

Toggles the tracking function on and off.

Returns control to the Mkr Funcs Menu.

- Find PK - PK
- Set PK - PK Limit Value
- PK - PK Limit Checking
- Tracking
- Return to Mkr Funcs

MARKERS

Mkr Functions

Search

Search

This menu is used for locating a response value on the trace that has previously been specified by the user. The search facility can also be used in delta marker mode.

Search Left

Causes the system to search left from the current active marker position in order to find the response value specified with the [Set Search Value] soft key. The active marker will be placed at this position. If two adjacent measurement points encompass the search value, the active marker will be placed at the measurement point which is nearer to the search value. If the search value cannot be found, a message will be displayed indicating this, and the active marker will not be moved.

Search Right

As above, but the search direction is right.

Set Search Value

Sets the value that will be searched for.

dB/Bm formats

Rotary Control Step Keys Numeric Pad Terminator Any

VSWR, mV and Volts formats

Rotary Control Step Keys Numeric Pad Terminator 10-

Linear Frequency format

Rotary Control Step Keys Numeric Pad Terminator 10+

Return to Mkr Funcs

Returns control to the Mkr Funcs Menu.

Bandwidth

This menu enables the bandwidth to be determined corresponding to N dB points, where N can be a positive or negative value entered by the user.

If the search value is a negative dB value, pressing this soft key initiates both a right and left search simultaneously starting from the maximum point on the trace. If the search value is a positive dB value the searches are performed similarly, but starting from the minimum point on the trace. It is also possible to measure the bandwidth by starting the search from the active marker position.

If the bandwidth function is successful, marker number 7 will be placed at the lower frequency N dB point, and marker number 8 will be placed at the upper frequency N dB point. Fig. 3-30 shows the displayed results of a bandwidth measurement on a band-pass filter.

If the tracking facility is turned on, the bandwidth function is applied automatically at the end of each sweep, thus continually updating the bandwidth measurement.

Bandwidth Search

Initiates the bandwidth search and displays the result in a form overlaying the graticule. The form is removed if there is any change in the measurement or markers, or if the [ENTRY OFF] key is pressed.

Set n dB Value

Used to set the dB value for the bandwidth search.

Rotary Control Step Keys Numeric Pad Terminator Any

Display CF/AF

When this function is enabled, the ratio of centre frequency to bandwidth is displayed together with the bandwidth search result. This function applies instrument-wide.

Search from Max Min

When this function is enabled, the bandwidth is measured by starting the search from a maximum or minimum point on the trace, depending on whether the search value is a negative or positive dB value.

Search from Active Mkr

When this function is enabled, bandwidth is measured by starting the search from the active marker position.


Tracking

Toggles the tracking function on and off.

Return to Mkr Funcs

Returns control to the Mkr Funcs Menu.

Fig. 3-30 Bandwidth Measurement of a Band-pass Filter

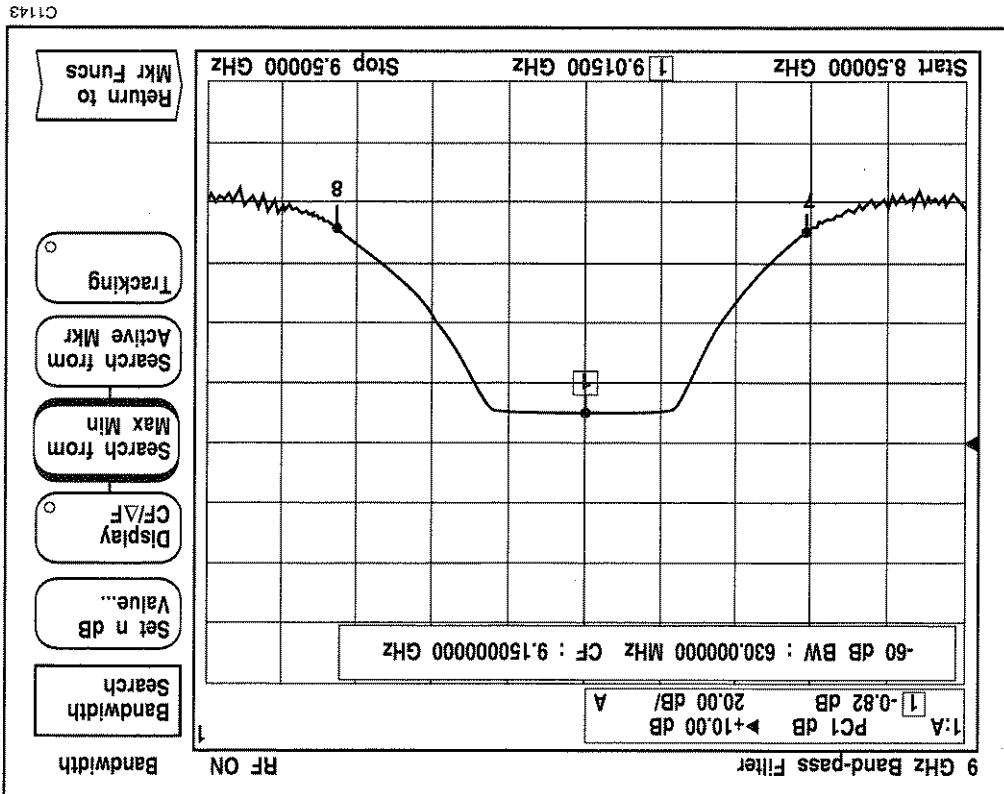

C1143

Set Up Mkrs

This menu enables selected markers to be turned on or off and positioned on the display, and allows one of the markers to be selected as the active marker. For frequency sweep measurements, the menu provides two alternative display resolutions for marker positions. A soft key is also provided to turn marker coupling between channels on or off.

Assign Active Mkr 1-8

Used to select the marker which will act as the active marker.

Rotary Control X Step Keys X Numeric Pad v Terminator None

Mkr 1-8 On

Turns a selected marker on by entering the required marker number.

Rotary Control X Step Keys X Numeric Pad v Terminator None

Mkr 1-8 Off

Turns a selected marker off by entering the required marker number.

Rotary Control X Step Keys X Numeric Pad v Terminator None

Position Mkr 1-8

Used to change the domain value (x-axis position) of a specified marker. A form is displayed on the screen containing numeric entry fields for the marker number and the marker position. The required marker is first selected, then its position is changed.

Marker Number

Rotary Control X Step Keys X Numeric Pad v Terminator None

Marker Position (Frequency Domain)

Rotary Control v Step Keys v Numeric Pad v Terminator Any

Marker Position (Power Domain)

Rotary Control v Step Keys v Numeric Pad v Terminator Any

Marker Position (Voltage or Current Domain)

Rotary Control v Step Keys v Numeric Pad v Terminator 10-

This soft key will only be selectable if at least one of the markers is turned on.

Sets the displayed resolution for marker frequency information to six digits. This soft key is only selectable when the domain is frequency.

6 Digits Resolution

Sets the displayed resolution for marker frequency information to 1 Hz. This soft key is only selectable when the domain is frequency.

1 Hz Resolution

Toggles marker coupling between channels on or off. When marker coupling is enabled, the positions (i.e. domain or x-axis values) of all markers on all traces will track the positions of the markers on the active trace of the active channel. When marker coupling is disabled, markers may be positioned independently on each channel. The default setting for marker coupling is on. Marker coupling can only be disabled when channel coupling is switched off (Channel Mode Menu).

Mkr Coupling

Return to Markers

Returns control to the Markers Menu.

Fig. 3-31 MARKERS Menu - Scalar Channel



FUNCTION GROUP KEYS - READOUT CHANNEL

[SOURCE] KEY

The menus accessed by the [SOURCE] key are the same as for a scalar channel.

[MEASURE] KEY

The [MEASURE] key provides access to the series of menus illustrated in Figs. 3-32 to 3-35, which are used to define and set up the readout measurement and apply various functions to aid examination of the results. The current values or states for the major measurement functions are displayed in specific locations on the screen (see 'Display' earlier in this chapter).

Measure See Fig. 3-32 This menu provides access to sub-menus for setting up the readout measurement and analyzing the results.

Power Meter When this soft key is pressed, the quantity that will be measured and displayed is the power level detected by a power sensor connected to Input D.

Counter When this soft key is pressed, the quantity that will be measured and displayed is the frequency of the signal present at the COUNTER input.

dB Rel This soft key is labelled [dB Rel] if the active measurement is a power meter reading, or [Frequency Rel] if it is a counter reading. When this soft key is pressed, the dB Rel Menu or Freq Rel Menu is presented which enables a measurement to be made relative to a value held in a relative measurement store.
Rel See page 3-109.

Averaging Leads to the Averaging Menu, which enables averaging to be applied to power measurements.
See page 3-110.

Restart Restarts the averaging process. See also the Averaging Menu (Page 3-110).

Reset Peak Indicator Causes the peaking indicator to be reset such that the current power measurement will give half full scale reading.
This soft key is unselectable if the currently active readout is a frequency measurement or a difference measurement.

Measurement Functions Leads to the Meas Funcs Menu, which enables the basic measurement configuration to be set up.
See page 3-112.

General Set-up Leads to the Gen Set-up Menu, which enables the user to set up the input configuration and to compensate for detector/sensor characteristics.
See page 3-116.

dB Rel See Fig. 3-32. Enables a power measurement to be made relative to a value held in a relative measurement store (analogous to trace memory for swept measurements). This function applies per readout.

Store Measurement Causes the current readout measurement to be stored in the relative measurement store (this store is separate from the one used for relative frequency measurements). It will also turn on the relative measurement mode if it is off.

Relative Meas Toggles the relative measurement mode on or off, without affecting the contents of the relative measurement store. The relative measurement mode is indicated by an "R" flag above the displayed readout value, and is also indicated on hard copy output.

Return to Measure Returns control to the Measure menu.

Freq Rel

See Fig. 3-32. Enables a frequency measurement to be made relative to a value held in a relative measurement store. This function applies per readout.

Store Measurement Causes the current readout measurement to be stored in the appropriate relative measurement store (this store is separate from the one used for relative power measurements). It will also turn on the relative measurement mode if it is off.

Relative Meas Toggles the relative measurement mode on or off, without affecting the contents of the relative measurement store. The relative measurement mode is indicated by an "R" flag above the displayed readout value, and is also indicated on hard copy output.

Return to Measure Returns control to the Measure menu.

MEASURE

Frequency Rel

MEASURE

dB Rel

Averaging

See Fig. 3-32. Averaging is used to reduce the effects of noise on a power meter reading. The minimum amount of averaging should be selected to reduce noise to an acceptable level, in order to maintain a sufficiently fast response time.

Each new measurement is averaged into the previous average value until the measurement count is equal to the user-entered average number, for a fully averaged reading. This condition is indicated by the 'A' flag in the relevant readout information area. The flag is in lower case until this condition is reached. It is absent if the averaging function is turned off.

Note...

The averaging process can be re-started by using the [Resist Averaging] soft key in the MEASURE MENU.

Input A

Leads to the Input A Menu, which enables averaging to be applied to input A.

Input B

Leads to the Input B Menu, which enables averaging to be applied to input B.

Input C

Leads to the Input C Menu, which enables averaging to be applied to input C.

Input D

Leads to the Input D Menu, which enables averaging to be applied to input D.

Return to Measure

Returns control to the Measure Menu.

See Fig. 3-32. These menus are identical, and are used to apply averaging to the input, and to select the resolution to which the power meter reading is displayed.

The time taken for averaging to complete depends upon the resolution to which the readout is displayed. A choice of display resolutions is available, which provide a trade-off between resolution and averaging time (lower resolution gives faster averaging).

Sets the averaging mode to automatic, in which the average number will be chosen automatically from a range of values depending on the power range being measured and the power sensor type. Averaging will restart automatically when the input power has deviated from the current average value by a certain amount. When automatic averaging is enabled, the MTS will, by default, display the highest resolution possible (0.001 dB).

Automatic Averaging

Selects 0.01 dB resolution for the readout.

0.01 dB Resolution

Selects 0.1 dB resolution for the readout.

0.1 dB Resolution

Selects 1 dB resolution for the readout.

1 dB Resolution

Allows the user to enter the average number from the keyboard, using the [Set Average Number] soft key.

User Set Averaging

Turns averaging off for the selected input.

Averaging Off

Enables selection of the average number to be used in the averaging function, by entering values in the range 1 to 1000. This soft key will only be selectable if User Set Averaging has been selected.

Set Average Number

Rotary Control Step Keys Numeric Pad Terminator Any

Return to Averaging

Returns control to the Averaging Menu.

See Fig. 3-33. This menu is used to specify whether the system is to measure the absolute power level of a single input, the ratio of two input power levels or the difference between two input power levels.

Meas Funcs

Single Input
A, B, C or D

Leads to the Single Input Menu.
See page 3-113.

Input
Ratio

Leads to the Input Ratio Menu.
See page 3-113.

Input
Difference

Leads to the Input Diff Menu.
See page 3-114.

Duty Cycle
Correction

Leads to the Duty Cycle Menu, which enables duty cycle correction to be applied to power measurements when measuring the peak power of a pulsed signal.
This soft key will only be selectable for power meter readings.
See page 3-114.

Limit
Checking

Leads to the Lim Checking Menu, which enables measurements to be compared with user-defined maximum and minimum limits.
See page 3-115.

Max Min
Hold

Leads to the Max Min Hold Menu, which finds the maximum and minimum power or frequency readings over a period of time.
See page 3-115.

Counter
Resolution

Pressing this soft key leads to a sub-menu which is used to select the resolution to which the counter readout is displayed. The resolution can be set between 1 Hz and 100 MHz (in decades). The default setting is 100 KHz.

Return to
Measure

Returns control to the Measure Menu.

Return to Meas Funcs

- A / Selects input A as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (B, C or D).
- B / Selects input B as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, C or D).
- C / Selects input C as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, B or D).
- D / Selects input D as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, B or C).

Returns control to the Meas Funcs Menu.

Input Ratio

See Fig. 3-33. Enables the ratio of the power levels at two of the inputs to be measured by selecting the appropriate soft keys. The power ratio can be displayed in dB or as a percentage, as selected from the Format Menu

MEASURE

Measurement Functions

Input Ratio

Return to Meas Funcs

- A Selects input A for power measurement.
- B Selects input B for power measurement.
- C Selects input C for power measurement.
- D Selects input D for power measurement.

Returns control to the Meas Funcs Menu.

Single Input

See Fig. 3-33. Enables the power level at a selected input to be measured by pressing the appropriate soft key. The power level can be displayed in dBm or Watts, as selected from the Format Menu ([FORMAT] key).

MEASURE

Measurement Functions

Single Input A, B, C or D

Return to Meas Funcs

Returns control to the Meas Funcs Menu.

Rotary Control Step Keys Numeric Pad Terminator Any

Set Duty Cycle Value

Used to set the duty cycle correction value for the currently active power meter measurement.

Duty Cycle

Toggles duty cycle correction on or off for the currently active power meter measurement.

If duty cycle correction is enabled, the current duty cycle value will be displayed.

$$\text{Peak Power} = \text{Average Power} \times 100 / \text{Duty Cycle}$$

See Fig. 3-33. The power meter measures the average power of a signal. To measure the peak power of a pulsed signal, correction must be applied to compensate for the duty cycle of the waveform. The MTS calculates the peak power using:

Duty Cycle

MEASURE

Measurement Functions
Duty Cycle Correction

Return to Meas Funcs

Returns control to the Meas Funcs Menu.

- A - Selects input A as the minuend of the differential measurement. Selecting the minuend leads to a sub-menu where the subtrahend is chosen (B, C or D).
- B - Selects input B as the minuend of the differential measurement. Selecting the minuend leads to a sub-menu where the subtrahend is chosen (A, C or D).
- C - Selects input C as the minuend of the differential measurement. Selecting the minuend leads to a sub-menu where the subtrahend is chosen (A, B or D).
- D - Selects input D as the minuend of the differential measurement. Selecting the minuend leads to a sub-menu where the subtrahend is chosen (A, B or C).

See Fig. 3-34. Enables the difference between the power levels at two of the inputs to be measured by selecting the appropriate soft keys. The power difference can be displayed in Watts only.

Input Diff

MEASURE

Measurement Functions
Input Difference

Return to Meas Funcs

Clear

Hold

Causes both the min hold and max hold stores to be set to the current measurement. Returns control to the Meas Funcs Menu. Toggles the max/min hold facility on or off.

See Fig. 3-33. Provides a facility which finds and stores the maximum and minimum power or frequency readings over a period of time. When this function is enabled, each new measurement is compared with both stores. If the new measurement is less than that held in the min hold store or greater than that held in the max hold store, the store will be overwritten by the new measurement. This function applies per readout.

Max Min Hold

MEASURE

Measurement Functions

Max Min Hold

Return to Meas Funcs

Set Min Limit

As above but applies to the minimum limit.

Returns control to the Meas Funcs Menu.

Rotary Control Step Keys Numeric Pad Terminator Any

dB, dBm, Percentage

Rotary Control Step Keys Numeric Pad Terminator 10-

Watts

Rotary Control Step Keys Numeric Pad Terminator 10+

Frequency

Used to change the maximum limit value for the currently active readout. The new value is entered as follows:

Set Max Limit

Limit Checking

Toggles limit checking on or off for the currently active readout.

See Fig. 3-33. This menu is used to check the measurement against preset maximum and minimum limits held in store. When limit checking is enabled, each new measurement is compared with both limits. A window is displayed above the relevant readout value showing the pass/fail status of the current measurement. The maximum and minimum limit values are displayed to the left of the readout. The pass/fail window and limit values are not displayed if limit checking is turned off for that readout.

Lim Checking

MEASURE

Measurement Functions

Limit Checking

Gen Set-up See Fig. 3-35. This menu enables the user to set up the input configuration and to compensate for non-ideal characteristics of detectors and sensors.

Input Configuration Leads to the Input Config Menu, which is used to set up the input configuration for the measurement.
See page 3-117.

Domain Scale & Offset This soft key is unselectable.

Detector Correction Leads to the Select Input Menu, which is used to compensate for non-ideal detector characteristics.
See page 3-65.

Sensor Correction Leads to the Sensor Corr Menu, which is used to apply cal factor and linearity correction for the power sensor connected to the D input.
See page 3-67.

Det / Sensor Specs Leads to the Edit Specs Menu, which is used to modify detector correction specifications or sensor calibration data tables.
See page 3-69.

AC Detection Unselectable for a readout channel.

DC Detection Unselectable for a readout channel.

Return to Measure Returns control to the Measure Menu.

See Fig. 3-35. This menu provides the following functions for setting up the configuration of the four inputs.

Configures all four inputs A, B, C and D to accept scalar detectors.

All Inputs are Scalar

Configures inputs A, B and C to accept scalar detectors and input D to accept power meter sensor.

Input D is Power Sensor

Enables the offset for Input A to be changed.

Input A Offset

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Enables the offset for Input B to be changed.

Input B Offset

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Enables the offset for Input C to be changed.

Input C Offset

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Enables the offset for Input D to be changed.

Input D Offset

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Displays a form on the screen showing the detector or sensor type connected to each input, and whether manual or automatic correction will be applied (see Select Input Menu, page 3-65). Pressing the [Return to Input Config] soft key returns control to the Input Config Menu.

View Current Configuration

Returns control to the Gen Set-up Menu.

Return to Gen Set-up



Fig. 3-32 MEASURE Menus - Readout Channel (Sheet 1)

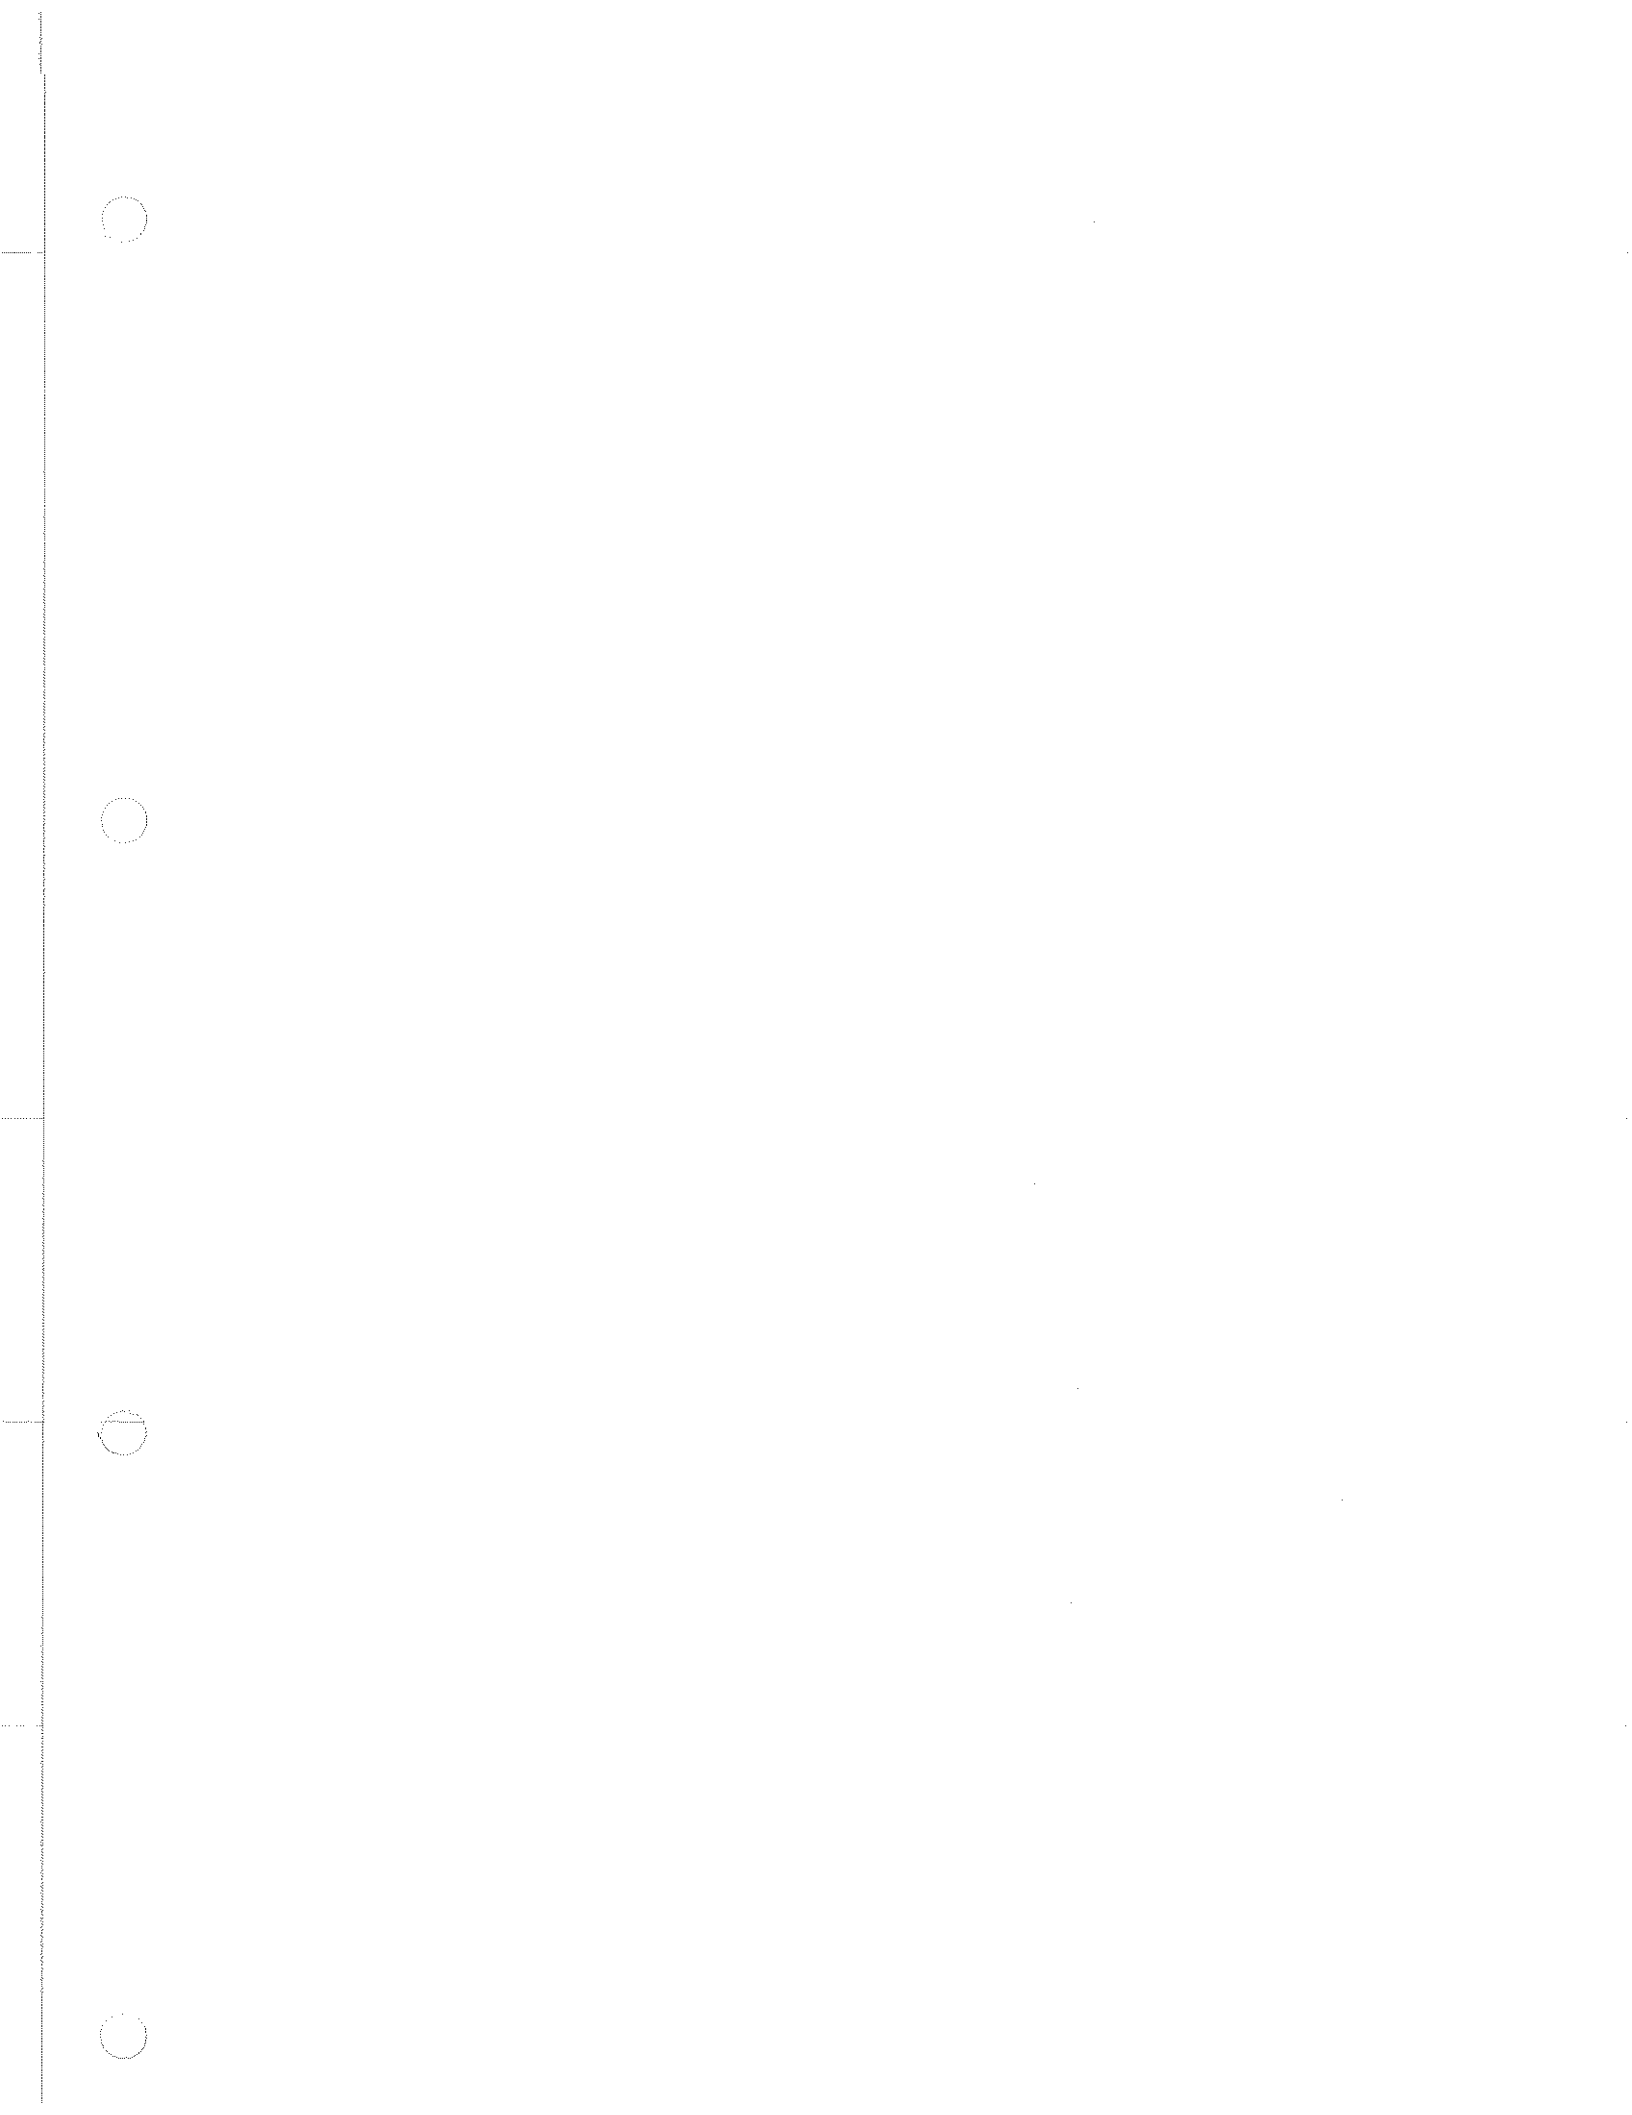


Fig. 3-33 MEASURE Menus - Readout Channel (Sheet 2)

Measurement
Functions

MEASURE

Fig. 3-34 MEASURE Menus - Readout Channel (Sheet 3)

Input
Difference

Measurement
Functions

MEASURE

Fig. 3-35 MEASURE Menu - Readout Channel (Sheet 4)

General
Set-up

MEASURE

[CAL] KEY

The [CAL] key is used to perform a power sensor calibration for a readout channel. Power sensor calibration utilizes the 50 MHz, 1 mW power reference output available from the front panel. A sensor is calibrated by connecting it to the power reference output (via a 30 dB attenuator for 6920 series sensors) and pressing the [Sensor Cal] soft key. The system measures the difference between the sensor and reference outputs and uses this to correct subsequent measurements. The power reference will be switched on and off automatically as required by the calibration process.

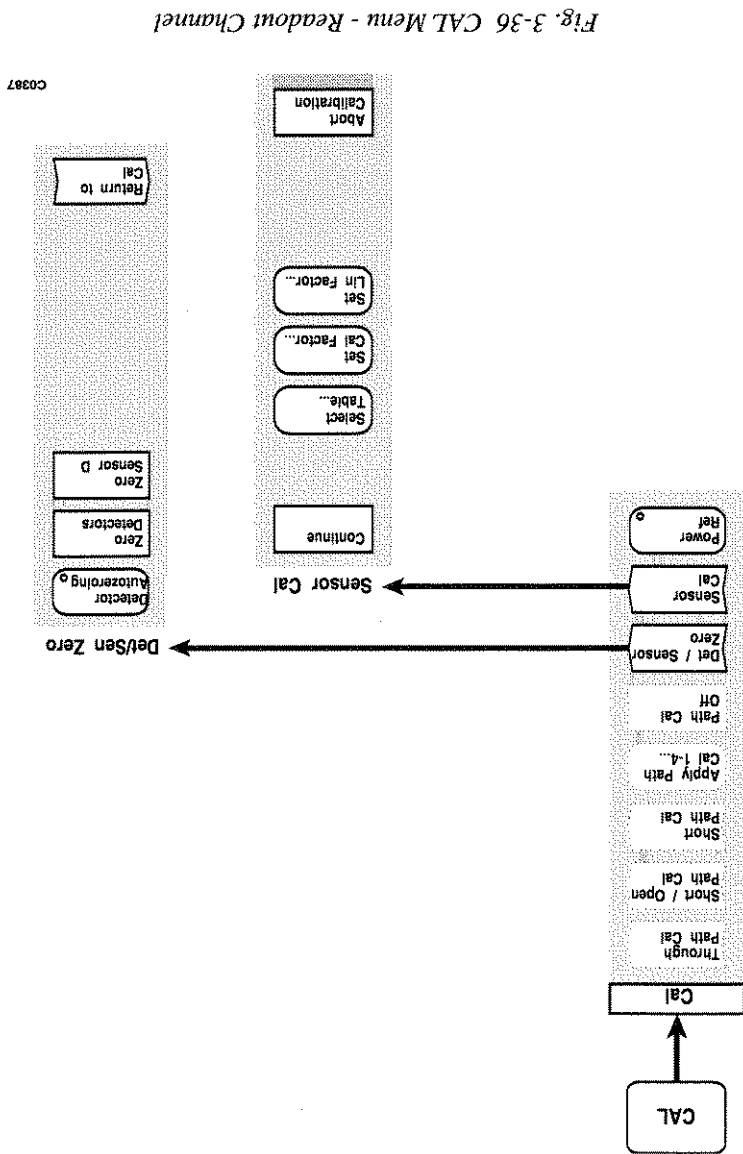


Fig. 3-36 CAL Menu - Readout Channel

00387

Cal

This menu is used for detector/sensor zeroing and sensor calibration.

The first five soft keys in this menu are unselectable for a readout channel; only the three selectable soft keys are described here.

Det / Sensor Zero

Leads to the Det/Sen Zero Menu, which is used for zeroing detectors/sensors. See page 3-87.

Sensor Cal

Leads to the Sensor Cal Menu, which is used to zero the power sensor and to calibrate it against the reference.

This soft key will only be selectable if Input D is configured for a power sensor. See page 3-88

Power Ref

Toggles the power reference output on and off. The reference can be used, for example, to verify that the power sensor is functioning correctly. The Power Reference On indicator (PWRREF) will be present in the General Information Area at the top of the screen if a power reference signal is being output.

[FORMAT] KEY

The [FORMAT] key enables the active measurement in the active channel to be displayed in the required format. The options available depend upon the input configuration.

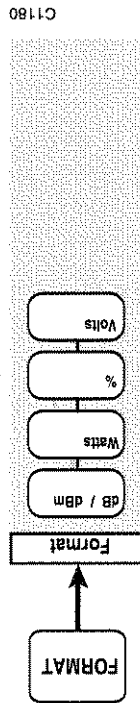


Fig. 3-37 FORMAT Menu - Readout Channel

FORMAT

The soft keys in this menu enable linear (Watts or %) or log (dB/dBm) display formats to be selected.

Selects dB/dBm format. The instrument will automatically select dB or dBm depending on whether the measurement is a ratio of inputs (i.e. relative power measurement) or a single input (i.e. absolute power measurement).
 This soft key will only be selectable for absolute or relative power measurements.

Selects Watts format.
 This soft key will only be selectable for absolute power or power difference measurements.

Selects percentage format.
 This soft key will only be selectable for relative power measurements.

Selects Volts format. The instrument displays the DC voltage output from the detector (or voltage adaptor cable).
 This soft key will only be selectable for single input power measurements.



FUNCTION GROUP KEYS - FAULT LOCATION CHANNEL

[SOURCE] KEY

The [SOURCE] key provides access to the series of menus illustrated in Fig. 3-38, which are used to define and control all the source functions for a fault location channel.

Due to the nature of the measurement the user does not have full control of the source for a fault location channel, other than setting the output power level, resulting in a simplified source menu, as described below. The parameters for setting the start and stop frequencies of the sweep and the number of measurement points are accessed via the fault location Measure menus.

Source

This menu enables the operator to set up the source for fault location measurements on coaxial or waveguide transmission lines. Unlike the scalar and readout channels there is only one source menu for fault location measurements.

Set Output Power

Used to change the output power of the source for the currently active channel.

Rotary Control Step Keys Numeric Pad Terminator Any

Sweep Time

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically. See page 3-34.

RF

Toggles the RF output on or off for the currently active channel.

Source Functions

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement. The Source Funcs Menu is the same as that for scalar and readout channels, except that the [Int/Ext Source] and [Source Only Mode] soft keys are not present. See page 3-36.

Fig. 3-38 SOURCE Menu - Fault Location Channel

SOURCE

[MEASURE] KEY

The [MEASURE] key provides access to the series of menus illustrated in Fig. 3-43 and Fig. 3-46 which are used to define and set up the fault location measurement, and apply various functions to aid examination of the results.

The current values or states for the major measurement functions are displayed in specific locations on the (see 'Display', page 3-14).

Values for cutoff frequency, relative velocity, overmode frequency and attenuation can be set directly using the Set Parameters Menu, or the instrument can set up these parameters from data contained in a transmission line database (see the Access Dbase Menu, page 3-142).

MEASURE

See Fig. 3-43

Measure

Configure Fault Loc

Leads to the Config F Loc Menu.
This key is only selectable if Measurement I is active.
See page 3-137.

Set Up Measurement

Leads to the Set Up Meas Menu.
This key is only selectable if Measurement I is active.
See page 3-139.

Averaging

Leads to the Averaging Menu, which enables averaging to be applied to the measurement data.
This soft key is only selectable if Measurement I is active.
See page 3-54.

Restart Averaging

Restarts the averaging process.
This key is only selectable if Measurement I is active.
See also the Averaging Menu (page 3-54).

Recall Cal Conditions

Recalls the measurement conditions that were present when the fault location calibration was performed.

Fault Loc Functions

Leads to the F Loc Funcs Menu.
This key is only selectable if Measurement I is active.
See page 3-151.

General Set-up

Leads to the Gen Set-up Menu:
This is the same as for a scalar channel, except that the [Dominant Scale & Offset] soft key is unselectable.
This key is only selectable if Measurement I is active.
See page 3-62.

MEASURE

Configure
Fault Loc

Config F Loc

See Fig. 3-43

Range
Entry

Sets the entry mode to 'range entry' (see page 3-139).

Frequency
Entry

Sets the entry mode to 'frequency entry' (see page 3-139).

Coax
Medium

Sets the medium to coax.

Waveguide
Medium

Sets the medium to waveguide.

This soft key will not be selectable if the transmission line database is on.

Display Units
Metres

Sets the distance units to metres. This applies instrument-wide.

Display Units
Feet

Sets the distance units to feet. This applies instrument-wide.

Measurement
Definition

Leads to the Meas Def Menu.

See page 3-137.

Returns control to the Measure Menu.

Return to
Measure

MEASURE

Configure
Fault Loc
Measurement
Definition

Meas Def

See Fig. 3-44. Enables the ratio of the power levels at two of the inputs to be measured by selecting the appropriate soft keys.

A ratio of B/C is required when making a fault location measurement using a Test Head.

The instrument defaults to a ratio of B/C.

It will not be possible to select input D if it is configured to be a power meter sensor input.

Single Input
A, B, C or D

Leads to the Single Input Menu.
See page 3-138

Input
Ratio

Leads to the Input Ratio Menu
See page 3-138

Return to
Config F Loc

Returns control to the Config. F Loc Menu.

Return to Meas Def

Returns control to the Meas Def Menu.

Selects input D as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, B or C).

Selects input C as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, B or D).

Selects input B as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (A, C or D).

Selects input A as the numerator of the desired power ratio measurement. Selecting the numerator leads to a sub-menu where the denominator is chosen (B, C or D).

It will not be possible to select input D if it is configured to be a power meter sensor input.

The instrument defaults to a ratio of B/C.

A ratio of B/C is required when making a fault location measurement using a Test Head.

Input Ratio

See Fig. 3-44. Enables the ratio of the power levels at two of the inputs to be measured by selecting the appropriate soft keys.

MEASURE

Configure Fault Loc	Measurement Definition	Input Ratio
---------------------	------------------------	-------------

Return to Meas Def

Returns control to the Meas Def Menu.

Selects input D for the measurement.

Selects input C for the measurement.

Selects input B for the measurement.

Selects input A for the measurement.

It will not be possible to select input D if it is configured to be a power sensor input.

See Fig. 3-44. Enables the power level of a selected input to be measured by pressing the appropriate soft key. A single input measurement needs to be specified when using a divider/detector instead of a Test Head.

Single Input

See Fig. 3-44. Enables the power level of a selected input to be measured by pressing the appropriate soft key. A single input measurement needs to be specified when using a divider/detector instead of a Test Head.

MEASURE

Configure Fault Loc	Measurement Definition	Single Input A, B, C or D
---------------------	------------------------	---------------------------

If any of the parameters defined by this menu or the Set Params Menu are changed subsequent to calibration, the calibration will become invalid and the path calibration must be repeated. An error message will be displayed to warn the user that this situation has occurred.

Note...

If waveguide medium has been selected from the Config F Loc Menu, the [Set Cutoff Frequency] soft key will be selectable (this is not required for coax medium).
If coax medium has been selected from the Config F Loc Menu, the [Set Relative Velocity] soft key will be selectable (this is not required for waveguide medium).

The soft keys displayed in the first two positions depend upon whether the channel is in 'range entry' or 'frequency entry' mode, and whether the transmission medium is coax or waveguide, as selected in the Config F Loc Menu.
In the range entry mode (the default mode), the range is entered and this determines the frequency span over which the source is swept. The system will select a centre frequency as close as possible to the value currently set. A different band of frequencies may be chosen by adjusting the centre frequency, but the value of span (and hence range) will always be preserved. In the frequency entry mode, a frequency span can be entered by adjusting the start/stop values. The range will then be calculated from the entered span.

Fig. 3-39 Fault Location Parameters

Set Up Measurement	
Range	: 100.000 m
Center Frequency	: 10.000000000 GHz
Start Frequency	: 9.850198145 GHz
Stop Frequency	: 10.149801854 GHz
Cutoff Frequency	: -
Relative Velocity	: 1.000
Overmode Frequency	: -
Number of Points	: 401

A form is displayed on the screen (Fig. 3-39) showing the current values for the fault location measurement definition.
See Fig. 3-45 This menu enables the basic measurement configuration to be set up for fault location measurements.

Set Up Meas

Set Up Measurement

MEASURE

Range Entry Mode:

Set Range
 The range is the length of the transmission line to be measured. If the line consists of several sections, the range should be set to the sum of the lengths of the individual sections. The distance range determines the frequency span of the measurement. The maximum range depends on cable or waveguide loss. The minimum range that can be entered depends on the frequency range available from the source, the number of measurement points and the relative velocity of the transmission medium. If the resulting frequency span results in one of the limits being exceeded, then the centre frequency is changed so that the frequencies are within limits.

Rotary Control Step Keys Numeric Pad Terminator 10+

Set Cntr Frequency
 Used to change the centre frequency of the measurement. The centre frequency should be set within the operating frequency bandwidth of the transmission line being tested. The centre frequency can only be set to a value which will not result in the source going beyond its frequency limits.

Rotary Control Step Keys Numeric Pad Terminator 10+

Set Number of Points
 Used to change the number of measurement points generated by the sweep for each channel, up to a maximum of 512 points. The number of measurement points determines the minimum range can be entered; decreasing the number of measurement points reduces the minimum range.

Rotary Control Step Keys Numeric Pad Terminator Any

Database Set Parameters
 Enables the transmission line database. While it is enabled, it will not be possible to alter any of the parameters that the database sets.

Disables the transmission line database, allowing the parameters to be set directly.

Leads to the Access Database Menu, which is used to access all database functions.

See page 3-142.

Leads to the Set Params Menu, which enables the user to set parameters manually. This soft key is unselectable if the transmission line database is enabled.

See page 3-150.

Returns control to the Measure Menu.

Frequency Entry Mode:

The menu is the same as for range entry except for the [Set Start Frequency] and [Set Stop Frequency] soft keys which replace the [Set Range] and [Set Cntr Frequency] soft keys.

Set Start Frequency

This parameter is the start frequency of the measurement.

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10+

Set Stop Frequency

This parameter is the stop frequency of the measurement.

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10+

MEASURE

Set Up Measurement Access Database

See Fig. 3-45. This menu provides access to the fault location transmission line database.

Transmission line data is provided on an optional memory card, and is organized by manufacturer, medium (coax or waveguide) and transmission line name. Parameters such as relative velocity, cutoff frequency and attenuation versus frequency are provided by the database. Data for a single transmission line can be stored into a non-volatile transmission line database store within the MTS; five of these stores are available.

To use the transmission line data from the database, it must be selected from either the card or one of these transmission line database stores. Once selected, it is stored in the 'currently selected transmission line store' (in non-volatile memory). This is the data that is used by the instrument, and remains valid until a new transmission line is selected.

If, at power-up, the transmission line database is on, the parameters will be set up from the 'currently selected transmission line store'. If this store is corrupted, invalid or empty, the transmission line database will be turned off.

A form is displayed giving all the data for the transmission line that is currently in use by the transmission line database (or would be used if the transmission line database was enabled). The form also displays the source of the transmission line data, i.e. memory card or MTS transmission line database store. In the latter case the store number is given. The form is for information only; the data displayed cannot be altered. Invalid data is indicated by the "-" symbol.

Select from Card

Leads to the Sel from Card Menu.
See page 3-143.

Select from Store

Used to select a transmission line database store, by entering the required store identity number. The selected data will be used until a new transmission line is selected from the card or a transmission line database store is selected

Copy from Card

Leads to the Cpy from Card Menu.
See page 3-146.

Edit Store

Leads to the Edit Store Menu.
See page 3-147.

Return to Set Up Meas

Returns control to the Set Up Meas Menu.

Set from Card

See Fig. 3-45. This menu allows selection of a transmission line from a memory card. The selected data will be used until a new transmission line is selected from the card or a transmission line database store is selected.

MEASURE

Set Up

Access Database

Select from Card

Select Subset

Leads to the Select Subset Menu.
See page 3-144.

View Data

Used to display all the data for the currently highlighted transmission line.
This soft key is unselectable if no transmission lines are listed.

⇓

Highlights the previous entry in the list.

⇑

Highlights the next entry in the list.

Page Up

Displays the previous page of entries in the list.

Page Down

Displays the next page of entries in the list.

Select

Selects the highlighted transmission line and returns to the Access Dbase Menu.
This soft key will be unselectable if no transmission lines are listed.

A form is displayed giving the data for transmission lines that match the subset selection criteria (Select Subset Menu). The subset selection criteria is also shown on the form. The [↑], [↓], [Page Up] and [Page Down] soft keys are used to highlight the required transmission line; on pressing [Select] the currently highlighted entry is loaded from the card and used by the instrument. Transmission line selection can be aborted by pressing [ENTRY OFF], in which case the transmission line that was last selected will continue to be used. Note that only the first 20 characters of the manufacturers' names will be displayed.

Select Subset

See Fig. 3-45. This menu allows a subset of all the transmission lines present on the card to be listed. It is possible to select a subset by manufacturer, medium (waveguide or coax) or by transmission line name, or any combination of the three.

A form is displayed which lists the three subset selection criteria. One of these can be made the active parameter by using the [//] and [\\] soft keys. The other soft keys provide various ways of altering the active subset selection criteria.

For a given subset selection criteria all values will be displayed.

Waveguide

Sets the medium to Waveguide.
This soft key is only selectable if the currently selected subset selection criteria is Medium.

Coax

Sets the medium to Coax.
This soft key is only selectable if the currently selected subset selection criteria is Medium.

Text

Allows text entry for the currently selected subset selection criteria. The method of entry is the same as for the Screen Title Menu (page 3-276).

The text entry form can be used to enter either manufacturer or transmission line names. If the last character is a '*' then it is used as a wildcard, e.g. 'Abc*' will select all names beginning with 'abc'. Case is ignored when selecting.

The current manufacturer/transmission line name from the subset selection criteria is displayed on entry to this form; 'any' is shown as '*'.

Menu

This soft key is unselectable if the currently selected subset selection criteria is Medium.
Leads to the Menu menu, which allows entry of subset selection criteria by selecting items from a menu.
This soft key is unselectable if the currently selected subset selection criteria is Medium.
See page 3-145.

Used to change the currently selected parameter for subset selection criteria.

Used to change the currently selected parameter for subset selection criteria.

Search

Applies the new subset selection criteria and returns to the Sel from Card Menu.

Set Up Measurement Access Database Select from Card Select Subset

MEASURE

MEASURE

Set Up Measurement Database Select from Card Select Subset Menu

Menu

See Fig. 3-45. This menu allows manufacturer or transmission line names to be selected from an alphabetically arranged list.

The [↑], [↓], [Page Up] and [Page Down] soft keys are used to highlight the required name; on pressing [Select] the currently highlighted name is selected.

↓

Highlights the previous entry in the list

↑

Highlights the next entry in the list

Page Up

Displays the previous page of entries in the list.

Page Down

Displays the next page of entries in the list.

Select

Selects the highlighted entry and returns to Select Subset Menu.

Copy from Card See Fig. 3-45. This menu enables a transmission line to be selected from the card and copied to a transmission line database store.

A form is displayed similar to that of the Sel from Card Menu (page 3-143), but also includes information about the store that is to be written to.

Leads to the Select Subset Menu.

See page 3-144.

Used to display all the data for the currently highlighted transmission line. *This soft key is unselectable if no transmission lines are listed.*

Highlights the previous entry in the list.

Highlights the next entry in the list.

Displays the previous page of entries in the list.

Displays the next page of entries in the list.

Used to select the store to copy to by entering the required store identity number.

Copies the data for the highlighted transmission line to the specified transmission line database store, and returns to the Access Dbase Menu. *This soft key will be unselectable if no transmission lines are listed.*

MEASURE	Set Up Measurement	Access Database	Copy from Card
----------------	---------------------------	------------------------	-----------------------

Edit Store

See Fig. 3-46. This menu allows data to be entered for transmission lines not provided on the memory card. A form is displayed giving the data contained in the selected transmission line database store.

Select Store

Used to select one of the five transmission line database stores to be edited, by entering the required store identity number.

Edit Manufacturer

A text entry form is provided to allow editing of the manufacturer name. The method of entry is the same as for the Screen Title Menu (page 3-276).

Edit Tx Line

A text entry form is provided to allow editing of the transmission line name. The method of entry is the same as for the Screen Title Menu (page 3-276).

Edit Medium

Leads to the Edit Medium Menu.
See page 3-148.

Edit Cutoff Frequency

Allows the value for waveguide cutoff frequency to be edited.
This soft key is unselectable if the medium is coax.

Edit Relative Velocity

Allows the value for relative velocity to be edited.
This soft key is unselectable if the medium is waveguide.

Edit Atten Table

Leads to the Edit Atm Table Menu.
See page 3-149.

Save Store

Writes the data back to the transmission line database store, and returns to the Access Database menu.
This soft key will be unselectable if any of the data is invalid.

MEASURE

Set Up

Measurement

Access
Database

Edit
Store

Edit
Medium

Edit Medium

See Fig. 3-46. This menu allows the transmission line medium to be specified.

Waveguide

Sets the medium to waveguide.

Coax

Sets the medium to coax.

**Return to
Edit Store**

Returns control to the Edit Store Menu.

Edit Attn Table

See Fig. 3-46. This menu allows the attenuation table for the transmission line to be edited. This table specifies the attenuation values for the transmission line at various frequencies; the table can contain a maximum of twenty entries.

Entries can be added to or deleted from the table, or existing entries changed. Frequencies cannot be edited, therefore if a new entry at a different frequency is to be added, the existing entry must be deleted and a new entry with the desired frequency added. The [↑] and [↓] soft keys are used to highlight the entry to be edited or deleted.

Edit Entry

Allows the attenuation value for the highlighted entry to be edited. The [↑] and [↓] soft keys are still available for selecting the required entry. *This soft key is unselectable if the table is empty.*

Add Entry

Allows additional entries to be added to the attenuation table. A form is displayed for the entry of the frequency and attenuation values. The [⇐] and [⇒] soft keys are used to select the parameter to be entered. The [Add Entry] soft key adds the entry into the table, and sorts the entries into frequency order. *This soft key is unselectable if the table is full.*

Delete Entry

Deletes the highlighted entry from the table.



Highlights the previous entry in the table.



Highlights the next entry in the table.

Return to Edit Store

Returns control to the Edit Store Menu.

MEASURE

Set Up

Set Parameters

Set Params

See Fig. 3-45. This menu is used to manually set the parameters for the transmission line, rather than using the transmission line database.

Set Cutoff Frequency

The cutoff frequency is the frequency below which propagation ceases in the waveguide. This parameter is required in order that the MTS can generate the non-linear frequency sweep that is required for waveguide measurements.

This soft key will only be selectable if the transmission line medium is waveguide (Config F Loc Menu, page 3-137)

Rotary Control Step Keys Numeric Pad Terminator 10+

Set Relative Velocity

The relative velocity represents the speed of propagation through the transmission medium as a fraction of the speed of light in free space range (0 to 1). If the line consists of more than one section, and the relative velocities are significantly different, an 'average' value can be calculated for the composite line. The individual figures for relative velocity should be weighted to take account of the relative lengths of the sections, i.e. the longer the section, the greater the effect it has on the composite figure. The relative velocity is 1 for most waveguides.

This soft key will only be selectable if the transmission line medium is coax (Config F Loc Menu, page 3-137).

Rotary Control Step Keys Numeric Pad Terminator Any

Set Attenuation

This parameter is the attenuation characteristic of the transmission medium in dB/m or dB/ft, depending on the distance units that have been selected. If the line consists of more than one section, and the attenuation figures are significantly different, an 'average' value can be calculated for the composite line. The individual figures for attenuation should be weighted to take account of the relative lengths of the sections, i.e. the longer the section, the greater the effect it has on the composite figure.

Rotary Control Step Keys Numeric Pad Terminator Any

Return to Set Up Meas

Returns control to the Set Up Meas Menu.

Sets the level of windowing to be applied to the acquired data in the fault location measurement to low. Data windowing reduces the amplitudes of the sidelobes associated with the main peak on the display, but gives reduced distance resolution. Variation of the windowing level provides a trade-off between distance resolution and the height of the sidelobes. A low windowing level gives greater distance resolution but higher sidelobes.

Fig. 3-40 shows the effect on the display of two data windowing levels.

Sets the level of windowing to be applied to the acquired data in the fault location measurement to medium. A medium windowing level gives an optimum trade-off between distance resolution and sidelobe height for most applications. This is the default setting for the instruments.

Sets the level of windowing to be applied to the acquired data in the fault location measurement to high. A high windowing level gives reduced sidelobe height but with some loss of distance resolution.

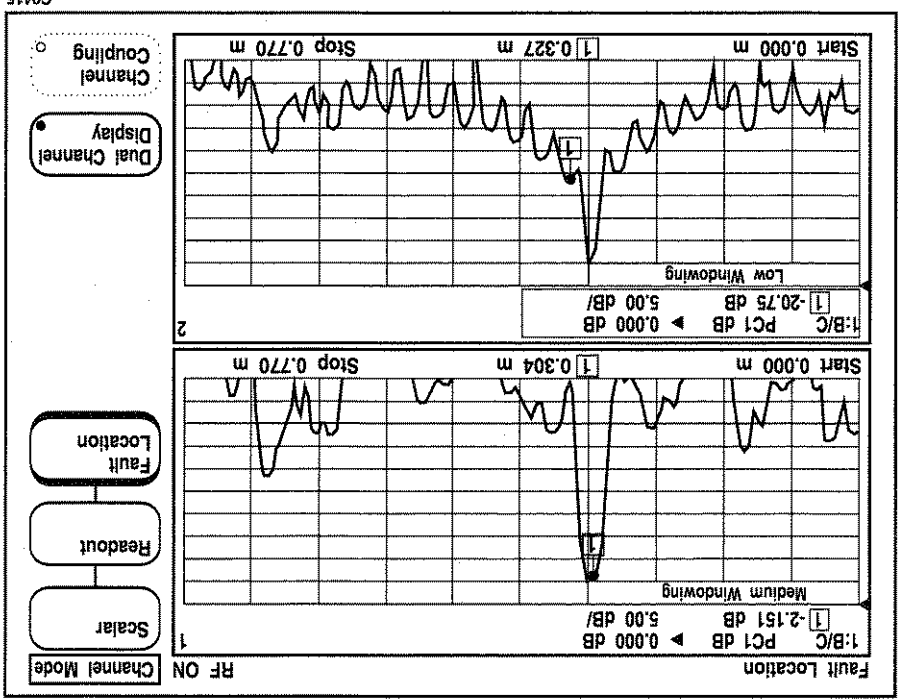


Fig. 3-40 Effect of Data Windowing on a Fault Location Measurement

Leads to the Enhance Mode Menu, which enables a part of the display range to be magnified by changing the start and stop values.

See page 3-153.

Toggles masking correction on or off. This feature corrects for amplitude errors caused by preceding peaks in the fault location measurement. Refer to Fig. 3-41 for an example of the effect of masking correction.

Return to Measure

Limit Checking


Returns control to the Measure Menu.

See page 3-56.

This soft key is only selectable if Measurement 1 is active.

Leads to the Lim Checking Menu, which enables the displayed trace to be compared with user-defined limits. This is the same as for a scalar channel, except that the bottom soft key returns control to the F Loc Funcs Menu, not the Measure Menu.

Fig. 3-41 Effect of Masking Correction on a Fault Location Measurement

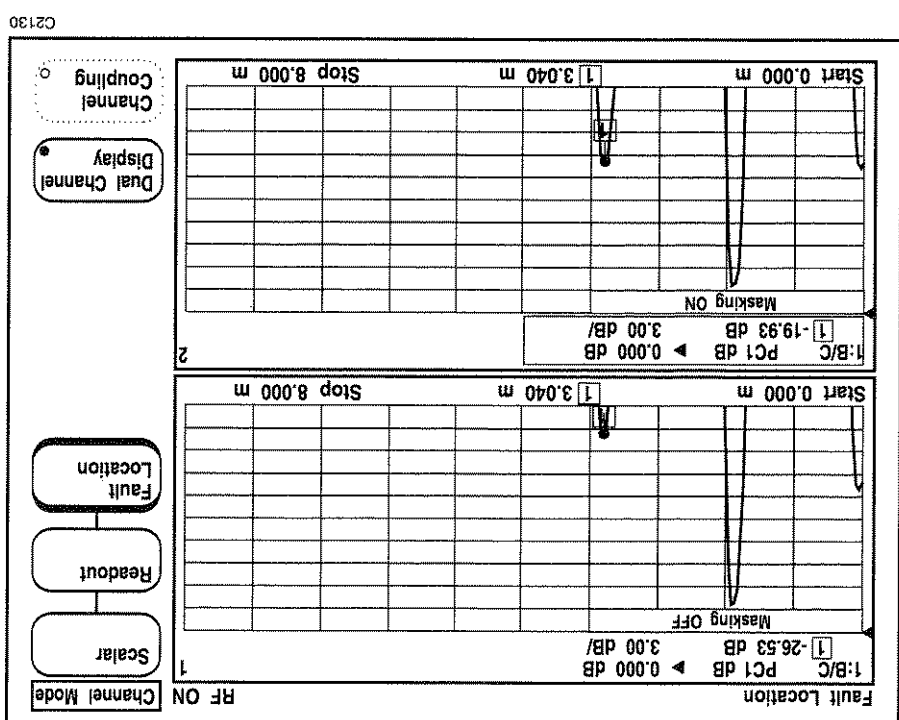

C2130

Enhance Mode

See Fig. 3-43 Following calibration, the horizontal axis will display distance from zero to the range specified in the Set Up Meas Menu. This menu enables the user to specify a sub-range of displayed distance values by entering the required start and stop values, or by specifying centre and span values. This effectively provides a magnification facility for a selected part of the range. Note that the frequency sweep of the source remains constant; the magnification is accomplished by processing the measurement results.

The display start and stop values can also be set to the distances corresponding to the position of the active marker on the active measurement. This is done by pressing the appropriate soft key, positioning the active marker on the trace, then pressing the [X1] key on the numeric keypad.

If the centre & span mode has been selected, the centre value is set by pressing [Set Display Cntr], positioning the active marker, then pressing the [X1] key on the numeric keypad. The span is set by pressing [Set Display Span], positioning the delta marker to the appropriate point either side of the centre, then pressing the [X1] key. (If necessary, enable the delta marker from the Marker Menu.)

If the measurement range is subsequently altered while in this mode, then after recalibration the display will show the new measurement range, rather than the sub-range.

Set Display Start

If the start/stop mode has been selected, this soft key is used to change the start value of the displayed distance. In the centre/span mode this soft key is labelled [Set Display Cntr].

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10+

Set Display Stop

If the start/stop mode has been selected, this soft key is used to change the stop value of the displayed distance. In the centre/span mode this soft key is labelled [Set Display Span].

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10+

Display as Start & Stop

Displays distance as values between the start and stop values as defined above.

Display as Cntr & Span

Displays distance as a centre value and span.

Enhanced Mode

Toggles the Enhanced Mode on or off. Enhanced mode gives an optimally interpolated display trace resulting in improved distance and amplitude accuracy, particularly when displaying a sub-range of the distance scale. However, when the Enhanced Mode is turned on, the measurement time is significantly increased. Fig. 3-42 shows the effect of this mode when displaying a sub-range of a measurement.

Return to F Loc Funcs

Returns control to the F Loc Funcs Menu.

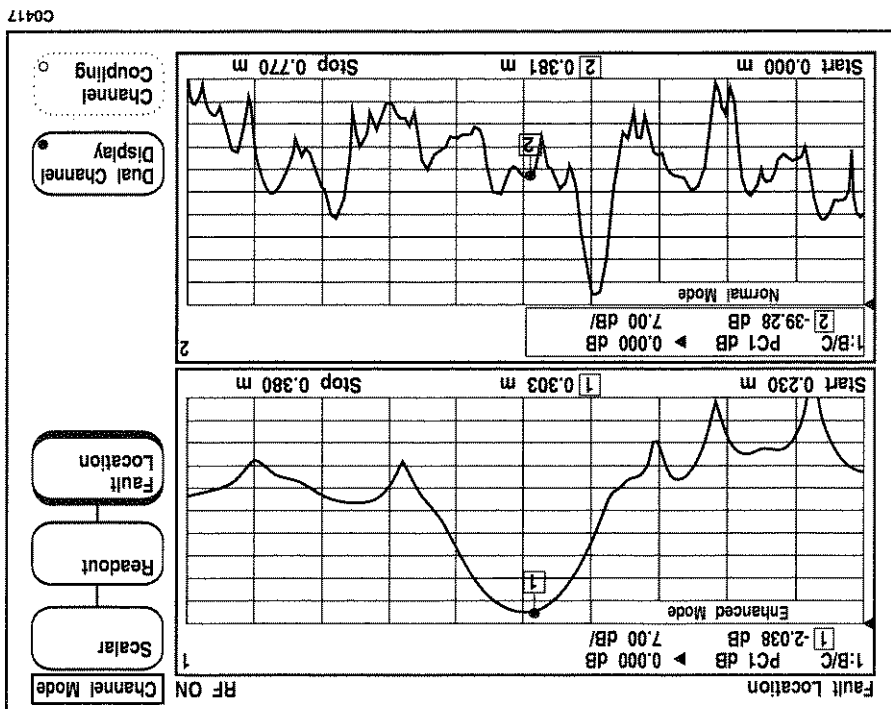


Fig. 3-42 Effect of Enhanced Mode on a Fault Location Measurement

C0417



Fig. 3-43 MEASURE Menu - Fault Location Channel (Sheet 1)

MEASURE



Fig. 3-44 MEASURE Menu - Fault Location Channel (Sheet 2)

Measurement
Definition

Configure
Fault Loc

MEASURE



Fig. 3-45 MEASURE Menu - Fault Location Channel (Sheet 3)

Set Up
Measurement

MEASURE



Fig. 3-46 MEASURE Menu - Fault Location Channel (Sheet 4)

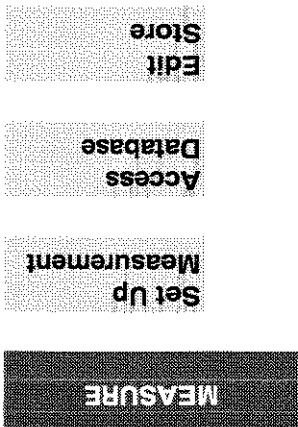


Fig. 3-47 CAL Menu - Fault Location Channel

[FORMAT] KEY

The [FORMAT] key enables the fault location measurement to be displayed in the required format.

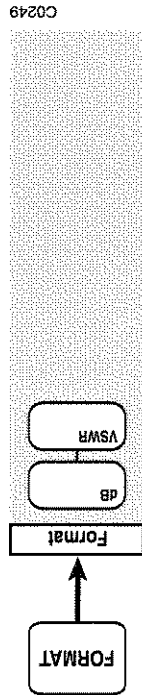


Fig. 3-48 FORMAT Menu - Fault Location Channel

FORMAT

Format

The two soft keys in this menu enable the measurement to be displayed in dB or VSWR format.

dB

Selects dB format.

VSWR

Selects VSWR format.

[SCALING] KEY

The [SCALING] key provides a menu which enables the user to adjust the positioning and scaling of the fault location trace, or to allow the instrument to set the scaling automatically.

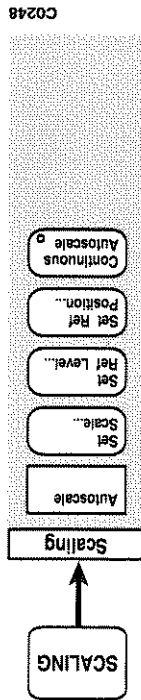


Fig. 3-49 SCALING Menu - Fault Location Channel

Scaling

This menu enables the user to set the reference level and scaling for a trace. The reference position is the position on the vertical axis that remains fixed during scaling. This is indicated on the screen by the Reference Position Indicator (see the 'Display' Section). The reference level is the value corresponding to the position of the Reference Position Indicator on the vertical scale, and is displayed in the relevant trace information area.

The default values for reference level and scaling factor for both types of format are given below. The default reference position for dB format is the top graticule line. For VSWR format the reference position is the bottom graticule line.

Format	Reference Level	Scale Factor
dB	+20.0	10.0 dB(m)/div
VSWR	1.0	0.1/div

Allows the instrument to determine optimum values of scale and reference level. The value chosen for the scale factor will be selected from a 1,2,5 sequence. The value chosen for the reference level will be a multiple of the scaling factor. The reference position will remain unchanged.

For a Fault location channel, automatic baseline clipping is used to eliminate noise and emphasize peaks. The algorithm used selects the reference level such that the positive peaks of the measurement are not clipped by the top graticule line; the scale factor is selected such that 10% of the measurement points are visible above the bottom graticule line, the remaining 90% being clipped.

Used to set the scale factor for a trace.

dB/Bm Format
 Rotary Control Step Keys Numeric Pad Terminator Any

VSWR Format
 Rotary Control Step Keys Numeric Pad Terminator 10-

Autoscale

Set Scale

Set Ref Level

Set Ref Position

Continuous Autoscale

Toggles continuous autoscale on or off, in which autoscaling will be performed automatically once per measurement update.

Rotary Control Step Keys Numeric Pad Terminator X

Used to set the reference position for a trace. The reference position may be placed on any of the 11 horizontal lines on the graticule.

The reference level can also be set to the response measured at the active marker position, by pressing this soft key followed by the [X1] key on the numeric keypad.

Numeric entry as above.

Used to set the reference level for a trace.

[MARKERS] KEY

The MTS can display up to eight markers per trace, with each marker identified by a number. Any one of these can be designated the active marker, indicated by a box around the number to distinguish it from the normal markers. The active marker can be moved along the x-axis using the step keys, rotary control or by keyboard entry. The step keys and keyboard entry are only available through the Position Active Mkr and Position Delta Mkr functions of the Markers Menu. The rotary control can be used to move the active marker at any time whilst it is displayed, provided that no other form of numeric entry is active. The distance value (x-axis position) of the active marker is displayed below the graticule, and the measured response at this position is displayed in the relevant trace information area.

The delta marker mode provides an additional marker, designated the delta marker, and is represented by Δ on the display. In this mode, the distance value of the active marker is relative to the delta marker position. The measured response is relative to the response at the delta marker position, i.e.

$$\text{Distance value} = \text{Active Marker position} - \text{Delta Marker position}$$
$$\text{Response} = \text{Active Marker response} - \text{Delta Marker response}$$

Note that the distance values indicated by the active marker represent the actual distance to a discontinuity, not the round trip distance.

The marker menus are shown in Fig. 3-50.

A tracking facility is available for the max/min function; this enables the function to be automatically applied at each measurement update (i.e. at the end of each sweep).

This menu provides soft keys for setting up markers and using them to perform various types of measurement.

Markers

Toggles the active marker on or off. Turning off the active marker also turns off the delta marker.

Active Mkr

Used to place a marker at the active marker position by entering the required marker number from the keyboard.

Place Mkr at Active

This soft key will only be selectable if the active marker is turned on.

Used to change the distance value (x-axis position) of the active marker.

Position Active Mkr

This soft key will only be selectable if the active marker is turned on.

Rotary Control Step Keys Numeric Pad Terminator 10+

Delta

Toggles the delta marker on or off. Turning on the delta marker also turns on the active marker.

Mkr

Used to change the position of the delta marker, using the same method as for the active marker.

Position Delta Mkr

This soft key will only be selectable if the delta marker is turned on.

Turns off all the markers for the currently active trace.

All Mkrs Off

Leads to the Mkr Funcs Menu, which enables various measurement functions to be carried out by means of the active marker and delta marker.
See page 3-172.

Mkr Functions

Leads to the Set Up Mkrs Menu, which allows the user to activate and position selected markers.
See page 3-174.

Set Up Mkrs

MARKERS

Mkr Functions

This menu leads to sub-menus for locating the maximum point on a trace, searching for a specified response value and locating multiple peaks on a displayed trace.

Mkr Funcs

Marker to Max Min

Leads to the Max Min Menu.
See page 3-173

dB/Octave dB/Decade

This soft key is unselectable for fault location measurements.

Peak to Peak

This soft key is unselectable for fault location measurements.

Search

Leads to the Search Menu, which is used to locate a response value on the trace.
See page 3-100.

Bandwidth

This soft key is unselectable for fault location measurements.

Find Next Peak

Leads to the Find Next Pk Menu.
See page 3-173.

Return to Markers

Returns control to the Markers Menu.

MARKERS

Mkr Functions
Marker to Max Min

This menu is used to locate the maximum point on a trace.

When the tracking facility is turned on, the selected function as applied automatically at the end of each sweep, thus continually updating the maximum measurement.

Moves the active marker to the maximum point on the displayed trace.

Active Mkr to Maximum

Unselectable.

Active Mkr to Minimum

Applies tracking to the maximum function.

Tracking Maximum

Unselectable.

Tracking Minimum

Disables tracking.

Tracking Off

Returns control to the Mkr Funcs Menu.

Return to Markers

MARKERS

Mkr Functions
Find Next Peak

This menu enables the active marker to be placed at peaks in the trace.

Positions the active marker at the next peak in the trace to the right of its current position. The peak that the active marker moves to is defined to be the next local maximum visible on the screen to the right of the current active marker position. If a peak cannot be found, the active marker will remain at its current position.

As above, but the next peak to the left of the current active marker position is located.

Find Next Peak Right

Find Next Peak Left

Returns to Mkr Funcs

MARKERS

Set Up
Mkrs

Set Up Mkrs

This menu enables selected markers to be turned on or off and positioned on the display, and allows one of the markers to be selected as the active marker. A soft key is also provided to turn marker coupling between channels on or off.

Assign Active Mkrs 1-8

Used to select the marker which will act as the active marker.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	None
----------------	---	-----------	---	-------------	---	------------	------

Turns a selected marker on by entering the required marker number.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	None
----------------	---	-----------	---	-------------	---	------------	------

Turns a selected marker off by entering the required marker number.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	None
----------------	---	-----------	---	-------------	---	------------	------

Position Mkrs 1-8

Used to change the distance value (x-axis position) of a specified marker. A form is displayed on the screen containing numeric entry fields for the marker number and the marker position. The required marker is first selected, then its position is changed.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	None
----------------	---	-----------	---	-------------	---	------------	------

Marker Number

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

This soft key will only be selectable if at least one of the markers is turned on.

This soft key is unselectable for a fault location channel.

6 Digits Resolution

1 Hz Resolution

Mkr Coupling

Toggles marker coupling between channels on or off. When marker coupling is enabled, the positions of the markers on the active trace of all markers on all traces will track the disabled, markers may be positioned independently on each channel. The default setting for marker coupling is on.

Marker coupling can only be disabled when channel coupling is switched off (Channel Mode Menu).

Returns control to the Markers Menu.

Return to Markers

Fig. 3-50 MARKERS Menu - Fault Location Channel



FUNCTION GROUP KEYS - REFLECTION ANALYZER CHANNEL

[SOURCE] KEY

The [SOURCE] key provides access to the series of menus illustrated in Figs. 3-52 to 3-54, which are used to define and control all the source functions for a reflection analyzer channel.

The [Select Source Mode] soft key is used to access the Source Mode Menu, and the required mode is selected by pressing the appropriate soft key. Pressing [Return to Source] will return the user to the source menu corresponding to the selected mode. With the 6210 Reflection Analyzer connected, three additional source modes are available, accessed by pressing the [More] soft key in the Source Mode Menu. Pressing [Return to Prior Menu][Return to Source] returns the user to the appropriate source menu. There are therefore three extra source menus available for a reflection analyzer channel, one for each of the additional source modes. These are:

Linear List Frequency Sweep (sweep defined as a series of segments).

Waveguide Frequency Sweep (generates a non-linear sweep for waveguide measurements).

Low Pass Frequency Sweep (used when making low pass time domain measurements).

The last four soft keys of the Source Menu are the same for each of the source modes; the remaining four will vary to reflect the parameters required for the particular source mode.

Several of the source menus for a reflection analyzer channel are the same as for a scalar channel, and are fully described in the appropriate section. This section only covers new menus, or those that differ from the corresponding scalar channel menus.

SOURCE

Source (Linear List Frequency sweep, by specifying up to 12 sweep segments, with each segment consisting of a start and stop frequency and a number of measurement points. This allows measurement points to be concentrated around points of interest during reflection analyzer measurements. The system will keep a running check on the total number of points required, and will not be permitted to exceed the limit for the system (800 points).
See Fig. 3-52. This menu allows the operator to arbitrarily define the frequency sweep, by specifying up to 12 sweep segments, with each segment consisting of a start and stop frequency and a number of measurement points. This allows measurement points to be concentrated around points of interest during reflection analyzer measurements. The system will keep a running check on the total number of points required, and will not be permitted to exceed the limit for the system (800 points).
The menu will only be available if the 6210 Reflection Analyzer option is fitted, and if the currently active channel has been designated a reflection analyzer channel.

Set Up List Leads to the Set Up List Menu, which enables the sweep segments for the linear list sweep to be defined.
See page 3-181.

Set Output Power Used to change the output power of the source for the currently active channel.

Rotary Control Step Keys Numeric Pad Terminator Any

Sweep Time Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.
See page 3-34.

RF Toggles the RF output on or off.

Select Source Mode Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.
See page 3-35

Source Functions Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.
See page 3-36.

Source
(Waveguide
Sweep)

See Fig. 3-53. This menu allows the operator to set up the source for making measurements on a waveguide system, by defining the start and stop frequency values and the waveguide cutoff frequency.

The menu will only be available if the 6210 Reflection Analyzer is fitted, and if the currently active channel has been designated a reflection analyzer channel.

Leads to the Set Freqs Menu.
See page 3-183.

Set
Frequencies

Used to change the output power of the source for the currently active channel.

Set Output
Power

Rotary Control Step Keys Numeric Pad Terminator Any

Set Number
of Points

Used to change the number of measurement points generated by the sweep for the currently active channel, up to a maximum of 800 points.

Sweep
Time

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.
See page 3-34.

RF

Toggles the RF output on or off.

Select
Source Mode

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected.
See page 3-35.

Source
Functions

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.
See page 3-36.

Source
(Low Pass Sweep)

See Fig. 3-54. This menu allows the operator to set up the source for making measurements using the Low Pass Time Domain Transform. The menu will only be available if the 6210 Reflection Analyzer is fitted, and if the currently active channel has been designated a reflection analyzer channel.

In the low pass sweep mode, the frequency data points are harmonically related from DC to the stop frequency. That is, stop frequency = number of points × start frequency. The DC frequency response is extrapolated from the lower frequency data. The time domain functions are more fully described on page 3-197.

Set Stop Frequency

Used to set the stop frequency used in the low pass sweep. On entering a value, the stop frequency will be set to the nearest frequency that can be achieved within the constraints of a low pass sweep, and will always lie between the entered value and the maximum frequency of the instrument. In order to produce a valid low pass sweep with the selected stop frequency, the MTS may need to change the number of sweep points. This figure is indicated on the form that is displayed when this soft key is pressed, and is updated whenever the stop frequency is changed.

Rotary Control	✓	Step Keys	✓	Numeric Pad	✓	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

Set Output Power

Used to change the output power of the source for the currently active channel.

Rotary Control	✓	Step Keys	✓	Numeric Pad	✓	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

Set Number of points

Used to set the number of measurement points generated by the low pass sweep for the currently active channel. The number entered (up to a maximum of 800) will be set to the nearest lower value that satisfies the constraints of the low pass sweep with the existing stop frequency.

Sweep Time

Leads to the Sweep Time Menu, which enables the sweep time to be set up manually or automatically.

See page 3-34.

RF

Toggles the RF output on or off.

Select Source Mode

Leads to the Source Mode Menu, which enables CW operation or one of several sweep modes to be selected

See page 3-35.

Source Functions

Leads to the Source Funcs Menu, which enables several options to be selected, allowing the source to be set up according to the requirements of a particular measurement.

See page 3-36.

Add Segment

Used to add a new segment to the end of the list. The start frequency defaults to the stop frequency of the previous segment, and the stop frequency defaults to the maximum available source frequency. The number of points defaults to the remaining number of available points. If all the points have been allocated or there are twelve segments in the list, the [Add Segment] soft key will be unselectable.

After the value has been entered, the field to the right of the current one becomes the active field.

Number of points

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

Start/stop frequencies

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

The [⇐] and [⇒] soft keys are used to move between the fields of the segments when editing. The currently selected field is changed by entering the required value as follows:

An existing segment can be selected for editing using the [↵] and [⇐] soft keys. A new segment can be added to the end of the list by pressing the [Add Segment] soft key, or deleted by selecting it using the [↵] and [⇐] soft keys and then pressing the [Delete Segment] soft key.

Fig. 3-51 Linear List Sweep Specification Form

	START FREQ	STOP FREQ	No POINTS
1	250.000000 MHz	20.000000000 GHz	400
2	1.000000000 GHz	2.000000000 GHz	100
3	5.000000000 GHz	8.000000000 GHz	100
4	10.000000000 GHz	12.000000000 GHz	100
5	15.000000000 GHz	17.000000000 GHz	100

Set Up List

Each segment is defined by the following parameters:
Segment number, start frequency, stop frequency and number of points in the segment

See Fig. 3-52. This menu enables setting up of the sweep segments that define the linear list sweep. In addition to the soft key labels, a form is displayed on the screen showing the current sweep specification in segment order (Fig. 3-51).

Set Up List

Set Up List

SOURCE

Return to Source

Returns control to the Source Menu.

Delete Segment

Used to delete a segment from the list, after asking for confirmation. The segments below the deleted one will be moved upwards in the list and renumbered. If there is only one segment in the list the [Delete Segment] soft key will be unselectable.



Makes the next segment in the specification the active segment.



Makes the previous segment in the specification the active segment.



Makes the previous field in the segment the active field.



Makes the next field in the segment the active field.

Return to Source
Set Cutoff Frequency
Set Stop Frequency
Set Start Frequency
Set Freqs

See Fig. 3-53. This menu enables the operator to set up the source to provide a non-linear frequency sweep between the entered start and stop frequency values when making waveguide measurements. The MTS generates the required frequencies from a knowledge of the start and stop values and the waveguide cutoff frequency.

Used to change the start frequency of the source for the currently active channel to a value within the range permitted for the particular MTS.

Rotary Control Step Keys Numeric Pad Terminator 10+

Similar to the above but applies to the stop frequency of the sweep.

The cutoff frequency is the frequency below which propagation ceases in the waveguide. This parameter is required in order that the MTS can generate the non-linear frequency sweep that is required for waveguide measurements, and applies instrument wide.

Rotary Control Step Keys Numeric Pad Terminator 10+

Returns control to the Source Menu.

Set Frequencies

SOURCE

SOURCE

Select
Source Mode

More

See Fig. 3-52. This menu extends the options available from the main Source Mode Menu (page 3-35), and enables the MTS source to be set up to provide one of three frequency sweeps when performing reflection analyzer measurements.

Only one of the following options can be selected at a time; pressing one of the soft keys automatically de-selects the current mode and selects the new one. The parameters of the source for the selected mode can be set up after returning to the Source Menu.

Linear List
Freq Sweep

Sets the source to the linear list frequency sweep mode of operation, where the sweep is defined in a series of segments.

Waveguide
Sweep

Sets the source to the waveguide sweep mode of operation, which is used to generate the non-linear frequency sweep required for waveguide measurements.

Low Pass
Sweep

Sets the source to the low pass sweep mode of operation; this sweep mode must be selected when the Low Pass Transform is to be used.

Return to
Prior Menu

Returns control to the Source Mode Menu.

Fig. 3-52 SOURCE Menu - Reflection Analyzer Channel (Sheet 1)

LINEAR LIST
FREQUENCY
SWEEP MODE

SOURCE

Fig. 3-53 SOURCE Menu - Reflection Analyzer Channel (Sheet 2)

WAVEGUIDE SWEEP MODE

SOURCE

Fig. 3-54 SOURCE Menu - Reflection Analyzer Channel (Sheet 3)

LOW PASS SWEEP MODE

SOURCE

[MEASURE] KEY

The [MEASURE] key provides access to the series of menus illustrated in Fig. 3-57, which are used to define and set up the reflection analyzer measurement.

Many of the menus for a reflection analyzer channel are the same as for a scalar channel, and are fully described in the appropriate section. This section only covers new menus, or those that differ from the corresponding scalar channel menus.

Additional information on time domain measurements can be found in Appendix D.

Measure This menu and its sub-menus are used for setting up the reflection analyzer channel to

measure S11 and analyzing the results. S11 is the S-parameter representing the complex reflection coefficient (magnitude and phase) of the test device input.

If a stored measurement is being displayed, this soft key is used to restore the live measurement of S11.

Time Domain Used to toggle time domain measurements on or off. Using a mathematical technique (the inverse Fourier transform), frequency domain information is transformed into the time domain, with time as the horizontal display axis. Response values now appear separated in time or distance, as selected by the Display Domain Menu. *This soft key is unselectable if the sweep type is not linear list, low pass or waveguide, or the number of measurement points is less than 40.*

Averaging This function is the same as for a scalar channel.

Restart Averaging This function is the same as for a scalar channel.

Gating / Fencing Leads to the Gate/Fence Menu, which provides the facility for selectively removing responses in either frequency or time/distance domains. *This soft key is unselectable if the sweep type is not linear list, low pass or waveguide, or the number of measurement points is less than 40.*

Time Domain Functions Leads to the Time Dom Funcs Menu, which provides facilities for displaying measurements in the time (or distance) domain. *This soft key is unselectable if the sweep type is not linear list, low pass or waveguide, or the number of measurement points is less than 40.*

Display Zoom Leads to the Display Zoom Menu, which provides a magnification facility. *See page 3-197.*

More Leads to the Measure (More) Menu. *See page 3-202.*

Gating and fencing are methods by which responses in either the frequency or time/distance domain caused by features of the system under test in areas other than that of interest may be removed from the trace. Gating removes the effects of all features outside the specified range; fencing is the inverse of this and removes the effects of all features within the specified range. The gating/fencing functions applies per measurement.

This feature can be used, for example, to remove the effects of unwanted discontinuities in the time domain; the frequency response of the remaining discontinuities can then be viewed by switching back to the frequency domain. Two channels can be set up to display the time domain and frequency domain responses simultaneously. As adjustments are made in the time domain, the corresponding effect in the frequency domain can be observed in real time.

The start, stop and centre values can also be set to the domain value corresponding to the position of the active marker on the active measurement. This is done by pressing the appropriate soft key, positioning the active marker on the trace, then pressing the [X1] key on the numeric key pad. To set the span, press [Set Gate Span], position the delta marker to the appropriate point on either side of the centre, then press the [X1] key. (If necessary, enable the delta marker from the Markers Menu.)

If gating/fencing is enabled and the display domain is either time or distance for a trace, the gating parameters will be indicated on that trace by a set of three gating markers placed at the start, centre and stop values of the gate. The markers will also indicate whether gating or fencing is being applied. A 'G' flag or 'F' flag will be displayed in the trace information area if gating or fencing are being applied.

See Fig. 3-55 for an example of fencing on a measurement.

This soft key has a toggle action and is used to enable/disable the time domain gating/fencing function for the currently active measurement, without affecting previously set parameters.

Used to set the start value of the gating function. The value is entered as either time or distance, according to the domain that has been selected with the Display Domain Menu. If fencing has been selected this soft key is labelled [*Set Fence Start*], and is used to set the start value of the fencing function.

Time

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10-

Distance

Rotary Control √ Step Keys √ Numeric Pad √ Terminator 10+

Gating / Fencing
Set Gate
Start

Set Gate
Stop

Used to set the stop value of the gating function. The value is entered as either time or distance, according to the domain that has been selected with the Display Domain Menu. If fencing has been selected this soft key is labelled [*Set Fence Stop*], and is used to set the stop value of the fencing function.

Time
Rotary Control Step Keys Numeric Pad Terminator 10-

Distance
Rotary Control Step Keys Numeric Pad Terminator 10+

Set Gate
Cntr

Used to set the centre value of the gating function. The value is entered as either time or distance, according to the domain that has been selected with the Display Domain Menu. If fencing has been selected this soft key is labelled [*Set Fence Cntr*], and is used to set the centre value of the fencing function.

Time
Rotary Control Step Keys Numeric Pad Terminator 10-

Distance
Rotary Control Step Keys Numeric Pad Terminator 10+

Set Gate
Span

Used to set the span value of the gating function. The value is entered as either time or distance, according to the domain that has been selected with the Display Domain Menu. If fencing has been selected this soft key is labelled [*Set Fence Span*], and is used to set the span value of the fencing function.

Time
Rotary Control Step Keys Numeric Pad Terminator 10-

Distance
Rotary Control Step Keys Numeric Pad Terminator 10+

Gating
Mode

Leads to the Gating Mode Menu.
See page 3-196.

Gate / Fence
Shape


Leads to the G/F Shape Menu.
See page 3-196.

Return to
Measure


Returns control to the Measure Menu.

Fig. 3-55 Effect of Fencing on a Measurement

Response with Fencing Applied

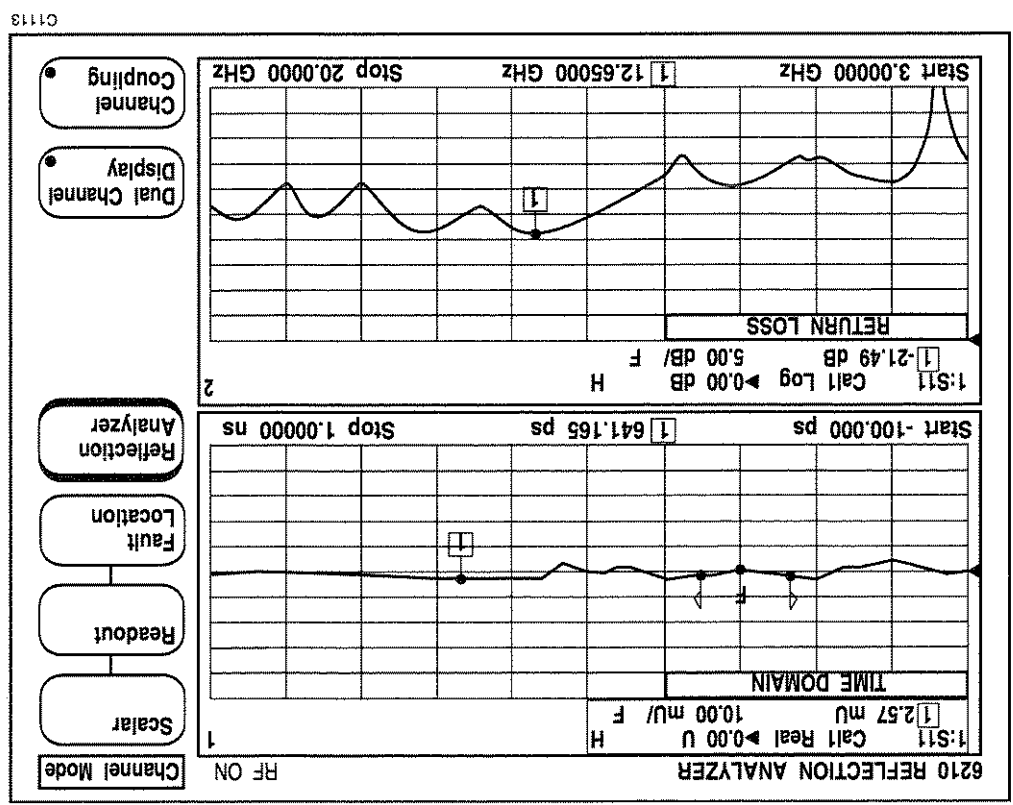

Normal Response

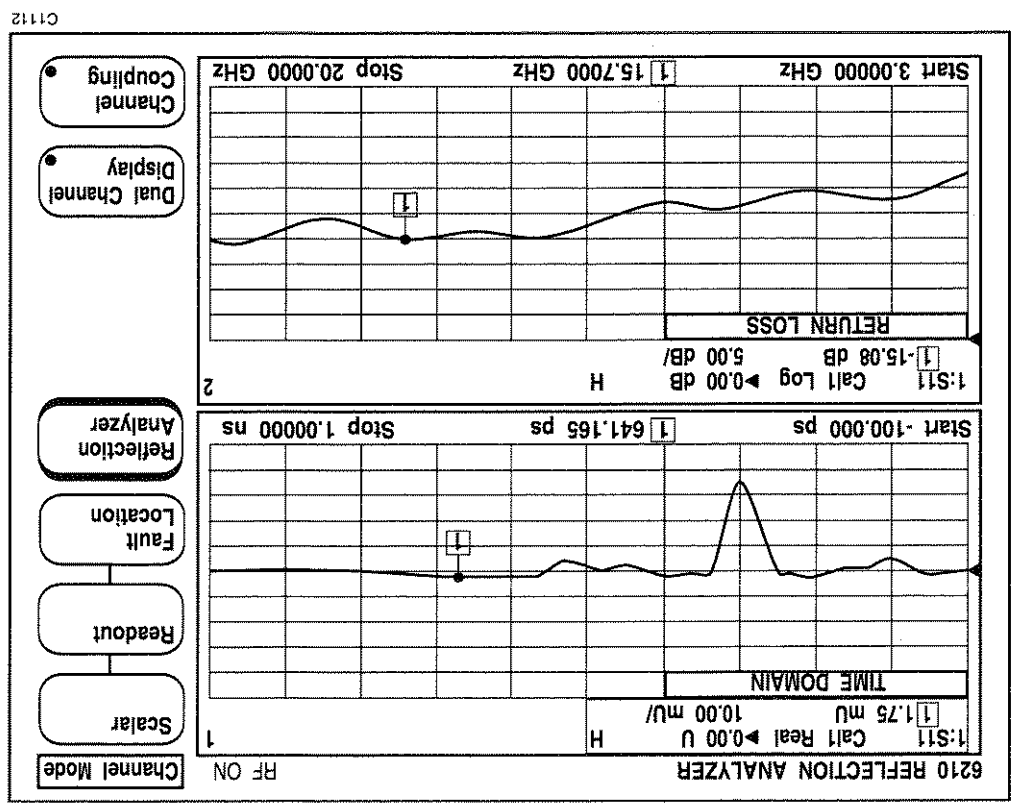

MEASURE	Gating / Fencing / Gating Mode
Gating Mode	<p>This menu is used to select whether gating or fencing is to be applied to the active measurement, and provides a gate/fence coupling function.</p>
Gating	<p>Selects the gating function.</p>
Fencing	<p>Selects the fencing function.</p>
Gate / Fence Coupling	<p>Enables gating/fencing parameters to be coupled across measurements and channels. The parameters that can be coupled are start/stop (centre/span), gate type and gate shape. When enable/disable function, however, will remain independent for each measurement. When gate coupling is on, the gating parameters for the active measurement will be copied to all other measurement setups. If any of the parameters for any of the measurements are subsequently updated while coupling is on, the other measurement setups will also be updated.</p>
Return to Gate / Fence	<p>Returns control to the Gate/Fence Menu.</p>
MEASURE	Gating / Fencing / Gate / Fence Shape
G / F Shape	<p>This menu allows the user to select the shape of the gate that will be applied to the measurement. The shape affects the degree to which information from one feature in the time (distance) domain can be filtered out without affecting the information obtained from a nearby feature.</p> <p>The gate can be considered as a bandpass filter in the time (or distance) domain, with the start and stop times as the -6 dB cutoff points. The shape of the gate is determined by the cutoff time, which is the time between the -6 dB cutoff point and the peak of the first sidelobe. Four gate shapes are available, each having different cutoff times, sidelobe levels and passband ripple.</p> <p>If the gate is set to minimum, this gives the minimum cutoff times but the highest sidelobe levels and passband ripple. The converse is true if it is set to maximum.</p>
Minimum	<p>Sets the gate shape to Minimum.</p>
Normal	<p>Sets the gate shape to Normal.</p>
Wide	<p>Sets the gate shape to Wide.</p>
Maximum	<p>Sets the gate shape to Maximum.</p>
Return to Gate / Fence	<p>Returns control to the Gate/Fence Menu.</p>

Time Dom Funcs

This menu enables the user to select one of two transform types that are available, and to display the response to two different types of stimulus. A windowing facility is also provided to aid interpretation of the displayed measurements.

Two types of time domain transform are available.

The band pass mode is used to characterise band-limited devices, by simulating the time domain response to an impulse input. The horizontal axis represents the time taken for an impulse launched at the test port to reach a discontinuity. This can be expressed as either time or distance, as selected with the Display Domain menu.

The band pass transform simply uses the frequency domain data as it is measured. This gives rise to time domain data with an imaginary component and, in addition, it is not possible to calculate the step response to a system with this type of transform.

The low pass transform is used to simulate a traditional time domain reflectometry measurement. It can display the time domain response to either a step or impulse input, which provides information to determine the type of discontinuities (resistive, capacitive or inductive) that are present. As for the band pass mode, the horizontal axis represents the travel time to the discontinuity, expressed as either time or distance.

With the low pass transform, the frequency data passed into the transform is extrapolated down to DC and assumed to be symmetrical about 0 Hz. This has the advantage that the symmetry of the frequency domain data produces time domain data with no imaginary component. A sub-menu provides functions to control the way in which the extrapolation to DC is performed.

The low pass mode is not as easy to use as band pass, because of the constraints placed on the parameters of a low pass sweep (see the Source Menu for a low pass sweep). The transform type and response type apply per channel. The default state is band pass transform/impulse response.

Used to transform band-limited frequency domain data into the time domain, with time (or distance) displayed on the horizontal axis. This mode will automatically be selected if the sweep type is Linear List or Waveguide when entering the time domain.

Band Pass Transform

Used to transform low pass frequency domain data into the time domain, with time (or distance) displayed on the horizontal axis. This soft key is only selectable if the sweep type is Low Pass.

Low Pass Transform

Used to display the response of the system under test to a simulated impulse input.

Impulse Response

Used to display the response of the system under test to a simulated step input. This soft key is only selectable if the Low Pass time domain transform has been selected.

Step Response

Leads to the DC Extrapolation Menu, which is used to select the DC extrapolation mode for the measurement.

DC Extrapolation

Leads to the Windowing Menu, which is used to apply windowing to the frequency domain data. See page 3-199.

Windowing

Display Domain

Leads to the Display Domain Menu.

Return to Measure

Returns control to the Meas Funcs Menu.

MEASURE

Time Domain Functions

DC Extrapolation

DC Extrap

This menu is used to control the way in which the extrapolation to DC is performed during a low pass transform. This function applies per measurement.

Automatic

Sets the DC extrapolation mode to automatic, where the DC reflection coefficient is calculated by extrapolating the existing data.

Matched

Used to set the DC reflection to zero.

User Set

Sets the DC extrapolation mode to manual; the following soft key can then be pressed to enable the DC reflection coefficient to be set by the operator.

Set DC Refl Coeff

Allows the DC reflection coefficient to be entered. This soft key is only selectable if manual mode has been selected, using the [User Set] soft key.

Return to T Dom Funcs

Returns control to the Time Dom Funcs Menu.

Rotary Control Step Keys Numeric Pad Terminator Any

Windowing

This menu is used to determine the degree to which the frequency domain data is filtered prior to conversion to the time domain. The purpose of windowing is to reduce the side lobes created by the transformation process so that the time domain response is easier to interpret when attempting to isolate and identify individual responses.

Windowing is needed because of the abrupt transitions in a frequency domain measurement at the start and stop frequencies. This band limiting causes ringing and overshoot in the time domain response, resulting in sidelobes being displayed either side of an impulse response, which can hide lower level responses.

In order to reduce the sidelobes, the low frequency and high frequency data are attenuated before being passed into the time domain transformation. Thus features affecting the frequencies that are attenuated to a high degree are not seen in the transformed data. In order to compensate for this various window shapes are available, which provide a trade-off between the degree to which they eliminate sidelobes and the range and degree of attenuation that is applied to the extreme frequencies of the sweep. Fig. 3-56 shows the effect on the display of two different window shapes.

This function applies per measurement.

Minimum (Order 0)

Provides essentially no window, and therefore results in the highest sidelobes.

Normal (Order 6)

Gives an optimum trade-off between reduced sidelobes and the attenuation of the extreme frequencies of the sweep.

Wide (Order 13)

Gives the minimum sidelobes, providing the greatest dynamic range, but with some attenuation at the extremes of the frequency range.

User Set

Enables the window to be set manually to any type between minimum and wide. The following soft key can then be pressed to enable the window order to be set by the operator.

Set Window Order


Allows the window order to be to any value between 0 and 13. This soft key is only selectable if manual mode has been selected, using the [User Set] soft key.

Return to T Dom Funcs

Returns control to the Time Dom Funcs Menu.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Fig. 3-56 Effect of Windowing on the Time Domain Response

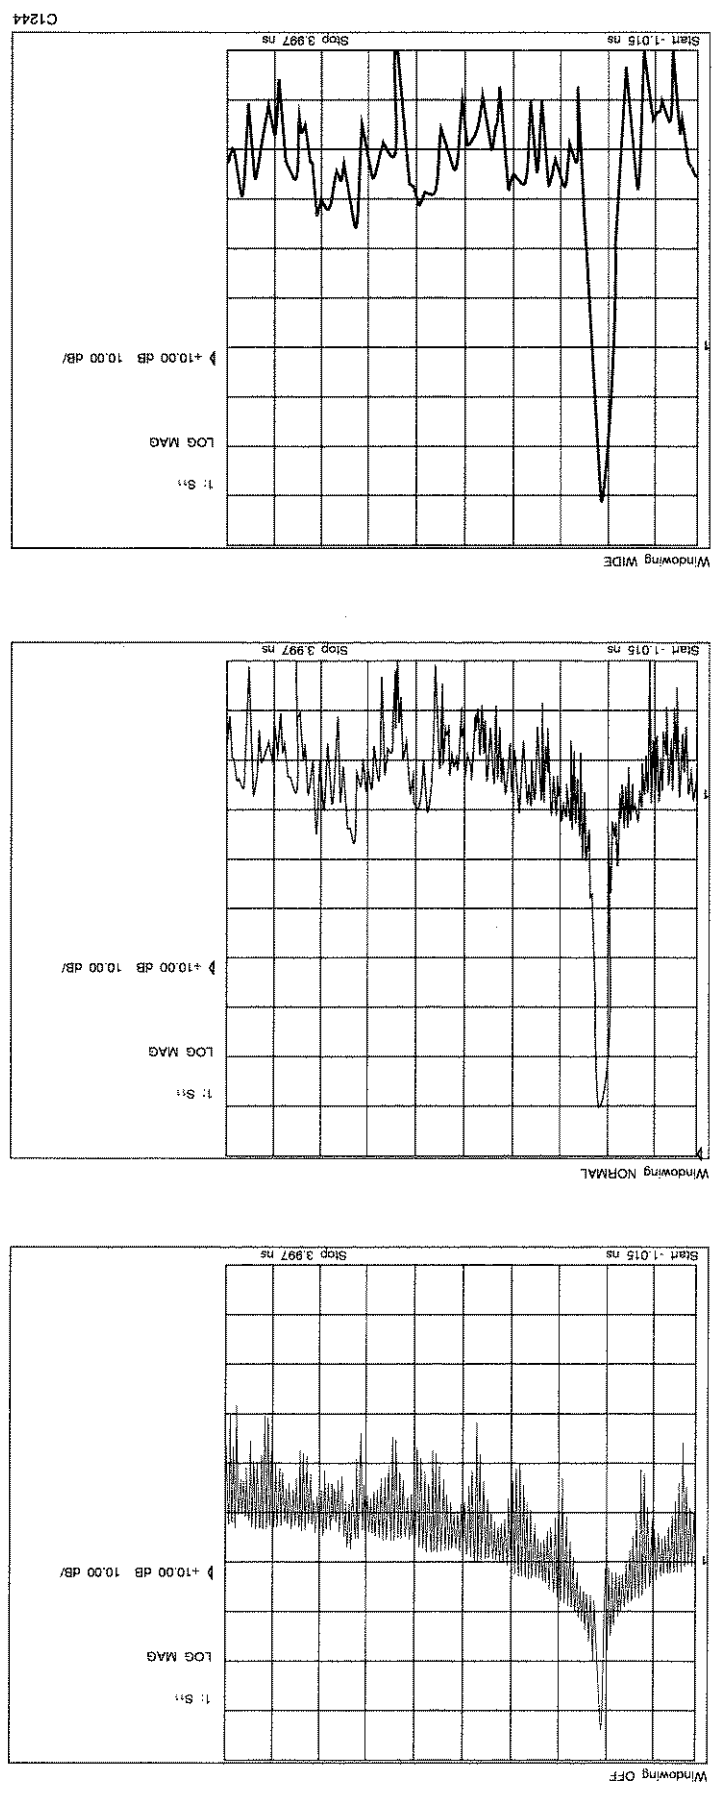

Display Domain This menu is used to select whether the time domain measurements are to be displayed in the time or distance domain. This setting also determines whether gate parameters (Gate / Fence Menu) are entered in units of time or distance.

For coax medium, distance units are converted from time units according to

$$\text{Distance} = \text{Time} \times c \times v_r$$

where c = speed of light in free space

v_r = relative velocity factor of the medium

The relative velocity for coax is set using the Character Dev Menu.

Measurements are displayed in the time domain, i.e. the horizontal axis represents time.

Time

Measurements are displayed in the distance domain, i.e. the horizontal axis represents

Distance

distance. The units are selected by the following two soft keys.

This soft key is unselectable if the medium is waveguide but the sweep type is not a

waveguide sweep.

Displays distance in metres. This applies instrument-wide.

Metres

This soft key will only be selectable if the distance domain has been selected.

Displays distance in feet. This applies instrument-wide.

Feet

This soft key will only be selectable if the distance domain has been selected.

Returns control to the Time Dom Funcs Menu.

Return to T Dom Funcs

Display Zoom



This menu enables the user to specify a sub-range of displayed domain values by entering the required start and stop values, or by specifying centre and span values. Note that the sweep of the source remains constant; the magnification is accomplished by processing the measurement results. The zoom function applies per channel.

The display start and stop frequencies can also be set to the frequency value corresponding to the position of the active marker on the active measurement. This is done by pressing the appropriate soft key, positioning the active marker on the trace, then pressing the [X1] key on the numeric keypad.

If the centre & span mode has been selected, the centre value is set by pressing [Set Display Cntr], positioning the active marker, then pressing the [X1] key on the numeric keypad. The span is set by pressing [Set Display Span], positioning the delta marker to the appropriate point either side of the centre, then pressing the [X1] key. (If necessary, enable the delta marker from the Marker Menu.)

Set Display Start

If the start/stop mode has been selected, this soft key is used to change the start value of the displayed domain. In the centre/span mode this soft key is labelled [Set Display Cntr], and is used to display the centre value of the displayed domain.

Frequency, Distance

Rotary Control Step Keys Numeric Pad Terminator 10+

Voltage, Current, Time

Rotary Control Step Keys Numeric Pad Terminator 10-

Set Display Stop

If the start/stop mode has been selected, this soft key is used to change the stop value of the displayed domain. In the centre/span mode this soft key is labelled [Set Display Span], and is used to display the span of the displayed domain.

Values are entered as above.

Displays the domain as values between the start and stop values as defined above.

Display as Start & Stop

Display as Cntr & Span

Displays the domain as a centre value and span.

Return to Meas Funcs

Returns control to the Meas Funcs Menu.

This menu is a continuation of the Measure Menu.

Measure (More)

Electrical Delay

Leads to the Elect Delay Menu, which allows an electrical delay to be introduced into the measurement.

See page 3-204.

Set Phase Offset

Used to apply a phase offset that is constant with frequency (rather than linear, as for electrical delay) to each measurement point of a live S11 measurement or a displayed memory. Values in the range $\pm 360^\circ$ can be entered, and applies to each measurement trace.

Rotary Control Step Keys Numeric Pad Terminator Any

Characterise Device

Leads to the Character Dev Menu, which enables characterisation of the device to be measured.

See page 3-205.

Smoothing

This function is the same as for a scalar channel. *This soft key is unselectable for polar/Smith formats.*

Limit Checking

This function is the same as for a scalar channel. *This soft key is unselectable for polar/Smith formats.*

General Set-up

This function is the same as for a scalar channel.

Return to Prior Menu

Returns control to the Measure Menu.

MEASURE

More Electrical Delay

Elect Delay

This menu enables an electrical delay to be introduced into the measurement, by adding or subtracting phase in proportion to frequency. The delay has the effect of shifting the zero degrees reference point away from the test port and this can be used to compensate for the electrical lengths of cables or adapters which have been added to the DUT. This parameter applies per measurement.

If the medium is coaxial, the delay can be entered either as a physical length (L) in metres or an electrical delay (D) in seconds. The relationship between L and D is given by:

$$D = L / cv_r$$

where v_r is the relative velocity of the medium, and $c = 3 \times 10^8$ m/s.

Alternatively, the medium can be characterised by its relative dielectric constant ϵ_r , from which v_r is calculated using:

$$v_r = 1 / \sqrt{\epsilon_r}$$

assuming a relative permeability of 1.

Values for v_r or ϵ_r are entered using the Character Dev Menu

For waveguides, the delay can only be entered in metres. The waveguide medium is characterised by its cutoff frequency (f_c), and is entered using the [Set Cutoff Frequency] soft key. Using this value, v_r is computed for each frequency above f_c , and the delay is calculated from the entered length using:

$$D = L / cv_r$$

The electrical delay in degrees at each frequency point f is -360 DF.

Used to set the electrical delay in metres. Values in the range ± 300 Mm can be entered.

Rotary Control Step Keys Numeric Pad Terminator 10-

Set Length

Used to set the electrical delay in seconds. Values in the range ± 1 s can be entered. This soft key is unselectable if the medium is waveguide

Rotary Control Step Keys Numeric Pad Terminator 10+

Set Time

Returns control to the Measure Menu.

Return to Measure

Character Dev

This menu is used to specify the characteristics of the system to be measured, and apply instrument-wide.

Set Char

Used to set the value of the system characteristic impedance, which is required for impedance and admittance calculations.

Rotary Control Step Keys Numeric Pad Terminator Any

Used to specify that the medium of the device to be measured is coax.

Coax Medium

Waveguide Medium

Used to specify that the medium of the device to be measured is waveguide.

Set Rel Velocity

Used to set the value of relative velocity for coaxial transmission medium. If the line consists of more than one section, and the relative velocities are significantly different, an 'average' value can be calculated for the composite line. The individual figures for relative velocity should be weighted to take account of the relative lengths of the sections, i.e. the longer the section, the greater the effect it has on the composite figure. (The relative velocity is 1 for most waveguides.)

This soft key is unselectable if the medium is waveguide.

Rotary Control Step Keys Numeric Pad Terminator Any

Set Dielec Constant

Used to set the value of the relative dielectric constant for coaxial transmission medium. For a multi-section line, a composite figure can be calculated as above.

This soft key is unselectable if the medium is waveguide.

Rotary Control Step Keys Numeric Pad Terminator Any

Set Cutoff Frequency

Used to set the waveguide cutoff frequency, and applies instrument-wide. This soft key is unselectable if the medium is coaxial.

Rotary Control Step Keys Numeric Pad Terminator 10+

Return to Measure

Returns control to the Measure Menu.



Fig. 3-57 MEASURE Menu - Reflection Analyzer Channel

MEASURE

Used to specify the cal kit that will be used for calibration, by entering the required identity number. A form is displayed listing the names and identity numbers of the available cal kits, stored internally or on a memory card. The [Page Up] and [Page Down] soft keys are used to select the previous and next page of entries in the list.

Rotary Control	X	Step Keys	X	Numeric Pad	✓	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

**Short, Open
Fixed Load**

Used to select a coaxial calibration which measures the following standards:
Short - Open - Fixed Load

If a waveguide calibration kit has been selected, this soft key will be labelled [Short, Offset Short, Load], and is used to measure the following standards:
Short - Offset Short - Load

**Short, Open
Sliding Load**

Used to select a coaxial calibration which measures the following standards:
Short - Open - Sliding Load

If a waveguide calibration has been selected, this soft key will be labelled [Short, Offset Short], and is used to measure the following standards:
Short - Offset Short 1 - Offset Short 2

Male

Specifies male type cal pieces for coaxial calibration.
Unselectable if a 7 mm calibration kit has been selected.
Labelled [Short, Offset, Sliding Load] if a waveguide cal kit has been selected.

Female

Specifies female type cal pieces for coaxial calibration.
Unselectable if a 7 mm calibration kit has been selected.
Not displayed if a waveguide calibration kit has been selected.

**Set Up
Calibration**

Leads to the Set Up Cal Menu
See page 3-214.

**Abort
Calibration**

Terminates the calibration process. The current calibration store will not be affected.

**Select
Cal Kit**

CAL

Reflection Analyzer Cal
Set Up Calibration

Set Up Cal

This menu is used to set up the calibration.

Calibrate at Test Port

Enables calibration to be carried out at the Test Port of the Reflection Analyzer.

Calibrate at End of Cable

Enables calibration to be carried out at the end of a coaxial cable connected to the Test Port.

Set Up Source

Leads to the top level Source Menu for the Reflection Analyzer Channel. However, the [RF] soft key is not present and [Source Functions] is replaced by a 'Return' key.

Averaging

Leads to the Averaging Menu.
See page 3-54.

AC Detection

This is the same as for the Measure Menu.
See page 3-62.

DC Detection

This is the same as for the Measure Menu.
See page 3-62.

Return to Reflect Cal

Returns control to the Reflect Cal Menu.

Rotary Control X Step Keys X Numeric Pad V Terminator 10-

Offset Length

The cal kit parameters are entered as follows:

The [Set Connector] soft key is used to select the connector type to be edited, (e.g. 3.5 mm, N-type). The parameter to be edited is indicated by a highlight box around the parameter's name, which can be moved up and down the list using the [↑] and [↓] soft keys. If appropriate, the [⇒] soft key can be used to change between the male and female columns. The serial numbers of the calibration pieces can be changed by selecting the appropriate field using the [↵] and [↵] soft keys and then using the [Set Serial No] soft key. This displays a text entry form containing the serial number, which can then be edited. When editing has been completed, the cal kit data can be saved using the [Save Cal Kit] soft key; it can be saved under a different name by means of the [Set Identity] soft key. The [Set Identity] soft key is displayed in place of [Set Serial No] when the selected parameter is the calibration kit identity.

- Wavguide cutoff frequency
- Load offset length
- Offset short 2 maximum frequency
- Offset short 2 minimum frequency
- Offset short 2 offset length
- Offset short 1 maximum frequency
- Offset short 1 minimum frequency
- Offset short 1 offset length
- Short offset length

Cal data for wavguide devices:

For sexed coaxial connectors, the data is displayed in two columns, one containing the male data and one the female data.

- Sliding load break frequency
- Fixed load break frequency
- Fixed load offset length
- 4 open fringing coefficients
- Open offset length
- Short offset length

Cal data for coaxial devices:

Cal data as follows:
Connector type (e.g. Coaxial, 3.5mm)
Cal kit id number and name

The cal kit to be edited must first be selected. When the [Select Cal Kit] soft key is pressed, a form is displayed showing the names and identity numbers of the available cal kits. Once a cal kit has been selected, another form is displayed containing the following details:

This menu is used to edit a cal kit data store. Each store is associated with a cal kit, and contains the data which is used to characterize the standards comprising the cal kit.

Edit Cal Kit

Edit Cal Kit Data

CAL

Frequency
Rotary Control X Step Keys X Numeric Pad V Terminator 10+

Fringing Coefficient Mantissa
Rotary Control X Step Keys X Numeric Pad V Terminator Any

Fringing Coefficient Exponent
Rotary Control X Step Keys X Numeric Pad V Terminator Any

Used to select the cal kit to be edited by entering the required identity number.

Select Cal Kit

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Leads to the Connector Menu.

Set Connector

Used to change the serial number of the selected calibration piece. A text entry form is displayed on the screen, which is the same as that described for the Screen Title Menu (page 3-276).

Set Serial No

If the selected parameter is the calibration kit identity, this soft key is labelled *Set Identity*. A text entry form is displayed enabling the identity to be edited. *This soft key is only selectable if the selected parameter is a cal kit identity or serial number.*

Used to select between the male and female data columns (for sexed coaxial connectors). If the currently selected column is female, this soft key will be labelled [=]. *This soft key will only be selectable for sexed coaxial connectors.*

=>

Makes the previous entry in the table the active entry.

⇩

Makes the next entry in the table the active entry.

⇧

Causes the cal kit data to be saved in non-volatile memory.

Save Cal Kit

Returns control to the Cal Menu.

Return to Cal


Connector	This menu is used to specify the type of connectors used on the standard devices of the cal kit to be used for calibration.
3.5 mm	Specifies 3.5 mm coaxial connectors.
N	Specifies N-type coaxial connectors.
7 mm	Specifies 7 mm coaxial connectors.
Waveguide	Specifies waveguide connectors.
User	Specifies a connector type defined by the user. Parameters for user-defined connector types are entered using the Edit Cal Kit Menu (see page 3-215).
Return to Edit Cal Kit	Returns control to the Edit Cal Kit Menu.

CAL

Edit Cal Kit Data

Set Connector



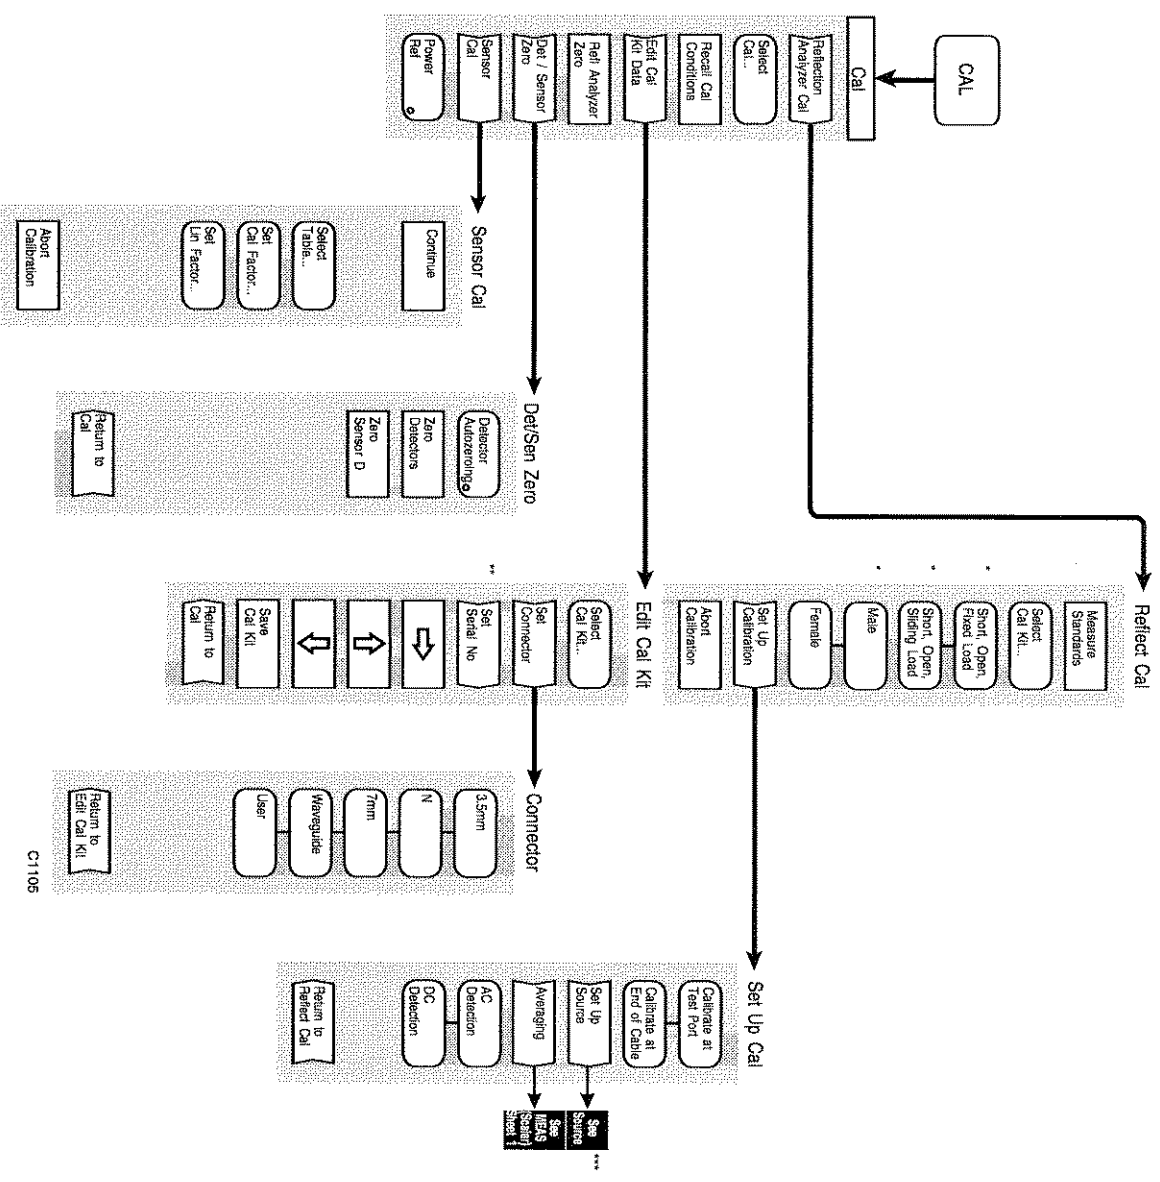

With a waveguide calibration kit, these soft keys are labeled:

- Short, Offset Short, Load
- Short, Offset Shorts
- Short, Offset Sliding Load

**When the cal kit identify field is selected this soft key is labeled:

- Set Identify

***This is the same as the source menu structure for the reflection analyzer. However the "RF" key and the "Source Functions" keys have been removed with the letter being replaced by a "Return" key.


Fig. 3-59 CAL Menu - Reflection Analyzer Channel

CAL

Fig. 3-59 CAL Menu - Reflection Analyzer Channel



Fig. 3-60 FORMAT Menu - Reflection Analyzer Channel

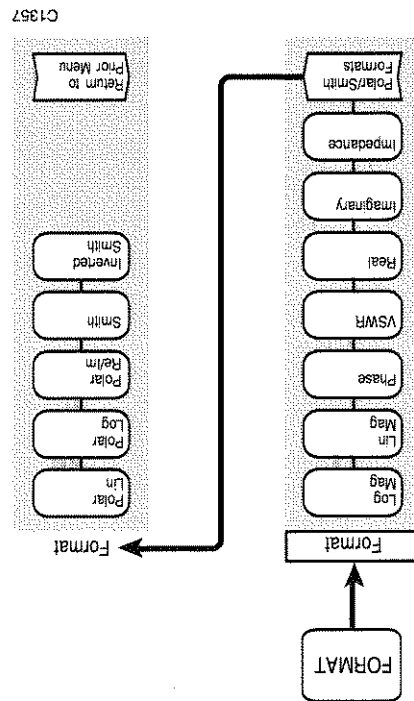

C1357

The [FORMAT] key enables the reflection analyzer measurement to be displayed in the required format, i.e. the units in which the response (vertical axis) is scaled.

[FORMAT] KEY

Format

This menu enables one of several display formats to be selected.

In the following, the complex reflection coefficient at the test device input (S_{11}) is represented by Γ , where $\Gamma = \frac{\text{reflected voltage}}{\text{incident voltage}}$. The following display formats are available:

Cartesian formats

Linear magnitude of complex reflection coefficient, $|\Gamma|$
 Log magnitude of Γ
 Phase angle of Γ in degrees
 Real part of Γ
 Imaginary part of Γ

SWR (= $(1 + |\Gamma|)/(1 - |\Gamma|)$).

Input impedance $\left(Z_0 \frac{1 + \Gamma}{1 - \Gamma} \right)$

Polar/Smith formats

Polar linear, i.e. $|\Gamma|$, phase angle
 Polar log, i.e. $20 \log |\Gamma|$, phase angle
 Polar Re/Im, i.e. $\text{Re}(\Gamma)$, $\text{Im}(\Gamma)$
 Smith chart
 Inverted Smith chart

If a low pass transform has been selected the phase and imaginary formats are not available. This is because these formats would present no information, since the imaginary part of the reflection coefficient would always be zero with a low pass transform.

If a low pass transform is selected while in the time (or distance) domain, and the current format is not permitted (i.e. Phase or Imaginary), a warning will be displayed and the format will be set to Real.

The format selected applies per measurement. It is not possible to display both a cartesian format and a polar/Smith format within the same channel.

Displays log magnitude of $|\Gamma|$ in dB, i.e. $20 \log_{10} |\Gamma|$. Note that this is the same as return loss, but expressed as a negative quantity.

Log Mag

Displays linear magnitude of complex reflection coefficient, $|\Gamma|$.

Lin Mag

Displays phase angle of Γ in degrees, i.e. $\tan^{-1}(\text{Im}(\Gamma)/\text{Re}(\Gamma))$.
 This soft key is unselectable if the low pass time domain option has been selected.

Phase

Displays VSWR, i.e. $(1 + |\Gamma|)/(1 - |\Gamma|)$.

VSWR

Displays the real part of Γ .

Real

Displays the imaginary part of Γ .

Imaginary

This soft key is unselectable if the low pass time domain option has been selected.

Impedance

Polar/Smith Formats

Leads to a sub-menu, which enables various types of polar/Smith formats to be selected. This soft key is unselectable if time domain is turned on.

Unselectable unless the measurement is a low pass step response time domain one.

Displays the input impedance, i.e. $Z_0 \frac{1+T}{1-T}$.

FORMAT

Polar/Smith Formats

This is a continuation of the previous menu, and allows polar or Smith formats to be selected.

Format (Polar/Smith Formats)

Polar and Smith formats display the same measurement (i.e. reflection coefficient, T), but it is interpreted differently in each case by superimposing a different graticule and/or by processing the marker readout in a different way. Examples of these formats are shown in Fig. 3-61.

Displays the reflection coefficient in polar format; each point corresponds to a particular value of both magnitude and phase. Quantities are read vectorially: the magnitude at any point is determined by its displacement from the centre, and the phase by the angle anti-clockwise from the positive x-axis.

The graticule comprises five equally spaced concentric circles. Magnitude is scaled linearly, from zero at the centre to the value represented by the outer circle. This value is equal to the reference level, which is set using the [SCALING] key. Markers can be used to obtain a readout of magnitude and phase corresponding to any point on the trace.

This provides a similar display to the polar lin format, except that the marker readout of magnitude is $20 \log |T|$.

Polar Log

This provides a similar display to the polar lin format, except that the marker readout gives $\text{Re}(T)$ and $\text{Im}(T)$.

Polar Re/Im

Provides impedance measurements in the form of a Smith chart. The Smith chart is essentially a polar diagram on which are superimposed loci of constant resistance and reactance, thus enabling the impedance at any point along a transmission line to be obtained. These values are normalized to the characteristic impedance of the system. As for the polar format, the radius corresponds to the magnitude of the reflection coefficient, and the angle corresponds to the phase of the reflection coefficient. The marker readout of impedance ($R+jX$) is given in units of resistance (R) and reactance (X) (i.e. the real and imaginary parts of the complex impedance).

Smith

If a reference level value of less than 0.1 is set (using the Scaling Menu) while in this mode, the display will revert to the polar format.



This format is similar to above, but is used for admittance measurements, where the loci now represent constant conductance (G) and susceptance (B). The marker readout of admittance ($G+jB$) is given in terms of these quantities.

Inverted Smith

Return to Prior Menu

Returns control to the Format Menu.

Fig. 3-61 Typical Polar and Smith Format Displays

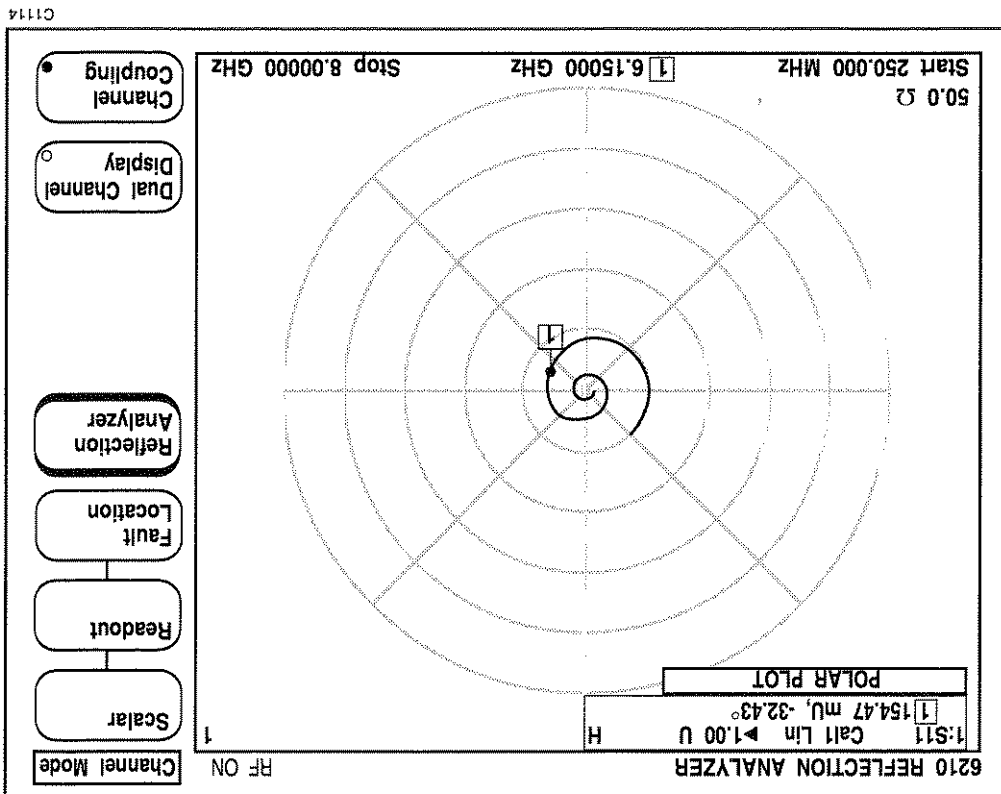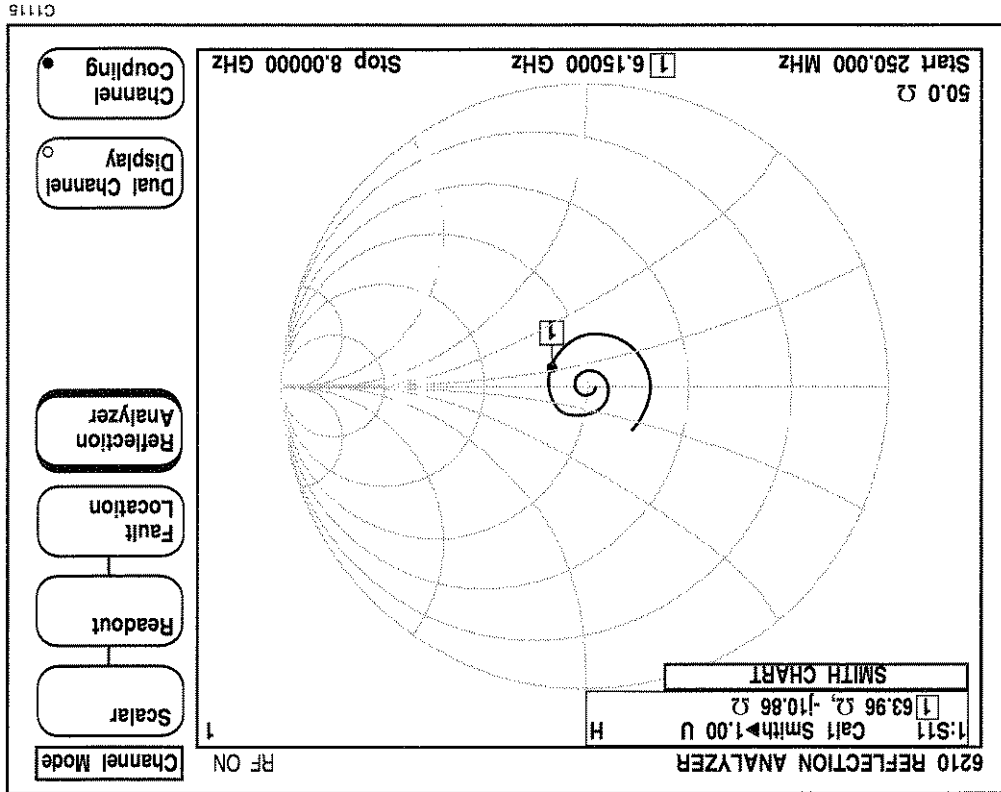

[SCALING] KEY

The [SCALING] key provides a menu which enables the user to adjust the positioning and scaling of the currently active trace, or to allow the instrument to set the scaling automatically.

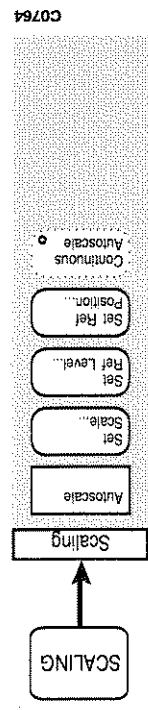


Fig. 3-62 SCALING Menu - Reflection Analyzer Channel

Scaling

This menu enables the user to set the reference level and scaling for a trace.

Cartesian Formats

The reference position is the position on the vertical axis that remains fixed during scaling. This is indicated on the screen by the Reference Position Indicator (see the 'Display' section). The reference level is the value corresponding to the position of the Reference Position Indicator on the vertical scale, and is displayed in the relevant trace information area. The scaling value is the number of units per vertical division.

The default values for reference level and scaling factor for each type of format are listed below.

Reference Level*	Scale Factor
Lin magnitude 1 (line 10)	0.1 /div
Log magnitude 0 dB (line 10)	5 dB/div
Phase 0° (line 5)	45°/div
Real 0 (line 5)	0.2 /div
Imaginary 0 (line 5)	0.2 /div
VSWR 1 (line 1)	1 /div
Impedance 50 Ω (line 5)	1.00 Ω/div

* Line 0 = bottom; line 10 = top.

Polar/Smith Format

The graticule for the polar format comprises five equally spaced concentric rings, with radial lines at 45° intervals. The reference level is the linear magnitude value corresponding to the outer circle. The scaling value is the linear magnitude value corresponding to the innermost circle. Since the graticule always consists of five circles, the scaling value is always one fifth of the reference level. Thus either the reference level or scaling value may be entered, and the instrument will calculate the other value.

For Smith formats, only the outer concentric ring is displayed, but the method of scaling is the same as for the polar display.

The default values for reference level and scaling factor for polar/Smith formats are listed below.

Reference Level	Scale Factor
All formats 1 (magnitude of ref. coefficient)	0.2

The parameters in this menu apply per trace.

Continuous Autoscale

This soft key is unselectable.

Rotary Control Step Keys Numeric Pad Terminator

This soft key is unselectable for Smith/polar formats.

Set Ref Position

Used to set the reference position for a trace. The reference position may be placed on any of the 11 horizontal lines of the graticule. The reference level can also be set to the response measured at the active marker position, by pressing this soft key followed by the [X1] key on the numeric keypad.

Set Ref Level

Used to set the reference level for a trace. Numeric entry as above.

Rotary Control Step Keys Numeric Pad Terminator 10-

Smith/Polar Formats

Rotary Control Step Keys Numeric Pad Terminator Any

VSWR Format

Rotary Control Step Keys Numeric Pad Terminator Any

Phase Format

Rotary Control Step Keys Numeric Pad Terminator 10-

Lin Magnitude, Real and Imaginary Formats

Rotary Control Step Keys Numeric Pad Terminator Any

Log Magnitude Format

Set Scale

Used to set the scale factor for a trace.

Smith/polar formats The smallest reference level value will be selected from a 1,2,5 sequence such that the whole of the measurement lies within the outer circle.

unchanged. level will be a multiple of the chosen scaling factor. The reference position will remain scale factor will be selected from a 1,2,5 sequence. The value chosen for the reference trace occupies approximately 80% of the graticule height. The value chosen for the Allows the instrument to determine optimum values of scale and reference level, such that

Autoscale

Cartesian formats

[MARKERS] KEY

The MTS can display up to eight markers per trace, with each marker identified by a number. Any one of these can be designated the active marker, indicated by a box around the number to distinguish it from the normal markers. The active marker can be moved along the x-axis using the step keys, rotary control or by keyboard entry. The step keys and keyboard entry are only available through the Position Active Mkr and Position Delta Mkr functions of the Markers Menu. The rotary control can be used to move the active marker at any time whilst it is displayed, provided that no other from of numeric entry is active. The domain value (x-axis position) of the active marker is displayed below the graticule, and the measured response at this position is displayed in the relevant trace information area. For Polar/Smith formats, a complex (2 part) number will be displayed.

The delta marker mode provides an additional marker, designated the delta marker, and is represented by Δ on the display. In this mode, the domain value of the active marker is relative to the delta marker position. The measured response is relative to the response at the delta marker position, i.e.

$$\text{Domain value} = \text{Active Marker position} - \text{Delta Marker position}$$
$$\text{Response} = \text{Active Marker response} - \text{Delta Marker response}$$

Note that the distance (or time) values indicated by the active marker represent the actual distance (or time) to a discontinuity, not the round trip distance.

The marker menus are shown in Fig. 3-63.

A tracking facility is available for the max/min, peak-to-peak and bandwidth functions. This enables the function to be automatically applied at each measurement update (i.e. at the end of each sweep).

Markers

This menu provides soft keys for setting up markers and using them to perform various types of measurement.

Active Mkr

Toggles the active marker on or off. Turning off the active marker also turns off the delta marker. Once the active marker is turned on it can be positioned any where along the graphic using the rotary control. To set the active marker to a specific domain value using the numeric keypad the [Position Active Mkr] soft key must be selected.

Place Mkr at Active

Used to place a marker at the active marker position by entering the required number.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	None
----------------	---	-----------	---	-------------	---	------------	------

Position Active Mkr

Used to change the domain value (x-axis position) of the active marker, by entering the new value as follows:

Frequency

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

Power

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

Voltage/current

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10-
----------------	---	-----------	---	-------------	---	------------	-----

Time

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10-
----------------	---	-----------	---	-------------	---	------------	-----

Distance

Rotary Control	√	Step Keys	√	Numeric Pad	√	Terminator	10+
----------------	---	-----------	---	-------------	---	------------	-----

This soft key will only be selectable if the active marker is turned on.

Delta Mkr

Toggles the delta marker on or off. Turning on the delta marker also turns on the active marker.

Position Delta Mkr

Used to change the position of the delta marker, using the same method as for the active marker.

This soft key will only be selectable if the delta marker is turned on.

All Mkrs Off

Turns off all markers for the currently active trace.

Mkr Functions

Leads to the Mkr Funcs Menu, which enables various measurement functions to be carried out by means of the active marker and delta marker.
See page 3-230.

Set Up Mkrs

Leads to the Set Up Mkrs Menu, which allows the user to activate and position selected markers.
See page 3-232.

Mkr Funcs
 This menu leads to sub-menus for locating the maximum and minimum points on a trace, measuring the peak-to-peak ripple, searching for a specified response value, performing bandwidth measurements, measuring the slope of a trace, and locating multiple peaks in the time domain response.

Marker to Max/Min
 Leads to the Max Min Menu
 See page 3-98.

dB/Octave dB/Decade
 Leads to the dB/O dB/D Menu.

This soft key is only selectable if the domain is frequency, start frequency is < stop frequency, source mode is not linear list sweep, format is log magnitude, and time domain is turned off.
 See page 3-98.

Peak to Peak
 Leads to the Peak to Peak Menu, which enables measurement of peak-to-peak ripple.
 This soft key is only selectable if the format is log magnitude.
 See page 3-99.

Search
 Leads to the Search Menu, which is used to locate a response value on the screen.
 This soft key is unselectable for polar and Smith format measurements.
 See page 3-231.

Bandwidth
 Leads to the Bandwidth Menu, which is used for bandwidth measurements.
 This soft key is only selectable if the format is log magnitude, the source mode is a frequency sweep and time domain is turned off.
 See page 3-101.

Find Next Peak
 Leads to the Find Next Pk Menu.
 This soft key is only selectable if time domain is turned on.
 See page 3-231.

Return to Markers
 Returns control to the Markers Menu.

MARKERS

Mkr Functions

Search

Search

This menu is used for locating a response value on the trace that has previously been specified by the user. The search facility can also be used in delta marker mode.

Search Left

Causes the system to search left from the current active marker position in order to find the response value specified with the [Set Search Value] soft key. The active marker will be placed at this position. If two adjacent measurement points encompass the search value, the active marker will be placed at the measurement point which is nearer to the search value. If the search value cannot be found, a message will be displayed indicating this, and the active marker will not be moved.

Search Right

As above, but the search direction is right.

Set Search Value

Sets the value that will be searched for.

Log Magnitude Format

Rotary Control Step Keys Numeric Pad Terminator Any

Lin Magnitude, Real and Imaginary Format

Rotary Control Step Keys Numeric Pad Terminator 10-

Phase Format

Rotary Control Step Keys Numeric Pad Terminator Any

VSWR Format

Rotary Control Step Keys Numeric Pad Terminator Any

Return to Mkr Funcs

Returns control to the Mkr Funcs Menu.

Find Next Pk

This menu enables the active marker to be placed at peaks in the time domain trace.

Find Next Peak Right

Positions the active marker at the next peak in the trace to the right of its current position. The peak that the active marker moves to is defined to be the next local maximum visible on the screen to the right of the current active position. If a peak cannot be found, the active marker will remain at its current position.

Find Next Peak Left

As above, but the next peak to the left of the current active marker position is located.

Returns to Mkr Funcs

Returns control to the Mkr Funcs Menu.

MARKERS

Mkr Functions

Find Next Peak

Set Up Mkrs

This menu enables selected markers to be turned on or off and positioned on the display, and allows one of the markers to be selected as the active marker. For frequency sweep measurements, the menu provides two alternative display resolutions for marker positions. A soft key is also provided to turn marker coupling between channels on or off.

Assign Active
Mkr 1-8

Used to select the marker which will act as the active marker.

Rotary Control Step Keys Numeric Pad Terminator None

Mkr 1-8
On

Turns a selected marker on by entering the required marker number.

Rotary Control Step Keys Numeric Pad Terminator None

Mkr 1-8
Off

Turns a selected marker off by entering the required marker number.

Rotary Control Step Keys Numeric Pad Terminator None

Position
Mkr 1-8

Used to change the domain value (x-axis position) of a specified marker. A form is displayed on the screen containing numeric entry fields for the marker number and the marker position. The required marker is selected then its position is changed.

This soft key will only be selectable if the active marker is turned on.

Marker Number

Rotary Control Step Keys Numeric Pad Terminator None

Marker Position (Frequency Domain)

Rotary Control Step Keys Numeric Pad Terminator Any

Marker Position (Power Domain)

Rotary Control Step Keys Numeric Pad Terminator Any

Marker Position (Voltage or Current Domain)

Rotary Control Step Keys Numeric Pad Terminator 10-

Marker Position (Time Domain)

Rotary Control Step Keys Numeric Pad Terminator 10-

Marker Position (Distance Domain)

Rotary Control Step Keys Numeric Pad Terminator 10+

Sets the displayed resolution for marker frequency information to six digits. This soft key is only selectable when the domain is frequency.

6 Digits
Resolution

**1 Hz
Resolution**

Sets the displayed resolution for marker frequency information to 1 Hz.
This soft key is only selectable when the domain is frequency.

**Mkr
Coupling**

Toggles marker coupling between channels on or off. When marker coupling is enabled, the positions (i.e. domain or x-axis values) of all markers on all traces will track the positions of the markers on the active trace of the active channel. When marker coupling is disabled, markers may be positioned independently on each channel. The default setting for marker coupling is on.

Marker coupling can only be disabled when channel coupling is switched off (Channel Mode Menu).

Returns control to the Markers Menu.

**Return to
Markers**

Fig. 3-63 MARKERS Menu - Reflection Analyzer Channel

MARKER

SYSTEM GROUP KEYS

[COPY] KEY

The [COPY] key provides access to the menus shown in Fig. 3-64, which enables hard copy output to be obtained using a suitable parallel printer or a GPIB plotter with HPGL language (e.g. HP7470A/7475A). The system allows further measurements to be made while printing or plotting is in progress. Refer to Chapter 1 for information on recommended printers and plotters for the MTS.

Notes

- (1) If a Canon B110 printer is used, DIP switches 9, 7 and 11 must be set to OFF.
- (2) If an HP Deskjet printer is used, DIP switch Bank B number 1 must be set up (66 lines/page).
- (3) Pressing the [COPY] key on power up will result in the instrument's build state being printed out on the printer.


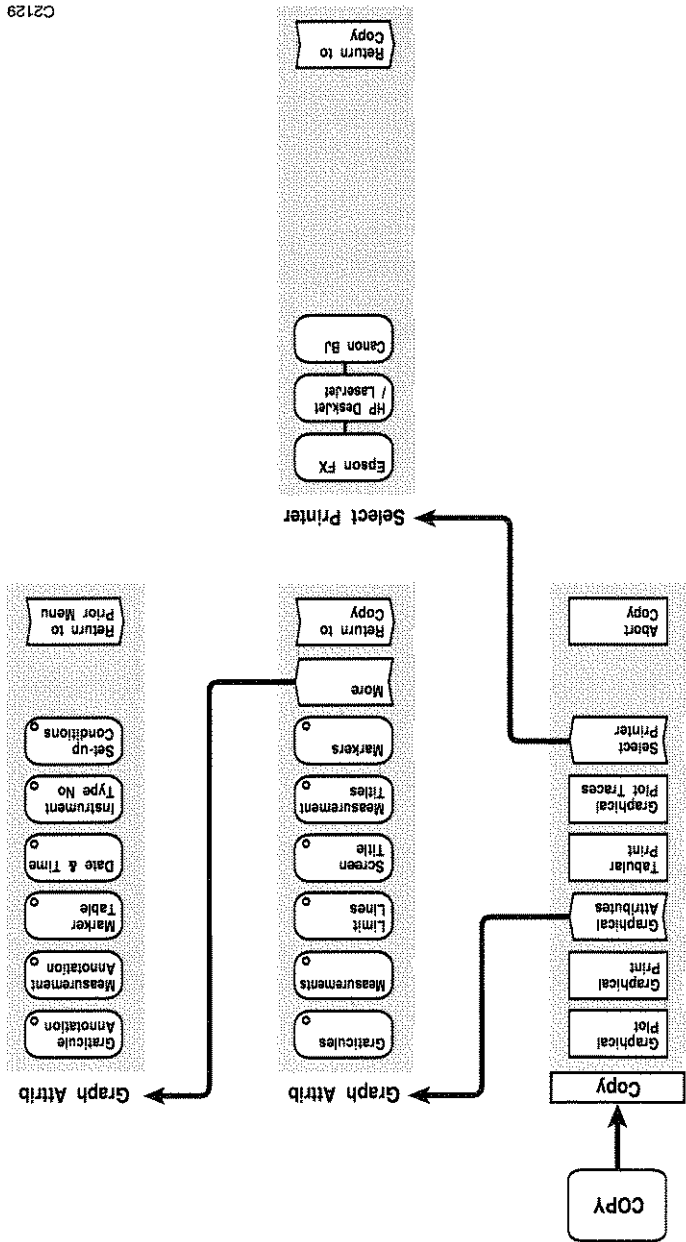


Fig. 3-64 COPY Menus

C2129

Fig. 3-65 Typical Plotter Output

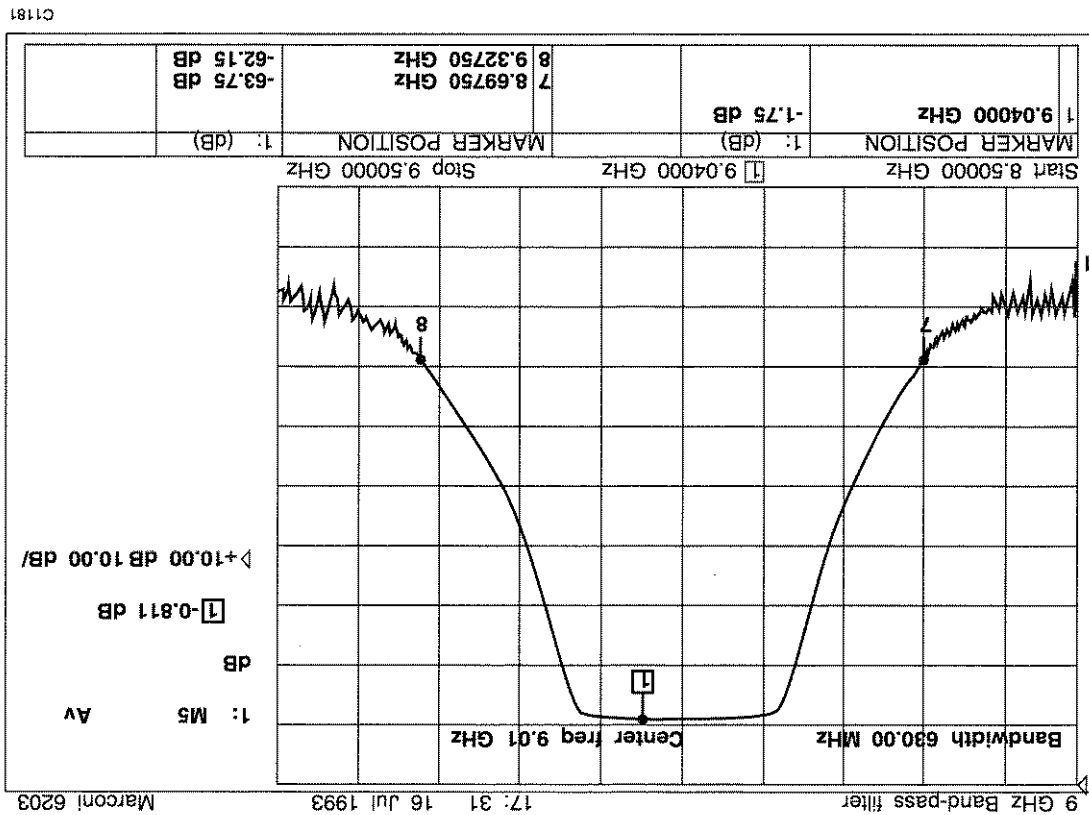

Copy
Abort

Terminates output of information to the device being used.

Printer
Select

Leads to the Select Printer Menu, which allows the user to select which type of printer is connected to the Parallel Printer port (i.e. Epson FX, HP Deskjet/Laserjet or Canon BJ series).

Tabular
Print

Used for tabular output of trace data.

Graphical
Plot Traces

Initiates plotting of only the currently displayed traces(s), without any attributes.

Graphical
Attributes

Leads to the Graph Attrib Menu, which allows the user to determine which information is output to the printer or plotter.
See page 3-239.

Graphical
Print

Initiates output of graphics information to the printer. The information that is printed is determined by the selection made using the menu accessed via the [Graphical Attributes] soft key.

Graphical
Plot

Initiates output of graphics information to the plotter. The information that is plotted is determined by the selection made using the menu accessed via the [Graphical Attributes] soft key. Note that only pens 1, 2 and 3 in a multi-pen carousel are used during plotting.

Copy

The Copy Menu enables printing/plotting of measurements.

C1181

All of the soft keys in this menu (except for *[More]* and *[Return to Copy]*) perform an on/off action, and are used to specify which of the elements of the display are to be sent to the output device.

The graphical data available for plotting/printing depends on what is being displayed on the screen at the time the plot/print command is received. For example, if bandwidth or peak-to-peak measurements have been made, the displayed results will appear on the plot. The appearance of the plot/print will resemble that of the screen display with the addition of information to identify traces and their corresponding limit lines and measurement titles so that a monochrome plot/print (or photocopy) may be easily interpreted.

Graticules

Specifies printing/plotting of graticules.

Measurements

Specifies printing/plotting of measurements (traces or readings).

Limit Lines

Specifies printing/plotting of limit lines.

Screen Title

Specifies printing/plotting of the screen title. The screen title applies to the whole display, and appears at the top of the screen. Screen titles can be entered and switched on or off by using the Titles Menu (*[UTILITY]/Titles*).

Measurement Titles

Specifies printing/plotting of measurement titles. A channel may display up to two measurement titles, one for each trace or readout. Measurement titles can be entered and switched on or off by using the Titles Menu (*[UTILITY]/Titles*). A measurement title will be displayed only when both it and the corresponding trace or readout are switched on.

Markers

Specifies printing/plotting of markers.

More

Leads to the menu on the following page which is a continuation of this one.

Return to Copy

Returns control to the Copy Menu.

Graph Attrib

This menu is a continuation of the Graph Attrib Menu.

Graphic Annotation

Specifies printing/plotting of the graphic annotation (the domain values at the bottom of the display).

Measurement Annotation

Specifies printing/plotting of measurement annotation. For a scalar channel this comprises the data within the trace information area and the Pass/Fail indication. For a readout channel, the readout plus the associated information is output to the printer/plotter.

Marker Table

Specifies printing/plotting of the marker summary table.

Date & Time

Specifies printing/plotting of the date and time.

Instrument Type No

Specifies printing/plotting of the instrument type number.

Set-up Conditions

Specifies printing/plotting of the following set-up conditions:
Source output power (not applicable for power sweep)
AC/DC detection (not applicable for readout channels)
Sweep time (only applicable for swept source modes)
Number of sweep points (only applicable for swept source modes)

Return to Prior Menu

Returns control to the first Graph Attrib Menu.

[SAVE/RECALL] KEY

The [SAVE/RECALL] key provides access to the menus shown in Fig. 3-66, which enables the current instrument settings or measurement traces to be saved or recalled to or from a memory location specified by the user.

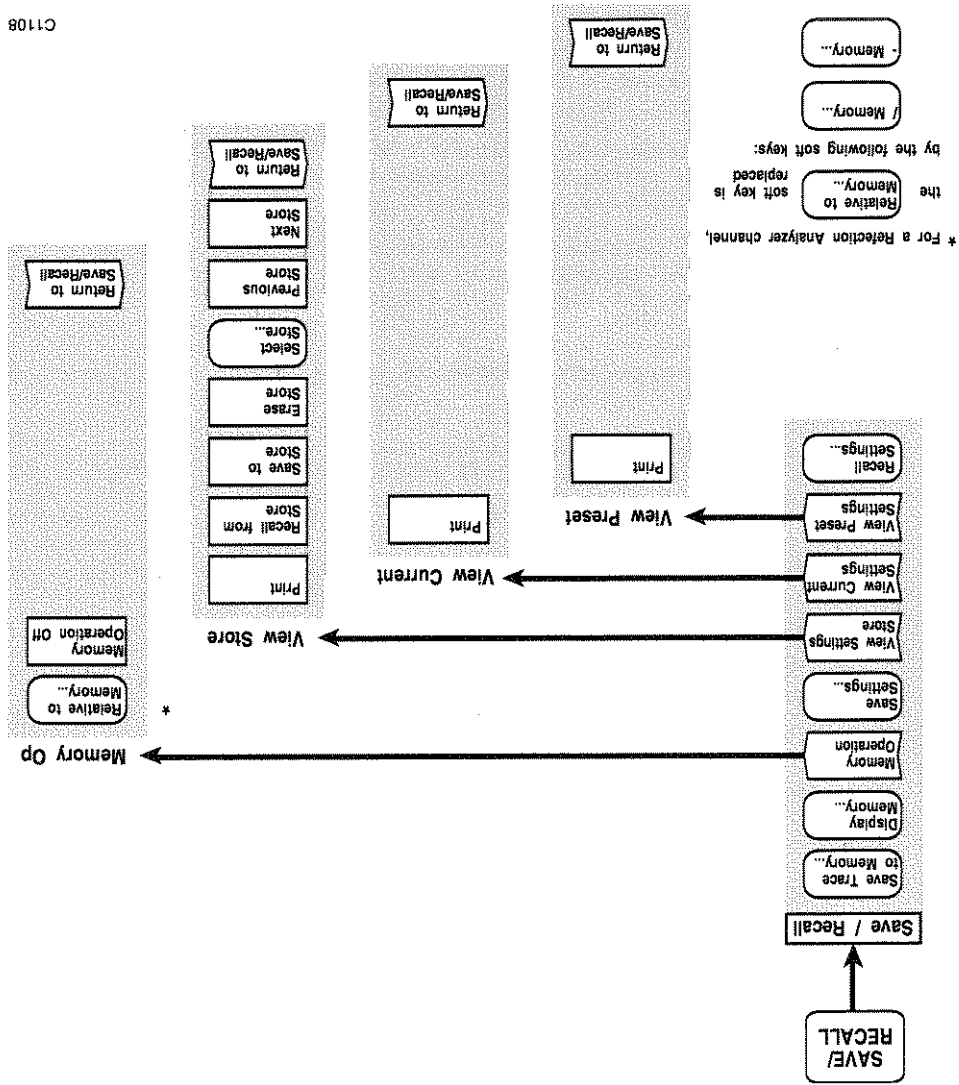


Fig. 3-66 SAVE/RECALL Menus

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Saves the currently active measurement, together with some of the instrument settings, in a memory location specified by the user. These settings are required in order that the instrument can recreate the channel and measurement set-up necessary to display the memory as it was originally stored. When this soft key is pressed, a form is displayed listing the identities and store numbers of the available memories. To save the data to a specific memory location, the memory identity number is entered in the input field. The store can be either an internal MTS store or a memory card. A text editor is then presented which enables the measurement title to be edited, if required. This soft key is unselectable for a readout channel. For a fault location channel it is only selectable if measurement 1 is active.

Save Trace to Memory

Fig. 3-67 Example of Displayed Instrument Settings Store

Instrument Settings Store 1	
Screen Title	:Microwave Test Set
Channel Coupling	:Off
CHANNEL 1	
Channel Type	:Fault Location
Domain	:Distance
Start	:9.850198145 GHz
Stop	:10.149801854 GHz
Output	:0.00 dBm
MEASUREMENT 1	
Meas Title	:Measurement 1
Meas	:B/C
Format	:dB
Scale	:10.00 dB/
Ref Level	:0.00 dB
MEASUREMENT 2	
Meas Title	:Measurement 2
Meas	:M1
Format	:dB
Scale	:10.00 dB/
Ref Level	:0.00 dB
MEASUREMENT 3	
Meas Title	:Measurement 3
Meas	:A
Format	:dBm
Scale	:10.00 dB/
Ref Level	:+20.00 dBm
MEASUREMENT 4	
Meas Title	:Measurement 4
Meas	:A
Format	:dBm
Scale	:10.00 dB/
Ref Level	:+20.00 dBm
CHANNEL 2	
Scalar	
Voltage	: -10.00 V
Stop	: 10.00 V
Output	: 0.00 dBm

The Save/Recall Menu enables the current instrument settings to be stored in a specified memory location in the internal non-volatile memory or on a memory card. Any of the stores can later be recalled in order to re-create the instrument state defined by the store contents. Facilities are available for viewing the stores without recalling them, and for obtaining a hard copy printout of the currently displayed store contents. Ten internal instrument settings stores are available. Measurement traces can be similarly stored, and subsequently recalled and/or used in relative measurements.

Save/Recall

SAVE/RECALL

Display Memory

Enables the measurement trace in a specified trace memory to be displayed. A fault location trace will be displayed as measurement 2 in the currently active fault location channel. When this soft key is pressed, a form is displayed indicating the range of available memories. To recall the trace in a specific memory location, the memory identity number is entered from the keyboard. Various instrument settings are saved together with the trace memory. When the memory is recalled, these saved settings may affect other measurements that are being displayed. The user is therefore given the choice of using either the saved settings or current settings.

This soft key is unselectable for a readout channel. For a fault location channel it is only selectable if measurement 2 is active.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Memory Operation

Leads to the Memory Op Menu.

This soft key will only be selectable for a scalar channel, and if the currently defined trace is not a memory.

See page 3-244

Saves the current instrument settings to a specified store which can be either an internal MTS store or a memory card. When this soft key is pressed, a form is displayed on the screen indicating the range of available stores.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Save Settings

View Settings Store

Leads to the View Store Menu, and enables the contents of instrument settings stores to be displayed.

See page 3-245.

View Current Settings

Displays the contents of the current instrument settings store. Pressing the [Print] soft key causes the information to be sent to printer; the printed format is the same as the displayed format.

View Preset Settings

As above but applies to the preset instrument settings.

Recall Settings

Recalls an instrument settings store by entering the required store identity number. This can refer to either an internal memory, or a store on a memory card. The instrument will be set up according to the stored parameters. Note that if a settings store stored on one instrument is recalled on another variant, the parameters being recalled will be clipped as necessary to match the hardware capability of that variant. If the instrument on which the settings are recalled does not have an appropriate adapter fitted (e.g. Reflection Analyzer), then a settings store containing a channel set-up that requires that adapter will not be recallable

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Used to select a memory to divide the live measurement by. A form is displayed indicating the range of available memories, and the identity number of the required memory is entered from the keyboard.

The memory operation will not be permitted if the trace memory does not contain a reflection analyzer measurement, or if the settings displayed with the trace memory do not match those of the channel in which the live measurement is displayed.

The measurement that is displayed can be either the ratio of the live trace to the stored trace, or the difference between the live trace and the stored trace. Note that complex arithmetic is used since the quantities involved are complex.

Enables the currently active measurement to be made relative to the measurement data in a specified trace memory.

Memory Operation

SAVE/RECALL

Memory Op

(Reflection analyzer channel)

/ Memory

Return to Save/Recall

Returns control to the Save/Recall Menu.

Memory Operation Off

Turns off the memory operation.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

When this soft key is pressed, a form is displayed indicating the range of available memories. To select the memory to be used in the measurement, the memory identity number is entered from the keyboard.

The memory operation applies per trace.

For normal measurements, the domain range will be the same for both current and stored traces. Memory data will be interpolated to match a live measurement over a different start/stop range.

Enables the currently active measurement to be made relative to the measurement data in a specified trace memory. The measurement that is displayed is the ratio of the live trace to the stored trace for scalar measurements, and the difference between the live trace and the stored trace for frequency measurements.

Memory Operation

SAVE/RECALL

Memory Op

(Scalar channel)

Relative to Memory

Used to select a memory to subtract from the live measurement. A form is displayed indicating the range of available memories, and the identity number of the required memory is entered from the keyboard.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Turns off the memory operation.

Returns control to the Save/Recall Menu.

Memory
Operation Off

Return to
Save/Recall

- Memory

This menu is used for save, recall, erase and print operations on instrument settings stores.

Causes the currently displayed information to be sent to the printer; the printed format is the same as the displayed format.

Applies the instrument settings from the store currently being viewed.

Saves the current instrument settings to the store currently being viewed. If the store already contains data, this will be overwritten, after asking for confirmation.

Erases the contents of the currently displayed store, after asking for confirmation.

Enables an instrument settings store to be selected for viewing, by entering the required store identity number.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Used to display the previous instrument settings store.

Used to display the next instrument settings store.

Returns control to the Save/Recall Menu.

Return to
Save/Recall

Next
Store

Previous
Store

Select
Store

Erase
Store

Save to
Store

Recall from
Store

Print

View Store

View Settings
Store

SAVE/RECALL

[MACRO] KEY

The [MACRO] key provides access to the series of menus illustrated in Figs. 3-68 to 3-71. The MTS Macro facility, in its simplest form, allows a sequence of front panel keypresses to be recorded as the instrument is operated. The macro can then be saved in the instrument's internal non-volatile memory, or on a memory card. The amount of memory available for macros is that left over after the card has been configured to provide stores of various kinds - see Config Card Menu. A descriptive label can be assigned to the macro as an aid to remembering its function. When a macro is *run*, the saved keypresses are "replayed", and the MTS obeys them as though they came from the keyboard.

Control and Condition Codes

To be useful, the macro function needs to do more than simply replay keypresses. It must be able to emulate the actions of an experienced user. A human operator would not, for example, set up a swept measurement and then immediately initiate a marker peak search without having first waited until a complete trace had been captured. To simulate waiting for measurement update, and other operator actions, *control codes* may be embedded between the keypresses as the macro is recorded. Loop and branch control codes also have *condition codes* associated with them. The effects of the various types of control and condition codes are summarised in the following tables.

CONTROL CODE	FUNCTION
<Pause for Measurement Update>	Macro execution pauses until all displayed measurements have updated. This control code may be inserted after a sequence of keypresses that causes measurements to restart - for example, changing the number of displayed channels.
<Pause for Averaging>	Pauses execution until the active measurement averaging has completed.
<Pause for Terminator>	Pauses execution until one of the four numeric entry terminator keys is pressed. This is particularly useful in conjunction with the Display Message control code.
<Pause for Print/Plot>	Pauses execution until a print or plot has completed.
<Accept Numeric Input>	This control code can be inserted following a keypress that enables numeric input. It allows numeric values to be passed into a function while a macro is executing. The macro resumes running when one of the terminator keys is pressed.
<Display Message>	A message of up to 5 lines of text is displayed in an automatically sized window. Messages may be used to give instructions to an operator. If the message is not removed before the macro terminates, it is erased when the next keypress is received.
<Remove Message>	Erases the message displayed by the Display Message control code.
<Run Macro>	Runs a macro from within a macro. This is a powerful facility for simplifying the creation of a complex macro by chaining a series of shorter, simpler macros together.
<Macro Time Delay> n	Delays macro execution for a specified time. The delay (n) can be from 10 ms to 1 hr.
<If...Then> [CONDITION] <run macro> macro_1 <Else> <run macro> macro_2 Items enclosed by { } are optional	On detecting the <If...Then> control code, the [CONDITION] is evaluated; if found to be true then macro_1 will be executed. If the condition is found to be false and there is no optional <Else> control code, then execution will continue with the next keypress or control code following the If...Then construct. If the condition evaluation is false and the <Else> control code is present, then macro_2 will be executed.
<Else>	The <Else> control code is optional to the <If...Then> and <Case> control codes

<p><Case> [CONDITION 1] <run macro> macro_1 {[CONDITION 2] <run macro> macro_2 . [CONDITION n] <run macro> macro_n <Else> <run macro> macro_m Items enclosed by { } are optional</p>	<p>On detecting the <Case> control code, [CONDITION 1] is evaluated; if found to be true then macro_1 will be executed. Execution of the main macro will then continue with the keypress or control code following the Case construct.</p> <p>If [CONDITION 1] is false then the next condition code is evaluated. This and subsequent condition codes are processed in a similar way. If found to be false, the macro proceeds to the next condition code; if true, the associated macro is executed and macro execution will then continue with the keypress or control code following the Case construct.</p> <p>If an <Else> is present and no conditions are true the macro_m will execute. Macro execution will then continue with the next keypress or control code following the case construct.</p>
<p><Repeat..Until> [CONDITION] <run macro> macro_1</p>	<p>On detecting the <Repeat..Until> control code, macro_1 will be executed. The [CONDITION] will be evaluated and if found to be false then macro_1 will again be executed. If true, then execution will continue with the next keypress or control code following the Repeat..Until construct.</p>
<p><While...Do> [CONDITION] <run macro> macro_1</p>	<p>On detecting the <While...Do> control code the [CONDITION] will be evaluated; if found to be true then macro_1 will be executed. If the condition is found to be false, then execution will continue with the next keypress or control code following the While...Do construct.</p>
<p><For> n <run macro> macro_1</p>	<p>On detecting the <For> control code, macro_1 will be executed n times, where n is in the range 1 to 10⁶.</p>

CONDITION CODE	FUNCTION
[TRUE]	Always TRUE, i.e. the condition code evaluated will always be returned with a true value. This can be used to implement While... Do loops. It can be aborted using the [LOCAL] key.
[AVERAGING COMPLETE]	The condition is true if averaging has completed for the active measurement.
[LIMIT PASS]	The condition is true if the active measurement has passed the limit check (a limit check which is not applied to the active measurement is assumed to be a pass condition).
[LIMIT FAIL]	The condition is true if the active measurement has failed the limit check.
[MTS TYPE = 6200] [MTS TYPE = 6201] [MTS TYPE = 6203] [MTS TYPE = 6204]	The condition is true if the MTS on which the macro is running is that specified in the condition.
[70 DB STEP ATTENUATOR] [90 DB STEP ATTENUATOR]	The condition is true if the 70 dB step attenuator is present in the instrument. The condition is true if the 90 dB step attenuator is present in the instrument.
[REFLECTION ANALYZER]	The condition is true if the Reflection Analyzer is fitted to the MTS.
[STORES EXTENSION CARD] [TRANSMISSION LINE CARD] [APPLICATION CARD]	The condition is true if a memory card of the type specified has been inserted into the MTS.
[ANY IDENTIFIABLE CARD]	The condition is true if any of the above types of memory card has been inserted.
[MACRO] macro_name	The condition is true if a macro with the specified name is present (either in internal memory or on a memory card).
KEY=[keypress]	The condition is true if a particular front panel key has been pressed, as specified by [keypress]. This facility allows the user to interact with a running macro. All front panel keys are allowed except [LOCAL] and [PRESET]. For clarity, the condition code should be preceded by a display message stating which key to press. For the If...Then, Repeat...Until and While...Do conditions, the system will wait for a keypress. For the Case condition the system will wait for a keypress on the first occurrence of the condition code in the Case. Subsequent keypress condition codes will not wait but use the previously entered keypress.

Macro Status Messages

While a macro is being recorded, run or stepped, status messages are displayed in the position normally occupied by the screen title.

MESSAGE	WHEN DISPLAYED
Macro: Record [LOCAL] to Edit	Recording Macro
Macro: Run [LOCAL] to Abort	Running Macro
Macro: Step [LOCAL] to Abort	Stepping Macro
Macro: Paused for Measurement	Executing Pause for Measurement control code.
Macro: Paused for Averaging	Executing Pause for Averaging control code.
Macro: Numeric Entry Expected	Executing Pause for Numeric Entry control code.
Macro: Terminator Key Expected	Executing Pause for Terminator control code
Macro: Paused for Print / Plot	Executing Pause for Printing or Plotting.
Macro: Suspended [LOCAL] Abort	Executing Macro Time Delay.

Creating a Macro

Recording starts after selecting [MACRO] [Start Recording]. Each keypress, with the exception of [LOCAL] or [PRESET] is recorded in the macro. [PRESET] has its usual function, and any macro recording in progress at the time is aborted. [LOCAL] gives access to the macro editor, which provides functions to correct errors, to suspend recording temporarily and to insert control codes. Recording is stopped by selecting [MACRO] [Stop Recording]. This function allows the macro to be given a descriptive name and then stored in the MTS memory or a memory card.

Running or Stepping a Macro

A macro is run by selecting [MACRO] [Run Macro] and choosing the required macro from the list displayed. Alternatively, a macro can be stepped by selecting [MACRO] [Step Macro]. In step mode, execution pauses after each keypress or control code until a keypress is received from the front panel. Stepping allows the operation of a macro to be observed in detail and can be useful for fault-finding. The [LOCAL] key may be used to abort a macro that is being run or stepped.

Macro Hints and Tips

Use Settings Stores

Although it is possible to use a macro to set up a particular instrument state - that is, a combination of settings, such as channel mode, measurement definitions, format and scaling parameters, this is better achieved using the save and recall settings functions - see Save/Recall Menu. The macro facility really comes into its own when it is used to automate procedures. For example, a macro could be written to measure the bandwidth of a bandpass filter at -3 dB and -60 dB, and automatically place markers at those points of interest. To do this, the set-up required to display the filter response can be saved in a settings store. A macro can then be written to recall the settings store, calibrate the measurement (using display message control codes to prompt the operator to make the necessary connections), and finally to position the markers.

Preset Settings Within a Macro

For technical reasons the [PRESET] key cannot be recorded as part of a macro. However, to set up the instrument to the preset state, press [PRESET], then save the default settings in a settings store. These may be recalled within the macro.

Minimise Text Entry

Text entered for display with the Display Message control code is not lost after the message is added to the macro. The next time the Display Message control code function is selected, the most recent message text is made available for editing. Since messages within a macro are often very similar, time can be saved by simply editing the previous message text rather than starting from scratch.

Correcting Errors While Recording - Use of Suspend & Resume Functions

Keypresses or control codes entered by mistake can be removed from the macro by entering the macro editor and using the *[Delete Last Entry]* function. Sometimes, however, this is not enough to correct the error. Suppose the *[SWITCH CHANNEL]* key is inadvertently pressed while recording a macro. The erroneous keypress can be removed by the editor *[Delete Last Entry]* function easily enough, but the effect that the keypress has had on the operation of the instrument has, of course, not been corrected; the wrong channel has been made active.

Problems like this can be corrected by using the *[Suspend Recording]* function available within the editor. With recording suspended, changes to the instrument settings caused by pressing the wrong key can be reversed. When this has been done, the *[Resume Recording]* function allows macro recording to continue.

Using the Main Macro Editor

Corrections can be made to a macro that has already been recorded and saved, using the macro editor accessed from the top level macro menu. This editor enables items to be added or deleted anywhere within the macro; it can also be used to create a new macro, but this is easier to achieve by recording keypresses.

Create a Library of Short Macros

It is good practice to break down complex procedures into a series of simpler tasks, and create a short macro for each one. The complex macro need only consist of a series of Run Macro control codes that run a selection of short macros from the "library".

Limitations

The maximum number of macros is 999 and the maximum length of a macro is 2048 bytes. Each keypress, control code or character in a displayed message requires 1 byte. The maximum depth to which Run Macro control codes can be nested (i.e. macro calls a macro which calls another macro...etc) is 50.

Macro

See Fig. 3-68

Run Macro

Used to run a macro contained in a specified macro store by entering the required store identity number. While a macro is running, the screen title is replaced by 'Macro: Run [LOCAL] to Abort'.

If a control code is encountered (see Add Code Menu, page 3-256) the screen title area will change to one of the following, as appropriate.

- Macro: Paused for Measurement
- Macro: Paused for Averaging
- Macro: Numeric Entry Expected
- Macro: Terminator Key Expected
- Macro: Paused for Print / Plot
- Macro: Suspended [LOCAL] Abort

A running macro can be aborted at any time by pressing the [LOCAL] key.

Rotary Control X Step Keys X Numeric Pad Y Terminator Any

Step Macro

Pressing this soft key enable the user to step through a macro by pressing any front panel key. To load the required macro, its identity number is entered from the keyboard. While a macro is stepping, the screen title is replaced by 'Macro: Step [LOCAL] to Abort'.

If a control code is encountered, a message will be displayed, as above.

A stepping macro can be aborted at any time by pressing the [LOCAL] key.

Start Recording

Places the instrument into the macro recording mode in which subsequent keypresses (except [LOCAL] and [RESET]) will be recorded until the recording mode is exited. The maximum size of a macro is 2048 bytes. Each keypress or message character is one byte, but control codes can be more than one byte long. During macro recording, the screen title is replaced by 'Macro: Record [LOCAL] to Edit'.

Whilst in the recording mode, pressing [LOCAL] invokes the macro editor function (See Edit Macro Menu, page 3-255).

Once this soft key has been pressed, it is replaced by [Stop Recording].

Stop Recording

Stops recording keypresses and presents the Save Macro Menu. The [Stop Recording] soft key appears in place of [Start Recording] once this soft key has been pressed.

See page 3-253.

Log Errors

Provides a method of logging the first three errors that occur during the execution of a macro. The log is cleared when a macro is run or single stepped; it is not cleared by the execution of a control code that causes another macro to run. When error logging is enabled and an error is logged, a message will be displayed at the end of macro execution informing the user that errors have occurred and to examine the error log.

View Error Log

Enables the contents of the error log to be examined. The [Previous Error] and [Next Error] soft keys are used to select the error that is displayed.

Abort Terminates the function without performing a save, after prompting for confirmation.

Delete Macro Leads to the Delete Macro Menu, which can be used to create more space, if required. See page 3-254.

Save to Card Saves the macro that has just been recorded onto a memory card. A form is displayed showing the available memory and the size of the macro to be saved. Any number of macros up to 999 can be stored subject to available memory. This function automatically brings up the Macro Id Menu which allows a title to be entered. Pressing [Done] saves the macro to memory. This soft key will be unselectable if there is insufficient memory available or if no memory card is present.

Save to MTS Memory Saves the macro that has just been recorded into MTS non-volatile memory. A form is displayed showing the available memory and the size of the macro to be saved. Any number of macros up to 999 can be stored subject to available memory. This function automatically brings up the Macro Id Menu which allows a title to be entered. The method of entry is the same as that described for the Screen Title Menu. Pressing [Done] saves the macro to memory. This soft key will be unselectable if there is insufficient memory to save the macro.

Save Macro See Fig. 3-68. This menu is used to save a macro following completion of macro recording.

Stop Recording

MACRO

Delete Macro Leads to the Delete Macro Menu. See page 3-254.

Edit Macro Leads to the Edit Macro Menu. See page 3-258.

Copy Macro Leads to the Copy Macro Menu. See page 3-254.

Delete

Deletes the macros in the specified range and returns control to the Macro Menu.

Page down

Displays the previous page of the macro list.

Page Up

Displays the next page of the macro list.

To Macro

Used to enter the identity of the last macro of a range of macros to be deleted.

From Macro

Used to enter the identity of the first macro of a range of macros to be deleted.

A form is displayed listing the macros present in the MTS and on the card, and their sizes in bytes. A range of macros can be deleted by entering a 'from' and a 'to' macro identity number. The macros are deleted when the [Delete] soft key is pressed. Only the 'from' macro identity needs to be entered if a single macro is to be deleted. The delete function is confirmation protected.

See Fig. 3-68. This menu enables the deletion of a range of macros from either the MTS or a memory card.

Delete Macro

MACRO

Delete Macro

Return to Macro

Returns control to the Macro Menu.

Copy Macro from Card

As above, but copies a macro from a memory card to non-volatile RAM in the MTS.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Enables copying of a macro stored in the MTS to a memory card. A form is displayed listing the macros present in memory and the amount of memory available on the card for macro storage. The macro will be copied when the required identity number is entered from the keyboard. The macro will not be copied if there is not enough storage capacity on the card. The [Delete Macro] soft key (Macro Menu) can be used to create more space on the card, if required.

Copy Macro to Card

See Fig. 3-68. This menu is used to copy a macro stored in the MTS to a memory card, or vice versa.

Copy Macro

MACRO

Copy Macro

See Fig. 3-69. This menu is used to correct errors made during keystroke recording and allows special control codes to be inserted in the macro.

This menu is accessed by pressing the [LOCAL] key whilst in the recording mode.

(To edit existing macros, i.e. stored in memory, the macro editor accessed from the top level menu is used.)

**Delete
Last Entry**

Deletes the last keystroke or control code (i.e. the last entry in the macro buffer). *This soft key is unselectable if there are no entries in the macro buffer.*

**Add
Control Codes**

Leads to the Add Code Menu. *This soft key is unselectable if the macro buffer is full.*
See page 3-256

**Suspend
Recording**

Suspends recording of the macro and allows the user to return to normal menu operation by pressing the [Exit Macro Editor] soft key. This allows the user to return to the required point within the menu structure and to continue recording using the [Resume Recording] soft key. *This soft key is unselectable if recording has already been suspended.*

**Resume
Recording**

Allows the user to continue recording keystrokes after suspending recording with the above soft key. *This soft key becomes unselectable when recording has been resumed.*

**Exit
Macro Editor**

Exits the Edit Macro Menu and allows macro recording to resume.

Add Code

See Fig. 3-69. This menu enables control codes to be inserted in the macro. They are used to pause execution until certain actions have occurred, add loop and branch conditions, specify further macros that are to be run, or to display messages specified by the user.

When entering control codes, certain soft keys may become unselectable to prevent the introduction of syntax errors. For example, only Condition codes, Run Macro codes and Else codes are allowed within a Case construct; all other soft keys are unselectable. A description of the control codes and their usage is given at the start of the Macro Key description.

All soft key except [Return to Macro Editor] are unselectable if the macro buffer is full

Pause

Leads to the Pause Menu. See page 3-257.

Loop & Branch

Leads to the Loop & Branch Menu. See page 3-262.

Accept Numeric Input

Pauses execution until a terminator key is pressed

Accept Numeric Input

Accepts numeric entry (either keyboard, rotary control or step keys) until a terminator is received.

Display Message

Leads to the Disp Message Menu. See page 3-257.

Remove Message

Removes the message that is currently being displayed.

Run Macro

Leads to the Run Macro Menu. See page 3-258.

Set Time Delay

Used to suspend macro execution for a specified period of time, by entering the required time delay. Delays between 10 ms and 1 hr can be entered. If the time delay is greater than 1 s, an appropriate message is displayed while the macro is suspended.

Rotary Control X Step Keys X Numeric Pad V Terminator 10+

Return to Macro Editor

Returns control to the Edit Macro Menu.

See Fig. 3-69. This menu is used to insert control codes in a macro which are used to pause execution until certain actions have occurred.

Pause for Meas Update Pauses execution until measurement update has completed.

Pause for Averaging Pauses execution until the averaging target value has been reached for the active trace.

Pause for Terminator Pauses execution until a terminator key is pressed.

Pause for Print / Plot Pauses execution until printing or plotting has completed.

Return to Add Code Returns control to the Add Code Menu.

MACRO

Start Recording

...

LOCAL

Add Control Codes

Pause

Pause

Pause for Meas Update

Pause for Averaging

Pause for Terminator

Pause for Print / Plot

Return to Add Code

MACRO

Start Recording

.....

LOCAL

Add Control Codes

Display Message

Disp Message

See Fig. 3-69. This menu allows a message of up to five lines to be displayed on the screen. Each line can be up to 50 characters in length.

Enables the entry of a text string as line 1 of the displayed message. The method of entry is the same as that described for the Screen Title Menu (page 3-276).

Set Line 1 As above, but for line 2 of the message.

Set Line 2 As above, but for line 3 of the message.

Set Line 3 As above, but for line 4 of the message.

Set Line 4 As above, but for line 5 of the message.

Return to Add Code Returns control to the Add Code Menu.

Exit
Edit

Exits the macro editor and returns control to the Macro Menu.

Edit New
Macro

Leads directly to the next level of the Edit Macro function, without requesting for the identity of a macro.
See page 3-259.

Edit Macro
By Name

When this soft key is pressed, a form is displayed allowing the name of a macro to be entered. The method of entry is the same as that described for the Screen Title Menu (page 3-276). Control is then passed to the next level of the Edit Macro function (page 3-259).

Edit Macro
By Number

When this soft key is pressed, a form is displayed listing the available macros. To select a macro for editing, the macro store number is entered from the keyboard. Control is then passed to the next level of the Edit Macro function (page 3-259).

Edit Macro

See Fig. 3-70. This menu provides access to the macro editor, which is used to edit existing macros or to create a new one.

Edit
Macro

MACRO

Return to
Add Code

Returns control to the Add Code Menu.

Enter Macro
By Name

When this soft key is pressed, a form is displayed allowing the name of the required macro to be entered. The method of entry is the same as that described for the Screen Title Menu (page 3-276).

Enter Macro
By Number

When this soft key is pressed, a form is displayed listing the available macros. A sub-menu is presented with two soft keys, [Page Up] and [Page Down]; these are used to select pages if there is more than one. The macro to be run is selected by entering the appropriate store number.

Run Macro

See Fig. 3-69. This menu is used to insert a Run Macro control code. When this control code is encountered another macro beings running at this point; when it terminates, the calling macro resumes operation. The macro that is to be run can be selected from a list of stored macros that is displayed, or its name can be entered directly.

Start
Recording

MACRO

LOCAL

Add
Control Codes

Run
Macro

Edit Macro

Edit Macro By Number

Edit Macro By Name

Edit New

Macro

Edit Macro

See Fig. 3-70. This menu follows on from the previous Edit Macro Menu, and provides functions for editing, printing and saving macros.

Edit

Leads to the Edit Menu.
See page 3-260.

Print Macro

Enables the macro currently being edited to be printed
This soft key will be unselectable if the contents of a macro have been deleted, and will initially be unselectable if a new macro is being created.

Save Macro

Leads to the Save Macro Menu. When this soft key is pressed, a syntax check is performed on the macro. If there are any errors an explanatory warning message will be displayed; any errors must be rectified using the Edit Menu before the save will be permitted.
This soft key will be unselectable if the contents of a macro have been deleted, and will initially be unselectable if a new macro is being created.

Save as New Macro

Leads to the Save Macro Menu. When this soft key is pressed, a syntax check is performed on the macro. If there are any errors an explanatory warning message will be displayed; any errors must be rectified using the Edit Menu before the save will be permitted.
This soft key will be unselectable if the contents of a macro have been deleted, and will initially be unselectable if a new macro is being created.

Exit

Returns control to the previous Edit Macro Menu. Before doing so, a syntax check is performed on the macro. If there are any errors an explanatory warning message will be displayed; any errors must be rectified using the Edit Menu before the exit will be permitted.

Return to Edit Macro

Returns control to the Edit Macro Menu.

Page Down

The next page of the macro will be displayed.

Page Up

The previous page of the macro will be displayed.



Selects the next item in the macro.



Selects the previous item in the macro.

This soft key becomes unselectable when there are no more items in the macro.

Delete Entry

Used to delete the macro item at the current edit position, as identified by the cursor box surrounding the item. If the cursor box is on the 'Case' macro item, the whole Case construct will be deleted.

Add Code

Leads to the Add Code Menu.
See page 3-256

Add Keys

Allows front panel keys to be added to a macro. All front panel keys are allowed except [LOCAL] and [PRESET]. Hard keys are added by pressing the appropriate key. If a soft key is added, its function depends on the menu that would result from the keypresses previously entered into the macro. Pressing the [LOCAL] key exits from this function. *This soft key will be unselectable if the current edit position lies within a Case construct.*

Edit

See Fig. 3-70. This menu enables front panel keys and control codes to be added to a macro, and macro items to be deleted.

The current edit position is indicated by a box surrounding the macro item. This can be moved around the macro by using the [↑], [↓], [Page Up] and [Page Down] soft keys. If a new macro is being created, the cursor box will not appear until an item has been added.

MACRO	Edit Macro	Edit Macro	Edit Macro
	Edit By Number	Edit Macro	Edit New Macro
	Edit	Edit Macro	Edit By Name

Return to Edit Macro

Returns control to the Edit Macro Menu.

Delete Macro

Leads to the Delete Macro Menu, which can be used to create more space, if required.
See page 3-254.

Save to Card

Saves the macro that has just been created or edited onto a memory card. A form is displayed showing the available memory and the size of the macro to be saved. Any number of macros up to 999 can be stored subject to available memory. This function automatically brings up the Macro ID Menu which allows a title to be entered. Pressing *[Done]* saves the macro to memory. *This soft key will be unselectable if there is insufficient memory available or if no memory card is present.*

Save to MTS Memory

Saves the macro that has just been created or edited into MTS non-volatile memory. A form is displayed showing the available memory and the size of the macro to be saved. Any number of macros up to 999 can be stored subject to available memory. This function automatically brings up the Macro ID Menu which allows a title to be entered. Pressing *[Done]* saves the macro to memory. *This soft key will be unselectable if there is insufficient memory to save the macro.*

Save Macro

See page 3-70. This menu is used to save a macro that has just been created, or to save an edited macro as a new macro.

MACRO

Edit Macro	Edit Macro	By Number	New Macro
Edit Macro	Edit Macro	By Name	Edit New Macro
Save as	New Macro		

Return to Edit Macro

Returns control to the Edit Macro Menu.

Delete Macro

Leads to the Delete Macro Menu, which can be used to create more space, if required.
See page 3-254.

Change Identity

Saves the edited macro to its previous location and with the same identity. If the identity is to be changed, this can be done with the *[Change Identity]* soft key. *This soft key will be unselectable if there is insufficient memory to save the macro, or if a memory card needs to be inserted.*

Save

See page 3-70. This menu is used to save the macro currently being edited.

MACRO

Edit Macro	Edit Macro	By Number	Save Macro
Edit Macro	Edit Macro	By Name	Edit New Macro
Save	Macro		

See Fig. 3-71. This menu allows a macro to be run using the programming constructs of a high-level language.

The available constructs for looping/branching are:

- If...Then
- Repeat...Until
- While...Do
- Case
- For

The loop/branch control code is followed by a Condition code and then a Run Macro control code. The Condition code is the item that enables looping or branching, according to whether the condition is evaluated as true or false. A full description of the condition code soft keys and there usage is given in 'Control and Condition Codes' at the start of the Macro key description.

After a [For], [Else] or a condition code soft key has been pressed, the Run Macro menu will be presented, which enables selection of the macro that is to be run at this point. When a macro has been selected, control returns to the Add Code Menu.

Enters the <If...Then> control code into the macro, then presents the Conditions Menu (page 3-263).

Enters an <Else> control code, which is associated with the <If...Then> control code. During macro recording this soft key is only selectable after [If...Then] has been pressed; once [Else] has been pressed it becomes unselectable again.

Enters the <Repeat...Until> control code into the macro, then presents the Conditions Menu (page 3-263).

Enters the <While...Do> control code into the macro, then presents the Conditions Menu (page 3-263).

Enters the <For> control code into the macro. The user then enters the number of times that a macro is to be run. The user is then presented with the Run Macro menu.

Leads to the Case Menu. See page 3-263.

Returns control to the Add Code Menu.

Return to Add Code

Case

For

While...Do

Repeat...Until

Else

If...Then


Case See Fig. 3-71. This menu is used to enter control and condition codes for the Case construct.

Case Conditions Leads to the Conditions Menu. See below.

Else Enters an <Else> control code, which is associated with the <Case> control code.

Return to Loop Branch During macro recording this soft key is only selectable after [Case] has been pressed; once [Else] has been pressed it becomes unselectable again.

Returns control to the Loop & Branch Menu.

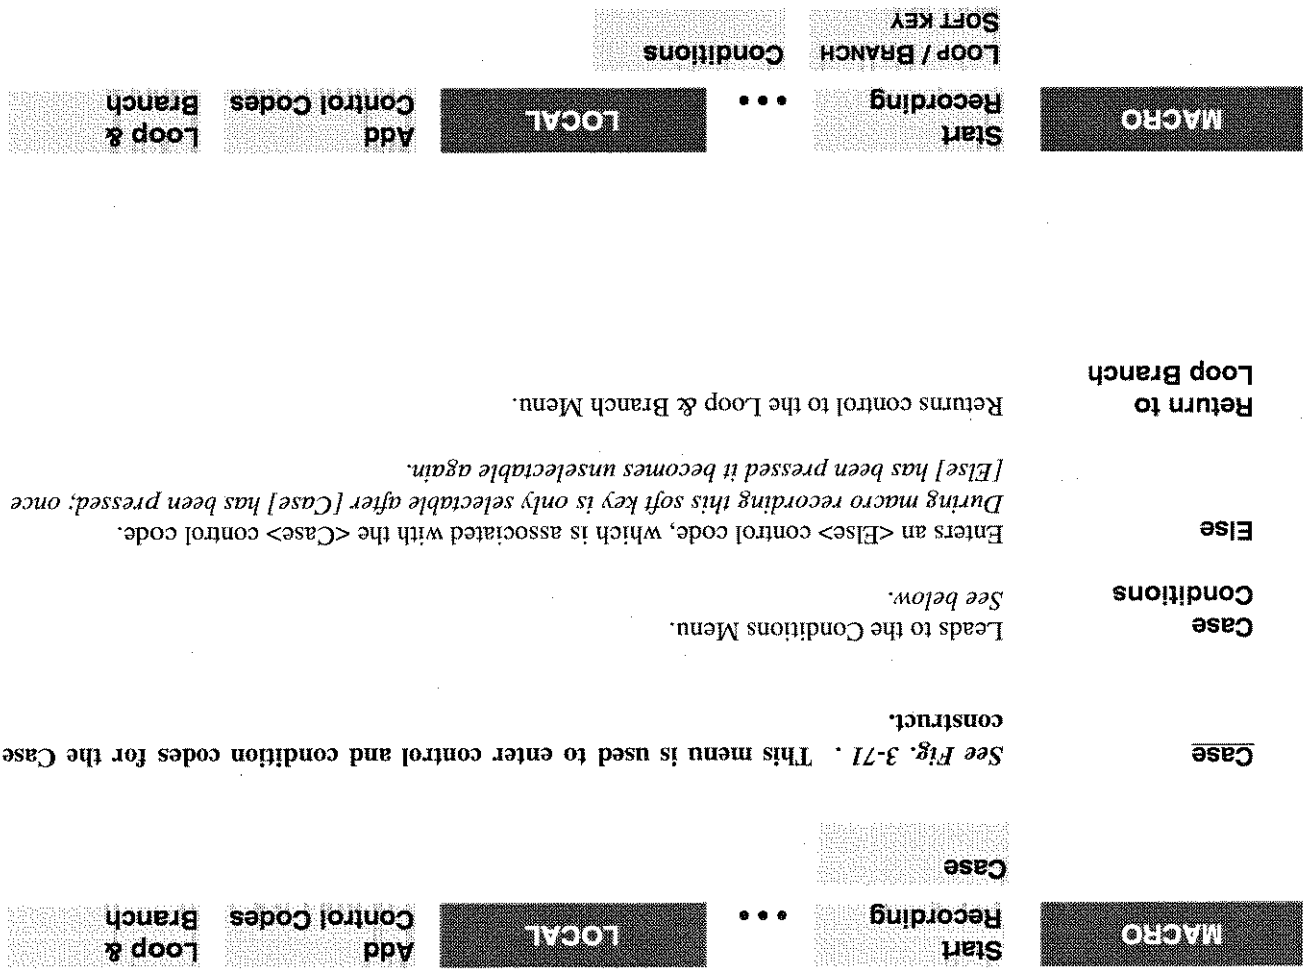


Conditions


See Fig. 3-71. This menu is used to specify the conditions that determine looping or branching in the If...Then, Repeat...Until, While...Do and Case constructs.

The conditions are selected using this menu and the subsequent sub-menus. The soft keys are not described here, since a full description of the condition codes and there usage has been given in 'Control and Condition Codes' at the start of the Macro key description.

After a [For], [Else] or a condition code soft key has been pressed, the Run Macro menu will be presented, which enables selection of the macro that is to be run at this point. When a macro has been selected, control returns to the Add Code Menu.

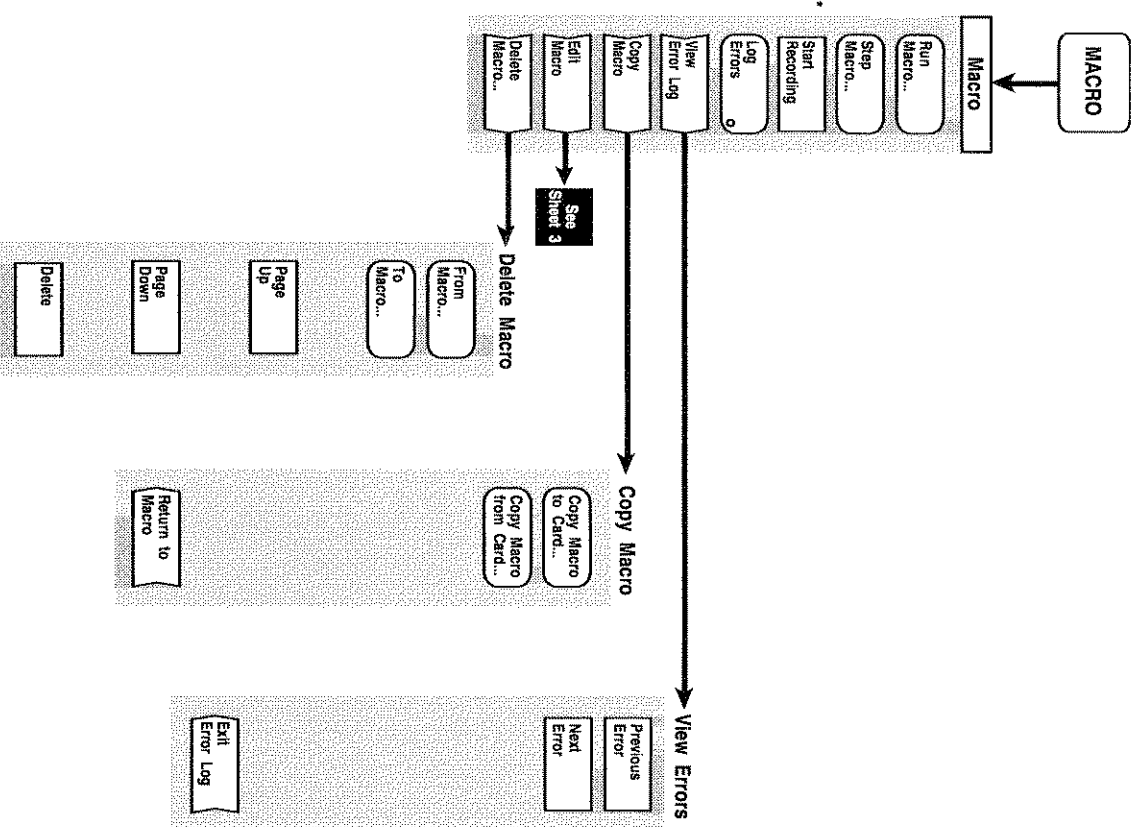

* Once recording has started this changes to

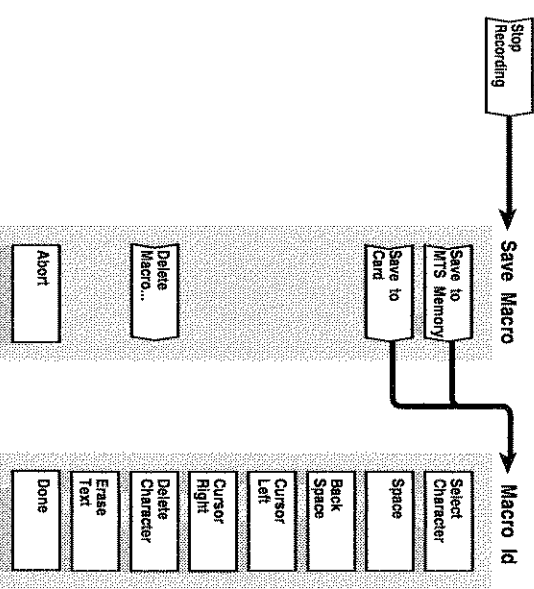


C1183

Fig. 3-68 MACRO Menu (Sheet 1)

MACRO

Fig. 3-68 MACRO Menu (Sheet 1)

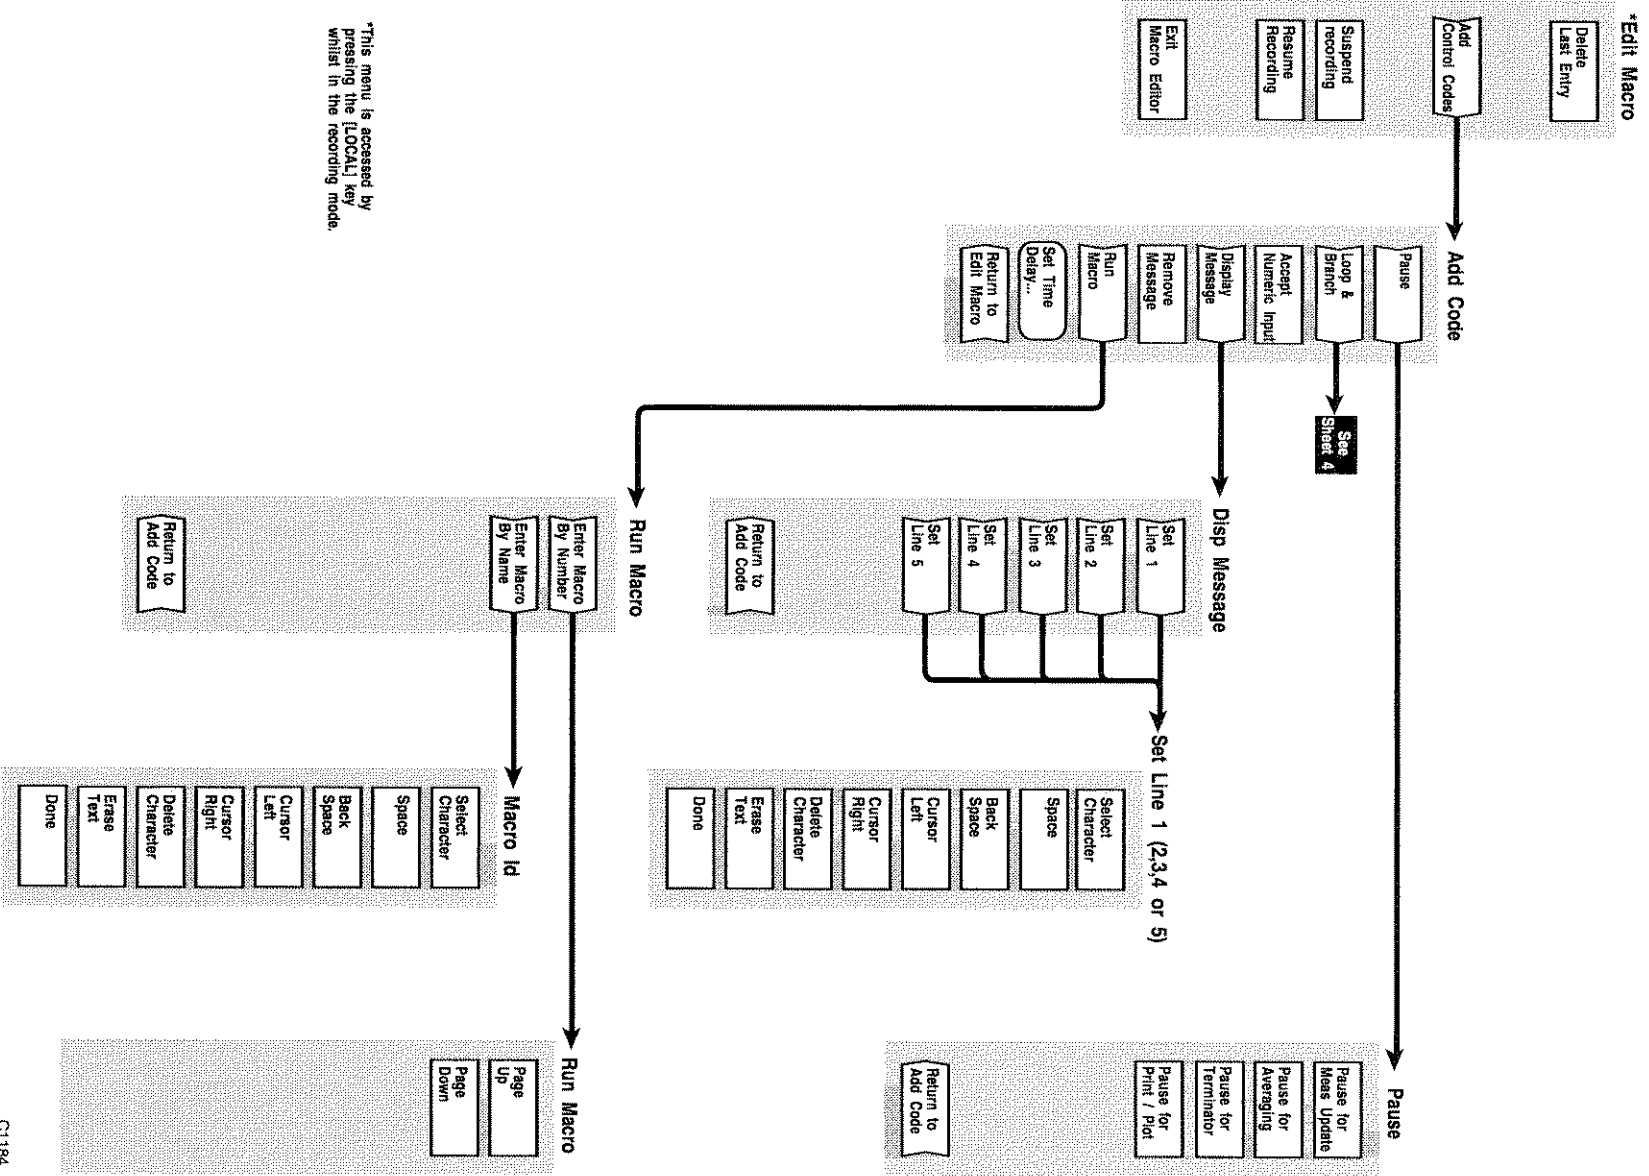


*This menu is accessed by pressing the [LOCAL] key whilst in the recording mode.

Fig. 3-69 MACRO Menu (Sheet 2)

C1194

MACRO

Fig. 3-69 MACRO Menu (Sheet 2)

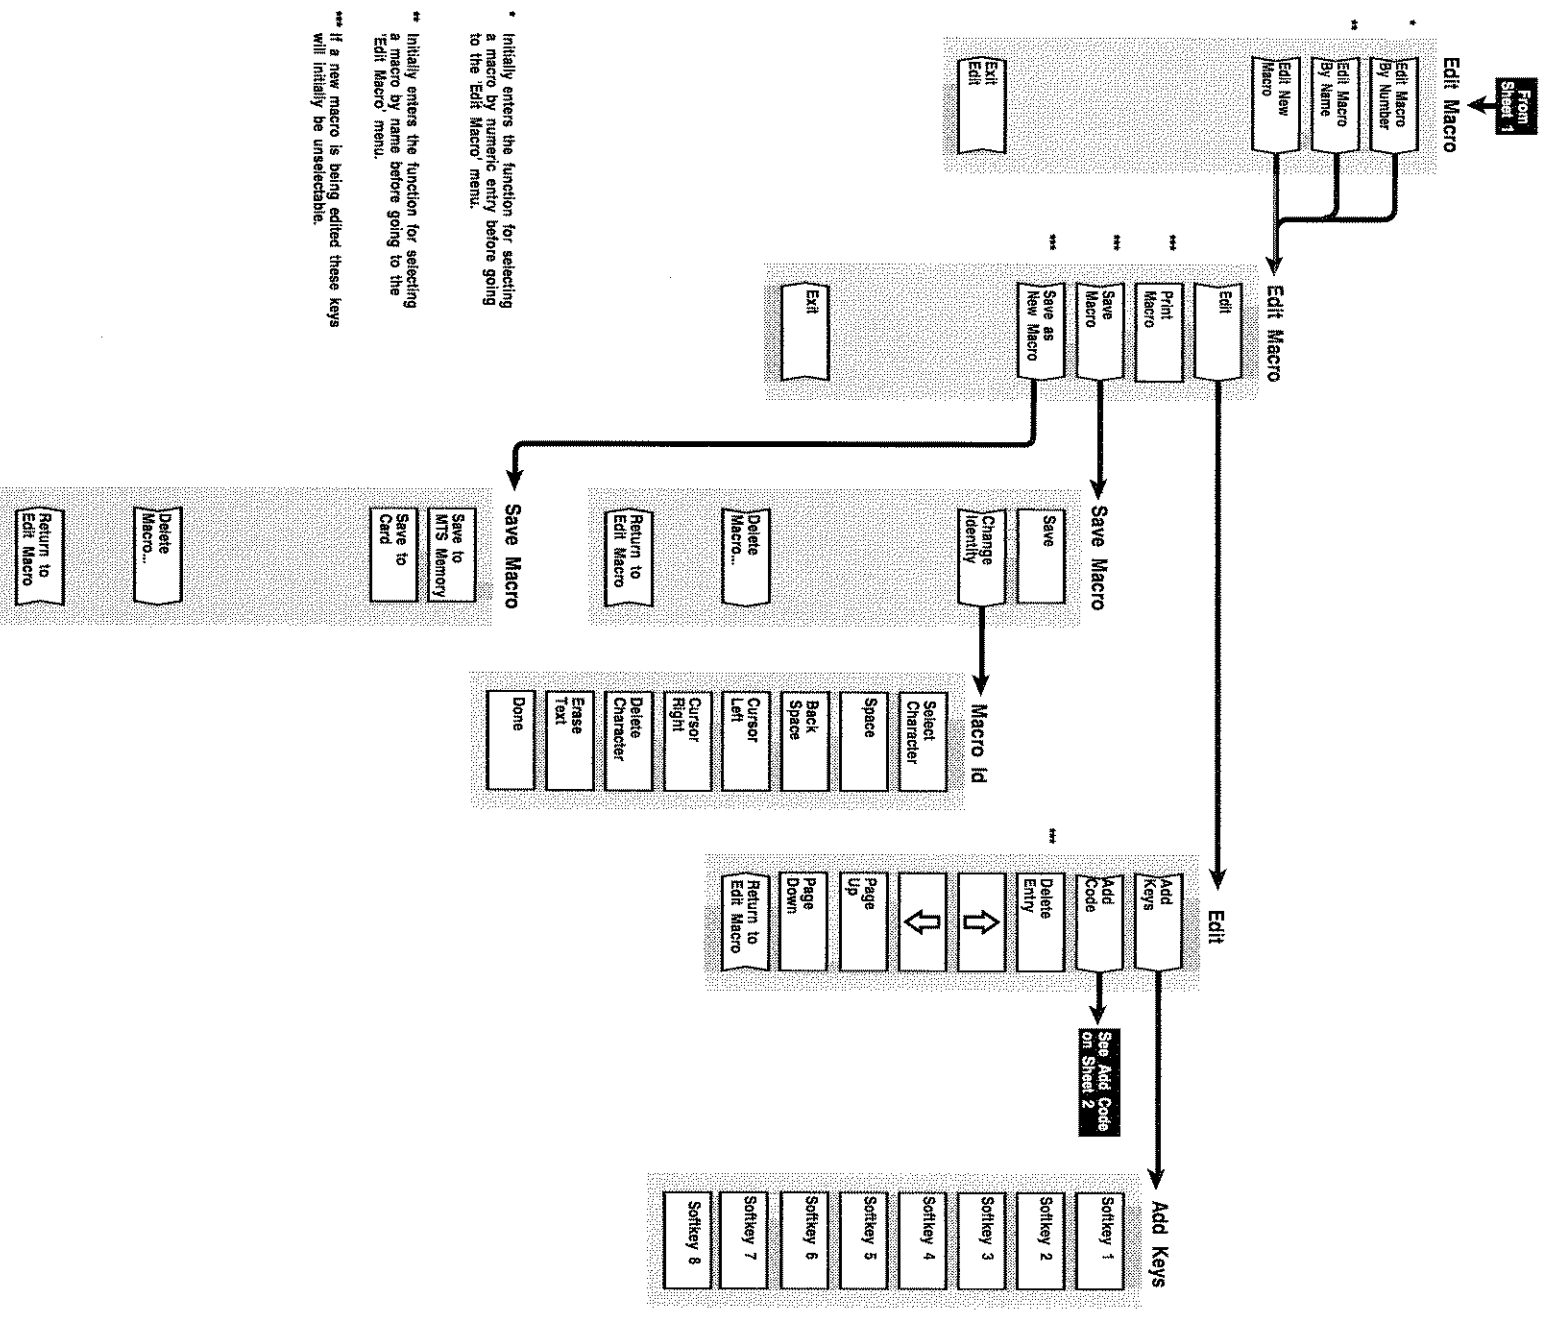

- * Initially enters the function for selecting a macro by numeric entry before going to the Edit Macro menu.
- ** Initially enters the function for selecting a macro by name before going to the Edit Macro menu.
- *** If a new macro is being edited these keys will initially be unselectable.


C1185

Fig. 3-70 MACRO Menu (Sheet 3)


MACRO

Fig. 3-70 MACRO Menu (Sheet 3)

From Fig 3

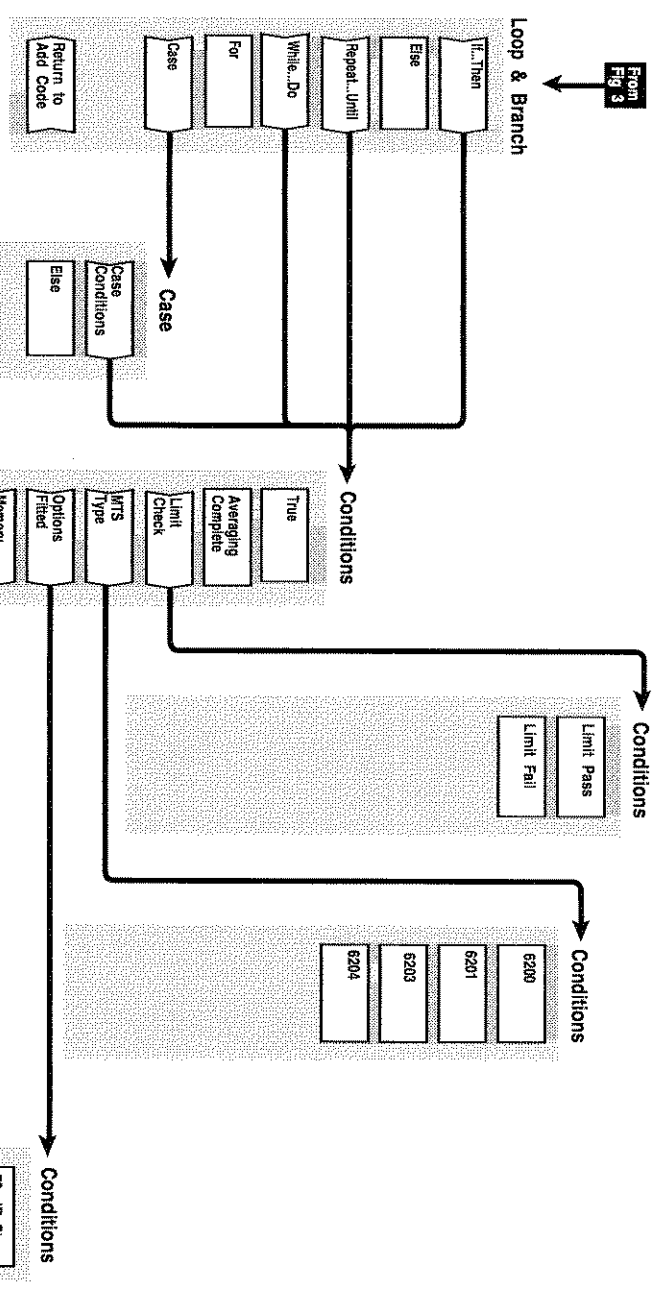

NOTE
 After the 'For', an 'Else' or a condition key is pressed
 the user will be presented with the following menu :

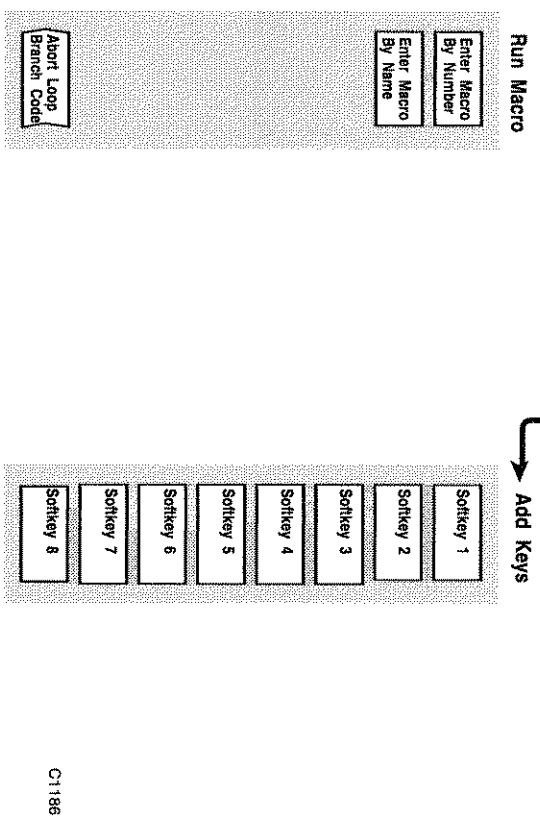

C1196

Fig. 3-71 MACRO Menu (Sheet 4)

MACRO

Fig. 3-71 MACRO Menu (Sheet 4)

[UTILITY] KEY

The [UTILITY] key provides access to the series of menus illustrated in Figs. 3-76 to 3-81. The menus provide utility functions, such as setting up GPIB addresses, generating titles, setting up the display, and performing various system functions.

UTILITY

Utility See Fig. 3-76. All the soft keys in this menu lead to further menus which provide utility functions not directly concerned with the measurement.

GPIB Leads to the GPIB Menu, which enables the instrument to be set up for GPIB operation. See page 3-274.

Titles Leads to the Titles Menu, which enables the main screen title and measurement titles to be entered and displayed. See page 3-275.

Display Set-up Leads to the Display Set-up Menu, which enables the display brightness to be set, and also provides a screen blanking facility. This menu also provides access to the "Secret Freq Display" function. See page 3-277.

Set Inc / Dec Steps Leads to the Inc/Dec Steps Menu, which enables the user to define the step size that is used when changing numeric parameters with the step keys and rotary control. See page 3-278.

Store Operations Leads to the Store Ops Menu, which enables the contents of a selected store to be copied to another. See page 3-280.

Service Leads to the Service Menu, which enables various system functions to be carried out, such as instrument tests, diagnostics and calibration, and setting up the instrument according to the user's requirements. See page 3-284.

Applications Leads to the Applications Menu, which enables the user to run an application program stored on a memory card. See page 3-311.

GPB

See Fig. 3-76. This menu enables the GPB mode to be selected, and the GPB addresses for the MTS, external source and plotter to be set up. GPB operation is covered in detail in the GPB Operating Manual.

Instrument Address

Enables the GPB address for the MTS to be set up by entering a number between 0 and 30.

Rotary Control Step Keys Numeric Pad Terminator Any

Ext Source Address

Enables the GPB address for the external source to be set up by entering a number between 0 and 30.

Rotary Control Step Keys Numeric Pad Terminator Any

Plotter Address

Enables the GPB address for the plotter to be set up by entering a number between 0 and 30.

Rotary Control Step Keys Numeric Pad Terminator Any

Controller Mode

Puts the MTS in the Controller mode, in which the instrument acts as controller of the GPB system. In this mode, the instrument can control a second MTS or an HPGL plotter.

Talk / Listen Mode

Puts the MTS in the Talk/Listen mode, in which the instrument behaves like a device conforming to IEEE 488.2, under the control of an external controller (which can be another MTS).

Restore Autotrigger

Returns the instrument to auto-trigger mode if a GPB program leaves it in remote trigger mode.

Return to Utility

Returns control to the Utility Menu.

Titles

See Fig. 3-76. This menu allows the user to generate the main screen title and also titles for both measurements on Channels 1 and 2.

Titles

UTILITY

Set Screen Title

Leads to the Screen Title Menu.
See page 3-276.

Screen Title

Toggles the screen title on or off.

Channel 1 Meas Titles

Leads to the Chan 1 Titles Menu.
See page 3-277.

Channel 2 Meas Titles

Leads to the Chan 2 Titles Menu.
See page 3-277.

Return to Utility

Returns control to the Utility Menu.

Done

Terminates screen title entry.

Erase Text

Causes the entire text to be deleted from the input field.

Delete Character

Deletes the character at the cursor position.

Cursor Right

Moves the cursor right one character.

Cursor Left

Moves the cursor left one character.

Back Space

Causes the character before the cursor to be deleted from the title.

Space Character


Causes a space character to be added to the title at the cursor position.

Select Character

Causes the selected character to be added to the title at the cursor position.

The character that is to be selected is enclosed by a box which can be moved along the rows of characters using the rotary control. The step keys are used to select the row of characters (upper case, lower case or digits/symbols). Note that the front panel keys 0 to 9, "," and "-" can be used directly.

Fig. 3-72 Editing a Screen Title

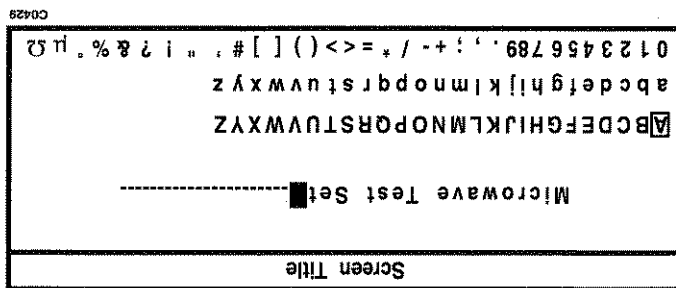

See Fig. 3-76. Enables a title to be entered which will be displayed at the top left of the screen. A form is displayed on the screen containing the current screen title in an input field and three rows of characters arranged as follows:

Screen Title

Titles

Set Screen Title

UTILITY

Chan 1 Titles

See Fig. 3-76. This menu is used to enter titles for measurement 1 and measurement 2 of channel 1, using the same procedure as for the screen title (see above).

Titles Channel 1 Meas Titles

UTILITY

Set Meas 1

Leads to a sub-menu which is used to enter a title for measurement 1. The procedure and soft keys are the same as for the Screen Title Menu.

See page 3-276.

Meas 1

Toggles measurement 1 title on or off.

Title

Leads to a sub-menu which is used to enter a title for measurement 2. The procedure and soft keys are the same as for the Screen Title Menu.

See page 3-276.

Meas 2

Toggles measurement 2 title on or off.

Title

Return to

Returns control to the Titles Menu.

Titles

UTILITY

Chan 2 Titles

See Fig. 3-76. This menu is the same as the Channel 1 Titles Menu, but applies to channel 2.

Titles Channel 2 Meas Titles

UTILITY

Display Set-up

See Fig. 3-76. This menu provides soft keys for the following display functions:

Secret Freq

Used to remove all frequency annotation from the display. The soft key has an on/off toggle action.

Screen

Sets the screen timeout value for the LCD. The LCD backlight will be automatically turned off after the timeout period has expired. Values in the range 1 to 999 minutes can be set; the default is 20 minutes. The display will be restored and the timeout counter reset when any key is pressed or the rotary control moved.

Rotary Control v Step Keys v Numeric Pad v Terminator Any

Screen Brightness

Enables the LCD backlight to be switched between full and half brightness (the default is full brightness). When this soft key is pressed, a sub-menu is displayed; the LCD brightness is selected by pressing either the [Full Brightness] or [Half Brightness] soft key.

Lock

Used to blank the display and disable the front panel keys and GPB. When this soft key is pressed, a 9 digit security password must be entered and then verified. The instrument remains locked until the security password is entered again, even if the instrument is

Instrument

switched off then on again.

Returns control to the Utility Menu.

Return to Utility

Return to Utility

Returns control to the Utility Menu.

More

Leads to the Inc/Dec Steps (More) Menu.

Rotary Control X Step Keys X Numeric Pad V Terminator 10-

Set Units Step

Enables the Units step size to be changed.

Rotary Control X Step Keys X Numeric Pad V Terminator 10-

Set Current Step

Enables the Current step size to be changed.

Rotary Control X Step Keys X Numeric Pad V Terminator 10-

Set Voltage Step

Enables the Voltage step size to be changed.

Rotary Control X Step Keys X Numeric Pad V Terminator 10-

Set Watts Step

Enables the Watts step size to be changed.

Rotary Control X Step Keys X Numeric Pad V Terminator 10+

Set Freq Step

Enables the Frequency step size to be changed.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Set dB Step

Enables the dB step size to be changed.

See Fig. 3-76. This menu enables the user to define the step size that is used when changing numeric parameters with the step keys and rotary control. Pressing one of the soft keys in this menu allows the step size for the indicated parameter to be changed by entering the new value.

Inc/Dec Steps

Set Inc / Dec Steps

UTILITY

Inc/Dec Steps (More)

Set % Step

Enables the Percentage step size to be changed.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator Any

Set Distance Step

Enables the Distance step size to be changed.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator 10+

Set Time Step

Enables the Time step size to be changed.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator 10-

Return to Prior Menu

Returns control to the Inc/Dec Steps Menu.

See Fig. 3-76. This menu is a continuation of the Set Inc/Dec Steps Menu.

Store Ops

See Fig. 3-77. This menu enables copying of data held in a store to another store of the same type. The main purpose of this facility is to copy data to and from stores held on a memory card that has been inserted into the memory card slot in the front panel.

If the memory card has been configured to provide stores extensions, the MTS will automatically recognise that additional stores are present, and are referenced by store numbers that follow on from those used to select the built-in stores of the basic instrument. Stores located on the memory card are manipulated identically to the internal resident stores. When the MTS prompts for a store number, the current range of available store numbers will be displayed, distinguishing between the internal stores and those on the card.

For information on configuring memory cards, refer to the menu accessed using [UTILITY][Service][Set-Up].

The soft keys provide a copy facility for the four types of store that can be located on a memory card.

Copy Inst Settings

Leads to the Inst Settings Menu.
See page 3-281.

Copy Trace Memory

Leads to the Trace Memory Menu.
See page 3-281.

Copy Sensor Cal

Leads to the Sensor Cal Menu.
See page 3-282.

Copy Source Power Cal

Leads to the Src Pwr Cal Menu.
See page 3-282.

Copy Reflect Analyzer Cal

Leads to the Reflect Cal Menu.
This soft key will only be displayed if the 6210 Reflection Analyzer is connected.
See page 3-283.

Copy Reflect Cal Kit

Leads to the Cal Kit Menu.
This soft key will only be displayed if the 6210 Reflection Analyzer is connected.
See page 3-283.

Erase All Stores

Erases the contents of all the above stores. This function is Level 1 Password protected.

Return to Utility

Returns control to the Utility Menu.

Copy

Copies the trace memory and terminates the function.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator Any

To Trace Memory

Used to select the trace memory that is to be copied to by entering the memory identity number.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator Any

From Trace Memory

Used to select the trace memory to copy from by entering the memory identity number.

Trace Memory

See Fig. 3-77. This menu is used to copy the contents of one trace memory to another.

UTILITY

Store Operations

Copy Trace Memory

Copy

Copies the store contents and terminates the function.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator Any

To Inst Settings

Used to select the settings store that is to be copied to by entering the store identity number.

Rotary Control X Step Keys X Numeric Pad ✓ Terminator Any

From Inst Settings

Used to select the settings store to copy from by entering the store identity number.

Inst Settings

See Fig. 3-77. This menu is used to copy the contents of one Instrument Settings store to another.

UTILITY

Store Operations

Copy Inst Settings

Copy

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Copies the store contents and terminates the function.

To Source Power Cal

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Used to select the source power cal store that is to be copied to by entering the store identify number.

From Source Power Cal

Used to select the source power cal store to be copied from by entering the store identify number.

Src Pwr Cal

See Fig. 3-77. This menu is used to copy the contents of one source power calibration store to another.

UTILITY

Store Operations Copy Source Power Cal

Copy

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Copies the store contents and terminates the function.

To Sensor Cal

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Used to select the sensor cal store that is to be copied to by entering the store identify number.

From Sensor Cal

Used to select the sensor cal store to copy from store by entering the store identify number.

Sensor Cal

See Fig. 3-77. This menu is used to copy the contents of one sensor calibration store to another.

UTILITY

Store Operations Copy Sensor Cal

UTILITY

Store Operations

Copy Reflect Cal Kit

Cal Kit

See Fig. 3-77. This menu is used to copy the contents of one cal kit store to another.

Used to select the cal kit store to be copied from by entering the store identity number.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

From Cal Kit

Used to select the cal kit store that is to be copied to by entering the store identity number.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

To Cal Kit

Copies the store contents and terminates the function.

Copy

UTILITY

Store Operations

Copy Reflect Analyzer Cal

Reflect Cal

See Fig. 3-77. This menu is used to copy the contents of one reflection analyzer calibration store to another.

Used to select the reflection analyzer cal store to be copied from by entering the store identity number.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

From Reflect Cal

Used to select the reflection analyzer cal store to be copied to by entering the store identity number.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

To Reflect Cal

Copies the store contents and terminates the function.

Copy

Service	<i>See Fig. 3-78.</i> This menu provides various service functions.
Set-up	Leads to the Set-up Menu, which enables the user to set the instrument's clock, define passwords, configure memory cards and install software options. <i>See page 3-285.</i>
Status	Leads to the Status Menu, which allows the user to examine the power on test results and the build state of the instrument. <i>See page 3-290.</i>
Instrument Calibrations	Leads to the Instrument Cals Menu, which provides calibration facilities for the instrument. <i>See page 3-293.</i>
Tests	Leads to the Tests Menu, which enables the display and keyboard to be checked for correct operation. <i>See page 3-299.</i>
Det / Sensor Specs	Leads to the Edit Specs Menu, which is used to modify detector correction specifications or sensor calibration data tables. <i>See page 3-300.</i>
Diagnostics	Leads to the Diagnostics Menu. <i>See page 3-301.</i>
Return to Utility	Returns control to the Utility Menu.

Set-up

See Fig. 3-79. This menu provides facilities for setting the instrument's real-time clock, setting user-defined passwords, configuring memory cards and installing software options.

Set Date & Time

Leads to the Date & Time Menu, which is used for setting the instrument's real time clock. See page 3-286.

Reset Op Hours Clock

This is a Marconi Password protected function and is not available to the user.

Set Passwords

Leads to the Set Passwords Menu, which is used to set the two user-defined passwords. This facility is Primary Password protected. See page 3-287.

Configure Memory Card

Leads to the Config Card Menu, which is used to configure memory cards before use. This function is Level 1 Password protected. See page 3-288.

Install S/W Option

Leads to the Install S/W Opt Menu, which is used to install software options from a memory card. See page 3-290.

Set Serial Number

This is a Marconi Password protected function and is not available to the user.

Set MTS Options

Leads to the Set MTS Options function. This function allows the instrument's hardware options to be configured. This facility is Primary Password protected.

Return to Service

Returns control to the Service Menu.

Date & Time

See Fig. 3-79. This menu is used to set the instrument's real-time clock and calendar.

A form is displayed on the screen (Fig. 3-73) showing the current time and date, together with soft keys for parameter selection. Pressing a soft key enables the corresponding value to be changed, as follows:

Rotary Control Step Keys Numeric Pad Terminator Any

The displayed time and date will be regularly updated to reflect any changes that are made.

Set Hours

Enables the Hours to be set.

Set Minutes

Enables the Minutes to be set.

Set Seconds

Enables the Seconds to be set.

Set Day

Enables the Day to be set.

Set Month

Enables the Month to be set.

Set Year

Enables the Year to be set.

Return to Set-up

Returns control to the Set-up Menu.

Fig. 3-73 Setting Date and Time

Set Date & Time
17 : 37 : 18
30 Oct 1991

CO430

Set Passwords

See Fig. 3-79. A form is displayed on the screen containing the Level 1 and Level 2 user-defined passwords. The soft keys are used to select the password to be changed.

The Set Password function requires entry of the instrument's Primary Password before the user-defined passwords can be changed (see page 3-13).

Enables the Level 1 Password to be set by entering a 4-digit number in the range 1000 to 9999.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

Set Level 1 Password

Enables the Level 2 Password to be set by entering a 6-digit number in the range 10000 to 999999.

Rotary Control	X	Step Keys	X	Numeric Pad	√	Terminator	Any
----------------	---	-----------	---	-------------	---	------------	-----

Set Level 2 Password

Return to Set-up

Returns control to the Set-up Menu.

Config Card

See Fig. 3-79. This menu is used to initialise a blank memory card and configure it to hold a number of stores. These stores are extensions of the instrument's resident stores, and can be used in the same way as the resident ones. The following store types can be located on the card:

- User Source Power Calibration
- Power Sensor Calibration Data
- Reflection Analyzer Calibration Data
- Trace Memory
- Instrument Settings

Since any data present on the memory card will be destroyed by the configuration process, this function is Level 1 Password protected.

A form is displayed showing identity of the card, the store types and their sizes (in bytes), and the number of stores allocated for each type. The current amount of memory remaining on the card is also shown (see Fig. 3-74).

Soft keys are displayed for each of the above store types. Pressing a soft key enables the user to change the number of stores allocated for the selected store type. If the number of stores entered would cause the memory capacity of the card to be exceeded, the number of stores will be limited to the maximum number possible.

The memory card can also be used to store macros (see [MACRO] key description). Any space not allocated for the above fixed length stores can be used for macros.

Source
Power Cal

Rotary Control Step Keys Numeric Pad Terminator Any

Enables a specified number of stores to be allocated for user source power calibration.

Sensor
Cal Data

Rotary Control Step Keys Numeric Pad Terminator Any

Enables a specified number of stores to be allocated for power sensor calibration data.

Trace
Memory

Rotary Control Step Keys Numeric Pad Terminator Any

Enables a specified number of stores to be allocated for trace memories.

Instrument
Settings

Rotary Control Step Keys Numeric Pad Terminator Any

Enables a specified number of stores to be allocated for instrument settings.

Adapter
Stores

Leads to the Adapt Stores Menu.

This soft key will only be displayed if the 6210 Reflection Analyzer is connected.
See page 3-289.

Edit Title
 Leads to a sub-menu and displays a form which enables a text string of up to twenty characters to be entered as the identity of the card. The method of entry is the same as that described for the Screen Title Menu (page 3-276).

Configure Card
 Initiates the configuration process.

Return to Set-up
 Terminates the configure memory card function. The function prompts for confirmation if the store allocation for any of the store types has been changed.

Configure Memory Card		
Store Type	Size	Number
Source Power Calibration	2512	1
Sensor Calibration Data	520	2
Trace Memory	7092	2
Instrument Settings	6380	5
Reflection Analyzer Calibration	38760	1
Reflection Analyzer Cal Kit	284	20
Macro Memory: 36896		

Fig. 3-74 Configuring a Memory Card

Service **Set-up** **Configure Memory Card** **Adapter Stores**

See Fig 3-79. This menu is used to specify the number of reflection analyzer stores.

Enables a specified number of stores to be allocated for reflection analyzer calibration data.

Reflection Analyzer Cal Rotary Control √ Step Keys √ Numeric Pad √ Terminator Any

Enables a specified number of stores to be allocated for reflection analyzer calibration kits.

Refli Analyzer Cal Kit Rotary Control √ Step Keys √ Numeric Pad √ Terminator Any

Returns control to the Config Card Menu.

Return to Config Card

Refli Analyzer Cal Kit

Reflection Analyzer Cal

Adapt Stores

UTILITY

Return to Service

Returns control to the Service Menu.

Display Build State

Displays the build state of the instrument, including the total number of hours that the instrument has been operating, and the time and data of the most recent frequency standard cal and power reference cal. The [Print] soft key sends this data to the printer. The instrument's build state can also be printed out by pressing the [COPY] key on power up.

Erase Test Results

Clears the power on test results, i.e. sets all the tests to 'pass'. This function is confirmation protected.

Display Test Results

Leads to the Test Results Menu, which enables power on test results to be displayed and printed. See below.

Status

See Fig. 3-78. This menu allows the user to examine the power on test results and the build state of the instrument.

UTILITY

Service

Status

Abort

Terminates the function without installing the software option.

Continue

Initiates installation of the software option from a memory card that has previously been inserted into the memory card slot.

To install a software option, the card is inserted and the sequence of key presses shown above is performed. If the card is not a software option card, the user will be informed by a displayed message that an invalid card has been inserted. A valid card results in a window being displayed informing the user that the software identified on the card is about to be installed and to press [Continue] when ready. When installation is complete, the user is informed and is returned to the Set-up menu.

If the card has been used previously, software options will only be enabled if the instrument is the same as before. If this is not the case, no options will be enabled, nothing will be written to the card, and a message will displayed informing the user.

The cards are supplied configured so that the software option can only be used in one instrument. When the card is inserted into the front panel slot and this soft key is pressed, the card will first be checked to determine if it has been used in an instrument before. If not, a special code will be written to the card. Thereafter, the card will only enable software options in that one specific instrument.

See Fig. 3-79. This menu is used to install a software option from a memory card.

UTILITY

Service

Set-up

Install SW Option

Test Results

See Fig. 3-78. This menu is used to display and print the results of the tests carried out by the instrument at power on.

The test results occupy several pages which can be accessed using the [Page Up] and [Page Down] soft keys. The overall pass/fail indication is shown at the top of the first page. The MTS maintains records in non-volatile memory of the time and date of the most recent failure for each test. The menu also gives information about failures during source calibration.

The following self-tests are carried out at power-on.

Bootstrap Loader Tests. These are carried out by the program that loads programs into the Digital Board RAM and the Analogue Board RAM (for the Graphics System) for execution by the associated transputers. The bootstrap loader also loads code into two additional processors in the reflection analyzer, if it is present.

ROM Test. At power on, the bootstrap loader generates and stores a ROM checksum, and this is compared with the stored checksum generated at the previous power on. If the checksums differ, a failure message is displayed together with the previous and current checksums.

Digital Board Transputer. If this device is unserviceable it is very unlikely that any software will run, therefore no attempt is made to test or report failures.

Analogue Board Transputer Test (Graphics System). The internal memory in the Graphics System transputer chip is tested via the link from the Digital Board transputer. If a failure is detected, the message *Analogue board processor failure* is sent to the printer port. Without the graphics transputer, no further testing is possible.

Reflection Analyzer Transputer Tests. If the reflection analyzer is present, its two processors are tested via a link from the Digital Board transputer. If either processor fails the test, the message *Adapter processor failure* is sent to the printer port. The instrument will then power up as an MTS with no reflection analyzer fitted, and all reflection analyzer functions will be disabled.

Memory Tests. These are carried out on both the Digital Board transputer (T1) and the Analogue Board transputer (T2). The first occurrence of a failure is logged and the message *Digital board memory failure* or *Analogue board memory failure* is output to the printer port. The transputer number (T1 or T2), address and test pattern are recorded in the Test Results.

Memory tests are also carried out on the two processors within the reflection analyzer, if it is present. If either of these have failed, the message *Adapter processor memory failure* is printed. The transputer number (T3 or T4), address and test pattern are recorded in the Test Results as they are for T1 and T2. In the event of a reflection analyzer memory failure, the instrument will power up as an MTS with no reflection analyzer fitted, and all reflection analyzer functions will be disabled.

Device Tests. Tests are carried out on the GPIB chip, the keyboard and the real-time clock. Failures are reported in the Test Results, and the following messages are sent to the printer port:

- Keyboard failure*
- GPIB chip failure*
- Real time clock failure*

UTILITY

Service

Status

Display Test Results

If the clock fails, an attempt is made to set it to the default date and time: Midnight, 1st January, 1990.

Subsystem Tests. These tests are carried out as the main software components of the system initialise the hardware for which they are responsible.

Graphics. Reports "pass" if the graphics system appears to have initialised satisfactorily.

Source. Reports "pass" if the source system has initialised satisfactorily and locking is achieved.

Data Acquisition. Tests are carried out on the following data acquisition components and the pass/fail status is reported:

ADC
Calibration DAC
Main amplifier
Sequencer

Non-Volatile Memory. Each store within the instrument's non-volatile memory is protected by a checksum. When data is accessed from a store, the checksum is recalculated. If the data within a store is found to be corrupt, a "Store Corrupted" error message is displayed, and an entry made in the Test Results. Corrupted stores are automatically reset to empty, or overwritten with default data from ROM, depending on the store type.

Power Supply Temperature Monitoring. The power supply temperature is checked every few minutes. If operational limits are exceeded, a "Power supply overheating" message is displayed, and an entry made in the Test Results. (If the temperature continues to rise, the power supply will eventually shut down automatically.)

Source Calibration. If a source frequency cal or power cal fails, detailed information concerning the failure is recorded. This is described fully in the 6200 Maintenance Manual.

Displays the previous page of test results.

Page
Up

Displays the next page of test results.

Page
Down

Enables a hard copy printout of the test results to be obtained.

Print

Returns control to the Status Menu.

Return to
Status

Instrument Cals

See Fig. 3-80. This menu provides facilities calibrating the internal frequency standard and power reference, and calibrating the instrument to match non-standard test conditions (e.g. high ambient temperature), or calibration at the output of an amplifier, filter, cable or autotester.

The calibration process is controlled automatically by the MTS. For operations taking more than a few seconds to complete in the following sub-menus, a percentage complete indicator will be displayed after the function has been initiated.

Frequency Standard Cal

Leads to the Freq Std Cal Menu, which is used to calibrate the instrument's internal frequency standard. This facility is Level 2 Password protected.

See page 3-294.

Power Ref Cal

Leads to the Pwr Ref Cal Menu, which is used to calibrate the power reference output.

See page 3-294.

Perform Freq Cal

Calibrates the YIG oscillators of the instrument's source using the internal counter. When this soft key is pressed, frequency calibration commences. When calibration is complete, the user is informed and is returned to the Instrument Cals Menu.

This soft key is not displayed on the 6202, since it does not contain any YIG oscillators.

Leads to the Src Power Cal Menu, which provides power calibration facilities for the instrument's source.

See page 3-295.

Transfer to Primary

Leads to the Transfer to Pri Menu, which is used to transfer a user power calibration into the Primary calibration store. This function is Level 2 Password protected.

See page 3-298.

Select Power Cal

Leads to the Select Pwr Cal menu, which is used to select which power calibration is to be used in the instrument.

See page 3-298.

Adapter Cals

Leads to the Adapter Cals Menu, which provides calibration functions for the Reflection Analyzer detector diodes.

(See page 3-295)

This soft key is only displayed if the 6210 Reflection Analyzer is connected.

Return to Service

Returns control to the Service Menu.

Abort
Calibration

Terminates calibration.

Continue

Initiates sensor zeroing and calibration of the power reference.

A message is displayed prompting the user to disconnect the sensor from any RF source and to press the [Continue] soft key when ready. When the sensor has been zeroed, the user is prompted to connect the sensor to an external power reference standard and press [Continue] when ready. Readings are then taken from the standard. When this has been done, the user is asked to connect the sensor to the instrument's POWER REF connector and press [Continue] when ready. The instrument's power reference is then calibrated. When complete, the user is informed and is returned to the Instrument Cals Menu.

See Fig. 3-80. This menu is used to calibrate the power reference output of the instrument. This facility is Level 2 Password protected.

Pwr Ref Cal

UTILITY

Service

Instrument
Calibrations

Power Ref
Cal

Abort
Calibration

Terminates the function without performing a frequency calibration.

Continue

Initiates calibration of the internal frequency standard.

A form is displayed containing the date and time of the last frequency calibration. A message is displayed prompting the user to connect the frequency standard to the STD INP/OUT/PUT connector on the rear panel, and to press the [Continue] soft key when ready. When calibration is complete, the user is informed and is returned to the Instrument Cals Menu.

See Fig. 3-80. This menu is used to calibrate the instrument's internal frequency standard against an external frequency standard. This facility is Level 2 Password protected.

Freq Std Cal

UTILITY

Service

Instrument
Calibrations

Frequency
Standard Cal

See Fig. 3-80. This menu provides broadband and narrowband power calibration facilities for the instrument's source.

In broadband calibration, the MTS is calibrated for frequency and power over its full operating range. The narrowband calibration facility enables a power calibration to be performed over a limited frequency range. This makes it possible to calibrate the instrument at the output of frequency selective devices such as filters and amplifiers. The calibration data can be stored in the instrument's non-volatile memory or on a memory card, while still retaining the primary calibration, created during factory calibration.

Leads to the Power Cal Menu (Broadband), which is used to carry out a full frequency range power calibration of the instrument's source. This facility is Level 1 Password protected.

See page 3-296.

Leads to the Power Cal Menu (Narrowband), which is used to carry out a narrowband frequency range power calibration of the instrument's source. This facility is Level 1 Password protected.

See page 3-297.

Returns control to the Instrument Cals Menu.

Src Power Cal

UTILITY

Service

Instrument
Calibrations

Source
Power Cal

Broadband
Power Cal

Narrowband
Power Cal

Return to
Inst Cals

UTILITY

Service

Instrument
Calibrations

Adapter
Cals

Adapter Cals

Refll Analyzer
Lin Cal

See Fig. 3-80. This menu is used to carry out a calibration of the detector diodes in the 6210 and generate new linearity polynomials for them. If required, the 6210 detector diode polynomials can be reset to their default (factory set) values.

This soft key initiates calibration of the 6210 detector diodes and generates new linearity polynomials for them. A message is displayed prompting the user to connect the MTS RF output to the 6210 RF input, and to ensure that nothing is connected to the 6210 test port. A sub-menu is also displayed containing [Continue] and [Abort Calibration] soft keys. On pressing [Continue], this instrument will make its initial set of measurements and a percentage complete indicator will be displayed. When the data has been acquired, the user is prompted to connect the MTS RF output to the 6210 test port, and to connect a matched load to the 6210 RF input. After pressing [Continue], a percentage complete indicator will again be displayed while a second set of measurements are made. When completed, the new linearity polynomials are generated, the calibration will exit, and the user is informed that the new polynomials are in use.

Resets the 6210 detector diode polynomials to their default (factory set) values.

Returns control to the Instrument Cals Menu.

Default
Lin Cal Data
Return to
Inst Cals

Fig. 3-80. This menu is used to carry out a full frequency range power calibration of the instrument's source. This facility is Level 1 Password protected.

A window is displayed prompting the user to connect the sensor to input D and to the RF OUTPUT connector, and to press the [Continue] soft key when ready. After pressing [Continue], percentage complete indicators are displayed while linearity and flatness data are being collected.

When the data has been acquired, the user can save the calibration by specifying a store then pressing the [Save] soft key. The MTS provides two internal stores for this; a suitably configured memory card can be used for additional storage. Before saving, the user is asked if he wishes to change the identity of the calibration, using the same method as in the Screen Title Menu (see page 3-276).

Note...

Instead of calibrating at the RF output connector, calibration may be carried out at the output of any cables, adapters, etc. that are connected to the RF output.

Initiates broadband source power calibration.

Continue

This soft key is unselectable.

Set Start Frequency

This soft key is unselectable.

Set Stop Frequency

Used to select the cal factor table that the cal factor for input D will be selected from, by entering the identity number of the table from the keyboard.

Select Cal Fact Table

Leads to the Edit Spec Menu, which is used for editing the calibration data for the current sensor. This menu is the same as for the measurement setup for a scalar channel. *See page 3-70.*

Edit Sensor Cal Data

Leads to the Sensor Cal Menu, which is used to zero the power sensor and to calibrate it against the reference. *See page 3-88.*

Sensor Cal

Terminates calibration.

Abort Calibration

Power Cal

See Fig. 3-80. This menu is used to carry out a narrowband frequency range power calibration of the instrument's source. This facility is Level 1 Password protected.

A window is displayed showing the frequency range the calibration will cover (initially the entire range of the source), and a message is displayed prompting the user to connect the sensor to input D and to the RF OUTPUT connector. The frequency range that the calibration will cover is specified using the [Set Start frequency] and [Set Stop frequency] soft keys. After pressing [Continue], percentage complete indicators are displayed while linearity and flatness data are being collected.

When the data has been acquired, the user can save the calibration by specifying a store then pressing the [Save] soft key. The MTS provides two internal stores for this; a suitably configured memory card can be used for additional storage. Before saving, the user is asked if he wishes to change the identity of the calibration, using the same method as in the Screen Title Menu (see page 3-276)

Note...

Instead of calibrating at the RF output connector, calibration may be carried out at the output of any cables, adapters, etc. that are connected to the RF output.

Continue

Initially checks that the start and stop values are within the frequency range of the source, and then initiates the narrowband calibration.

Set Start Frequency

Enables the start frequency of the calibration to be specified.

Rotary Control v Step Keys v Numeric Pad v Terminator 10+

Set Stop Frequency

Enables the stop frequency of the calibration to be specified.

Rotary Control v Step Keys v Numeric Pad v Terminator 10+

Select Cal Fact Table

Used to select the cal factor table that the cal factor for input D will be selected from, by entering the identity number of the table from the keyboard.

Edit Sensor Cal Data

Leads to the Edit Spec Menu, which is used for editing the calibration data for the current sensor. This menu is the same as for the measurement setup for a scalar channel. See page 3-70.

Sensor Cal

Leads to the Sensor Cal Menu, which is used to zero the power sensor and to calibrate it against the reference. See page 3-88

Abort Calibration

Terminates calibration.

UTILITY

Service Instrument Calibrations Transfer to Primary

Transfer to Pri

See Fig. 3-80. This menu is used to replace the current primary power calibration with a user power calibration created using the Src Power Cal Menu.

This function overwrites the primary calibration, which is stored in EEPROM, and is Level 2 Password protected. The primary calibration store of a new instrument contains the factory generated power calibration data. Only broadband power calibration data can be transferred to the primary store. A window is displayed containing a summary of the current primary calibration and a summary of user calibration store 1.

Overwrites the Primary calibration store with the user calibration data contained in a selected store.

This soft key is unselectable if the displayed store is narrowband.

Used to select a user store by entering the store identity number from the keyboard.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Selects the previous user calibration store.

Previous Store

Selects the next user calibration store.

Next Store

Returns control to the Instrument Cals Menu.

Return to Inst Cals

UTILITY

Service Instrument Calibrations Select Power Cal

Select Pwr Cal

See Fig. 3-80. This menu allows the user to select which power calibration is to be used in the instrument. A window is displayed containing a summary of the current calibration and indicates whether it is a primary or user calibration.

Selects primary calibration

Primary Calibration

Allows a user calibration to be selected by entering the identity number of the required store.

User Calibration

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Returns control to the Instrument Cals Menu.

Return to Inst Cals

Tests

See Fig. 3-78. This menu enables the operator to verify that the display and keyboard are functioning correctly.

**Test
Keyboard**

Allows each key on the front panel to be tested individually, and allows the rotary control to be tested for clockwise and anti-clockwise rotation.

**Test
Display**

A form is displayed on the screen containing a representation of the front panel key layout. For each keypress or rotary control movement detected, the corresponding symbol on the front panel representation will be highlighted, and remains highlighted for the duration of the test. The [Exit] soft key terminates the test.

This function is Marconi password protected and is not available to the user.

Returns control to the Service Menu.

**Return to
Service**

Edit Specs

See Fig. 3-78. This menu is used to edit the sensitivity and power factor values of the detector correction specifications for Marconi and user-defined detectors, and to edit the power sensor calibration data tables.

Edit Det

Leads to the Edit Det Specs Menu, which enables editing of correction data for the user-defined detectors.
See page 3-69.

Edit MI Det

This is a Marconi Password protected function and is not available to the user.

Corr Spec

Leads to the Edit Spec Menu, which is used for editing the calibration data for the current sensor. This menu is the same as for the measurement setup for a scalar channel.
See page 3-70.

**Edit Sensor
Cal Data**

**Return to
Service**

Returns control to the Service Menu.

Diagnostics

See Fig. 3-81. The Diagnostics Menu provides diagnostics functions for the instrument's source, data acquisition system and frequency counter.

Source Diagnostics

Leads to the Src Diag Menu.
See below.

Data Acq Diagnostics

Leads to the Dacq Diag Menu.
See page 3-307.

Counter Diagnostics

Leads to the Counter Diag Menu.
See page 3-310.

Save Cal Variance

Used to store the variance data of the reflection analyzer currently being used by the instrument into a trace memory. The variance can then be viewed by displaying the memory. To save the data to a specific memory location, the memory identity number is entered in the input field.
This soft key will only be displayed if the 6210 Reflection Analyzer is connected.

Return to Service

Returns control to the Service Menu.

UTILITY

Service

Diagnostics

Source Diagnostics

Src Diag

See Fig. 3-81. This menu is used to perform diagnostics functions on the instrument's source, by permitting low level monitoring and control of various source parameters.

Band Select Word

Leads to the Band Select Menu.
See page 3-302.

RF Path Switch

Leads to the RF Path Menu.
See page 3-303.

Source Control

Leads to the Src Control Menu.
See page 3-304.

Counter Functions

Leads to the Ctr Funcs Menu.
See page 3-305.

Counter

Selects the 'Counter' setting of the SP2T switch on the microwave chassis; the switch then routes the COUNTER input signal to the sampling gate.

YIG Lock

Selects the 'YIG lock' setting of the SP2T switch on the microwave chassis; the switch then routes the YIG signal to the sampling gate.

More

Leads to the Src Diag More Menu.
See page 3-305.

Exit Src Diagnostics

Returns control to the Diagnostics Menu, after prompting for confirmation.

UTILITY

Service

Diagnostics

Return to Src Diag

Returns control to the Src Diag Menu.



Selects the next bit of the band select word.



Selects the previous bit of the band select word.

On / Off

Used to toggle the selected bit on or off.

Fig. 3-75 Band Select Word Form

Band Select Word	
On	10 - 250 MHz
Off	250 - 500 MHz
On	0.5 - 1 GHz
Off	1 - 2 GHz
On	Sampler drive enable
Off	2 - 8 GHz
On	8 - 12.4 GHz
Off	12.4 - 20 GHz
On	20 - 26.5 GHz
Off	26.5 - 40 GHz
On	Lower 1/2 octave
Off	Upper 1/2 octave
On	Direct count
Off	Count(on) YIG lock (off)

The band select word comprises 14 digital lines which are used to control the MTS source. The meaning of each bit is shown on the form that is displayed (Fig. 3-75). An individual bit is selected using the [↑] and [↓] soft keys, and is toggled on or off using the [On/Off] soft key. (On instruments other than 6204 the 26.5 - 40 GHz bit is replaced with the word 'Reserved'.)

See Fig. 3-81. This menu enables individual bits of the band select word to be set on or off.

Band Select

See Fig. 3-81. This menu is used to control the setting of the SP4T (or SP5T) PIN switch on the microwave chassis and, for 6204 instruments, to switch the frequency doubler circuit in or out.

RF Path

Synth Band

Sets the PIN switch to the '2 - 8 GHz' position.
This soft key is not selectable on 6202 instruments.

2-8 GHz

Sets the PIN switch to the '8 - 12 GHz' position.
This soft key is not selectable on 6201 and 6202 instruments.

8-12 GHz

Sets the PIN switch to the '12 - 20 GHz' position.
This soft key is not selectable on 6201 and 6202 instruments.

12-20 GHz

Sets the PIN switch to the '20 - 26.5 GHz' position.
This soft key is not selectable on 6200, 6201 and 6202 instruments.

20-26.5 GHz

Off

Sets the PIN switch to the 'Off' position.

Doubler

Toggles the frequency doubler on or off.
This soft key is only displayed on 6204 instruments.

Return to Src Diag

Returns control to the Src Diag Menu.

Src Control See Fig. 3-81. This menu provides the following functions for controlling the source.

Changing the values of the level DAC, YIG tuning DAC and YIG FM gain. Selection of the synthesizer loop bandwidth, which is the frequency of the synthesizer phase-locked loop. Low bandwidth reduces the spurious signal content of the RF output but slows down the response; high bandwidth has the opposite effect. Enabling/disabling of the CW filter. The CW filter is used to reduce the YIG oscillator tuning bandwidth and lower the residual FM to the values specified in the Performance Data section of Chapter 1. However, this also slows down the response due to the longer settling time.

Level DAC

Enables the value of the Level DAC to be changed.

Rotary Control v Step Keys v Numeric Pad v Terminator Any

YIG Tuning DAC

Enables the value of the YIG tuning DAC to be changed.

Rotary Control v Step Keys v Numeric Pad v Terminator Any

IG FM Gain

Enables the value of the YIG FM gain to be changed.

Rotary Control v Step Keys v Numeric Pad v Terminator Any

FM Zero

Temporarily sets the YIG FM gain to zero in order to centralise the currently selected YIG oscillator.

Synth Loop BW High

The loop bandwidth is always HIGH irrespective of the operating mode.

Synth Loop BW Low

The loop bandwidth is always LOW irrespective of the operating mode.

CW Filter

Toggles the CW filter on or off irrespective of the operating mode.

Return to Src Diag

Returns control to the Src Diag Menu.

Std Tuning (Fine)

Rotary Control Step Keys Numeric Pad Terminator Any

Enables the value of the standard tuning DAC (fine) to be changed.

Std Tuning (Coarse)

Rotary Control Step Keys Numeric Pad Terminator Any

Enables the value of the standard tuning DAC (coarse) to be changed.

Pad 4 (20 DB)

Used to toggle Pad 4 of the step attenuator on or off.

Pad 3 (20 DB)

Used to toggle Pad 3 of the step attenuator on or off.

Pad 2 (10 DB)

Used to toggle Pad 2 of the step attenuator on or off.

Pad 1 (20 DB)

Used to toggle Pad 1 of the step attenuator on or off.

See Fig. 3-81. This menu is used to toggle individual pads of the step attenuator on or off, if this option is fitted, and to change the values of the standard tuning DACs.

Src Diag More

UTILITY

Service

Diagnostics

Source Diagnostics

More

Return to Src Diag

Returns control to the Src Diag Menu.

Harmonic Count

Sets the counter mode to 'harmonic count'

Direct Count

Sets the counter mode to 'direct count'.

Measure

Initiates a measurement of the counter IF for the specified gate time.

Set Gate Time

Rotary Control Step Keys Numeric Pad Terminator 10-

Enables the counter gate time to be changed.

Set UHF Freq

Rotary Control Step Keys Numeric Pad Terminator 10+

Used to set the counter UHF frequency within the range 1 - 2 GHz.

See Fig. 3-81. This menu is used to perform diagnostic functions on the instrument's counter.

Ctr Funcs

UTILITY

Service

Diagnostics

Source Diagnostics

Counter Functions

**Return to
Src Diag**

Returns control to the Src Diag Menu.

**Halt On
Error**

Used to select whether the source power cal will halt the calibration if it fails.

Dacq Diag

See Fig. 3-81. This menu is used to perform diagnostics functions on the instrument's data acquisition system, by permitting low level monitoring and control of various data acquisition system parameters.

A form will be displayed containing the current values of the selected ADC input, the range (if input is 1 to 4), offset DAC value and Cal DAC value. The form is only displayed if the service mode is turned on (see below).

This soft key toggles the data acquisition service mode on or off. Putting the data acquisition system into the service mode has the following effects:

The state of critical variables is saved

Automatic range-changing is disabled.

Sequencer control of the ADC multiplexer is disabled.

The message 'DACQ DIAGS MODE ACTIVE' is displayed in place of the screen title showing that Service Mode is enabled.

Service Mode

Set Up

Input

Select

Range

Enables the input range to be changed.
This soft key will only be selectable if the currently selected input is in the range 1 to 4.

Leads to the Set Up Input Menu.
See page 3-308.

Gain Correction

Data Acq Filter

Range Changing

Set DACs

Return to Diagnostics

Leads to the Set DACs Menu.
See page 3-310.

Toggles range changing for the data acquisition system on or off.
This soft key will only be selectable if the currently selected input is in the range 1 to 4.

Toggles the data acquisition filter on or off.
This soft key will only be selectable if the currently selected input is in the range 1 to 4.

Toggles gain correction for the data acquisition system on or off.
This soft key will only be selectable if the currently selected input is in the range 1 to 4.

Rotary Control Step Keys Numeric Pad Terminator Any

Returns control to the Diagnostics Menu.

See Fig. 3-81. This menu is used to define the input that will be used during data acquisition system diagnostics.

Set Up Input

Used to select any ADC multiplexer channel, i.e., the input to the ADC. A form is displayed containing the input types together with their identity numbers, and the currently selected input identity in an input field.

Select ADC Input

Rotary Control X Step Keys X Numeric Pad Y Terminator Any

All Detectors

Configures all four inputs A, B, C and D to accept scalar detectors.

ABC Detector D Pwr Sensor

Configures inputs A, B and C to accept scalar detectors and input D to accept a power meter sensor.

Auxiliary Input

Enables the signal present at the front panel AUX INPUT connector to be used by the data acquisition diagnostics.

1st Stage Amp Cal DAC

Enables the signal present at the 1st Stage Amp Cal DAC to be used by the data acquisition diagnostics. This soft key will only be selectable if the currently selected input is in the range 1 to 4 or 6.

2nd Stage Amp Cal DAC

Enables the signal present at the 2nd Stage Amp Cal DAC to be used by the data acquisition diagnostics. This soft key will only be selectable if the currently selected input is in the range 1 to 4 or 6.

Reflect Dacq Diagnostics

Leads to the Reflect Dacq Menu. This soft key will only be displayed if the 6210 Reflection Analyzer is connected, and will only be selectable if the [Auxiliary Input] soft key has been selected.

Return to Dacq Diag

Returns control to the Dacq Diag Menu.

Reflect Dacq

See Fig. 3-81. This menu provides several diagnostic functions for the reflection analyzer data acquisition system.

View Reflect
ADC Inputs

When this soft key is pressed, a form is displayed containing a list of the reflection analyzer ADC inputs together with their current values, as shown below.

View Reflection Analyzer ADC Inputs	
Ambient Temperature	: 1.000 V (28.56C)°C
Integrated Coupler Temperature	: 1.000 V (28.56C)°C
Single Coupler Temperature	: 1.000 V (28.56C)°C
Internal Air Temperature	: 1.000 V (28.56C)°C
Temp Control DAC	: 1.000 V
PSU Thermistor	: 1.000 V
+5V Ref	: 1.000 V
0V Ref	: 1.000 V

Set ATG
State

In order to calibrate the measurement system for a reflection analyzer measurement, the MTS automatically applies 10 different terminations generated by an arbitrary termination generator (ATG). This soft key can be used to set the ATG state by numeric entry as follows:

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Temperature
Control

Used to toggle the reflection analyzer's temperature control on or off.

Set Temp
Control DAC

Enables the reflection analyzer temperature control DAC value to be changed by entering a decimal number.

Rotary Control X Step Keys X Numeric Pad V Terminator Any

Set Refl
Offset DAC

Enables the reflection analyzer offset DAC value to be changed by entering a decimal number.

This soft key will only be selectable if the currently selected input is in the range 1 to 4.

Rotary Control V Step Keys V Numeric Pad V Terminator Any

High
Resolution

Used to toggle the under-range threshold level between its low resolution value (0.5 V) and its high resolution value (0.9 V).

Linearity
Correction

Toggles linearity correction for the currently selected ADC Input on and off. This soft key will only be selectable if the currently selected input is in the range 1 to 4.

Return to
Set Up Input

Returns control to the Set Up Input Menu.

**Return to
Diagnostics**

Returns control to the Diagnostics Menu.

Rotary Control Step Keys Numeric Pad Terminator 10-

**Set
Gate Time**

Enables the counter gate time to be changed.

Measure

Initiates a counter measurement. The measurement will be displayed in a window together with the intermediate values used to compute it, i.e. HF frequency, LO frequency and harmonic number.

Counter Diag

See Fig. 3-81. This menu is used to perform diagnostics functions on the instrument's counter, by allowing the user to set the counter gate time and to trigger a counter measurement.

UTILITY

Service

Diagnostics

Counter
Diagnostics

**Return to
Dacq Diag**

Returns control to the Dacq Diag Menu.

Rotary Control Step Keys Numeric Pad Terminator Any

**Set
Cal DAC**

Enables the 16-bit Cal DAC value to be changed, by entering a decimal number. This soft key will only be selectable if the currently selected input is in the range 1 to 4 and the calibration mode has been selected, or the currently selected input is input 6 (calibration).

**Set
Offset DAC**

Enables the 12-bit offset DAC value to be changed, by entering a decimal number. This soft key will only be selectable if the currently selected input is in the range 1 to 4. It will be unselectable if the [Auxiliary Input] soft key of the Set Up Input Menu has been selected.

Set DACs

See Fig. 3-81. This menu is used to change the values of the offset DAC and Cal DAC.

UTILITY

Service

Diagnostics

Data Acq
Diagnostics

Set
DACs

Applications

See Fig. 3-76. This menu enables the user to load and run an applications program which is stored on a memory card. The applications software adds new features to the MTS to fulfil a particular requirement (unlike a macro which only controls the existing features of the instrument). When the menu is first entered, a form is displayed showing the applications available on the card, and the current application if one has already been loaded.

Run Application

When this soft key is pressed, the user is given the choice of running the current application (if any), or running another one by entering the application number from the keyboard. Toggles the auto run feature on and off. When the instrument powers up, and auto run was previously enabled, any application on the card which has been designated as auto run will be automatically run.

Clear Data Store

Clears applications specific non-volatile settings data stores. This function is confirmation protected.

Return to Utility

Returns control to the Utility Menu.


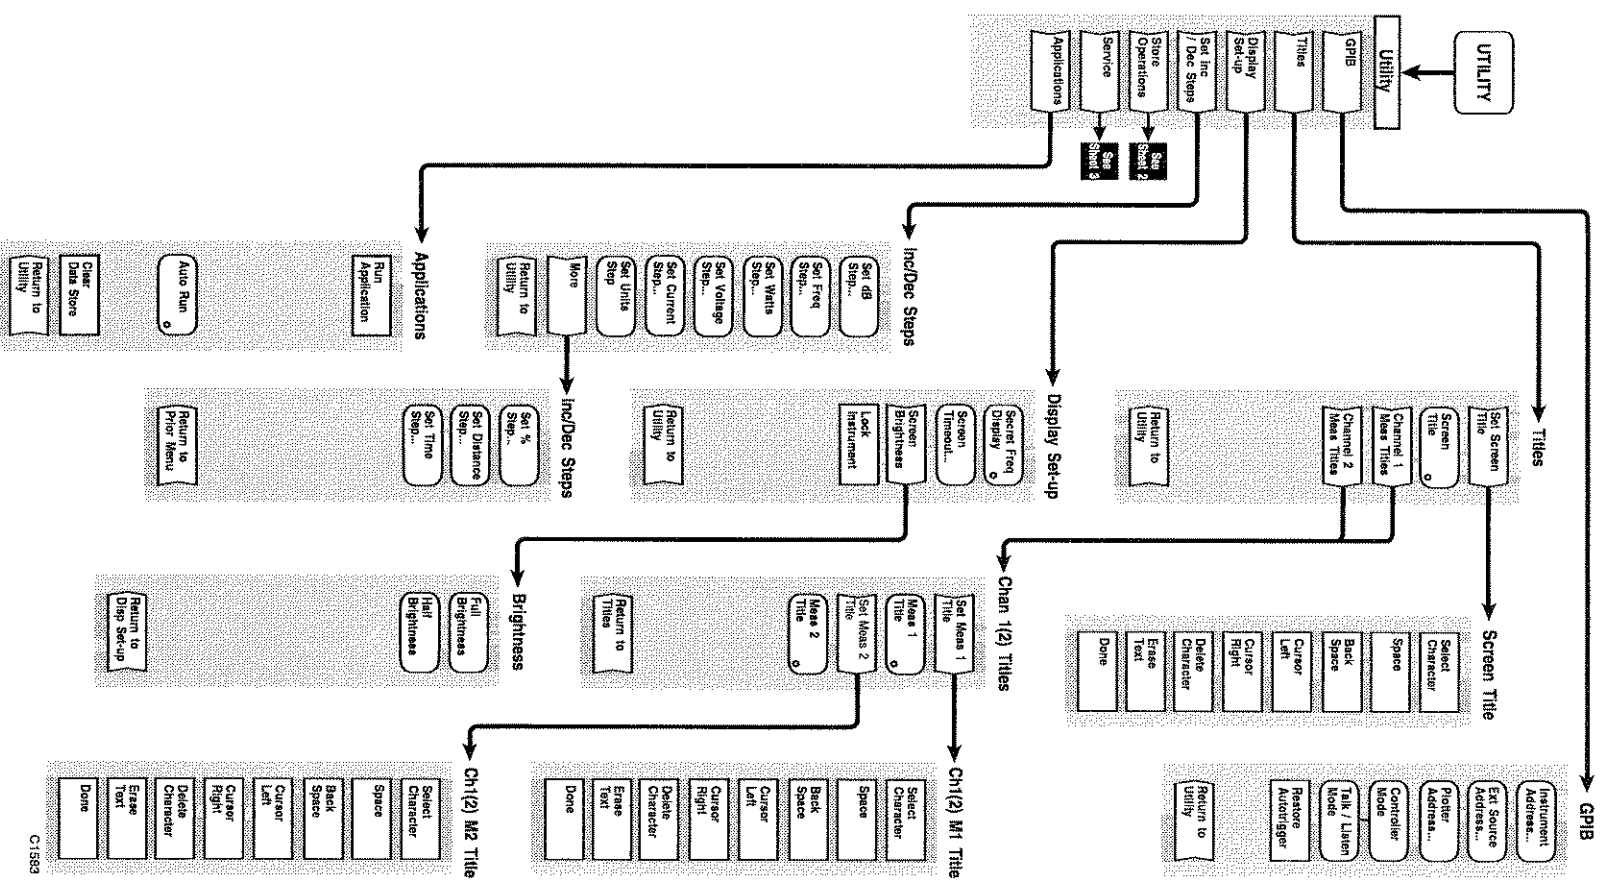


Fig. 3-76 UTILITY Menus (Sheet 1)

UTILITY

**Store
Operations**

Fig. 3-77 UTILITY Menu (Sheet 2)

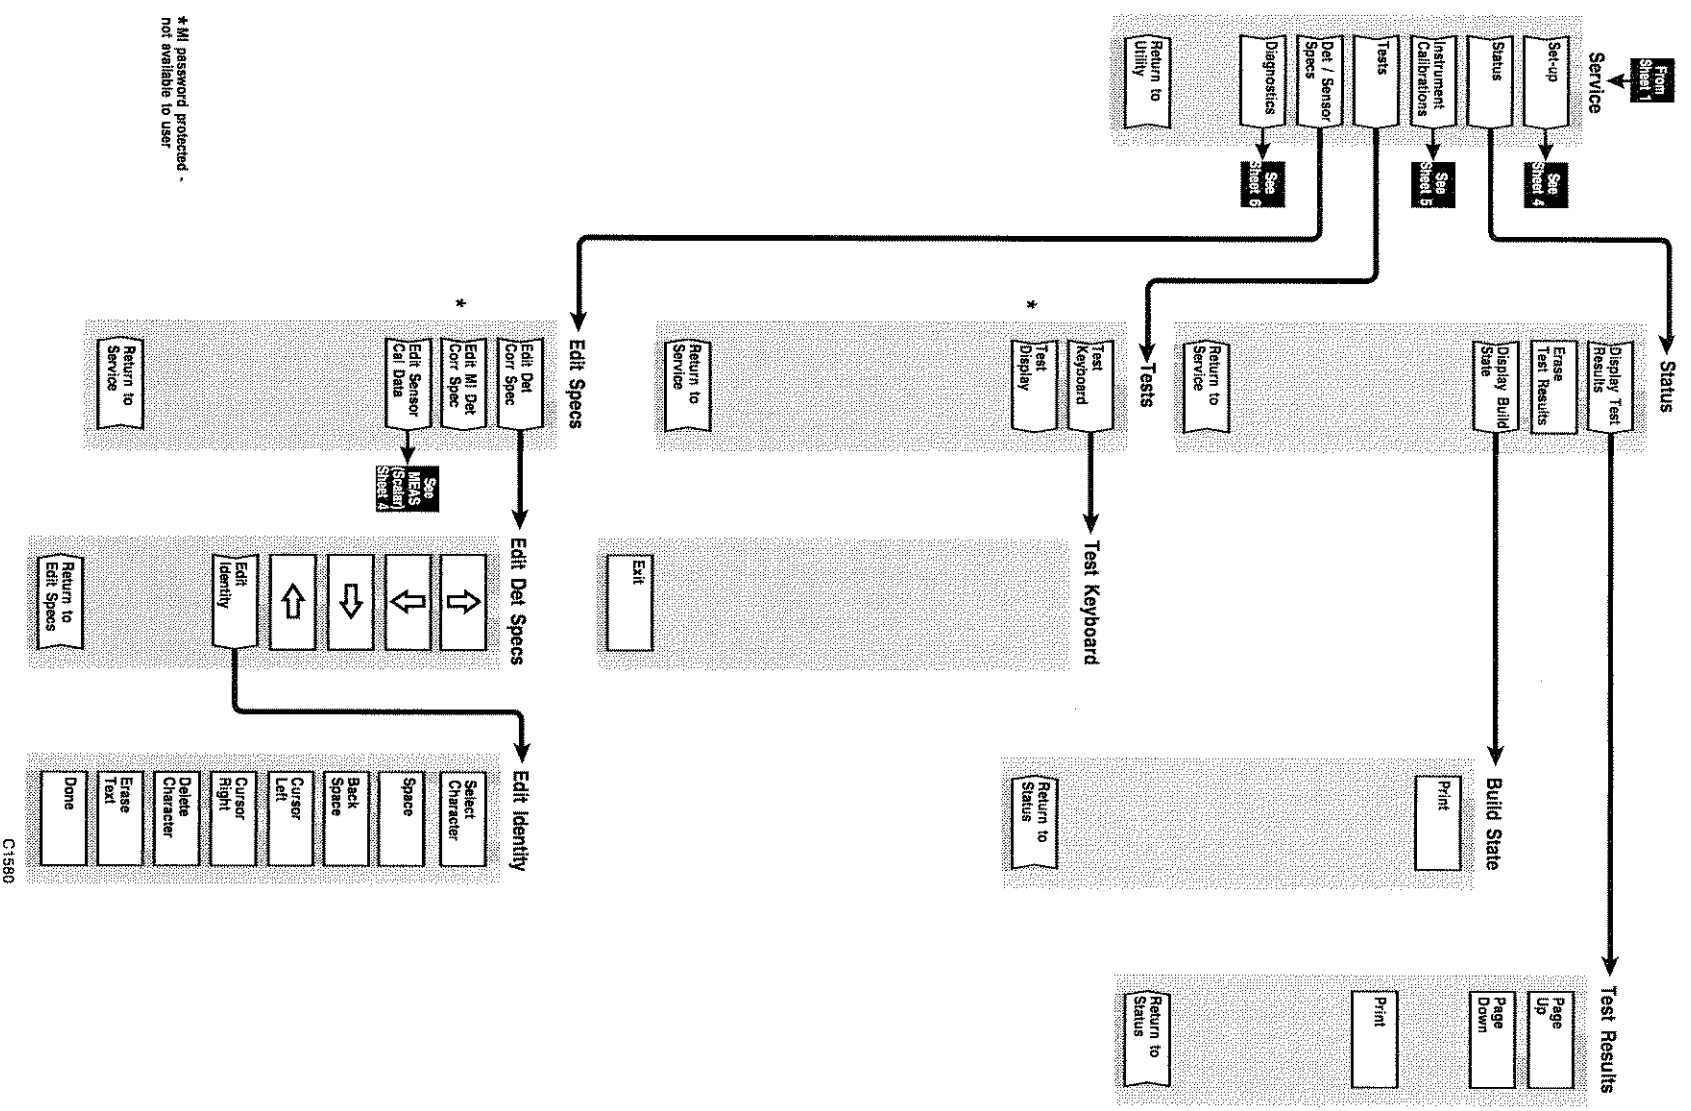

* All password protected - not available to user

C1580

Fig. 3-78 UTILITY Menus (Sheet 3)

UTILITY

Service

Fig. 3-78 UTILITY Menu (Sheet 3)

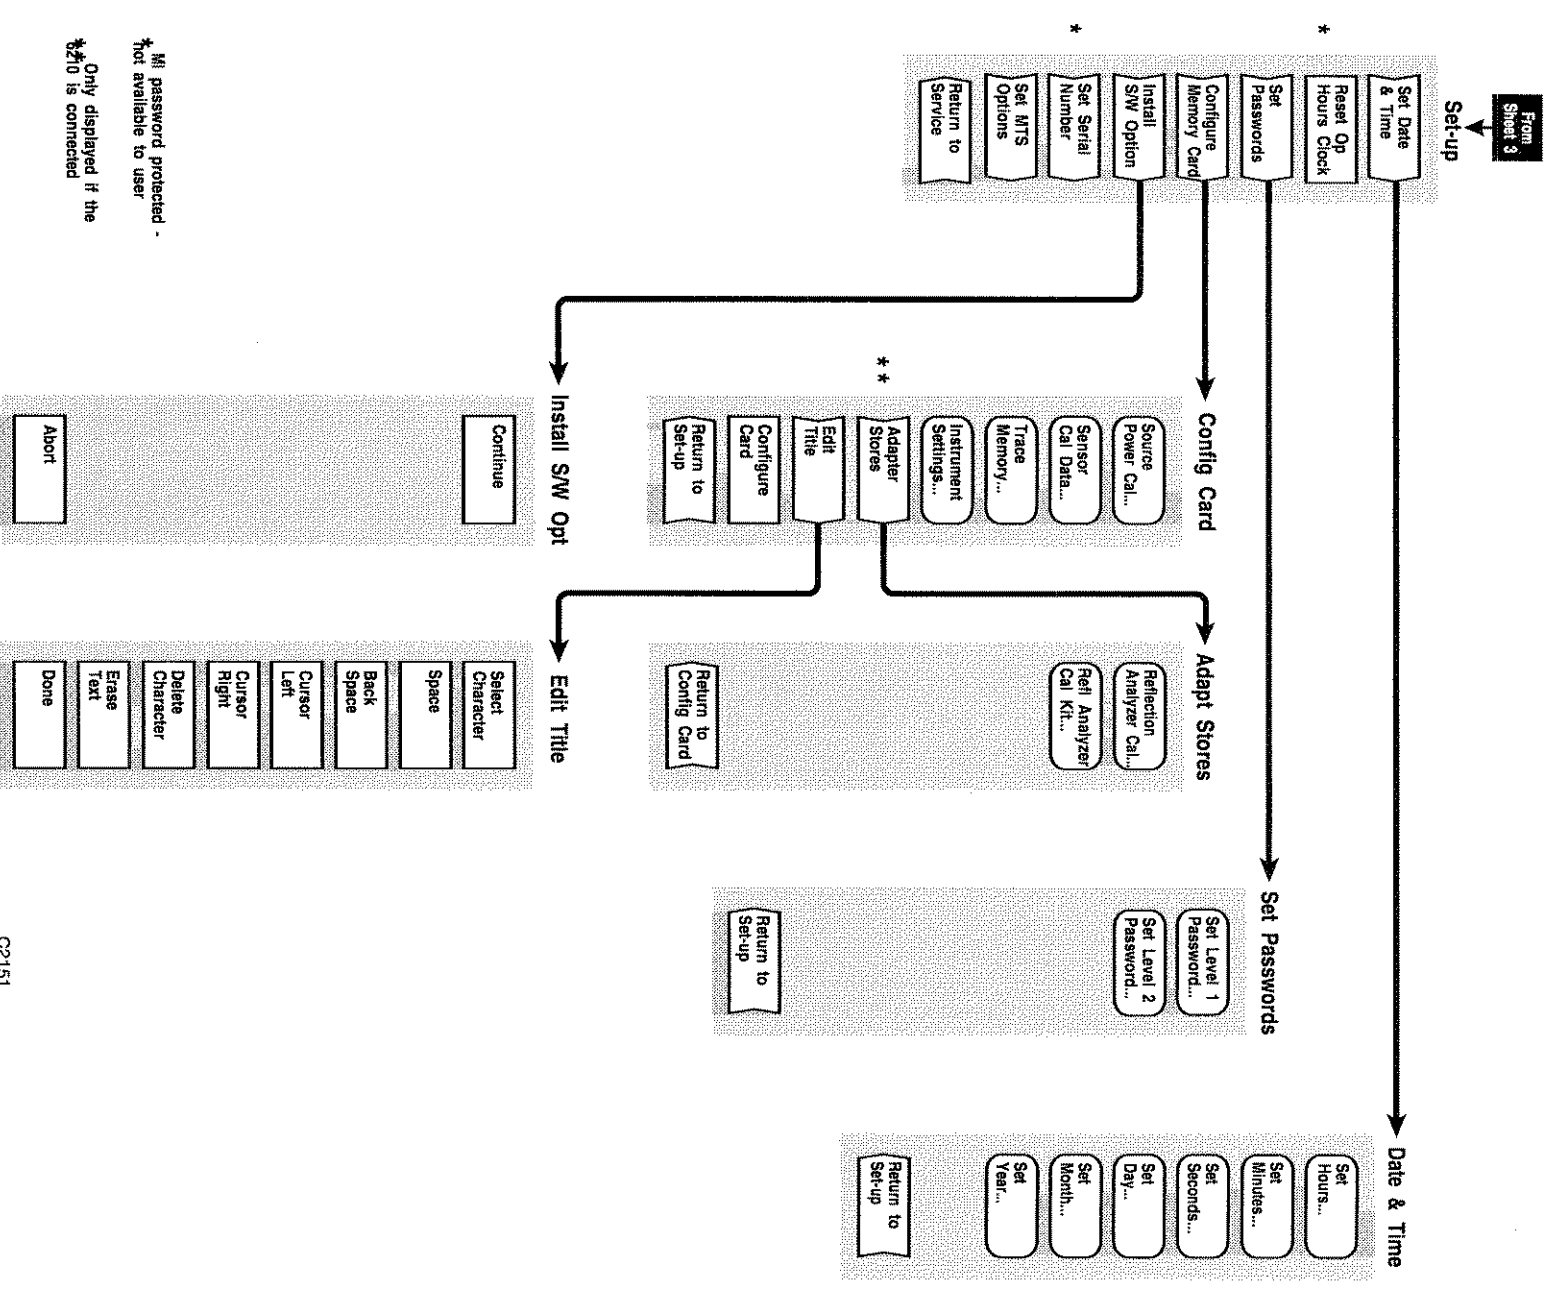


Fig. 3-79 UTILITY Menus (Sheet 4)

C2151

UTILITY

Service

Set-up

Fig. 3-79 UTILITY Menus (Sheet 4)

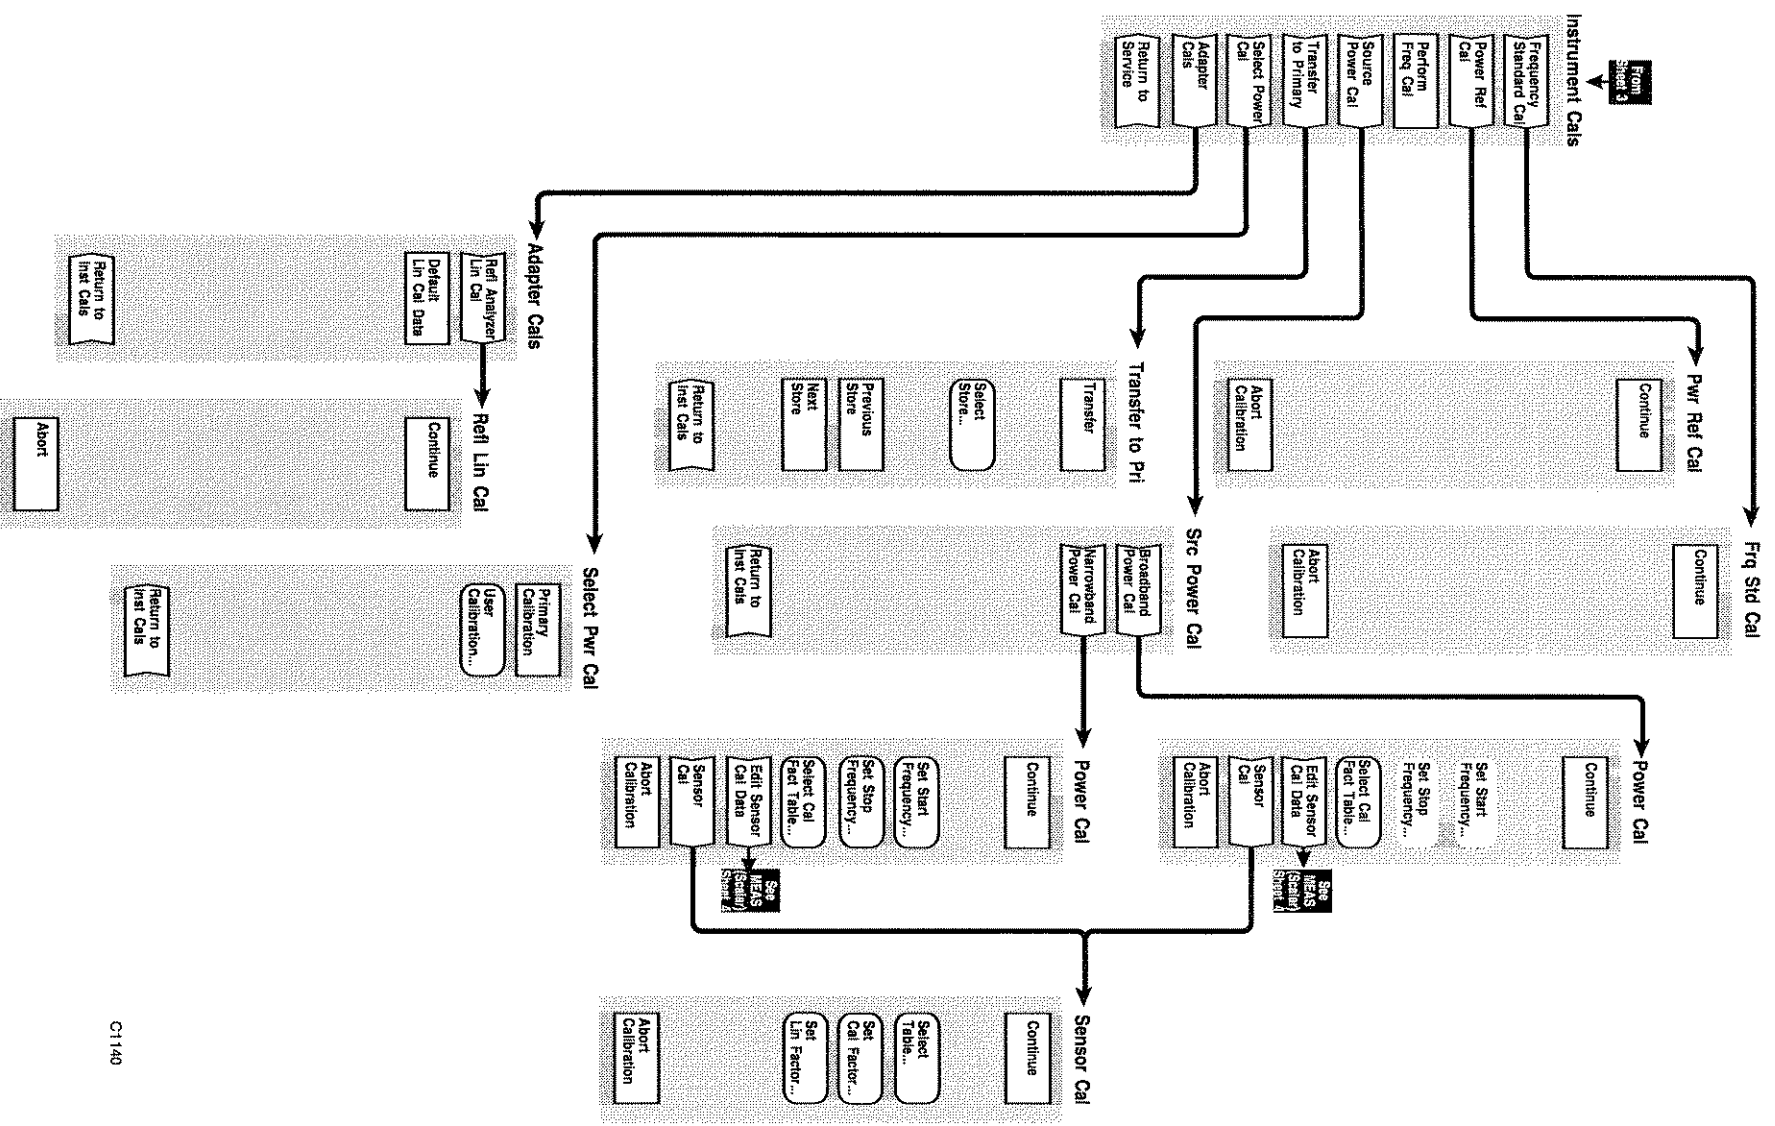


Fig. 3-80 UTILITY Menus (Sheet 5)

C1140

UTILITY

**Instrument
Calibrations**

Fig. 3-80 UTILITY Menus (Sheet 5)

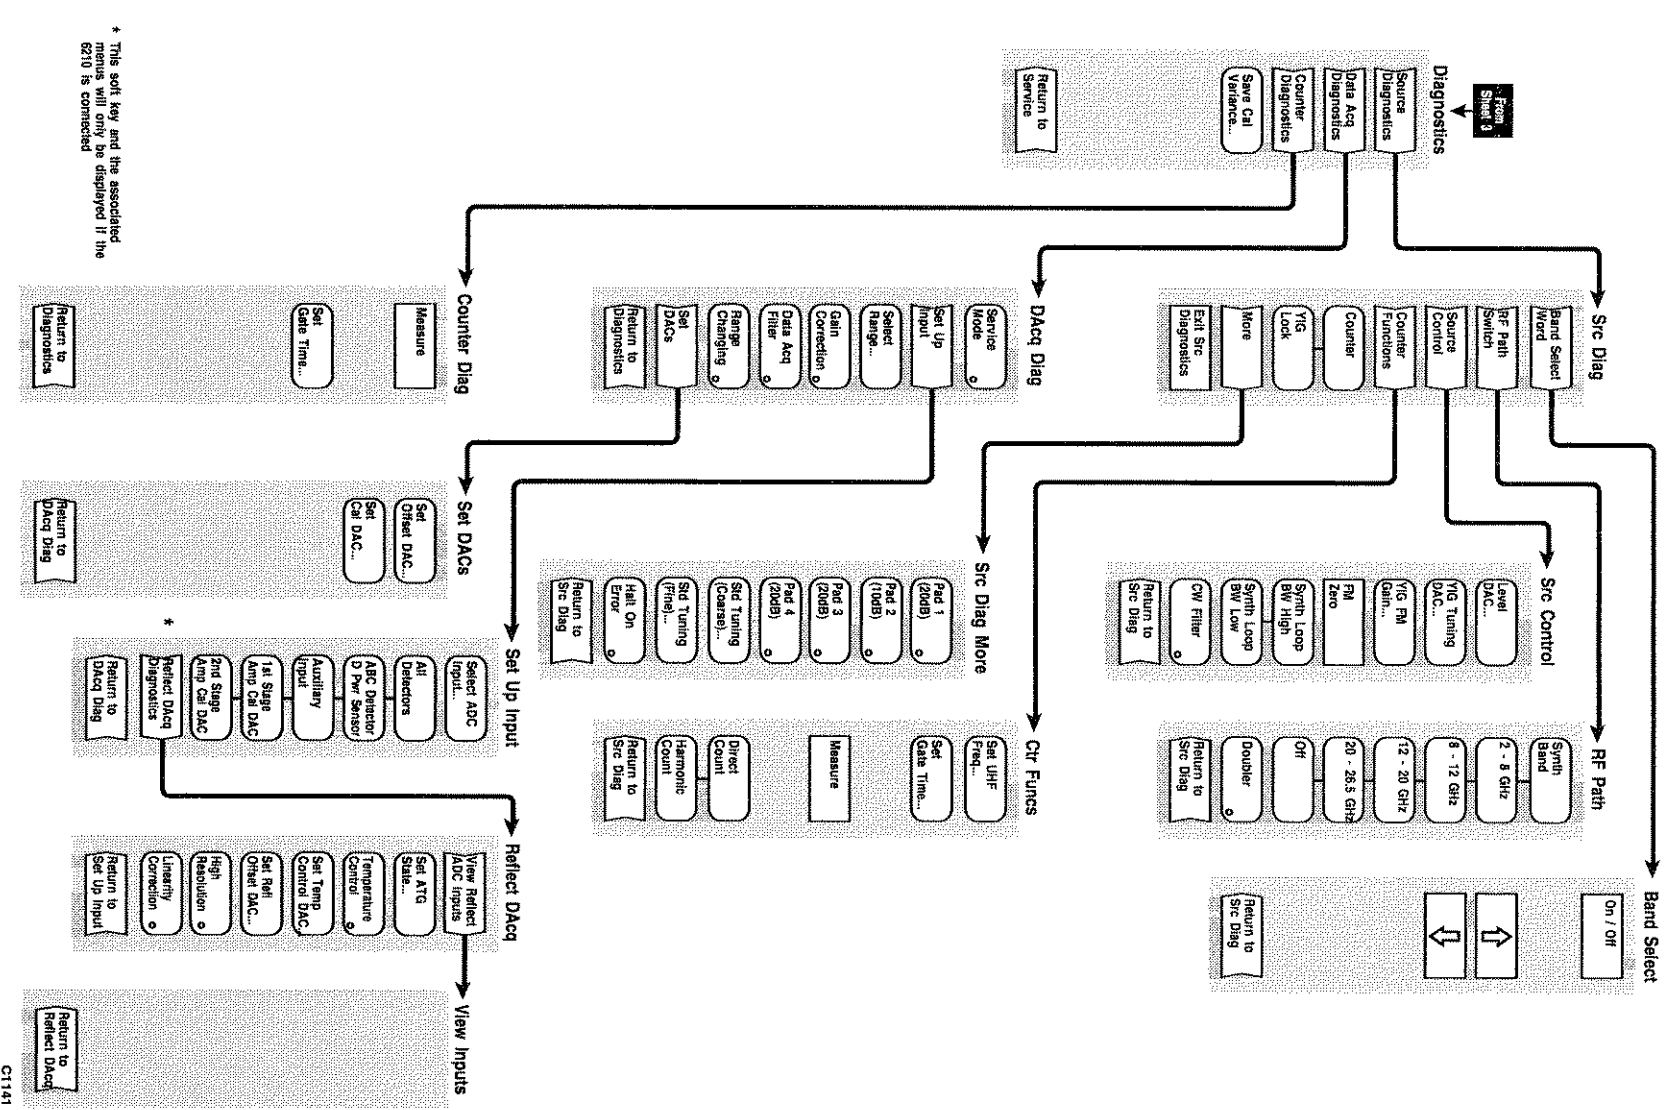


Fig. 3-81 UTILITY Menus (Sheet 6)

UTILITY

Service

Diagnostics

Fig. 3-81 UTILITY Menu (Sheet 6)

[LOCAL] KEY

The [LOCAL] key does not have an associated menu structure. It is used to return the instrument to local (front panel) operation after being put into the remote (GPB controlled) state by a GPB controller. This is the only front panel key that is not disabled when the instrument is remotely controlled over the GPB. The exception to this is when local lockout is in effect; this is a remote command that disables the [LOCAL] key making it difficult to interfere with the MTS while it is under remote control.

This key is also used to access the Edit Macro Menu when in the macro recording mode (see page 3-252).

[HOLD] KEY

The [HOLD] key does not have an associated menu structure. It is used to hold (freeze) the display of the active measurement. This is useful, for example, if the display is to be photographed. If HOLD is enabled for a swept measurement, changes to trace parameters (such as format, scaling, etc.) will cause the displayed trace to be refreshed from stored data.

Pressing the [HOLD] key again restores normal operation. Hold will also be disabled under the following circumstances:

Swept measurements: channel mode or channel domain changed.

Readout: channel mode or measurement definition changed.

A held measurement is indicated on the display by setting the 'H' flag in the readout or trace information area.

[PRESET] KEY

The [PRESET] key provides a menu which enables the instrument to be set to a known condition.

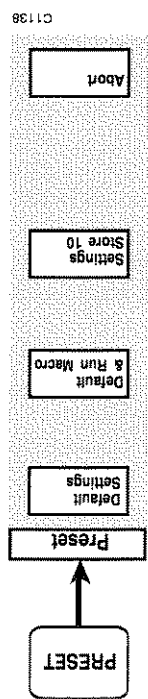


Fig. 3-82 PRESET Menu



Preset

Default Settings

Default & Run Macro

Settings Store 10

Abort

Returns the instrument to its default set-up conditions. A complete listing of the default conditions is provided in Appendix A.

Presents the instrument to its default state (as above), but additionally it will then run a macro named "preset" (the name can be either upper or lower case).
This soft key will be unselectable if the macro is not present, either internally or on a memory card.

Sets the instrument to the conditions defined by the contents of settings store 10.
This soft key will be unselectable if setting stores 10 does not contain valid data.

Aborts the preset operation.