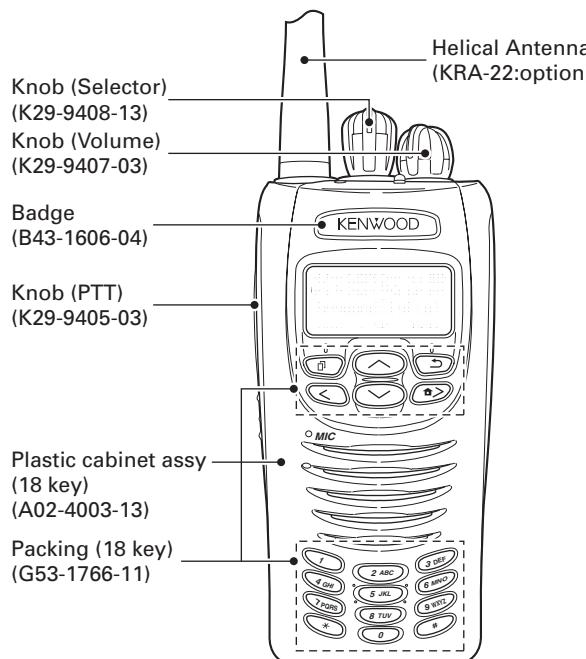
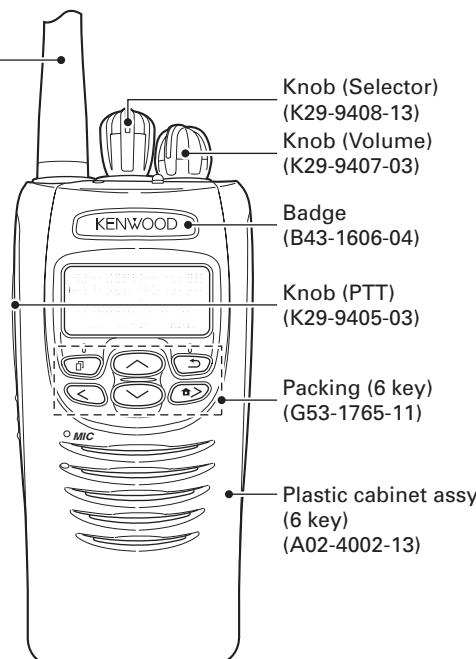


NX-200 K2**NX-200 K**

Does not come with antenna. Antenna is available as an option.

CONTENTS

GENERAL	2
SYSTEM SET-UP	2
REALIGNMENT	3
DISASSEMBLY FOR REPAIR	6
CIRCUIT DESCRIPTION	9
COMPONENTS DESCRIPTION	15
PARTS LIST	17
EXPLODED VIEW	28
PACKING	29
ADJUSTMENT	30
TERMINAL FUNCTION	52
PC BOARD	
CONTROL UNIT (X53-4260-XX)	64
TX-RX UNIT (X57-7360-10)	68

SCHEMATIC DIAGRAM	
CONTROL UNIT (X53-4260-XX)	72
TX-RX UNIT (X57-7360-10)	82
INTERCONNECTION DIAGRAM	86
BLOCK DIAGRAM	88
LEVEL DIAGRAM	92
OPTIONAL ACCESSORIES	
KNB-47L (Li-ion BATTERY PACK)	93
KNB-48L (Li-ion BATTERY PACK)	93
SPECIFICATIONS	BACK COVER

GENERAL / SYSTEM SET-UP

Document Copyrights

Copyright 2007 by Kenwood Corporation. All rights reserved.

No part of this manual may be reproduced, translated, distributed, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, for any purpose without the prior written permission of Kenwood.

Disclaimer

While every precaution has been taken in the preparation of this manual, Kenwood assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. Kenwood reserves the right to make changes to any products herein at any time for improvement purposes.


Firmware Copyrights

The title to and ownership of copyrights for firmware embedded in Kenwood product memories are reserved for Kenwood Corporation. Any modifying, reverse engineering, copy, reproducing or disclosing on an Internet website of the firmware is strictly prohibited without prior written consent of Kenwood Corporation. Furthermore, any reselling, assigning or transferring of the firmware is also strictly prohibited without embedding the firmware in Kenwood product memories.

NXDN Transceivers:

The AMBE+2(TM) voice coding technology is embedded in the firmware under the license of Digital Voice Systems, Inc.

SYSTEM SET-UP

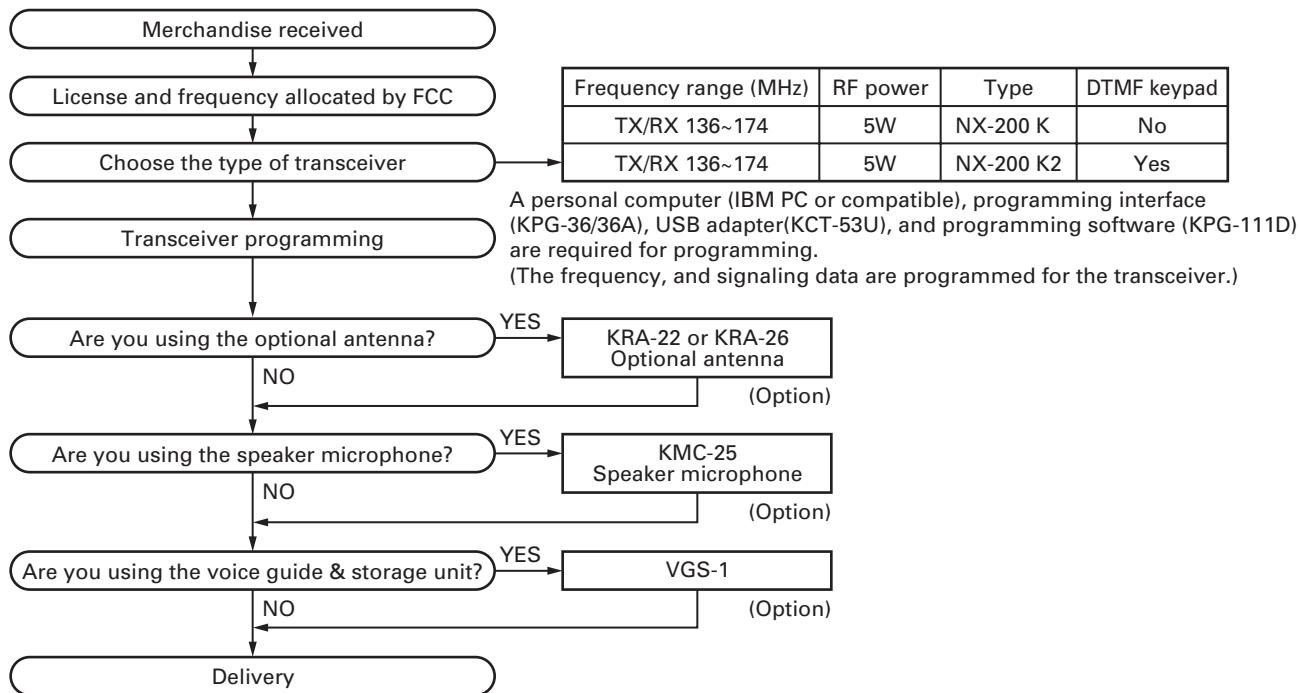

INTRODUCTION

SCOPE OF THIS MANUAL

This manual is intended for use by experienced technicians familiar with similar types of commercial grade communications equipment. It contains all required service information for the equipment and is current as of the publication date. Changes which may occur after publication are covered by either Service Bulletins or Manual Revisions. These are issued as required.

ORDERING REPLACEMENT PARTS

When ordering replacement parts or equipment information, the full part identification number should be included. This applies to all parts : components, kits, or chassis. If the part number is not known, include the chassis or kit number of which it is a part, and a sufficient description of the required component for proper identification.

PERSONAL SAFETY

The following precautions are recommended for personal safety:


- DO NOT transmit until all RF connectors are verified secure and any open connectors are properly terminated.
- SHUT OFF and DO NOT operate this equipment near electrical blasting caps or in an explosive atmosphere.
- This equipment should be serviced by a qualified technician only.

SERVICE

This transceiver is designed for easy servicing. Refer to the schematic diagrams, printed circuit board views, and alignment procedures contained within.

REALIGNMENT

1. Modes

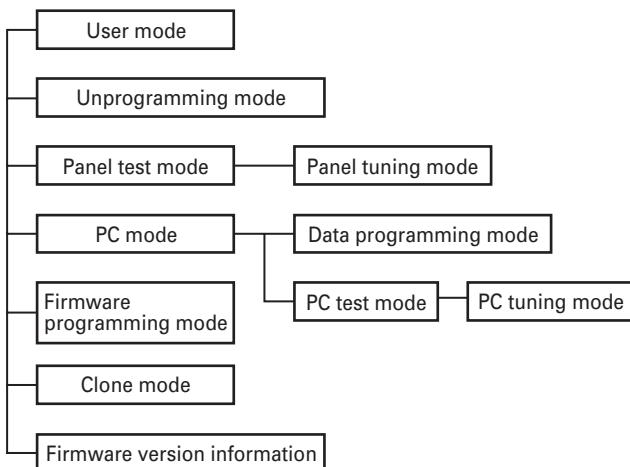

Mode	Function
User mode	For normal use.
Unprogramming mode	If you turn the transceiver power ON using any one of the following conditions, the transceiver forcibly enters Unprogramming mode. <ul style="list-style-type: none"> • FPU data is not written. • No channel are programmed. • When using kill. • The ESN is not written. • Broken hardware has been detected.
Panel test mode	Used by the dealer to check the fundamental characteristics.
Panel tuning mode	Used by the dealer to tune the transceiver.
PC mode	Used for communication between the transceiver and PC (IBM compatible).
Data programming mode	Used to read and write frequency data and other features to and from the transceiver.
PC test mode	Used to check the transceiver using the PC. This feature is included in the FPU. See pages 39 to 51.
Firmware programming mode	Used when changing the main program of the flash memory.
Clone mode	Used to transfer programming data from one transceiver to another.
Firmware version information	Used to confirm the internal firmware version.

2. How to Enter Each Mode

Mode	Operation
User mode	Power ON
Panel test mode	[] + Power ON
PC mode	Received commands from PC
Panel tuning mode	Press the [] key, in Panel test mode
Firmware programming mode	[] + Power ON
Clone mode	[] + Power ON
Firmware version information	[Side1] + Power ON

3. Panel Test Mode

Setting method refer to ADJUSTMENT.

4. Panel Tuning Mode

Setting method refer to ADJUSTMENT.

5. PC Mode

5-1. Preface

The transceiver is programmed by using a personal computer, programming interface (KPG-36/36A), USB adapter (KCT-53U) and programming software (KPG-111D).

The programming software can be used with an IBM PC or compatible. Figure 1 shows the setup of an IBM PC for programming.

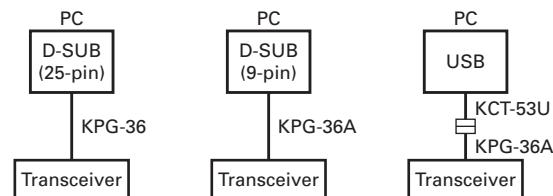
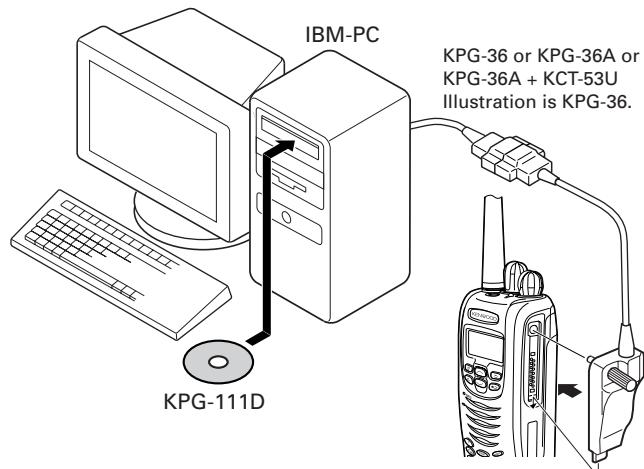


Fig. 1

5-2. Connection procedure

1. Connect the transceiver to the computer using the interface cable and USB adapter (When the interface cable is KPG-36A, the KCT-53U can be used.).

Notes:

- You must install the KCT-53U driver in the computer to use the USB adapter (KCT-53U).
 - When using the USB adapter (KCT-53U) for the first time, plug the KCT-53U into a USB port on the computer with the computer power ON.
2. When the POWER switch on, user mode can be entered immediately. When PC sends command the transceiver enter PC mode, and "PROGRAM" is displayed on the LCD. When data transmitting from transceiver, the red LED is lights. When data receiving to transceiver, the green LED is lights.

Note:

The data stored in the computer must match the "Model Name" when it is written into the flash memory.

5-3. KPG-36/KPG-36A description**(PC programming interface cable: Option)**

The KPG-36/36A is required to interface the transceiver to the computer. It has a circuit in its D-sub connector (KPG-36 : 25-pin, KPG-36A : 9-pin) case that converts the RS-232C logic level to the TTL level.

The KPG-36/36A connects the universal connector of the transceiver to the RS-232C serial port of the computer.

5-4. KCT-53U description (USB adapter : Option)

The KCT-53U is a cable which connects the KPG-36A to a USB port on a computer.

When using the KCT-53U, install the supplied CD-ROM (with driver software) in the computer. The KCT-53U driver runs under Windows 2000 or XP.

5-5. Programming software KPG-111D description

The KPG-111D is the programming software for the transceiver supplied on a CD-ROM. This software runs under MS-Windows 2000 or XP on an IBM-PC or compatible machine.

The data can be input to or read from the transceiver and edited on the screen. The programmed or edited data can be printed out. It is also possible to tune the transceiver.

6. Firmware Programming Mode**6-1. Preface**

Flash memory is mounted on the transceiver. This allows the transceiver to be upgraded when new features are released in the future. (For details on how to obtain the firmware, contact Customer Service.)

6-2. Connection procedure

Connect the transceiver to the personal computer (IBM PC or compatible) using the interface cable (KPG-36/36A) and USB adapter (KCT-53U : when the interface cable is KPG-36A, the KCT-53U can be used.). (Connection is the same as in the PC Mode.)

6-3. Programming

1. Start up the firmware programming software (Fpro.exe (version 4.0 or later))
2. Set the communications speed (normally, 115200 bps) and communications port in the configuration item.
3. Set the firmware to be updated by File name item.
4. Press and hold the [] key while turning the transceiver power ON. Then, the orange LED on the transceiver lights and "PROGRAM 115200" is displayed.
5. Check the connection between the transceiver and the personal computer, and make sure that the transceiver is in the Program mode.
6. Press "write" button in the window. When the transceiver starts to receive data, the [LOADING] display lights.
7. If writing ends successfully, the checksum is calculated and a result is displayed.
8. If you want to continue programming other transceivers, repeat steps 4 to 7.

Note:

This mode cannot be entered if the Firmware Programming mode is set to Disable in the Programming software.

6-4. Function

1. If you press the [Side2] key while "PROGRAM 115200" is displayed, the display changes to "PROGRAM 19200" (The LED blinks green) to indicate that the write speed is low speed (19200 bps). If you press the [Side2] key again while "PROGRAM 19200" is displayed, the display changes to "PROGRAM 38400" (The LED lights red and orange alternatively). If you press the [Side2] key again while "PROGRAM 38400" is displayed, the display changes to "PROGRAM 57600" (The LED blinks orange). If you press the [Side2] key again while "PROGRAM 57600" is displayed, the display returns to "PROGRAM 115200" (The LED lights orange).
2. If you press the [Side1] key while "PROGRAM 115200" is displayed, the checksum is calculated, and a result is displayed. If you press the [Side1] key again while the checksum is displayed, "PROGRAM 115200" is redisplayed.

Note:

Normally, write in the high-speed mode.

7. Clone Mode

Programming data can be transferred from one transceiver to another by connecting them via their external universal connectors. The operation is as follows (the transmit transceiver is the source and the receive transceiver is a target).

The following data cannot be cloned.

- Tuning data
- Embedded message with password
- Model name data
- ESN (Electronic Serial Number) data

REALIGNMENT

Key guide on the Read authorization password input screen.

- CONFRM ([] key): The password confirmation
- DELETE ([] key): Delete the least digit from the current password number (Press and hold to delete all password numbers)
- SELECT ([] key): Determine the least digit of the password number

1. Press and hold the [] key while turning the transceiver power ON. If the Read authorization password is set to the transceiver, the transceiver displays "CLONE LOCK". If the password is not set, the transceiver displays "CLONE MODE".
2. When you enter the correct password, and "CLONE MODE" is displayed, the transceiver can be used as the cloning source. The following describes how to enter the password.

3.

- How to enter the password using the keypad (K2 model only);

If the []/[] key is pressed while "CLONE LOCK" is displayed, the Read authorization password input screen is displayed.

If one of keys 0 to 9 is pressed while the Read authorization password input screen is displayed, the pressed number is displayed on the LCD.

Each press of the key shifts the display in order to the left. When you enter the password and press the [] or [*] key, "CLONE MODE" is displayed if the entered password is correct. If the password is incorrect, "CLONE LOCK" is redisplayed.

- How to enter the password using the [] and [] keys (K, K2 models);

If the []/[] key is pressed while "CLONE LOCK" is displayed, the Read authorization password input screen is displayed.

If the [] key or [] key is pressed while the Read authorization password input screen is displayed, the number (0 to 9) blinks on the LCD. When you press the [] key, the currently selected number is determined. If you press the [] key after entering the password in this procedure, "CLONE MODE" is displayed if the entered password is correct. If the password is incorrect, "CLONE LOCK" is redisplayed.

4. Power ON the target transceiver.
5. Connect the cloning cable (part No. E30-3325-05) to the universal connectors on the source and target.
6. Press the [] key on the source while the source displays "CLONE MODE". The data of the source is sent to the target. While the target is receiving the data, "PROGRAM" is displayed. When cloning of data is completed, the source displays "END", and the target automatically operates in the User mode. The target can then be operated by the same program as the source.
7. The other target can be continuously cloned. When the [] key on the source is pressed while the source displays "END", the source displays "CLONE MODE". Carry out the operation in step 4 to 6.

Notes:

- Cannot be cloned if the password (overwrite password) is programmed to the target.
- "Model Name" must be same to clone the transceiver.

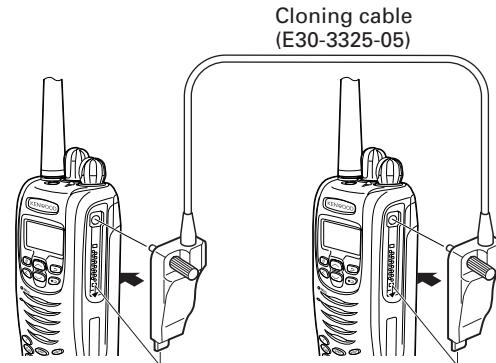


Fig. 2


8. Firmware Version Information

Press and hold the [Side1] key while turning the transceiver power ON and then keep pressing and holding the [Side1] key, the firmware version information appears on the LCD.



DISASSEMBLY FOR REPAIR

1. Precautions for Waterproof


- Do not remove the black sheet from the reverse side of the transceiver (refer to the illustration right). Removal of this sheet decreases the waterproof efficiency of the transceiver and may cause malfunctions if water seeps into the transceiver.
- The orange packing material on the reverse side of the transceiver is important with respect to the waterproof efficiency of the transceiver. Do not place stickers or other materials on or around the packing material shown in the figure, or on the reverse side of the battery pack. Doing so will impair the waterproof efficiency of the transceiver and may cause it to break down. Additionally, in order to prevent damage to the packing material, do not allow it to come in contact with foreign materials.

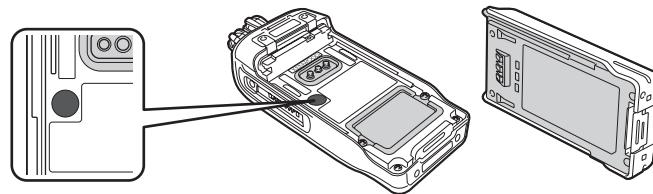**2. Precautions for Disassembly****■ Removing the TX-RX unit from the chassis**

- Remove the cord ASSY from the connector of the TX-RX unit (CN400) ①.
- Remove the PTT FPC from the connector of the TX-RX unit (CN401) ②.
- Remove the 14 screws ③.
- Anchor the screw hole of the TX-RX unit using the tip of a pair of tweezers as shown in the figure. Then, lift the TX-RX unit to remove it from the chassis ④.

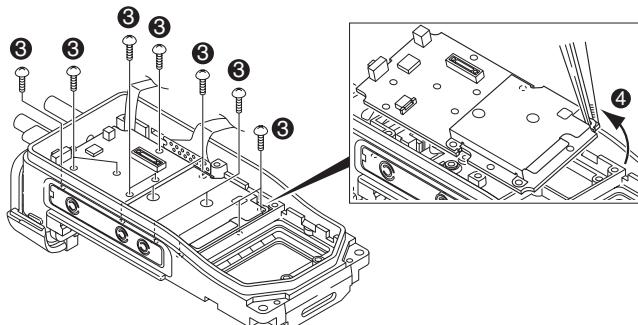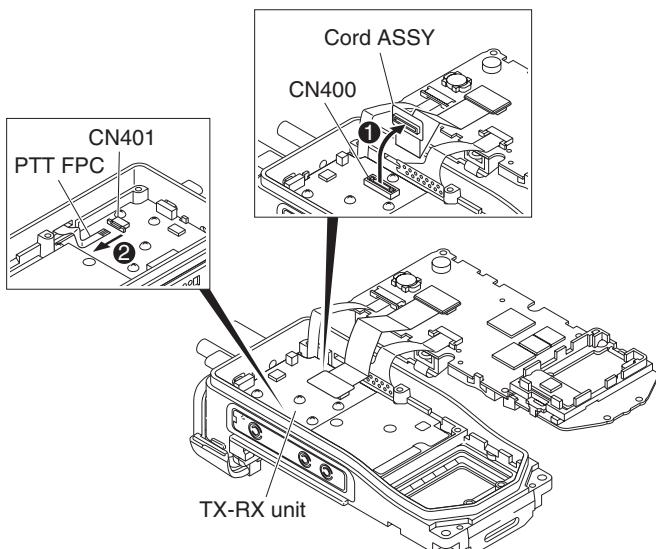**■ Removing the TOP packing (G53-1762-02)**

- Pull on the TOP packing with your fingers to turn it back as shown in the figure ①.
- Pull the TOP packing to the left to remove the packing that is fit into the left groove of the chassis ②.
- Pull the TOP packing to the right to remove the packing that is fit into the right groove of the chassis ③.
- Remove the TOP packing ④.

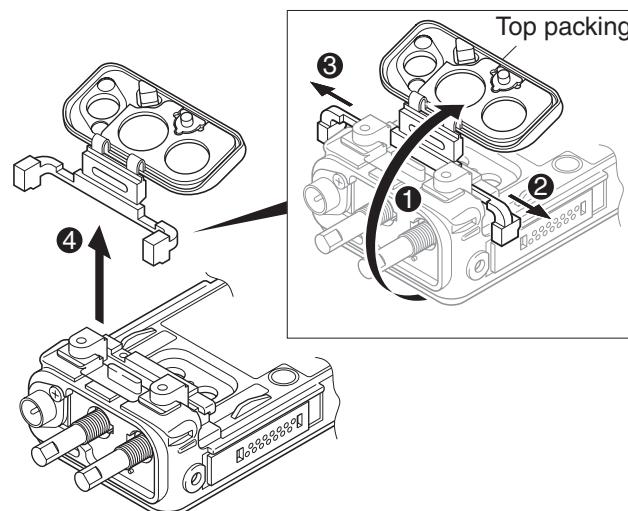

DISASSEMBLY FOR REPAIR

3. Precautions for Reassembly

■ Mounting the chassis onto the case

1. Place the key top on the chassis. Then, fit the chassis tightly into the groove of the key top ①.

Note:


Confirm that the entire groove of the key top fits to the chassis tightly.

2. Mount the chassis onto the case ②.

Note:

After mounting the chassis onto the case, if the 18 key part on the key top or the Auxiliary (Orange) key part of the VOL/CH packing gets stuck inside the case as shown in the figure, return it to the normal position using a soft tipped item (e.g., finger) ③.


Prying it with a pointed metal tool such as forceps, may damage the key top or packing.

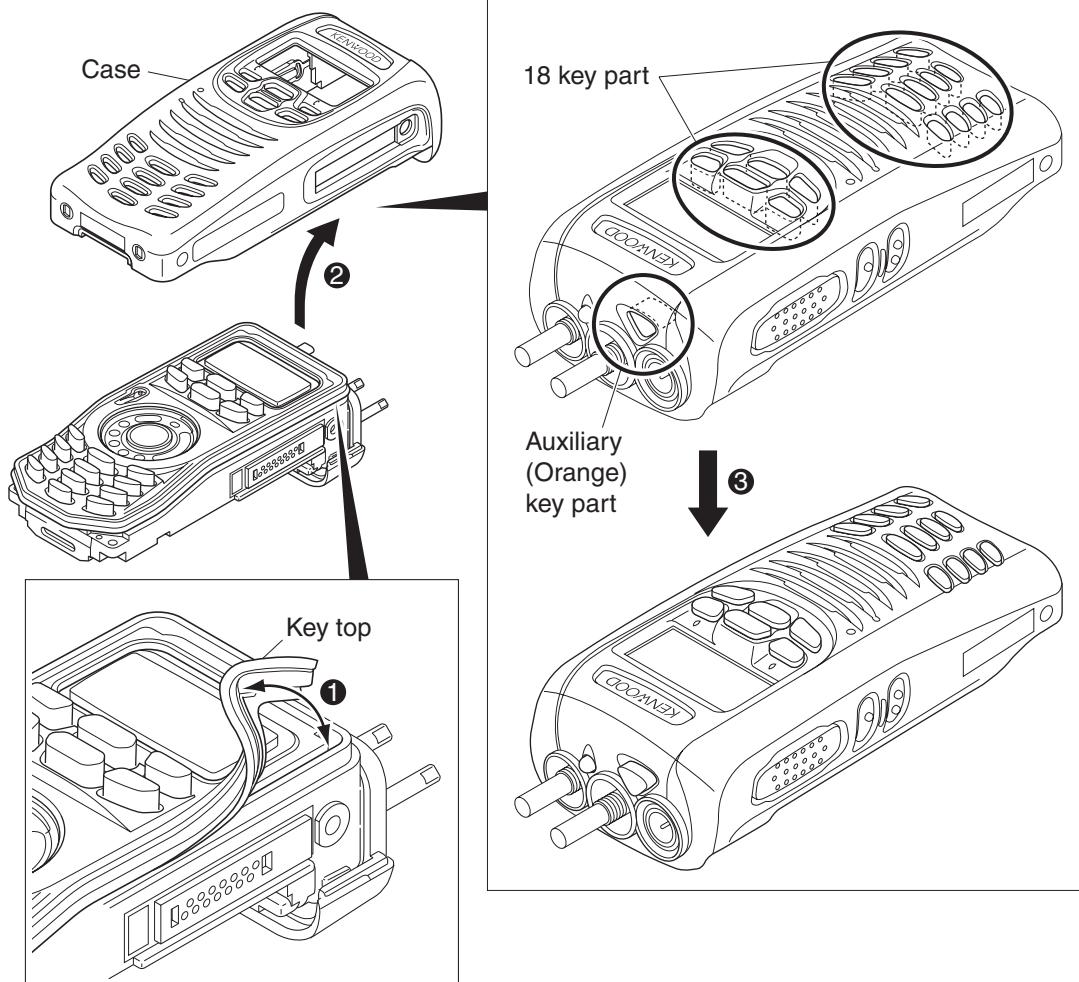

DISASSEMBLY FOR REPAIR


■ Installing lithium cell (W09-0971-05)

1. Insert a lithium cell into one side of the socket (CN401).
2. Push the lithium cell with your fingers as shown in the figure to insert the lithium cell into the socket.

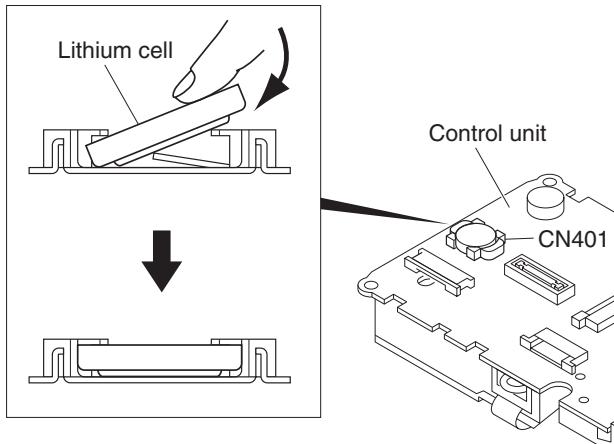
**■ Affixing the keyboard ASSY (S79-0472-05)**

Affix the keyboard ASSY to the Control unit as shown in the figure.


After affixing the keyboard ASSY to the Control unit, confirm that the three positioning holes of the keyboard ASSY and the Control unit are not misaligned.

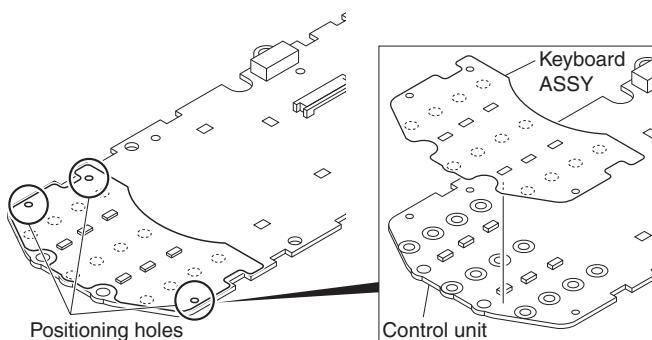**■ Inserting the Volume and Channel switch into the chassis**

Insert the volume and channel switch into the chassis with the VOL/CH FPC formed as shown in the figure.

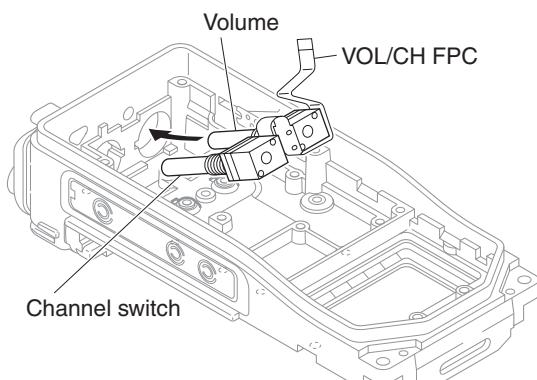**■ Forming the VOL/CH FPC, Cord ASSY and Universal connector FPC**

Form the VOL/CH FPC, Cord ASSY and Universal connector FPC as shown in the figure.

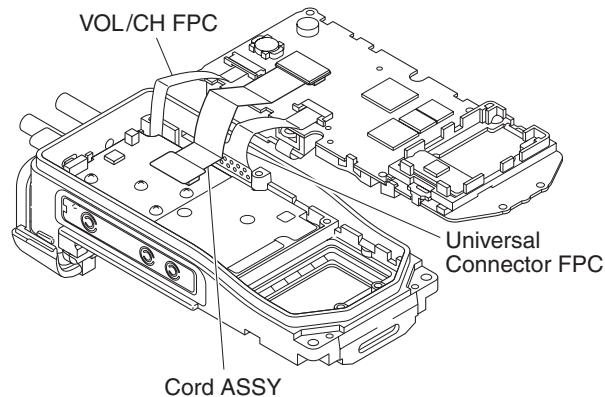**■ Changing the channel selector from 16-channel operation to free**

1. Remove the channel selector knob.
2. Remove the circular nut.
3. Remove the mechanical stopper.
4. Reassemble the circular nut and channel selector knob that were removed in steps 1 and 2, in their original positions.

Channel selector knob (K29-9408-13) Circular nut (N14-0844-04) Mechanical stopper (D32-0446-14)



CIRCUIT DESCRIPTION

1. Overview

The NX-200 is a VHF portable transceiver designed to operate in the frequency range of 136 to 174MHz. The unit consists of receiver, transmitter, phase-locked loop (PLL) frequency synthesizer, base band parts, power supply, and control circuits.

2. Frequency Configuration

The receiver is a double-conversion superheterodyne using the first intermediate frequency (IF) of 58.05MHz and the second IF of 450kHz. Incoming signals from the antenna are mixed with the local signal from the PLL circuit to produce the first IF of 58.05MHz. This is then mixed with the 57.6MHz second local oscillator output to produce the 450kHz second IF. The transmit signal frequency is generated by the PLL VCO, and modulated by the signal from the DSP. It is then amplified and fed to the antenna.

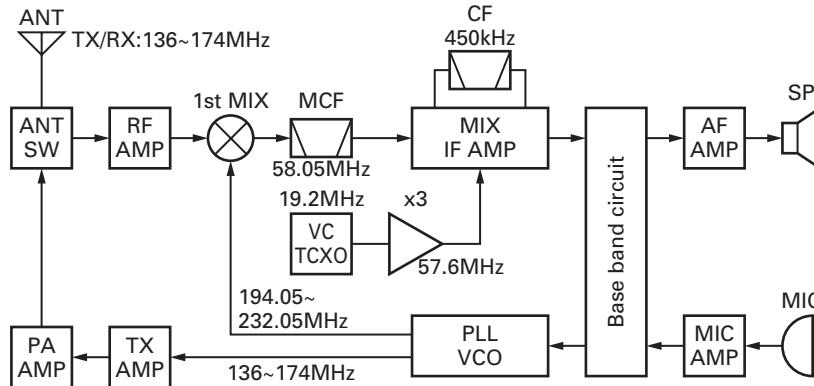


Fig. 1 Frequency configuration

3. Receiver System

3-1. RF Circuit

An incoming RF signal from the antenna terminal is passed through the antenna switch (D104, D105, D209 and D211) and then the bandpass filter (L220, L224). The bandpass filter is adjusted by a variable capacitor. The input voltage to the variable capacitor is regulated by the voltage output from the D/A converter (IC703). The signal is amplified by an RF amplifier (Q204), and passed through the bandpass filter (L212, L215). The resulting signal is applied to the first mixer (Q203), where it is mixed with the first local oscillator signal output from the frequency synthesizer to produce the first IF (58.05MHz).

3-2. IF Circuit

The first IF signal is passed through a four-pole monolithic crystal filter (XF200) to reject adjacent channel signals. The filtered first IF signal is amplified by the first IF amplifier (Q202) and then applied to the IF system IC (IC202). The IF system IC provides a second mixer, AGC amplifier, and RSSI (Received Signal Strength Indicator).

The second mixer mixes the first IF signal with the 57.6MHz of second local oscillator output and produces the second IF signal of 450kHz.

The second IF signal is passed through the ceramic filter (CF200) to reject the adjacent channel signal. The filtered second IF signal is amplified by the AGC amplifier.

The signal from the AGC amplifier is input to the ASIC (IC108) through the ceramic filter (CF201) and operational amplifier (IC203 and IC410).

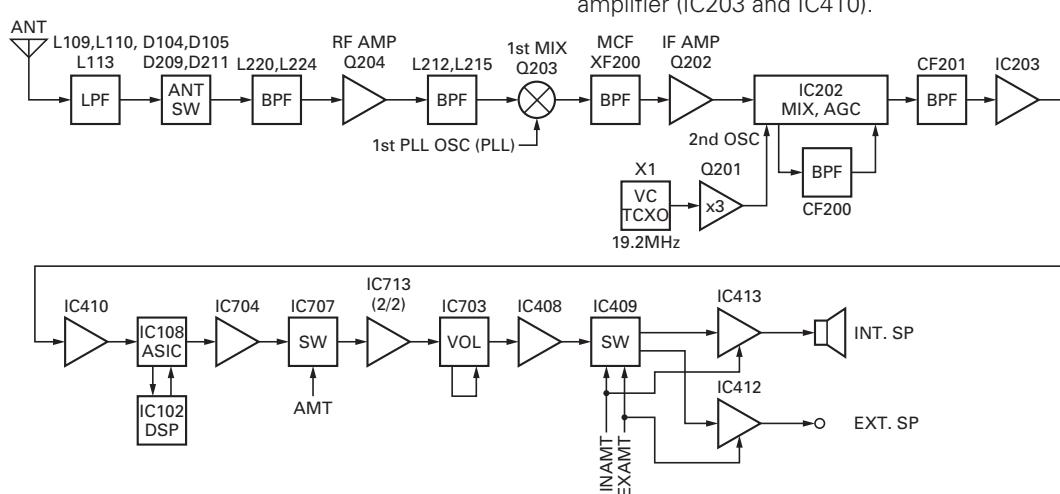


Fig. 2 RF and IF circuit

CIRCUIT DESCRIPTION

3-3. Audio Amplifier Circuit

Audio processing (high-pass filter, low-pass filter, de-emphasized and so on) at FM mode and decoding at NXDN mode are processed by DSP. The audio signal from IC108 and IC102 goes through the amplifier (IC704). The signal then goes through the mute switch (IC707), amplifier (IC713), electronic volume control (IC703), and AF amplifier (IC408).

While busy, AMT becomes Low to turn IC707 on, and the signal is fed to the AF switch. While INAMT is High, the AF switch (IC409) selects the internal speaker, and the audio signal is fed to the internal audio power amplifier (IC413), and output to the internal speaker. While EXAMT is High, the AF switch (IC409) selects the external speaker, and the audio signal is fed to the external audio power amplifier (IC412), and output to the external speaker. The power supply for IC413 and IC412 is turned on while INAMT or EXAMT is High.

The speaker is switched by the logic of the speaker switching terminal SSW on the universal connector. When the SP-MIC is not attached, SSW becomes High. IC108 detects the logic of SSW and activates either INAMT or EXAMT.

3-4. Squelch Circuit

It amplifies the demodulated noise signal from IC108 after filtering through the BPF circuit. Then, the amplified signal is converted to a DC signal by the detection circuit. The converted signal is fed back to IC108.

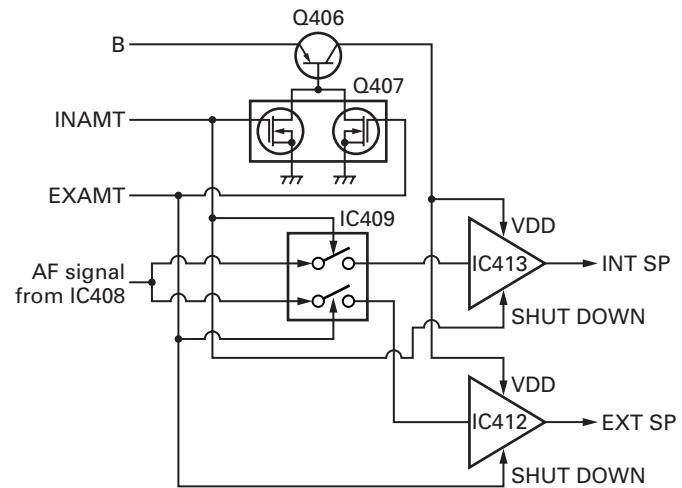


Fig. 3 Audio amplifier circuit

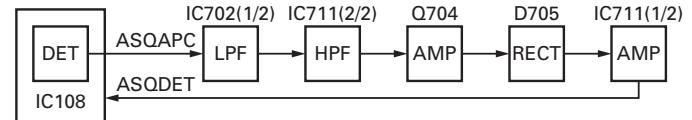


Fig. 4 Squelch circuit

4. Transmitter System

4-1. Audio Band Circuit

The signal from the internal microphone goes through the mute switch (Q5). When the SP-MIC is not attached, the microphone switching terminal (MSW) on the universal connector becomes High, and the mute switch (Q5) is turned on. When the SP-MIC is attached, MSW is connected to GND inside the SP-MIC. For this reason, Q5 is turned off, the internal microphone is muted, and only the input of the external microphone is supplied to the microphone amplifier. The signal from the microphone goes through the mute switch (Q707), and is amplified by IC716 (1/2) and limited by the AGC circuit which is composed of D703, D704, Q705 and Q706.

4-2. Base Band Circuit

The audio signal output from the base band circuit is converted to digital data with a sampling frequency of 48 kHz. This digital data is sent to the DSP (IC102), and voice signals of 300Hz or lower and frequencies of 3kHz or higher are cut off and an audio range of 300Hz to 3kHz is extracted. The audio signal is then pre-emphasized in FM mode and synthesized with the signals, such as QT and DQT, as required, and is then output from IC108. In Digital mode, the audio signal is converted to the 4-Level FSK base band signal and output from IC108. The DTMF and MSK base band signals are also generated by the DSP and output by IC108.

LPF (IC705) works as smoothing filter. The DAC (IC703) assigns the base band signal to the VCO and VCTCXO (X1). At this time, the level output according to the transmit carrier is fine-adjusted according to each modulation method.

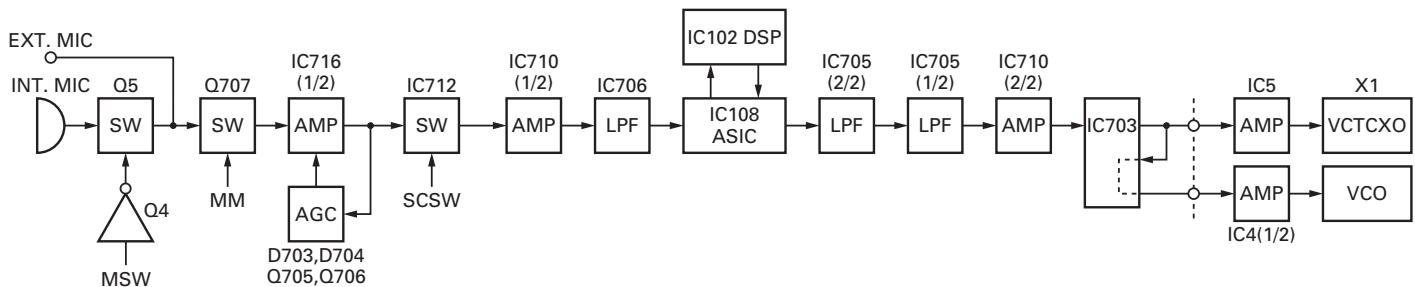


Fig. 5 Audio band and Base band circuit

CIRCUIT DESCRIPTION

4-3. VOX

IC716 (2/2) amplifies the audio signal captured in the microphone. The signal is then converted into the DC voltage, rectified by D706. The DC voltage activates the ASIC (IC108), and the VOX starts.

4-4. Drive and Final Amplifier

The signal from the T/R switch (D100 is on) is amplified by the drive amplifier (Q102 and Q103) to 25~27dBm. The output of the drive amplifier is amplified by the RF power amplifier (Q106) to 5.0W (1W when the power is low). The RF power amplifier is MOS FET. The output of the RF power amplifier is then passed through the harmonic filter (LPF) and antenna switch (D104, D105 are on) and applied to the antenna terminal.

4-5. APC Circuit

The APC circuit always monitors the current flowing through the RF power amplifier (Q106) and keeps a constant current. The voltage drop at R136, R138 and R141 is caused by the current flowing through the RF power amplifier and this voltage is applied to the differential amplifier (IC100 1/2). IC100 (2/2) compares the output voltage of IC100 (1/2) with the reference voltage from IC108, and the output of IC100 (2/2) controls the VGG of Q102, Q103 and Q106 to make the both voltages the same. The change of power high/low is carried out by the change of the reference voltage. Q105, Q107 and Q110 are turned on and Q104 and Q109 are turned off in transmit and the APC circuit is active.

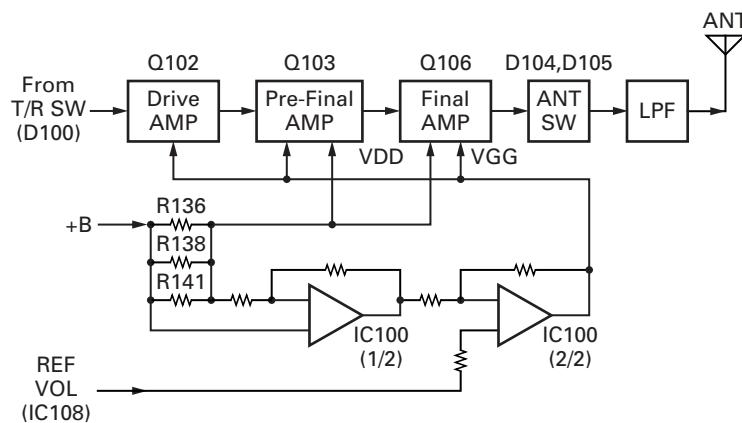


Fig. 6 Drive and final amplifier and APC circuit

5. PLL Frequency Synthesizer

5-1. VCTCXO (X1)

VCTCXO (X1) generates a reference frequency of 19.2MHz for the PLL frequency synthesizer. This reference frequency is applied to pin 9 of the PLL IC (IC3) and is connected to the IF circuit as a 2nd local signal through the Tripler. The VCTCXO oscillation frequency is determined by the DC voltage of the VC terminal. The VC voltage is fixed to 1.65V by R59 and R60, and supplied to the VC terminal through IC5. The modulation signal is also fed to VC terminal through IC5.

The frequency adjustment is achieved by switching the ratio of dividing frequency that is not adjusted by the DC voltage impressed to VC. The resolution of the adjusting frequency is approximately 8Hz. Because twice the VCO output are input for the input frequency of PLL IC, the sending and receiving frequency can be adjusted by approximately 4Hz resolution.

5-2. VCO

There is a RX VCO and a TX VCO.

The TX VCO (Q10) generates a transmit carrier and the RX VCO (Q8) generates a 1st local signal. For the VCO oscillation frequency, the transmit carrier is 136 to 174 MHz and the 1st local receive signal is 194.05 to 232.05MHz.

The VCO oscillation frequency is determined by one system of operation switching terminal "T/R" and two systems of voltage control terminals "C/V" and "V-assist".

The operation switching terminal, "T/R", is controlled by the control line (/T_R) output from the ASIC (IC108). When the /T_R logic is low, the VCO outputs the transmit carrier and when it is high, it outputs a 1st local receive signal.

The voltage control terminals, "CV" and "V-assist", are controlled by the PLL IC (IC3) and ASIC (IC108) and the output frequency changes continuously according to the applied voltage. For the modulation input terminal, "VCO_MOD", the output frequency changes according to the applied voltage. This is used to modulate the VCO output. "VCO_MOD" works only when "/T_R" is low.

CIRCUIT DESCRIPTION

5-3. PLL IC (IC3)

The PLL IC compares the differences in phases of the VCO oscillation frequency and the VCTCXO reference frequency, returns the difference to the VCO CV terminal and realizes the "Phase Locked Loop" for the return control. This allows the VCO oscillation frequency to accurately match (lock) the desired frequency.

When the frequency is controlled by the PLL, the frequency convergence time increases as the frequency difference increases when the set frequency is changed. To supplement this, the ASIC is used before control by the PLL IC to bring the VCO oscillation frequency close to the desired frequency. As a result, the VCO CV voltage does not change and is always stable at approximately 2.5V.

The desired frequency is set for the PLL IC by the ASIC (IC108) through the 3-line "SDO1", "SCK1", "/PCS_RF" serial bus. Whether the PLL IC is locked or not is monitored by the ASIC through the "PLD" signal line. If the VCO is not the desired frequency (unlock), the "PLD" logic is low.

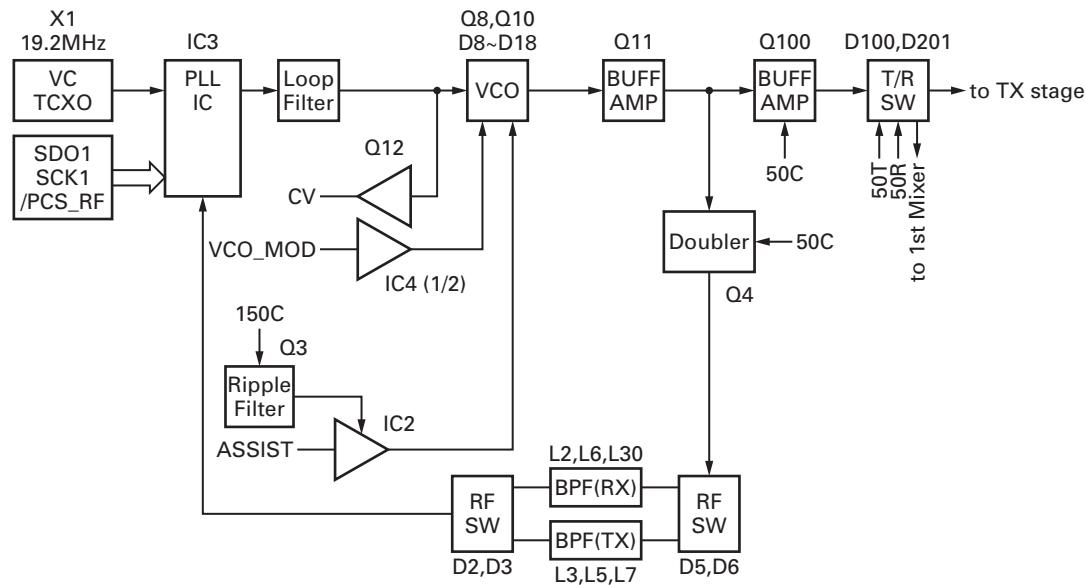


Fig. 7 PLL block diagram

6. Control Circuit

The control circuit consists of the ASIC (IC108) and its peripheral circuits. IC108 mainly performs the following;

- 1) Switching between transmission and reception by PTT signal input.
- 2) Reading system, zone, frequency, and program data from the memory circuit.
- 3) Sending frequency program data to the PLL.
- 4) Controlling squelch on/off by the DC voltage from the squelch circuit.
- 5) Controlling the audio mute circuit by decode data input.

5-4. Doubler (Q4)

The doubler (Q4) extracts the twice harmonic component from the signal from the VCO. This twice harmonic components is then fed into PLL (IC3) through band pass filter.

Band pass filter is consists of two filter. One is for TX (L3,L5,L7) and pass band is 272.0 to 348.0MHz. The other is for RX 1st local (L2,L6,L30) and pass band is 388.1 to 464.1MHz.

5-5. Local Switch (D100, D201)

The connection destination of the signal output from the buffer amplifier (Q100) is changed with the diode switch (D100) that is controlled by the transmission power supply, 50T, and the diode switch (D201) that is controlled by the receive power supply, 50R. If the 50T logic is high, it is connected to a send-side pre-drive (Q102). If the 50T logic is low, it is connected to a receive-side mixer (Q203).

6-1. ASIC

The ASIC (IC108) is a 32-bit RISC processor, equipped with peripheral function and ADC/DAC.

This ASIC operates at 18.432MHz clock and 3.3V /1.5V DC. It controls the flash memory, SRAM, DSP, the receive circuit, the transmitter circuit, the control circuit, and the display circuit and transfers data to or from an external device.

CIRCUIT DESCRIPTION

6-2. Memory Circuit

The memory circuit consists of the ASIC (IC108) and the SRAM (IC103) and flash memory (IC101). The flash memory has capacity of 32M-bit that contains the transceiver control program for the ASIC and stores the data. It also stores the data for transceiver channels and operating parameter that are written by the FPU. This program can be easily written from external devices. The SRAM has capacity of 1M-bit that contains work area and data area.

■ Flash memory

Note: The flash memory stores the data that is written by the FPU (KPG-111D), tuning data (Deviation, Squelch, etc.) ,and firmware program (User mode, Test mode, Tuning mode, etc.). This data must be rewritten when replacing the flash memory.

■ SRAM (Static memory)

Note: The SRAM has temporary data area and work area. When the power supply is off, it is backed up by an internal secondary lithium battery. Therefore, the saved data is not lost.

■ Real-time clock

The clock function is based on real-time clock IC (IC106). When the power supply is off, it is backed up by an internal secondary lithium battery

6-3. LCD

The LCD is controlled using the bus lines on the connector (CN1) of the Control unit (X53-426). It corrects the LCD contrast voltage using IC1.

6-4. Key Detection Circuit

Keys are detected using the key scan circuit in IC108. The /KEYI signals that are normally pulled down go high when any key is pressed.

6-5. Low Battery Warning

The battery voltage is divided using R444 and R445 and is detected by the ASIC (IC108). When the battery voltage falls below the voltage set by the Low battery warning adjustment, the red LED blinks to notify the operator that it is time to replace the battery. If the battery voltage falls even more (approx. 5.8V), a beep sounds and transmission stops.

Low battery warning	Battery condition
The red LED blinks during transmission.	The battery voltage is low but the transceiver is still usable.
The red LED blinks and the warning tone beeps while the PTT switch is pressed.	The battery voltage is low and the transceiver is not usable to make calls.

6-6. DSP

The DSP circuit consists of a DSP (IC102) and processes the base band signal. The DSP operates on an external clock of 18.432MHz (the same as the IC108), the I/O section operates at 3.3V and the core section operates at 1.5V. The DSP carries out the following processes:

- 4 Level FSK processing
- Analog FM pre-emphasis/de-emphasis
- Vocoder processing between audio codec and modulation/demodulation
- CAI processing, such as error correction encoding
- QT/DQT encoding/decoding
- LTR encoding/decoding
- DTMF encoding/decoding
- MSK encoding/decoding
- 2-tone encoding/decoding
- Compressor/expander processing
- Voice scrambler processing
- Transmit/receive audio filtering processing
- Microphone amplifier AGC processing
- Audio mute processing
- Modulation level processing

7. Power Supply Circuit

The battery voltage (+B) is provided from the battery terminal on the TX/RX unit (X57). The battery voltage passes through the 2.5A fuse (F400), and goes to the RF final amplifier, AVR ICs (IC400, IC403), and Control unit (X53-426).

In the control unit, +B is connected to the DC/DC (IC407), AVR ICs (IC411, IC708, IC416), and voltage detector IC (IC414). The voltage detector watches the battery voltage. If the battery voltage is 5.6V or higher, the detector outputs High. While the output of IC414 is High, IC416 and Q409 provide 3.1V (31BU) to the backup-section.

When the VOL SW is turned on, SB1 becomes high (battery voltage). The DC/DC (IC407) operates if both SB1 and the output of the detector are high. IC407 outputs 3.8V and it activates IC404 (33M), IC405 (15M), and IC406 (33A). As a result, the ASIC and DSP operate.

The SBC signal becomes High after the ASIC operates, IC708 (5A), Q403 on the Control unit (SB2) and Q403 on the TX-RX unit (SB3) are turned on. IC402 and IC403 operate by turning on these AVR ICs and FET switches.

The 5UC signal becomes High when an option is installed on the universal connector. Then IC411 (50U) operates.

When the /SAVE signal becomes High, IC400 (50C) operates. The output of IC400 is connected to three FET switches (Q401, Q402, Q405). When the SBC signal becomes High, IC403 (33C) operates. The FET switches are controlled by the ASIC. Q405 (50T) is turned on in transmit mode. Q401 (50R) and Q402 (50IF) are turned on in receive mode.

When the VOL SW is turned off, the /PSW signal becomes Low. After detecting the /PSW signal, the ASIC changes the SBC signal to Low. Then the power supplies except IC416 (31BU) stop.

CIRCUIT DESCRIPTION

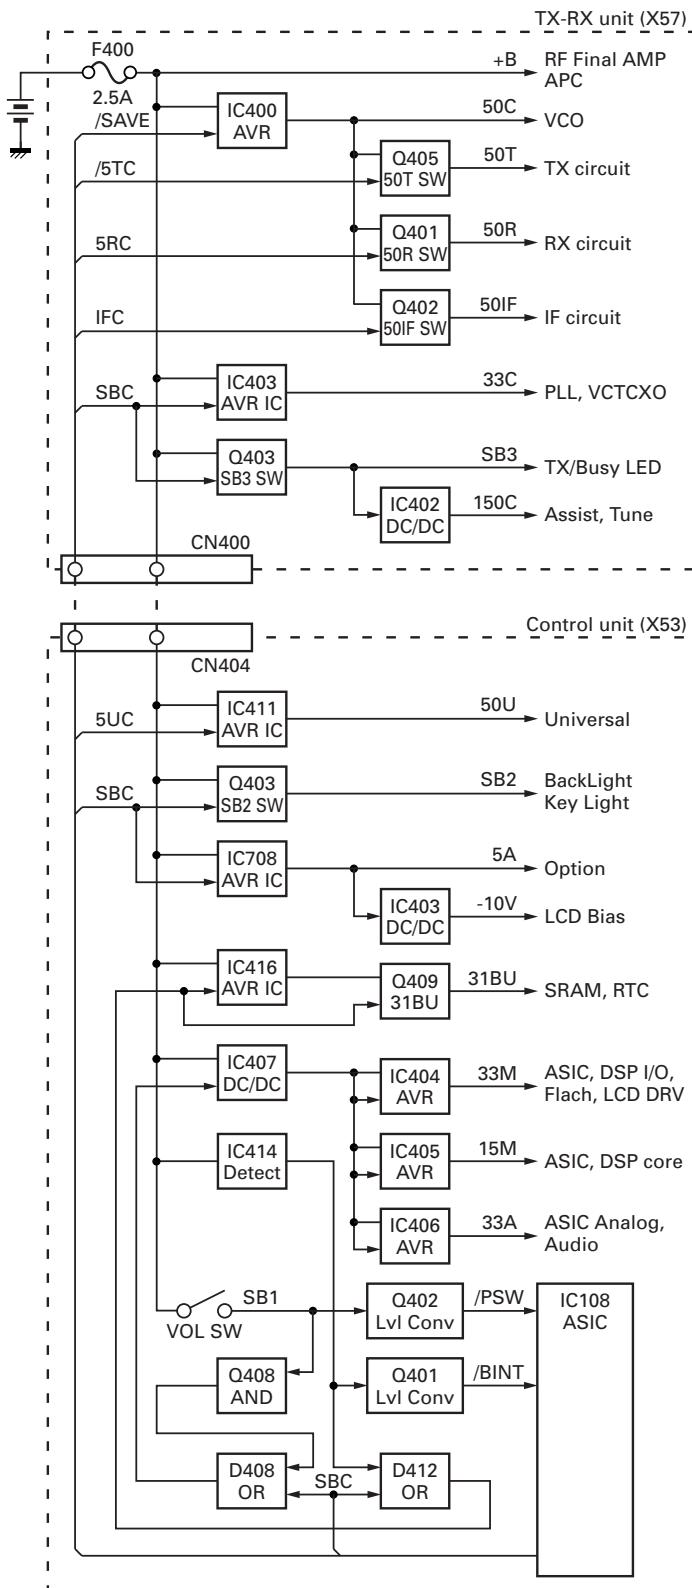


Fig. 8 Power supply circuit

8. Signaling Circuit**8-1. Encode (QT/DQT/LTR/DTMF/2-tone/MSK)**

Each signaling data signal of QT, DQT, LTR, DTMF, 2-tone and MSK is generated by the DSP circuit, superposed on a modulation signal and output from IC108. The modulation balance of the QT/DQT/LTR signal is adjusted by the D/A converter(IC703) and the resulting signal is routed to the modulation input of the VCO and VCXO (X1). Each deviation of the TX QT, DQT, LTR, DTMF and MSK tone is adjusted by changing the output level of IC108 and the resulting signal is routed to the VCO and VCXO. The RX DTMF tone is routed to the receive audio signal system, and is output from the speaker.

8-2. Decode (QT/DQT/LTR/DTMF/2-tone/MSK)

The audio signal is removed from the FM detection signal sent to the DSP circuit and the resulting signal is decoded.

9. Comander Circuit

The term "comander" means compressor and expander. The comander reduces noise by utilizing a compressor and an expander. The transceiver contains a DSP(IC102) to perform this operation. The transceiver comander can be turned on or off using the FPU.

COMPONENTS DESCRIPTION

Control unit (X53-4260-XX)

Ref. No.	Part Name	Description
IC1	IC	LCD contrast
IC101	IC	FLASH ROM
IC102	IC	DSP
IC103	IC	SRAM
IC104	IC	2 input AND gate
IC105	IC	Reset
IC106	IC	RTC
IC107	IC	Buffer
IC108	IC	ASIC
IC109	IC	2 input AND gate
IC401,402	IC	Bus switch
IC403	IC	Voltage doubling inverter
IC404	IC	Voltage regulator (33M)
IC405	IC	Voltage regulator (15M)
IC406	IC	Voltage regulator (33A)
IC407	IC	DC/DC converter
IC408	IC	AF AMP
IC409	IC	AF switch
IC410	IC	IF AMP
IC411	IC	Voltage regulator (50U)
IC412,413	IC	Audio AMP
IC414	IC	Reset
IC415	IC	2 input AND gate
IC416	IC	Voltage regulator
IC417,418	IC	Dual bus buffer
IC701	IC	I/O control
IC702	IC	APC LPF
IC703	IC	D/A converter
IC704	IC	RX AF LPF
IC705	IC	Modulation LPF
IC706	IC	MIC AMP
IC707	IC	RX AF switch
IC708	IC	Voltage regulator (5A)
IC709	IC	Sidetone mute
IC710	IC	MOD/MIC summing AMP
IC711	IC	SQL BPF/SQL DC AMP
IC712	IC	MIC switch
IC713	IC	1.65V REF/RX summing AMP
IC714	IC	OPT switch
IC715,716	IC	VOX AMP
Q1,2	Transistor	LCD backlight switch
Q3	FET	LCD backlight switch
Q4	FET	MIC shift control
Q5	FET	MIC shift switch
Q101,102	Transistor	12key backlight switch
Q103	FET	12key backlight switch
Q401,402	FET	Level converter

Ref. No.	Part Name	Description
Q403	Transistor	SB2 switch
Q404	FET	SB2 switch control
Q405	FET	AF AMP switch
Q406,407	Transistor	Voltage regulator (AF AMP)
Q408,409	Transistor	DC switch
Q410	FET	DC switch
Q411	FET	Level converter
Q412	FET	DC switch
Q413~415	Transistor	DC switch
Q701	Transistor	OPT switch
Q702	FET	Tone switch
Q703	FET	W/N noise switch
Q704	Transistor	SQL noise AMP
Q705,706	Transistor	MIC AGC
Q707	FET	MIC mute
D1,2	LED	12key backlight
D3,4	LED	LCD backlight
D5,6	LED	12key backlight
D7,8	LED	LCD backlight
D9,10	LED	12key backlight
D11	Diode	LCD backlight switch
D12~16	Diode	Reverse current prevention
D17~19	Zener diode	Surge absorption
D20	Zener diode	PTT RF OPT control
D21	Zener diode	EMC MSW SSW control
D22	Diode	RXD control
D23	Diode	TXD control
D101	Diode	12key backlight switch
D102	Diode	Reverse current prevention
D401~404	Diode	12key control
D405,406	Diode	DC/DC converter
D407	Diode	Reverse current prevention
D408	Diode	DC/DC converter control
D409,410	Diode	SP control
D411	Diode	RTC BATT control
D412	Diode	DC switch control
D413	Diode	RTC BATT control
D414	Diode	TX LED switch
D415	Diode	RX LED switch
D416	Diode	33M control
D417	Diode	33A control
D701	Diode	5A switch
D702	Diode	PLD control
D703,704	Diode	Detector
D705	Diode	Noise detector
D706	Diode	Detector
D707	Diode	VOX

COMPONENTS DESCRIPTION

TX-RX unit (X57-7360-10)

Ref. No.	Part Name	Description
IC1	IC	Temperature sensor
IC2	IC	DC AMP for VCO tune
IC3	IC	PLL IC
IC4	IC	OP AMP (VCO MOD/APC)
IC5	IC	DC AMP for TCXO MOD
IC100	IC	Auto power control
IC200,201	IC	DC AMP for BPF
IC202	IC	FM IC
IC203	IC	Buffer
IC400	IC	Voltage regulator (50C)
IC401	IC	50T control
IC402	IC	DC/DC converter
IC403	IC	Voltage regulator (33C)
IC404	IC	OP AMP (RSSI/VAGC)
Q1,2	Transistor	Buffer AMP switch
Q3	Transistor	Ripple filter
Q4	Transistor	Buffer AMP
Q6	Transistor	Ripple filter
Q7	FET	T/R switch
Q8,10	FET	VCO oscillation
Q9	FET	T/R switch
Q11	Transistor	Buffer AMP
Q12	FET	Buffer AMP
Q13	FET	Buffer AMP switch
Q100	Transistor	Buffer AMP
Q102	FET	RF AMP
Q103	FET	RF drive AMP
Q104,105	Transistor	APC switch
Q106	FET	RF final AMP
Q107,109	FET	APC switch
Q110	Transistor	APC switch
Q201	Transistor	2nd Local buffer AMP
Q202	Transistor	IF AMP
Q203	FET	Mixer
Q204	FET	RF AMP
Q206	FET	RF AGC
Q401	FET	50R switch
Q402	FET	50IF switch
Q403	FET	SB3 switch
Q404	FET	DC/DC converter switch
Q405	Transistor	50T switch
Q406	Transistor	TX/RX LED switch
D1	Diode	Ripple filter
D2,3	Diode	Buffer AMP switch
D4	Diode	Bypass diode

Ref. No.	Part Name	Description
D5,6	Diode	Buffer AMP switch
D7	Diode	Ripple filter
D8,9	Variable capacitance diode	Frequency control
D12~17		
D18	Variable capacitance diode	TX modulation
D100	Diode	Local switch
D103	Zener diode	APC switch
D104,105	Diode	Antenna switch
D106	Zener diode	APC protect
D201	Diode	Local switch
D204,205,207,208	Variable capacitance diode	Vari-cap tune
D209	Diode	Antenna switch
D210	Variable capacitance diode	Vari-cap tune
D211	Diode	Antenna switch
D212	Diode	RF AGC
D213	Diode	Reverse protection
D400	Diode	Reverse protection
D401	Diode	50T control
D402	LED	TX/RX LED
D403	Diode	Reverse protection

PARTS LIST

* New Parts. Δ indicates safety critical components.Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.L: Scandinavia
Y: PX (Far East, Hawaii)
Y: AAFES (Europe)K: USA
T: England
X: AustraliaP: Canada
E: Europe
M: Other AreasNX-200 (Y50-6110-XX)
CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-200						CONTROL UNIT (X53-4260-XX) -10 :K -11 :K2					
1	1B	*	A02-4002-13	PLASTIC CABINET(6KEY)	K	59	1B	*	K29-9407-03	KNOB(VOL)	
2	1A	*	A02-4003-13	PLASTIC CABINET(18KEY)	K2	60	1B	*	K29-9408-13	KNOB(CH)	
3	2B	*	A62-1156-02	PANEL(TOP)		A	1B,1D	*	N08-0564-04	DRESSED SCREW ACCESSORY	
4	1B	*	B09-0712-03	CAP ACCESSORY		B	3B		N09-2426-14	HEXAGON HEAD SCREW(BATT -)	
5	1A	*	B11-1853-24	FILTER(LCD)		C	3A		N09-2440-15	SPECIAL SCREW(CASE)	
6	1A	*	B11-1854-02	ILLUMINATION GUIDE(LCD)		D	2A,2B	*	N09-6549-04	STEPPED SCREW(FG-SP HOLDER)	
7	3B	*	B11-1855-04	ILLUMINATION GUIDE(TX/BUSY)		E	2B,3A	*	N09-6554-05	PAN HEAD SCREW(ANT/OP BOARD)	
8	1A	*	B38-0923-05	LCD ASSY		F	2B	*	N14-0844-04	CIRCULAR NUT(VOL,CH)	
9	1A	*	B42-7296-04	STICKER		G	1C		N30-3008-60	PAN HEAD MACHINE SCREW(BELT CLIP)	
10	1B	*	B43-1606-04	BADGE		H	1A,2A,2B		N83-2005-48	PAN HEAD TAPTITE SCREW(PCB)	
11	2D	*	B62-2014-00	INSTRUCTION MANUAL		63	1A	*	S79-0472-05	KEYBOARD ASSY(12KEY)	K2
12	2B	*	D32-0446-14	STOPPER(16CH)		64	2A		T07-0755-15	SPEAKER	
15	3B	*	E58-0532-05	RECTANGULAR RECEPTACLE(SP/MIC)		65	2A		T91-0575-05	MIC ELEMENT	
16	3B	*	E72-0425-03	TERMINAL BLOCK		66	2A		W09-0971-05	LITHIUM CELL	
17	3A	*	F07-1931-04	COVER(OP BOARD)		67	3A	*	X41-3710-10	SWITCH UNIT(PTT FPC)	
18	2A	*	G02-1836-13	EARTH SPRING(SP)		68	2B	*	X41-3720-10	SWITCH UNIT(6KEY FPC)	
19	1A	*	G10-1373-04	FIBROUS SHEET(SP)		69	2A	*	X42-3340-10	CORD ASSY(50PIN FPC)	
20	2B	*	G10-1384-04	FIBROUS SHEET(TOP PANEL)		71	2B	*	X60-3860-10	TERMINAL ASSY(SMA)	
21	3A	*	G11-2622-04	SHEET(VCO)							
22	2A	*	G11-4272-14	RUBBER CUSHION(SP)							
23	3A	*	G11-4331-04	SHEET(AIR)		D1	-10		B30-2215-05	LED	K2
24	3A	*	G11-4428-04	SHEET(PTT)		D3	,4		B30-2215-05	LED	K
25	3A	*	G11-4429-04	RUBBER SHEET(FET)		D7	,8		B30-2215-05	LED	K
26	3A	*	G11-4440-04	SHEET(AIR)		C1			CK73HB1A104K	CHIP C 0.10UF K	
28	2A	*	G11-4458-14	SHEET(SP)		C2	-6		CK73GB1E105K	CHIP C 1.0UF K	
29	2A	*	G11-4459-04	SHEET(TX-RX PCB)		C7	,8		CK73HB1A104K	CHIP C 0.10UF K	
30	2A	*	G13-2129-14	CUSHION(TX-RX PCB)		C10			CK73HB1A104K	CHIP C 0.10UF K	
32	2A	*	G13-2258-04	CUSHION(50PIN FPC)		C11			CK73HB0J105K	CHIP C 1.0UF K	
33	3B	*	G53-1762-02	PACKING(TOP)		C12	-15		CK73HB1H471K	CHIP C 470PF K	
34	3B	*	G53-1763-03	PACKING(TERMINAL BLOCK)		C16	,17		CC73HCH1H101J	CHIP C 100PF J	
35	3A	*	G53-1764-03	PACKING(OP BOARD)		C23	-27		CK73HB1H102K	CHIP C 1000PF K	
36	1B	*	G53-1765-11	PACKING(6KEY)		C28	-34		CC73HCH1H101J	CHIP C 100PF J	
37	1A	*	G53-1766-11	PACKING(18KEY)	K2	C35			CK73HB1H102K	CHIP C 1000PF K	
38	2B	*	G53-1768-04	PACKING(VOL,CH O-RING)		C36			CK73HB1E682K	CHIP C 6800PF K	
39	1B	*	G53-1769-04	PACKING(CAP)		C37			CK73HB1H102K	CHIP C 1000PF K	
40	2B	*	G53-1792-04	PACKING(SMA O-RING)		C38			CC73HCH1H101J	CHIP C 100PF J	
41	2A	*	J19-5505-11	HOLDER(FG-SP)		C40			CC73HCH1H221J	CHIP C 220PF J	
42	2B	*	J19-5506-03	HOLDER(VOL,CH)		C41			CC73HCH1H101J	CHIP C 100PF J	
43	2A	*	J19-5507-02	HOLDER(OP BOARD)		C101	-104		CK73HB1A104K	CHIP C 0.10UF K	
44	2B	*	J21-8579-04	MOUNTING HARDWARE(FG-SP HOLDER)		C105			CK73HB0J105K	CHIP C 1.0UF K	
45	1C	*	J29-0730-05	BELT CLIP ACCESSORY		C106			CK73HB1E103K	CHIP C 0.010UF K	
46	2B	*	J30-1296-04	SPACER(VOL)		C107			CK73HB1A104K	CHIP C 0.10UF K	K
47	2B	*	J87-0006-05	FPC(LEAD FREE/VOL,CH)		C107,108			CK73HB1A104K	CHIP C 0.10UF K	K2
48	3B	*	J87-0007-05	FPC(LEAD FREE/UNIVERSAL)		C109,110			CK73HB1H102K	CHIP C 1000PF K	
49	2B	*	J99-0390-04	ADHESIVE SHEET(6KEY FPC)		C111	-113		CK73HB1A104K	CHIP C 0.10UF K	
51	3A	*	J99-0711-04	ADHESIVE SHEET(PTT FPC)		C114			CK73HB0J105K	CHIP C 1.0UF K	
52	2B	*	J99-0712-14	ADHESIVE SHEET(6KEY FPC)		C115			CK73HB1H471K	CHIP C 470PF K	K2
53	1A	*	J99-0714-04	ADHESIVE SHEET(LCD)		C116	-117		CK73HB1A104K	CHIP C 0.10UF K	K2
54	3B	*	J99-0715-08	ADHESIVE SHEET(UNIVERSAL)		C118,119			CK73HB0J105K	CHIP C 1.0UF K	
55	3B	*	J99-0725-04	ADHESIVE SHEET(TERMINAL BLOCK)		C120,121			CK73HB1A104K	CHIP C 0.10UF K	
56	3A	*	K25-2001-03	PUSH KNOB(PTT)		C122	-124		CK73HB1E103K	CHIP C 0.010UF K	
57	1A	*	K29-9405-03	KNOB(PTT)		C130			CK73HB1A104K	CHIP C 0.010UF K	
58	1A	*	K29-9406-03	BUTTON KNOB(SIDE KEY)		C131			CK73HB1A104K	CHIP C 0.10UF K	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C133			CS77CP0J100M	CHIP TNTL 10UF 6.3WV		C469,470			CK73HB1H102K	CHIP C 1000PF K	
C134			CK73HB1E103K	CHIP C 0.010UF K		C701			CK73HB1A104K	CHIP C 0.10UF K	
C135			CK73HB1H102K	CHIP C 1000PF K		C703			CK73GB0J475K	CHIP C 4.7UF K	
C136			CK73HB1E103K	CHIP C 0.010UF K		C704,705			CK73HB1A104K	CHIP C 0.10UF K	
C137			CK73GB1E105K	CHIP C 1.0UF K		C706			CC73HCH1H680J	CHIP C 68PF J	
C138-140			CK73HB1A104K	CHIP C 0.10UF K		C707			CC73HCH1H270J	CHIP C 27PF J	
C141			CC73HCH1H101J	CHIP C 100PF J		C708			CK73HB1A104K	CHIP C 0.10UF K	
C142			CS77CP0J100M	CHIP TNTL 10UF 6.3WV		C709			CK73HB0J105K	CHIP C 1.0UF K	
C143			CK73HB1E103K	CHIP C 0.010UF K		C710			CK73HB1E103K	CHIP C 0.010UF K	
C144			CK73GB1E105K	CHIP C 1.0UF K		C711			CK73HB1A104K	CHIP C 0.10UF K	
C145-148			CK73HB1A104K	CHIP C 0.10UF K		C712			CK73HB1E103K	CHIP C 0.010UF K	
C149			CK73HB1E103K	CHIP C 0.010UF K		C713			CK73HB1H332K	CHIP C 3300PF K	
C150			CK73GB1E105K	CHIP C 1.0UF K		C714			CK73HB1H122K	CHIP C 1200PF K	
C151-155			CK73HB1A104K	CHIP C 0.10UF K		C715			CK73HB1A104K	CHIP C 0.10UF K	
C156,157			CK73HB1H102K	CHIP C 1000PF K		C716			CK73HB1H681K	CHIP C 680PF K	
C158			CK73HB1E103K	CHIP C 0.010UF K		C717			CK73HB1E103K	CHIP C 0.010UF K	
C159			CK73HB1A104K	CHIP C 0.10UF K		C718			CK73HB1H152K	CHIP C 1500PF K	
C160,161			CK73HB1E682K	CHIP C 6800PF K		C719			CK73HB1A104K	CHIP C 0.10UF K	
C401,402			CK73HB1A104K	CHIP C 0.10UF K		C720			CK73HB1E103K	CHIP C 0.010UF K	
C403-405			CS77AP1C2R2M	CHIP TNTL 2.2UF 16WV		C721			CK73HB1A104K	CHIP C 0.10UF K	
C406			CK73HB0J105K	CHIP C 1.0UF K		C722			CK73HB1E103K	CHIP C 0.010UF K	
C407,408			CK73HB1H102K	CHIP C 1000PF K		C723			CK73HB1A104K	CHIP C 0.10UF K	
C409-412			CK73HB0J105K	CHIP C 1.0UF K		C724			CK73HB1E103K	CHIP C 0.010UF K	
C413	*		CK73FB1A106K	CHIP C 10UF K		C725			CC73HCH1E181J	CHIP C 180PF J	
C414			CK73HB0J105K	CHIP C 1.0UF K		C726,727			CK73HB1A104K	CHIP C 0.10UF K	
C415			CS77AP1A100M	CHIP TNTL 10UF 10WV		C728			CK73HB1H331K	CHIP C 330PF K	
C416	*		CK73FB1A106K	CHIP C 10UF K		C730			CK73HB1H331K	CHIP C 330PF K	
C417			CC73HCH1H221J	CHIP C 220PF J		C731,732			CK73HB1E103K	CHIP C 0.010UF K	
C418			CK73HB1E103K	CHIP C 0.010UF K		C734			CK73HB1H102K	CHIP C 1000PF K	
C419	*		CK73FB1E475K	CHIP C 4.7UF K		C735			CK73HB1H122K	CHIP C 1200PF K	
C420			CK73HB1E103K	CHIP C 0.010UF K		C736,737			CK73HB1A104K	CHIP C 0.10UF K	
C421			CK73HB1E682K	CHIP C 6800PF K		C738			CK73HB1H102K	CHIP C 1000PF K	
C422			CC73HCH1H100C	CHIP C 10PF C		C739			CK73HB1E682K	CHIP C 6800PF K	
C424,425			CK73HB1A104K	CHIP C 0.10UF K		C740			CK73HB1H102K	CHIP C 1000PF K	
C427			CK73HB1E103K	CHIP C 0.010UF K		C742			CK73GB1E105K	CHIP C 1.0UF K	
C428			CC73HCH1H030C	CHIP C 3.0PF C		C743			CK73HB0J105K	CHIP C 1.0UF K	
C429,430			CK73HB1A104K	CHIP C 0.10UF K		C744-746			CK73HB1E103K	CHIP C 0.010UF K	
C431	*		CK73FB1A106K	CHIP C 10UF K		C747,748			CK73HB1A104K	CHIP C 0.10UF K	
C432			CK73HB1E103K	CHIP C 0.010UF K		C749,750			CC73HCH1H470J	CHIP C 47PF J	
C433	*		CK73FB1A106K	CHIP C 10UF K		C751			CK73GB1E105K	CHIP C 1.0UF K	
C434			CK73HB1E103K	CHIP C 0.010UF K		C752,753			CC73HCH1H101J	CHIP C 100PF J	
C435-438			CK73HB1A224K	CHIP C 0.22UF K		C755			CC73HCH1H470J	CHIP C 47PF J	
C439,440			CK73HB1A104K	CHIP C 0.10UF K		C756			CK73HB1A104K	CHIP C 0.10UF K	
C441			CK73GB1E105K	CHIP C 1.0UF K		C757,758			CK73GB0J475K	CHIP C 4.7UF K	
C442			CK73HB1H471K	CHIP C 470PF K		C759,760			CK73HB1E103K	CHIP C 0.010UF K	
C443,444			CK73HB1E103K	CHIP C 0.010UF K		C761			CC73HCH1H100D	CHIP C 10PF D	
C445			CK73HB1H102K	CHIP C 1000PF K		C762			CK73HB1A104K	CHIP C 0.10UF K	
C446			CK73GB1E105K	CHIP C 1.0UF K		C763			CK73HB1E103K	CHIP C 0.010UF K	
C447			CK73HB1H102K	CHIP C 1000PF K		C764			CK73HB1H102K	CHIP C 1000PF K	
C448-450			CK73HB0J105K	CHIP C 1.0UF K		C765-767			CK73HB1A104K	CHIP C 0.10UF K	
C451-453			CK73HB1E103K	CHIP C 0.010UF K		C768			CK73HB1H102K	CHIP C 1000PF K	
C454			CK73GB1E105K	CHIP C 1.0UF K		C771			CK73HB1A224K	CHIP C 0.22UF K	
C455-457			CK73HB1H471K	CHIP C 470PF K		C772			CK73HB1E103K	CHIP C 0.010UF K	
C459			CK73HB1H471K	CHIP C 470PF K		C775			CC73HCH1H470J	CHIP C 47PF J	
C460			CK73HB1E682K	CHIP C 6800PF K		C777			CK73HB1H102K	CHIP C 1000PF K	
C461-463			CK73HB1H471K	CHIP C 470PF K		C778			CK73HB0J105K	CHIP C 1.0UF K	
C464			CK73HB1E103K	CHIP C 0.010UF K		C779			CK73HB1E103K	CHIP C 0.010UF K	
C465			CK73HB1H102K	CHIP C 1000PF K		C780			CK73HB1A224K	CHIP C 0.22UF K	
C466			CK73HB1E682K	CHIP C 6800PF K		C781,782			CK73HB0J105K	CHIP C 1.0UF K	
C467,468			CK73HB1E103K	CHIP C 0.010UF K		C785			CK73HB1A224K	CHIP C 0.22UF K	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C786			CK73HB1E103K	CHIP C 0.010UF K		R19			RK73HB1J471J	CHIP R 470	J 1/16W
C787			CK73HB0J105K	CHIP C 1.0UF K		R20			RK73HB1J102J	CHIP R 1.0K	J 1/16W
C788			CC73HCH1H150J	CHIP C 15PF J		R21			RK73HB1J122J	CHIP R 1.2K	J 1/16W
C789			CC73HCH1H680J	CHIP C 68PF J		R22 -24			RK73HB1J102J	CHIP R 1.0K	J 1/16W
C790			CK73HB1A104K	CHIP C 0.10UF K		R25			RK73HB1J122J	CHIP R 1.2K	J 1/16W
C791			CK73HB1A393K	CHIP C 0.039UF K		R26			RK73HB1J102J	CHIP R 1.0K	J 1/16W
C792			CK73HB0J105K	CHIP C 1.0UF K		R27			RK73HB1J104J	CHIP R 100K	J 1/16W
C793,794			CK73HB1A104K	CHIP C 0.10UF K		R28 ,29			RK73HB1J102J	CHIP R 1.0K	J 1/16W
C795			CK73HB1E103K	CHIP C 0.010UF K		R30			RK73HB1J101J	CHIP R 100	J 1/16W
C796			CK73HB1A104K	CHIP C 0.10UF K		R31			RK73HB1J102J	CHIP R 1.0K	J 1/16W
C797			CK73HB0J105K	CHIP C 1.0UF K		R32 -35			RK73HB1J101J	CHIP R 100	J 1/16W
C798			CS77AP1A100M	CHIP TNTL 10UF 10WV		R40			RK73HB1J000J	CHIP R 0.0	J 1/16W
C799			CK73HB1A104K	CHIP C 0.10UF K		R101,102			RK73HB1J474J	CHIP R 470K	J 1/16W
C800			CK73HB1H152K	CHIP C 1500PF K		R103			RK73HB1J102J	CHIP R 1.0K	J 1/16W
C801			CK73HB1C223K	CHIP C 0.022UF K		R105			RK73HB1J104J	CHIP R 100K	J 1/16W
C802			CK73HB1E103K	CHIP C 0.010UF K		R106			RK73HB1J472J	CHIP R 4.7K	J 1/16W
C803			CK73HB1H102K	CHIP C 1000PF K		R107			RK73HB1J104J	CHIP R 100K	J 1/16W
C804			CC73HCH1H470J	CHIP C 47PF J		R108			RK73HB1J474J	CHIP R 470K	J 1/16W
CN1	*		E40-6755-05	FLAT CABLE CONNECTOR		R110,111			RK73HB1J104J	CHIP R 100K	J 1/16W
CN22	*		E23-1325-05	TERMINAL		R112			RK73HB1J000J	CHIP R 0.0	J 1/16W
CN23	*		E40-6758-05	PIN ASSY		R113			RK73HB1J104J	CHIP R 100K	J 1/16W
CN24	*		E23-1325-05	TERMINAL		R114			RK73HB1J331J	CHIP R 330	J 1/16W
CN403	*		E40-6813-05	PIN ASSY		R115			RK73HB1J104J	CHIP R 100K	J 1/16W
CN404	*		E40-6421-15	PIN ASSY		R116			RK73HB1J473J	CHIP R 47K	J 1/16W
CN405	*		E40-6754-05	FLAT CABLE CONNECTOR		R117			RK73HB1J000J	CHIP R 0.0	J 1/16W
CN701			E40-6586-05	SOCKET FOR PIN ASSY		R118			RK73HB1J473J	CHIP R 47K	J 1/16W
CN710	*		E40-6757-05	PIN ASSY		R119			RK73HB1J104J	CHIP R 100K	J 1/16W
F701			F53-0360-05	FUSE(0.25A)		R120			RK73HB1J474J	CHIP R 470K	J 1/16W
CN401			J19-5386-05	HOLDER(LITHIUM CELL)		R121-123			RK73HB1J104J	CHIP R 100K	J 1/16W
L1 ,2			L92-0408-05	CHIP FERRITE		R126			RK73HB1J101J	CHIP R 100	J 1/16W
L3			L92-0140-05	CHIP FERRITE		R127,128			RK73HB1J000J	CHIP R 0.0	J 1/16W
L4 -7			L92-0408-05	CHIP FERRITE		R129-131			RK73HB1J101J	CHIP R 100	J 1/16W
L8			L92-0140-05	CHIP FERRITE		R132,133			RK73HB1J104J	CHIP R 100K	J 1/16W
L101,102			L92-0408-05	CHIP FERRITE		R135-137			RK73HB1J104J	CHIP R 100K	J 1/16W
L401	*		L33-1496-05	SMALL FIXED INDUCTOR		R138			RK73HB1J473J	CHIP R 47K	J 1/16W
L402			L92-0467-05	CHIP FERRITE		R139			RK73HB1J104J	CHIP R 100K	J 1/16W
L403	*		L92-0466-05	CHIP FERRITE		R140			RK73HB1J000J	CHIP R 0.0	J 1/16W
L409,410			L92-0467-05	CHIP FERRITE		R141-143			RK73HB1J104J	CHIP R 100K	J 1/16W
L701			L92-0140-05	CHIP FERRITE		R144			RK73HB1J471J	CHIP R 470	J 1/16W
L702			L92-0162-05	BEADS CORE		R145-147			RK73HB1J104J	CHIP R 100K	J 1/16W
L704-709			L92-0162-05	BEADS CORE		R148			RK73HB1J151J	CHIP R 150	J 1/16W
L710-712			L92-0444-05	CHIP FERRITE		R149			RK73HB1J000J	CHIP R 0.0	J 1/16W
L713			L92-0163-05	BEADS CORE		R150			RK73HB1J102J	CHIP R 1.0K	J 1/16W
L714-717			L92-0444-05	CHIP FERRITE		R153,154			RK73HB1J104J	CHIP R 100K	J 1/16W
X101			L77-1802-05	CRYSTAL RESONATOR(32768HZ)		R155			RK73HB1J473J	CHIP R 47K	J 1/16W
X102	*		L77-3015-05	TCXO(18.432MHZ)		R156,157			RK73HB1J472J	CHIP R 4.7K	J 1/16W
R1			RK73HB1J105J	CHIP R 1.0M	J 1/16W	R158,159			RK73HB1J220J	CHIP R 22	J 1/16W
R2			RK73HB1J104J	CHIP R 100K	J 1/16W	R160,161			RK73HB1J000J	CHIP R 0.0	J 1/16W
R3			RK73HB1J123J	CHIP R 12K	J 1/16W	R162			RK73HB1J474J	CHIP R 470K	J 1/16W
R4 -10			RK73HB1J103J	CHIP R 10K	J 1/16W	R163			RK73HH1J104D	CHIP R 100K	D 1/16W
R11			RK73HB1J104J	CHIP R 100K	J 1/16W	R165			RK73HB1J102J	CHIP R 1.0K	J 1/16W
R12			RK73HB1J103J	CHIP R 10K	J 1/16W	R166			RK73HB1J104J	CHIP R 100K	J 1/16W
R14			RK73HB1J472J	CHIP R 4.7K	J 1/16W	R167			RK73HB1J102J	CHIP R 1.0K	J 1/16W
R15			RK73HB1J000J	CHIP R 0.0	J 1/16W	R168			RK73HB1J000J	CHIP R 0.0	J 1/16W
R16			RK73HB1J331J	CHIP R 330	J 1/16W	R170			RK73HH1J103D	CHIP R 10K	D 1/16W
R17			RK73HB1J000J	CHIP R 0.0	J 1/16W	R171-173			RK73HB1J000J	CHIP R 0.0	J 1/16W
R18			RK73HB1J822J	CHIP R 8.2K	J 1/16W	R174-178			RK73HB1J104J	CHIP R 100K	J 1/16W
						R180,181			RK73HB1J474J	CHIP R 470K	J 1/16W
						R182					

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R183			RK73HB1J104J	CHIP R 100K J 1/16W		R474,475			RK73HB1J333J	CHIP R 33K J 1/16W	
R184			RK73HB1J473J	CHIP R 47K J 1/16W		R477,478			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R185			RK73HB1J102J	CHIP R 1.0M J 1/16W		R479			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R186			RK73HB1J473J	CHIP R 47K J 1/16W		R480			RK73HB1J273J	CHIP R 27K J 1/16W	
R187			RK73HB1J102J	CHIP R 1.0K J 1/16W		R481			RK73HB1J474J	CHIP R 470K J 1/16W	
R188			RK73HB1J473J	CHIP R 47K J 1/16W		R482			RK73HB1J103J	CHIP R 10K J 1/16W	
R189			RK73HB1J104J	CHIP R 100K J 1/16W		R483			RK73HB1J473J	CHIP R 47K J 1/16W	
R190			RK73HB1J102J	CHIP R 1.0K J 1/16W		R484			RK73HB1J223J	CHIP R 22K J 1/16W	
R191			RK73HB1J474J	CHIP R 470K J 1/16W		R485			RK73HB1J103J	CHIP R 10K J 1/16W	
R192			RK73HB1J102J	CHIP R 1.0K J 1/16W		R486			RK73HB1J100J	CHIP R 10 J 1/16W	
R193,194			RK73HB1J104J	CHIP R 100K J 1/16W		R487-490			RK73HH1J223D	CHIP R 22K D 1/16W	
R401			RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R491			RK73HB1J104J	CHIP R 100K J 1/16W	
R402			RK73HB1J151J	CHIP R 150 J 1/16W	K2	R492			RK73HB1J474J	CHIP R 470K J 1/16W	
R403			RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R493			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R404			RK73HB1J151J	CHIP R 150 J 1/16W		R494-497			RK73HH1J104D	CHIP R 100K D 1/16W	
R405			RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R498			RK73HB1J333J	CHIP R 33K J 1/16W	
R406			RK73HB1J000J	CHIP R 0.0 J 1/16W		R499			RK73HB1J223J	CHIP R 22K J 1/16W	
R407,408			RK73HB1J103J	CHIP R 10K J 1/16W		R500			RK73HB1J473J	CHIP R 47K J 1/16W	
R409			RK73HB1J470J	CHIP R 47 J 1/16W		R501			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R410-416			RK73HB1J471J	CHIP R 470 J 1/16W		R502,503			RK73HB1J103J	CHIP R 10K J 1/16W	
R417			RK73HB1J000J	CHIP R 0.0 J 1/16W		R504			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R418			RK73HB1J471J	CHIP R 470 J 1/16W		R506			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R419,420			RK73HB1J000J	CHIP R 0.0 J 1/16W		R507-511			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R424			RK73HH1J683D	CHIP R 68K D 1/16W		R512			RK73HB1J101J	CHIP R 100 J 1/16W	
R425			RK73HH1J333D	CHIP R 33K D 1/16W		R513-515			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R426-429			RK73HB1J000J	CHIP R 0.0 J 1/16W		R516			RK73HB1J101J	CHIP R 100 J 1/16W	
R431			RK73HB1J474J	CHIP R 470K J 1/16W		R517			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R432,433			RK73HB1J000J	CHIP R 0.0 J 1/16W		R518			RK73HB1J101J	CHIP R 100 J 1/16W	
R434			RK73HB1J393J	CHIP R 39K J 1/16W		R519-528			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R435,436			RK73HB1J104J	CHIP R 100K J 1/16W		R529-531			RK73HB1J101J	CHIP R 100 J 1/16W	
R437			RK73HB1J471J	CHIP R 470 J 1/16W		R532			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R438,439			RK73HB1J104J	CHIP R 100K J 1/16W		R533-535			RK73HB1J101J	CHIP R 100 J 1/16W	
R440			RK73HB1J000J	CHIP R 0.0 J 1/16W		R536-540			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R441			RK73HB1J153J	CHIP R 15K J 1/16W		R541			RK73HB1J101J	CHIP R 100 J 1/16W	
R442			RK73HB1J102J	CHIP R 1.0K J 1/16W		R542			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R443			RK73HB1J474J	CHIP R 470K J 1/16W		R543			RK73HB1J101J	CHIP R 100 J 1/16W	
R444			RK73HB1J564J	CHIP R 560K J 1/16W		R544			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R445			RK73HB1J154J	CHIP R 150K J 1/16W		R545			RK73HB1J101J	CHIP R 100 J 1/16W	
R446			RK73HB1J274J	CHIP R 270K J 1/16W		R546,547			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R447			RK73HB1J104J	CHIP R 100K J 1/16W		R548,549			RK73HB1J473J	CHIP R 47K J 1/16W	
R448			RK73HB1J103J	CHIP R 10K J 1/16W		R701-707			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R449-452			RK73HB1J474J	CHIP R 470K J 1/16W		R709-715			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R453			RK73HB1J104J	CHIP R 100K J 1/16W		R716			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R454			RK73HB1J474J	CHIP R 470K J 1/16W		R717-722			RK73HB1J104J	CHIP R 100K J 1/16W	
R455			RK73HB1J102J	CHIP R 1.0K J 1/16W		R723			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R456			RK73HB1J474J	CHIP R 470K J 1/16W		R724			RK73HB1J104J	CHIP R 100K J 1/16W	
R457,458			RK73HB1J104J	CHIP R 100K J 1/16W		R725			RK73HB1J100J	CHIP R 10 J 1/16W	
R459,460			RK73HB1J102J	CHIP R 1.0K J 1/16W		R726			RK73HB1J104J	CHIP R 100K J 1/16W	
R461			RK73HB1J103J	CHIP R 10K J 1/16W		R727-729			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R462			RK73HB1J102J	CHIP R 1.0K J 1/16W		R730			RK73HB1J471J	CHIP R 470 J 1/16W	
R463			RK73HB1J104J	CHIP R 100K J 1/16W		R731,732			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R464			RK73HB1J474J	CHIP R 470K J 1/16W		R733			RK73HB1J473J	CHIP R 47K J 1/16W	
R465,466			RK73HB1J103J	CHIP R 10K J 1/16W		R735			RK73HB1J473J	CHIP R 47K J 1/16W	
R467			RK73HB1J104J	CHIP R 100K J 1/16W		R736			RK73HB1J823J	CHIP R 82K J 1/16W	
R468			RK73HB1J000J	CHIP R 0.0 J 1/16W		R737			RK73HB1J153J	CHIP R 15K J 1/16W	
R469			RK73HB1J474J	CHIP R 470K J 1/16W		R738			RK73HB1J563J	CHIP R 56K J 1/16W	
R470			RK73HB1J683J	CHIP R 68K J 1/16W		R739			RK73HB1J823J	CHIP R 82K J 1/16W	
R471			RK73HB1J000J	CHIP R 0.0 J 1/16W		R740			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R472			RK73HB1J223J	CHIP R 22K J 1/16W		R741			RK73HB1J474J	CHIP R 470K J 1/16W	
R473			RK73HB1J332J	CHIP R 3.3K J 1/16W		R742,743			RK73HB1J103J	CHIP R 10K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R744			RK73HB1J223J	CHIP R 22K J 1/16W		R816			RK73HB1J683J	CHIP R 68K J 1/16W	
R745			RK73HB1J682J	CHIP R 6.8K J 1/16W		R818			RK73HB1J104J	CHIP R 100K J 1/16W	
R746			RK73HB1J563J	CHIP R 56K J 1/16W		R819,820			RK73HB1J103J	CHIP R 10K J 1/16W	
R747			RK73HB1J333J	CHIP R 33K J 1/16W		R821			RK73HB1J104J	CHIP R 100K J 1/16W	
R748			RK73HB1J103J	CHIP R 10K J 1/16W		R822,823			RK73HB1J103J	CHIP R 10K J 1/16W	
R749			RK73HB1J472J	CHIP R 4.7K J 1/16W		R824			RK73HB1J393J	CHIP R 39K J 1/16W	
R750			RK73HB1J103J	CHIP R 10K J 1/16W		R825			RK73HB1J104J	CHIP R 100K J 1/16W	
R751			RK73HB1J000J	CHIP R 0.0 J 1/16W		R826			RK73HB1J334J	CHIP R 330K J 1/16W	
R752			RK73HB1J101J	CHIP R 100 J 1/16W		R827			RK73HB1J184J	CHIP R 180K J 1/16W	
R753			RK73HB1J683J	CHIP R 68K J 1/16W		R828,829			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R754			RK73HB1J564J	CHIP R 560K J 1/16W		R830			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R755			RK73HB1J104J	CHIP R 100K J 1/16W		R831			RK73HB1J474J	CHIP R 470K J 1/16W	
R756			RK73HB1J101J	CHIP R 100 J 1/16W		R832			RK73HB1J473J	CHIP R 47K J 1/16W	
R757			RK73HB1J223J	CHIP R 22K J 1/16W		R833			RK73HB1J684J	CHIP R 680K J 1/16W	
R758			RK73HB1J103J	CHIP R 10K J 1/16W		R834			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R759			RK73HB1J101J	CHIP R 100 J 1/16W		R835			RK73HB1J153J	CHIP R 15K J 1/16W	
R761-764			RK73HB1J223J	CHIP R 22K J 1/16W		R836			RK73HB1J473J	CHIP R 47K J 1/16W	
R765			RK73HB1J334J	CHIP R 330K J 1/16W		R837			RK73HB1J683J	CHIP R 68K J 1/16W	
R766			RK73HB1J000J	CHIP R 0.0 J 1/16W		R838			RK73HB1J564J	CHIP R 560K J 1/16W	
R767			RK73HB1J103J	CHIP R 10K J 1/16W		R839			RK73HB1J333J	CHIP R 33K J 1/16W	
R768			RK73HB1J224J	CHIP R 220K J 1/16W		R840			RK73HB1J123J	CHIP R 12K J 1/16W	
R769,770			RK73HB1J334J	CHIP R 330K J 1/16W		R841			RK73HB1J564J	CHIP R 560K J 1/16W	
R771			RK73HB1J153J	CHIP R 15K J 1/16W		R842			RK73HB1J104J	CHIP R 100K J 1/16W	
R775			RK73HB1J183J	CHIP R 18K J 1/16W		R843			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R777			RK73HB1J473J	CHIP R 47K J 1/16W		R844			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R778			RK73HB1J333J	CHIP R 33K J 1/16W		R845			RK73HB1J104J	CHIP R 100K J 1/16W	
R779			RK73HB1J473J	CHIP R 47K J 1/16W		R846			RK73HB1J471J	CHIP R 470 J 1/16W	
R780			RK73HB1J104J	CHIP R 100K J 1/16W		R847			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R782			RK73HB1J104J	CHIP R 100K J 1/16W		R848			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R783			RK73HB1J183J	CHIP R 18K J 1/16W		R849,850			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R784			RK73HB1J104J	CHIP R 100K J 1/16W		R850			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R785			RK73HB1J682J	CHIP R 6.8K J 1/16W		R851,852			RK73HB1J683J	CHIP R 68K J 1/16W	
R786			RK73HB1J000J	CHIP R 0.0 J 1/16W		VR1	2B	*	R31-0666-05	VARIABLE RESISTOR(VOL)	
R787			RK73HB1J124J	CHIP R 120K J 1/16W		S1	2B	*	S60-0437-05	ROTARY SWITCH(H)	
R788			RK73HB1J473J	CHIP R 47K J 1/16W		D11			MA2S111-F	DIODE	
R789			RK73HB1J154J	CHIP R 150K J 1/16W		D12-16		*	1SS416	DIODE	
R790			RK73HB1J102J	CHIP R 1.0K J 1/16W		D17			EMZ6.8N	ZENER DIODE	
R791			RK73HB1J474J	CHIP R 470K J 1/16W		D18,19		*	HZC6.8-E	ZENER DIODE	
R793			RK73HB1J102J	CHIP R 1.0K J 1/16W		D20,21			NNCD6.8G-A	ZENER DIODE	
R794			RK73HB1J104J	CHIP R 100K J 1/16W		D22,23			DA221	DIODE	
R795			RK73HB1J000J	CHIP R 0.0 J 1/16W		D101			MA2S111-F	DIODE	
R796			RK73HB1J333J	CHIP R 33K J 1/16W		D102		*	1SS416	DIODE	K2
R797			RK73HB1J102J	CHIP R 1.0K J 1/16W		D401-405			1SS388F	DIODE	
R798			RK73HB1J104J	CHIP R 100K J 1/16W		D406			HRB0502A	DIODE	
R799			RK73HB1J334J	CHIP R 330K J 1/16W		D407			MA2S111-F	DIODE	
R800			RK73HB1J474J	CHIP R 470K J 1/16W		D408			1SS301F	DIODE	
R801			RK73HB1J473J	CHIP R 47K J 1/16W		D409,410			MA2S111-F	DIODE	
R802			RK73HB1J474J	CHIP R 470K J 1/16W		D411		*	1SS416	DIODE	
R803			RK73HB1J103J	CHIP R 10K J 1/16W		D412			1SS301F	DIODE	
R804			RK73HB1J000J	CHIP R 0.0 J 1/16W		D413			1SS388F	DIODE	
R805,806			RK73HB1J473J	CHIP R 47K J 1/16W		D414,415		*	1SS416	DIODE	
R807			RK73HB1J102J	CHIP R 1.0K J 1/16W		D416,417			1SS388F	DIODE	
R808			RK73HB1J471J	CHIP R 470 J 1/16W		D701			1SS301F	DIODE	
R809			RK73HB1J334J	CHIP R 330K J 1/16W		D702			MA2S111-F	DIODE	
R810			RK73HB1J332J	CHIP R 3.3K J 1/16W		D703-706			RB706F-40	DIODE	
R811			RK73HB1J823J	CHIP R 82K J 1/16W		D707			DA221	DIODE	
R812			RK73HB1J562J	CHIP R 5.6K J 1/16W		IC1			LMC7101BIM5	MOS-IC	
R813			RK73HB1J273J	CHIP R 27K J 1/16W		IC101			Note 1	ROM IC	
R814			RK73HB1J564J	CHIP R 560K J 1/16W		IC102			Note 1	MICROPROCESSOR IC	
R815			RK73HB1J104J	CHIP R 100K J 1/16W							

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

CONTROL UNIT (X53-4260-XX)
TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC103			TC7SH08FU-F	SRAM IC		0701			2SA1832(GR)F	TRANSISTOR	
IC104		*	XG6109C29ANN	MOS-IC		0702,703			SSM3K15TE(F)	FET	
IC105		*	RV5C386A	ANALOGUE IC		0704			2SC4617(S)	TRANSISTOR	
IC106		*	SM5023CNDH-G	MOS-IC		0705			2SC4738(GR)F	TRANSISTOR	
IC107		*		MOS-IC		0706			2SA1832(GR)F	TRANSISTOR	
IC108			Note 1	MOS-IC		0707			2SJ243-A	FET	
IC109		*	TC7SH08FU-F	MOS-IC		TH1			ERTJOEV104H	THERMISTOR	
IC401		*	TC74LCX245FK	MOS-IC		TH701			ERTJOEV104H	THERMISTOR	
IC402		*	TC7WZ245FK-F	MOS-IC							
IC403		*	LM2682MMX	MOS-IC							
IC404			XC6204B332M	MOS-IC							
IC405		*	XC6205B152PPRN	ANALOGUE IC							
IC406			XC6204B332M	MOS-IC							
IC407		*	LT1616ES6-PBF	ANALOGUE IC							
IC408			TC75S51FE(F)	MOS-IC							
IC409			TC7W66FK-F	MOS-IC							
IC410		*	MCP6021-E/OT	MOS-IC							
IC411		*	NJM2880U105ZB	ANALOGUE IC							
IC412,413		*	TPA6201A1DRBR	ANALOGUE IC							
IC414			XC61CC5602NR	MOS-IC							
IC415			TC7SET08FU-F	MOS-IC							
IC416		*	S-812C31BPI-G	ANALOGUE IC							
IC417		*	TC7WH126FK	MOS-IC							
IC418			TC7WT125FUF	MOS-IC							
IC701			Note 1	MOS-IC							
IC702			TC75W51FK(F)	MOS-IC							
IC703			M62364FP-F	MOS-IC							
IC704			TC75S51FE(F)	MOS-IC							
IC705			TC75W51FK(F)	MOS-IC							
IC706			TC75S51FE(F)	MOS-IC							
IC707			TC7W53FK(F)	MOS-IC							
IC708			XC6204B502PPR	MOS-IC							
IC709			TC7W53FK(F)	MOS-IC							
IC710,711			TC75W51FK(F)	MOS-IC							
IC712			TC7S66FUF	MOS-IC							
IC713			TC75W51FK(F)	MOS-IC							
IC714			TC7W53FK(F)	MOS-IC							
IC715			TC75S51FE(F)	MOS-IC							
IC716			TC75W51FK(F)	MOS-IC							
Q1			2SA1362-F(GR)	TRANSISTOR							
Q2			2SC4617(S)	TRANSISTOR							
Q3 ,4			SSM3K15TE(F)	FET							
Q5			2SJ347F	FET							
Q101			2SA1832(GR)F	TRANSISTOR	K2						
Q102			2SC4617(S)	TRANSISTOR	K2						
Q103			SSM3K15TE(F)	FET	K2						
Q401,402		*	SSM6N16FE-F	FET	K2						
Q403			2SA1955A-F	TRANSISTOR							
Q404			SSM3K15TE(F)	FET							
Q405		*	SSM6N16FE-F	FET							
Q406			2SB1132(Q,R)	TRANSISTOR							
Q407			UMG3N	TRANSISTOR							
Q408		*	EMD12	TRANSISTOR							
Q409			2SA1955A-F	TRANSISTOR							
Q410			SSM3K15TE(F)	FET							
Q411		*	SSM6N16FE-F	FET							
Q412			SSM3K15TE(F)	FET							
Q413			2SA1955A-F	TRANSISTOR							
Q414,415		*	EMD12	TRANSISTOR							

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C64			CC73HCH1H030B	CHIP C 3.0PF B		C151			CK73GB1C104K	CHIP C 0.10UF K	
C65			CC73HCH1HR75B	CHIP C 0.75PF B		C152			CK73GB1E105K	CHIP C 1.0UF K	
C66,67			CC73HCH1H080B	CHIP C 8.0PF B		C154			CC73GCH1H030B	CHIP C 3.0PF B	
						C155			CK73HB1H471K	CHIP C 470PF K	
C68			CC73HCH1H100B	CHIP C 10PF B		C156			CK73HB1C103K	CHIP C 0.010UF K	
C69			CC73HCH1H070B	CHIP C 7.0PF B		C158			CC73GCH1H330G	CHIP C 33PF G	
C70			CK73HB1H102K	CHIP C 1000PF K		C159			CK73HB1H471K	CHIP C 470PF K	
C71			CK73GB1H103K	CHIP C 0.010UF K		C160			CK73HB1A104K	CHIP C 0.10UF K	
C72			CK73GB1H102K	CHIP C 1000PF K		C163			CC73GCH1H120G	CHIP C 12PF G	
C74,75			CC73HCH1H0R5B	CHIP C 0.5PF B		C165			CC73GCH1H070B	CHIP C 7.0PF B	
C76			CK73HB1H102K	CHIP C 1000PF K		C166			CC73GCH1H560J	CHIP C 56PF J	
C77			CC73HCH1H220J	CHIP C 22PF J		C167,168			CC73HCH1H101J	CHIP C 100PF J	
C78			CK73HB1H471K	CHIP C 470PF K		C169			CK73HB1A104K	CHIP C 0.10UF K	
C79			CC73HCH1H101J	CHIP C 100PF J		C173			CK73HB1H471K	CHIP C 470PF K	
C81			CC73HCH1H470J	CHIP C 47PF J		C177			CC73HCH1H220J	CHIP C 22PF J	
C82			CK73FBQJ106K	CHIP C 10UF K		C178			CC73HCH1H120J	CHIP C 12PF J	
C83			CK73HB1H471K	CHIP C 470PF K		C179			CC73HCH1H100B	CHIP C 10PF B	
C84			CC73HCH1H050B	CHIP C 5.0PF B		C180			CC73GCH1H120G	CHIP C 12PF G	
C85			CK73FBQJ105K	CHIP C 1.0UF K		C190			CC73GCH1H270G	CHIP C 27PF G	
C87			CK73HB1C103K	CHIP C 0.010UF K		C191			CC73GCH1H181J	CHIP C 180PF J	
C88			CC73HCH1H101J	CHIP C 100PF J		C193			CC73GCH1H330G	CHIP C 33PF G	
C90,91			CK73HB1A104K	CHIP C 0.10UF K		C201,202			CK73GB1H104K	CHIP C 0.10UF K	
C92			CC73HCH1H020B	CHIP C 2.0PF B		C203			CC73HCH1H070B	CHIP C 7.0PF B	
C93			CC73HCH1H330J	CHIP C 33PF J		C204			CK73HB1C103K	CHIP C 0.010UF K	
C100			CC73HCH1H150J	CHIP C 15PF J		C206			CK73HB1C103K	CHIP C 0.010UF K	
C101,102			CK73HB1H102K	CHIP C 1000PF K		C207			CC73HCH1H100B	CHIP C 10PF B	
C104			CC73HCH1H100C	CHIP C 10PF C		C208			CC73HCH1H680J	CHIP C 68PF J	
C106			CK73HB1H102K	CHIP C 1000PF K		C209			CC73HCH1H101J	CHIP C 100PF J	
C109			CK73HB1H471K	CHIP C 470PF K		C210			CK73HB1H471K	CHIP C 470PF K	
C111			CK73HB1H102K	CHIP C 1000PF K		C211			CK73HB1C103K	CHIP C 0.010UF K	
C112			CC73HCH1H560J	CHIP C 56PF J		C212			CC73HCH1H680J	CHIP C 68PF J	
C114,115			CK73HB1H102K	CHIP C 1000PF K		C213			CK73HB1C103K	CHIP C 0.010UF K	
C116			CK73HB1A104K	CHIP C 0.10UF K		C215			CC73HCH1H050B	CHIP C 5.0PF B	
C117			CK73HB1H102K	CHIP C 1000PF K		C216			CC73HCH1H220G	CHIP C 22PF G	
C119			CC73HCH1H180J	CHIP C 18PF J		C217			CK73HB1C103K	CHIP C 0.010UF K	
C120			CK73HB1H471K	CHIP C 470PF K		C219			CC73HCH1H060B	CHIP C 6.0PF B	
C122			CK73HB1H102K	CHIP C 1000PF K		C220			CK73HB1C103K	CHIP C 0.010UF K	
C123			CK73HB1A104K	CHIP C 0.10UF K		C221			CK73HB1A104K	CHIP C 0.10UF K	
C124			CC73HCH1H560J	CHIP C 56PF J		C222,223			CK73HB1C103K	CHIP C 0.010UF K	
C125			CK73HB1H102K	CHIP C 1000PF K		C224,225			CK73HB1A104K	CHIP C 0.10UF K	
C127			CC73HCH1H100C	CHIP C 10PF C		C226			CK73HB1H471K	CHIP C 470PF K	
C128			CS77AA1A6R8M	CHIP TNTL 6.8UF 10WV		C227,228			CK73HB1A104K	CHIP C 0.10UF K	
C129			CK73HB1A104K	CHIP C 0.10UF K		C229			CC73HCH1H100B	CHIP C 10PF B	
C130			CK73HB1H102K	CHIP C 1000PF K		C230			CK73HB1A104K	CHIP C 0.10UF K	
C131			CK73GB1E105K	CHIP C 1.0UF K		C231			CC73HCH1H100B	CHIP C 10PF B	
C132			CK73HB1H102K	CHIP C 1000PF K		C232			CK73HB1H102K	CHIP C 1000PF K	
C133,134			CK73HB1H471K	CHIP C 470PF K		C233			CK73HB1C103K	CHIP C 0.010UF K	
C135			CC73GCH1H220G	CHIP C 22PF G		C234			CK73FB1E474K	CHIP C 0.47UF K	
C136			CK73GB1H102K	CHIP C 1000PF K		C235			CK73HB1H102K	CHIP C 1000PF K	
C139			CK73HB1H471K	CHIP C 470PF K		C236,237		*	CK73FB1A106K	CHIP C 10UF K	
C140			CC73GCH1H070B	CHIP C 7.0PF B		C238			CK73HB1C103K	CHIP C 0.010UF K	
C141			CK73HB1H471K	CHIP C 470PF K		C239			CK73HB1A104K	CHIP C 0.10UF K	
C142			CC73GCH1H090B	CHIP C 9.0PF B		C240			CC73HCH1H040B	CHIP C 4.0PF B	
C143			CC73HCH1H101J	CHIP C 100PF J		C241,242			CK73HB1H102K	CHIP C 1000PF K	
C144			CC73GCH1H240G	CHIP C 24PF G		C244			CC73HCH1H120G	CHIP C 12PF G	
C145			CK73HB1C103K	CHIP C 0.010UF K		C245			CK73FB1A475K	CHIP C 4.7UF K	
C146			CC73GCH1H090B	CHIP C 9.0PF B		C246			CK73HB1A104K	CHIP C 0.10UF K	
C148			CK73HB1H102K	CHIP C 1000PF K		C247			CC73HCH1H050B	CHIP C 5.0PF B	
C149			CC73GCH1H120G	CHIP C 12PF G		C248			CC73HCH1H220G	CHIP C 22PF G	
C150			CK73HB1A104K	CHIP C 0.10UF K							

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C249			CK73HB1A104K	CHIP C 0.10UF K		C449-458			CC73HCH1H470J	CHIP C 47PF J	
C250			CC73HCH1H030B	CHIP C 3.0PF B		C460			CC73HCH1H470J	CHIP C 47PF J	
C251			CC73HCH1H050B	CHIP C 5.0PF B		C462,463			CK73HB1H471K	CHIP C 470PF K	
C252			CC73HCH1H470G	CHIP C 47PF G		C464-468			CK73HB1H102K	CHIP C 1000PF K	
C254			CC73HCH1H100B	CHIP C 10PF B		C470			CC73HCH1H470J	CHIP C 47PF J	
C262			CK73HB1C103K	CHIP C 0.010UF K		C472-474			CC73HCH1H470J	CHIP C 47PF J	
C267			CK73HB1H102K	CHIP C 1000PF K		C475			CK73HBJ105K	CHIP C 1.0UF K	
C268			CC73HCH1H101J	CHIP C 100PF J		C476			CC73HCH1H470J	CHIP C 47PF J	
C270			CC73HCH1H020B	CHIP C 2.0PF B		C478,479			CC73HCH1H470J	CHIP C 47PF J	
C273			CC73HCH1H101J	CHIP C 100PF J		C499			CC73HCH1H470J	CHIP C 47PF J	
C274			CK73HB1H102K	CHIP C 1000PF K		CN102	*	E23-1326-05	TERMINAL		
C275,276			CK73HB1A104K	CHIP C 0.10UF K		CN400	*	E40-6422-15	SOCKET FOR PIN ASSY		
C278			CK73HB1H102K	CHIP C 1000PF K		CN401	*	E40-6752-05	FLAT CABLE CONNECTOR		
C280			CC73HCH1H1R5B	CHIP C 1.5PF B		CN736		E40-6358-05	SOCKET FOR PIN ASSY		
C281			CK73HB1C103K	CHIP C 0.010UF K		F400		F53-0324-05	FUSE		
C282			CK73GB1E105K	CHIP C 1.0UF K		CF200		L72-1017-05	CERAMIC FILTER		
C283-286			CK73HB1H102K	CHIP C 1000PF K		CF201	*	L72-1020-05	CERAMIC FILTER		
C290			CC73HCH1H101J	CHIP C 100PF J		L1		L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)		
C291			CK73HB1H102K	CHIP C 1000PF K		L2 ,3		L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)		
C293			CC73HCH1H060B	CHIP C 6.0PF B		L5		L40-8275-92	SMALL FIXED INDUCTOR(82NH)		
C295			CC73HCH1H470J	CHIP C 47PF J		L6 ,7		L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)		
C297			CC73HCH1H1R5B	CHIP C 1.5PF B		L8		L40-3975-92	SMALL FIXED INDUCTOR(39NH)		
C298			CC73HCH1H020B	CHIP C 2.0PF B		C301		L10	L92-0163-05	BEADS CORE	
C299			CC73HCH1H180J	CHIP C 18PF J		C304		L11	L40-1891-86	SMALL FIXED INDUCTOR(1.8UH)	
C300			CC73HCH1H101J	CHIP C 100PF J		C306		L12	L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
C301			CK73HCH1H120J	CHIP C 12PF J		C307		L15	L92-0446-05	BEADS CORE	
C304			CC73HCH1H390J	CHIP C 39PF J		C310		L16 -20	L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C306			CC73HCH1H180J	CHIP C 18PF J		C311		L23	L40-5678-67	SMALL FIXED INDUCTOR(56NH)	
C307			CC73HCH1H470G	CHIP C 47PF G		C312		L24	L40-2778-67	SMALL FIXED INDUCTOR(27NH)	
C310			CK73HB1C103K	CHIP C 0.010UF K		C313		L25	L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C311			CK73GB1H104K	CHIP C 0.10UF K		C314		L26 ,27	L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
C312			CK73GB1H102K	CHIP C 1000PF K		C316		L29	L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
C313			CK73HB1A104K	CHIP C 0.10UF K		C317		L30	L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
C314			CK73HB1H102K	CHIP C 1000PF K		C318		L98,99	L92-0163-05	BEADS CORE	
C316			CC73HCH1H050B	CHIP C 5.0PF B		C351		L100	L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C317			CK73GB1E104K	CHIP C 0.10UF K		C355,356		L102	L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
C318			CK73HCH1H101J	CHIP C 100PF J		C400		L103	L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C351			CK73HB1H102K	CHIP C 1000PF K		C402,403		CK73GCH1H220J	CHIP C 22PF J		
C355,356			CK73HB1A104K	CHIP C 0.10UF K		C404-406		CK73HB1H471K	CHIP C 470PF K		
C400			CK73GB1H220J	CHIP C 22PF J		C407	*	CK73GB1E105K	CHIP C 1.0UF K		
C402,403			CK73HB1H471K	CHIP C 470PF K		C408		CK73GB1C224K	CHIP C 0.22UF K		
C404-406			CK73GB1E105K	CHIP C 1.0UF K		C409		CK73GB1E105K	CHIP C 1.0UF K		
C407	*		CK73GB1C224K	CHIP C 0.22UF K		C410	*	C92-0765-05	4.7UF 16WV		
C408			CK73GB1E105K	CHIP C 1.0UF K		C411	*	CK73GB1E105K	CHIP C 0.10UF K		
C409			C92-0765-05	CHIP-TAN	4.7UF 16WV	C414	*	CK73GB1C224K	CHIP C 0.22UF K		
C410	*		CK73GB1C224K	CHIP C 0.22UF K		C415		CK73HB1H471K	CHIP C 470PF K		
C411			CK73HB1A104K	CHIP C 0.10UF K		C416		CK73GB1E105K	CHIP C 1.0UF K		
C414	*		CK73GB1C224K	CHIP C 0.22UF K		C417		CC73HCH1E181J	CHIP C 180PF J		
C415			CK73HB1H471K	CHIP C 470PF K		C418		CK73GB1E105K	CHIP C 1.0UF K		
C416			CK73GB1E105K	CHIP C 1.0UF K		C419		CC73HCH1H220J	CHIP C 22PF J		
C417			CC73HCH1E181J	CHIP C 180PF J		C420		CK73HB1H471K	CHIP C 470PF K		
C418			CK73GB1E105K	CHIP C 1.0UF K		C421	*	CK73GB1C224K	CHIP C 0.22UF K		
C419			CC73HCH1H220J	CHIP C 22PF J		C422		CK73GB1E105K	CHIP C 1.0UF K		
C420			CK73HB1H471K	CHIP C 470PF K		C423	*	CK73GB1C224K	CHIP C 0.22UF K		
C421	*		CK73GB1C224K	CHIP C 0.22UF K		C424,425		CK73GB1E105K	CHIP C 1.0UF K		
C422			CK73GB1E105K	CHIP C 1.0UF K		C426		CC73HCH1H470J	CHIP C 47PF J		
C423	*		CK73GB1C224K	CHIP C 0.22UF K		C428-445		CC73HCH1H470J	CHIP C 47PF J		
C424,425			CK73GB1E105K	CHIP C 1.0UF K		C447		CC73HCH1H470J	CHIP C 47PF J		
C426			CC73HCH1H470J	CHIP C 47PF J							
C428-445			CC73HCH1H470J	CHIP C 47PF J							
C447			CC73HCH1H470J	CHIP C 47PF J							

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L208,209			L40-3375-92	SMALL FIXED INDUCTOR(33NH)		R54			RK73HB1J102J	CHIP R 1.0K	J 1/16W
L212			L41-8278-14	SMALL FIXED INDUCTOR(82NH)		R55			RK73HB1J104J	CHIP R 100K	J 1/16W
L214			L92-0138-05	CHIP FERRITE		R56			RK73HB1J000J	CHIP R 0.0	J 1/16W
L215			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R57			RK73HB1J124J	CHIP R 120K	J 1/16W
L220			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R58			RK73HB1J823J	CHIP R 82K	J 1/16W
L223			L40-5675-92	SMALL FIXED INDUCTOR(56NH)		R59 ,60			RN73HH1J104D	CHIP R 100K	D 1/16W
L224			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R62			RK73HB1J104J	CHIP R 100K	J 1/16W
L226			L92-0138-05	CHIP FERRITE		R63			RK73HB1J220J	CHIP R 22	J 1/16W
L250			L40-1085-57	SMALL FIXED INDUCTOR(100NH)		R64			RK73HB1J473J	CHIP R 47K	J 1/16W
L400			L92-0149-05	CHIP FERRITE		R67			RK73HB1J472J	CHIP R 4.7K	J 1/16W
L401			L33-1462-05	SMALL FIXED INDUCTOR		R68			RK73HB1J474J	CHIP R 470K	J 1/16W
L402			L41-2285-14	SMALL FIXED INDUCTOR(220NH)		R69			RK73HB1J560J	CHIP R 56	J 1/16W
L403			L40-1085-57	SMALL FIXED INDUCTOR(100NH)		R70 ,71			RK73HB1J000J	CHIP R 0.0	J 1/16W
L404	*		L41-1588-03	SMALL FIXED INDUCTOR(150NH)		R72			RK73HB1J104J	CHIP R 100K	J 1/16W
X1	*		L77-3014-05	TCXO(19.2MHZ)		R74			RK73HB1J153J	CHIP R 15K	J 1/16W
XF200	*		L71-0640-05	MCF(58.05MHZ)		R75			RK73HB1J100J	CHIP R 10	J 1/16W
R1			RK73HH1J474D	CHIP R 470K	D 1/16W	R76 ,77			RK73HB1J000J	CHIP R 0.0	J 1/16W
R2			RK73HB1J472J	CHIP R 4.7K	J 1/16W	R100			RK73HB1J332J	CHIP R 3.3K	J 1/16W
R3			RK73HB1J100J	CHIP R 10	J 1/16W	R101			RK73HB1J103J	CHIP R 10K	J 1/16W
R5 ,6			RK73HB1J100J	CHIP R 10	J 1/16W	R102			RK73HB1J271J	CHIP R 270	J 1/16W
R7			RK73HB1J472J	CHIP R 4.7K	J 1/16W	R103			RK73HB1J222J	CHIP R 2.2K	J 1/16W
R8			RK73HB1J100J	CHIP R 10	J 1/16W	R104			RK73HB1J470J	CHIP R 47	J 1/16W
R9			RK73HB1J102J	CHIP R 1.0K	J 1/16W	R105			RK73HB1J000J	CHIP R 0.0	J 1/16W
R10			RK73HB1J000J	CHIP R 0.0	J 1/16W	R106,107			RK73HB1J472J	CHIP R 4.7K	J 1/16W
R11 ,12			RK73HB1J223J	CHIP R 22K	J 1/16W	R111			RK73HB1J000J	CHIP R 0.0	J 1/16W
R15			RK73HB1J100J	CHIP R 10	J 1/16W	R118			RK73HB1J101J	CHIP R 100	J 1/16W
R17			RK73HH1J184D	CHIP R 180K	D 1/16W	R119			RK73HB1J03J	CHIP R 10K	J 1/16W
R18			RK73HH1J473D	CHIP R 47K	D 1/16W	R120			RK73HB1J223J	CHIP R 22K	J 1/16W
R19			RK73HB1J102J	CHIP R 1.0K	J 1/16W	R123			RK73HB1J331J	CHIP R 330	J 1/16W
R21			RK73HB1J106J	CHIP R 10M	J 1/16W	R124			RK73HB1J180J	CHIP R 18	J 1/16W
R22 ,23			RK73HB1J100J	CHIP R 10	J 1/16W	R126			RK73HB1J273J	CHIP R 27K	J 1/16W
R24 ,25			RK73HB1J000J	CHIP R 0.0	J 1/16W	R127			RK73HB1J473J	CHIP R 47K	J 1/16W
R26			RK73HB1J331J	CHIP R 330	J 1/16W	R129			RK73HB1J470J	CHIP R 47	J 1/16W
R27			RK73HB1J000J	CHIP R 0.0	J 1/16W	R130			RK73HB1J333J	CHIP R 33K	J 1/16W
R28			RK73HB1J223J	CHIP R 22K	J 1/16W	R131			RK73HB1J561J	CHIP R 560	J 1/16W
R29			RK73HB1J000J	CHIP R 0.0	J 1/16W	R133			RK73HB1J331J	CHIP R 330	J 1/16W
R30			RK73HB1J563J	CHIP R 56K	J 1/16W	R134			RK73HB1J561J	CHIP R 560	J 1/16W
R31			RK73HB1J121J	CHIP R 120	J 1/16W	R135			RK73HB1J222J	CHIP R 2.2K	J 1/16W
R32			RK73HB1J000J	CHIP R 0.0	J 1/16W	R136			RK73EB2ER39K	CHIP R 0.39	K 1/4W
R33			RK73HB1J223J	CHIP R 22K	J 1/16W	R137			RK73HB1J100J	CHIP R 10	J 1/16W
R34	*		RK73HH1J391D	CHIP R 390	D 1/16W	R138			RK73EB2ER39K	CHIP R 0.39	K 1/4W
R35			RK73HB1J103J	CHIP R 10K	J 1/16W	R139			RK73HB1J473J	CHIP R 47K	J 1/16W
R36			RK73HB1J472J	CHIP R 4.7K	J 1/16W	R141			RK73EB2ER39K	CHIP R 0.39	K 1/4W
R37 ,38			RK73HB1J000J	CHIP R 0.0	J 1/16W	R142			RK73HB1J223J	CHIP R 22K	J 1/16W
R39			RK73HB1J152J	CHIP R 1.5K	J 1/16W	R144,145			RK73HH1J54D	CHIP R 150K	D 1/16W
R40			RK73HB1J103J	CHIP R 10K	J 1/16W	R146			RK73GB2A000J	CHIP R 0.0	J 1/10W
R41			RK73HB1J474J	CHIP R 470K	J 1/16W	R147-150			RK73HH1J184D	CHIP R 180K	D 1/16W
R42			RK73HB1J473J	CHIP R 47K	J 1/16W	R151			RK73HB1J103J	CHIP R 10K	J 1/16W
R43			RK73HB1J102J	CHIP R 1.0K	J 1/16W	R152			RK73EB2E823J	CHIP R 82K	J 1/4W
R44 ,45			RK73HB1J473J	CHIP R 47K	J 1/16W	R153			RK73HB1J473J	CHIP R 47K	J 1/16W
R46	*		RK73HH1J331D	CHIP R 330	D 1/16W	R154			RK73HB1J000J	CHIP R 0.0	J 1/16W
R47			RK73HB1J220J	CHIP R 22	J 1/16W	R155			RK73HB1J474J	CHIP R 470K	J 1/16W
R48	*		RK73HH1J271D	CHIP R 270	D 1/16W	R156			RK73HB1J182J	CHIP R 1.8K	J 1/16W
R49			RK73HB1J154J	CHIP R 150K	J 1/16W	R157,158			RK73HB1J104J	CHIP R 100K	J 1/16W
R50			RK73HB1J101J	CHIP R 100	J 1/16W	R161			RK73HB1J000J	CHIP R 0.0	J 1/16W
R51			RK73HB1J102J	CHIP R 1.0K	J 1/16W	R162,163			RK73HB1J271J	CHIP R 270	J 1/16W
R52			RK73HB1J473J	CHIP R 47K	J 1/16W	R164			RK73HB1J103J	CHIP R 10K	J 1/16W
R53			RK73HB1J683J	CHIP R 68K	J 1/16W	R165			RK73HB1J474J	CHIP R 470K	J 1/16W
						R166			RK73HB1J102J	CHIP R 1.0K	J 1/16W

PARTS LIST


TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
D209			HVC131	DIODE							
D210			1SV305F	VARIABLE CAPACITANCE DIODE							
D211			HVC131	DIODE							
D212			HSC119	DIODE							
D213			HVC131	DIODE							
D400			1SR154-400	DIODE							
D401			HSC119	DIODE							
D403			1SS388F	DIODE							
IC1		*	LM73CIMKX-0	MOS-IC							
IC2			LMC7101BIM5	MOS-IC							
IC3			Note 1	MOS-IC							
IC4			TC75W51FUF	MOS-IC							
IC5			LMC7101BIM5	MOS-IC							
IC100			TA75W01FUF	MOS-IC							
IC200,201			LMC7101BIM5	MOS-IC							
IC202			TK10931VTL-G	ANALOGUE IC							
IC203		*	MCP6021-E/OT	MOS-IC							
IC400			TK11250CUCB	MOS-IC							
IC401			TC75S51FE(F)	MOS-IC							
IC402			XC9101D09AKR	ANALOGUE IC							
IC403		*	TK17133S	BI-POLAR IC							
IC404			TC75W51FUF	MOS-IC							
Q1			EMD9	TRANSISTOR							
Q2			DTA114YE	DIGITAL TRANSISTOR							
Q3			2SC5383-T111	TRANSISTOR							
Q4			2SC5636	TRANSISTOR							
Q6			2SC5383-T111	TRANSISTOR							
Q7			SSM6L05FU-F	FET							
Q8			2SK508NV(K52)	FET							
Q9			2SJ347F	FET							
Q10			2SK508NV(K52)	FET							
Q11			2SC5636	TRANSISTOR							
Q12		*	2SK879-F(Y)	FET							
Q13			SSM3K15TE(F)	FET							
Q100			2SC5636	TRANSISTOR							
Q102			2SK3077F	FET							
Q103			RD01MUS1-T113	FET							
Q104			2SC5383-T111	TRANSISTOR							
Q105			DTC14EE	DIGITAL TRANSISTOR							
Q106			RD07MVS1BT122	FET							
Q107			2SK1824-A	FET							
Q109			SSM3K15TE(F)	FET							
Q110		*	EMD5	TRANSISTOR							
Q201			2SC5108(Y)F	TRANSISTOR							
Q202			2SC4215-F(Y)	TRANSISTOR							
Q203			3SK318	FET							
Q204			3SK294-FP	FET							
Q206			2SK1830F	FET							
Q401-403			SSM6L05FU-F	FET							
Q404		*	SSM5H01TU-F	FET							
Q405			2SA1955A-F	TRANSISTOR							
Q406			UMG9N	TRANSISTOR							
TH100			ERTJOEV104H	THERMISTOR							


Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

NX-200

EXPLODED VIEW

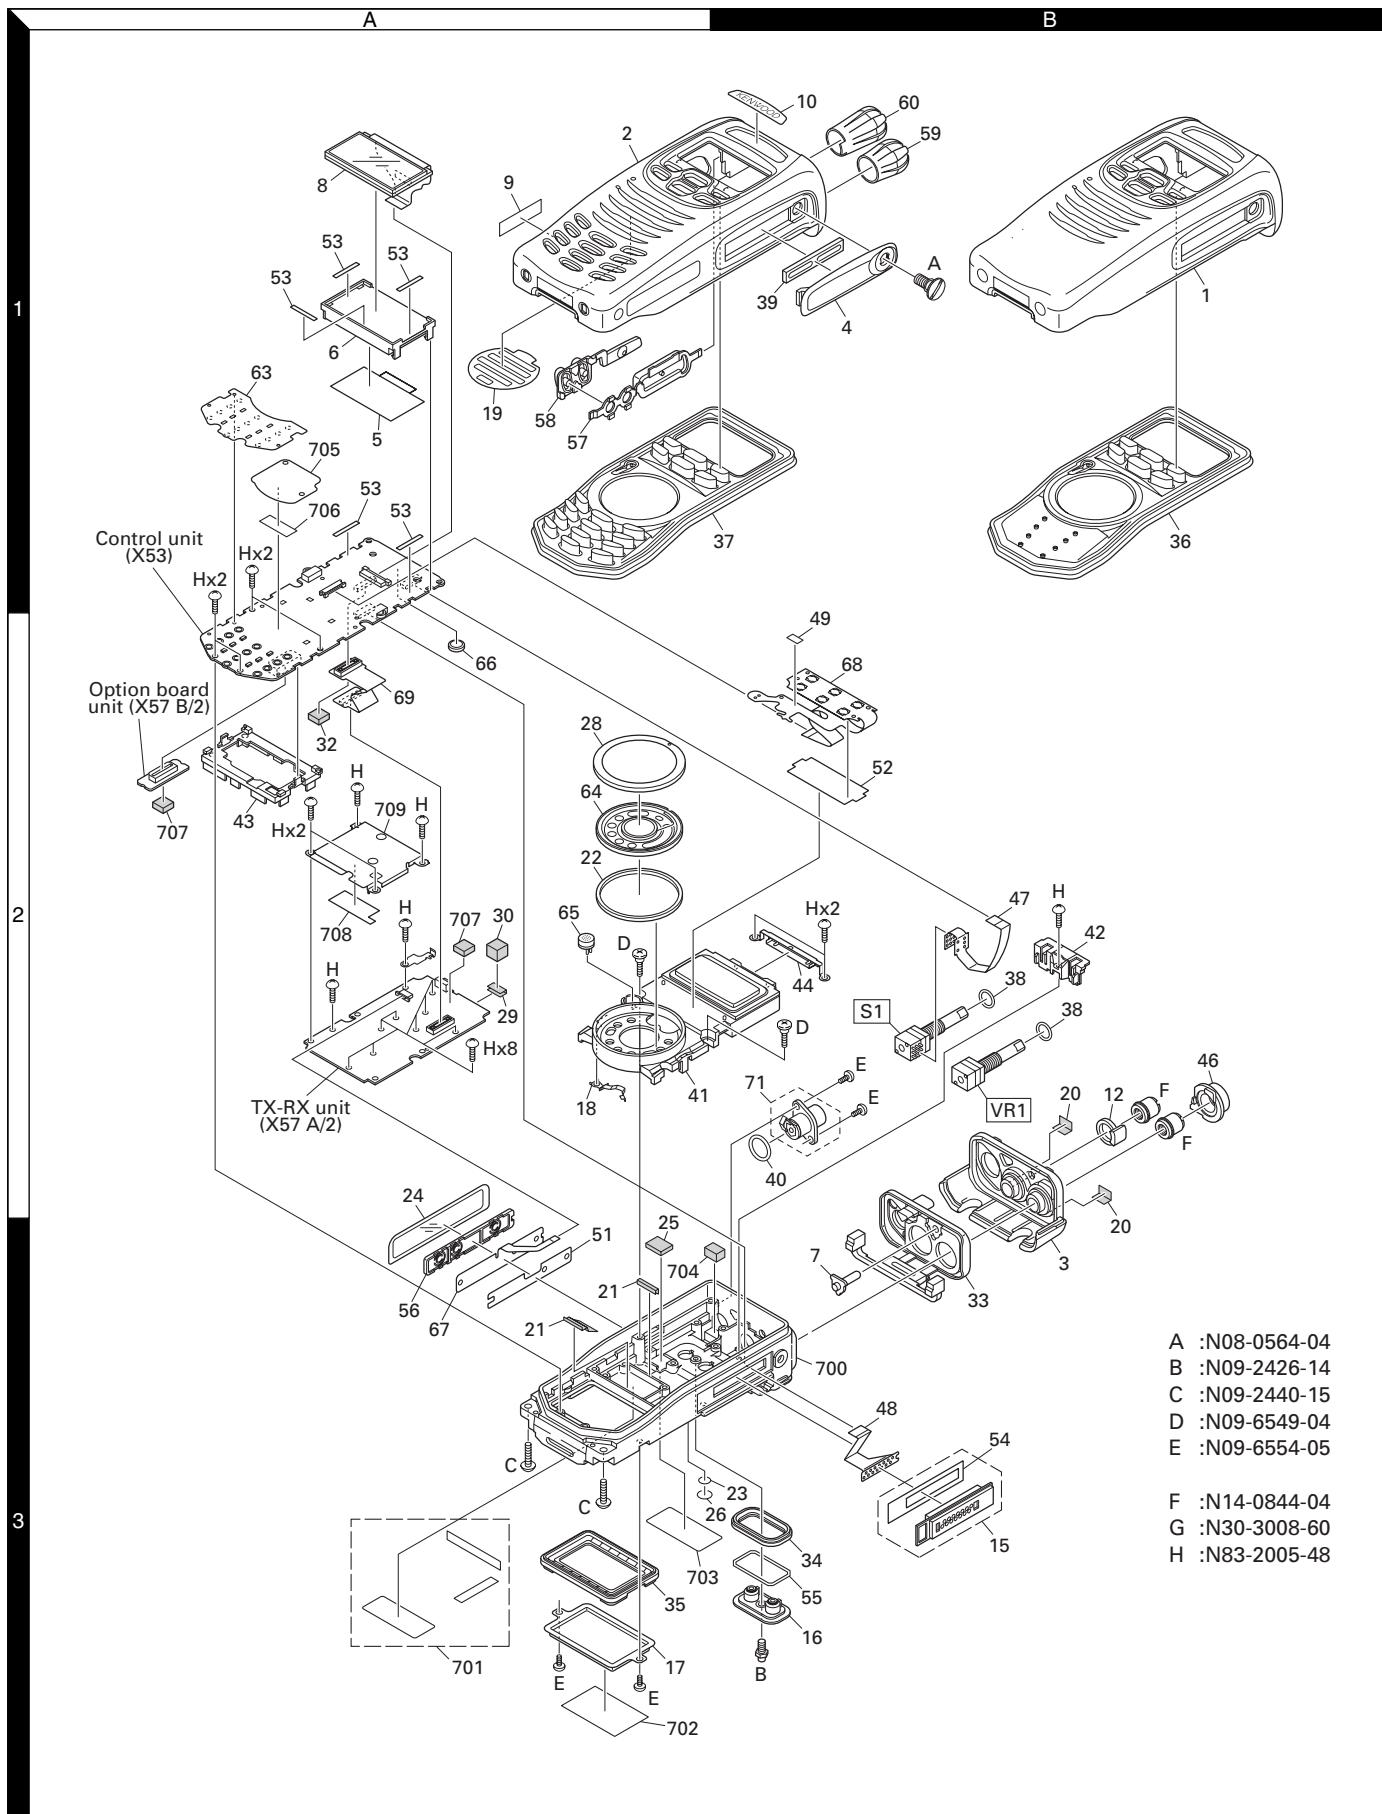

PACKING

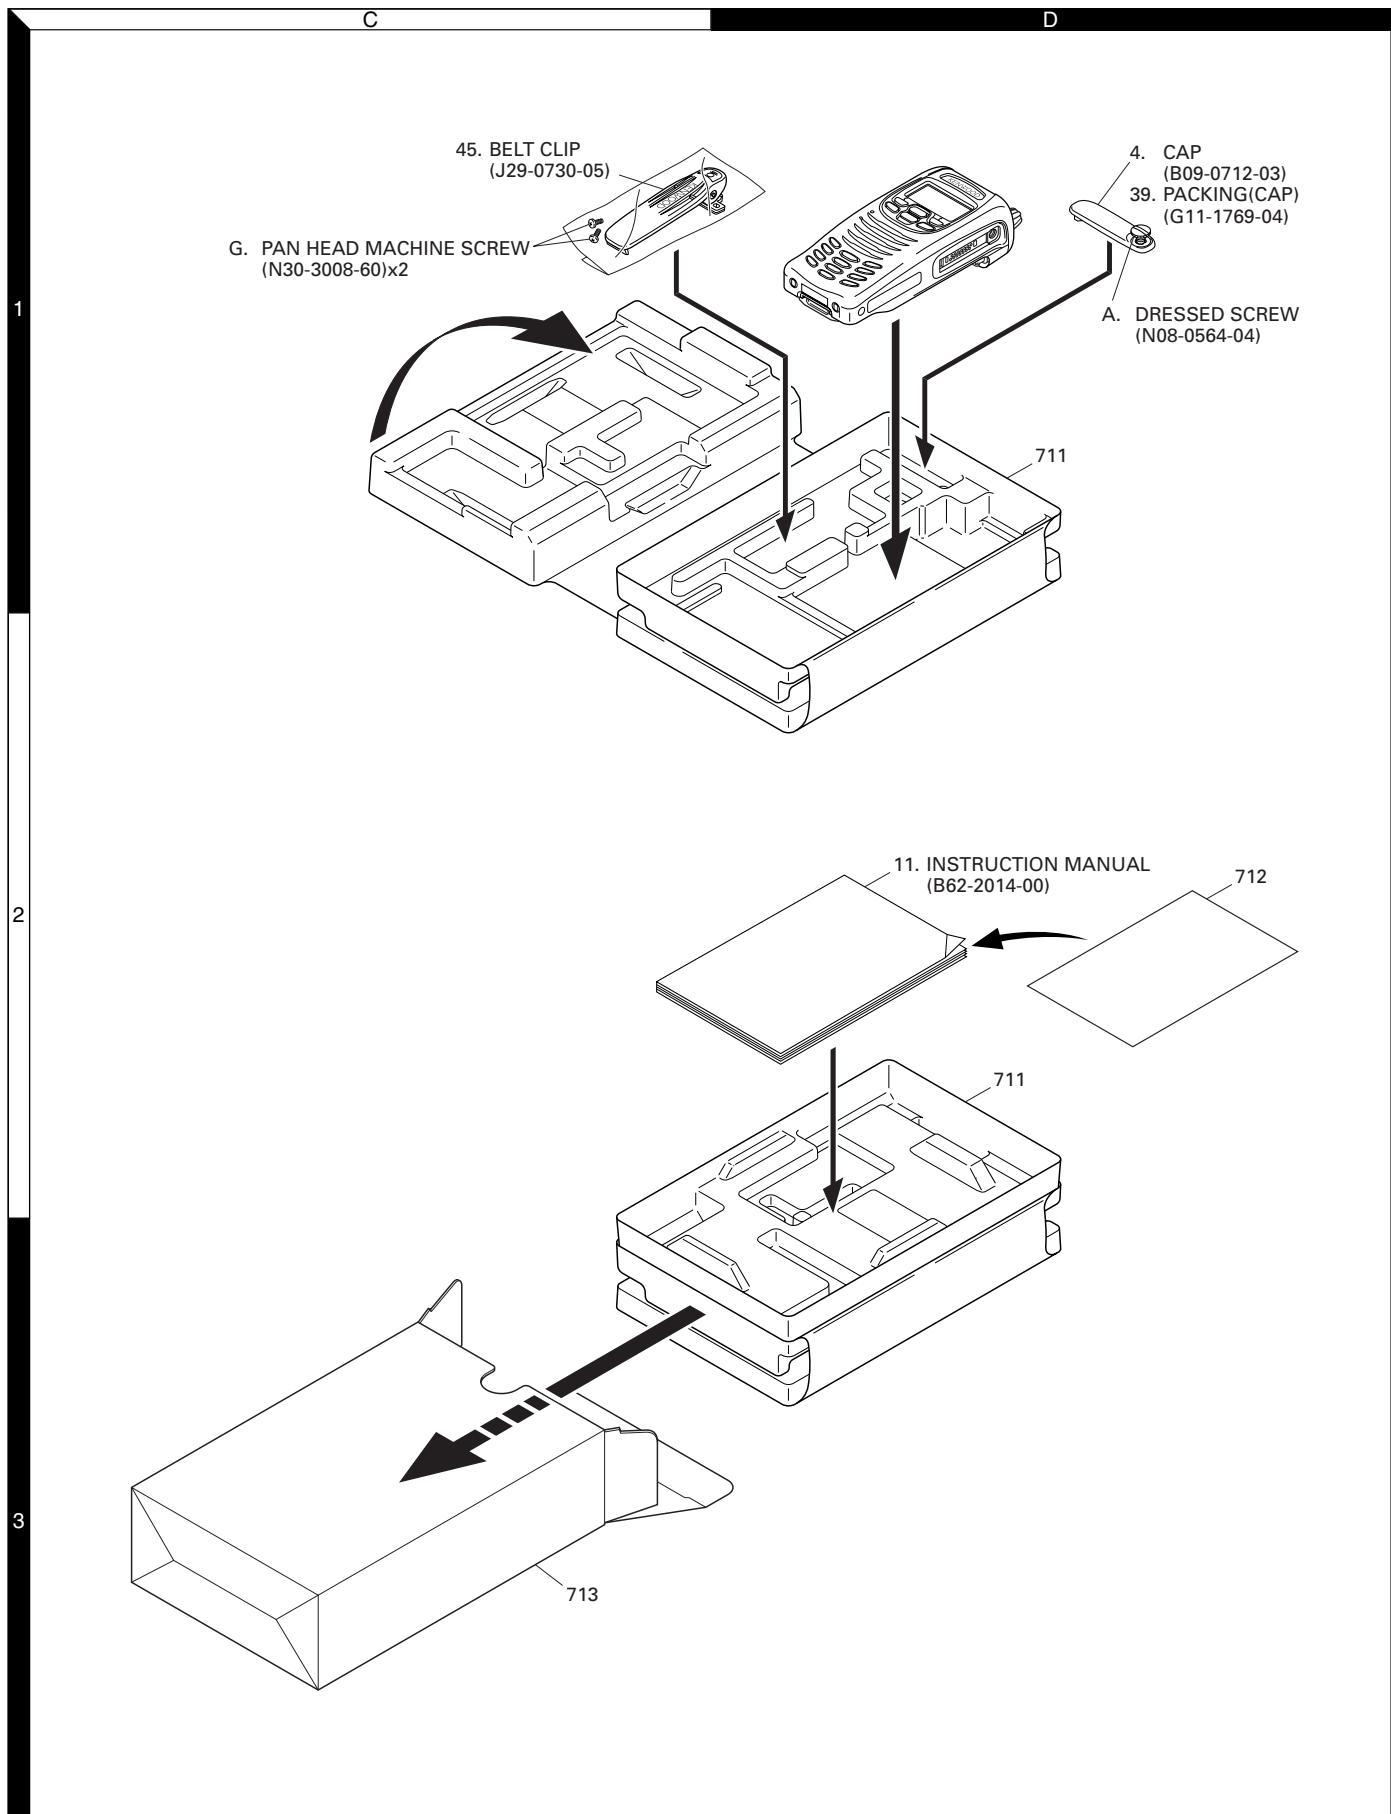

ADJUSTMENT


Fault diagnosis of the BGA IC

Overview: A flowchart for determining whether or not the transceiver can be powered on (the LCD does not function even if the power switch is turned on) due to broken BGA parts.


BGA parts

- ASIC (IC108)
- DSP (IC102)
- FLASH (IC101)
- SRAM (IC103)


● Checking power supply voltage

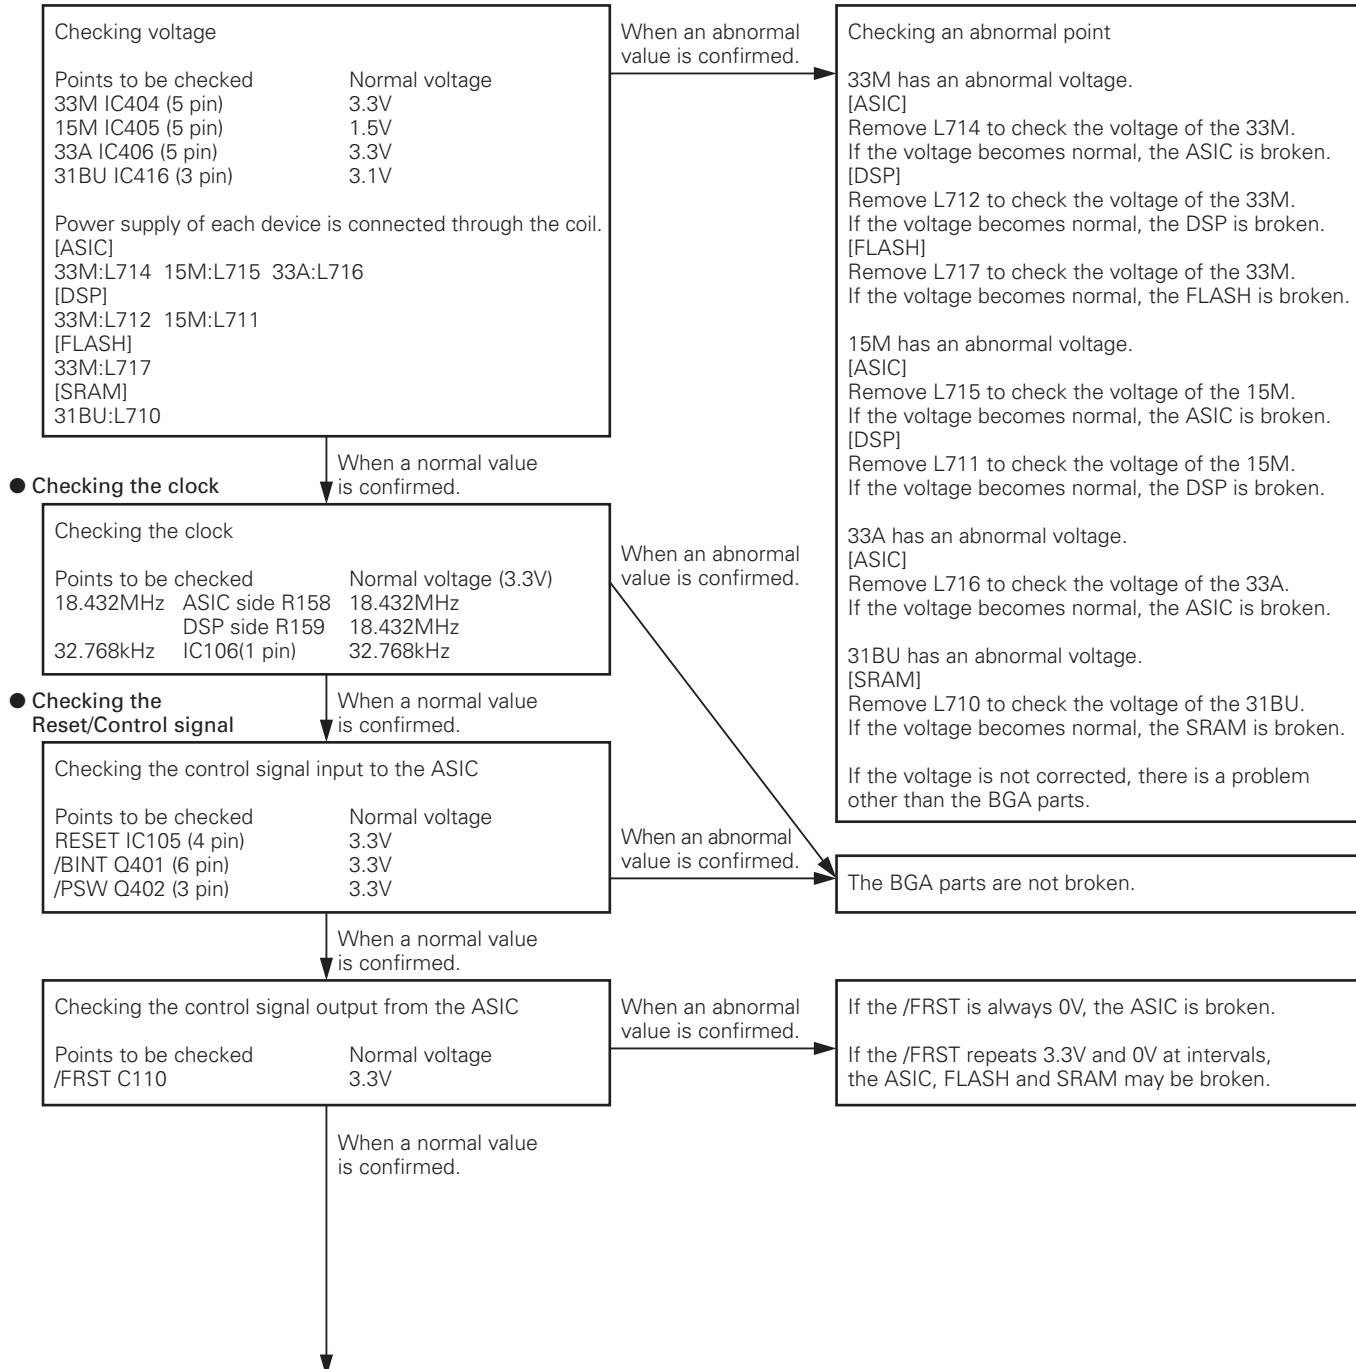

ADJUSTMENT

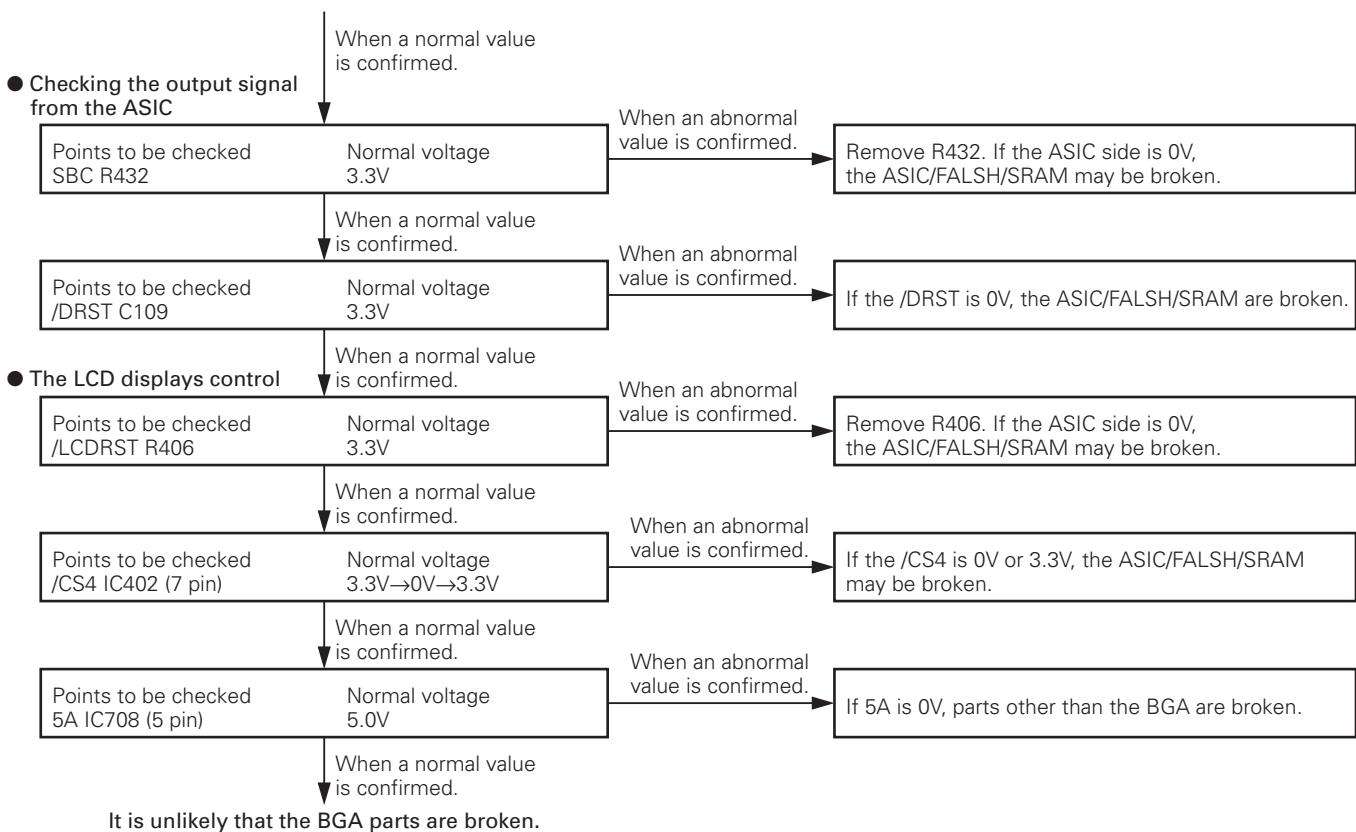

● When an error display appears on the LCD.

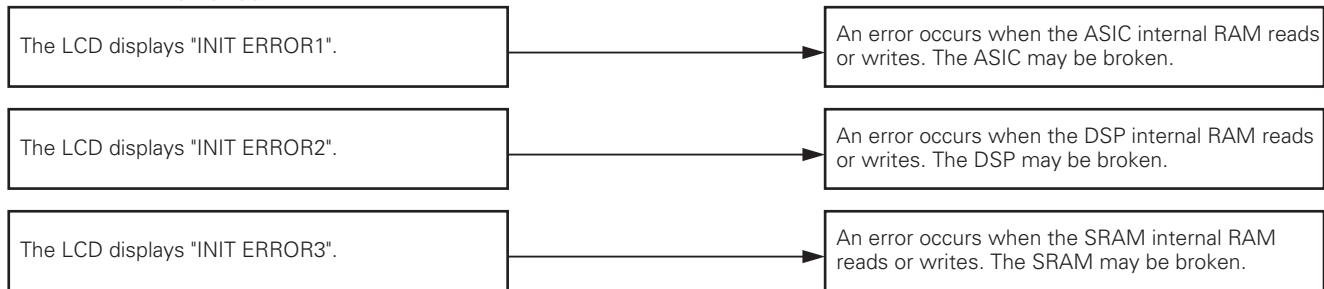


* Descriptions of signal names

1) RST(RESET)	: ASIC reset signal	LOW → Reset
2) /BINT	: Battery final voltage monitoring	LOW → Final voltage
3) /PSW	: Power switch signal	LOW → ON
4) /FRST	: FLASH reset signal	LOW → Reset
5) SBC	: Switch B control	HIGH → ON
6) /DRST	: DSP reset signal	LOW → Reset
7) /LCDRST	: LCD reset signal	LOW → Reset
8) /CS4	: LCD controller chip select signal	LOW → Active
9) 5A	: Analog peripheral control 5.0V power supply	

ADJUSTMENT

Controls

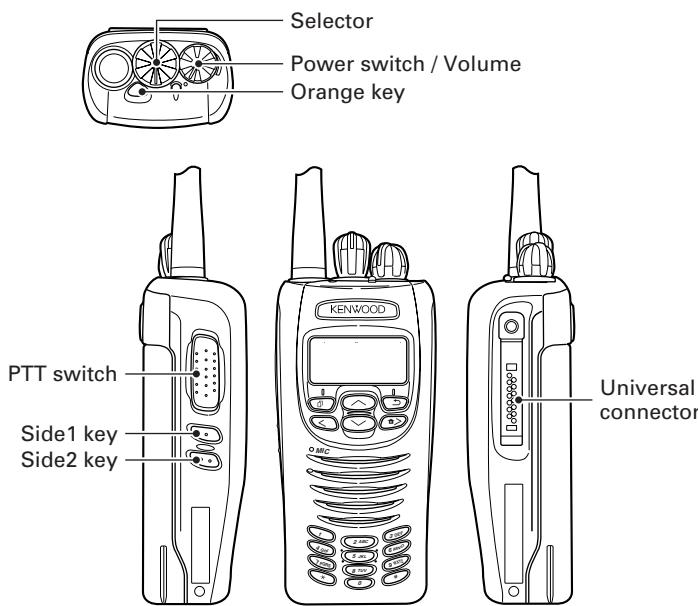

Panel Test Mode

■ Test mode operation features

This transceiver has a test mode. **To enter test mode, press and hold the [↴] key while turning the transceiver power ON. Before the transceiver enters test mode, the frequency version information appears on the LCD momentarily.** Test mode can be inhibited by programming. To exit test mode, turn the transceiver power OFF. The following functions are available in test mode.

■ Key operation

Key	"FNC" not appears on the sub LCD display	
	Function	Display
[Selector]	-	-
[↗]	Push: Test channel up Hold: Test channel up continuously	Channel No.
[↘]	Push: Test channel down Hold: Test channel down continuously	Channel No.
[Side1]	Push: Squelch level up Hold: Squelch off	Squelch level Squelch off:
[Side2]	Wide/Narrow/Very narrow	Wide : "w" Narrow : "n" Very narrow : "v"
[⏪]	Shift to panel tuning mode	-
[↵]	Function on	"FNC" appears on the sub LCD display
[<]	MSK 1200bps and 2400bps	2400bps :
[↗>]	Push: Test signaling up Hold: Test signaling up continuously	Signaling No.
[Orange]	-	-

[PTT]	Transmit	-
[0] to [9] and [#, [*]	Use as the DTMF keypad. If a key is pressed during transmission, the DTMF corresponding to the key that was presses is sent.	-

Key	"FNC" appears on the sub LCD display	
	Function	Display
[Selector]	-	-
[↗]	Function off	-
[↘]	Analog/NXDN	Analog: "A" NXDN: "N"
[Side1]	Function off	-
[Side2]	LCD all lights	LCD all point appears
[⏪]	High power/Low power	High: "H" Low: "L"
[↵]	Function off	-
[<]	Compander on/off	On:
[↗>]	Beat shift on/off	On:
[Orange]	Function off	-
[PTT]	Transmit	-
[0] to [9] and [#, [*]	Function off	-


• LED indicator

Red LED Lights during transmission.
Green LED Lights when there is carrier.

• Sub LCD indicator

"FNC" Appears at function on.

• LCD display in panel test mode

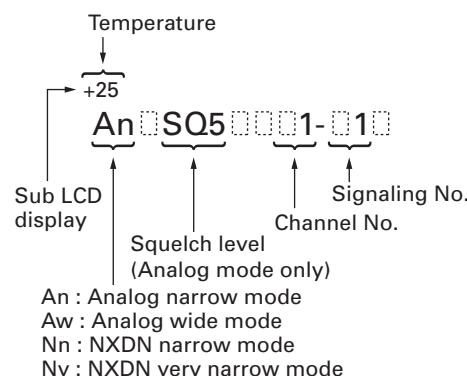

ADJUSTMENT

■ Frequency and Signaling

The transceiver has been adjusted for the frequencies shown in the following table. When required, readjust them following the adjustment procedure to obtain the frequencies you want in actual operation.

• Test frequency

CH	RX (MHz)	TX (MHz)
1	155.05000	155.10000
2	136.05000	136.10000
3	173.95000	173.90000
4	155.00000	155.00000
5	155.20000	155.20000
6	155.40000	155.40000
7	177.95000	177.90000
8~16	-	-

• Analog mode signaling

No.	RX	TX
1	None	None
2	None	100Hz Square Wave
3	LTR Data : AREA=0, GOTO=12 HOME=12 ID=47, FREE=25	LTR Data : AREA=0, GOTO=12 HOME=12 ID=47, FREE=25
4	QT : 67.0Hz	QT : 67.0Hz
5	QT : 151.4Hz	QT : 151.4Hz
6	QT : 210.7Hz	QT : 210.7Hz
7	QT : 254.1Hz	QT : 254.1Hz
8	DQT : D023N	DQT : D023N
9	DQT : D754I	DQT : D754I
10	DTMF : 159D	DTMF : 159D
11	None	DTMF Code 9
12	2-tone : A : 304.7Hz B : 3106.0Hz	2-tone : A : 304.7Hz B : 3106.0Hz
13	Single Tone : 979.9Hz	Single Tone : 979.9Hz
14	None	Single Tone : 1000Hz
15	None	MSK
16	MSK	MSK

• NXDN mode signaling

No.	RX	TX
1	RAN1	RAN1
2	None	PN9
3	RAN1	Maximum deviation pattern

Panel Tuning Mode

■ Preparations for tuning the transceiver

Before attempting to tune the transceiver, connect the unit to a suitable power supply.

Whenever the transmitter is turned, the unit must be connected to a suitable dummy load (i.e. power meter).


The speaker output connector must be terminated with a 8Ω dummy load and connected to an AC voltmeter and an audio distortion meter or a SINAD measurement meter at all times during tuning.

■ Transceiver tuning (To enter tuning mode)

To enter tuning mode, press the [**]**] key while the transceiver is in test mode. Use the [**<**] key to write tuning data through tuning modes, and the [**]/[**] key to adjust tuning requirements (1 to 4096 appears on the LCD).

Use the [**>**] key to select the adjustment item through tuning modes. Use the [**]** key to adjust 5 reference level adjustments, and use the [Side2] key to switch between Wide/Narrow/Very narrow.

• LCD display in panel tuning mode

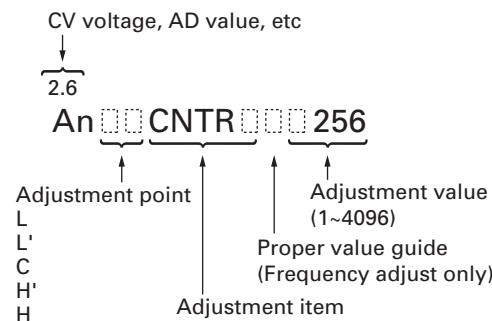

ADJUSTMENT

■ Key operation

Key	Function	
	Push	Hold (1 second)
[Selector]	-	
[↑]	Adjustment value up	Continuation up
[↓]	Adjustment value down	Continuation down
[Side1]	Auto adjustment start	-
[Side2]	Wide/Narrow/Very narrow	-
[□]	Shift to panel test mode	-
[↶]	To enter 5 reference level adjustments	-
[<]	Writes the adjustment value	-
[↶>]	Go to next adjustment item	Back to last adjustment item
[Orange]	-	
[PTT]	Transmit	
[0] to [9] and [#, [*]	-	

■ 5 reference level adjustments frequency

Tuning point	RX (MHz)	TX (MHz)
Low	136.05000	136.10000
Low'	145.55000	145.60000
Center	155.05000	155.10000
High'	164.55000	164.60000
High	173.95000	173.90000

■ Adjustment item and Display

Order	Adjustment item	Main LCD display	Sub LCD display	Aw	An	Nn	Nv
				Adjustment range			
1	LCD Contrast	CNTR	-	1 point ADJ		1~256	
				1 point ADJ		1~256	
2	Volume 1 (Counterclockwise Max)	VOL1	(VOL measurement value)	1 point ADJ		1~256	
				1 point ADJ		1~256	
3	Volume 2 (Clockwise Max)	VOL2	(VOL measurement value)	1 point ADJ		1~256	
				1 point ADJ		1~256	
4	RX Assist	RAST	(CV voltage)	5 point ADJ		1~4096	
				5 point ADJ		1~4096	
5	TX Assist	TAST	(CV voltage)	1 point ADJ		-62~-1/0/+1~+62	
				1 point ADJ		-62~-1/0/+1~+62	
6	RTC	RTC	-	-	5	-	-
				1~1024			
7	High Power	HIPWR	-	-	5	-	-
				1~1024			
8	Low Power	LOPWR	-	-	5	-	-
				1~1024			
9	Balance	BAL	(Encode frequency)	-	5	-	-
				1~256			
10	NXDN Deviation	NDEV	-	-	-	5	5
				1~1024			
11	Analog Max Deviation	ADEV	-	5	5	-	-
				1~1024			


ADJUSTMENT

Order	Adjustment item	Main LCD display	Sub LCD display	Aw	An	Nn	Nv
				Adjustment range			
12	QT Deviation	QT	-	1	1	-	-
				1~1024			
13	DQT Deviation	DQT	-	1	1	-	-
				1~1024			
14	LTR Deviation	LTR	-	1	1	-	-
				1~1024			
15	DTMF Deviation	DTMF	-	1	1	-	-
				1~1024			
16	Single Tone Deviation	TONE	-	1	1	-	-
				1~1024			
17	MSK Deviation	MSK	-	1	1	-	-
				1~1024			
18	CW ID Deviation	CVID	-	-	-	-	1
				1~1024			
19	VOX 1	VOX1	(VOX measurement value)	1 point ADJ			
				1~256			
20	VOX 10	VOX10	(VOX measurement value)	1 point ADJ			
				1~256			
21	Sensitivity 1	SENS1	(RSSI measurement value)	-	5	-	-
				1~256			
22	Sensitivity 2	SENS2	(RSSI measurement value)	-	5	-	-
				1~256			
23	RSSI (Reference)	RRSSI	(RSSI measurement value)	5	5	- *1	5
				1~256			
24	Squelch Open	SQL	(ASQDET measurement value)	5	5	- *1	5
				1~256			
25	Low RSSI	LRSSI	(RSSI measurement value)	5	5	- *1	5
				1~256			
26	High RSSI	HRSSI	(RSSI measurement value)	5	5	- *1	5
				1~256			
27	Squelch Tight	SQLT	(ASQDET measurement value)	5	5	-	-
				1~256			
28	Battety Warning Level	BATT	(BATT measurement value)	1 point ADJ			
				1~256			

*1: The adjustment of NXDN Narrow is common with the adjustment of Analog Narrow.

ADJUSTMENT

■ Panel tuning mode flow chart

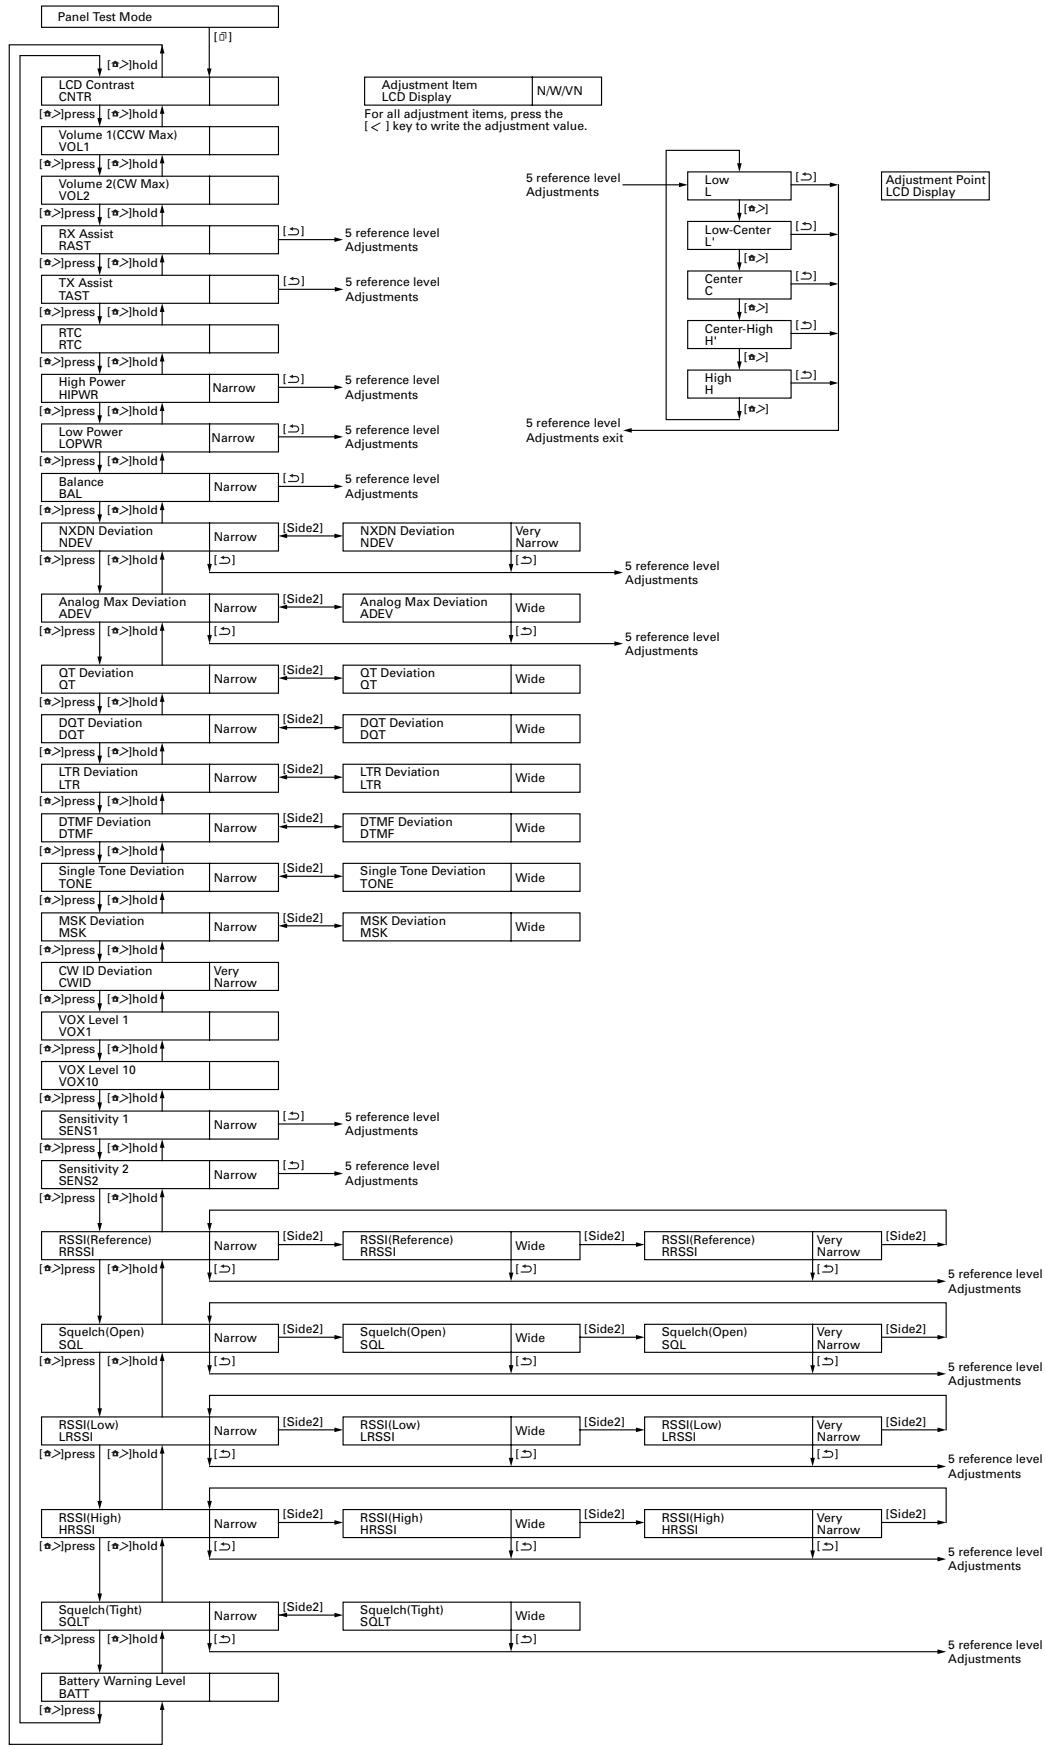

ADJUSTMENT

Test Equipment Required for Alignment

Test Equipment	Major Specifications	
1. Standard Signal Generator (SSG)	Frequency Range Modulation Output	136 to 174MHz Frequency modulation and external modulation -127dBm/0.1μV to greater than -20dBm/22.4mV
		* When performing the Frequency adjustment, the following accuracy is necessary. • 0.003ppm
		Use a standard oscillator for adjustments, if necessary.
2. Power Meter	Input Impedance Operation Frequency Measurement Range	50Ω 136 to 174MHz Vicinity of 10W
3. Deviation Meter	Frequency Range	136 to 174MHz
4. Digital Volt Meter (DVM)	Measuring Range Input Impedance	10mV to 10V DC High input impedance for minimum circuit loading
5. Oscilloscope		DC through 30MHz
6. High Sensitivity Frequency Counter	Frequency Range Frequency Stability	10Hz to 1000MHz 0.2ppm or less
7. Ammeter		5A
8. AF Volt Meter (AF VTVM)	Frequency Range Voltage Range	50Hz to 10kHz 1mV to 10V
9. Audio Generator (AG)	Frequency Range Output	50Hz to 5kHz or more 0 to 1V
10. Distortion Meter	Capability Input Level	3% or less at 1kHz 50mV to 10Vrms
11. 8Ω Dummy Load		Approx. 8Ω, 3W
12. Regulated Power Supply		5V to 10V, approx. 3A Useful if ammeter equipped

■ The following parts are required for adjustment

1. Antenna connector adapter


The antenna connector of this transceiver uses an SMA terminal.

Use an antenna connector adapter [SMA(f) – BNC(f) or SMA(f) – N(f)] for adjustment. (The adapter is not provided as an option, so buy a commercially-available one.)

2. Nut wrench


In order to turn the volume nut and the channel selector nut, use a recommendation tool.

KENWOOD part No. : W05-1123-00

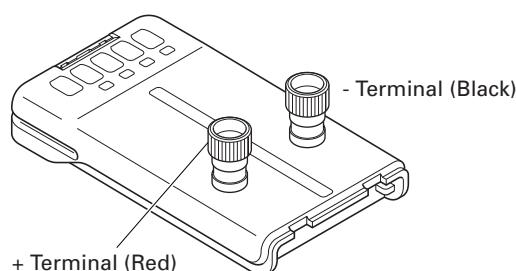3. Battery Jig (W05-1370-00)

Connect the power cable properly between the battery jig installed in the transceiver and the power supply, and be sure output voltage and the power supply polarity prior to switching the power supply ON, otherwise over voltage and reverse connection may damage the transceiver, or the power supply or both.

Note: When using the battery jig, you must measure the voltage at the terminals of the battery jig. Otherwise, a slight voltage drop may occur within the power cable, between the power supply and the battery jig, especially while the transceiver transmits.

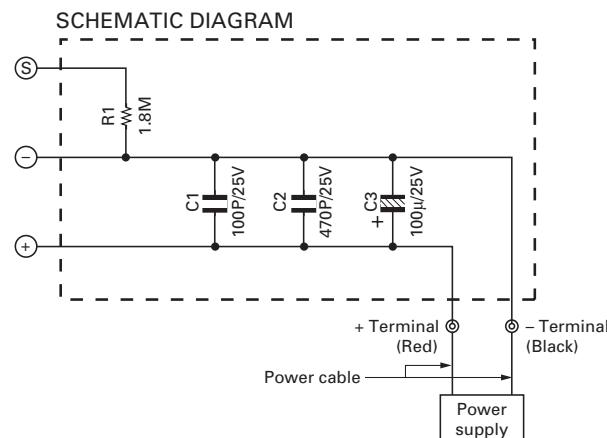

ADJUSTMENT


4. Universal connector

Use the interface cable (KPG-36/36A) for PC tuning or the lead wire with plug (E30-3287-18) and screw (N08-0535-08) for panel tuning. Connect the plug to the universal connector of the transceiver and tighten the screw.

The lead wire with plug (E30-3287-18) and screw (N08-0535-08) terminals are as follows. Numbers are universal connector terminal numbers.





Caution

- When connecting the plug to the universal connector of the transceiver, a short circuit may occur. To prevent this, be sure to turn the transceiver POWER switch off.
- Since the RX AF output is a BTL output, there is a DC component. Isolate this with a capacitor or transformer as shown in the figure.
- Do not connect an instrument between red or black and GND.

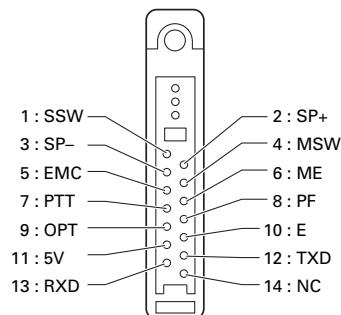• Universal connector**• PC tuning**

Connect the wires to the PCB in the connector case of interface cable.

For output the wires out of the connector case, need to process the connector case.

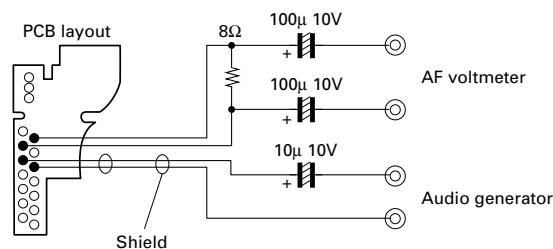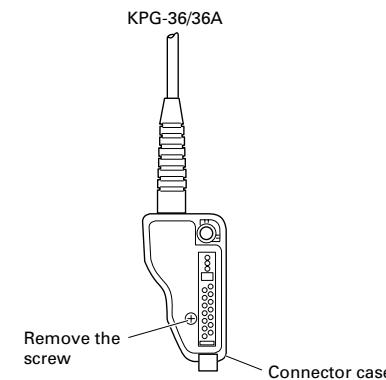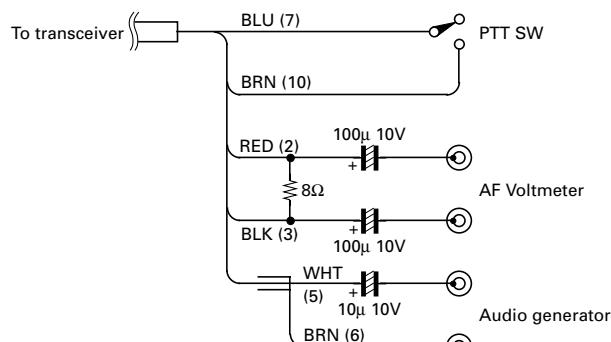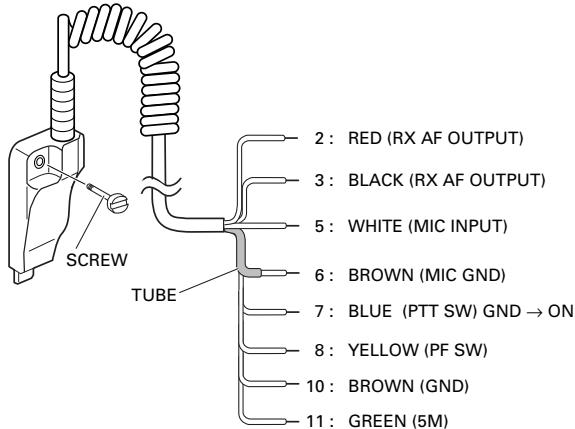**• Panel tuning**

ADJUSTMENT

Radio Check Section

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel test mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
1. Frequency check	1) CH-Sig : 1-1 PTT : ON	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.	f. counter	Panel	ANT			Check an internal temperature of radio within $25^{\circ}\text{C} \pm 2^{\circ}\text{C}$.	$\pm 0.5\text{ppm}$ $-77.55\text{Hz} \sim +77.55\text{Hz}$ $@155.1\text{MHz}$
2. High power check	1) CH-Sig : 1-1 PTT : ON	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.	Power meter Ammeter					Check	4.5W~5.5W 2.2A or less
	2) CH-Sig : 2-1 PTT : ON	2) Test Channel Channel : 2 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.							
	3) CH-Sig : 3-1 PTT : ON	3) Test Channel Channel : 3 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.							
3. Low power check	1) CH-Sig : 1-1 PTT : ON	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.						Check	0.7W~1.4W 1.4A or less
	2) CH-Sig : 2-1 PTT : ON	2) Test Channel Channel : 2 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.							
	3) CH-Sig : 3-1 PTT : ON	3) Test Channel Channel : 3 Test Signaling Mode : Analog Signaling : 1 PTT : Press [Transmit] button.							
4. MIC sensitivity check	1) CH-Sig : 1-1 AG : 1kHz PTT : ON	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 AG : 1kHz PTT : Press [Transmit] button.	Deviation meter Oscilloscope AG AF VTVM	Panel	ANT Universal connector			Adjust AG input to get a standard MOD.	12.5mV \pm 5.8mV Note: The SSW terminal (pin 1) of the universal connector must be connected to GND when checking MIC sensitivity.

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel test mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
5. Sensitivity check	1) CH-Sig : 1-1 SSG output Wide: -117dBm (0.32μV) (MOD : 1kHz/±3kHz) Narrow: -117dBm (0.32μV) (MOD : 1kHz/±1.5kHz)	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 SSG output Wide: -117dBm (0.32μV) (MOD : 1kHz/±3kHz) Narrow : -117dBm (0.32μV) (MOD : 1kHz/±1.5kHz)	SSG AF VTVM Oscilloscope	Panel	ANT Universal connector			Check	12dB SINAD or more

Common Section

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
1. Setting	1) BATT terminal voltage:7.5V 2) SSG standard modulation [Wide] MOD:1kHz,DEV:3kHz [Narrow] MOD:1kHz,DEV:1.5kHz								
2. LCD contrast	1) Adj item:[CNTR] Adjust:[***] Press [<>] key to store the adjustment value.	1) Adj item:[LCD Contrast] Press [Apply] button to store the adjustment value.				Panel	[Panel tuning mode] [<u> </u> , [<u> </u>] [PC test mode] [<u> </u> , [<u> </u>]	Adjust the LCD contrast by looking.	This item is needed when the LCD ASSY (B38-0923-05) is replaced.
3. Volume counter-clockwise	1) Adj item:[VOL1] Adjust:[***]	1) Adj item: [Counterclockwise Volume]					[Panel tuning mode] Turn the volume knob counterclockwise fully. Press [<>] key to store the adjustment value.	[PC test mode] Turn the volume knob counterclockwise fully. Press [Apply] button to store the adjustment value.	This item is needed when the variable resistor (R31-0666-05) is replaced.
4. Volume clockwise	1) Adj item:[VOL2] Adjust:[***]	1) Adj item: [Clockwise Volume]					[Panel tuning mode] Turn the volume knob clockwise fully. Press [<>] key to store the adjustment value.	[PC test mode] Turn the volume knob clockwise fully. Press [Apply] button to store the adjustment value.	

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
5. Assist voltage [RX]	1) Adj item:[RAST] Adjust:[****] 2) Adj item:[L RAST]→[L' RAST]→[C RAST]→[H' RAST]→[H RAST] Adjust:[****] Press [<>] key to store the adjustment value.	1) Adj item:[Receive Assist] 2) Adj item:[Low] [Low'] [Center] [High'] [High] Press [Apply All] button to store the adjustment value.				Panel	[Panel tuning mode] [<>], [<>] [PC test mode] [<<], [<>]	The sub LCD display and [V] indicator on the PC window shows VCO lock voltage. Change the adjustment value to get VCO lock voltage within the limit of the specified voltage. Note: Confirm the VCO lock voltage approximately 3 seconds after the adjustment value is changed.	2.5V±0.1V [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.
[TX]	1) Adj item:[TAST] Adjust:[****] 2) Adj item:[L TAST]→[L' TAST]→[C TAST]→[H' TAST]→[H TAST] Adjust:[****] PTT : ON (RF power is not output.) Press [<>] key to store the adjustment value.	1) Adj item:[Transmit Assist] 2) Adj item:[Low] [Low'] [Center] [High'] [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value.							
6. RTC oscillation frequency adjust	1) Adj item:[RTC] Adjust:[***]	1) Adj item:[RTC(Real-time clock)]				[Side1]	[Panel tuning mode] Press [Side1] key. After automatic adjustment adjusted value is displayed on LCD. Press [<>] key to store the adjustment value. [PC test mode] Press [Start] button of "Auto Tuning". Press [Apply] button to store the adjustment value after the automatic adjustment was finished.		
7. Frequency adjust	* The Frequency adjustment can be performed only in PC test mode.	1) Adj item: [Frequency] SSG output : -20dBm (22.4mV) (CW (without modulation)) Caution: Perform the frequency adjustment under the following conditions. • Temperature range of +23°C to +27°C (+73.4°F to +80.6°F). (The temperature is displayed on the Frequency adjustment screen of the KPG-111D and the LCD of the transceiver.) • Use an accuracy of 0.003ppm for the SSG. (Use a standard oscillator if necessary.)	SSG	Panel	ANT	[PC test mode] Press [Start] button of "Auto Tuning". Press [Apply] button to store the adjustment value after the automatic adjustment was finished.	[PC test mode] The value of "IF20" will become around "0" after the adjustment was finished.		

ADJUSTMENT

Transmitter Section

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
1. High power adjust	1) Adj item:[HIPWR] Adjust:[****] 2) Adj item: [L HIPWR]→ [L' HIPWR]→ [C HIPWR]→ [H' HIPWR]→ [H HIPWR] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item: [High Transmit Power] 2) Adj item:[Low] [Low'] [Center] [High'] [High] PTT : Press [Transmit] button. Press [Apply All] button to store the adjustment value.	Power meter Ammeter	Panel	ANT	Panel	[Panel tuning mode] [<>], [<>] [PC test mode] [<>], [<>]	5.0W	±0.2W 2.0A or less [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.
2. Low power adjust	1) Adj item:[LOPWR] Adjust:[****] 2) Adj item: [L LOPWR]→ [L' LOPWR]→ [C LOPWR]→ [H' LOPWR]→ [H LOPWR] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item: [Low Transmit Power] 2) Adj item:[Low] [Low'] [Center] [High'] [High] PTT : Press [Transmit] button. Press [Apply All] button to store the adjustment value.						0.8W	±0.1W 1.0A or less [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.
3. Balance adjust *2	1) Adj item:[BAL] Adjust:[***] Deviation meter LPF : 3kHz HPF : OFF 2) Adj item:[L BAL]→ [L' BAL]→[C BAL]→ [H' BAL]→[H BAL] Adjust:[***] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[Balance] Deviation meter LPF : 3kHz HPF : OFF 2) Adj item:[Low] [Low'] [Center] [High'] [High] PTT : Press [Transmit] button. Press [Apply All] button to store the adjustment value.	Deviation meter Oscilloscope					The sub LCD display shows the single tone frequency that DSP generates. The tone frequency is alternately switched to 20Hz and 2kHz by pressing [Side1] key on the front panel or checking [2000Hz Sine Wave] check box on the PC window while transmitting. Change the adjustment value to get same deviation at 20Hz and 2kHz within the limit of the specified voltage.	2kHz Tone deviation is within ±1.0% of 20Hz tone deviation. [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.

*2: Refer to the "Mode, Signaling, Necessary adjustment and order" table on page 46.

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
4. NXDN Deviation adjust *2 [Narrow]	1) Adj item:[Nn NDEV] Adjust:[****] Deviation meter LPF : 3kHz HPF : OFF 2) Adj item: [Nnl NDEV]→ [Nnl' NDEV]→ [Nnc NDEV]→ [Nnh' NDEV]→ [Nnh NDEV] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[Maximum Deviation(NXDN Narrow)] Deviation meter LPF : 3kHz HPF : OFF 2) Adj item:[Low] [Low'] [Center] [High'] [High] PTT : Press [Transmit] button. Press [Apply All] button to store the adjustment value.	Deviation meter Oscilloscope	Panel	ANT	Panel	[Panel tuning mode] [<>], [<>] [PC test mode] [◀, ▶]	3056Hz	2995~3117Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.
	1) Adj item:[Nv NDEV] Adjust:[****] 2) Adj item: [Nvl NDEV]→ [Nvl' NDEV]→ [Nvc NDEV]→ [Nvh' NDEV]→ [Nvh NDEV] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[Maximum Deviation(NXDN Very Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] PTT : Press [Transmit] button. Press [Apply All] button to store the adjustment value.					1337Hz		
5. Analog Deviation adjust *2 [Narrow]	1) Adj item:[An ADEV] Adjust:[****] 2) Adj item: [Anl ADEV]→ [Anl' ADEV]→ [Anc ADEV]→ [Anh' ADEV]→ [Anh ADEV] Adjust:[****] Press [<>] key to store the adjustment value.	1) Adj item:[Maximum Deviation(Analog Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] Press [Apply All] button to store the adjustment value.	Deviation meter LPF: 15kHz HPF: OFF [Panel tuning mode] PTT: ON [PC test mode] PTT: Press [Transmit] button				Write the same adjustment value of "NXDN Deviation [Narrow]" for each adjustment point. Transmit at each adjustment point and check that the Analog deviation is between 2050Hz and 2150Hz.	2050~2150Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.	
	1) Adj item:[Aw ADEV] Adjust:[****] 2) Adj item: [AwL ADEV]→ [AwL' ADEV]→ [AwC ADEV]→ [AwH' ADEV]→ [AwH ADEV] Adjust:[****] Press [<>] key to store the adjustment value.	1) Adj item:[Maximum Deviation(Analog Wide)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] Press [Apply All] button to store the adjustment value.						4150~4250Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted.	

*2: Refer to the "Mode, Signaling, Necessary adjustment and order" table on page 46.

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
6. OT Deviation adjust *2 [Narrow]	1) Adj item:[An OT] Adjust:[****] Deviation meter LPF : 3kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[OT Deviation (Analog Narrow)] Deviation meter LPF : 3kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.	Deviation meter Oscilloscope	Panel	ANT	Panel	[Panel tuning mode] [<], [>] [PC test mode] [<<], [>>]	Write the value as followings. 513 (Reference value)	0.35kHz±0.05kHz
	[Wide]	1) Adj item:[Aw QT] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[QT Deviation (Analog Wide)] PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.						0.75kHz±0.05kHz
7. DQT Deviation adjust *2 [Narrow]	1) Adj item:[An DQT] Adjust:[****] Deviation meter LPF : 3kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[DQT Deviation (Analog Narrow)] Deviation meter LPF : 3kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.						Write the value as followings. 415 (Reference value)	0.35kHz±0.05kHz
	[Wide]	1) Adj item:[Aw DQT] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[DQT Deviation (Analog Wide)] PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.						0.75kHz±0.05kHz
8. LTR Deviation adjust *2 [Narrow]	1) Adj item:[An LTR] Adjust:[****] Deviation meter LPF : 3kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[LTR Deviation (Analog Narrow)] Deviation meter LPF : 3kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.						Write the value as followings. 465 (Reference value)	0.75kHz±0.05kHz
	[Wide]	1) Adj item:[Aw LTR] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[LTR Deviation (Analog Wide)] PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.						1.00kHz±0.05kHz

*2: Refer to the "Mode, Signaling, Necessary adjustment and order" table on page 46.

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks	
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method		
9. DTMF Deviation adjust *2 [Narrow]	1) Adj item:[An DTMF] Adjust:[****] Deviation meter LPF : 15kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[DTMF Deviation (Analog Narrow)] Deviation meter LPF : 15kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.	Deviation meter Oscilloscope	Panel	ANT	Panel	[Panel tuning mode] [<>], [<>]	[PC test mode] [<>], [>>]	Write the value as followings. 540 (Reference value)	1.25kHz±0.05kHz
	1) Adj item:[Aw DTMF] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[DTMF Deviation (Analog Wide)] PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.					2.50kHz±0.05kHz			
10.TONE Deviation adjust *2 [Narrow]	1) Adj item:[An TONE] Adjust:[****] Deviation meter LPF : 15kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[Single Tone Deviation (Analog Narrow)] Deviation meter LPF : 15kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.							Write the value as followings. 513 (Reference value)	1.50kHz±0.05kHz
	1) Adj item:[Aw TONE] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[Single Tone Deviation (Analog Wide)] PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.							3.00kHz±0.05kHz	
11.MSK Deviation adjust *2 [Narrow]	1) Adj item:[An MSK] Adjust:[****] Deviation meter LPF : 15kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[MSK Deviation (Analog Narrow)] Deviation meter LPF : 15kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.							Write the value as followings. 513 (Reference value)	1.50kHz±0.05kHz
	1) Adj item:[Aw MSK] Adjust:[****] PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[MSK Deviation (Analog Wide)] PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.							3.00kHz±0.05kHz	
12.CWID Deviation adjust *2 [Very Narrow]	1) Adj item:[Nv CWID] Adjust:[****] Deviation meter LPF : 15kHz HPF : OFF PTT : ON Press [<>] key to store the adjustment value.	1) Adj item:[CW ID Deviation (NXDN Very Narrow)] Deviation meter LPF : 15kHz HPF : OFF PTT : Press [Transmit] button. Press [Apply] button to store the adjustment value.							Write the value as followings. 376 (Reference value)	1.00kHz±0.10kHz

*2: Refer to the "Mode, Signaling, Necessary adjustment and order" table on page 46.

ADJUSTMENT


Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
13.VOX 1 adjust	1) Adj item:[VOX1] Adjust:[***] AG : 1kHz/45mV at MIC terminal	1) Adj item:[VOX1] AG : 1kHz/45mV at MIC terminal	AG	Panel	Universal connector			<p>[Panel tuning mode] After apply signal from AG, press [<>] key to store the adjustment value.</p> <p>[PC test mode] After apply signal from AG, press [Apply] button to store the adjustment value.</p>	
14.VOX 10 adjust	1) Adj item:[VOX10] Adjust:[***] AG : 1kHz/3mV at MIC terminal	1) Adj item:[VOX10] AG : 1kHz/3mV at MIC terminal							
15.BATT detection writing	1) Adj item:[BATT] Adjust:[***] PTT : ON	1) Adj item:[Battery Warning Level] PTT : Press [Transmit] button.							
16.BATT detection check	[Panel test mode] 1) CH-Sig : 1-1 BATT terminal voltage : 6.0V PTT : ON	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 BATT terminal voltage : 6.0V PTT : Press [Transmit] button.							

■ Mode, Signaling, Necessary adjustment and order

Mode	Signaling	Necessary adjustment and order		
		Wide	Narrow	Very Narrow
Analog	Audio	1. Balance adjust 2. Analog Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow]	-
	QT	1. Balance adjust 2. Analog Deviation adjust [Wide] 3. QT Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow] 3. QT Deviation adjust [Narrow]	-
	DQT	1. Balance adjust 2. Analog Deviation adjust [Wide] 3. DQT Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow] 3. DQT Deviation adjust [Narrow]	-
	LTR	1. Balance adjust 2. Analog Deviation adjust [Wide] 3. LTR Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow] 3. LTR Deviation adjust [Narrow]	-
	DTMF	1. Balance adjust 2. Analog Deviation adjust [Wide] 3. DTMF Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow] 3. DTMF Deviation adjust [Narrow]	-
	2TONE	1. Balance adjust 2. Analog Deviation adjust [Wide] 3. TONE Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow] 3. TONE Deviation adjust [Narrow]	-
	MSK (FleetSync)	1. Balance adjust 2. Analog Deviation adjust [Wide] 3. MSK Deviation adjust [Wide]	1. Balance adjust 2. Analog Deviation adjust [Narrow] 3. MSK Deviation adjust [Narrow]	-
	NXDN	-	1. Balance adjust 2. NXDN Deviation adjust [Very Narrow]	1. Balance adjust 2. NXDN Deviation adjust [Very Narrow] 3. CWID Deviation adjust [Very Narrow]

ADJUSTMENT

Receiver Section

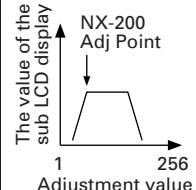Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
1. AF level setting	[Panel test mode] 1) CH-Sig : 1-1 SSG output : -47dBm (1mV) (MOD:1kHz/±1.5kHz)	1) Test Channel Channel : 1 Test Signaling Mode : Analog Signaling : 1 SSG output : -47dBm (1mV) (MOD:1kHz/±1.5kHz)	SSG DVM AF VTVM Dummy load	Panel	ANT Universal connector	Panel	Volume knob	Turn the Volume knob to obtain 0.63V AF output.	0.63V±0.1V
2. Sensitivity 1 adjust	1) Adj item:[SENS1] Adjust:[***] 2) Adj item: [L SENS1]→ [L' SENS1]→ [C SENS1]→ [H' SENS1]→ [H SENS1] Adjust:[***] Press [<>] key to store the adjustment value.	1) Adj item:[Sensitivity 1] 2) Adj item:[Low] [Low'] [Center] [High'] [High] Press [Apply All] button to store the adjustment value.				Panel	[Panel tuning mode] [<>], [<>] [PC test mode] [◀], [▶]	Write the value as followings. [L SENS1] / [Low] : 1 [L' SENS1] / [Low'] : 20 [C SENS1] / [Center] : 40 [H' SENS1] / [High'] : 50 [H SENS1] / [High] : 55	
3. Sensitivity 2 adjust	1) Adj item:[SENS2] Adjust:[***] 2) Adj item: [L SENS2]→ [L' SENS2]→ [C SENS2]→ [H' SENS2]→ [H SENS2] Adjust:[***] SSG output : -90dBm (7.08μV) (MOD:1kHz/±1.5kHz) Press [<>] key to store the adjustment value.	1) Adj item:[Sensitivity 2] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -90dBm (7.08μV) (MOD:1kHz/±1.5kHz) Press [Apply All] button to store the adjustment value.	SSG AF VTVM Oscilloscope	Panel	ANT Universal connector			The sub LCD display shows the RSSI value. Change the adjustment value to get maximum RSSI value. (Refer to below) 	

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
4. RSSI reference adjust *3 [Analog Narrow]	1) Adj item:[An RRSSI] Adjust:[***] 2) Adj item: [AnL RRSSI]→ [AnL' RRSSI]→ [AnC RRSSI]→ [AnH' RRSSI]→ [AnH RRSSI] Adjust:[***] SSG output : 12dB SINAD level -3dB (MOD:1kHz±1.5kHz)	1) Adj item:[RSSI Reference(Analog Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level -3dB (MOD:1kHz±1.5kHz)	SSG AF VTVM Oscilloscope	Panel	ANT Universal connector			[Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value.	
[Analog Wide]	1) Adj item:[Aw RRSSI] Adjust:[***] 2) Adj item: [AwL RRSSI]→ [AwL' RRSSI]→ [AwC RRSSI]→ [AwH' RRSSI]→ [AwH RRSSI] Adjust:[***] SSG output : 12dB SINAD level -3dB (MOD:1kHz±3kHz)	1) Adj item:[RSSI Reference(Analog Wide)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level -3dB (MOD:1kHz±3kHz)							
[NXDN Very Narrow]	1) Adj item:[Nv RRSSI] Adjust:[***] 2) Adj item: [NvL RRSSI]→ [NvL' RRSSI]→ [NvC RRSSI]→ [NvH' RRSSI]→ [NvH RRSSI] Adjust:[***] SSG output : 12dB SINAD level for Analog Narrow -3dB (MOD:1kHz±1.5kHz)	1) Adj item:[RSSI Reference (NXDN Very Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level for Analog Narrow -3dB (MOD:1kHz±1.5kHz)							

*3: The "RSSI reference adjust" of NXDN Narrow is common with the "RSSI reference adjust [Analog Narrow]".

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
5. Squelch (Open) adjust *4 [Analog Narrow]	1) Adj item:[An SQL] Adjust:[***] 2) Adj item: [AnL SQL]→ [AnL' SQL]→ [AnC SQL]→ [AnH' SQL]→ [AnH SQL] Adjust:[***] SSG output : 12dB SINAD level +1dB (MOD:1kHz/±1.5kHz)	1) Adj item:[Open Squelch (Analog Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level +1dB (MOD:1kHz/±1.5kHz)	SSG AF VTVM Oscilloscope	Panel	ANT Universal connector			[Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value.	
[Analog Wide]	1) Adj item:[Aw SQL] Adjust:[***] 2) Adj item: [AwL SQL]→ [AwL' SQL]→ [AwC SQL]→ [AwH' SQL]→ [AwH SQL] Adjust:[***] SSG output : 12dB SINAD level +1dB (MOD:1kHz/±3kHz)	1) Adj item:[Open Squelch (Analog Wide)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level +1dB (MOD:1kHz /±3kHz)							
[NXDN Very Narrow]	1) Adj item:[Nv SQL] Adjust:[***] 2) Adj item: [NvL SQL]→ [NvL' SQL]→ [NvC SQL]→ [NvH' SQL]→ [NvH SQL] Adjust:[***] SSG output : 12dB SINAD level for Analog Narrow -4dB (MOD:400Hz/±1.1kHz)	1) Adj item:[Open Squelch (NXDN Very Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level for Analog Narrow -4dB (MOD:400Hz/±1.1kHz)							

*4: The "Squelch (Open) adjust" of NXDN Narrow is common with the "Squelch (Open) adjust [Analog Narrow]".

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
6. RSSI at -118dBm adjust *5 [Analog Narrow]	1) Adj item:[An LRSSI] Adjust:[***] 2) Adj item: [AnL LRSSI]→ [AnL' LRSSI]→ [AnC LRSSI]→ [AnH LRSSI]→ [AnH' LRSSI] Adjust:[***] SSG output : -118dBm (0.28μV) (MOD:1kHz±1.5kHz)	1) Adj item:[Low RSSI] (Analog Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -118dBm (0.28μV) (MOD:1kHz/±1.5kHz)	SSG AF VTM Oscilloscope	Panel	ANT Universal connector			[Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value.	
[Analog Wide]	1) Adj item:[Aw LRSSI] Adjust:[***] 2) Adj item: [AwL LRSSI]→ [AwL' LRSSI]→ [AwC LRSSI]→ [AwH' LRSSI]→ [AwH LRSSI] Adjust:[***] SSG output : -118dBm (0.28μV) (MOD:1kHz/±3kHz)	1) Adj item:[Low RSSI] (Analog Wide)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -118dBm (0.28μV) (MOD:1kHz/±3kHz)							
[NXDN Very Narrow]	1) Adj item:[Nv LRSSI] Adjust:[***] 2) Adj item: [NvL LRSSI]→ [NvL' LRSSI]→ [NvC LRSSI]→ [NvH' LRSSI]→ [NvH LRSSI] Adjust:[***] SSG output : -118dBm (0.28μV) (MOD:1kHz/±1.5kHz)	1) Adj item:[Low RSSI] (NXDN Very Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -118dBm (0.28μV) (MOD:1kHz/±1.5kHz)							

*5: The "RSSI at -118dBm adjust" of NXDN Narrow is common with the "RSSI at -118dBm adjust [Analog Narrow]".

ADJUSTMENT

Item	Condition		Measurement			Adjustment			Specifications/ Remarks
	Panel tuning mode	PC test mode	Test-equipment	Unit	Terminal	Unit	Parts	Method	
7. RSSI at -80dBm adjust *6	1) Adj item:[An HRSSI] Adjust:[***] 2) Adj item: [AnL HRSSI]→ [AnL' HRSSI]→ [AnC HRSSI]→ [AnH' HRSSI]→ [AnH HRSSI] Adjust:[***] SSG output : -80dBm (22.4μV) (MOD:1kHz/±1.5kHz)	1) Adj item:[High RSSI (Analog Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -80dBm (22.4μV) (MOD:1kHz/±1.5kHz)	SSG AF VTVM Oscilloscope	Panel	ANT Universal connector			[Panel tuning mode] After input signal from SSG, press [<>] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value.	
[Analog Wide]	1) Adj item:[Aw HRSSI] Adjust:[***] 2) Adj item: [AwL HRSSI]→ [AwL' HRSSI]→ [AwC HRSSI]→ [AwH' HRSSI]→ [AwH HRSSI] Adjust:[***] SSG output : -80dBm (22.4μV) (MOD:1kHz/±3kHz)	1) Adj item:[High RSSI (Analog Wide)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -80dBm (22.4μV) (MOD:1kHz/±3kHz)							
[NXDN Very Narrow]	1) Adj item:[Nv HRSSI] Adjust:[***] 2) Adj item: [NvL HRSSI]→ [NvL' HRSSI]→ [NvC HRSSI]→ [NvH' HRSSI]→ [NvH HRSSI] Adjust:[***] SSG output : -80dBm (22.4μV) (MOD:1kHz/±1.5kHz)	1) Adj item:[High RSSI (NXDN Very Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : -80dBm (22.4μV) (MOD:1kHz/±1.5kHz)							
8. Squelch (Tight) adjust	1) Adj item:[An SQLT] Adjust:[***] 2) Adj item: [AnL SQLT]→ [AnL' SQLT]→ [AnC SQLT]→ [AnH' SQLT]→ [AnH SQLT] Adjust:[***] SSG output : 12dB SINAD level +6dB (MOD:1kHz/±1.5kHz)	1) Adj item:[Tight Squelch (Analog Narrow)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level +6dB (MOD:1kHz/±1.5kHz)							
[Analog Wide]	1) Adj item:[Aw SQLT] Adjust:[***] 2) Adj item: [AwL SQLT]→ [AwL' SQLT]→ [AwC SQLT]→ [AwH' SQLT]→ [AwH SQLT] Adjust:[***] SSG output : 12dB SINAD level +6dB (MOD:1kHz/±3kHz)	1) Adj item:[Tight Squelch (Analog Wide)] 2) Adj item:[Low] [Low'] [Center] [High'] [High] SSG output : 12dB SINAD level +6dB (MOD:1kHz /±3kHz)							

*6: The "RSSI at -80dBm adjust" of NXDN Narrow is common with the "RSSI at -80dBm adjust [Analog Narrow]".

TERMINAL FUNCTION

Control unit (X53-4260-XX)

Pin No.	Name	I/O	Function
CN1			
1	/CS	O	Chip select output
2	/RES	O	LCD reset output
3	AO	O	Address bus 0 output
4	/WR	O	WR bus output
5	D0	I/O	Data bus 0
6	D1	I/O	Data bus 1
7	D2	I/O	Data bus 2
8	D3	I/O	Data bus 3
9	D4	I/O	Data bus 4
10	D5	I/O	Data bus 5
11	D6	I/O	Data bus 6
12	D7	I/O	Data bus 7
13	VDD	O	3.3V LCD power supply output
14	VSS	-	GND
15	VDD	O	3.3V LCD power supply output
16	V1	-	LCD drive power supply
17	V2	-	LCD drive power supply
18	V3	-	LCD drive power supply
19	V4	-	LCD drive power supply
20	V5	O	LCD drive power supply
CN23			
1	ME	-	Internal MIC GND
2	EMC	I	Internal MIC input
3	SP+	O	BTL output + for internal speaker
4	SP+	O	BTL output + for internal speaker
5	SP-	O	BTL output - for internal speaker
6	SP-	O	BTL output - for internal speaker
7	6./KEYI1	I	Key matrix input (KEYI1 for 6-key)
8	6./KEYO2	O	Key matrix output (KEYO2 for 6-key)
9	BL_SB	O	LCD backlight voltage output
10	6./KEYO0	O	Key matrix output (KEYO0 for 6-key)
11	6./KEYO1	O	Key matrix output (KEYO1 for 6-key)
12	BL_SB	O	LCD backlight voltage output
13	6./KEYI0	I	Key matrix input (KEYI0 for 6-key)
14	AGND	-	GND
CN403			
1	33A	O	3.3V for volume level
2	VOL_GND	-	GND for volume level
3	VOL	I	Volume level input for audio control
4	EN3	I	Encoder pulse input
5	AGND	-	GND
6	EN4	I	Encoder pulse input
7	EN1	I	Encoder pulse input
8	EN2	I	Encoder pulse input

Pin No.	Name	I/O	Function
9	+B	O	Power output after passing through the fuse
10	SB1	I	Power input after power switch
CN404			
1	LED_G	O	Green LED control output
2	/EMG	O	Key matrix output (Emergency (Orange) key)
3	LED_R	O	Red LED control output
4	IFC	O	50IF switch control output
5	/SAVE	O	50C Reg. control output
6	I2CCK	O	TCXO thermometer clock output
7	/5TC	O	50T Reg./switch control output
8	I2CSDA	I	TCXO thermometer data input
9	SBC	O	SB3 switch control output
10	/T_R	O	TX/RX control output
11	TV2	O	RX tuning voltage 2 control output
12	ASSIST	O	VCO tuning voltage control output
13	TV1	O	RX tuning voltage 1 control output
14	VAGC	I	AGC voltage input
15	5RC	O	50R switch control output
16	TCXO_MOD	O	TCXO modulation output
17	PGND	-	GND
18	RSSI	I	RSSI voltage input
19	PGND	-	GND
20	CV	I	CV voltage input
21	AGND	-	GND
22	NC	-	No connection
23	NC	-	No connection
24	+B	I	Power input after passing through the fuse
25	+B	I	Power input after passing through the fuse
26	+B	I	Power input after passing through the fuse
27	+B	I	Power input after passing through the fuse
28	NC	-	No connection
29	NC	-	No connection
30	AGND	-	GND
31	PTT	I	PTT input
32	Side_G	O	Key matrix output (SIDE1,2 key)
33	Side_1	I	Key matrix input (SIDE1 key)
34	W/N	O	W/N control output
35	SDO1	O	PLL serial data output
36	Side_2	I	Key matrix input (SIDE2 key)
37	/PCS_RF	O	PLL enable output
38	/DSW	O	APC voltage discharge switch control output
39	APC	O	APC control output
40	/APCSW	O	APC switch control output
41	VCO_MOD	O	VCO modulation output
42	THP	I	Thermistor voltage input
43	PLD	I	PLL lock detect input

TERMINAL FUNCTION

Pin No.	Name	I/O	Function
44	RFAGC	O	RF AGC control output
45	SCK1	O	PLL clock output
46	GND	-	GND
47	S_DET	I	Battery select input
48	GND	-	GND
49	NC	-	No connection
50	IF_DET	I	IF input

CN405

1	SSW	I	EXT/INT speaker switch input
2	SP+	O	BTL output + for external speaker
3	SP-	O	BTL output - for external speaker
4	MSW	I	EXT/INT MIC switch input
5	EMC	I	External MIC input
6	ME	-	External MIC GND
7	PTT	I	External PTT input
8	PF	I	Programmable function key input
9	OPT	I/O	Option interface I/O
10	E	-	GND
11	5V	O	5V output
12	TXD	O	Serial data output
13	RXD	I	Serial data input
14	NC	-	No connection

CN701 (for production)

1~20

CN710

1	OPT1	I/O	Refer to "CN710 26-pin connector specification" described on pages 56 to 59.
2	OPT3	I/O	
3	26P_RD	I	
4	26P_TD	O	
5	NC	-	
6	OPT4	O	
7	OPT10	O	
8	OPT5	O	
9	AGND	-	
10	AGND	-	
11	AI	I	
12	AO	O	
13	AGND	-	
14	5V	O	
15	OPT9	I	
16	DTI	I	
17	OPT8	I/O	
18	OPT11	O	
19	OPT7	I/O	
20	OPT2	I/O	
21	TXO	O	

Pin No.	Name	I/O	Function
22	RXEO	O	
23	RXEI	I	
24	TXI	I	
25	OPT6	O	
26	POW	O	

TX-RX unit (X57-7360-10 A/2)

Pin No.	Name	I/O	Function
CN400			
1	LED_G	I	Green LED control input
2	/EMG	I	Key matrix input (Emergency (Orange) key)
3	LED_R	I	Red LED control input
4	IFC	I	50IF switch control input
5	/SAVE	I	50C Reg. control input
6	I2CCK	I	TCXO thermometer clock input
7	/5TC	I	50T Reg./switch control input
8	I2CSDA	O	TCXO thermometer data output
9	SBC	I	SB3 switch control input
10	/T_R	I	TX/RX control input
11	TV2	I	RX tuning voltage 2 control input
12	ASSIST	I	VCO tuning voltage control input
13	TV1	I	RX tuning voltage 1 control input
14	VAGC	O	AGC voltage output
15	5RC	I	50R switch control input
16	TCXO_MOD	I	TCXO modulation input
17	GND	-	GND
18	RSSI	O	RSSI voltage output
19	GND	-	GND
20	CV	O	CV voltage output
21	GND	-	GND
22	NC	-	No connection
23	NC	-	No connection
24	+B	O	Power output after passing through the fuse
25	+B	O	Power output after passing through the fuse
26	+B	O	Power output after passing through the fuse
27	+B	O	Power output after passing through the fuse
28	NC	-	No connection
29	NC	-	No connection
30	GND	-	GND
31	PTT	O	PTT output
32	Side_G	I	Key matrix input (SIDE1,2 key)
33	Side_1	O	Key matrix output (SIDE1 key)
34	W/N	I	No connection (Test pad)
35	SDO1	I	PLL serial data input
36	Side_2	O	Key matrix output (SIDE2 key)
37	/PCS_RF	I	PLL enable input

TERMINAL FUNCTION

Pin No.	Name	I/O	Function
38	/DSW	I	APC voltage discharge switch control input
39	APC	I	APC control input
40	/APCSW	I	APC switch control input
41	VCO_MOD	I	VCO modulation input
42	THP	O	Thermistor voltage output
43	PLD	O	PLL lock detect output
44	RFAGC	I	RF AGC control input
45	SCK1	I	PLL clock input
46	GND	-	GND
47	S_DET	O	Battery select output
48	GND	-	GND
49	NC	-	No connection
50	IF_DET	O	IF output
CN401			
1	PTT	I	Internal PTT input
2	GND	-	GND
3	Side_G	O	Key matrix output (SIDE1,2 key)
4	Side_1	I	Key matrix input (SIDE1 key)
5	Side_2	I	Key matrix input (SIDE2 key)

Solder Pad

Name	I/O	Signal Type	Function	Rating and Condition				
				Parameter	Min	Typ	Max	Unit
PTT2	O	Digital	PTT output	[Output] Output Impedance			10k	Ω
PTT1	I	Digital	PTT input	[Input] VIH VIL	2.8 0		3.3 0.5	V V
MDSW	I	Digital	Man down switch input	[Input] VIH VIL	2.8 0		3.3 0.5	V V
GND	-	GND	GND	Allowable current value				mA
TXD	O	Digital	Serial data output	VOH($Io=-5mA$) VOL($Io=5mA$) Baud Rate	4.0 0	-	5.3 0.8 19200	V V bps
RXD	I	Digital	Serial data input	VIH VIL Baud Rate	2.8 0	-	5.3 0.8 19200	V V bps
RSSI	O	Analog	RSSI output	Output Impedance			10k	Ω

Option board unit (X57-7360-10 B/2)

Pin No.	Name	I/O	Function
CN736			
1	OPT1	I/O	
2	OPT3	I/O	
3	26P_RD	I	
4	26P_TD	O	
5	NC	-	
6	OPT4	O	
7	OPT10	O	
8	OPT5	O	
9	DGND	-	
10	AGND	-	
11	NC	-	
12	NC	-	
13	AGND	-	
14	5V	O	
15	OPT9	I	
16	DTI	I	
17	OPT8	I/O	
18	OPT11	O	
19	OPT7	I/O	
20	OPT2	I/O	
21	TXO	O	
22	RXEO	O	
23	RXEI	I	
24	TXI	I	
25	OPT6	O	
26	POW	O	

Refer to "CN736 Option board connector specification" described on pages 60 to 63.

TERMINAL FUNCTION

Universal connector

Pin No.	Name	I/O	Signal Type	Function	Rating and Condition				
					Parameter	Min	Typ	Max	Unit
1	SSW	I	Digital	EXT/INT speaker switch input. L: External speaker ON H: Internal speaker ON	VIH VIL	2.8 0	- -	5.3 0.7	V V
2	SP+	O	Analog	BTL output + for external speaker.	[8Ω load] Max output power (1kHz, Batt=7.5V) DC Bias Allowable Frequency	300	1.3 2.5	1.8 3000	W V Hz
3	SP-	O	Analog	BTL output + for external speaker.	[16Ω load] Max output power (1kHz, Batt=7.5V) DC Bias Allowable Frequency	300	0.9 2.5	1.4 3000	W V Hz
4	MSW	I	Digital	EXT/INT MIC switch input. L: External MIC ON H: Internal MIC ON	VIH VIL	2.8 0	- -	5.3 0.5	V V
5	EMC	I	Analog	External MIC input.	Audio Level (STD deviation) DC Bias Allowable Frequency Input impedance	7.7 300 -	12.5 3.3 1.8	17.3 3000 -	mV V Hz kΩ
6	ME	-	-	External MIC GND					
7	PTT	I	Digital	External PTT input. L: PTT ON	VIH VIL	2.8 0	- -	5.3 0.7	V V
8	PF	I	Analog	Programmable function key input.	V (PF2 key ON) V (PF1 key ON) V (PF1, PF2 key ON)	2.2 1.7 1.3	- - -	2.8 2.2 1.7	V V V
9	OPT	I	Digital	Man down input Programmable active H/L	VIH VIL	2.8 0	- -	5.3 0.7	V V
10	E	-	-	GND					
11	5V	-	Power	5V power supply output (Output control is FPU programmable)	Output Voltage (Iout = 100mA) Maximum Current	4.9 -	5.0 -	5.1 0.2	V A
12	TXD	O	Digital	Serial data output.	VOH (Io=-5mA) VOL (Io=5mA) Baud Rate	4.0 0	- -	5.3 0.8 19200	V V bps
13	RXD	I	Digital	Serial data input.	VIH VIL Baud Rate	2.8 0	- -	5.3 0.8 115200	V V bps
14	NC	-	-	Not used (reserved for future option)					

TERMINAL FUNCTION

CN710 26-pin connector specification

Pin No.	Name	I/O	Signal Type	Rating and Condition				
				Parameter	Min	Typ	Max	Unit
1 6 8 17 18	OPT1 OPT4 OPT5 OPT8 OPT11	I/O	Digital	[Input]				
				VIH	2.8		3.3	V
				VIL	0		0.5	V
				[Output]				
				VOH	2.8		3.5	V
				VOL	0		0.5	V
2 19 20 25	OPT3 OPT7 OPT2 OPT6	I/O	Digital	[Input]				
				VIH	2.8		3.3	V
				VIL	0		0.5	V
				[Output]				
				VOH	2.8		3.5	V
				VOL	0		0.5	V
3	26P_RD	I	Digital	[Input]				
				VIH	2.8		3.3	V
				VIL	0		0.5	V
				Baud rate			19200	bps
4	26P_TD	O	Digital	[Output]				
				VOH	2.8		3.5	V
				VOL	0		0.5	V
				Baud rate			19200	bps
15	OPT9	I	Analog	Input Amplitude (Square wave)	-	3.3	-	Vp-p
				Coupling Capacitor	-	0.01	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz
7	OPT10	O	Analog/Digital	Output Amplitude (1kHz, 60% deviation)	0.9	1.3	1.7	Vp-p
				Coupling Capacitor		0.1		uF
				Output Impedance			22k	Ω
				Allowable Frequency	300		3000	Hz
11	AI	I	Analog	Input Amplitude (1kHz, 60% deviation)	0.3	0.5	0.7	Vp-p
				Coupling Capacitor	-	0.1	-	uF
				Input Impedance	-	12k	-	Ω
				Allowable Frequency	300		3000	Hz
12	AO	O	Analog	Output Amplitude (1kHz, 60% deviation)	30	50	70	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Output Impedance	-	35k	-	Ω
				Allowable Frequency	300		3000	Hz
16	DTI	I	Analog	Input Amplitude (1kHz, 60% deviation)	0.8	1.1	1.4	Vp-p
				Coupling Capacitor	-	0.1	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz

TERMINAL FUNCTION

Pin No.	Name	I/O	Signal Type	Rating and Condition				
				Parameter	Min	Typ	Max	Unit
21	TXO	O	Analog	Output Amplitude (1kHz, 60% deviation) while external MIC	160	260	360	mVp-p
				while internal MIC	-	130	-	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Output Impedance	-	-	2.2k	Ω
				Allowable Frequency	300		3000	Hz
22	RXEO	O	Analog	Output Amplitude (1kHz, 60% deviation)	450	640	830	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Output Impedance	-	-	2.2k	Ω
				Allowable Frequency	300	-	3000	Hz
23	RXEI	I	Analog	Input Amplitude (1kHz, 60% deviation)	450	640	830	mVp-p
				Coupling Capacitor		0.1		uF
				Input Impedance	22k			Ω
				Allowable Frequency	300		3000	Hz
24	TXI	I	Analog	Input Amplitude (1kHz, 60% deviation) while external MIC	160	260	360	mVp-p
				while internal MIC	-	130	-	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz
14	5V	O	Power	Output Voltage Output Current		5	78	V mA
26	POW	O	Power	Output Voltage Output Current		7.5	100	V mA
9 10 13	AGND	-	GND	Allowable current value (Total current of 3 pins)			100	mA
5	NC	-	-	-				

TERMINAL FUNCTION

CN710 26-pin connector specification

Pin No.	Name	Device	I/O	Conection	Function
1	OPT1	ANI board	O	Aux Input	[COR] Conv/LTR L: Not activity receiving H: Activity receiving [TOR] Conv/LTR L: Not activity receiving H: Activity receiving (Sub Tone or LTR ID is OK) [LOK] Conv L: TX Complete H: Not TX Complete LTR L: TX Link Complete (until TX finishes) H: Not TX Link Complete
					VGS-1 I BUSY BUSY indication
2	OPT3	ANI board	I	KEY	TX requirement input
		VGS-1	I	PLAY	PLAY indication
3	26P_RD	ANI board	-	-	-
		VGS-1	I	SO	Serial data input
4	26P_TD	ANI board	-	-	-
		VGS-1	O	SI	Serial data output
5	NC	-	-	-	-
6	OPT4	ANI board	O	PTT	PTT signal output
		VGS-1	O	EN	Enable
7	OPT10	ANI board	-	-	-
		VGS-1	O	USEL	UART speed select output
8	OPT5	ANI board	O	Emergency	Emergency signal output
		VGS-1	O	RST	Reset output
9	AGND	ANI board	-	A-	GND
		VGS-1	-	AGND	AGND
10	AGND	ANI board	-	A-	GND
		VGS-1	-	AGND	AGND
11	AI	ANI board	-	-	-
		VGS-1	I	AO	VGS Audio input
12	AO	ANI board	-	-	-
		VGS-1	O	AI	VGS Audio output
13	AGND	ANI board	-	A-	GND
		VGS-1	-	AGND	AGND
14	5V	ANI board	-	-	Note: POW and 5V can not be used simultaneously.
		VGS-1	O	5C	5V power supply
15	OPT9	ANI board	I	Sidetone	Sidetone input
		VGS-1	-	-	-

TERMINAL FUNCTION

Pin No.	Name	Device	I/O	Conection	Function
16	DTI	ANI board	I	Data Out	Data signal input
		VGS-1	-	-	-
17	OPT8	ANI board	I	Tone Control	Speaker mute signal input
		VGS-1	-	-	-
18	OPT11	ANI board	O	Man-Down	Man-Down output
		VGS-1	-	-	-
19	OPT7	ANI board	I	MIC Mute	MIC mute signal input
		VGS-1	-	-	-
20	OPT2	ANI board	I	Aux Output	Emergency signal input
		VGS-1	-	-	-
21	TXO	ANI board	-	-	-
		VGS-1	-	-	-
22	RXEO	ANI board	-	-	-
		VGS-1	-	-	-
23	RXEI	ANI board	-	-	-
		VGS-1	-	-	-
24	TXI	ANI board	-	-	-
		VGS-1	-	-	-
25	OPT6	ANI board	-	-	-
		VGS-1	-	-	-
26	POW	ANI board	O	A+	Switched B output
		VGS-1	-	-	Note: POW and 5V can not be used simultaneously.

TERMINAL FUNCTION

CN736 Option board connector specification

Pin No.	Name	I/O	Signal Type	Rating and Condition				
				Parameter	Min	Typ	Max	Unit
1 6 8 17 18	OPT1 OPT4 OPT5 OPT8 OPT11	I/O	Digital	[Input] VIH	2.8		3.3	V
				VIL	0		0.5	V
				[Output] VOH	2.8		3.5	V
				VOL	0		0.5	V
				[Input] VIH	2.8		3.3	V
				VIL	0		0.5	V
2 19 20 25	OPT3 OPT7 OPT2 OPT6	I/O	Digital	[Output] VOH	2.8		3.5	V
				VOL	0		0.5	V
				[Input] VIH	2.8		3.3	V
				VIL	0		0.5	V
				Baud rate			19200	bps
				[Output] VOH	2.8		3.5	V
3	26P_RD	I	Digital	VOL	0		0.5	V
				Baud rate			19200	bps
				[Output] VOH	2.8		3.5	V
				VOL	0		0.5	V
				Baud rate			19200	bps
15	OPT9	I	Analog	Input Amplitude (Square wave)	-	3.3	-	Vp-p
				Coupling Capacitor	-	0.01	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz
7	OPT10	O	Analog/Digital	Output Amplitude (1kHz, 60% deviation)	0.9	1.3	1.7	Vp-p
				Coupling Capacitor		0.1		uF
				Output Impedance			22k	Ω
				Allowable Frequency	300		3000	Hz
11	NC	-	-	-				
12	NC	-	-	-				
16	DTI	I	Analog	Input Amplitude (1kHz, 60% deviation)	0.8	1.1	1.4	Vp-p
				Coupling Capacitor	-	0.1	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz
21	TXO	O	Analog	Output Amplitude (1kHz, 60% deviation) while external MIC	160	260	360	mVp-p
				while internal MIC	-	130	-	mVp-p
				Coupling Capacitor	-	0.1	-	VuF
				Output Impedance	-	-	2.2k	Ω
				Allowable Frequency	300		3000	Hz

TERMINAL FUNCTION

Pin No.	Name	I/O	Signal Type	Rating and Condition				
				Parameter	Min	Typ	Max	Unit
22	RXEO	O	Analog	Output Amplitude (1kHz, 60% deviation)	450	640	830	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Output Impedance	-	-	2.2k	Ω
				Allowable Frequency	300	-	3000	Hz
23	RXEI	I	Analog	Input Amplitude (1kHz, 60% deviation)	450	640	830	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz
24	TXI	I	Analog	Input Amplitude (1kHz, 60% deviation) while external MIC	160	260	360	mVp-p
				while internal MIC	-	130	-	mVp-p
				Coupling Capacitor	-	0.1	-	uF
				Input Impedance	22k	-	-	Ω
				Allowable Frequency	300	-	3000	Hz
14	5V	O	Power	Output Voltage Output Current	-	5	78	V mA
26	POW	O	Power	Output Voltage Output Current	-	7.5	100	V mA
9	DGND	-	GND	Allowable current value (Total current of 3 pins)	-	100	mA	mA
10 13	AGND	-	GND					
5	NC	-	-	-	-	-	-	-

TERMINAL FUNCTION

CN736 Option board connector specification


Pin No.	Name	Device	I/O	Connection	Function
1	OPT1	ANI board	O	Aux Input	[COR] Conv/LTR L: Not activity receiving H: Activity receiving [TOR] Conv/LTR L: Not activity receiving H: Activity receiving (Sub Tone or LTR ID is OK) [LOK] Conv L: TX Complete H: Not TX Complete LTR L: TX Link Complete (until TX finishes) H: Not TX Link Complete
					VGS-1 I BUSY BUSY indication
2	OPT3	ANI board	I	KEY	TX requirement input
		VGS-1	I	PLAY	PLAY indication
3	26P_RD	ANI board	-	-	-
		VGS-1	I	SO	Serial data input
4	26P_TD	ANI board	-	-	-
		VGS-1	O	SI	Serial data output
5	NC	-	-	-	-
6	OPT4	ANI board	O	PTT	PTT signal output
		VGS-1	O	EN	Enable
7	OPT10	ANI board	-	-	-
		VGS-1	O	USEL	UART speed select output
8	OPT5	ANI board	O	Emergency	Emergency signal output
		VGS-1	O	RST	Reset output
9	DGND	ANI board	-	A-	GND
		VGS-1	-	DGND	DGND
10	AGND	ANI board	-	A-	GND
		VGS-1	-	AGND	AGND
11	NC	-	-	-	-
12	NC	-	-	-	-
13	AGND	ANI board	-	A-	GND
		VGS-1	-	AGND	AGND
14	5V	ANI board	-	-	Note: POW and 5V can not be used simultaneously.
		VGS-1	O	5C	5V power supply
15	OPT9	ANI board	I	Sidetone	Sidetone input
		VGS-1	-	-	-

TERMINAL FUNCTION

Pin No.	Name	Device	I/O	Conection	Function
16	DTI	ANI board	I	Data Out	Data signal input
		VGS-1	-	-	-
17	OPT8	ANI board	I	Tone Control	Speaker mute signal input
		VGS-1	-	-	-
18	OPT11	ANI board	O	Man-Down	Man-Down output
		VGS-1	-	-	-
19	OPT7	ANI board	I	MIC Mute	MIC mute signal input
		VGS-1	-	-	-
20	OPT2	ANI board	I	Aux Output	Emergency signal input
		VGS-1	-	-	-
21	TXO	ANI board	-	-	-
		VGS-1	-	-	-
22	RXEO	ANI board	-	-	-
		VGS-1	-	-	-
23	RXEI	ANI board	-	-	-
		VGS-1	-	-	-
24	TXI	ANI board	-	-	-
		VGS-1	-	-	-
25	OPT6	ANI board	-	-	-
		VGS-1	-	-	-
26	POW	ANI board	O	A+	Switched B output
		VGS-1	-	-	Note: POW and 5V can not be used simultaneously.

NX-200 PC BOARD

CONTROL UNIT (X53-4260-XX) -10: K, -11: K2
 Component side view (J79-0131-19)

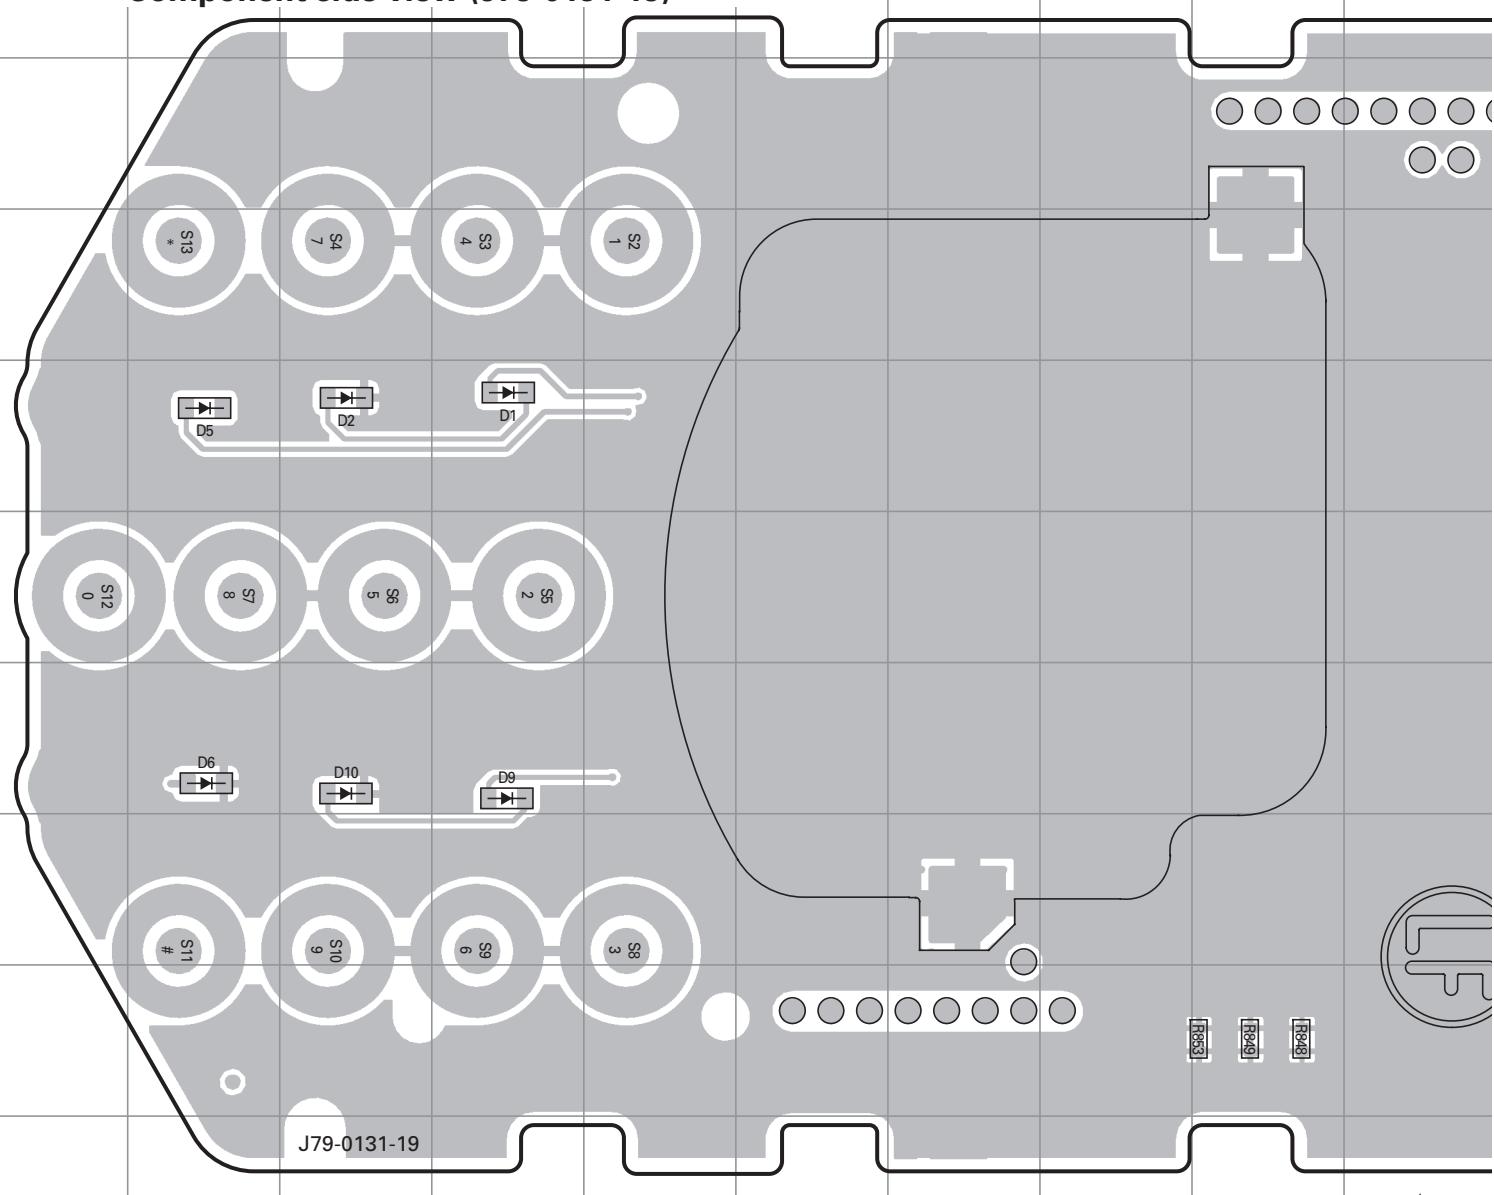

Ref. No.	Address	Ref. No.	Address	Ref. No.	Address
IC1	6K	D4	3Q	D14	7M
IC415	8K	D5	5B	D15	7L
Q1	7K	D6	7B	D16	7L
Q2	7L	D7	10O	D17	9L
Q3	6L	D8	10Q	D18	4L
Q4	4L	D9	7D	D19	4L
Q5	4L	D10	7C	D20	8M
D1	5D	D11	7L	D21	8M
D2	5C	D12	7M	D22	8L
D3	3O	D13	7M	D23	9L

J

K

L

M

N

O

P


Q

R


S

PC BOARD**NX-200**

CONTROL UNIT (X53-4260-XX) -10: K, -11: K2
Component side view (J79-0131-19)

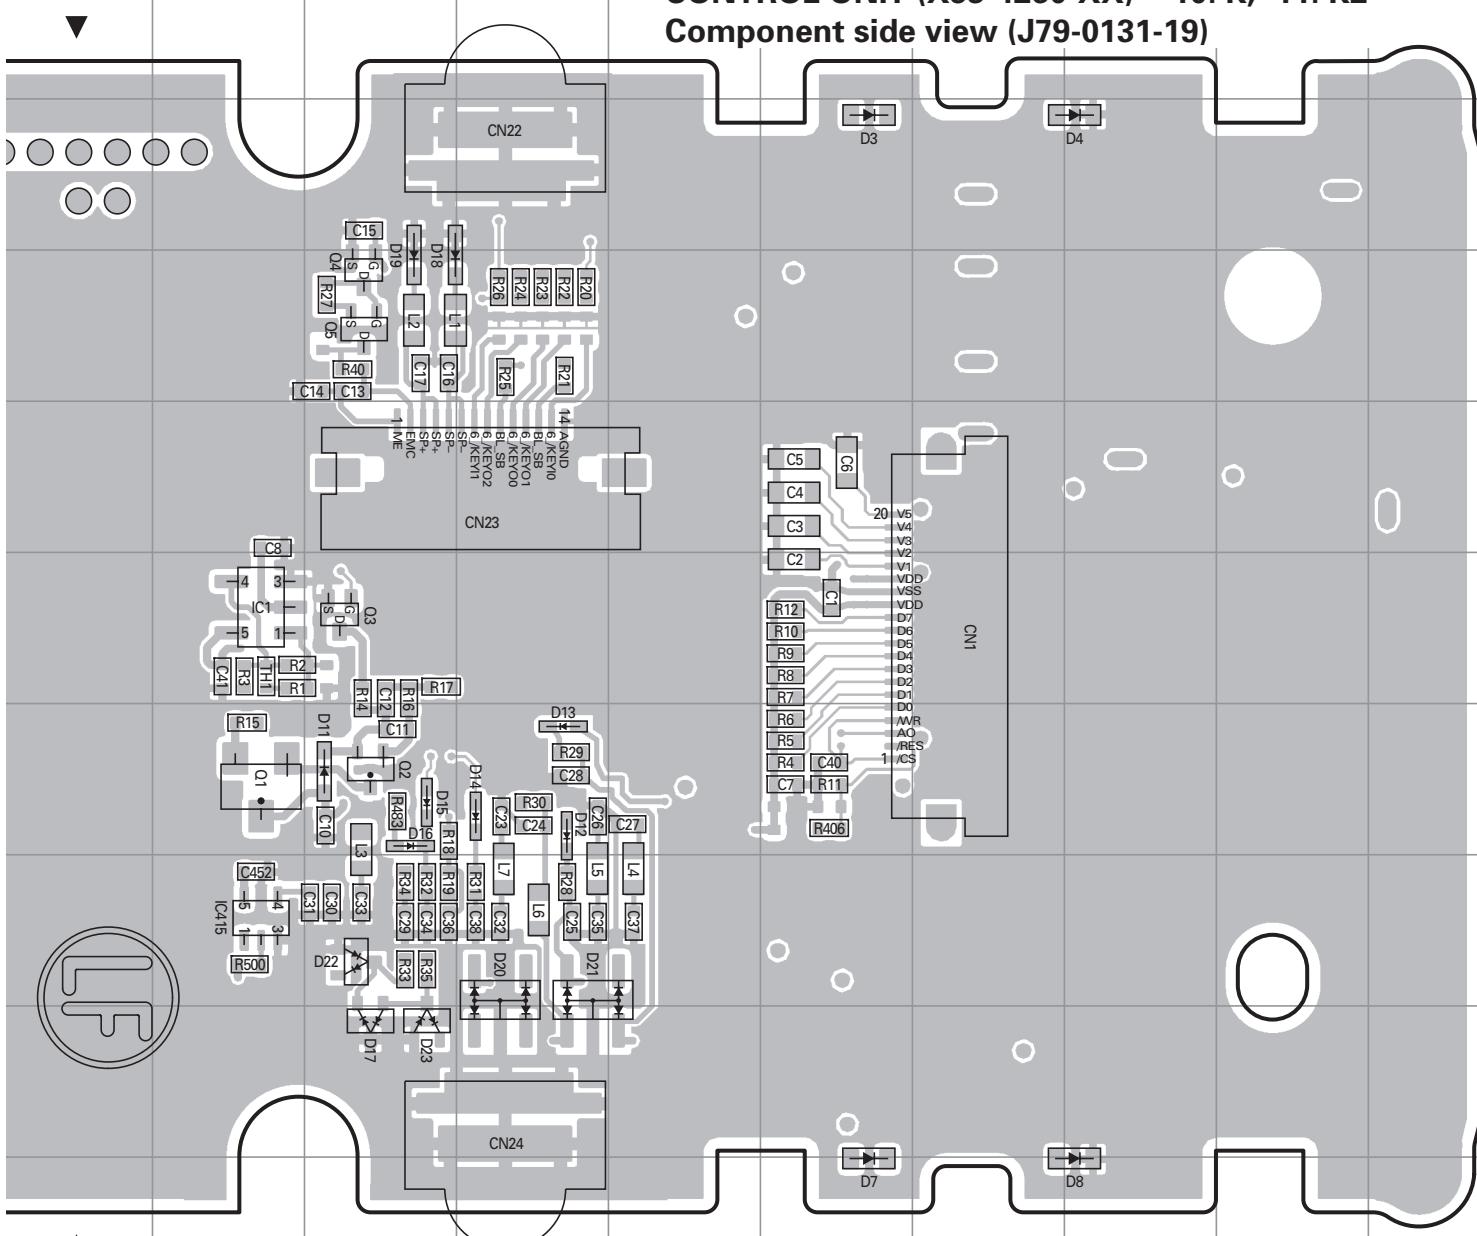


Component side

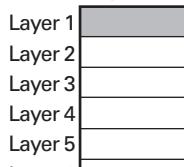


Foil side

NX-200 PC BOARD


CONTROL UNIT (X53-4260-XX) -10: K, -11: K2
Foil side view (J79-0131-19)

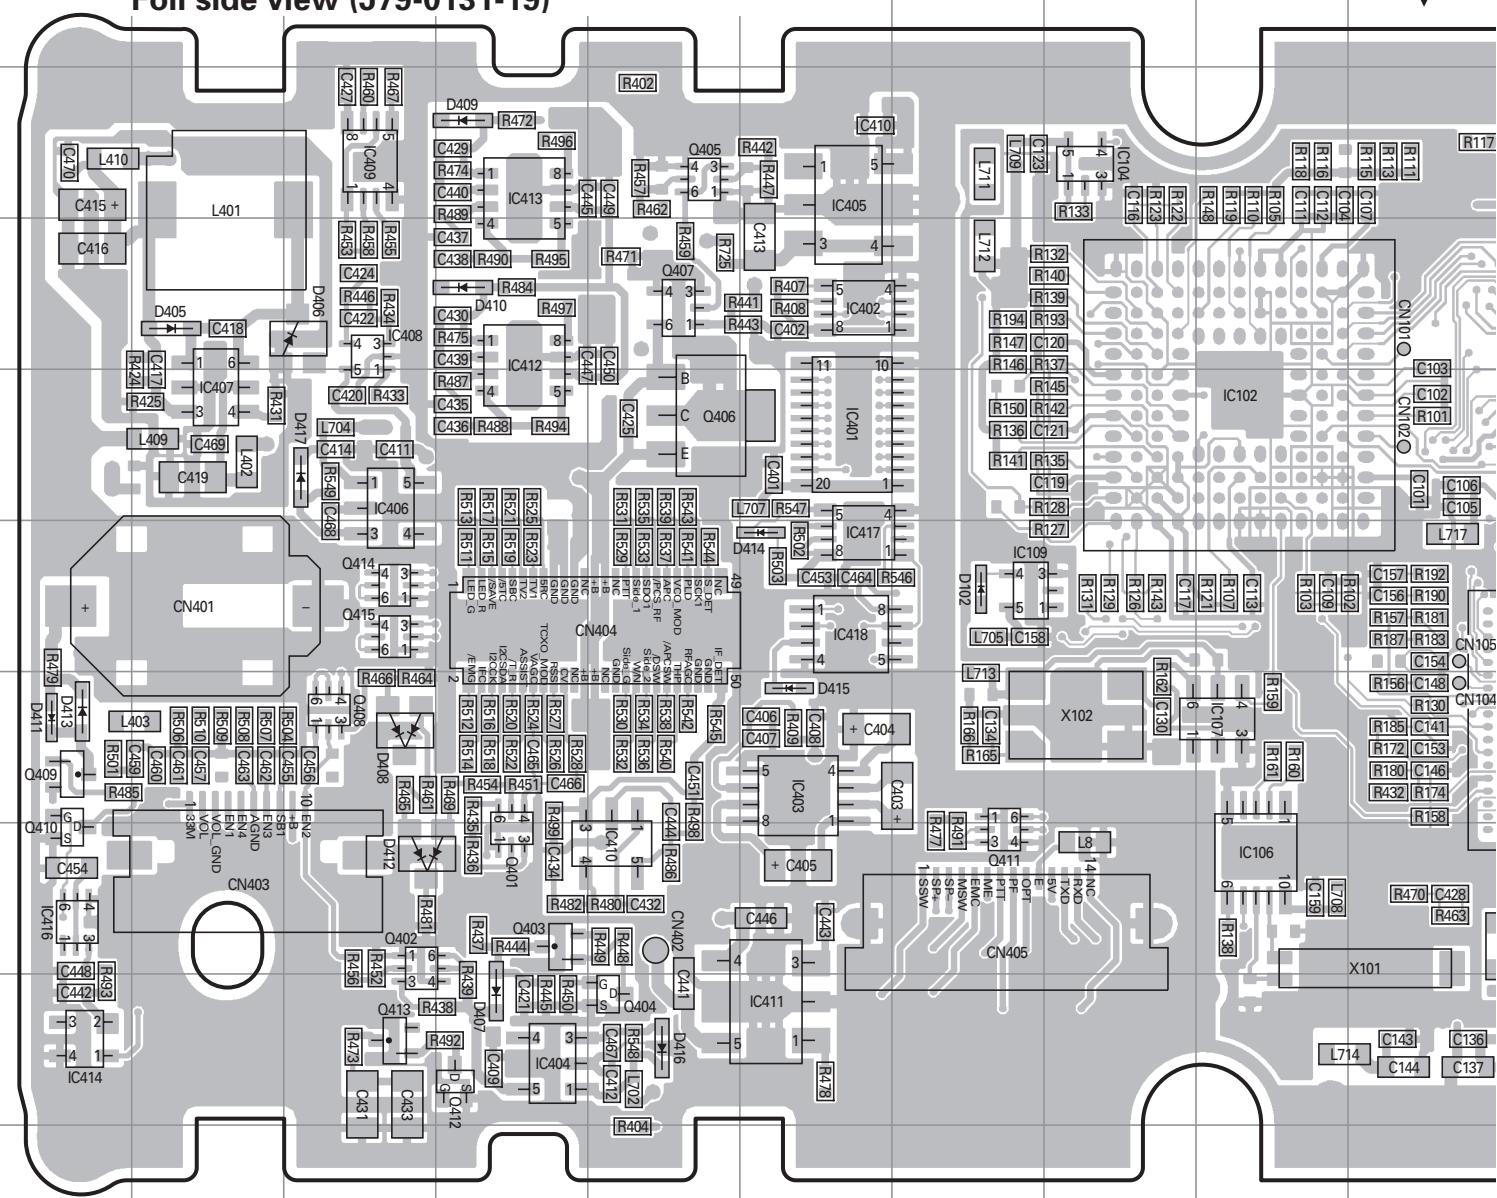

Ref. No.	Address	Ref. No.												
IC101	5K	IC404	9D	IC417	6F	IC711	6S	Q404	9E	Q701	6Q	D404	5M	D416
IC102	5I	IC405	3F	IC418	6F	IC712	6N	Q405	3E	Q702	4R	D405	4B	D417
IC103	4K	IC406	5C	IC701	7Q	IC713	4Q	Q406	5E	Q703	6R	D406	4C	D701
IC104	3H	IC407	5B	IC702	5R	IC714	5R	Q407	4E	Q704	7R	D407	9D	D702
IC105	4L	IC408	4C	IC703	7P	IC715	5P	Q408	7C	Q705	5O	D408	7C	D703
IC106	8I	IC409	3C	IC704	3P	IC716	5N	Q409	7A	Q706	5O	D409	3D	D704
IC107	7I	IC410	8E	IC705	9N	Q101	3K	Q410	8A	Q707	4N	D410	4D	D705
IC108	7K	IC411	9F	IC706	7N	Q102	3K	Q411	8G	D101	3L	D411	7A	D706
IC109	6G	IC412	4D	IC707	3P	Q103	3L	Q412	9D	D102	6G	D412	8C	D707
IC401	5F	IC413	3D	IC708	9Q	Q401	8D	Q413	9C	D401	4M	D413	7A	
IC402	4F	IC414	9A	IC709	4R	Q402	8C	Q414	6C	D402	5M	D414	6F	
IC403	7F	IC416	8A	IC710	6N	Q403	8D	Q415	6C	D403	5M	D415	7F	

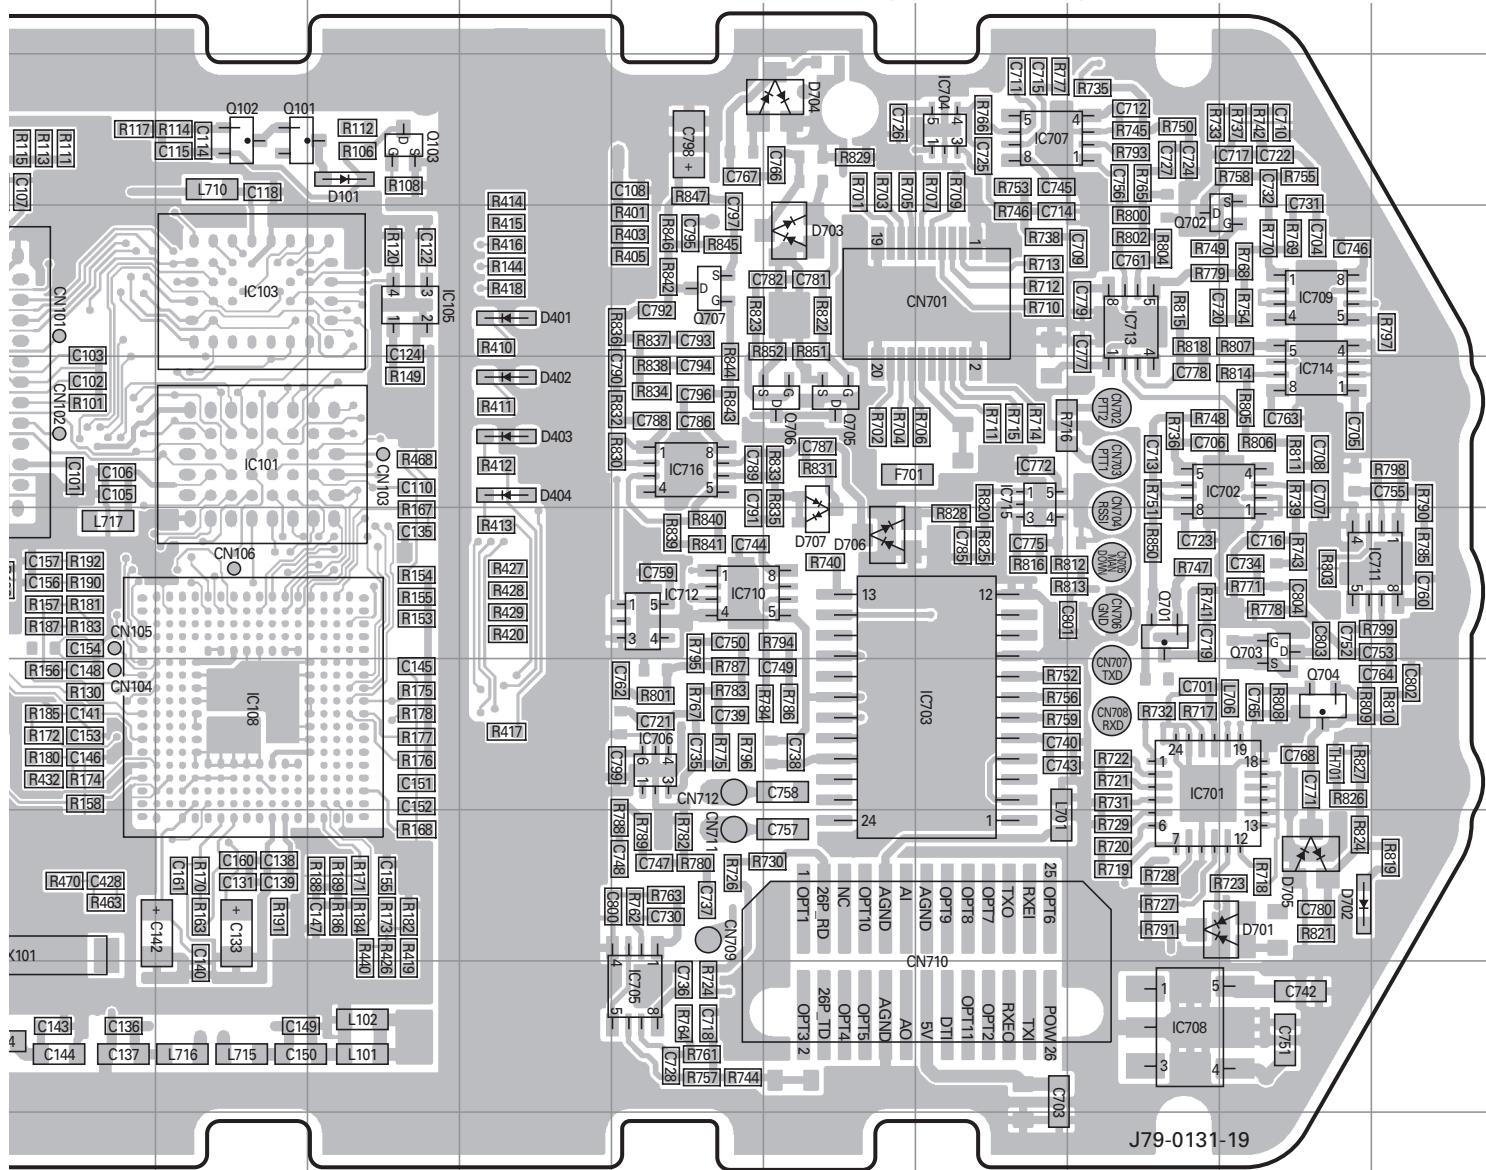CONTROL UNIT (X53-4260-XX) -10: K, -11: K2
Foil side view (J79-0131-19)


Component side

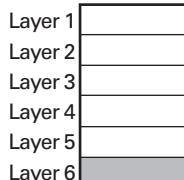


Foil side

Address	Ref. No.	Address
M	D416	9E
I _B	D417	5C
I _C	D701	8R
I _D	D702	8R
I _C	D703	4O
I _D	D704	3O
I _D	D705	8R
I _A	D706	6O
I _C	D707	6O
I _A		
I _F		
I _F		

NX-200 PC BOARD

TX-RX UNIT (X57-7360-10) (A/2)
Component side view (J79-0127-19 A/2)

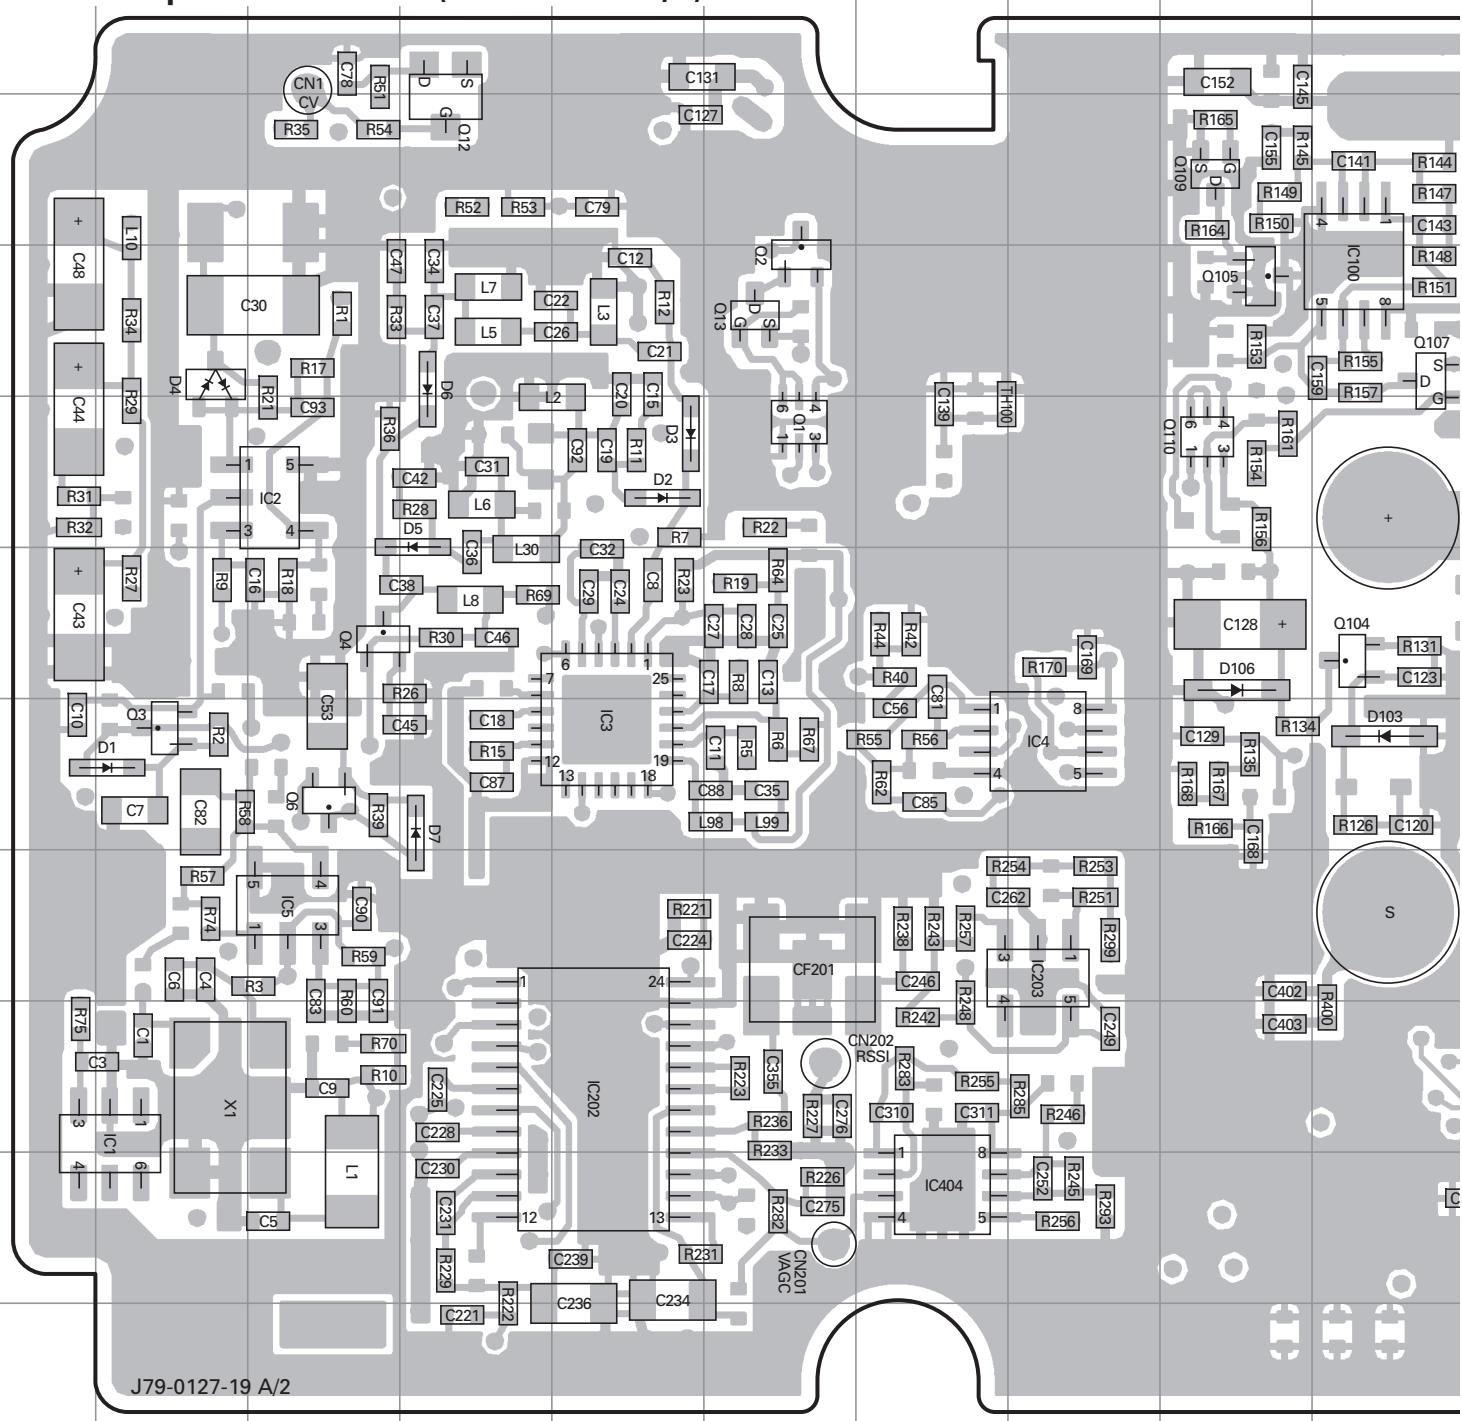

Ref. No.	Address										
IC1	9B	IC203	8H	Q4	6C	Q110	5I	D3	5E	D401	5P
IC2	5C	IC400	5N	Q6	7C	Q401	7M	D4	4B	D402	8P
IC3	7E	IC401	4P	Q12	3D	Q403	7N	D5	5D	D403	3N
IC4	7H	IC402	9O	Q13	4F	Q404	9O	D6	4D		
IC5	8C	IC404	10G	Q104	6J	Q405	4N	D7	7D		
IC100	4J	Q1	5F	Q105	4I	Q406	9P	D103	7J		
IC200	7K	Q2	4F	Q107	4J	D1	7B	D106	6I		
IC202	9E	Q3	7B	Q109	3I	D2	5E	D400	5M		

J

K

L

M

N

O

P


Q

R


S

PC BOARD**NX-200**


TX-RX UNIT (X57-7360-10) (A/2)
Component side view (J79-0127-19 A/2)

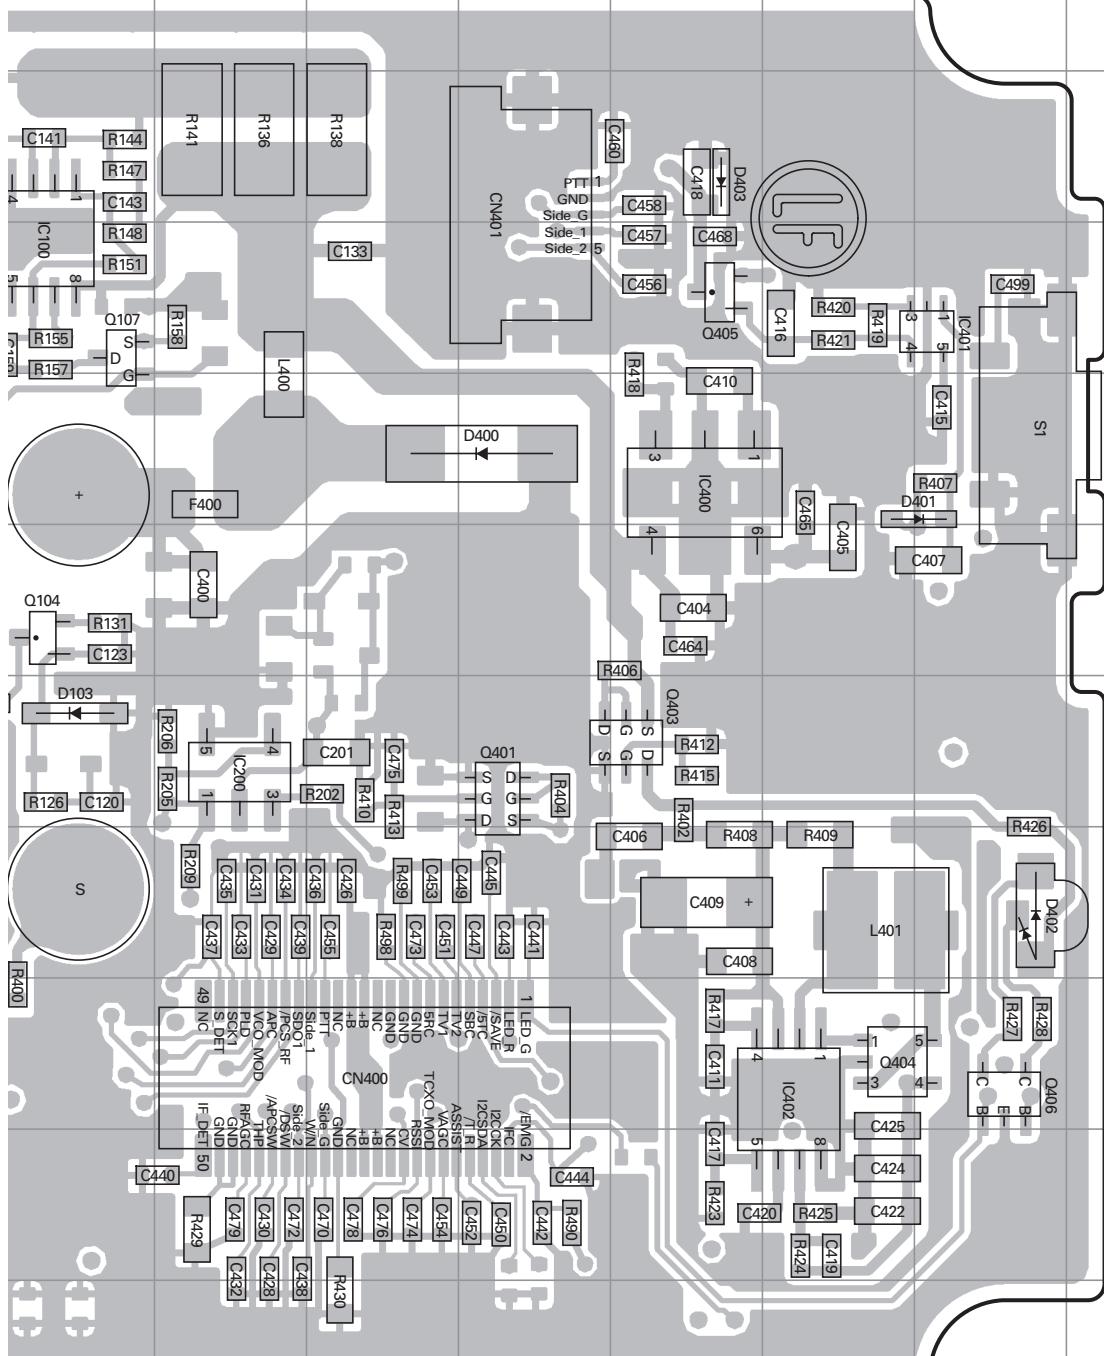

**TX-RX UNIT
(X57-7360-10) (B/2)**

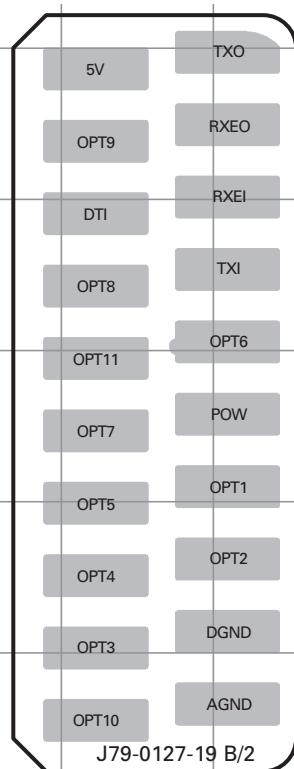

Component side

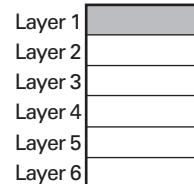


Foil side


NX-200 PC BOARD

TX-RX UNIT (X57-7360-10) (A/2)
Foil side view (J79-0127-19 A/2)


TX-RX UNIT
(X57-7360-10) (B/2)

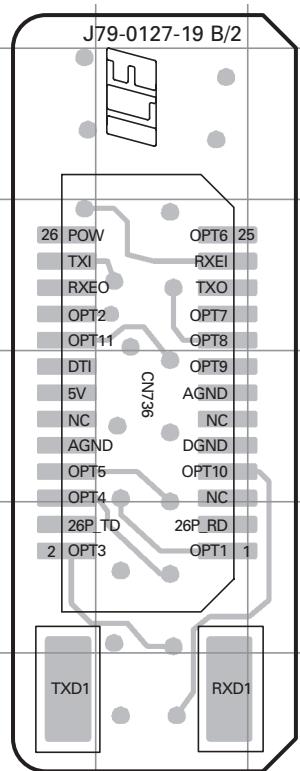

Component side

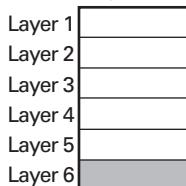


Foil side

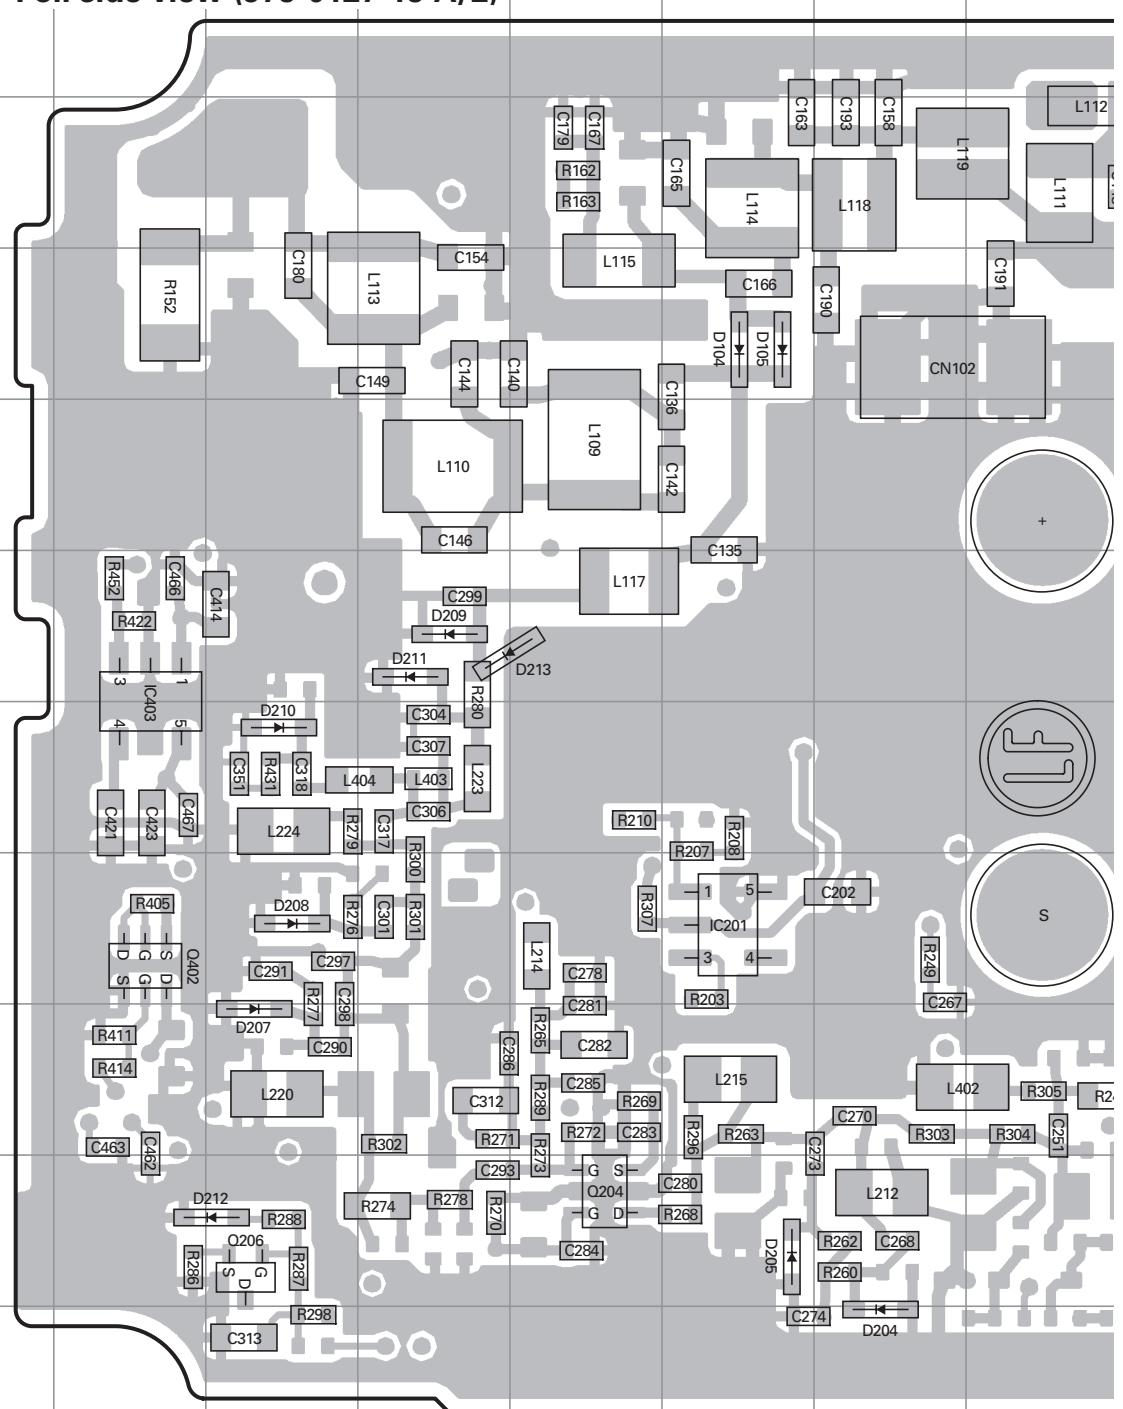

PC BOARD

NX-200


TX-RX UNIT (X57-7360-10) (A/2)
Foil side view (J79-0127-19 A/2)

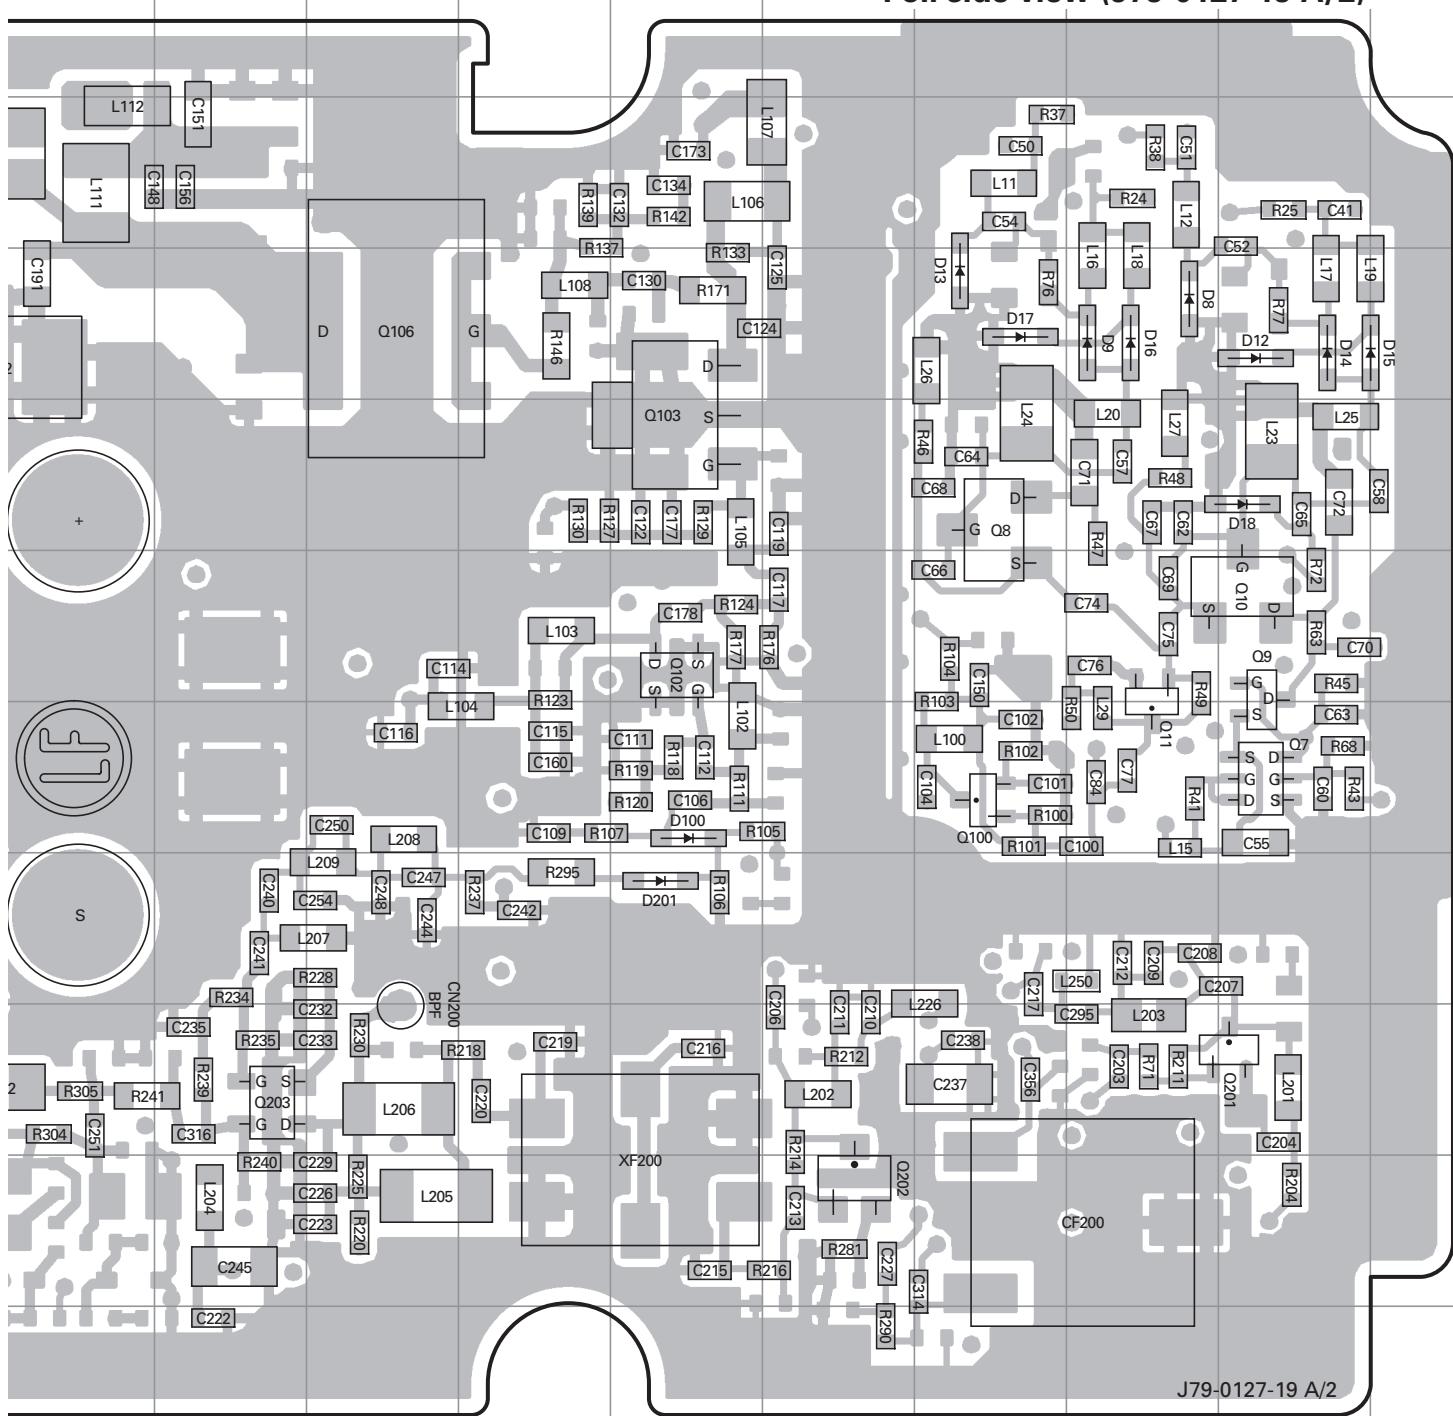

J79-0127-19 A/2

Ref. No.	Address										
IC201	8H	Q100	7P	Q204	10G	D14	4R	D105	4H	D210	7E
IC403	7D	Q102	6N	Q206	10E	D15	4S	D201	8N	D211	6F
Q7	7R	Q103	5N	Q402	8D	D16	4Q	D204	11I	D212	10E
Q8	5P	Q106	4L	D8	4Q	D17	4P	D205	10H	D213	6G
Q9	6R	Q201	9R	D9	4Q	D18	5R	D207	9E		
Q10	6R	Q202	100	D12	4R	D100	7N	D208	8E		
Q11	7Q	Q203	9K	D13	4P	D104	4H	D209	6F		

NX-200 SCHEMATIC DIAGRAM

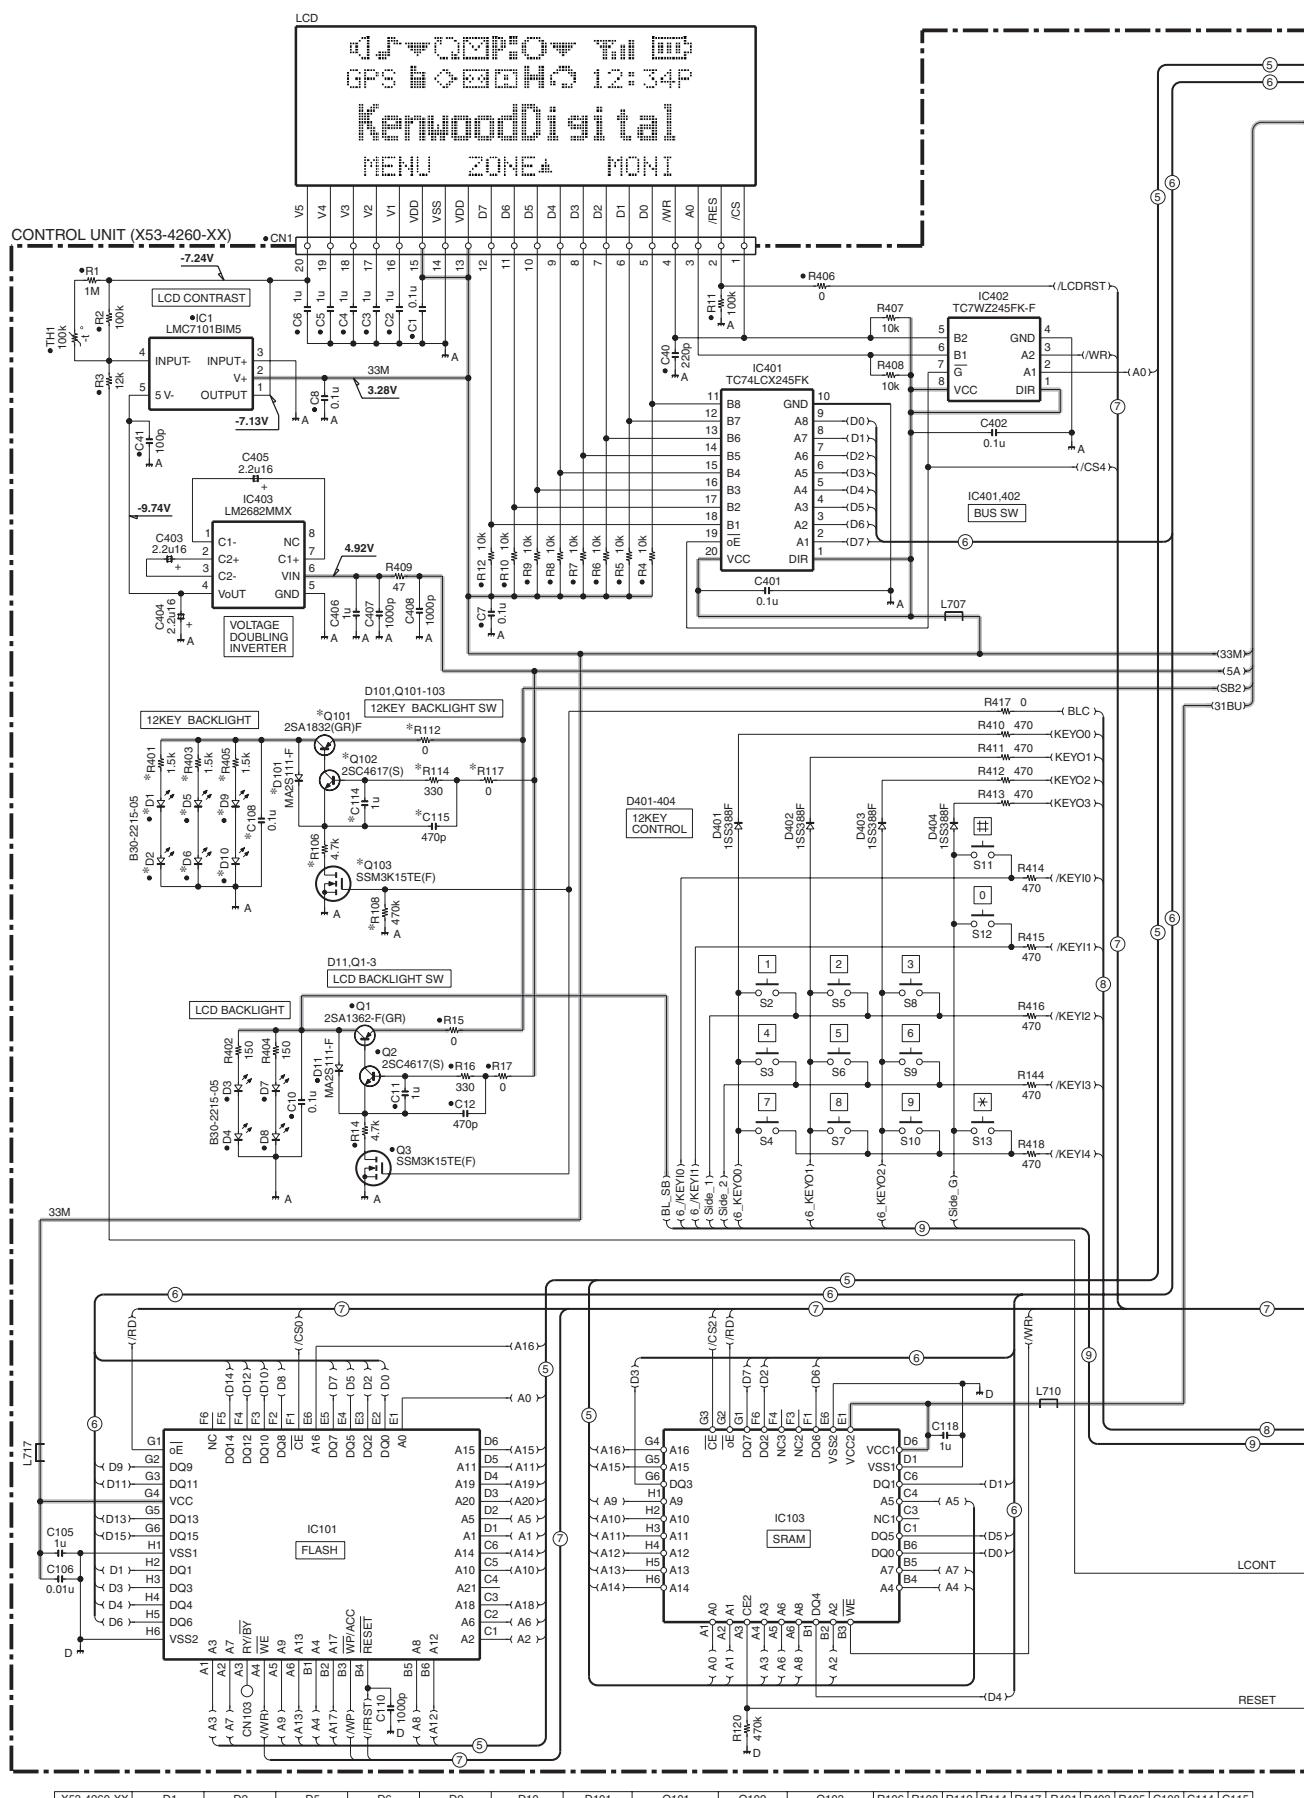

X53-4260-XX	D1	D2	D5	D6	D9	D10	D101	Q101	Q102	Q103	R106	R108	R112	R114	R117	R401	R403	R405	C114	C115
-10 K	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
-11 K2	B30-2215-05	B30-2215-05	B30-2215-05	B30-2215-05	B30-2215-05	B30-2215-05	MA2S111-F	2SA1832(GR)F	2SC4617(S)	SSM3K15TE(F)	4.7k	470k	0	330	0	1.5k	1.5k	0.1u	1u	470p

F

G


H

I

J


SCHEMATIC DIAGRAM NX-200

CONTROL UNIT (X53-4260-XX)

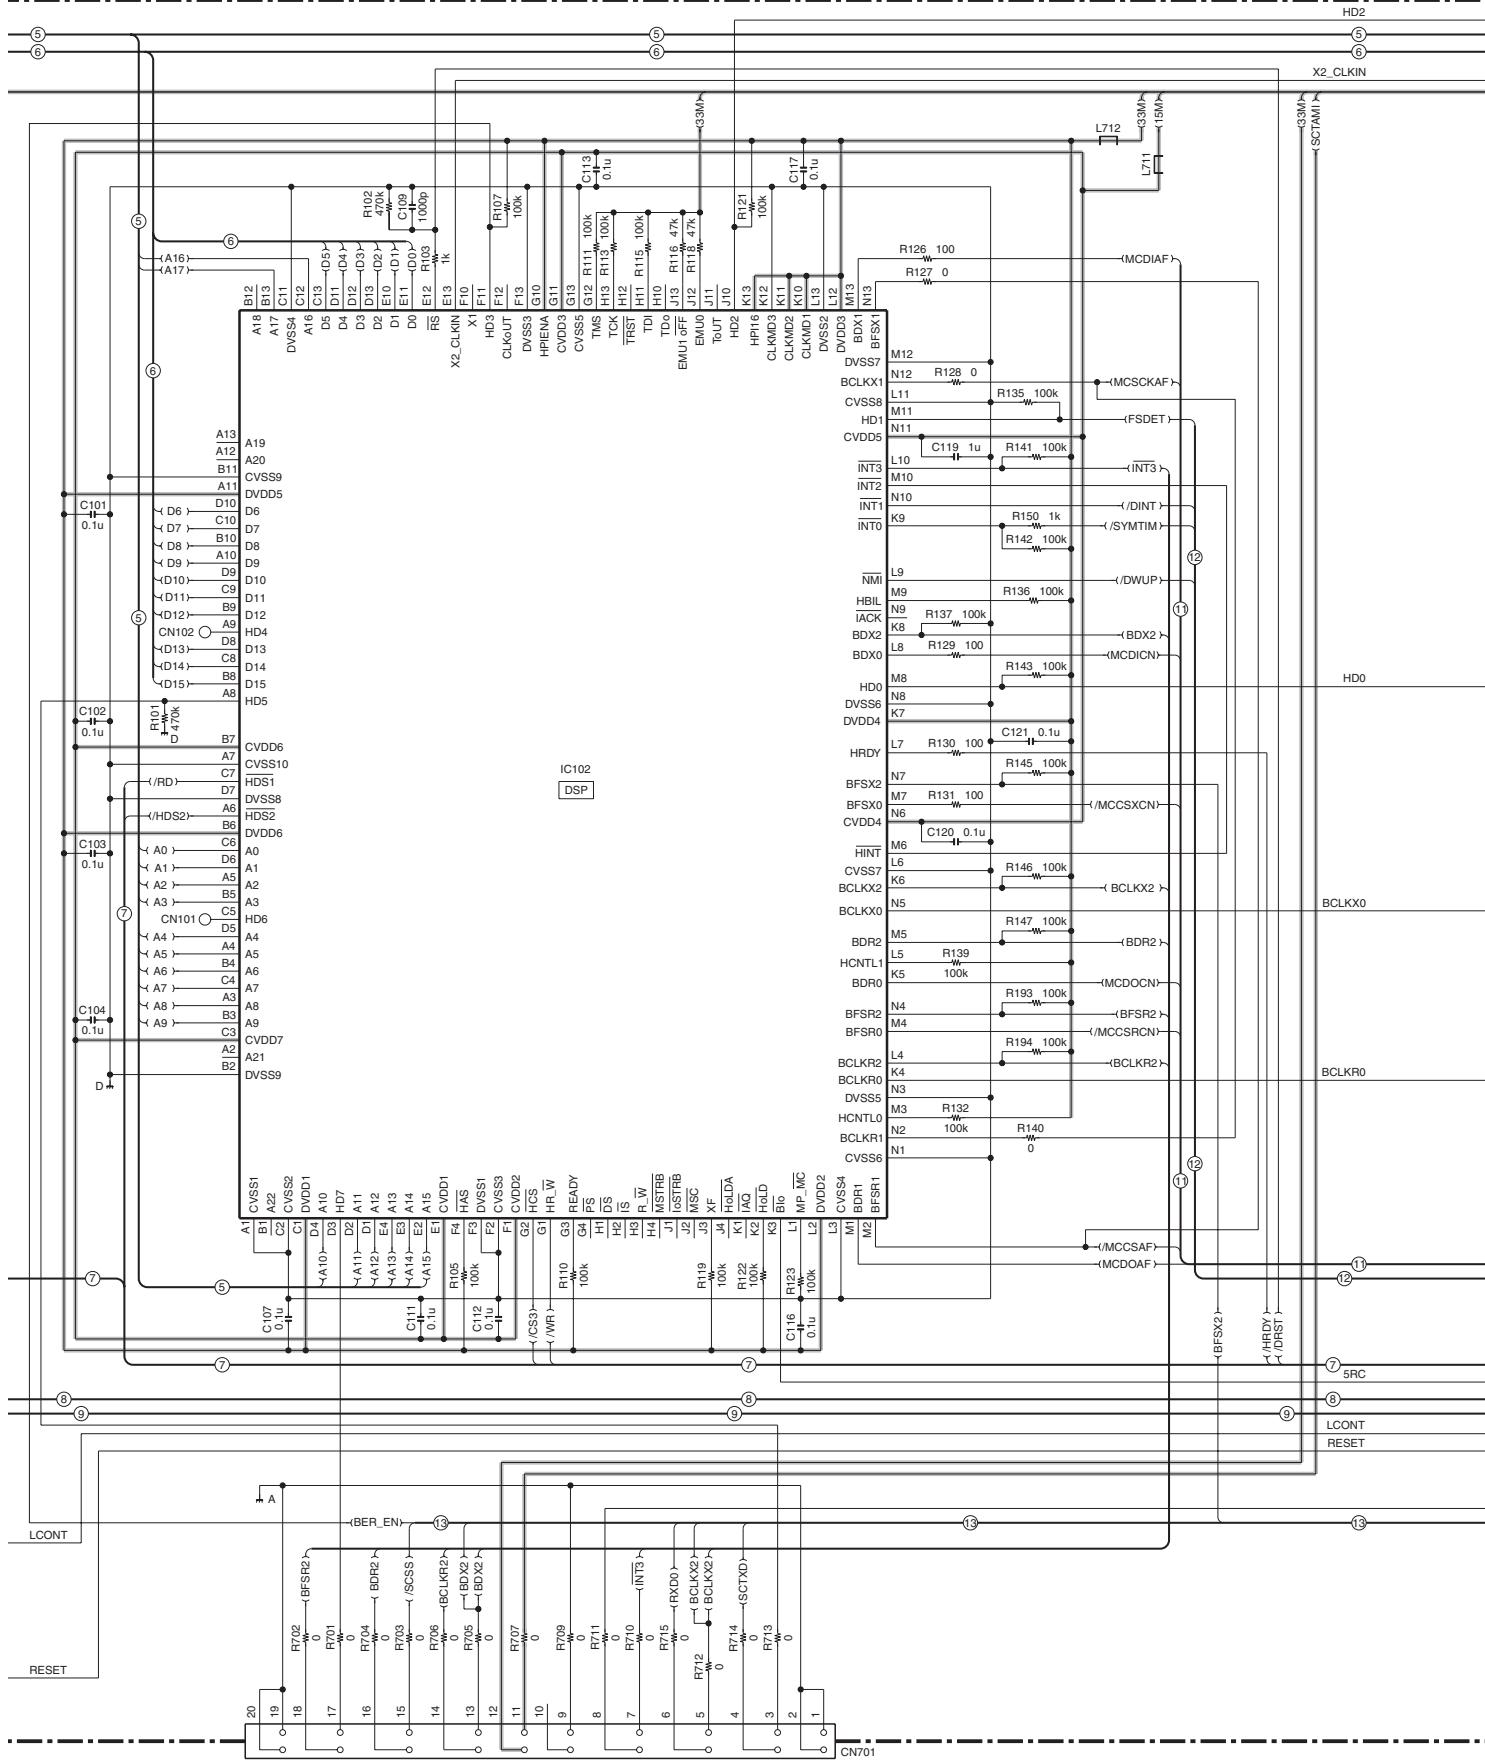

NX-200 SCHEMATIC DIAGRAM

CONTROL UNIT (X53-4260-XX)

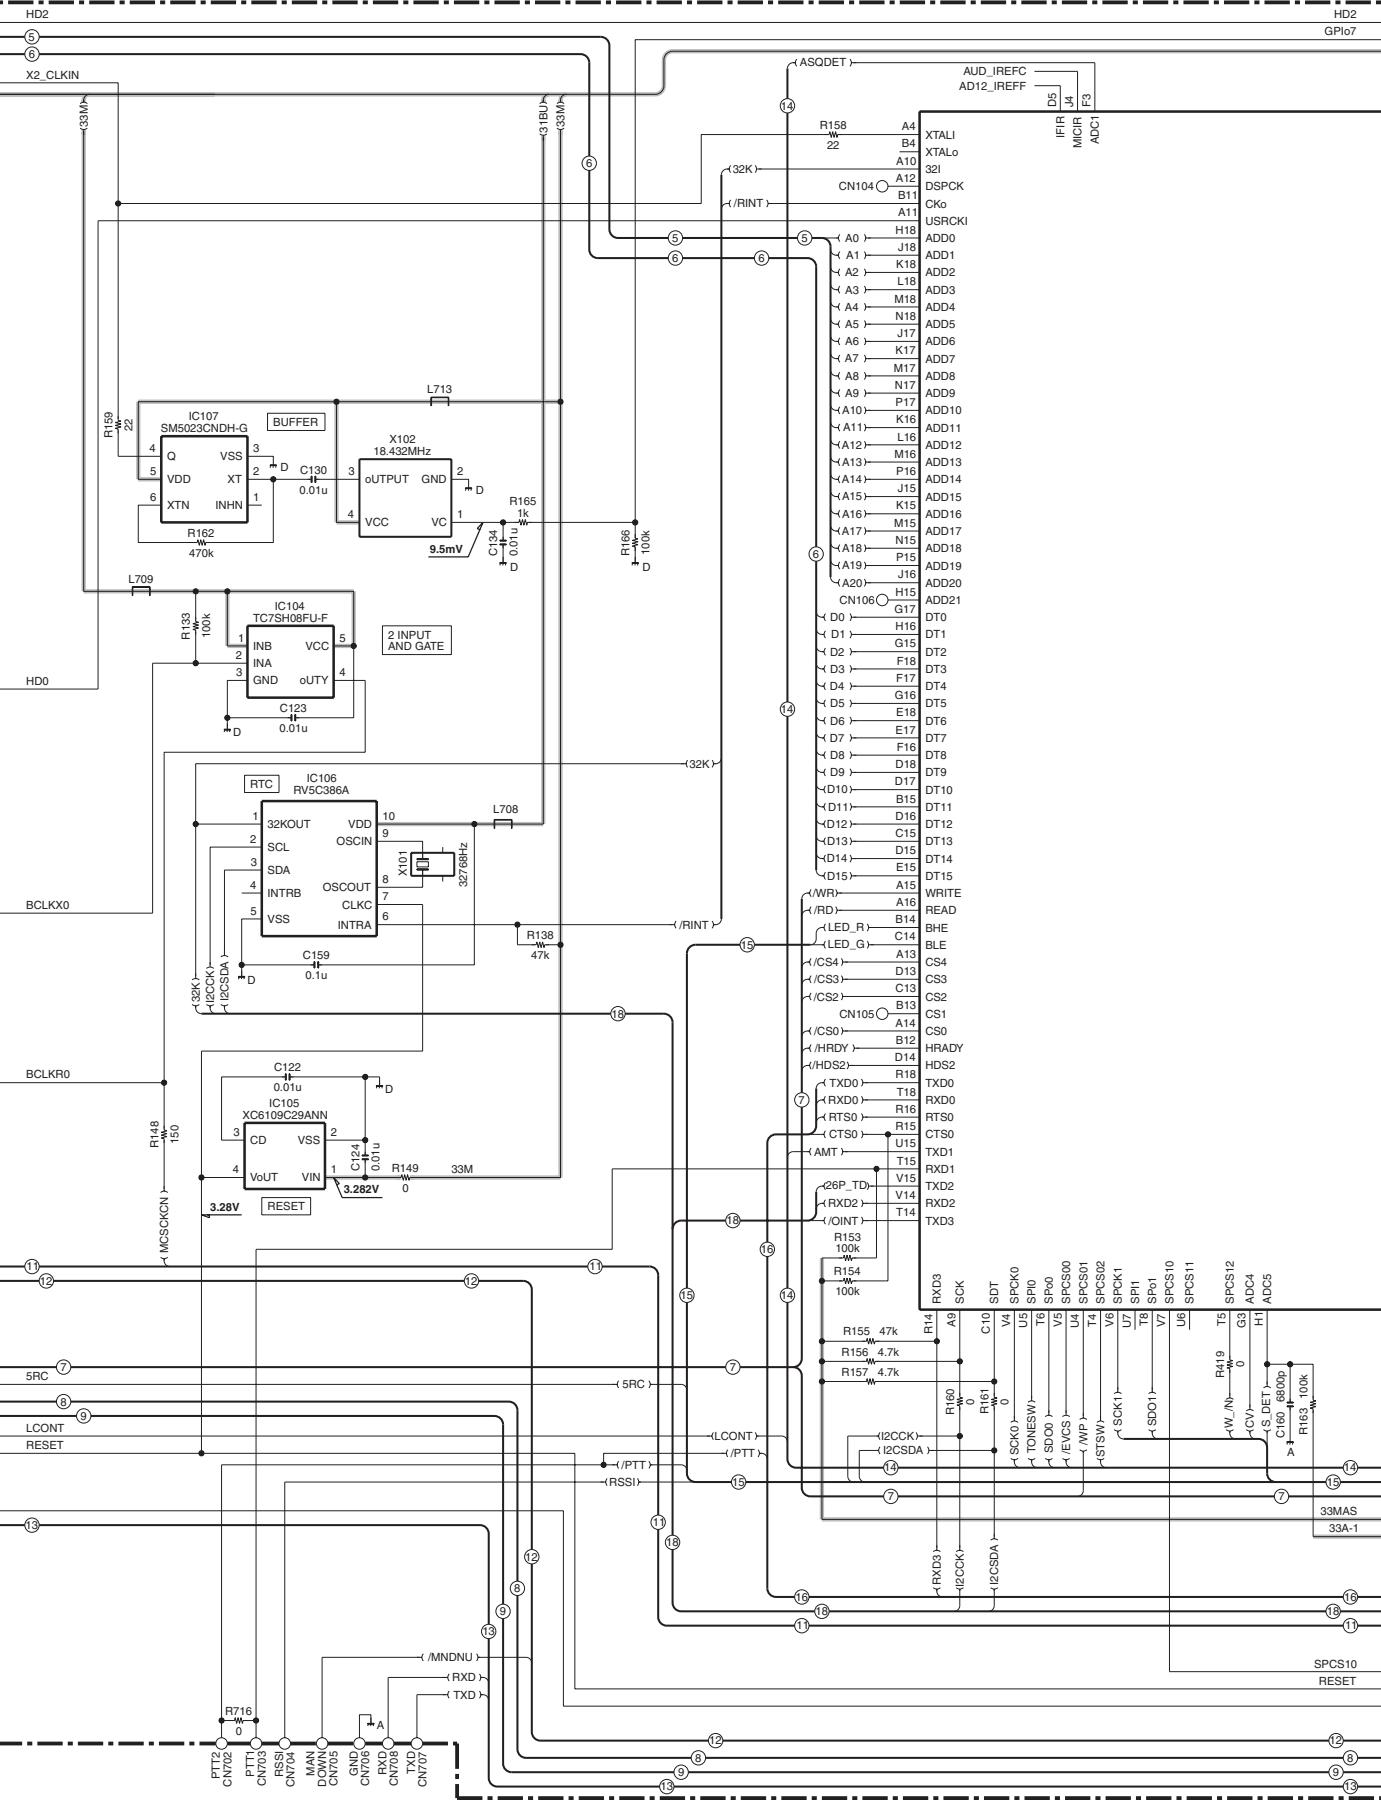

P

Q

R

S

T

SCHEMATIC DIAGRAM NX-200

CONTROL UNIT (X53-4260-XX)



HD2

GPIo7

HD2


GPIo7

33A-1

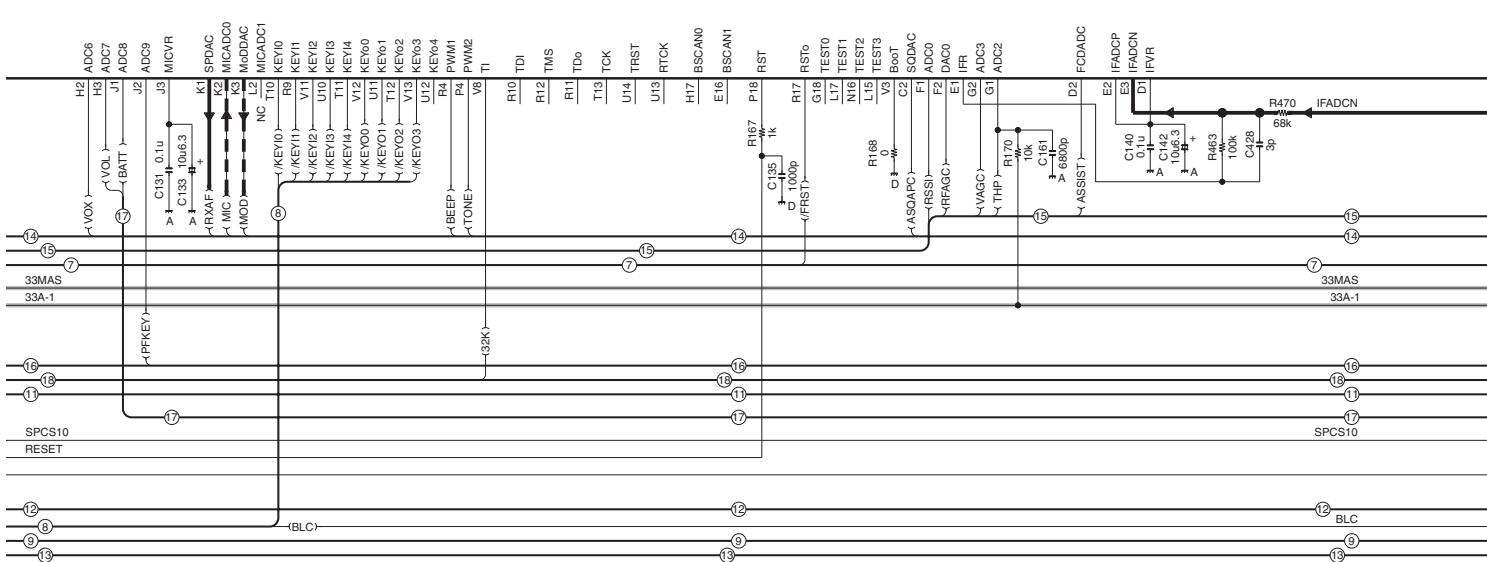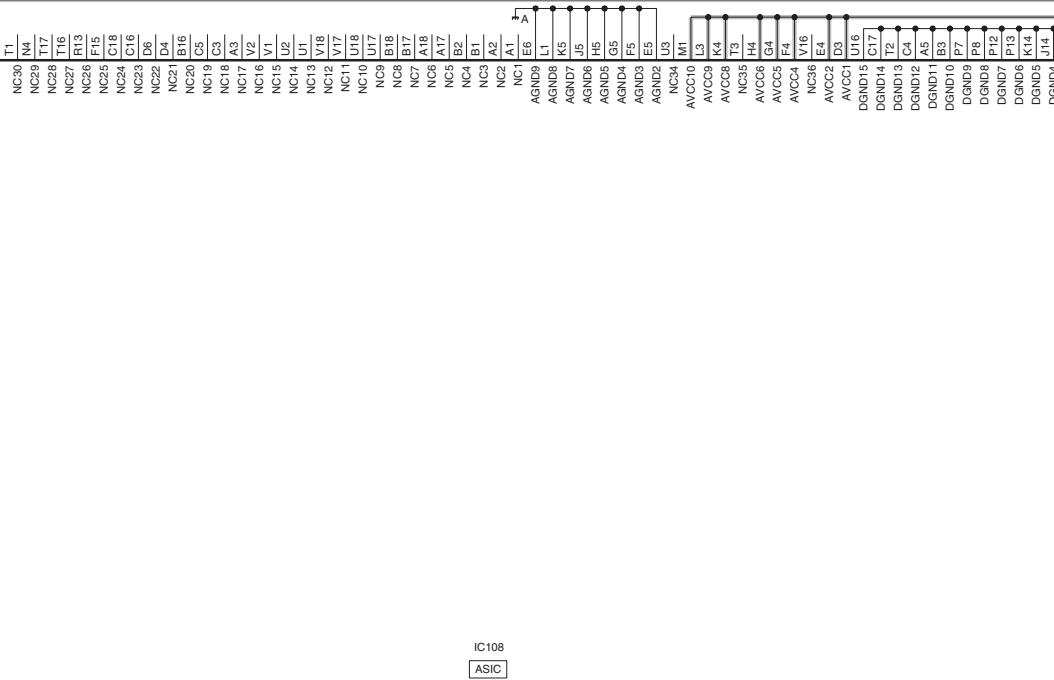


NX-200 SCHEMATIC DIAGRAM

CONTROL UNIT (X53-4260-XX)

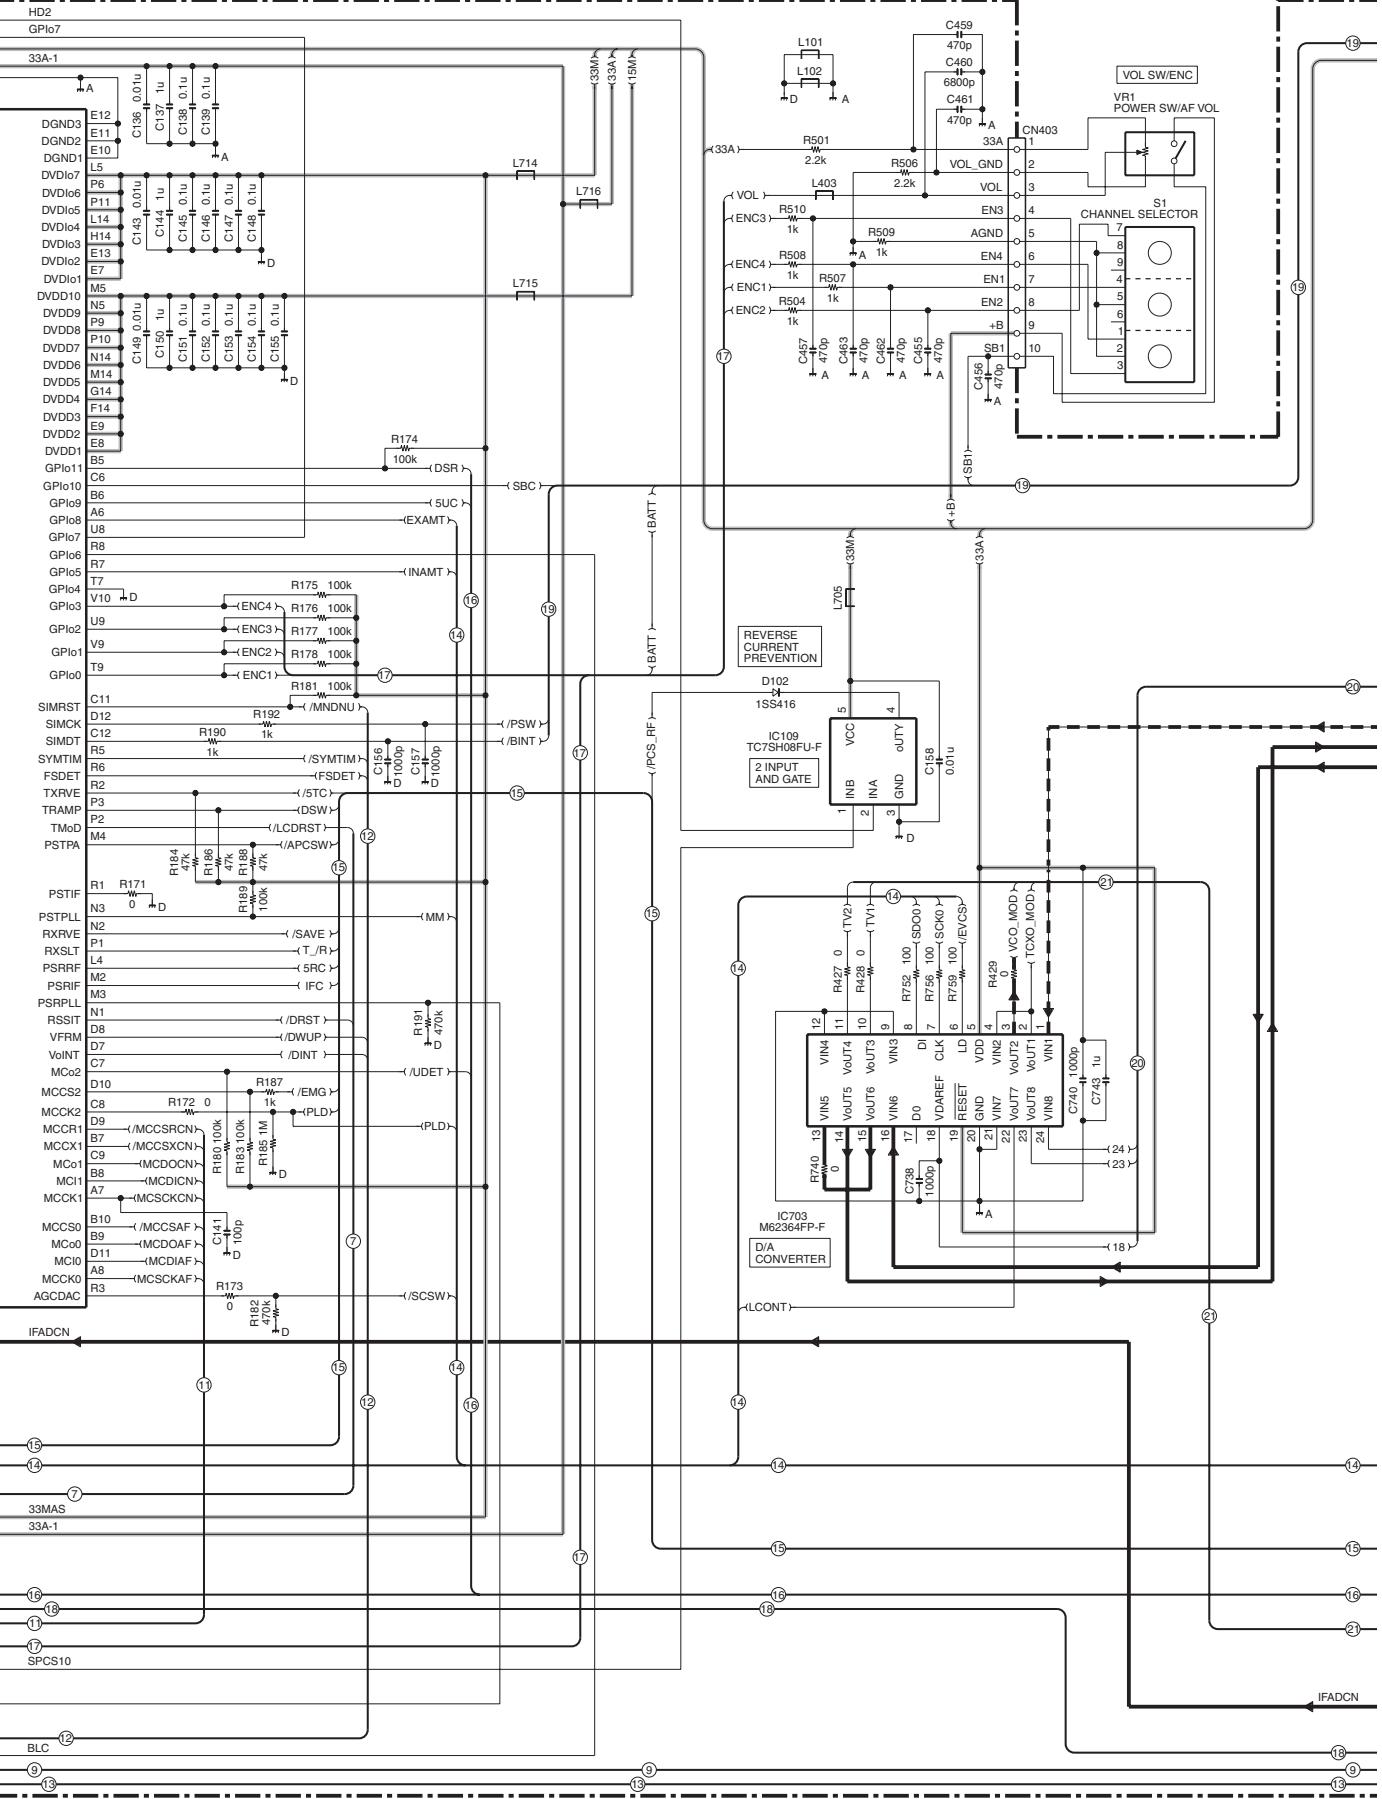


SCHEMATIC DIAGRAM NX-200

CONTROL UNIT (X53-4260-XX)

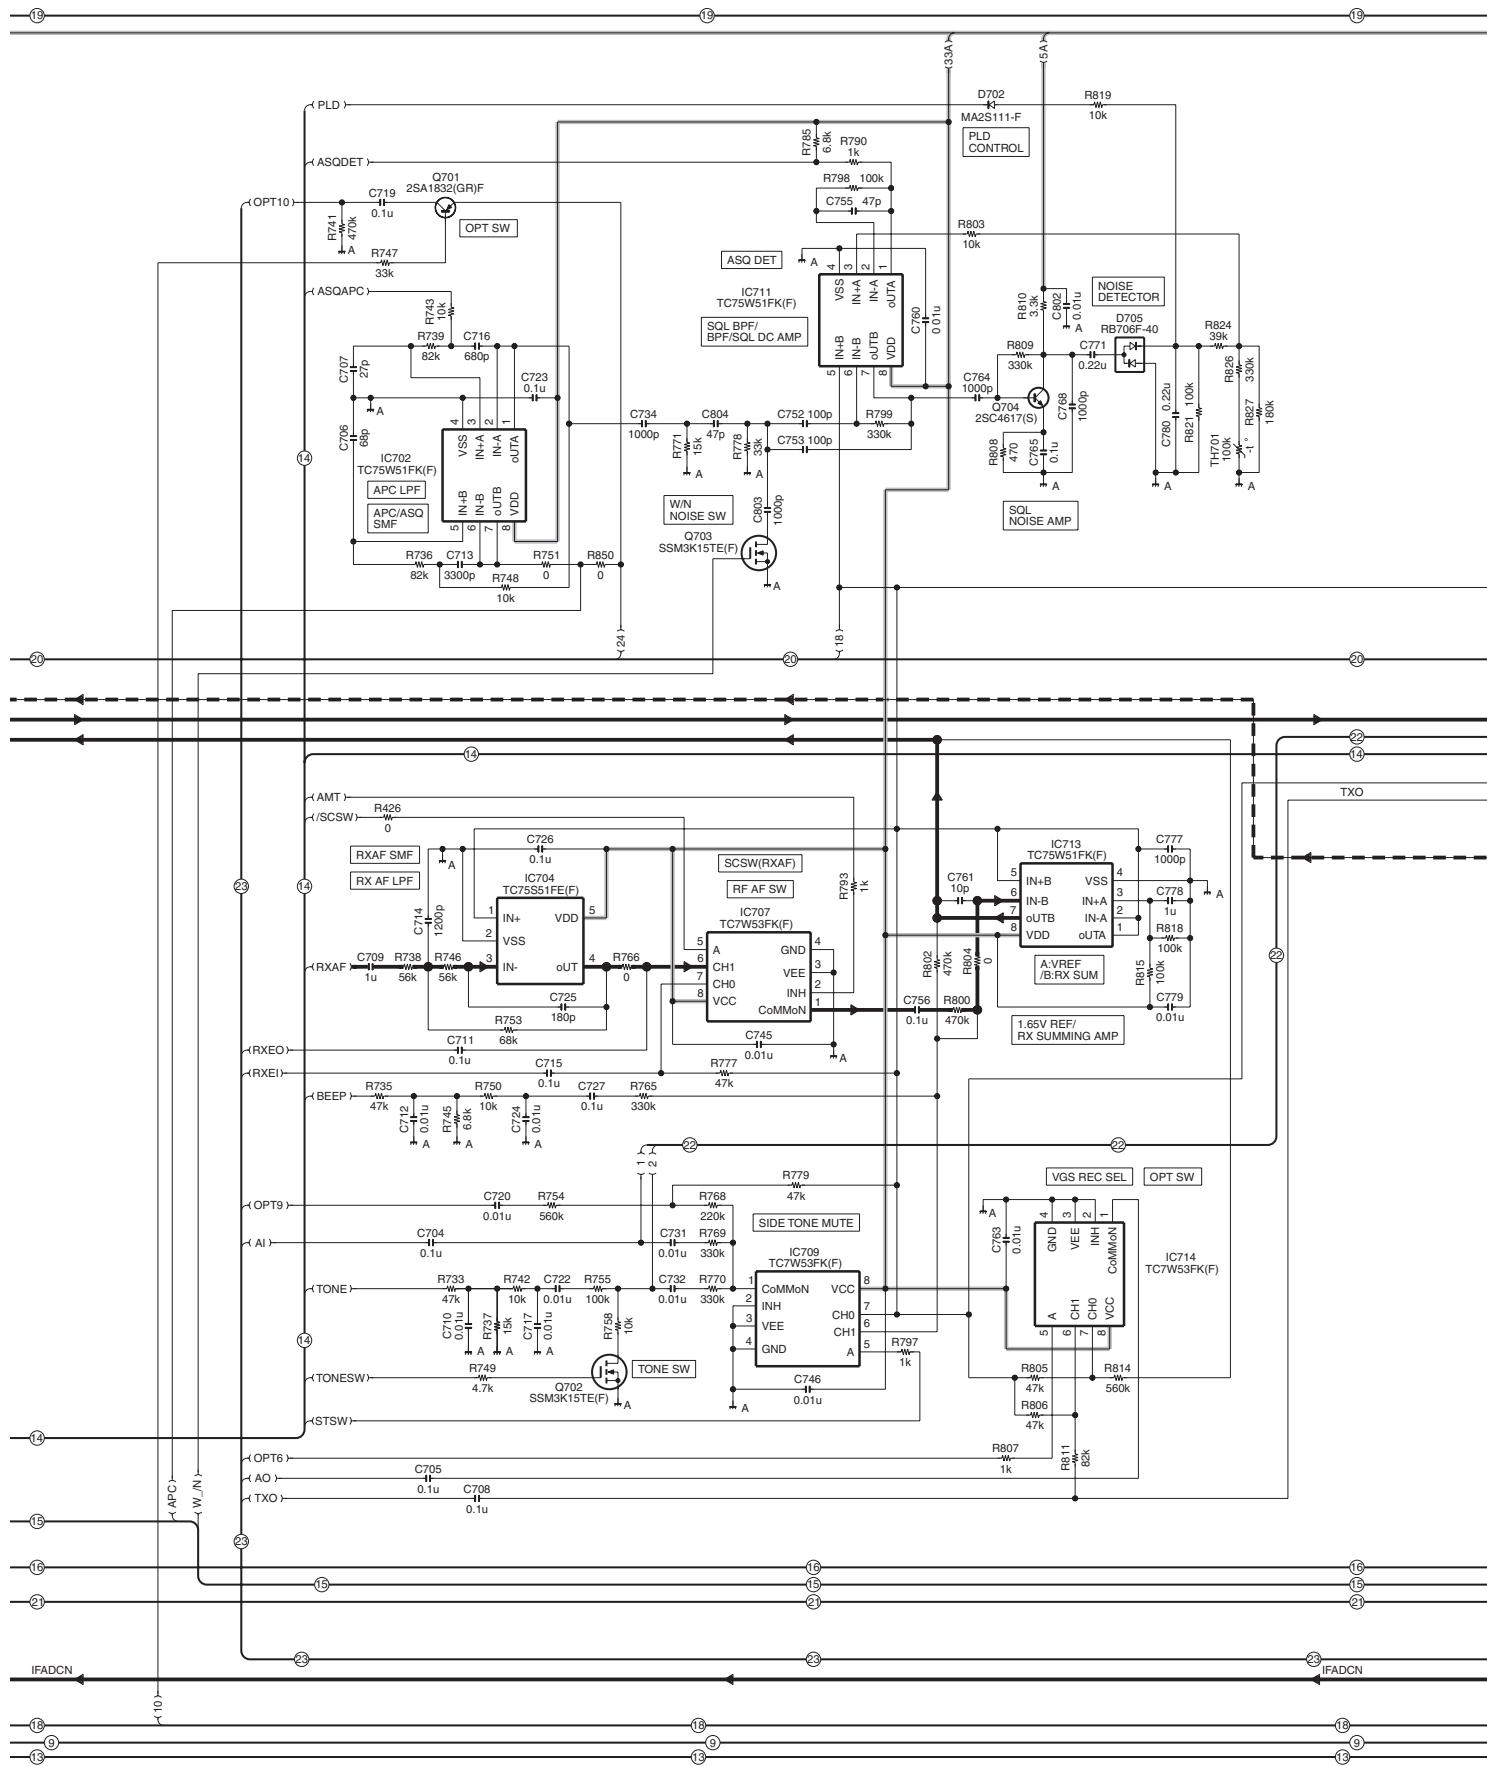


NX-200 SCHEMATIC DIAGRAM

CONTROL UNIT (X53-4260-XX)

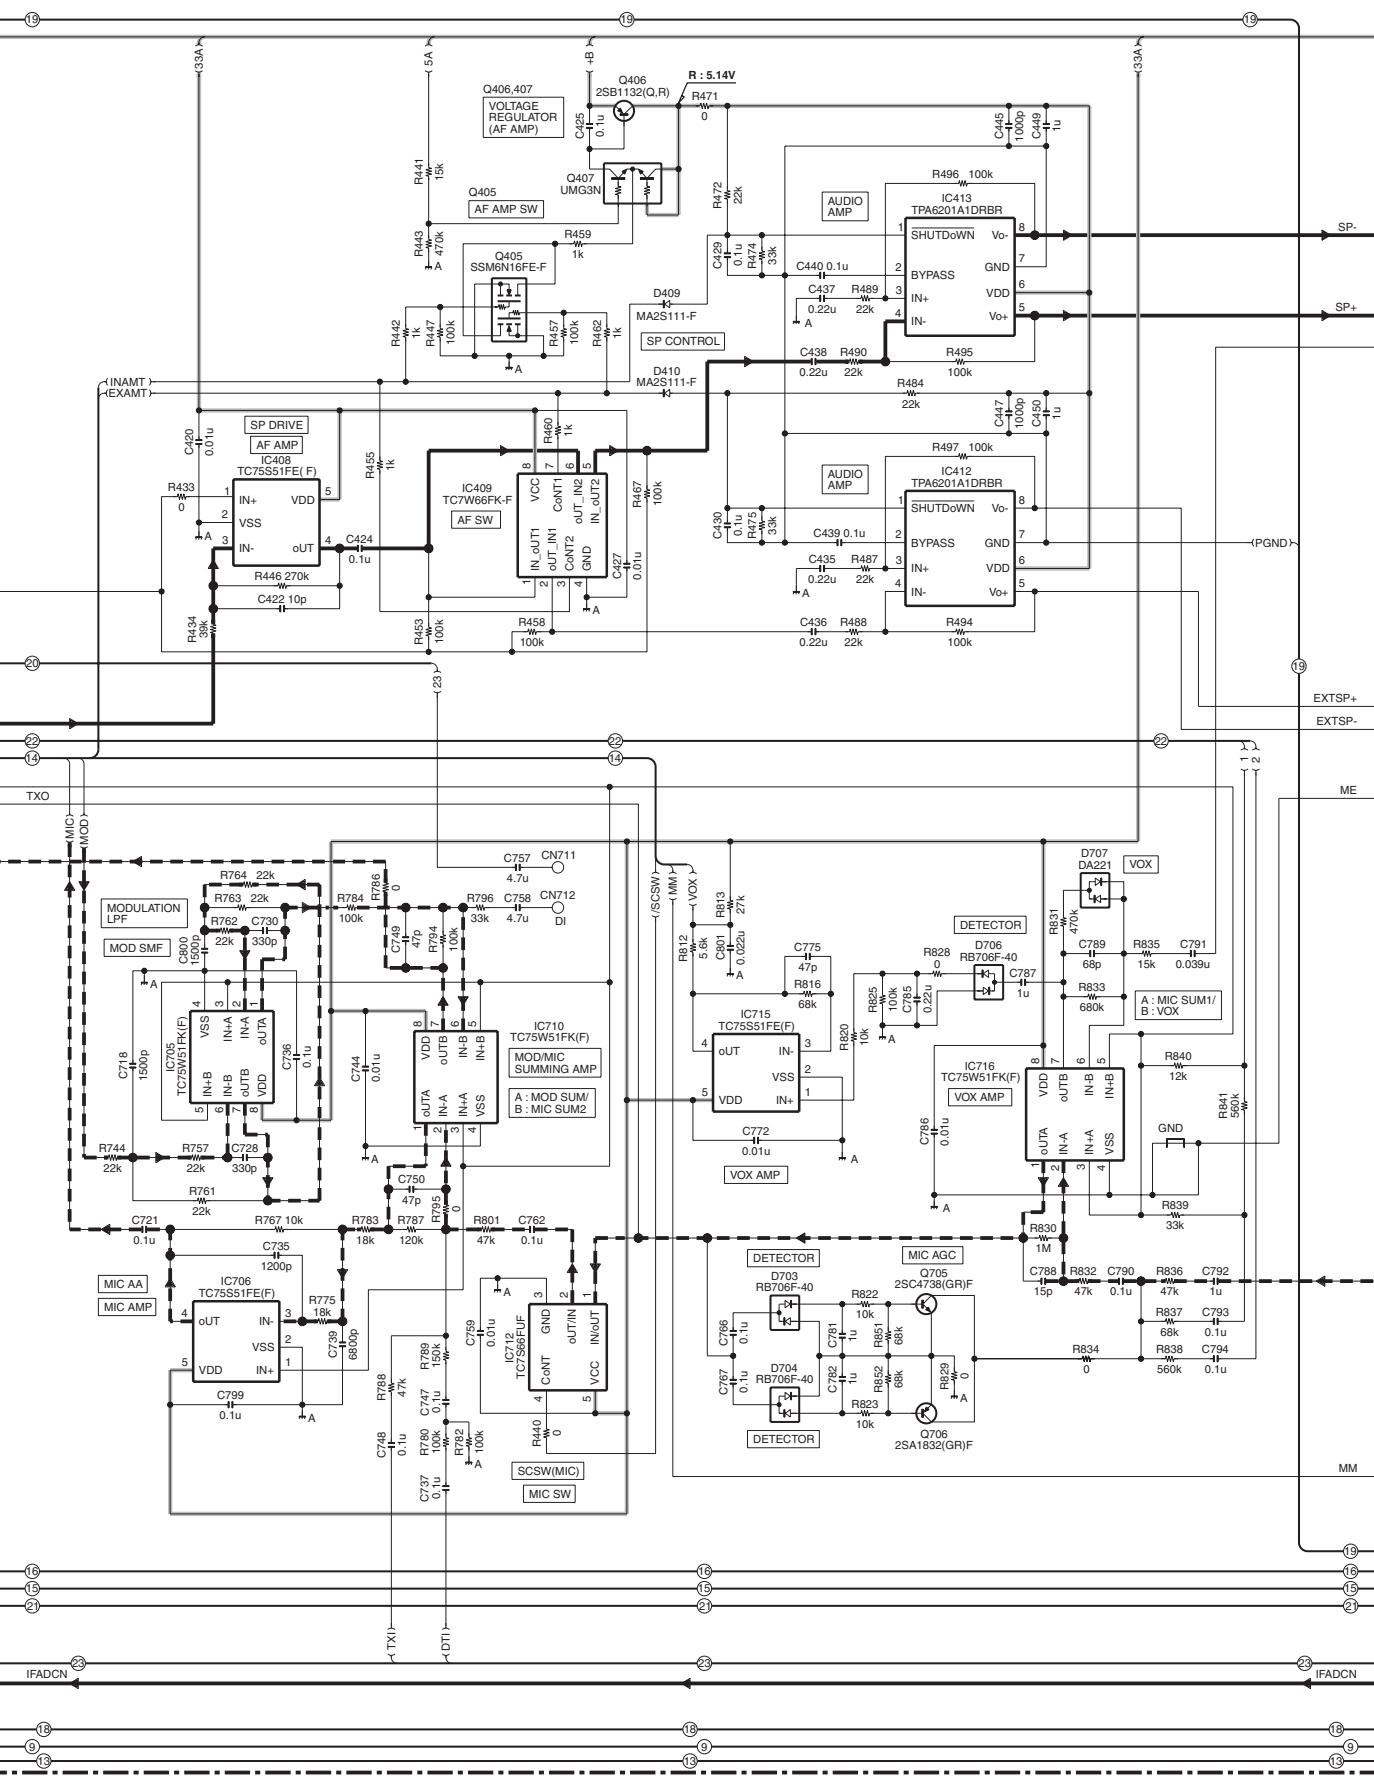


SCHEMATIC DIAGRAM NX-200

CONTROL UNIT (X53-4260-XX)

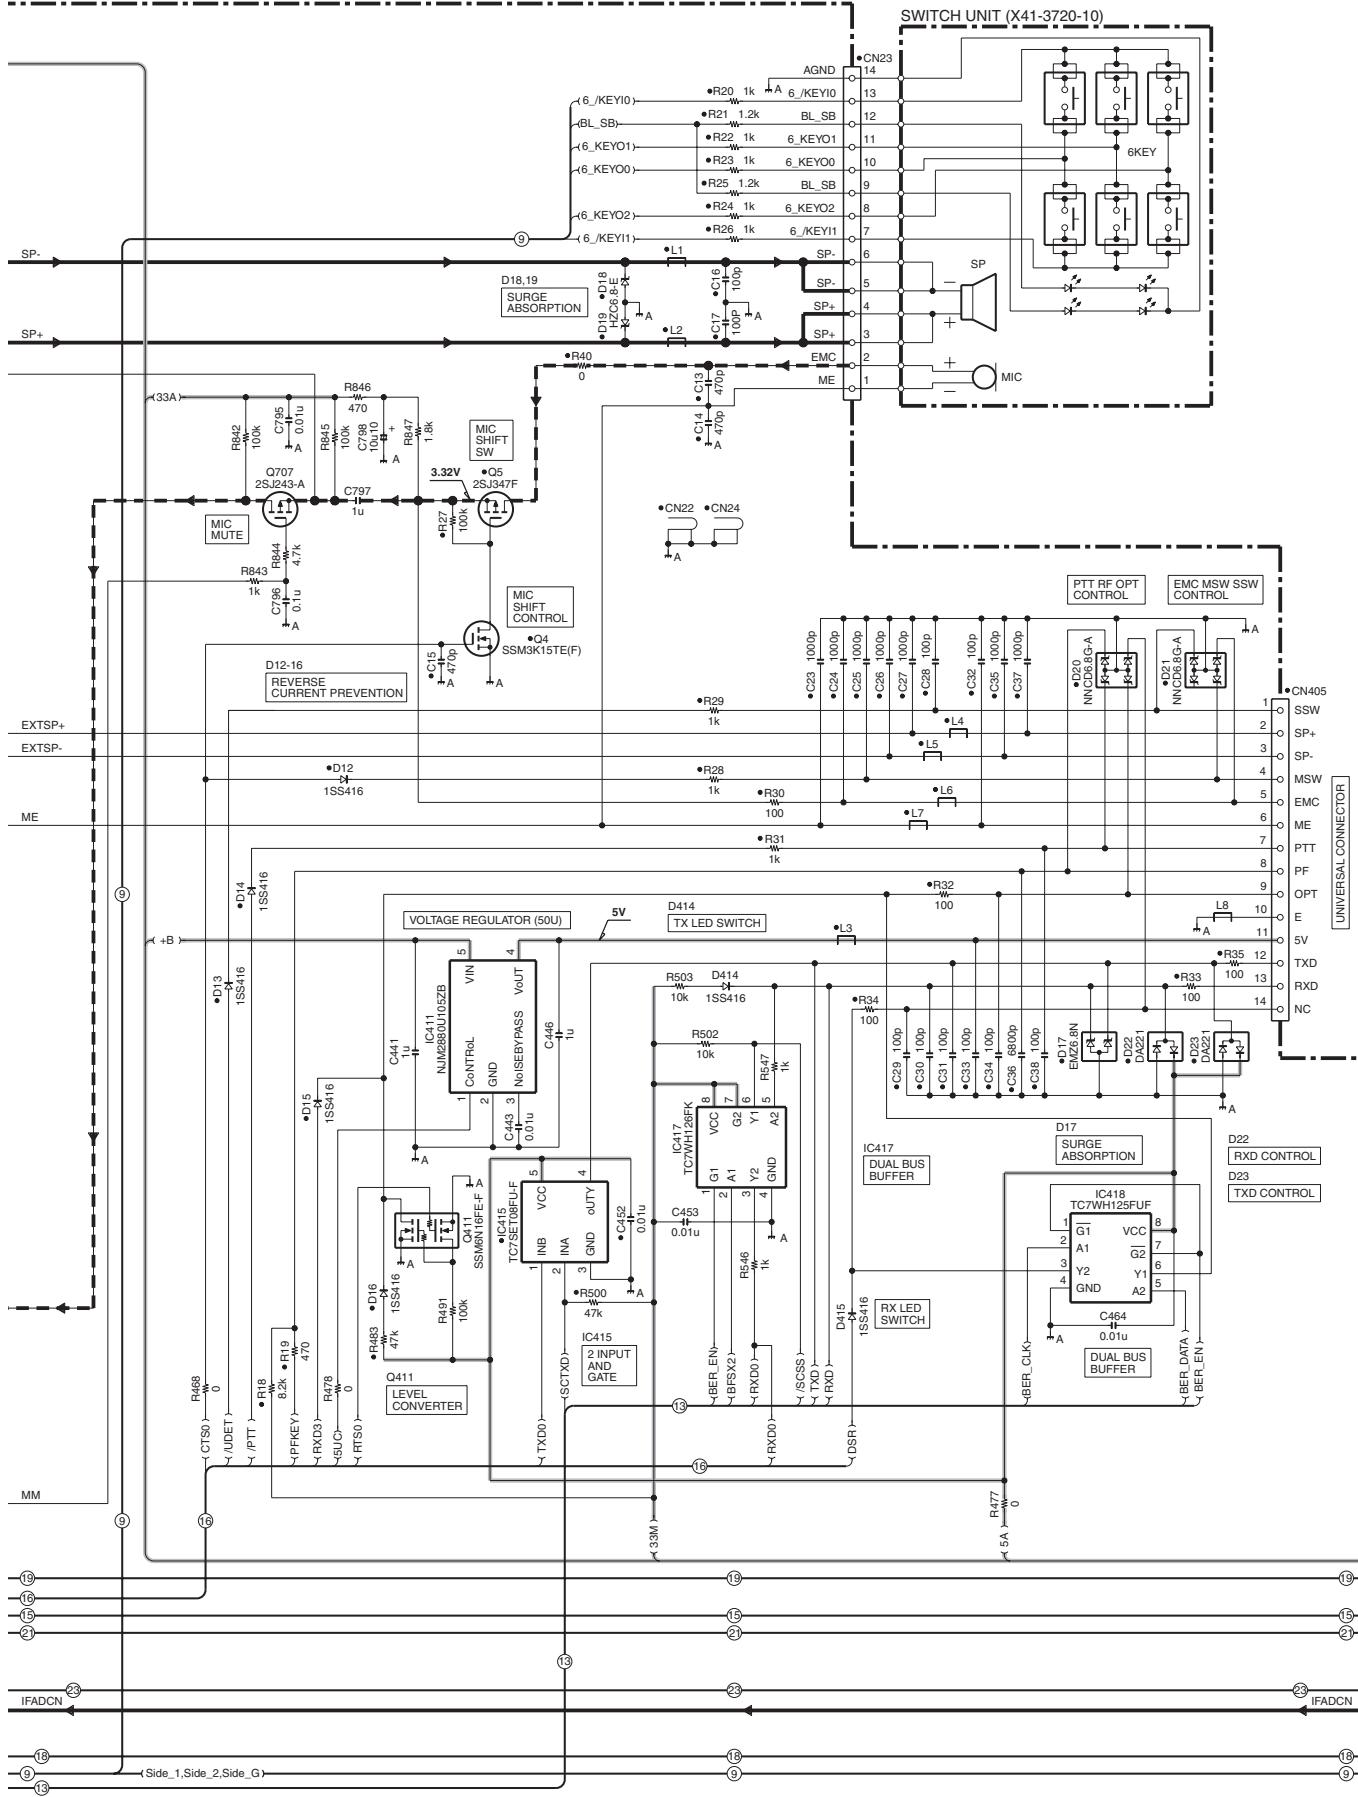

NX-200 SCHEMATIC DIAGRAM


CONTROL UNIT (X53-4260-XX)

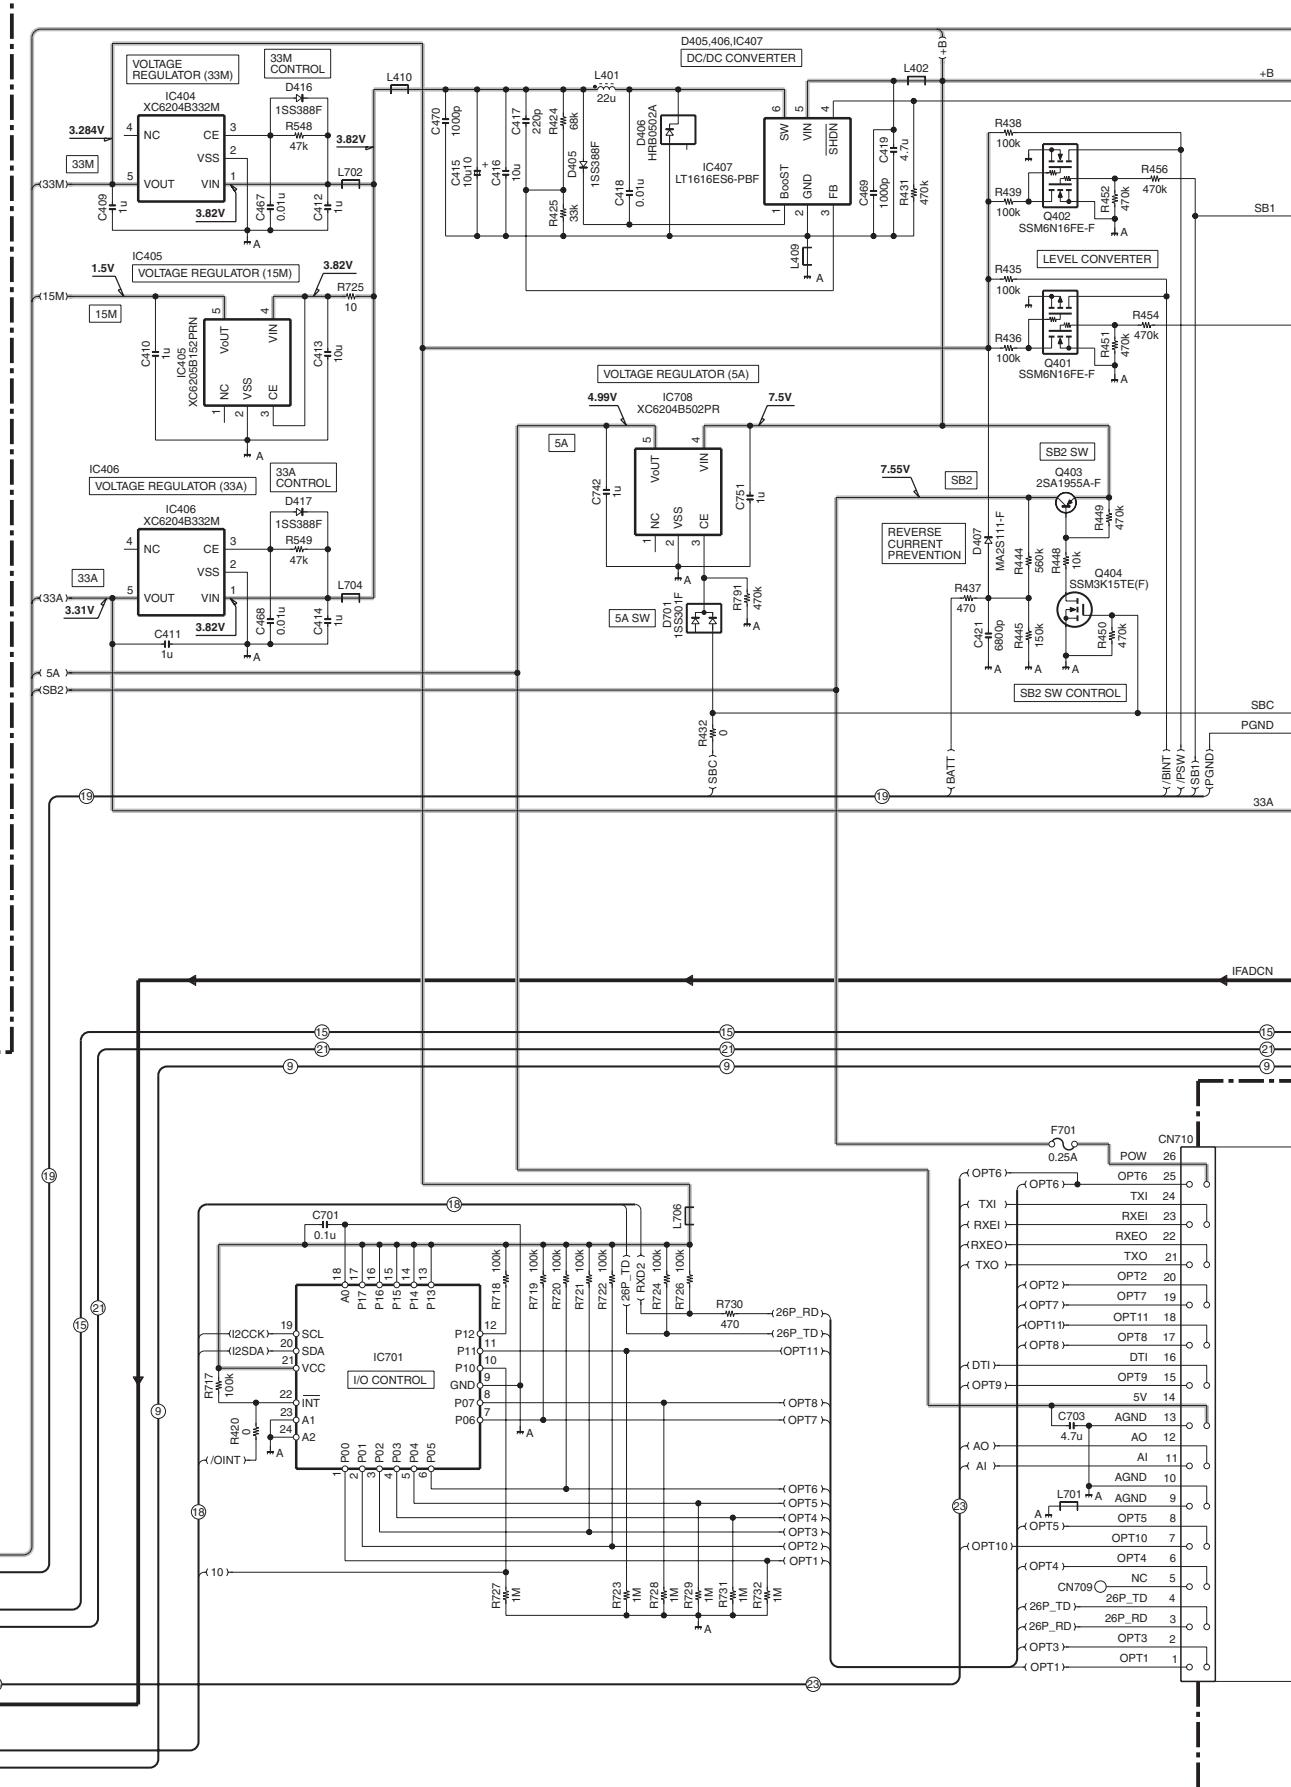

SCHEMATIC DIAGRAM NX-200


CONTROL UNIT (X53-4260-XX)

Note : The components marked with a dot (●) are parts of layer 1.

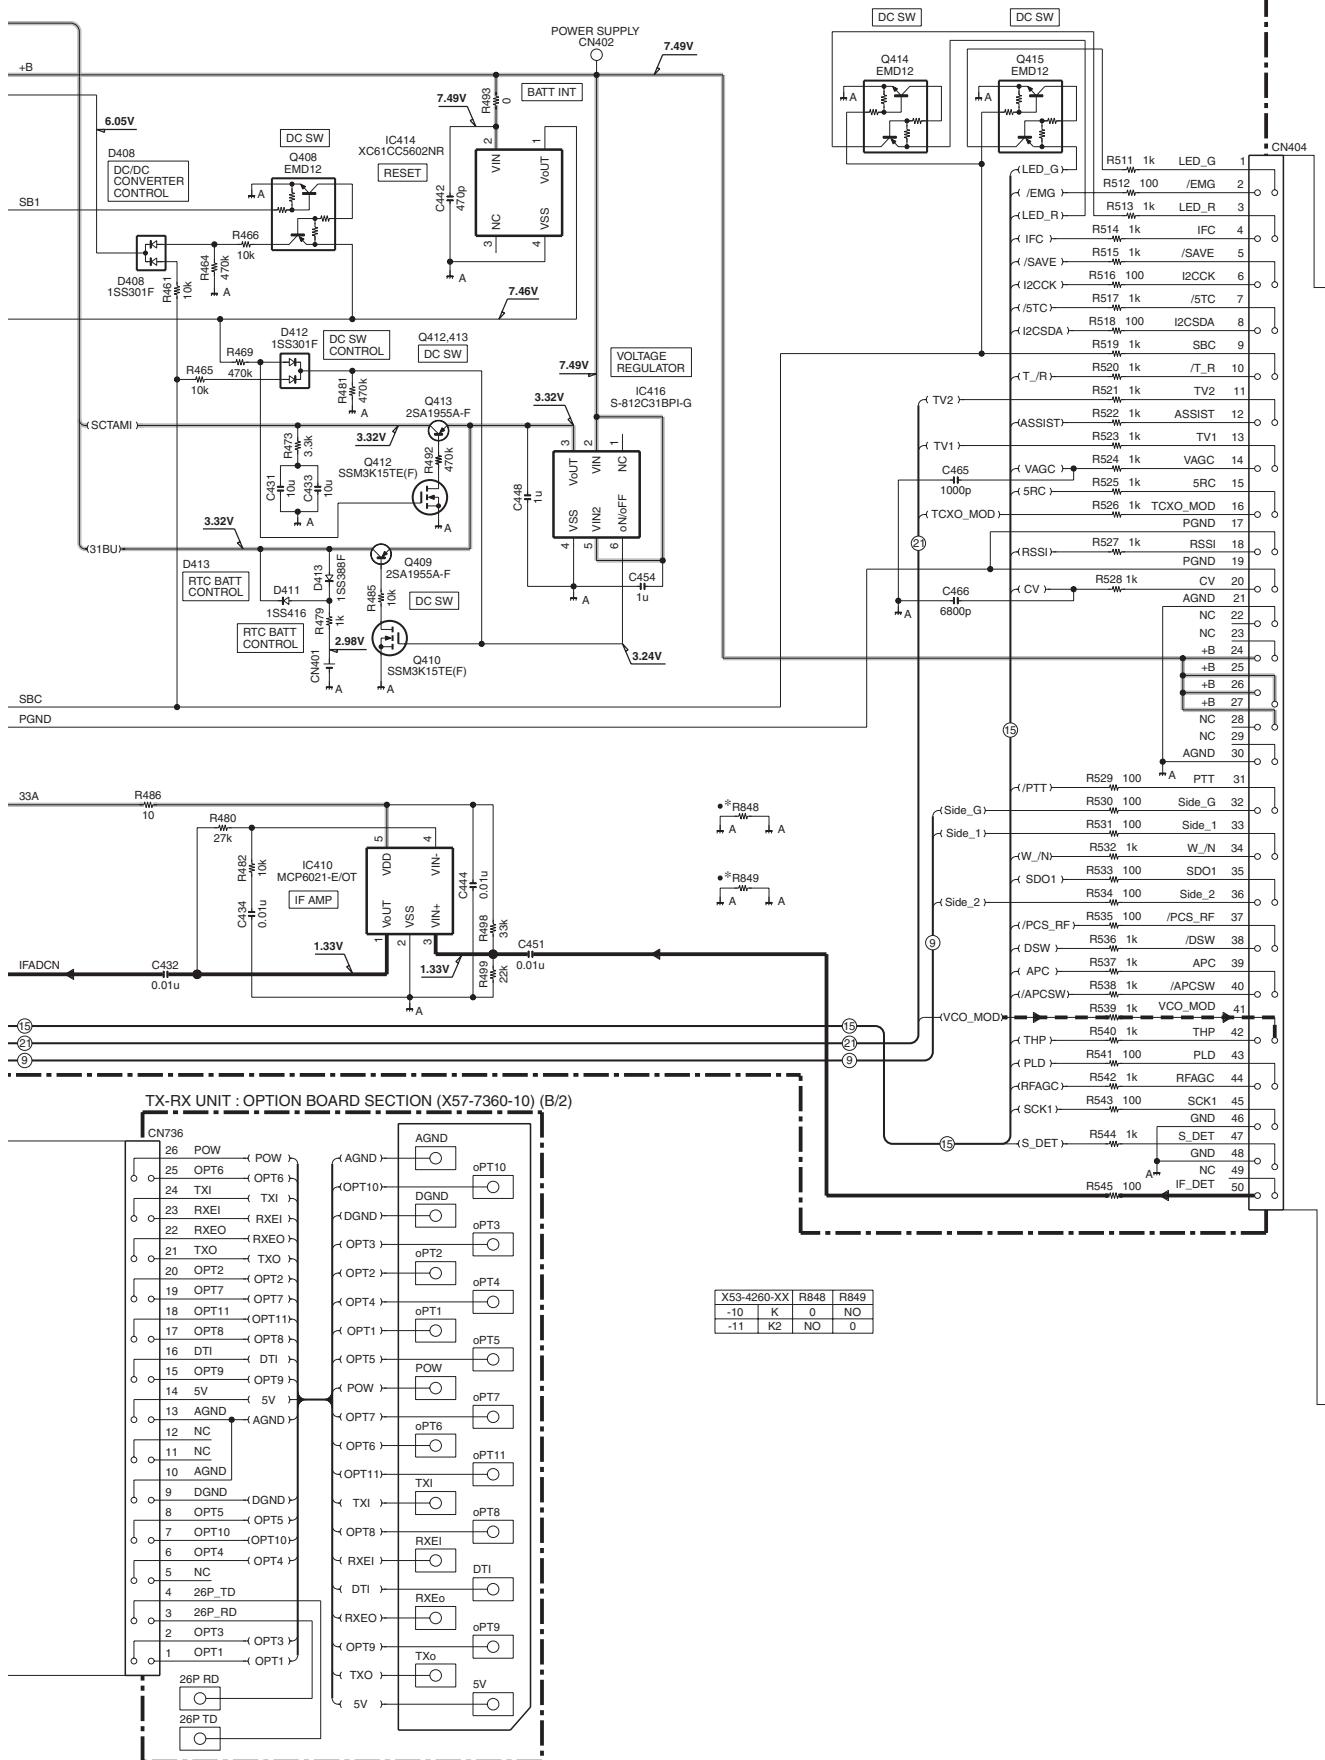


TX-RX UNIT(X57-7360-10) (A/2)-CN400

NX-200 SCHEMATIC DIAGRAM

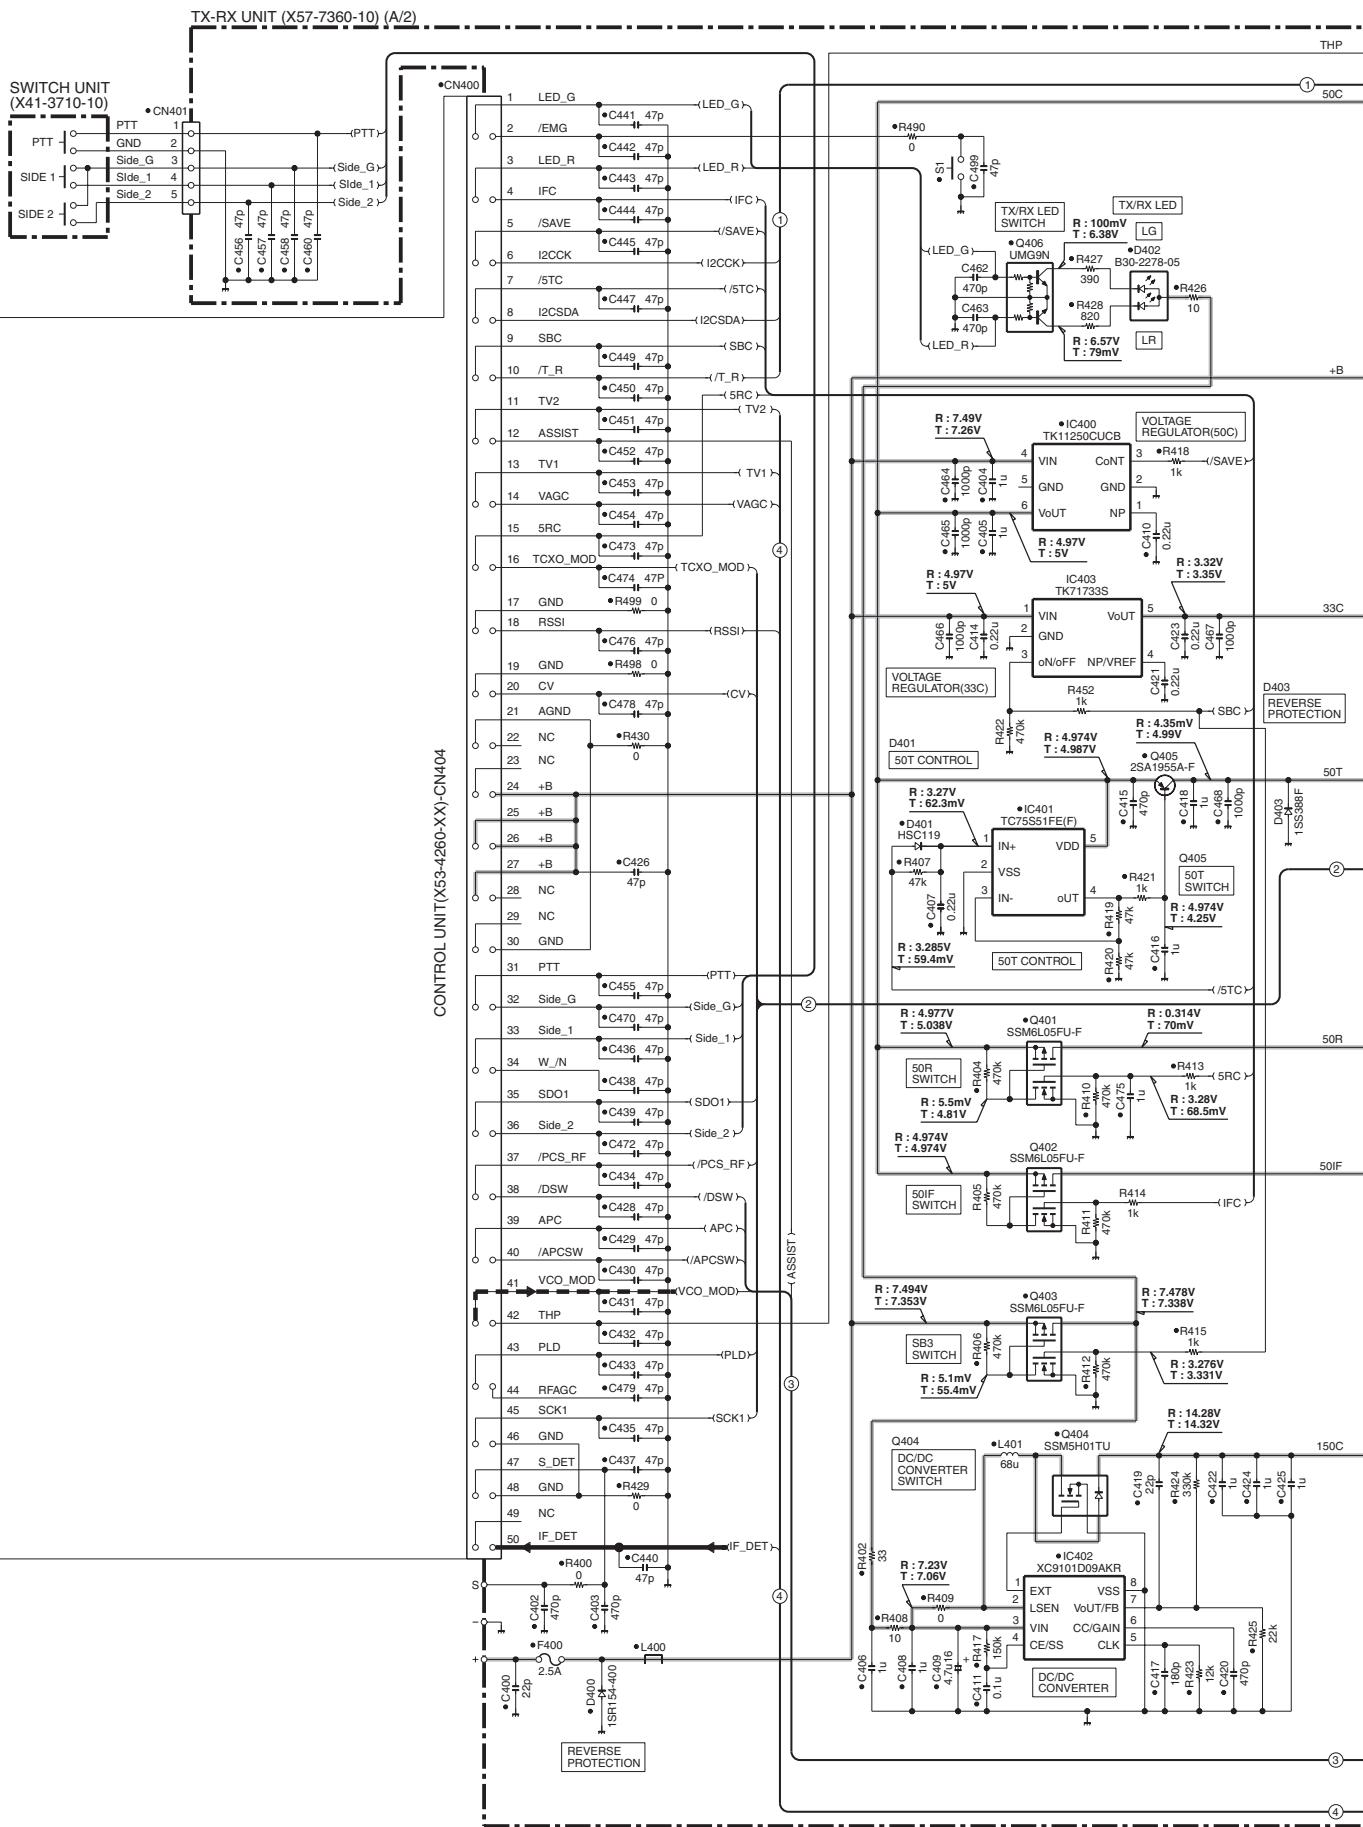

SCHEMATIC DIAGRAM NX-200

TX-RX UNIT (X57-7360-10) (A/2)

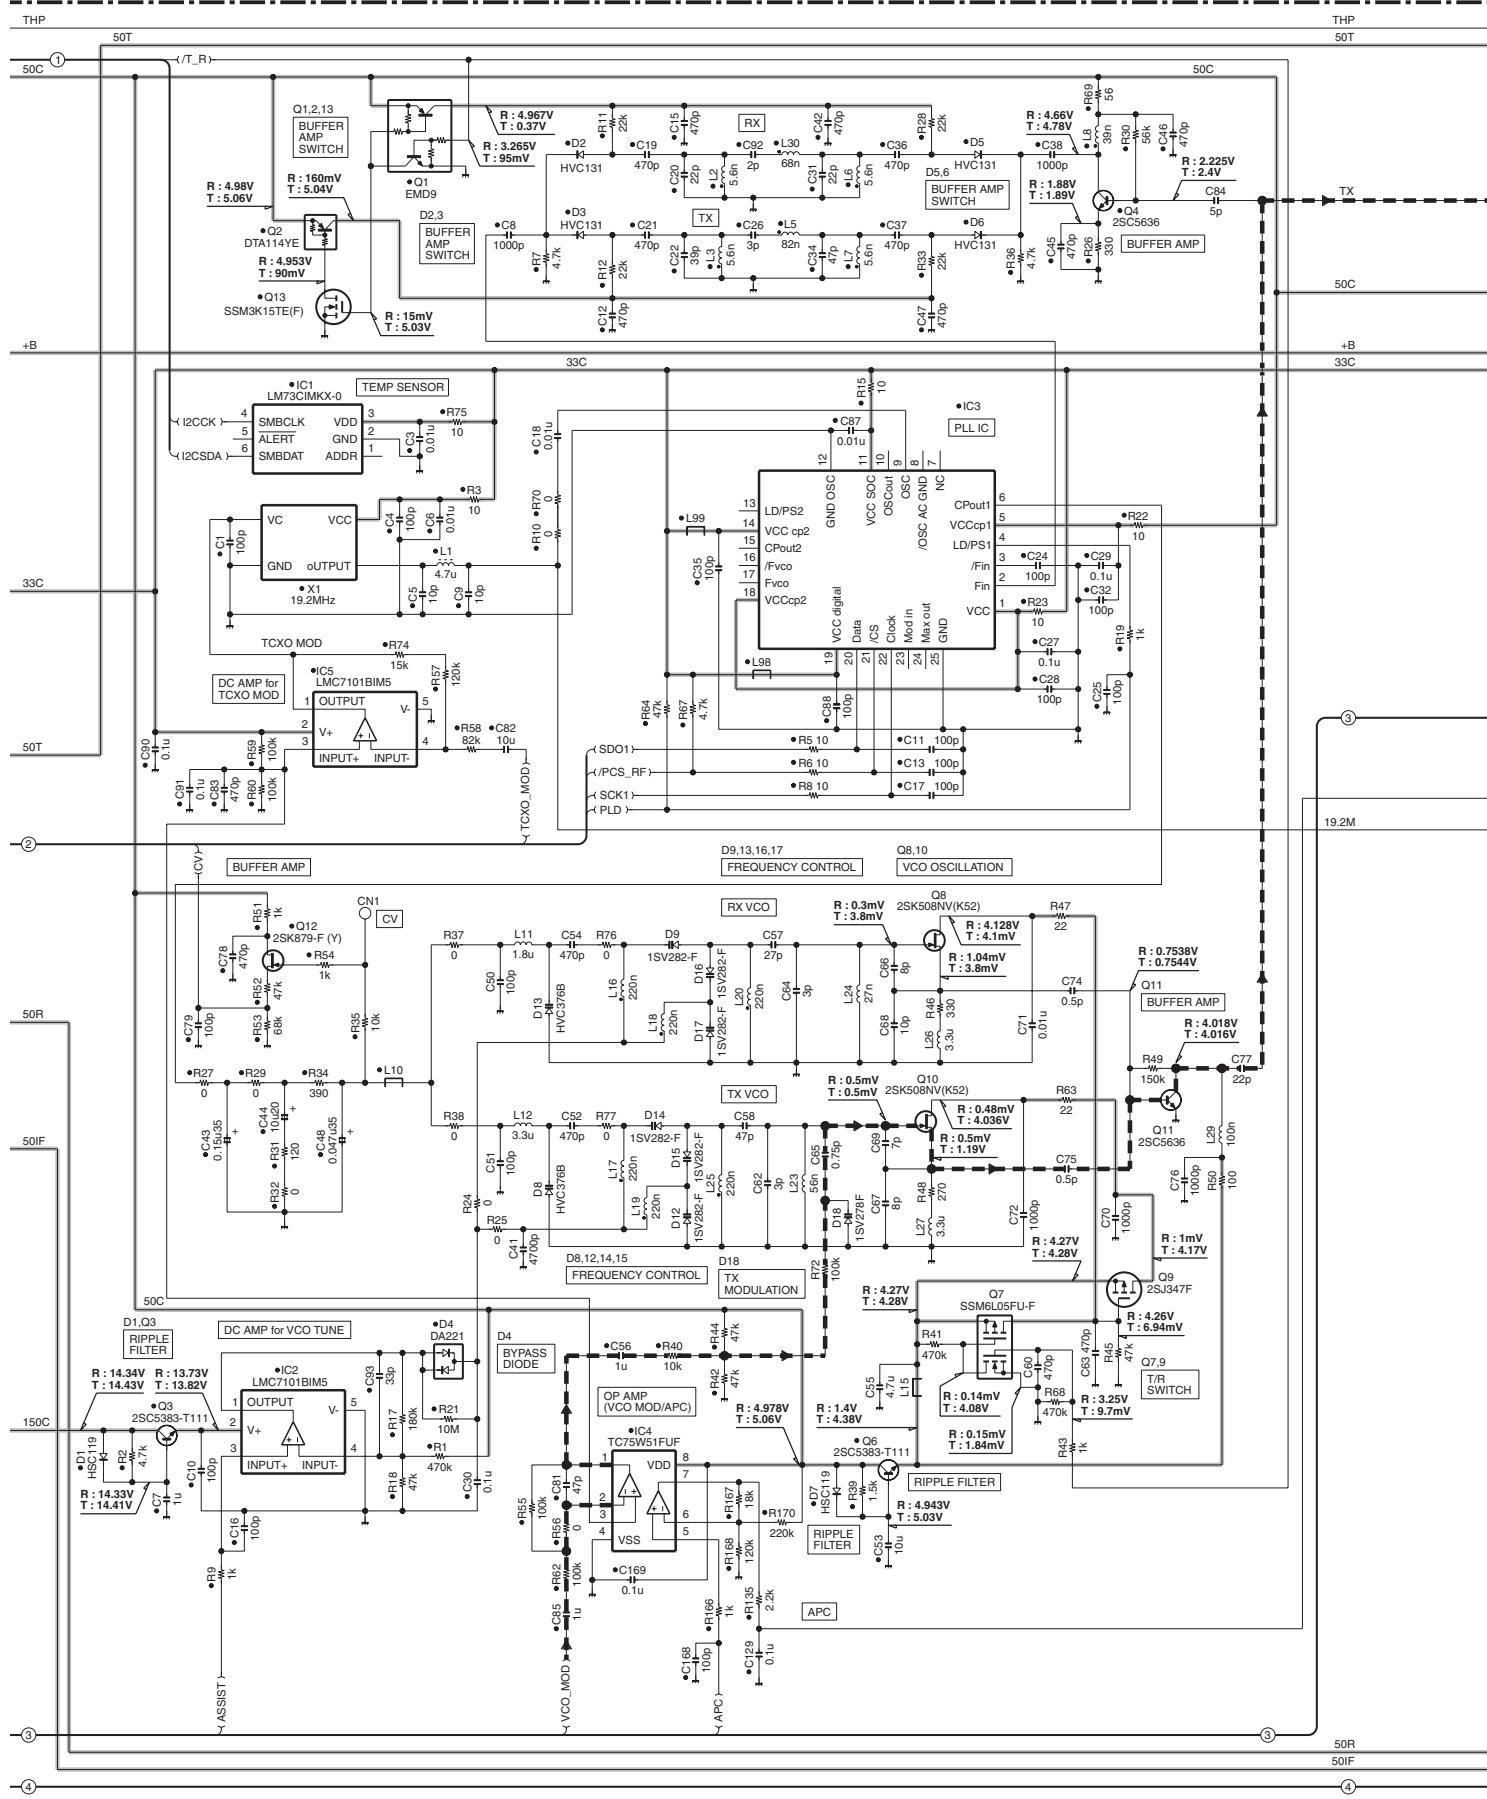

BI

BJ


BK

BL

BM

NX-200 SCHEMATIC DIAGRAM




TX-RX UNIT (X57-7360-10) (A/2)

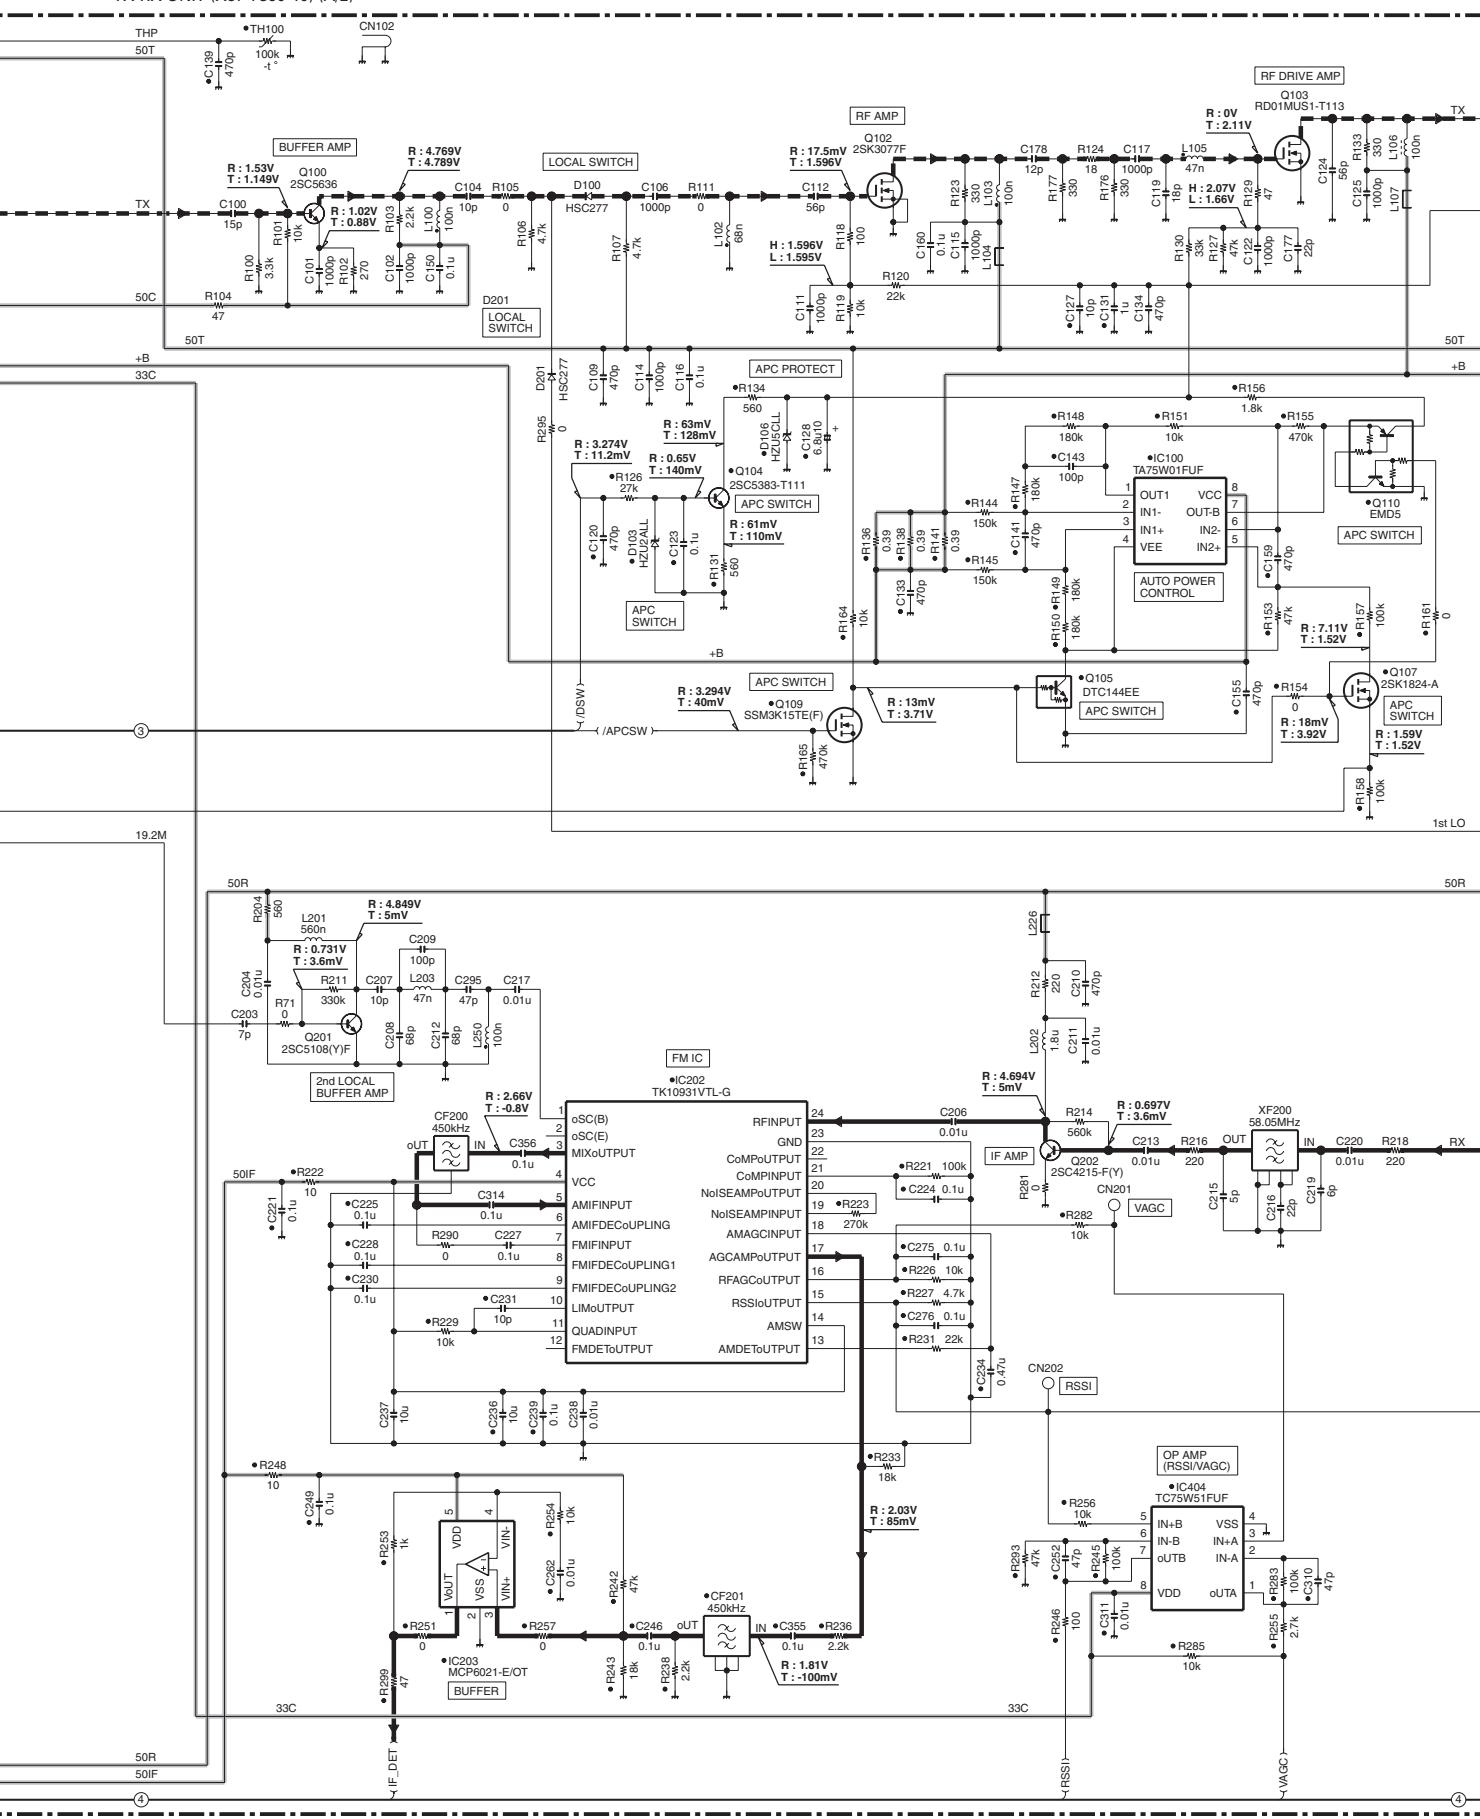


SCHEMATIC DIAGRAM NX-200

TX-RX UNIT (X57-7360-10) (A/2)


Note : The components marked with a dot (●) are parts of layer 1.

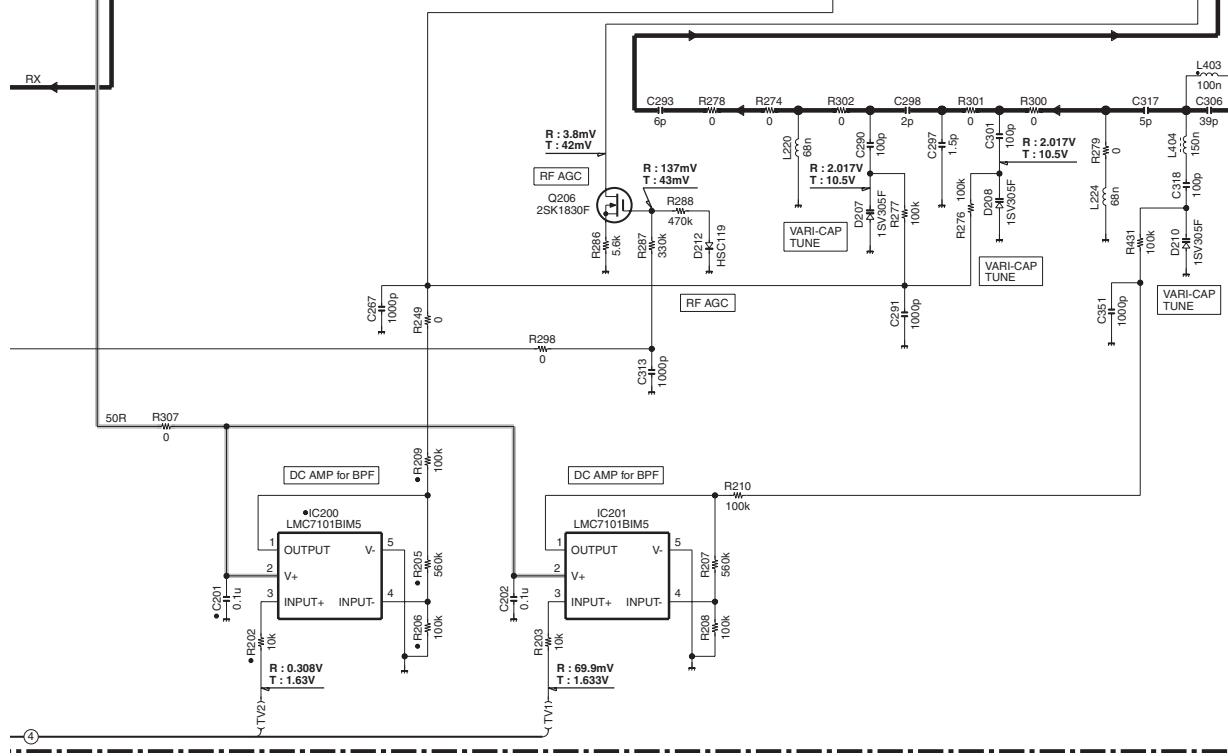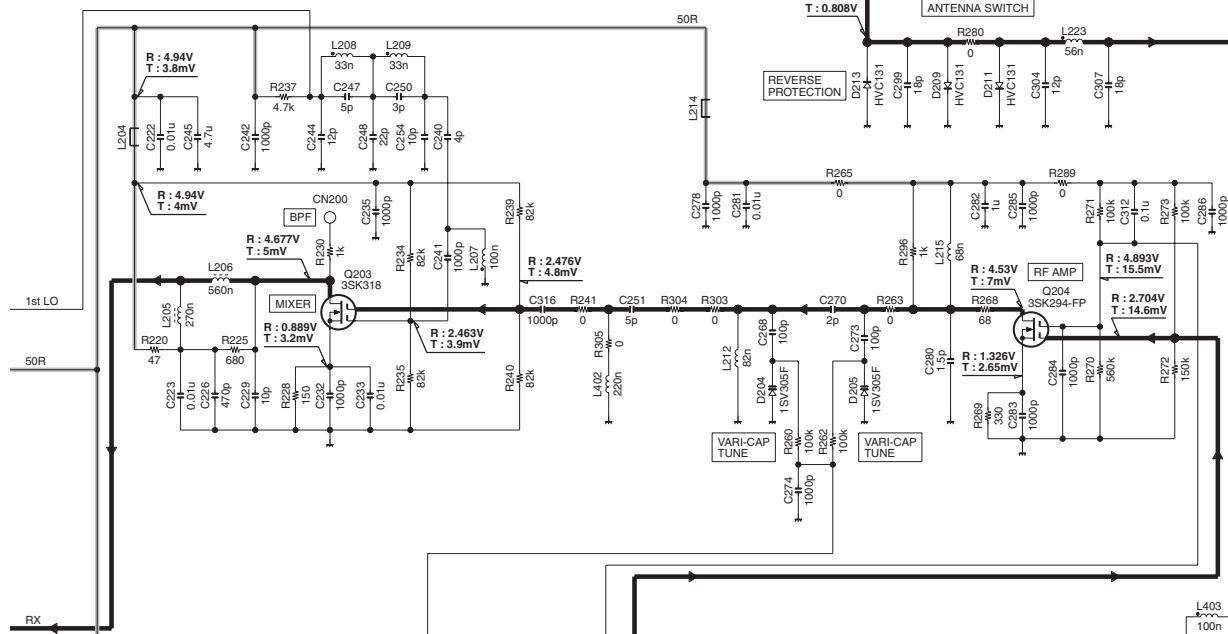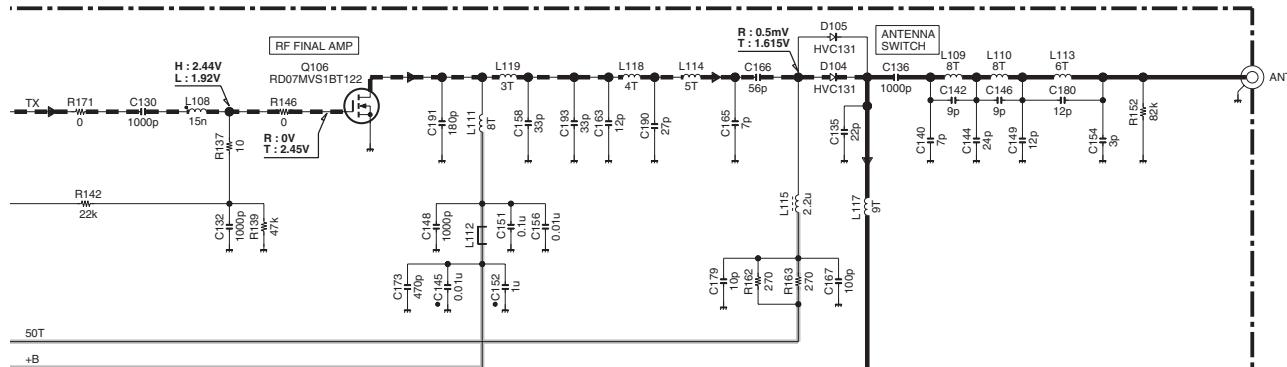

INTERCONNECTION DIAGRAM

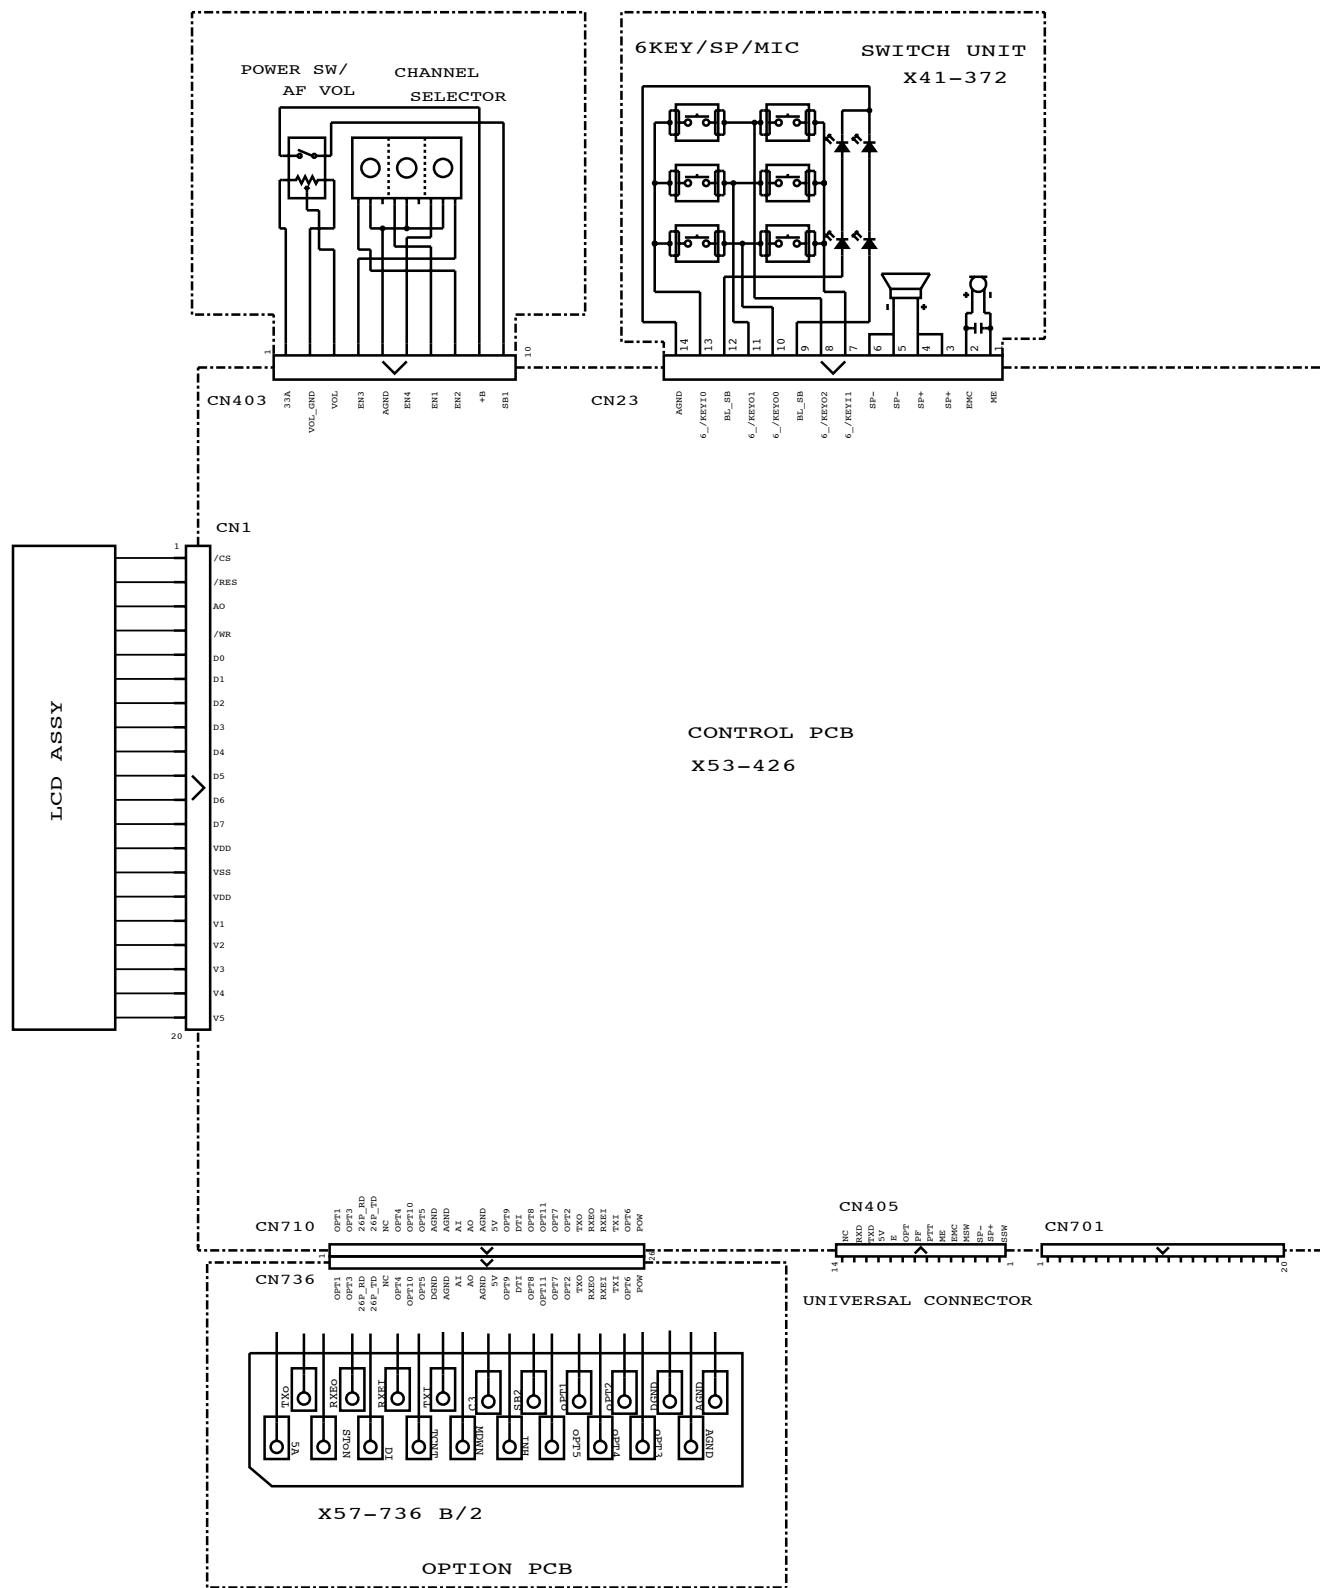


INTERCONNECTION DIAGRAM

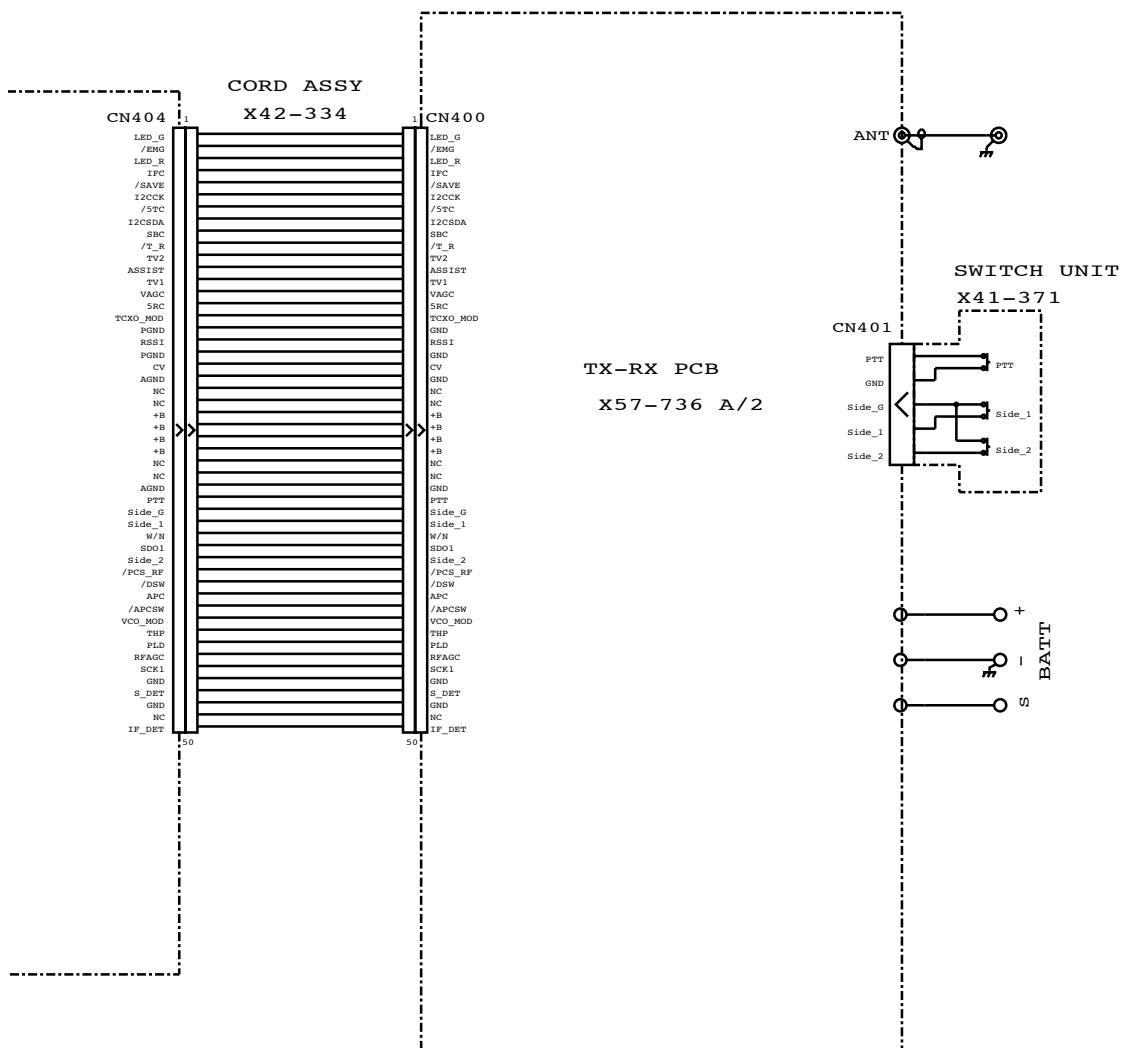


BLOCK DIAGRAM

X53-4260-XX (Control unit)

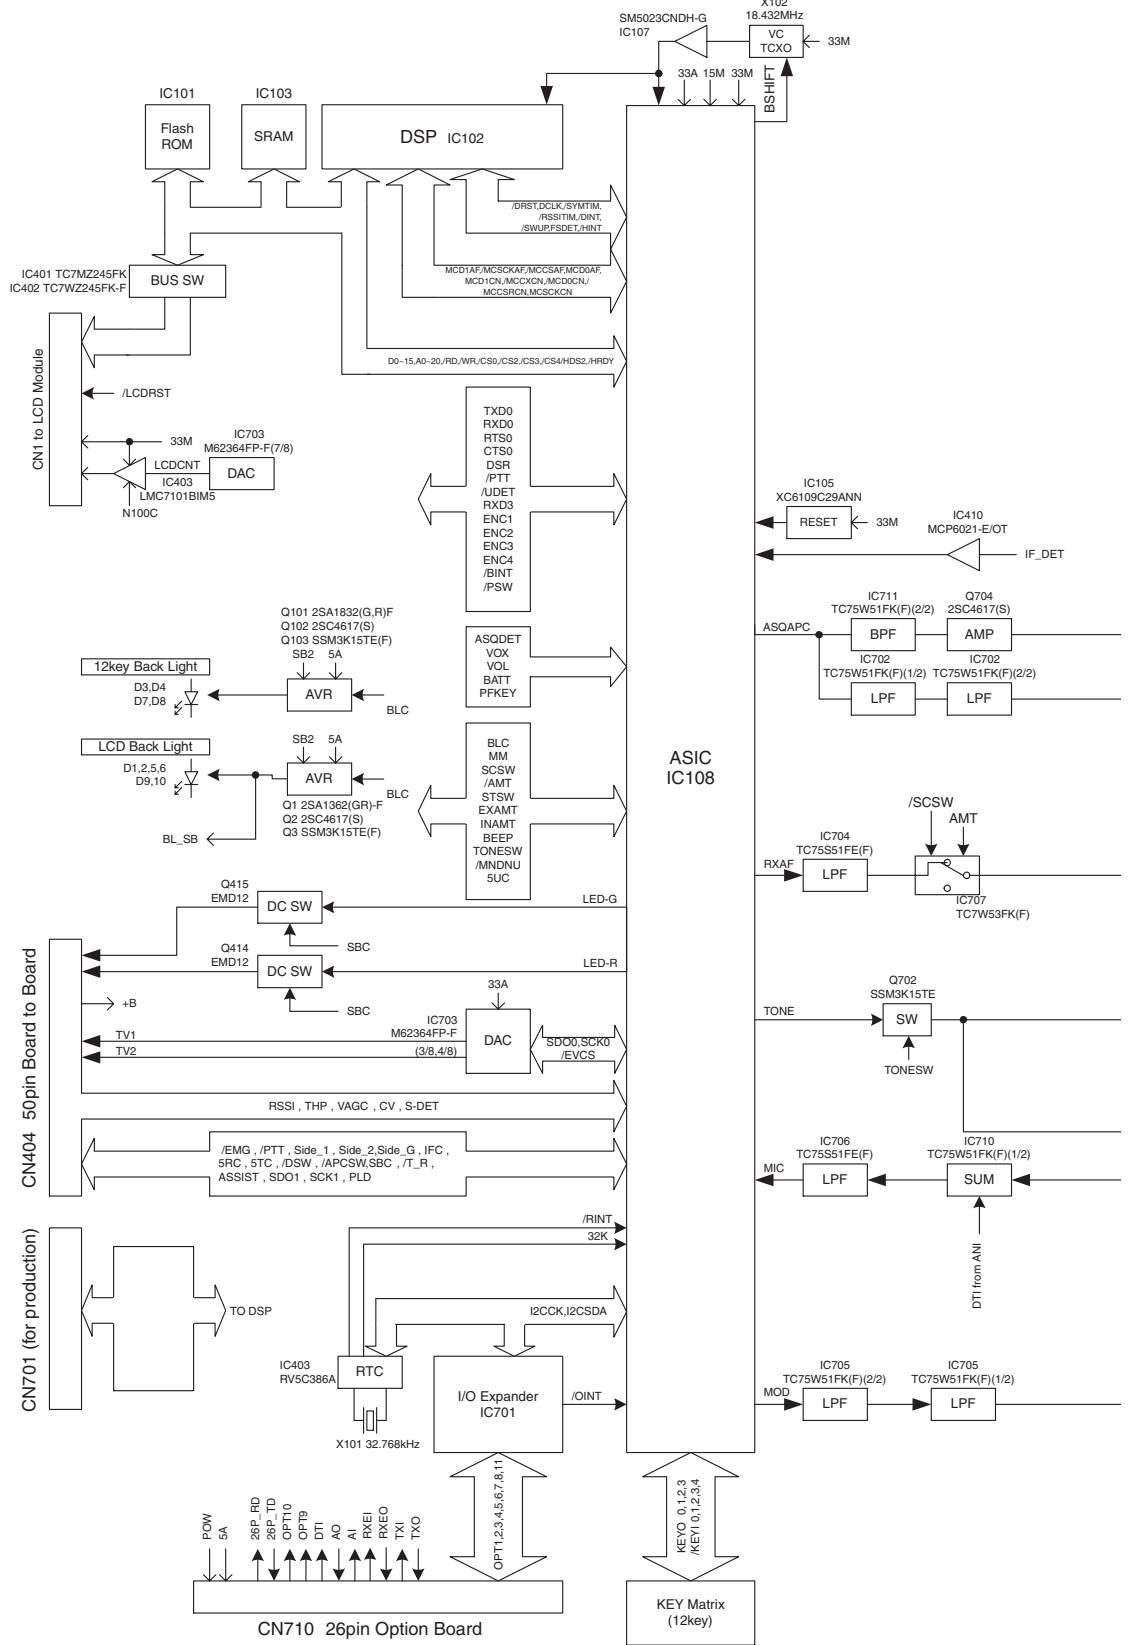


BLOCK DIAGRAM

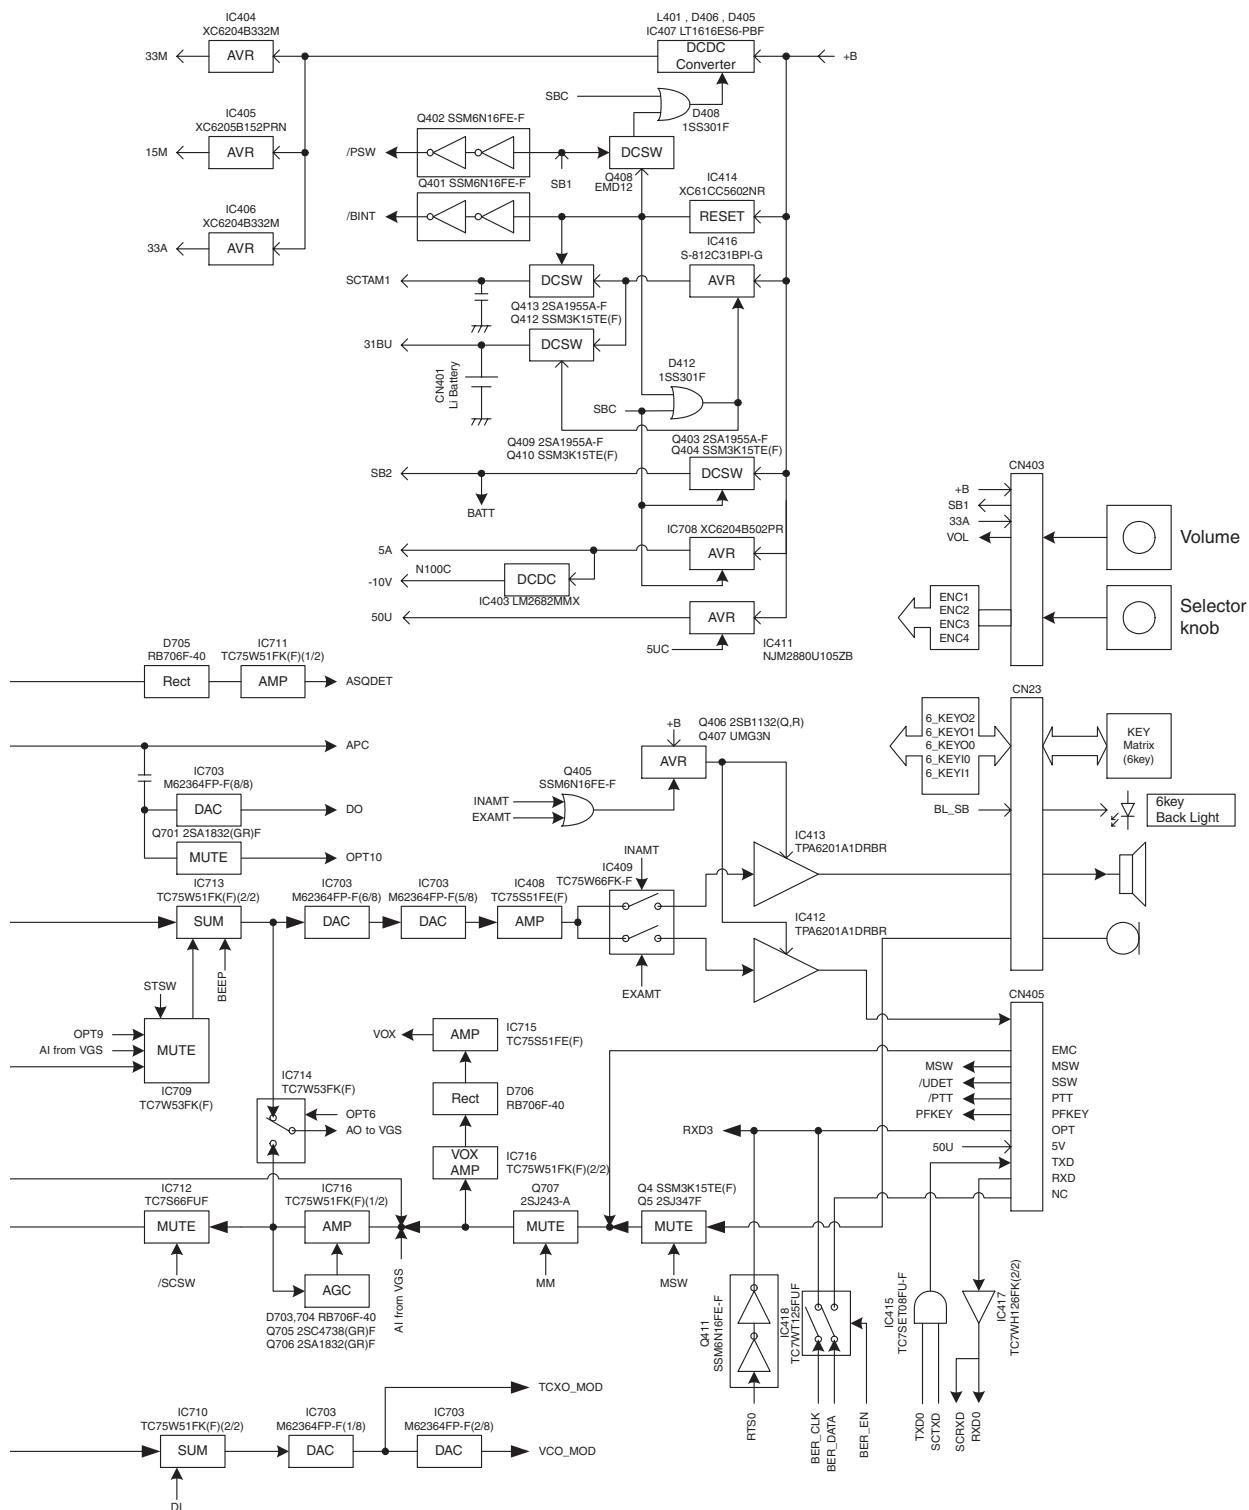


BLOCK DIAGRAM



X57-7360-10 (TX-RX unit)

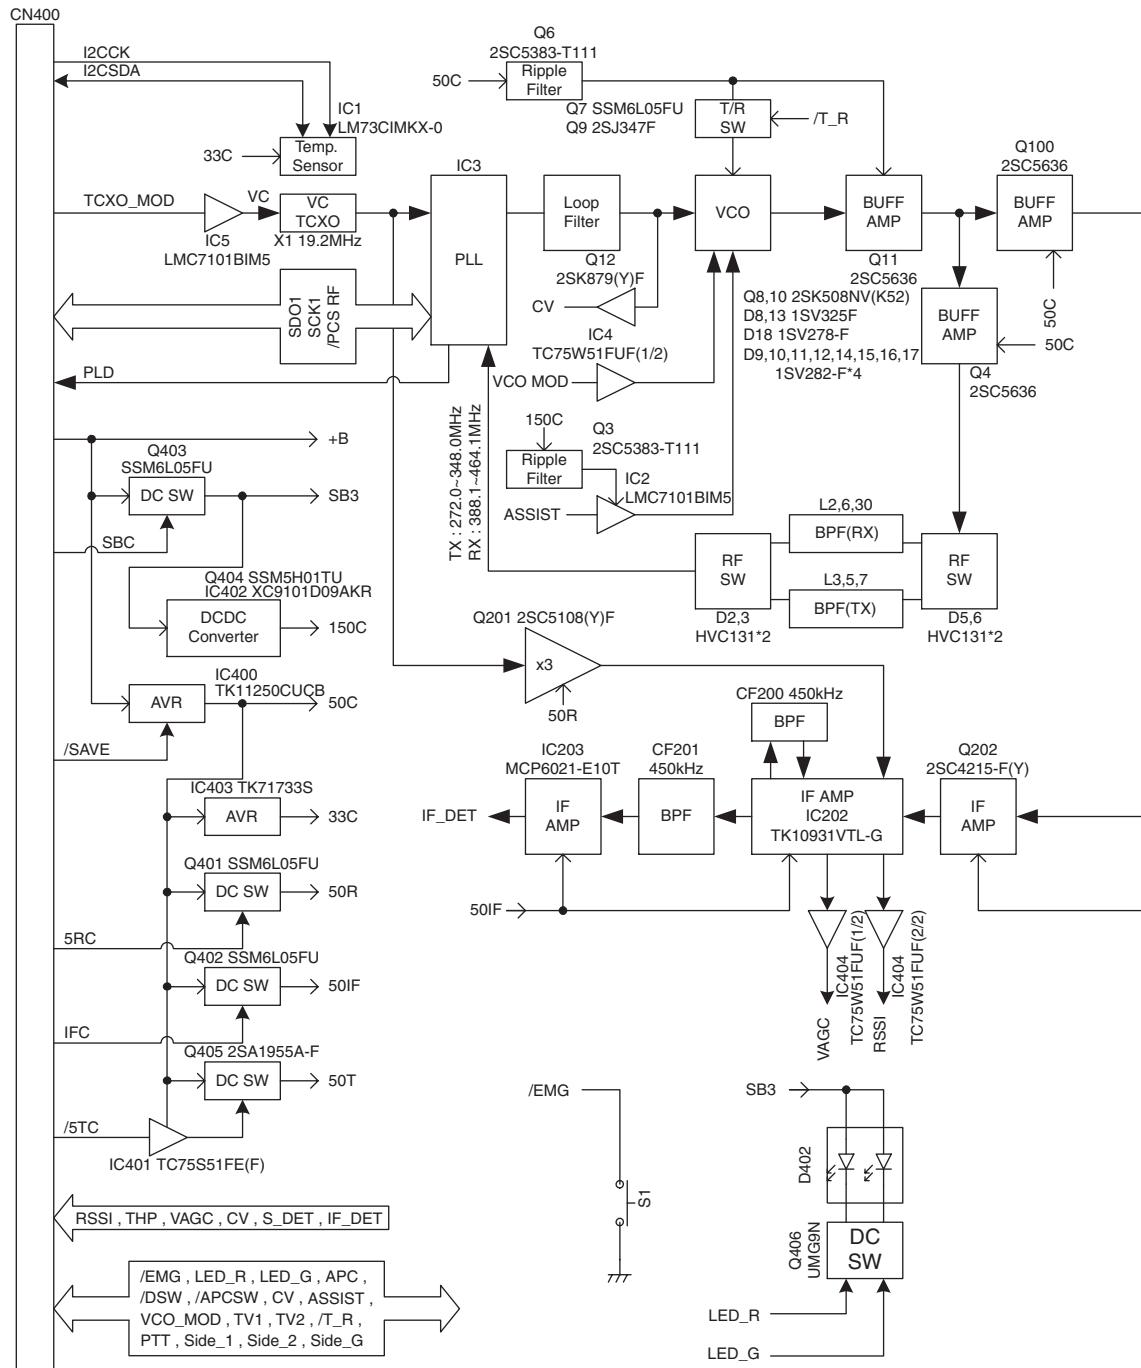

BLOCK DIAGRAM

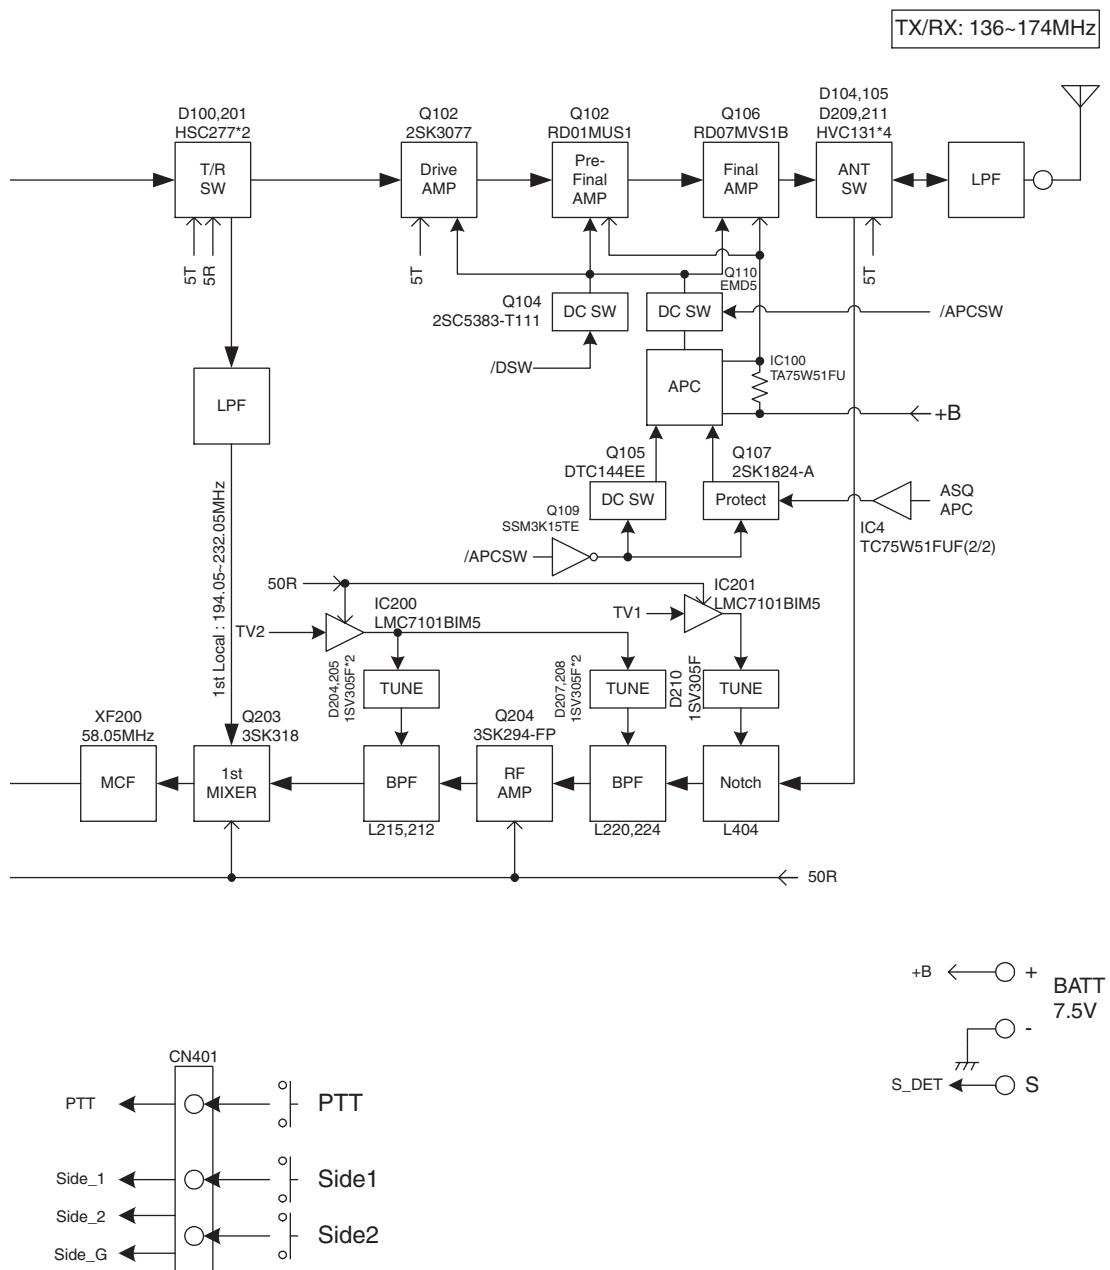

LEVEL DIAGRAM

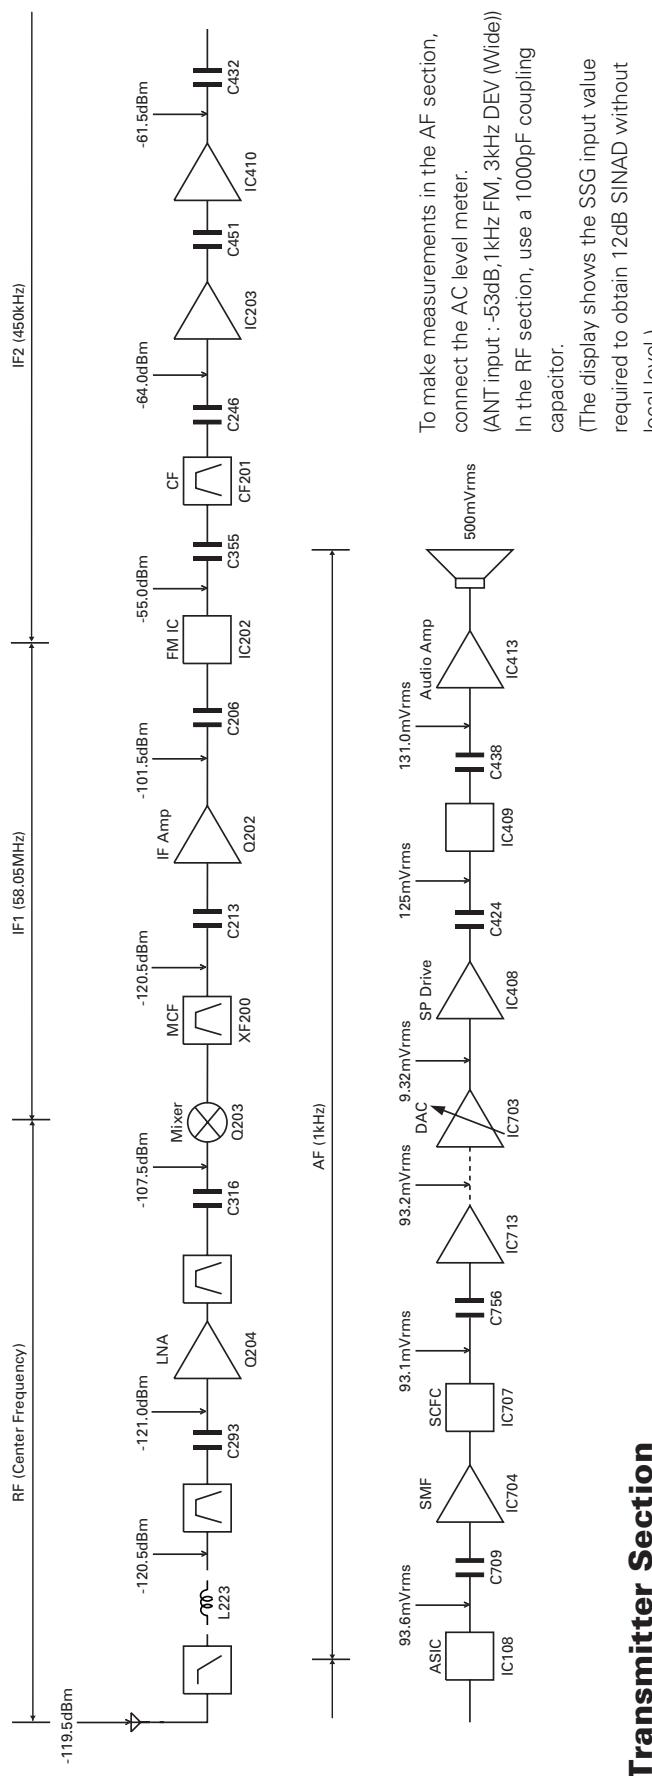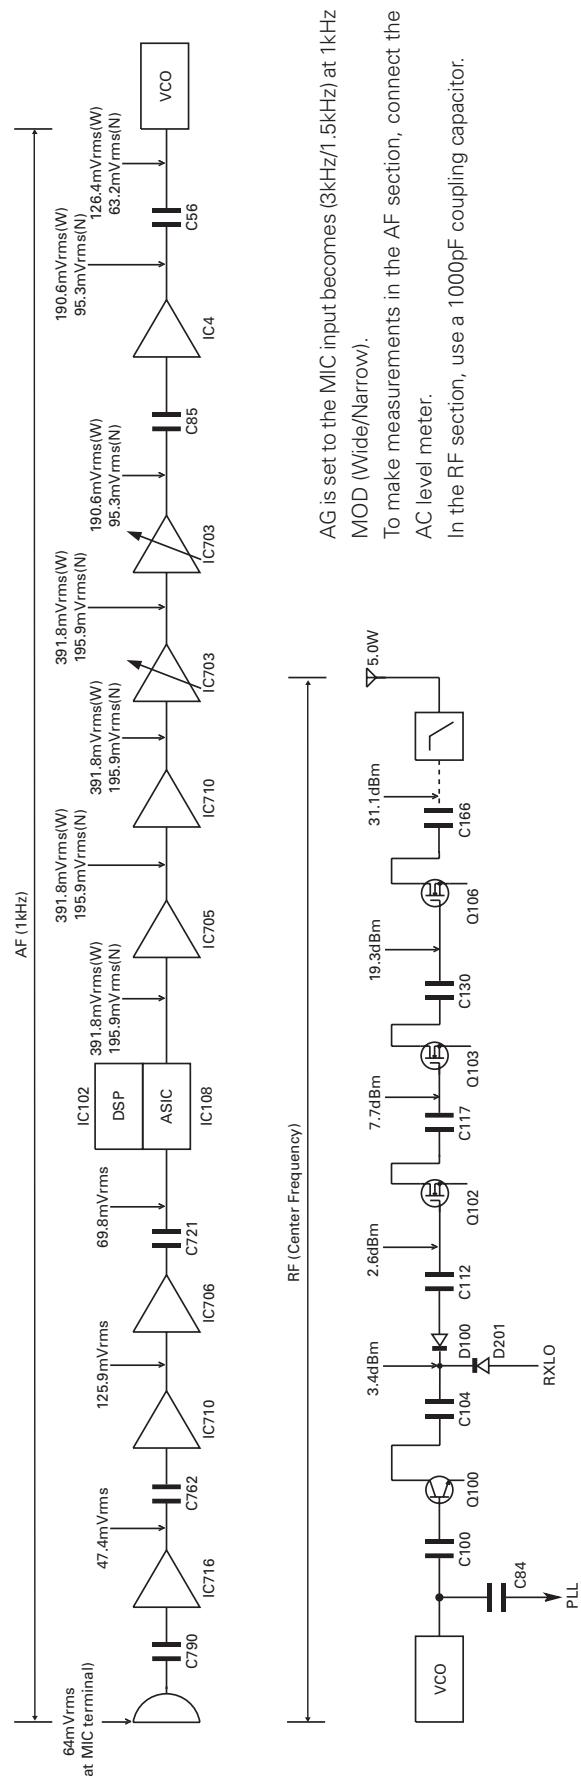Receiver Section**Transmitter Section**

OPTIONAL ACCESSORIES

KNB-47L (Li-ion BATTERY PACK)


■ External View



■ Specifications

Voltage 7.4V
Battery capacity ... 1950mAh

■ Schematic Diagram

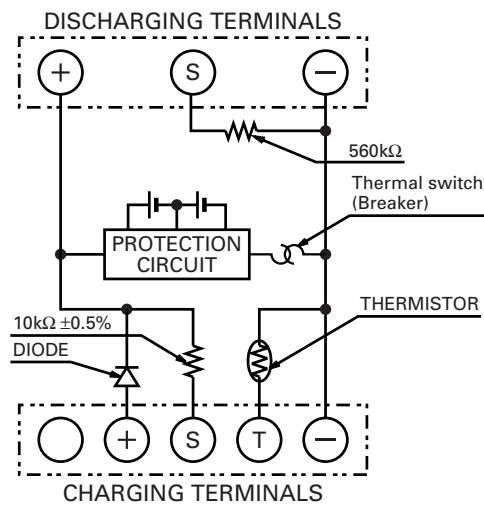

KNB-48L (Li-ion BATTERY PACK)


■ External View



■ Specifications

Voltage 7.4V
Battery capacity ... 2550mAh

■ Schematic Diagram

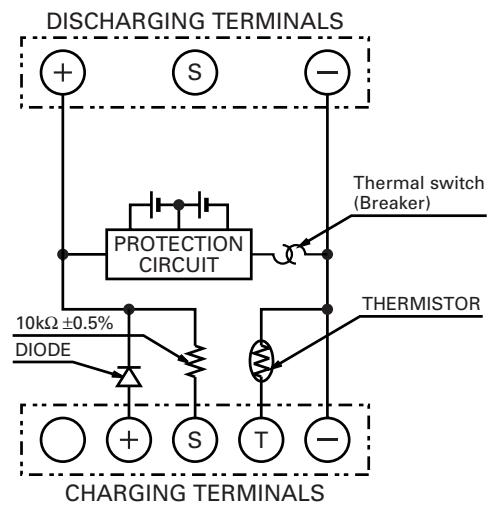

NX-200

SPECIFICATIONS

GENERAL

Models	K : Basic Model K2 : w / 12-key Model
Frequency Range	136~174 MHz
Number of Channels	512
Zones	128
Max. Channels per Zone	250
Channel Spacing	Analog : 12.5/25 kHz Digital : 6.25/12.5 kHz
Operating Voltage	7.5V DC ± 20%
Battery Life (with KNB-48L)	5-5-90 duty cycle : more than 12.5 hours 10-10-80 duty cycle : more than 8.5 hours
Operating Temperature Range	-22°F to +140°F (-30°C to +60°C)
Frequency Stability	±2.0 ppm
Antenna Impedance	50Ω
Dimensions (W x H x D) (Projections not included)	
Radio only	2.28" x 5.02" x 1.63" (58 x 127.5 x 41.3 mm)
with KNB-47L	2.28" x 5.02" x 1.63" (58 x 127.5 x 41.3 mm)
with KNB-48L	2.28" x 5.02" x 1.91" (58 x 127.5 x 48.5 mm)
Weight	
Radio only	8.82 oz (250g)
with KNB-47L	13.23 oz (375g)
with KNB-48L	14.29 oz (405g)

RECEIVER

Sensitivity	Digital @6.25kHz (3% BER) : 0.20µV Digital @12.5kHz (3% BER) : 0.25µV Analog (12dB SINAD) : 0.25µV
Selectivity	Analog @25kHz : 72dB Analog @12.5kHz : 65dB
Intermodulation Distortion	Analog : 70dB (±50, 100kHz)
Spurious Response	Analog : 70dB
Audio Distortion	Less than 3%
Audio Output	500mW / 8Ω

TRANSMITTER

RF Power Output	5W / 1W
Spurious Response	70dB
FM Hum and Noise	Analog @25kHz : 45dB Analog @12.5kHz : 40dB
Audio Distortion	Less than 3%
Modulation	16K0F3E, 11K0F3E, 8K30F1E, 8K30F1D, 8K30F7W, 4K00F1E, 4K00F1D, 4K00F7W, 4K00F2D

Analog measurements made per TIA/EIA 603

KENWOOD reserves the right to change specifications without prior notice or obligation.

Kenwood Corporation

2967-3, Ishikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

Kenwood U.S.A. Corporation

P.O. BOX 22745, 2201 East Dominguez Street, Long Beach,
CA 90801-5745, U.S.A.

Kenwood Electronics Canada Inc.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

Kenwood Electronics Deutschland GmbH

Rembrücker Str. 15, 63150 Heusenstamm, Germany

Kenwood Electronics Belgium N.V.

Leuvensesteenweg 248 J, 1800 Vilvoorde, Belgium

Kenwood Electronics France S.A.

L'Etoile Paris Nord 2, 50 Allée des Impressionnistes,
Bp 58416 Villepinte, 95944 Roissy Ch De Gaulle Cedex

Kenwood Electronics UK Limited

KENWOOD House, Dwight Road, Watford, Herts.,
WD18 9EB United Kingdom



Kenwood Electronics Europe B.V.

Amsterdamseweg 37, 1422 AC Uithoorn, The Netherlands

Kenwood Electronics Italia S.p.A.

Via G. Sirtori, 7/9 20129 Milano, Italy

Kenwood Ibérica, S.A.

Bolivia, 239-08020 Barcelona, Spain

Kenwood Electronics Australia Pty. Ltd.

(A.C.N. 001 499 074)
16 Giffnock Avenue, Centrecourt Estate, North Ryde, N.S.W. 2113 Australia

Kenwood Electronics (Hong Kong) Ltd.

Unit 3712-3724, Level 37, Tower one Metroplaza, 223 Hing Fong Road,
Kwai Fong, N.T., Hong Kong

Kenwood Electronics Singapore Pte Ltd

1 Ang Mo Kio Street 63, Singapore 569110

NX-200


PC BOARD

PC BOARD


NX-200

CONTROL UNIT (X53-4260-XX) -10: K, -11: K2
Component side view (J79-0131-19)

CONTROL UNIT (X53-4260-XX) -10: K, -11: K2
Component side view (J79-0131-19)

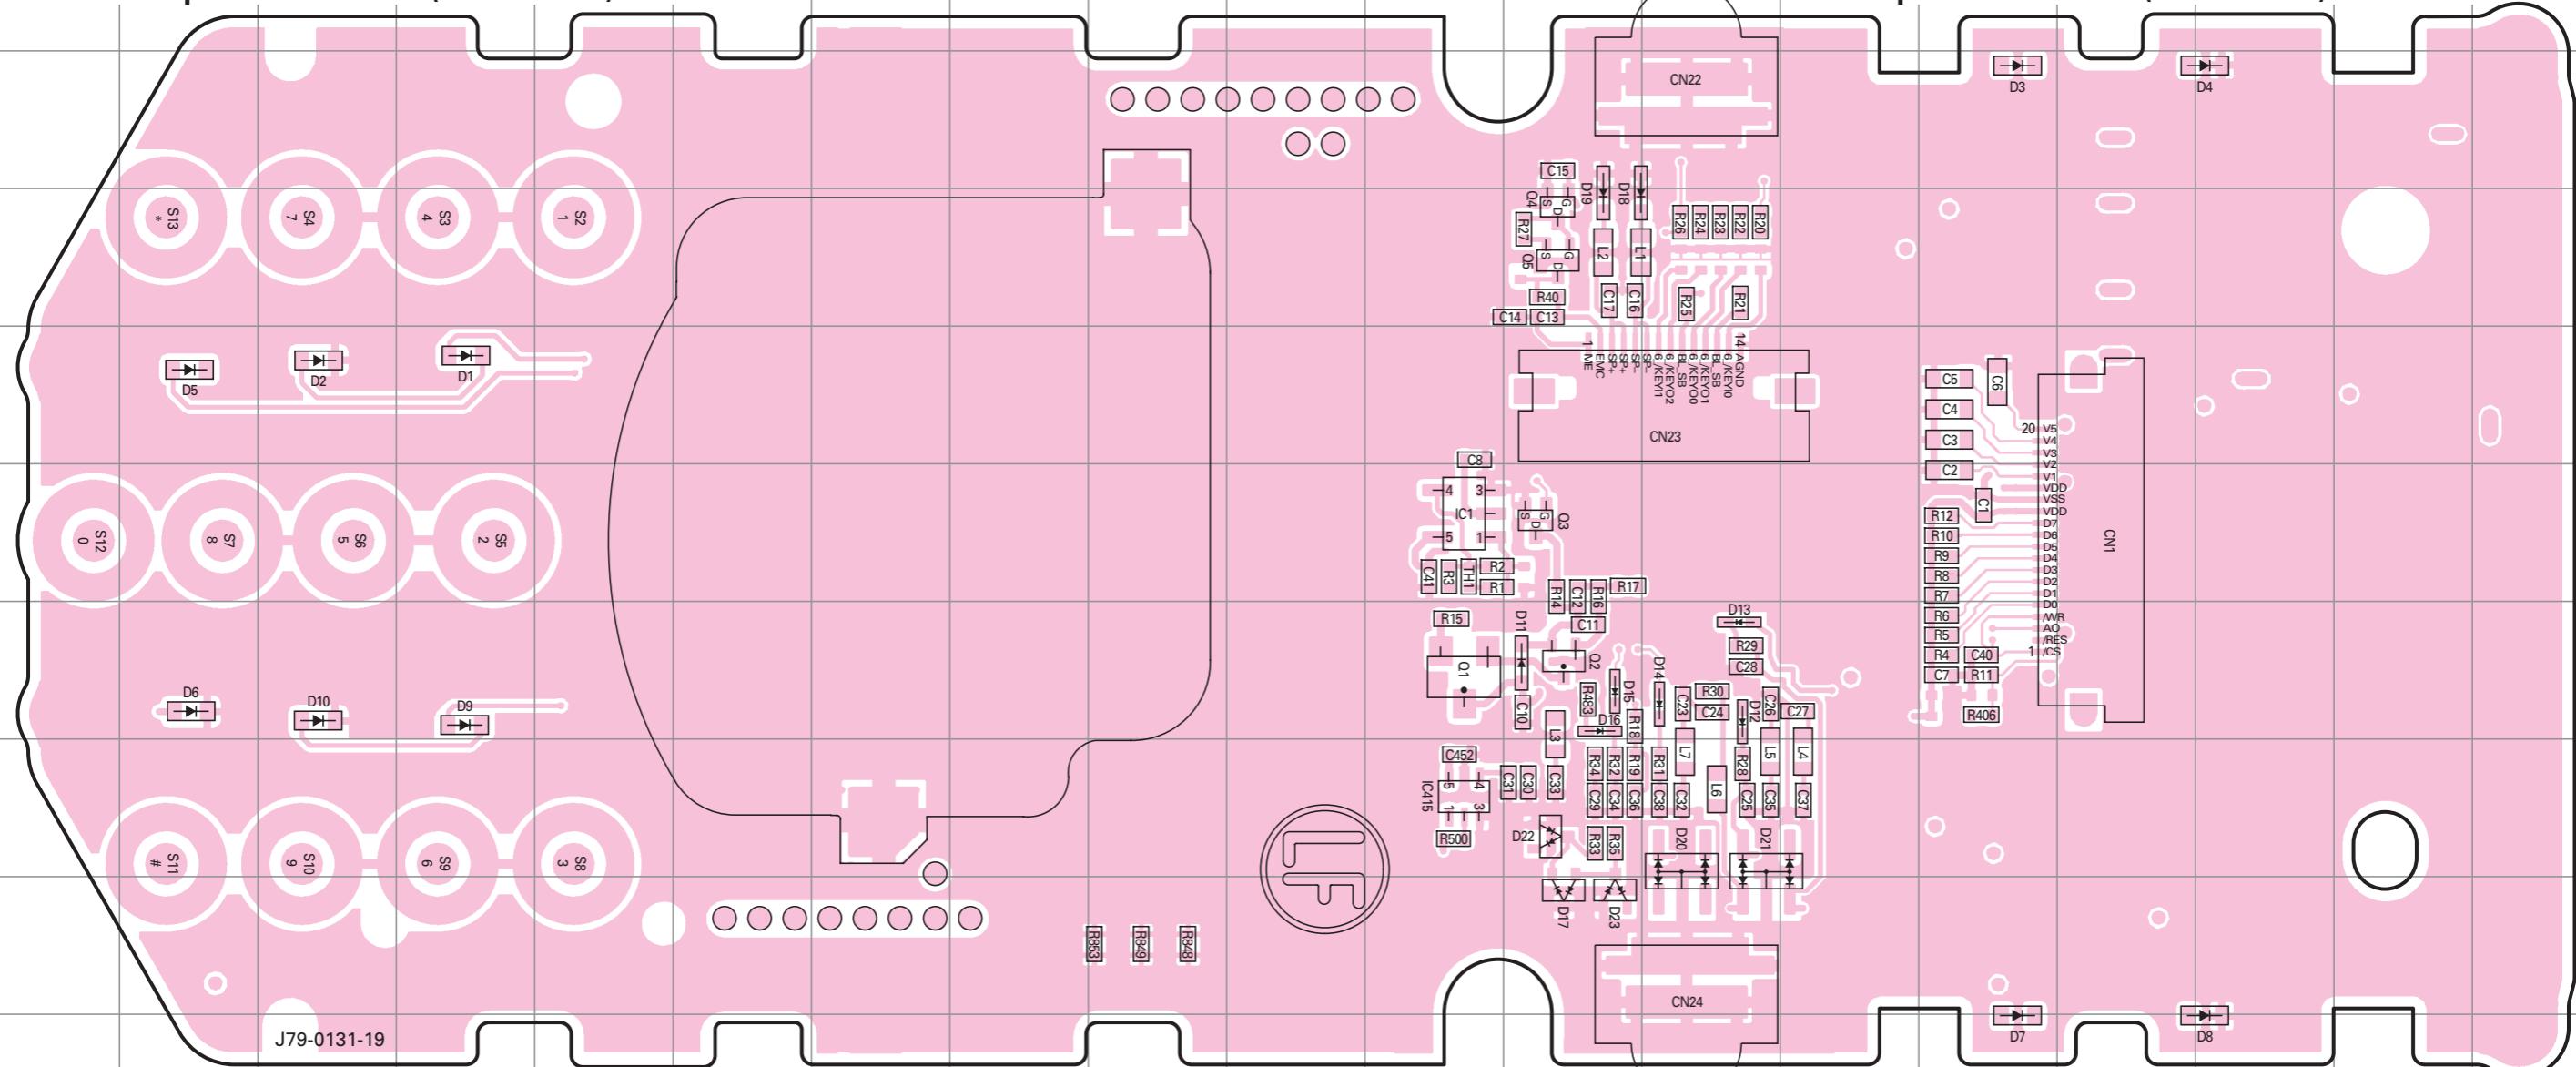

Ref. No.	Address	Ref. No.	Address	Ref. No.	Address
IC1	6K	D4	3Q	D14	7M
IC415	8K	D5	5B	D15	7L
Q1	7K	D6	7B	D16	7L
Q2	7L	D7	10O	D17	9L
Q3	6L	D8	10Q	D18	4L
Q4	4L	D9	7D	D19	4L
Q5	4L	D10	7C	D20	8M
D1	5D	D11	7L	D21	8M
D2	5C	D12	7M	D22	8L
D3	3O	D13	7M	D23	9L

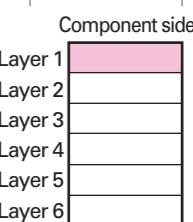

Foil side

NX-200


PC BOARD

NX-200

PC BOARD

CONTROL UNIT (X53-4260-XX) -10: K, -11: K2

Foil side view (J79-0131-19)

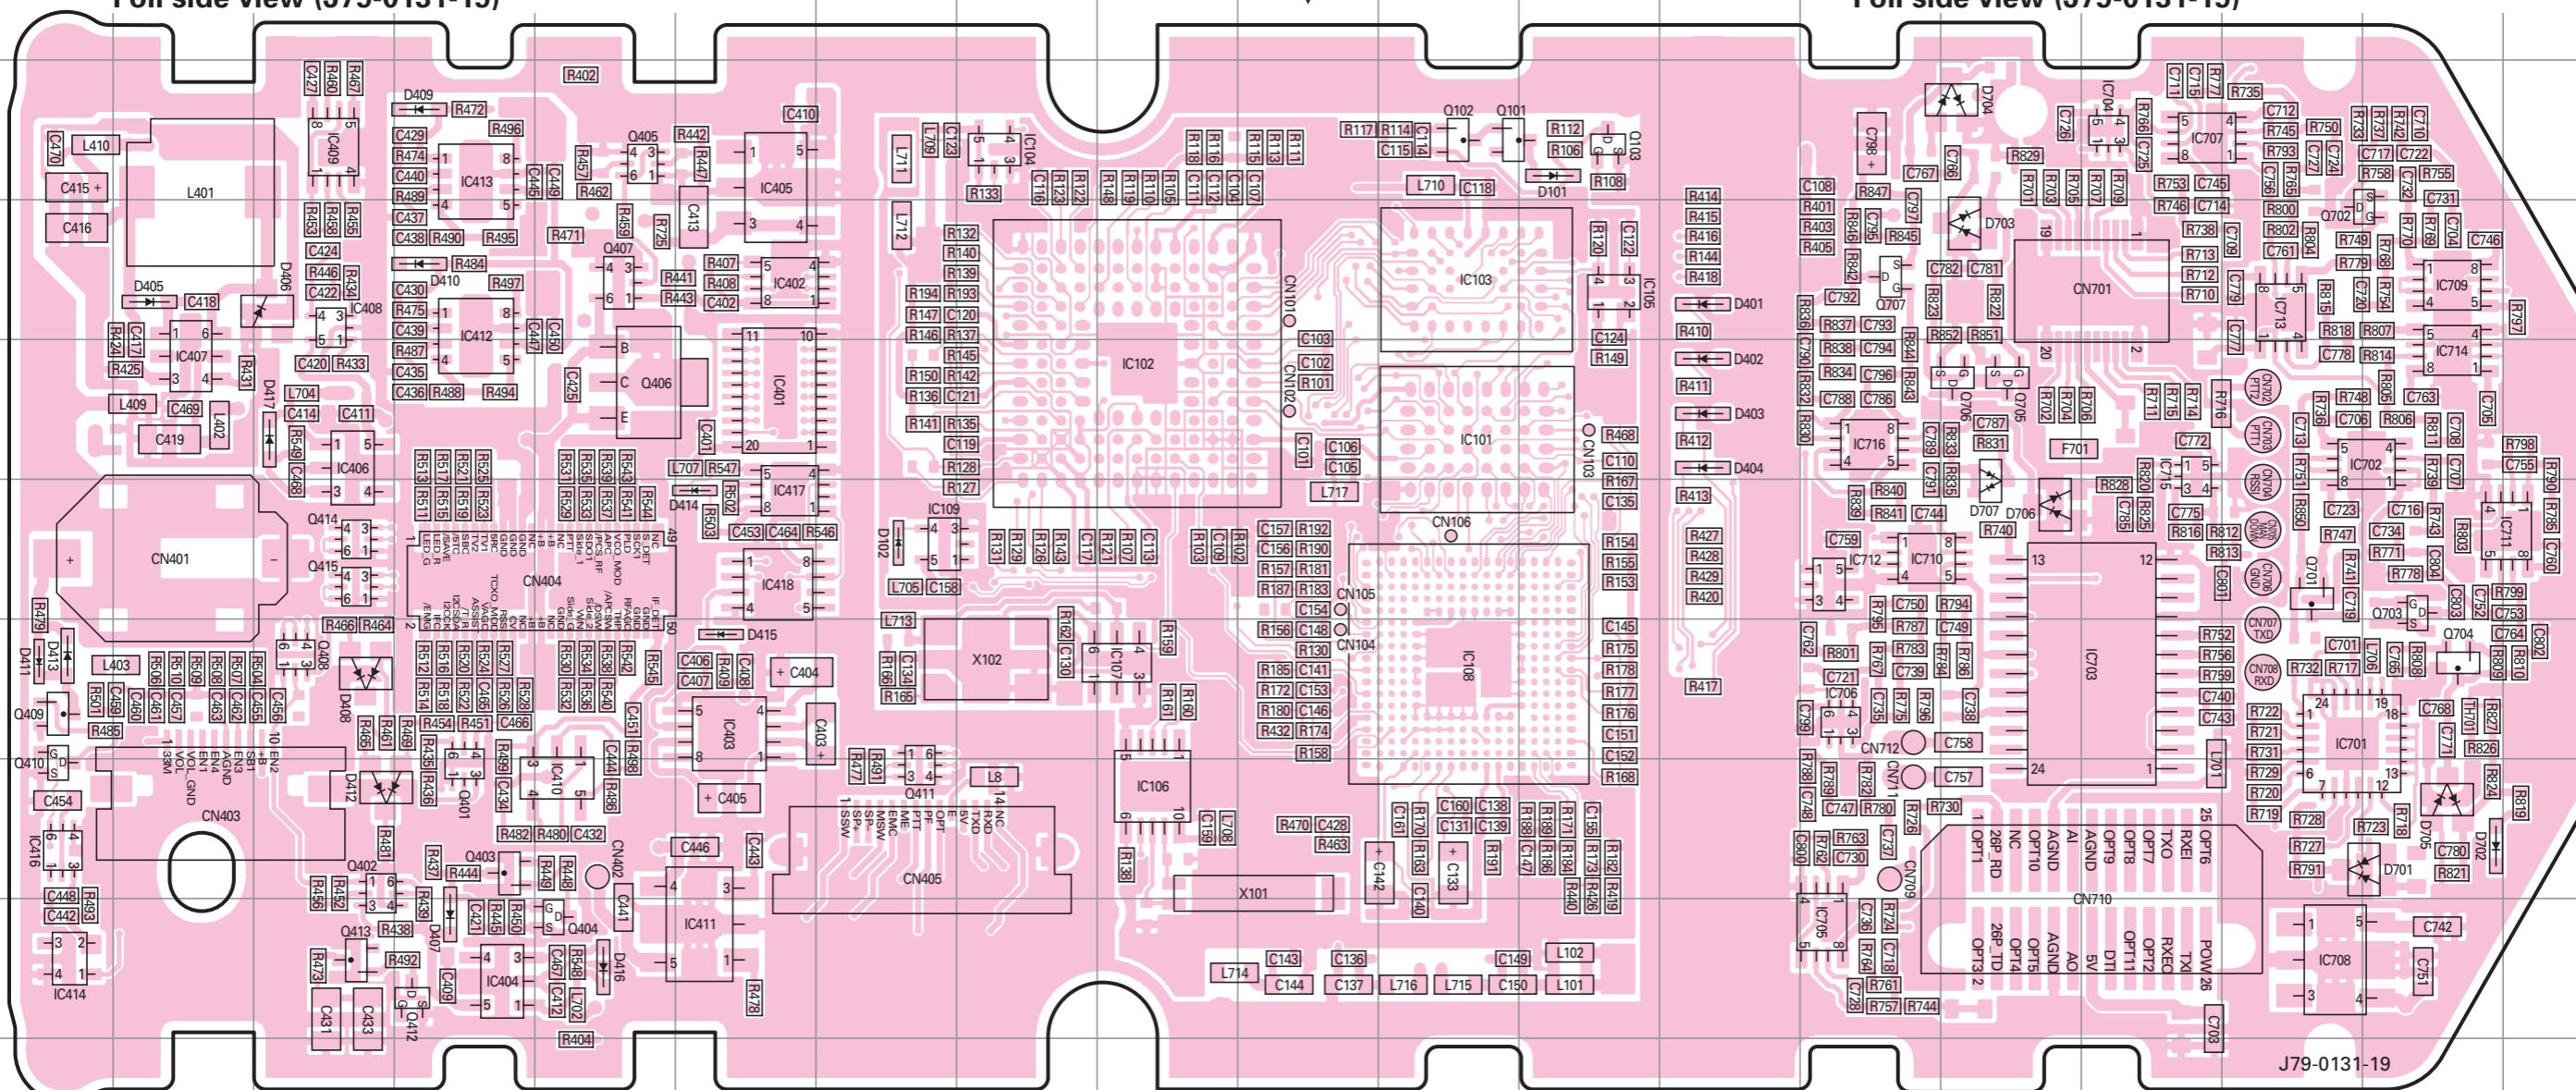


CONTROL UNIT (X53-4260-XX) -10: K, -11: K2

Foil side view (J79-0131-19)

Component side

Ref. No.	Address												
IC101	5K	IC404	9D	IC417	6F	IC711	6S	Q404	9E	Q701	6Q	D404	5M
IC102	5I	IC405	3F	IC418	6F	IC712	6N	Q405	3E	Q702	4R	D405	4B
IC103	4K	IC406	5C	IC701	7Q	IC713	4Q	Q406	5E	Q703	6R	D406	4C
IC104	3H	IC407	5B	IC702	5R	IC714	5R	Q407	4E	Q704	7R	D407	9D
IC105	4L	IC408	4C	IC703	7P	IC715	5P	Q408	7C	Q705	5O	D408	7C
IC106	8I	IC409	3C	IC704	3P	IC716	5N	Q409	7A	Q706	5O	D409	3D
IC107	7I	IC410	8E	IC705	9N	Q101	3K	Q410	8A	Q707	4N	D410	4D
IC108	7K	IC411	9F	IC706	7N	Q102	3K	Q411	8G	D101	3L	D411	7A
IC109	6G	IC412	4D	IC707	3P	Q103	3L	Q412	9D	D102	6G	D412	8C
IC401	5F	IC413	3D	IC708	9Q	Q401	8D	Q413	9C	D401	4M	D413	7A
IC402	4F	IC414	9A	IC709	4R	Q402	8C	Q414	6C	D402	5M	D414	6F
IC403	7F	IC416	8A	IC710	6N	Q403	8D	Q415	6C	D403	5M	D415	7F

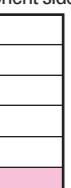


Foil side

NX-200

PC BOARD

TX-RX UNIT (X57-7360-10) (A/2)

Component side view (J79-0127-19 A/2)

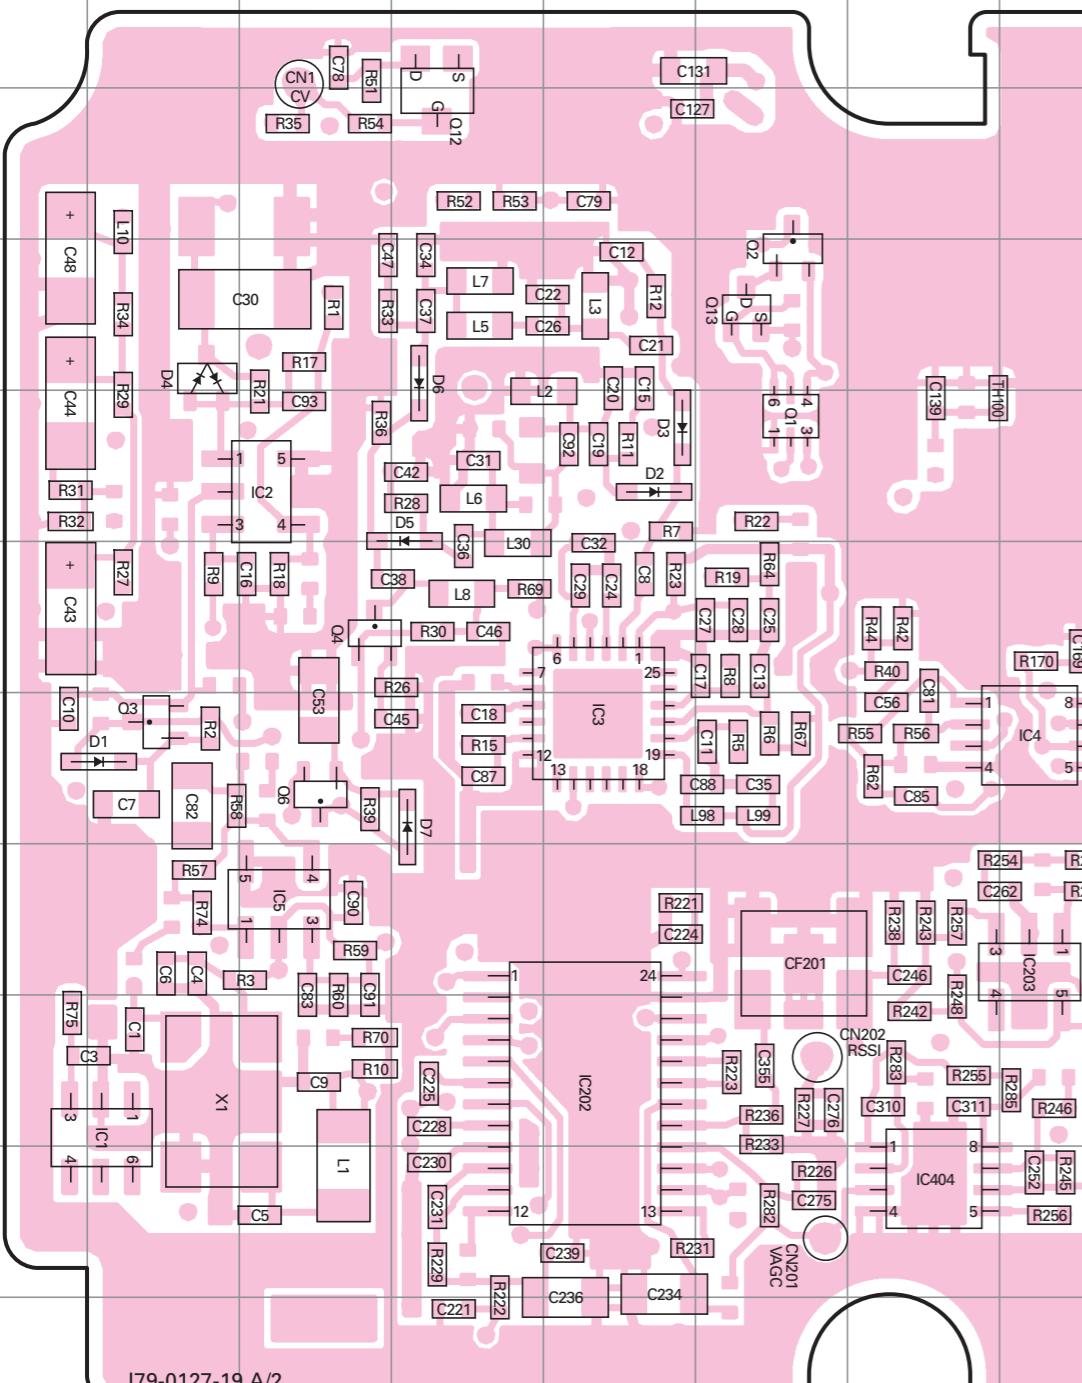

J79-0127-19 A/2

I

J

K

L

M


N

O


PC BOARD

TX-RX UNIT (X57-7360-10) (A/2)

Component side view (J79-0127-19 A/2)

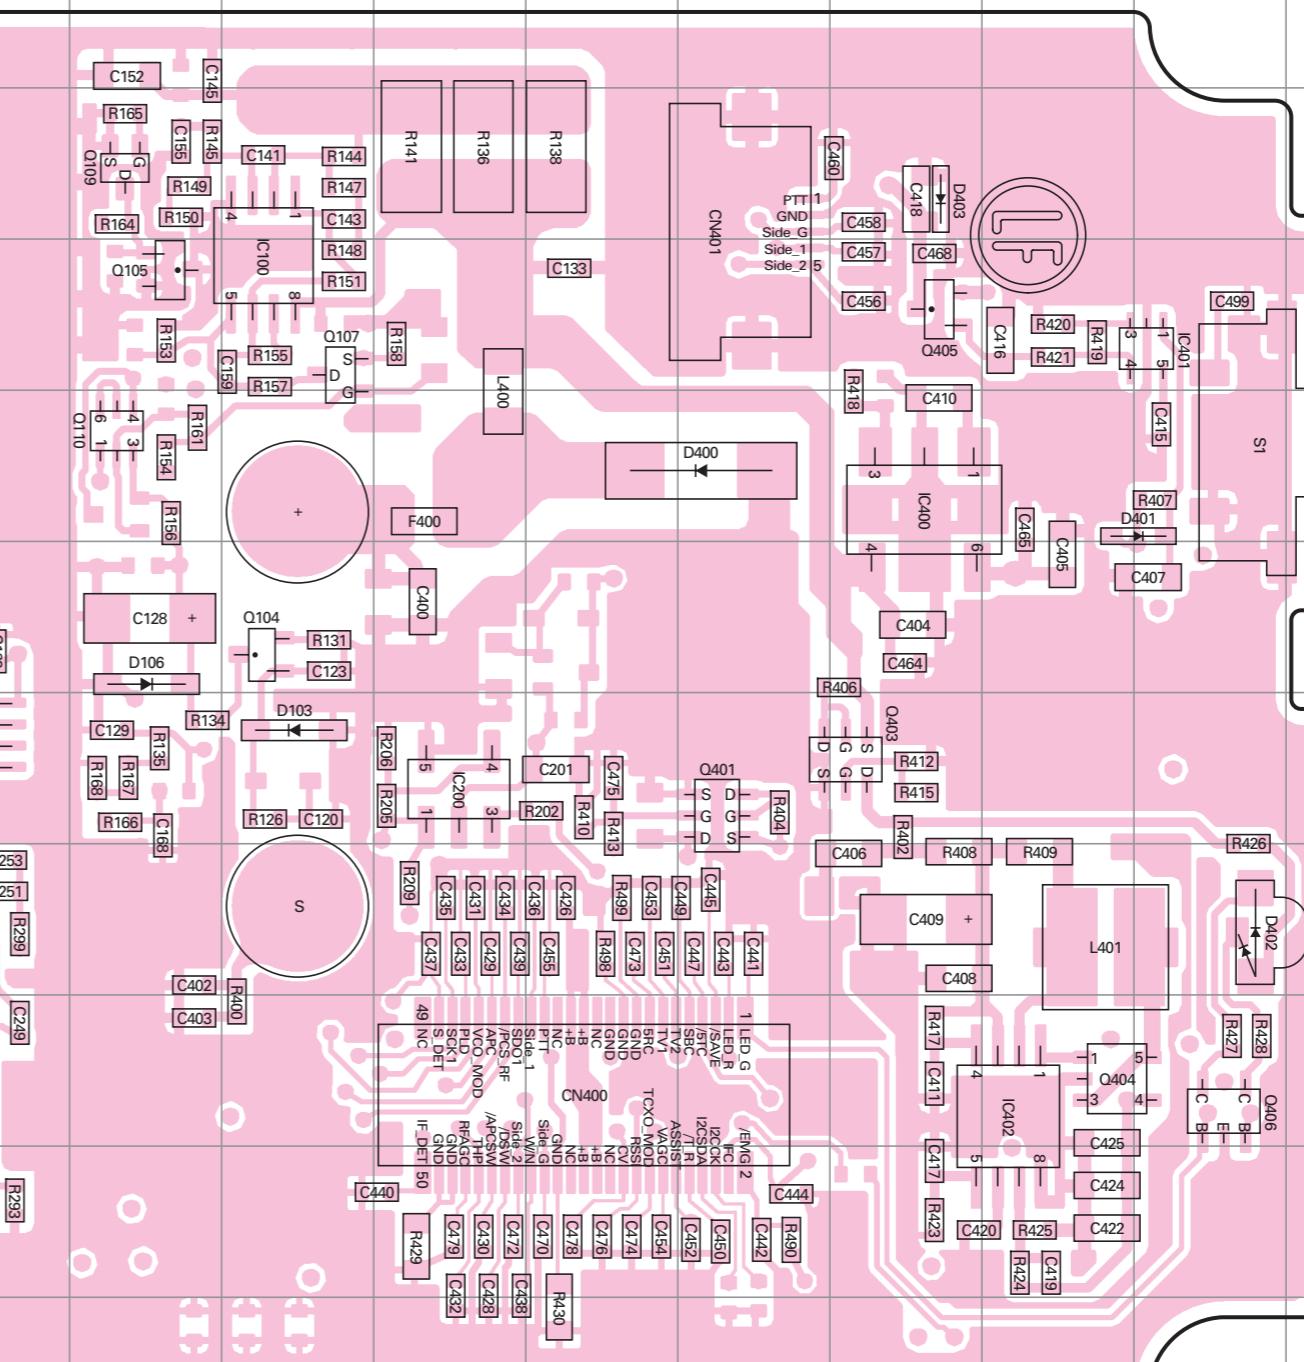

J79-0127-19 A/2

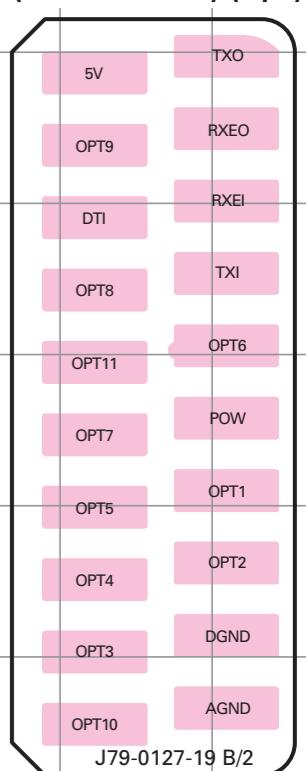TX-RX UNIT
(X57-7360-10) (B/2)

Component side
Layer 1
Layer 2
Layer 3
Layer 4
Layer 5
Layer 6

Foil side

Ref. No.	Address										
IC1	9B	IC203	8H	Q4	6C	Q110	5I	D3	5E	D401	5P
IC2	5C	IC400	5N	Q6	7C	Q401	7M	D4	4B	D402	8P
IC3	7E	IC401	4P	Q12	3D	Q403	7N	D5	5D	D403	3N
IC4	7H	IC402	9O	Q13	4F	Q404	9O	D6	4D		
IC5	8C	IC404	10G	Q104	6J	Q405	4N	D7	7D		
IC100	4J	Q1	5F	Q105	4I	Q406	9P	D103	7J		
IC200	7K	Q2	4F	Q107	4J	D1	7B	D106	6I		
IC202	9E	Q3	7B	Q109	3I	D2	5E	D400	5M		


NX-200

PC BOARD

NX-200

TX-RX UNIT (X57-7360-10) (A/2)
Foil side view (J79-0127-19 A/2)


TX-RX UNIT (X57-7360-10) (A/2)
Foil side view (J79-0127-19 A/2)

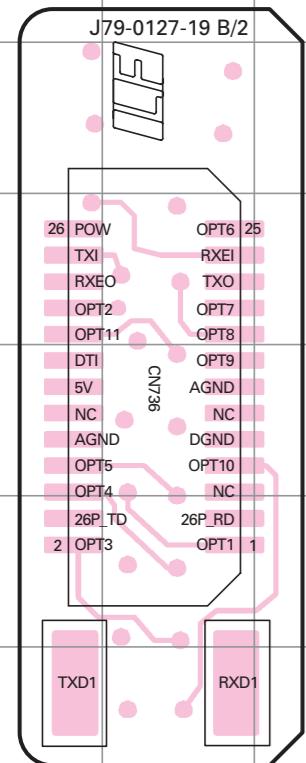TX-RX UNIT
(X57-7360-10) (B/2)


Component side

Layer 1
Layer 2
Layer 3
Layer 4
Layer 5
Layer 6


Foil side

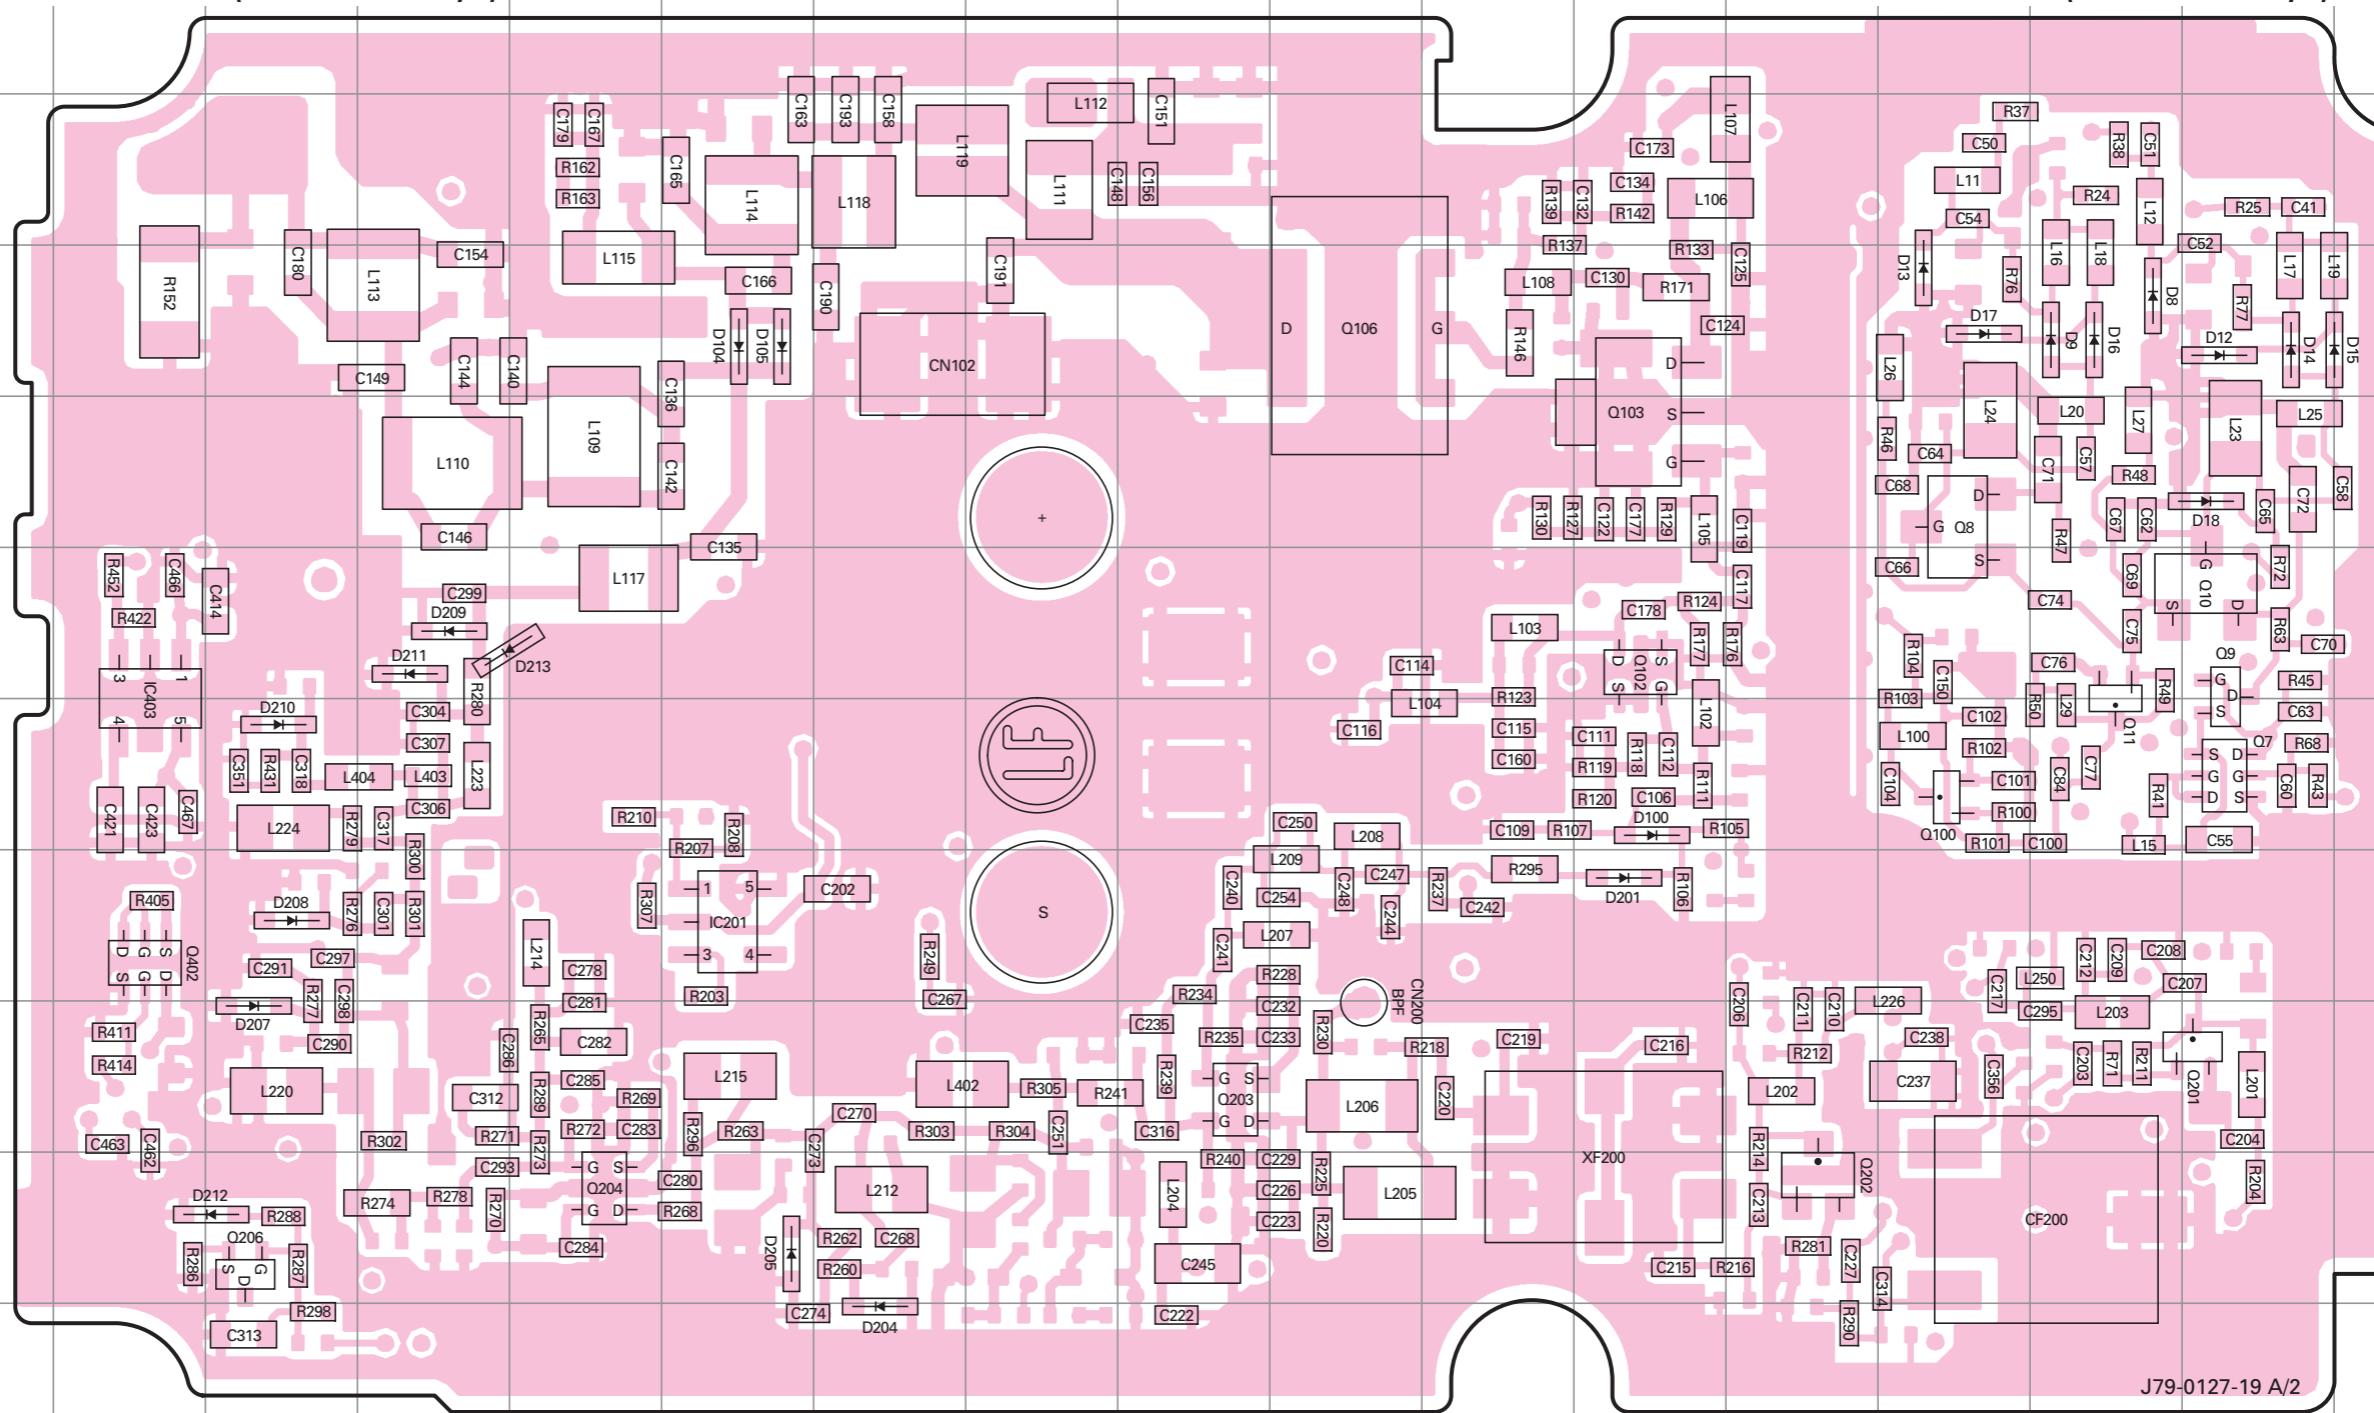


J79-0127-19 A/2

Ref. No.	Address										
IC201	8H	Q100	7P	Q204	10G	D14	4R	D105	4H	D210	7E
IC403	7D	Q102	6N	Q206	10E	D15	4S	D201	8N	D211	6F
Q7	7R	Q103	5N	Q402	8D	D16	4Q	D204	11I	D212	10E
Q8	5P	Q106	4L	D8	4Q	D17	4P	D205	10H	D213	6G
Q9	6R	Q201	9R	D9	4Q	D18	5R	D207	9E		
Q10	6R	Q202	100	D12	4R	D100	7N	D208	8E		
Q11	7Q	Q203	9K	D13	4P	D104	4H	D209	6F		

NX-200 SCHEMATIC DIAGRAM





INTERCONNECTION DIAGRAM

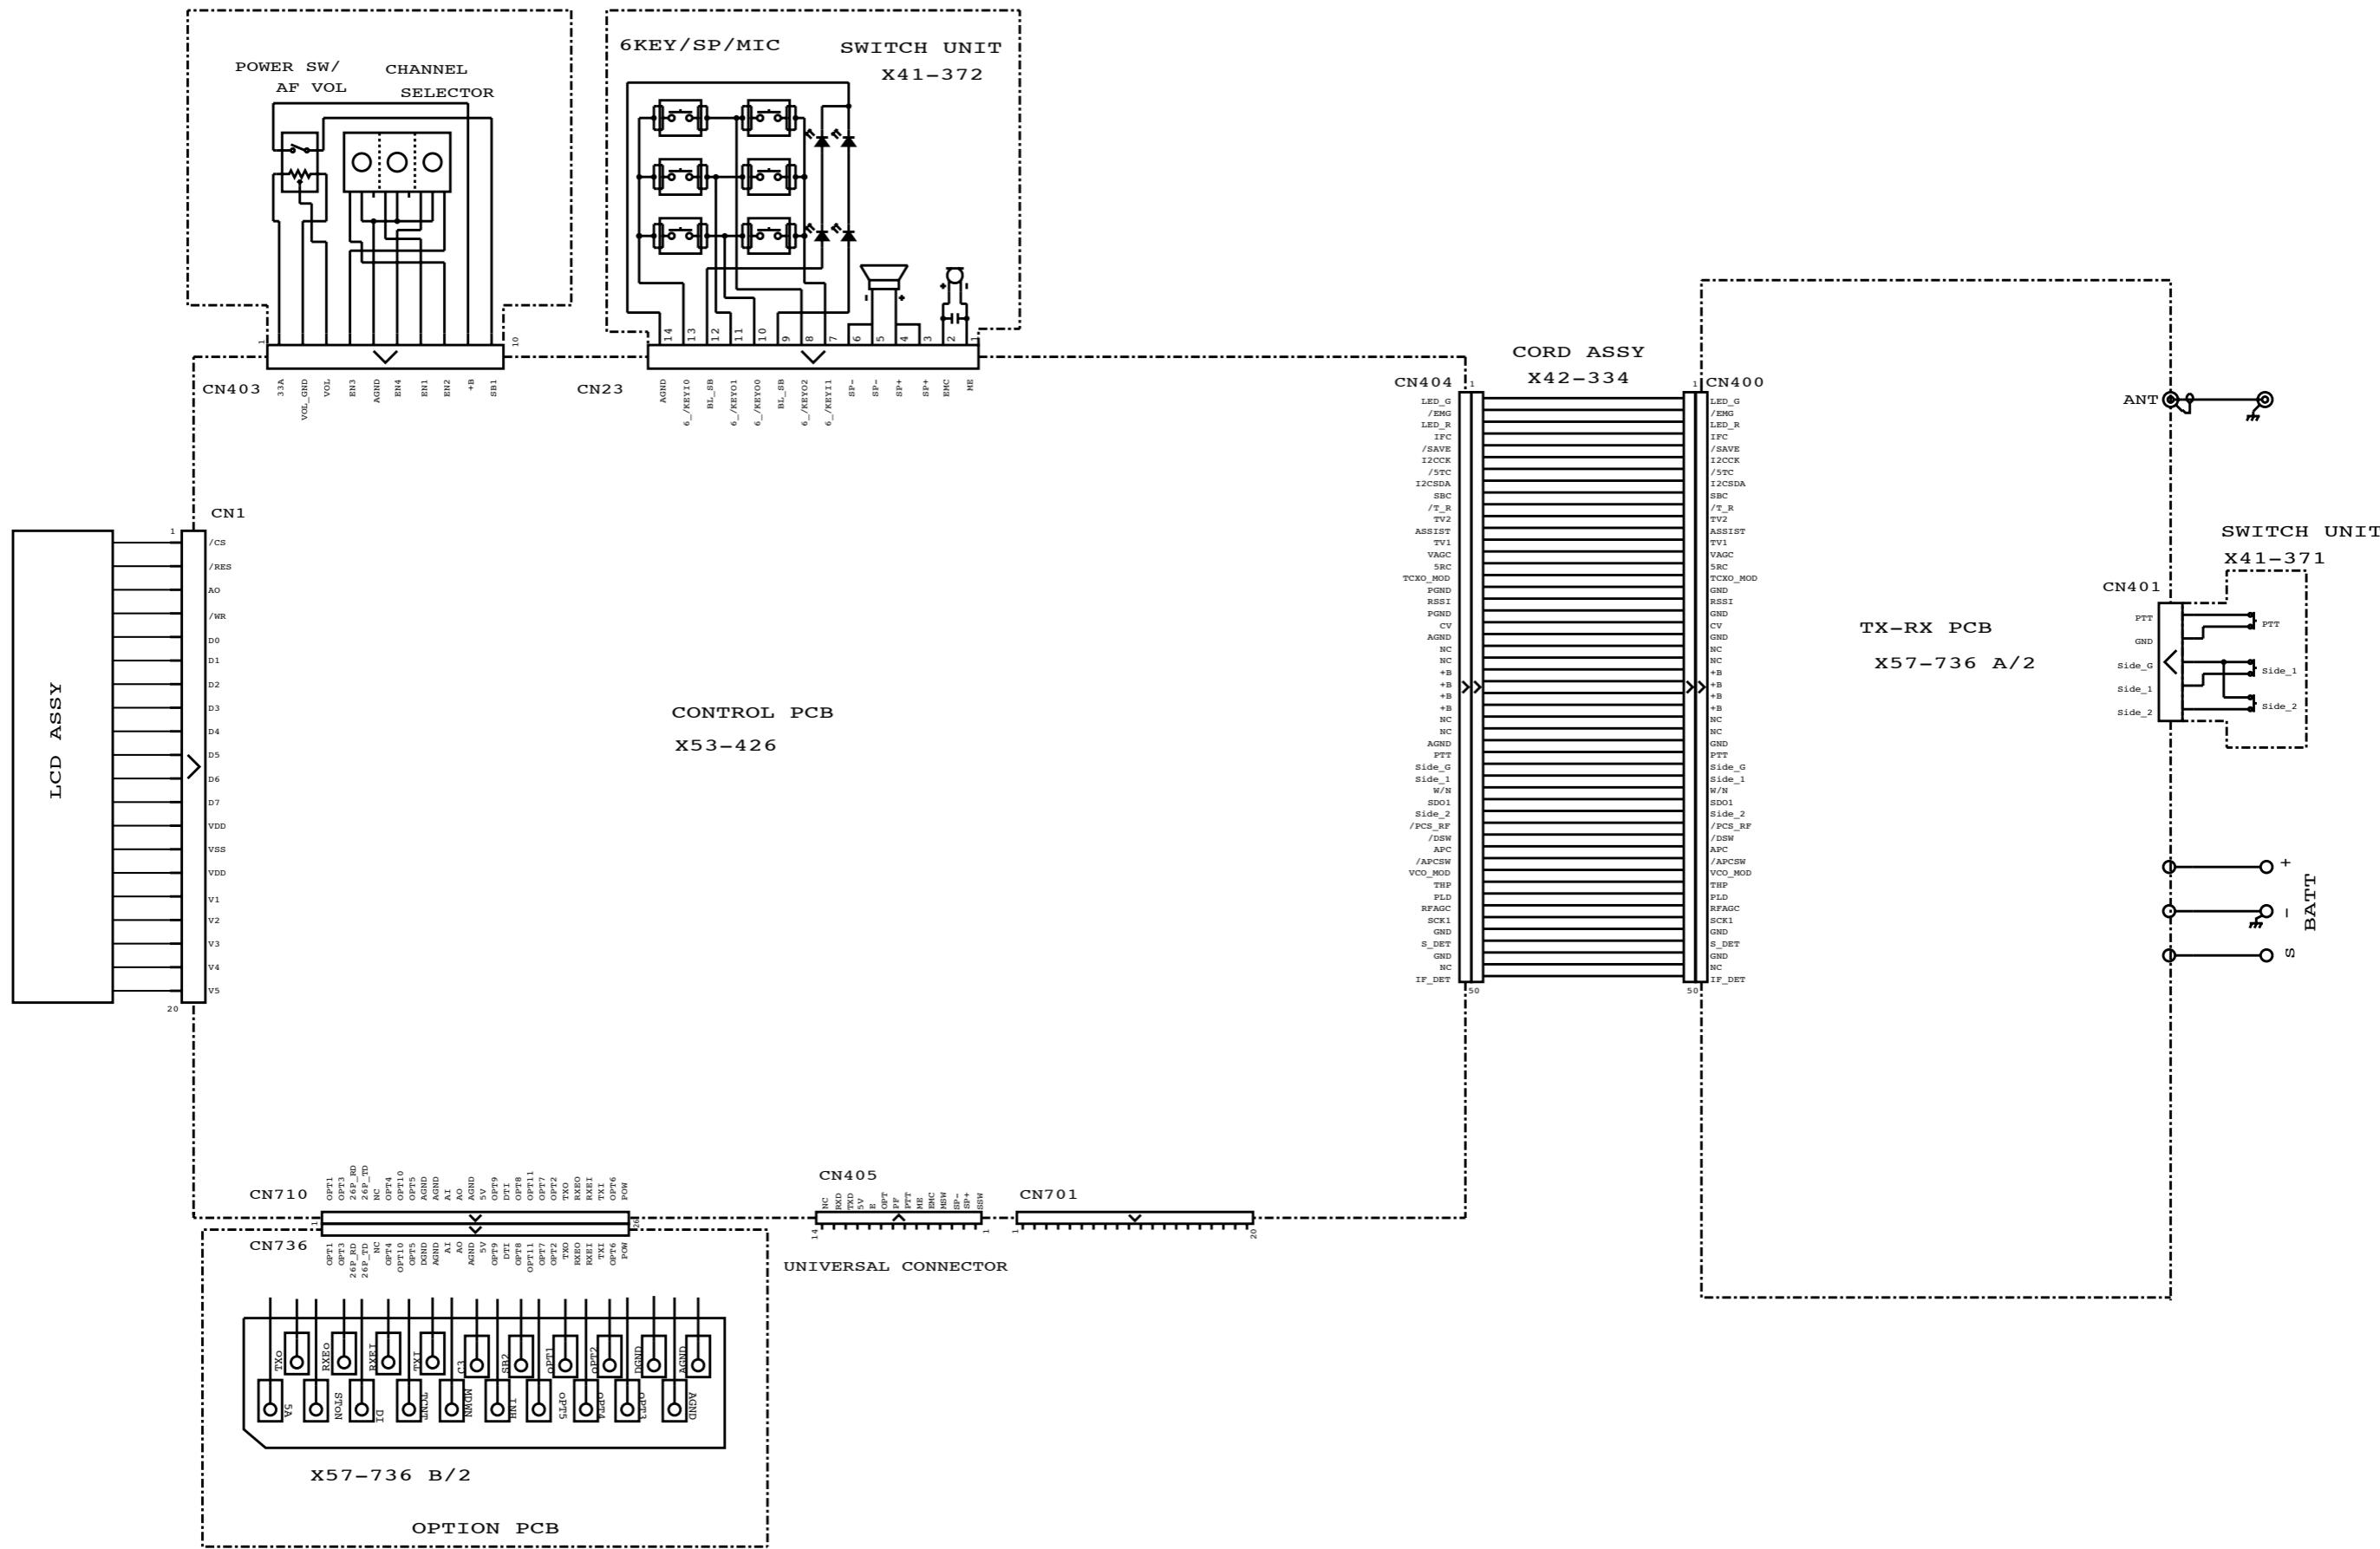

BLOCK DIAGRAM

BLOCK DIAGRAM

X53-4260-XX (Control unit)

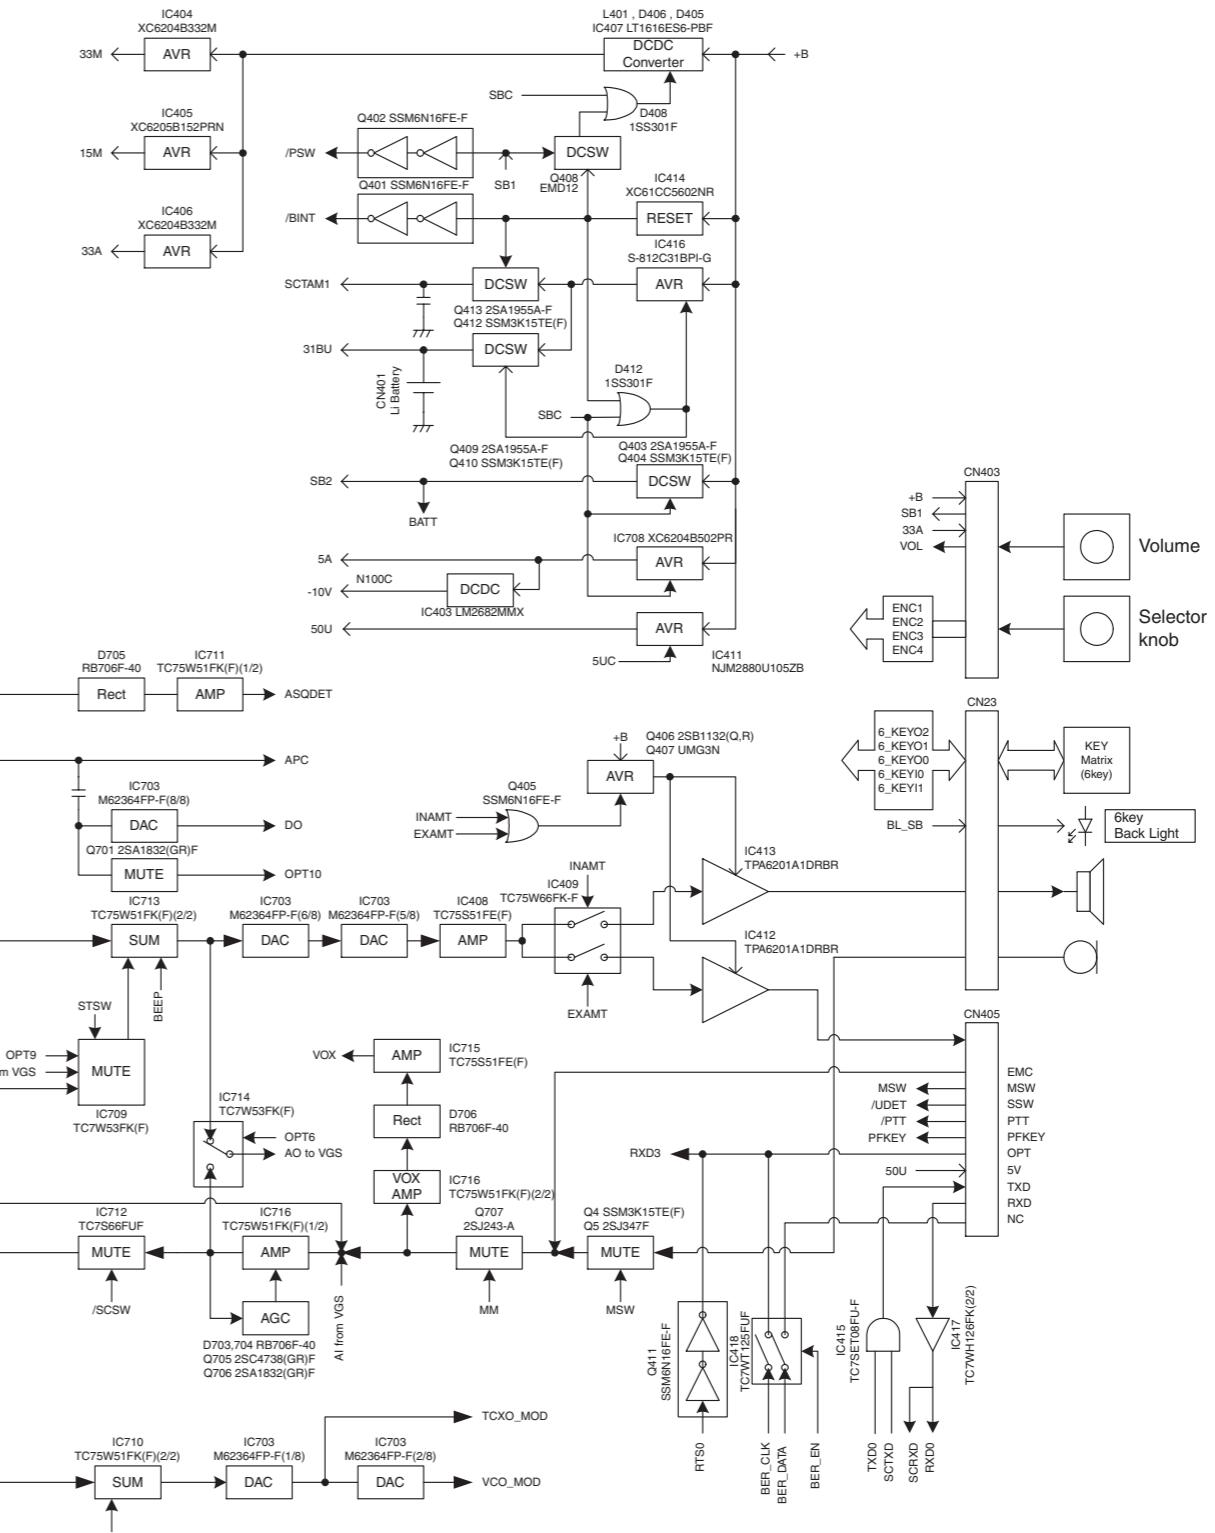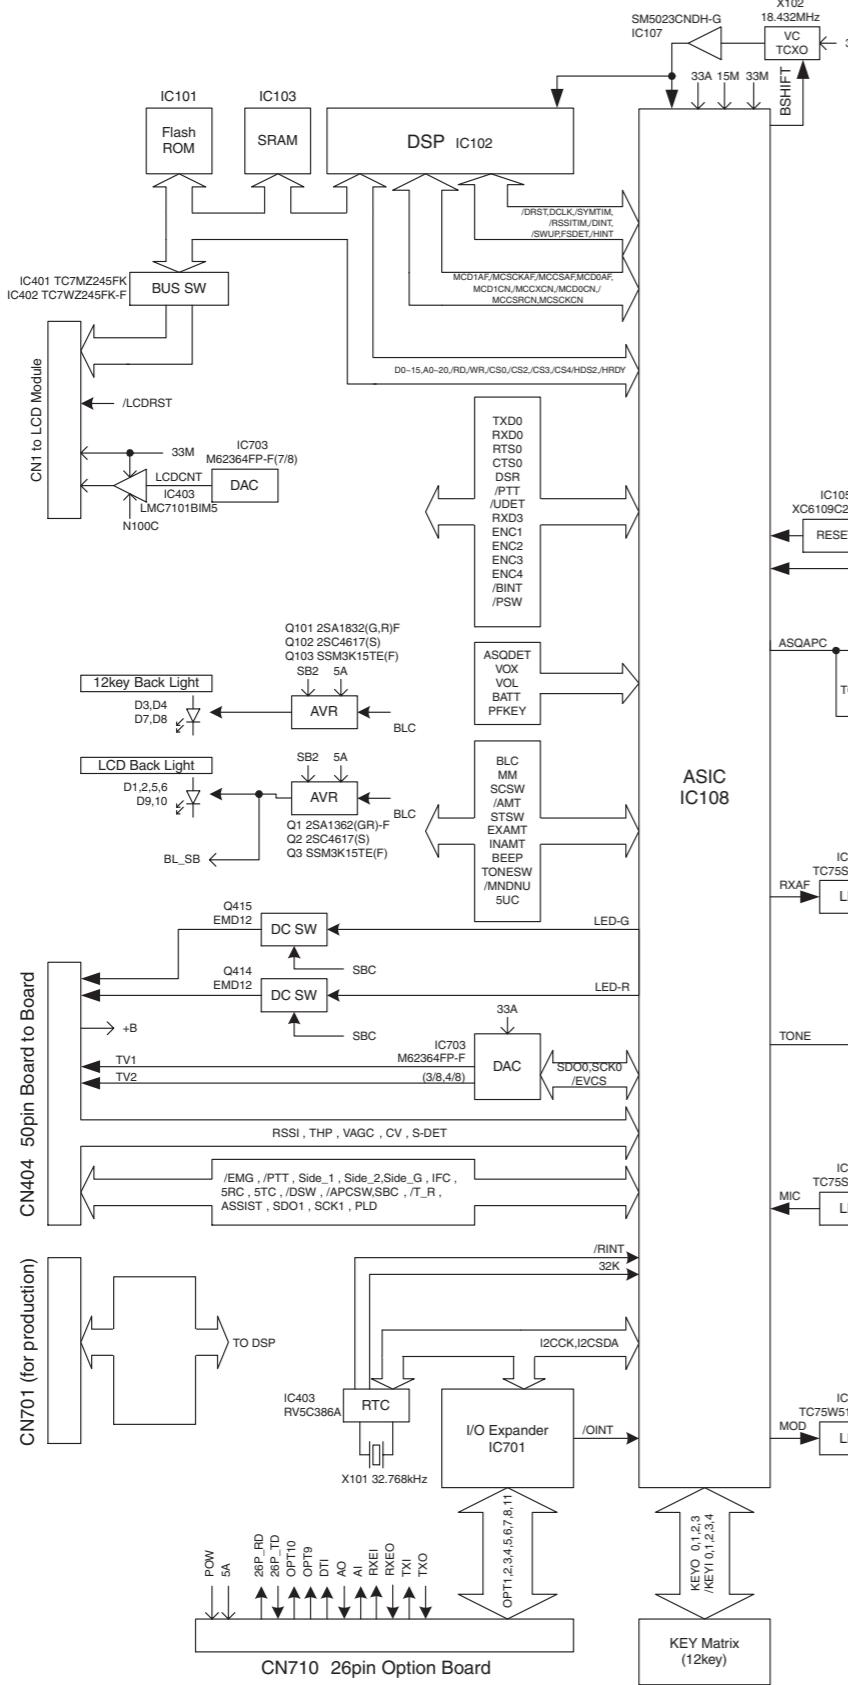

BLOCK DIAGRAM

BLOCK DIAGRAM

X57-7360-10 (TX-RX unit)

