


KENWOOD

SERVICE MANUAL

VHF DIGITAL TRANSCEIVER

NX-203

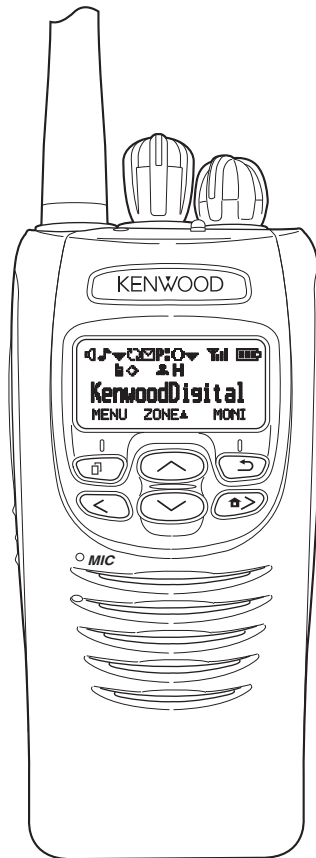

This product complies with the **RoHS** directive for the European market.



This product uses Lead Free solder.

CONTENTS

| | | | |
|-------------------------------------|-----------|--|-----------|
| GENERAL | 2 | TERMINAL FUNCTION | 60 |
| SYSTEM SET-UP | 3 | PC BOARD | |
| REALIGNMENT | 3 | CONTROL UNIT (X53-4590-14) | 68 |
| INSTALLATION | 6 | TX-RX UNIT (X57-8950-11) | 72 |
| DISASSEMBLY FOR REPAIR | 7 | INTERCONNECTION DIAGRAM | 76 |
| CIRCUIT DESCRIPTION | 11 | SCHEMATIC DIAGRAM | 78 |
| COMPONENTS DESCRIPTION | 17 | BLOCK DIAGRAM | 92 |
| PARTS LIST | 19 | LEVEL DIAGRAM | 96 |
| EXPLODED VIEW | 33 | OPTIONAL ACCESSORIES | |
| PACKING | 34 | KNB-50NC (Ni-MH Battery Pack) | 97 |
| TROUBLE SHOOTING | 35 | SPECIFICATIONS | 98 |
| ADJUSTMENT | 38 | | |

Document Copyrights

Copyright 2016 by JVC KENWOOD Corporation. All rights reserved.

No part of this manual may be reproduced, translated, distributed, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, for any purpose without the prior written permission of JVC KENWOOD Corporation.

Disclaimer

While every precaution has been taken in the preparation of this manual, JVC KENWOOD Corporation assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. JVC KENWOOD Corporation reserves the right to make changes to any products herein at any time for improvement purposes.

Firmware Copyrights

The title to and ownership of copyrights for firmware embedded in KENWOOD product memories are reserved for JVC KENWOOD Corporation. Any modifying, reverse engineering, copy, reproducing or disclosing on an Internet website of the firmware is strictly prohibited without prior written consent of JVC KENWOOD Corporation. Furthermore, any reselling, assigning or transferring of the firmware is also strictly prohibited without embedding the firmware in KENWOOD product memories.

Transceivers containing AMBE+2™ Vocoder:

The AMBE+2™ voice coding technology is embedded in the firmware under the license of Digital Voice Systems, Inc.

GENERAL

INTRODUCTION

SCOPE OF THIS MANUAL

This manual is intended for use by experienced technicians familiar with similar types of commercial grade communications equipment. It contains all required service information for the equipment and is current as of the publication date. Changes which may occur after publication are covered by either Service Bulletins or Manual Revisions. These are issued as required.

ORDERING REPLACEMENT PARTS

When ordering replacement parts or equipment information, the full part identification number should be included. This applies to all parts : components, kits, or chassis. If the part number is not known, include the chassis or kit number of which it is a part, and a sufficient description of the required component for proper identification.

PERSONAL SAFETY

The following precautions are recommended for personal safety:

- DO NOT transmit until all RF connectors are verified secure and any open connectors are properly terminated.
- SHUT OFF and DO NOT operate this equipment near electrical blasting caps or in an explosive atmosphere.
- This equipment should be serviced by a qualified technician only.


SERVICE

This transceiver is designed for easy servicing. Refer to the schematic diagrams, printed circuit board views, and alignment procedures contained within.

NOTE


You must use KPG-111D/111DN version 4.95 or later for this transceiver. KPG-111D/111DN versions earlier than version 4.95 will not work properly.

SYSTEM SET-UP

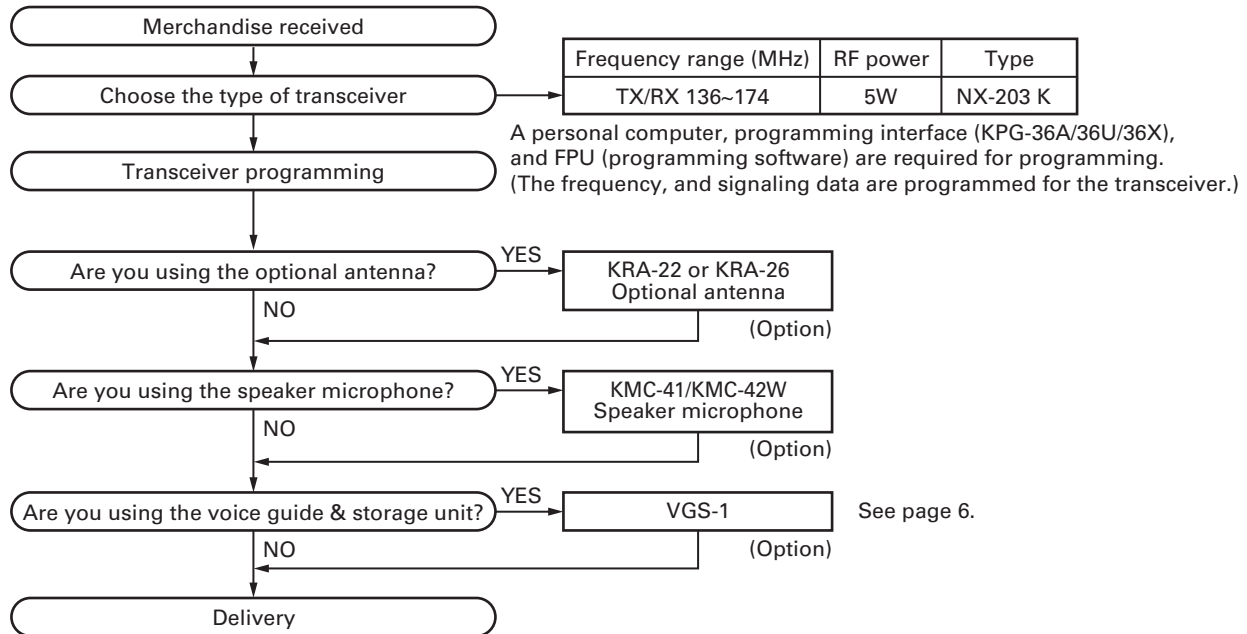

REALIGNMENT

1. Modes

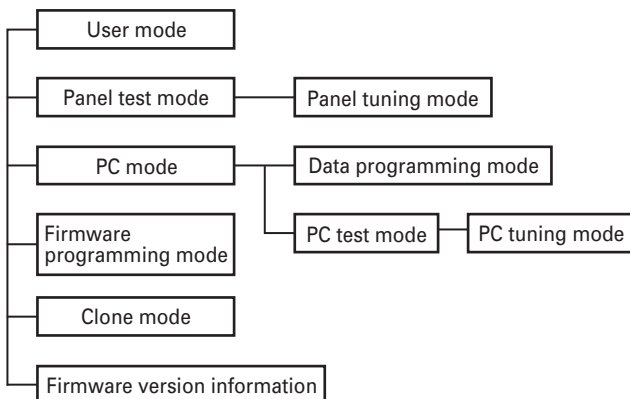

| Mode | Function |
|------------------------------|---|
| User mode | For normal use. |
| Panel test mode | Used by the dealer to check the fundamental characteristics. |
| Panel tuning mode | Used by the dealer to tune the transceiver. |
| PC mode | Used for communication between the transceiver and PC. |
| Data programming mode | Used to read and write frequency data and other features to and from the transceiver. |
| PC test mode | Used to check the transceiver using the PC. This feature is included in the FPU. |
| Firmware programming mode | Used when changing the main program of the flash memory. |
| Clone mode | Used to transfer programming data from one transceiver to another. |
| Firmware version information | Used to confirm the internal firmware version. |

REALIGNMENT

2. How to Enter Each Mode

| Mode | Operation |
|------------------------------|---------------------------|
| User mode | Power ON |
| Panel test mode | [>] + Power ON |
| PC mode | Received commands from PC |
| Panel tuning mode | [Panel test mode] + [⇄] |
| Firmware programming mode | [⇄] + Power ON |
| Clone mode | [<] + Power ON |
| Firmware version information | [Side1] + Power ON |

3. Panel Test Mode

Setting method refer to ADJUSTMENT.

4. Panel Tuning Mode

Setting method refer to ADJUSTMENT.

5. PC Mode

5-1. Preface

The transceiver is programmed by using a personal computer, programming interface (KPG-36A/36U/36X), and FPU (programming software).

The programming software can be used with a PC. Figure 1 shows the setup of a PC for programming.

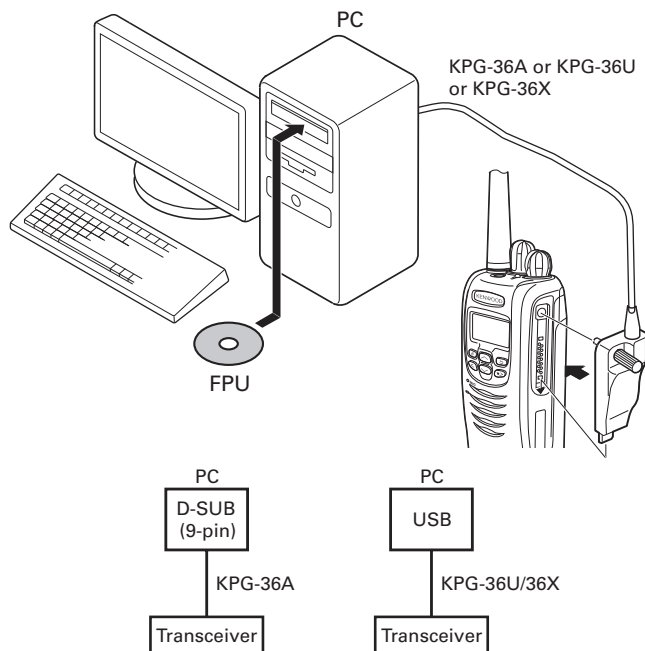


Fig. 1

5-2. Connection procedure

1. Connect the transceiver to the computer using the interface cable (KPG-36A/36U/36X). (Connection is the same as in the PC Mode.)

Note:

- You must install the KPG-36U/36X driver in the computer to use the USB programming interface cable (KPG-36U/36X).
2. When the POWER switch on, user mode can be entered immediately. When PC sends command the transceiver enter PC mode, and "PROGRAM" is displayed on the LCD. When data transmitting from transceiver, the red LED is lights. When data receiving to transceiver, the green LED is lights.

Note:

The data stored in the computer must match the "Model Name" when it is written into the flash memory.

5-3. KPG-36A description

(PC programming interface cable: Option)

The KPG-36A is required to interface the transceiver to the computer. It has a circuit in its D-sub connector (KPG-36A: 9-pin) case that converts the RS-232C logic level to the TTL level.

The KPG-36A connects the universal connector of the transceiver to the RS-232C serial port of the computer.

5-4. KPG-36U/KPG-36X description

(PC programming interface cable: Option)

The KPG-36U/36X is a cable which connects the to a USB port on a computer.

When using the KPG-36U/36X, install the driver software in the computer. The KPG-36U/36X driver runs under Windows XP, Vista, 7, 8 or 8.1.

The latest version of the USB driver is available for download from the following URL:

<http://www.kenwood.com/usb-com/>

(This URL may change without notice.)

5-5. Programming software : KPG-111D/111DN

(Ver.4.95 or later) description

The FPU is the programming software for the transceiver supplied on a CD. This software runs under Windows XP, Vista, 7, 8 or 8.1 on a PC.

The data can be input to or read from the transceiver and edited on the screen. The programmed or edited data can be printed out. It is also possible to tune the transceiver.

6. Firmware Programming Mode

6-1. Preface

Flash memory is mounted on the transceiver. This allows the transceiver to be upgraded when new features are released in the future. (For details on how to obtain the firmware, contact Customer Service.)

REALIGNMENT

6-2. Connection procedure

Connect the transceiver to the personal computer using the interface cable (KPG-36A/36U/36X). (Connection is the same as in the PC Mode.)

6-3. Programming

1. Start up the firmware programming software (Fpro.exe (Ver. 6.20 or later)). The Fpro.exe exists in the KPG-111D/111DN installed holder.
2. Set the communications speed (normally, 115200 bps) and communications port in the configuration item.
3. Set the firmware to be updated by File name item.
4. Press and hold the [Ⓜ] key while turning the transceiver power ON. Then, the orange LED on the transceiver lights and "PROGRAM 115200" is displayed.
5. Check the connection between the transceiver and the personal computer, and make sure that the transceiver is in the Program mode.
6. Press "write" button in the window. When the transceiver starts to receive data, the [LOADING] display lights.
7. If writing ends successfully, the checksum is calculated and a result is displayed.
8. If you want to continue programming other transceivers, repeat steps 4 to 7.

Note:

This mode cannot be entered if the Firmware Programming mode is set to Disable in the Programming software.

6-4. Function

1. If you press the [Side2] key while "PROGRAM 115200" is displayed, the display changes to "PROGRAM 19200" (The LED blinks green) to indicate that the write speed is low speed (19200 bps). If you press the [Side2] key again while "PROGRAM 19200" is displayed, the display changes to "PROGRAM 38400" (The LED lights red and orange alternatively). If you press the [Side2] key again while "PROGRAM 38400" is displayed, the display changes to "PROGRAM 57600" (The LED blinks orange). If you press the [Side2] key again while "PROGRAM 57600" is displayed, the display returns to "PROGRAM 115200" (The LED lights orange).
2. If you press the [Side1] key while "PROGRAM 115200" is displayed, the checksum is calculated, and a result is displayed. If you press the [Side1] key again while the checksum is displayed, "PROGRAM 115200" is redisplayed.

Note:

Normally, write in the high-speed mode.

7. Clone Mode

Programming data can be transferred from one transceiver to another by connecting them via their external universal connectors. The operation is as follows (the transmit transceiver is the source and the receive transceiver is a target).

The following data cannot be cloned.

- Tuning data
- Embedded message with password
- Model name data
- ESN (Electronic Serial Number) data

Note:

The following data can be cloned.

- Fleet (own)/ID (own) for FleetSync
- Unit ID (own) for NXDN

Key guide on the Read authorization password input screen.

- CONFIRM ([Ⓜ] key): The password confirmation
- DELETE ([↵] key): Delete the least digit from the current password number (Press and hold to delete all password numbers)
- SELECT ([Ⓜ] key): Determine the least digit of the password number

1. Press and hold the [◀] key while turning the transceiver power ON. If the Read authorization password is set to the transceiver, the transceiver displays "CLONE LOCK". If the password is not set, the transceiver displays "CLONE MODE".
2. When you enter the correct password, and "CLONE MODE" is displayed, the transceiver can be used as the cloning source. The following describes how to enter the password.
3.
 - **How to enter the password using the [∧] and [∨] keys ;**
If the [∧] / [∨] key is pressed while "CLONE LOCK" is displayed, the Read authorization password input screen is displayed.
If the [∧] key or [∨] key is pressed while the Read authorization password input screen is displayed, the number (0 to 9) blinks on the LCD. When you press the [Ⓜ] key, the currently selected number is determined. If you press the [Ⓜ] key after entering the password in this procedure, "CLONE MODE" is displayed if the entered password is correct. If the password is incorrect, "CLONE LOCK" is redisplayed.

REALIGNMENT

4. Power ON the target transceiver.
5. Connect the cloning cable (part No. E30-3325-05) to the universal connectors on the source and target.
6. Press the [M] key on the source while the source displays "CLONE MODE". The data of the source is sent to the target. While the target is receiving the data, "PROGRAM" is displayed. When cloning of data is completed, the source displays "END", and the target automatically operates in the User mode. The target can then be operated by the same program as the source.
7. The other target can be continuously cloned. When the [M] key on the source is pressed while the source displays "END", the source displays "CLONE MODE". Carry out the operation in step 4 to 6.

Note:

- Cannot be cloned if the password (overwrite password) is programmed to the target.
- "Model Name" must be same to clone the transceiver.

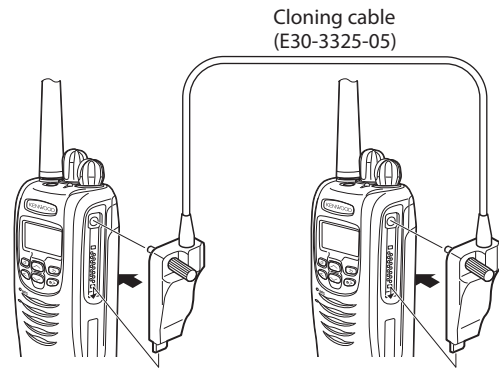


Fig. 2

8. Firmware Version Information


Press and hold the [Side1] key while turning the transceiver power ON and then keep pressing and holding the [Side1] key, the firmware version information appears on the LCD.

INSTALLATION

Voice Guide & Storage Unit (VGS-1: Option)


■ Installing the VGS-1 (Voice Guide & Storage Unit) in the transceiver

1. Remove the two screws from the cover.
2. Remove the cover by inserting the tip of a pair of tweezers into the screw hole of the cover and prying it open.

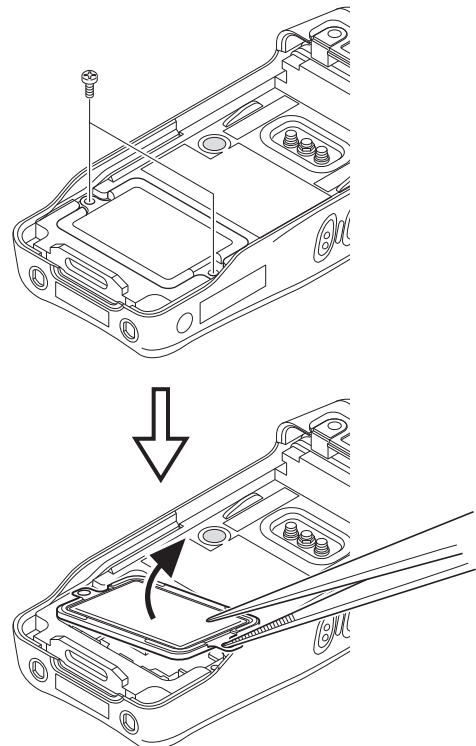

INSTALLATION

- Remove the OPTION PCB from the connector (CN710) of the Control PCB.

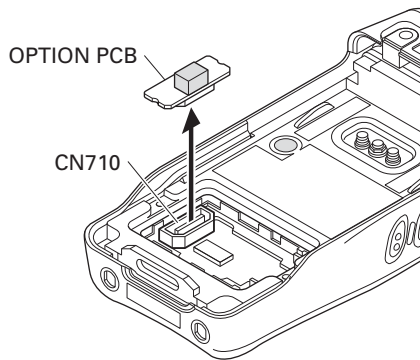

- Attach the flat spring (G02-1846-03) to the VGS-1 as shown in the figure.

Note:


Attach the flat spring so that its convex fits the PCB hollow of the VGS-1.

- Attach the cushion (G13-1974-04) to the VGS-1 as shown in the figure.

Note:

Be sure not to cover the VGS-1 connector with the cushion.

- Insert the VGS-1 connector into the connector (CN710) of the Control PCB.

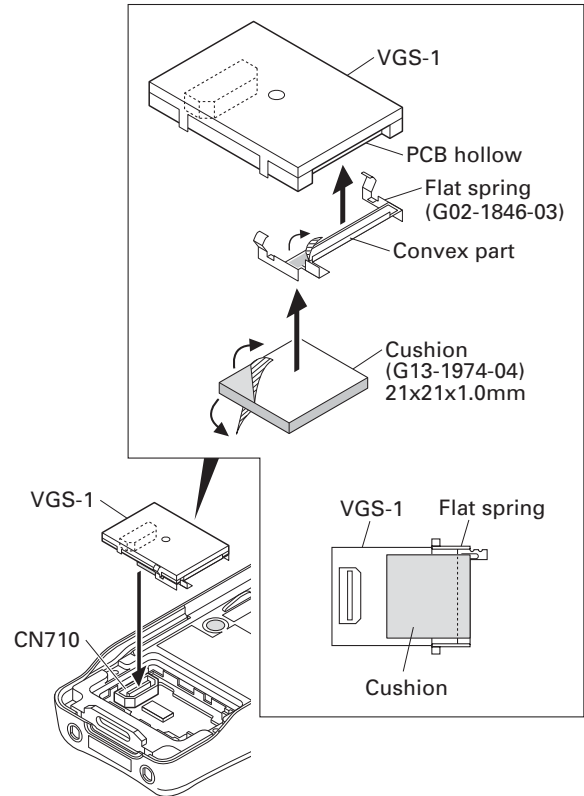


- Reinstall the cover using the two screws removed in step 1.

DISASSEMBLY FOR REPAIR

1. Precautions for Waterproof

- Do not remove the black sheet from the reverse side of the transceiver (refer to the illustration right). Removal of this sheet decreases the waterproof efficiency of the transceiver and may cause malfunctions if water seeps into the transceiver.
- The orange packing material on the reverse side of the transceiver is important with respect to the waterproof efficiency of the transceiver. Do not place stickers or other materials on or around the packing material shown in the figure, or on the reverse side of the battery pack. Doing so will impair the waterproof efficiency of the transceiver and may cause it to break down. Additionally, in order to prevent damage to the packing material, do not allow it to come in contact with foreign materials.


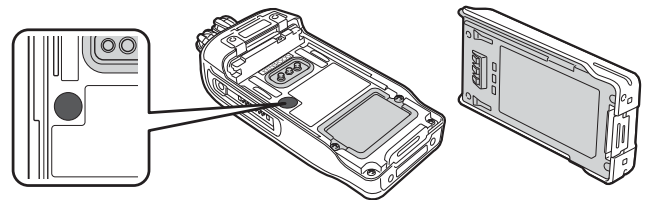


DISASSEMBLY FOR REPAIR

2. Precautions for Disassembly

■ Removing the TX-RX unit from the chassis

1. Remove the cord ASSY from the connector of the TX-RX unit (CN400) ①.
2. Remove the PTT FPC from the connector of the TX-RX unit (CN401) ②.
3. Remove the 14 screws ③.
4. Anchor the screw hole of the TX-RX unit using the tip of a pair of tweezers as shown in the figure. Then, lift the TX-RX unit to remove it from the chassis ④.

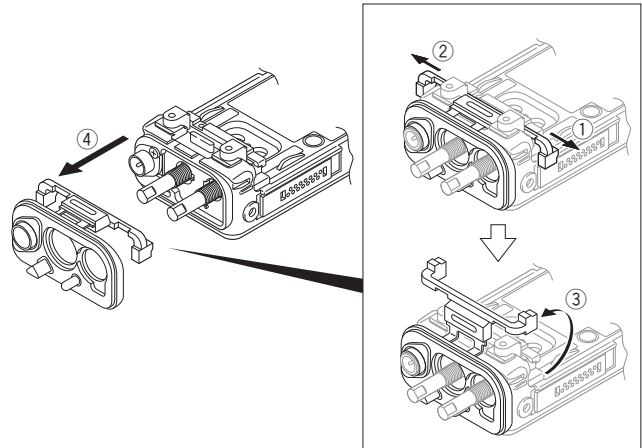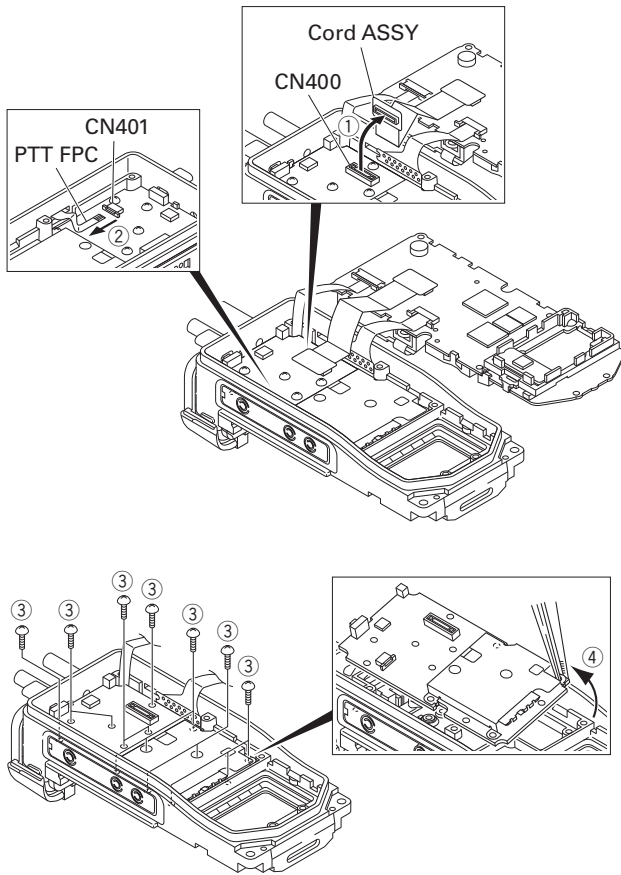

3. Precautions for Reassembly

■ Mounting the chassis onto the case

1. Place the key top on the chassis. Then, fit the chassis tightly into the groove of the key top ①.


Note:

Confirm that the entire groove of the key top fits to the chassis tightly.

2. Mount the chassis onto the case ②.

Note:

After mounting the chassis onto the case, if the Auxiliary (Orange) key part of the VOL/CH packing gets stuck inside the case as shown in the figure, return it to the normal position using a soft tipped item (e.g., finger) ③. Prying it with a pointed metal tool such as forceps, may damage the key top or packing.

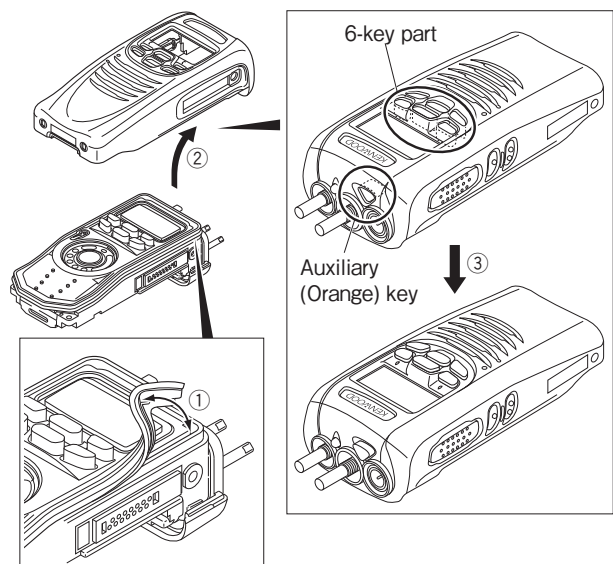


■ Removing the TOP packing (G53-1762-02)

1. Pull the TOP packing to the left to remove the packing that is fit into the left groove of the chassis ①.
2. Pull the TOP packing to the right to remove the packing that is fit into the right groove of the chassis ②.
3. Turn back the TOP packing as shown in the figure ③.
4. Remove the TOP packing ④.

DISASSEMBLY FOR REPAIR


■ Inserting the Volume and Channel switch into the chassis

Insert the volume and channel switch into the chassis with the VOL/CH FPC formed as shown in the figure.

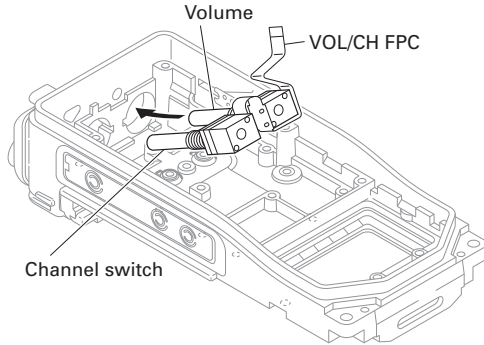

■ Forming the VOL/CH FPC, Cord ASSY and Universal connector FPC

Form the VOL/CH FPC, Cord ASSY and Universal connector FPC as shown in the figure.


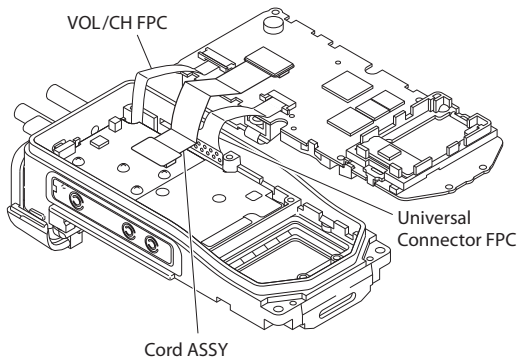


Note:

Fold indications are printed on the Cord ASSY and Universal Connector FPC.


"——" line shows creased line on the top.

"----" line shows creased line on the bottom.

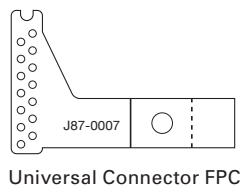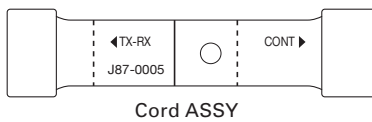



■ Relay hardware (E29-1242-04) installation procedure

1. Fit one side of the relay hardware to a right corner of the chassis using a pair of tweezers ①.
2. Fit the other side of the relay hardware to the rib of the chassis ②.

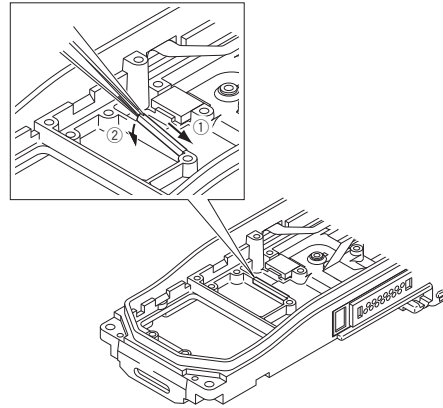

■ Reapply encapsulant and protective sheet on the TX-RX unit as needed


Before repair of this radio, note that there are three areas on the TX-RX unit with encapsulant (special polymer containing silyl group, or a silicone coating) for mandatory continued Safety Protection: Around the protection Zener diodes (D404, D405), and the two fuses (F400, F401). The coating can be removed for repairs, but a similar (CEMEDINE SX720W) and equal coating material with an electrical rating must be applied after repair, sufficient to cover around these critical components and their soldered leads & pads. Use enough coating to completely cover the component and solder pads to approximately 1mm, but not too much. Refer to the photo illustrations.

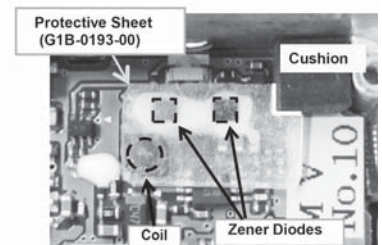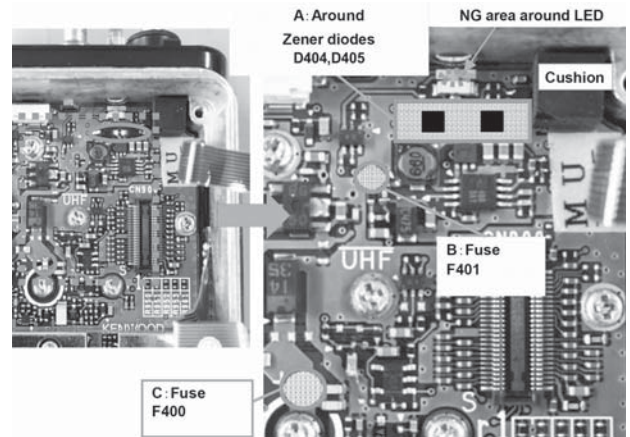

DISASSEMBLY FOR REPAIR

■ Changing the channel selector from 16-channel operation to free

1. Remove the channel selector knob.
2. Remove the circular nut.
3. Remove the mechanical stopper.
4. Reassemble the circular nut and channel selector knob that were removed in steps 1 and 2, in their original positions.

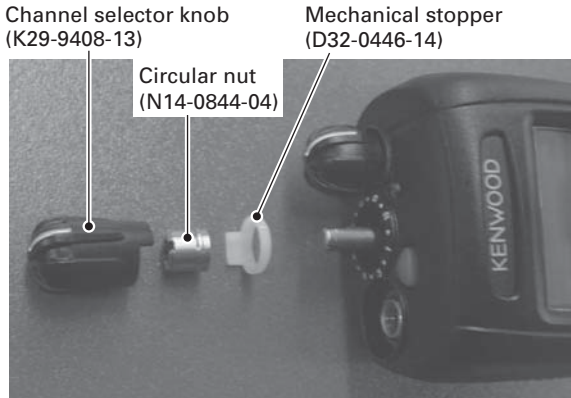

■ Assembly information (Sheet/Cushion)

When "Main Parts" is changed (ordered), "Assembled Sheet/Cushion" should also be changed (ordered) together.

The Sticker and Sheet etc are non-reusable parts. It requires the new one to get the radio's performance after repairs.

For example, when "Plastic Cabinet (A02-4002-23 (6-key))" is changed, "Sticker (B42-7296-04)", "Badge (B43-1606-04)" and "Fibrous Sheet (G10-1373-04)" should be ordered and changed together because Sticker (B42-7296-04), Badge (B43-1606-04) and Fibrous Sheet (G10-1373-04) are non-reusable.

| Main Parts | | Assembled Sheet/ Cushion | | |
|-------------------------|-------------|---------------------------------|-------------|---|
| Part Name | Part Number | Part Name | Part Number | Remark |
| Plastic Cabinet (6-key) | A02-4002-23 | Sticker | B42-7417-04 | "NEXEDGE" is printed. |
| | | Badge | B43-1606-14 | "KENWOOD" is printed. |
| LCD ASSY | B38-0923-05 | Adhesive Sheet (LCD) | J99-0714-04 | Used for fixing the LCD ASSY on the Illumination Guide (LCD). Also used for fixing the Illumination Guide (LCD) on the Control Unit. |
| Cord ASSY (50-pin FPC) | X42-3510-10 | Cushion (50-pin FPC) | G13-2293-04 | |
| Speaker | T07-0755-25 | Rubber Cushion (SP) | G11-4272-14 | |
| | | Sheet (SP) | G11-4458-14 | Used for stabilizing the waterproof performance. "•" (a hole) on the Sheet (SP) shows the upper side (6-key FPC side). |
| Switch Unit (6-key FPC) | X41-3840-10 | Adhesive Sheet (6-key FPC) | J99-0745-04 | Used for fixing the Switch Unit (6-key FPC) from the back side of the Holder (FG-SP) before soldering. |
| | | Adhesive Sheet (6-key FPC) | J99-0712-14 | Used for fixing the Switch Unit (6-key FPC) on the Holder (FG-SP). |
| Switch Unit (PTT FPC) | X41-3830-10 | Sheet (PTT) | G11-4428-04 | Used for fixing the Push Knob (PTT) on the Switch Unit (PTT FPC) and stabilizing the waterproof performance. |
| | | Adhesive Sheet (PTT FPC) | J99-0711-04 | Used for fixing the Switch Unit (PTT FPC) on the Chassis. |
| Chassis | A10-4111-21 | Relay Hardware (VCO-Chassis) | E29-1242-04 | Used for stabilizing the shield performance of the VCO. |
| | | Sheet (Air) | G11-4500-04 | This sheet is put on the leak check hole. This sheet lets air through, but does not let water through. |
| | | Rubber Sheet (FET) | G11-4429-04 | Used for stabilizing the radiation performance of the FET. |
| | | Sheet (Air) | G11-4440-04 | This sheet is a protect cover of the sheet (G11-4500-04). |
| Terminal Block | E72-0425-13 | Cushion (ANT) | G13-2220-04 | Used for fixing the Terminal ASSY. |
| | | Adhesive Sheet (Terminal Block) | J99-0747-04 | Used for fixing the Terminal Block and the Packing (Terminal Block). |

CIRCUIT DESCRIPTION

1. Overview

The NX-203 is a VHF portable transceiver designed to operate in the frequency range of 136 to 174MHz. The unit consists of receiver, transmitter, phase-locked loop (PLL) frequency synthesizer, base band parts, power supply, and control circuits.

2. Frequency Configuration

The receiver is a double-conversion superheterodyne using the first intermediate frequency (IF) of 58.05MHz and the second IF of 450kHz. Incoming signals from the antenna are mixed with the local signal from the PLL circuit to produce the first IF of 58.05MHz. This is then mixed with the 57.6MHz second local oscillator output to produce the 450kHz second IF. The transmit signal frequency is generated by the PLL VCO, and modulated by the signal from the DSP. It is then amplified and fed to the antenna.

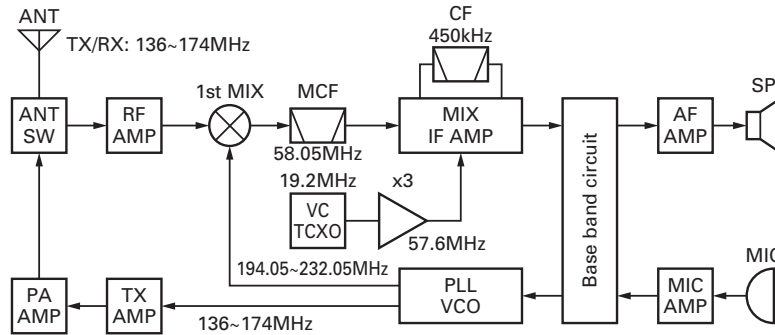


Fig. 1 Frequency configuration

3. Receiver System

3-1. RF Circuit

An incoming RF signal from the antenna terminal is passed through the antenna switch (D104, D105, D209 and D211) and then the bandpass filter (L220, L224). The bandpass filter is adjusted by a variable capacitor. The input voltage to the variable capacitor is regulated by the voltage output from the D/A converter (IC703). The signal is amplified by an RF amplifier (Q204), and passed through the bandpass filter (L210, L215). The resulting signal is applied to the first mixer (Q203), where it is mixed with the first local oscillator signal output from the frequency synthesizer to produce the first IF (58.05MHz).

3-2. IF Circuit

The first IF signal is passed through a four-pole monolithic crystal filter (XF200) to reject adjacent channel signals. The filtered first IF signal is amplified by the first IF amplifier (Q202) and then applied to the IF system IC (IC202). The IF system IC provides a second mixer, AGC amplifier, and RSSI (Received Signal Strength Indicator).

The second mixer mixes the first IF signal with the 57.6MHz of second local oscillator output and produces the second IF signal of 450kHz.

The second IF signal is passed through the ceramic filter (CF200) to reject the adjacent channel signal. The filtered second IF signal is amplified by the AGC amplifier.

The signal from the AGC amplifier is input to the ASIC (IC108) through the ceramic filter (CF201) and operational amplifier (IC203).

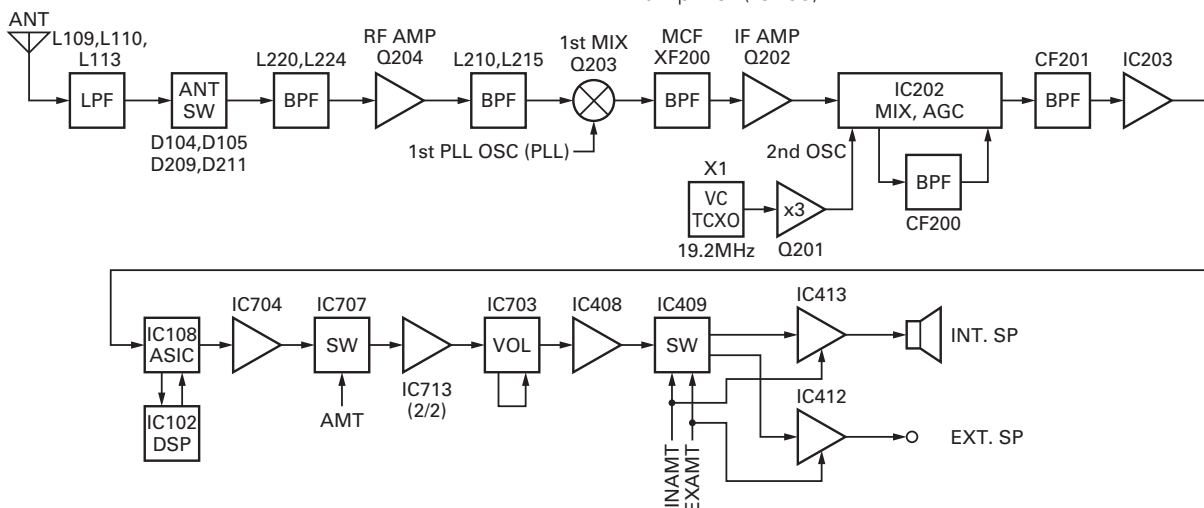


Fig. 2 RF and IF circuit

CIRCUIT DESCRIPTION

3-3. Audio Amplifier Circuit

Audio processing (high-pass filter, low-pass filter, de-emphasized and so on) at FM mode and decoding at NXDN mode are processed by DSP. The audio signal from IC108 and IC102 goes through the amplifier (IC704). The signal then goes through a mute switch (IC707), amplifier (IC713), electronic volume control (IC703), and AF amplifier (IC408).

While busy, AMT becomes Low to turn IC707 on, and the signal is fed to the AF switch. While INAMT is High, the AF switch (IC409) selects the internal speaker, and the audio signal is fed to the internal audio power amplifier (IC413), and output to the internal speaker. While EXAMT is High, the AF switch (IC409) selects the external speaker, and the audio signal is fed to the external audio power amplifier (IC412), and output to the external speaker. The power supply for IC413 and IC412 is turned on while INAMT or EX-AMT is High.

The speaker is switched by the logic of the speaker switching terminal SSW on the universal connector. When the SP-MIC is not attached, SSW becomes High. IC108 detects the logic of SSW and activates either INAMT or EX-AMT.

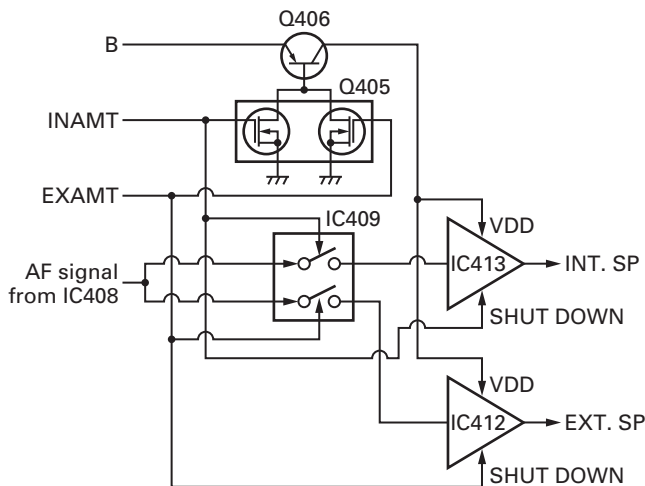


Fig. 3 Audio amplifier circuit

3-4. Squelch Circuit

It amplifies the demodulated noise signal from IC108 after filtering through the BPF circuit. Then, the amplified signal is converted to a DC signal by the detection circuit. The converted signal is fed back to IC108.

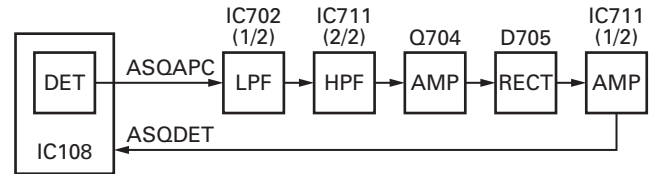


Fig. 4 Squelch circuit

4. Transmitter System

4-1. Audio Band Circuit

The signal from the internal microphone goes through the mute switch (Q5). When the SP-MIC is not attached, the microphone switching terminal (MSW) on the universal connector becomes High, and the mute switch (Q5) is turned on. When the SP-MIC is attached, MSW is connected to GND inside the SP-MIC. For this reason, Q5 is turned off, the internal microphone is muted, and only the input of the external microphone is supplied to the microphone amplifier. The signal from the microphone goes through the mute switch (Q707), and is amplified by IC716 (1/2) and limited by the AGC circuit which is composed of D703, D704, Q705 and Q706.

4-2. Base Band Circuit

The audio signal output from the base band circuit is converted to digital data with a sampling frequency of 48kHz. This digital data is sent to the DSP (IC102), and voice signals of 300Hz or lower and frequencies of 3kHz or higher are cut off and an audio range of 300Hz to 3kHz is extracted. The audio signal is then pre-emphasized in FM mode and synthesized with the signals, such as QT and DQT, as required, and is then output from IC108. In Digital mode, the audio signal is converted to the 4-Level FSK base band signal and output from IC108. The DTMF and MSK base band signals are also generated by the DSP and output by IC108.

LPF (IC705) works as a smoothing filter. The DAC (IC703) assigns the base band signal to the VCO and VCTCXO (X1). At this time, the level output according to the transmit carrier is fine-adjusted according to each modulation method.

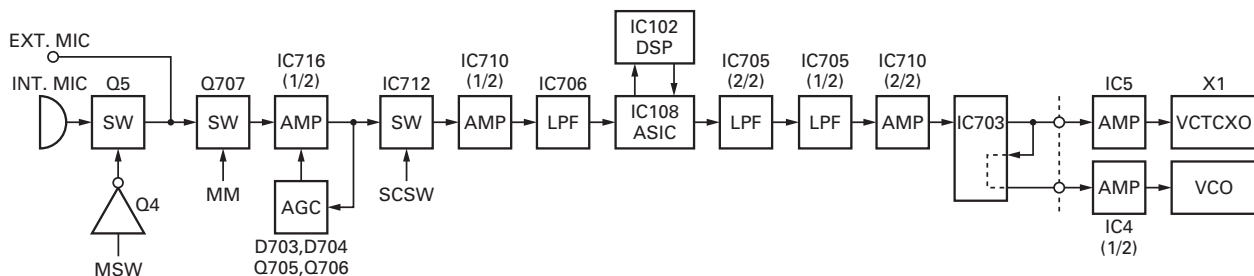


Fig. 5 Audio band and Base band circuit

CIRCUIT DESCRIPTION

4-3. VOX

IC716 (2/2) amplifies the audio signal captured in the microphone. The signal is then converted into the DC voltage, rectified by D706. The DC voltage activates the ASIC (IC108), and the VOX starts.

4-4. Drive and Final Amplifier

The signal from the T/R switch (D100 is on) is amplified by the drive amplifier (Q102 and Q103) to 25~27dBm. The output of the drive amplifier is amplified by the RF power amplifier (Q106) to 5.0W (1W when the power is low). The RF power amplifier is MOS FET. The output of the RF power amplifier is then passed through the harmonic filter (LPF) and antenna switch (D104, D105 are on) and applied to the antenna terminal.

4-5. APC Circuit

The APC circuit always monitors the current flowing through the RF power amplifier (Q106) and keeps a constant current. The voltage drop at R136, R138 and R141 is caused by the current flowing through the RF power amplifier and this voltage is applied to the differential amplifier (IC100 1/2). IC100 (2/2) compares the output voltage of IC100 (1/2) with the reference voltage from IC108, and the output of IC100 (2/2) controls the VGG of Q102, Q103 and Q106 to make the both voltages the same. The change of power high/low is carried out by the change of the reference voltage. Q105, Q107 and Q110 are turned on and Q104 and Q109 are turned off in transmit and the APC circuit is active.

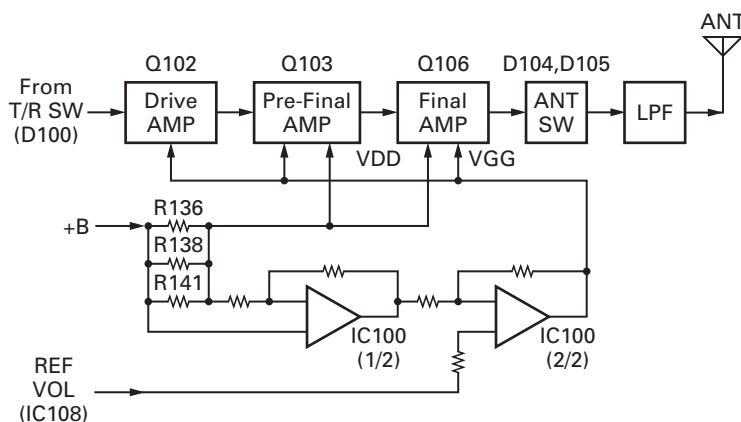


Fig. 6 Drive and final amplifier and APC circuit

5. PLL Frequency Synthesizer

5-1. VCTCXO (X1)

VCTCXO (X1) generates a reference frequency of 19.2MHz for the PLL frequency synthesizer. This reference frequency is applied to pin 9 of the PLL IC (IC3) and is connected to the IF circuit as a 2nd local signal through the Tripler (Q201). The VCTCXO oscillation frequency is determined by the DC voltage of the VC terminal. The VC voltage is fixed to 1.65V by R59 and R60, and supplied to the VC terminal through IC5. The modulation signal is also fed to VC terminal through IC5.

The frequency adjustment is achieved by switching the ratio of dividing frequency that is not adjusted by the DC voltage impressed to VC. The resolution of the adjusting frequency is approximately 8Hz. Because twice the VCO output are input for the input frequency of PLL IC, the sending and receiving frequency can be adjusted by approximately 4Hz resolution.

5-2. VCO

There is a RX VCO and a TX VCO.

The TX VCO (Q10) generates a transmit carrier and the RX VCO (Q8) generates a 1st local signal. For the VCO oscillation frequency, the transmit carrier is 136 to 174 MHz and the 1st local receive signal is 194.05 to 232.05MHz.

The VCO oscillation frequency is determined by one system of operation switching terminal "T/R" and two systems of voltage control terminals "CV" and "ASSIST".

The operation switching terminal, "T/R", is controlled by the control line (/T_R) output from the ASIC (IC108). When the /T_R logic is low, the VCO outputs the transmit carrier and when it is high, it outputs a 1st local receive signal.

The voltage control terminals, "CV" and "ASSIST", are controlled by the PLL IC (IC3) and ASIC (IC108) and the output frequency changes continuously according to the applied voltage. For the modulation input terminal, "VCO_MOD", the output frequency changes according to the applied voltage. This is used to modulate the VCO output. "VCO_MOD" works only when "/T_R" is low.

CIRCUIT DESCRIPTION

5-3. PLL IC (IC3)

The PLL IC compares the differences in phases of the VCO oscillation frequency and the VCTCXO reference frequency, returns the difference to the VCO CV terminal and realizes the "Phase Locked Loop" for the return control. This allows the VCO oscillation frequency to accurately match (lock) the desired frequency.

When the frequency is controlled by the PLL, the frequency convergence time increases as the frequency difference increases when the set frequency is changed. To supplement this, the ASIC is used before control by the PLL IC to bring the VCO oscillation frequency close to the desired frequency. As a result, the VCO CV voltage does not change and is always stable at approximately 2.5V.

The desired frequency is set for the PLL IC by the ASIC (IC108) through the 3-line "SDO1", "SCK1", "/PCS_RF" serial bus. Whether the PLL IC is locked or not is monitored by the ASIC through the "PLD" signal line. If the VCO is not the desired frequency (unlock), the "PLD" logic is low.

5-4. Doubler (Q4)

The doubler (Q4) extracts the twice harmonic component from the signal from the VCO. This twice harmonic component is then fed into PLL (IC3) through band pass filter.

Band pass filter consists of two filters. One is for TX (L3,L5,L7) and pass band is 272.0 to 348.0MHz. The other is for RX 1st local (L2,L6,L30) and pass band is 388.1 to 464.1MHz.

5-5. Local Switch (D100, D201)

The connection destination of the signal output from the buffer amplifier (Q100) is changed with the diode switch (D100) that is controlled by the transmission power supply, 50T, and the diode switch (D201) that is controlled by the receive power supply, 50R. If the 50T logic is high, it is connected to a send-side pre-drive (Q102). If the 50T logic is low, it is connected to a receive-side mixer (Q203).

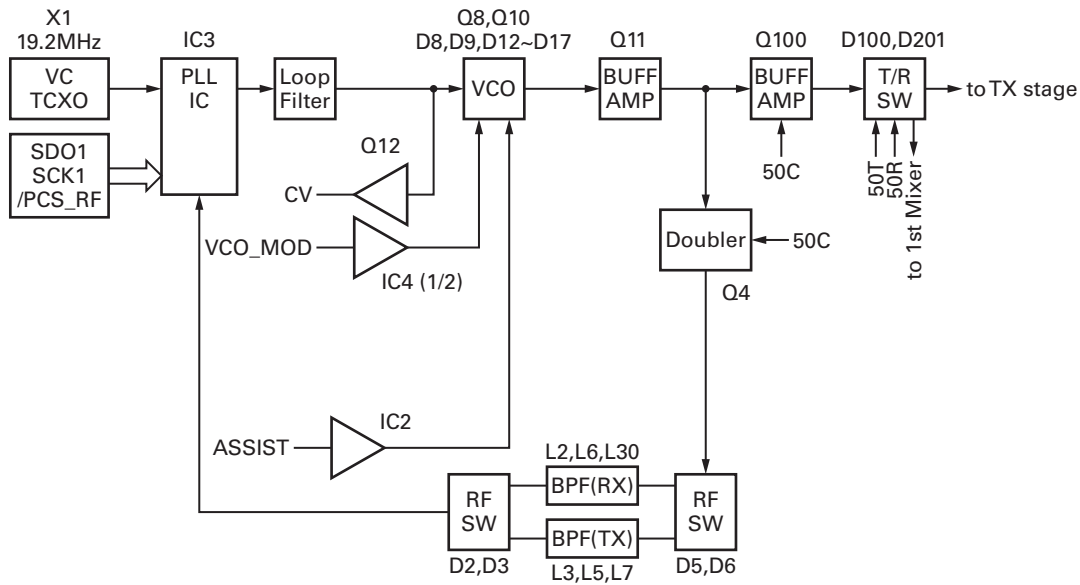


Fig. 7 PLL block diagram

6. Control Circuit

The control circuit consists of the ASIC (IC108) and its peripheral circuits. IC108 mainly performs the following;

- 1) Switching between transmission and reception by PTT signal input.
- 2) Reading system, zone, frequency, and program data from the memory circuit.
- 3) Sending frequency program data to the PLL.
- 4) Controlling squelch on/off by the DC voltage from the squelch circuit.
- 5) Controlling the audio mute circuit by decode data input.

6-1. ASIC

The ASIC (IC108) is a 32-bit RISC processor, equipped with peripheral function and ADC/DAC.

This ASIC operates at 18.432MHz clock and 3.3V /1.5V DC. It controls the flash memory, SRAM, DSP, the receive circuit, the transmitter circuit, the control circuit, and the display circuit and transfers data to or from an external device.

CIRCUIT DESCRIPTION

6-2. Memory Circuit

The memory circuit consists of the ASIC (IC108) and the SRAM (IC103) and flash memory (IC101). The flash memory has capacity of 32M-bit that contains the transceiver control program for the ASIC and stores the data. It also stores the data for transceiver channels and operating parameter that are written by the FPU. This program can be easily written from external devices. The SRAM has capacity of 1M-bit that contains work area and data area.

■ Flash memory

Note: The flash memory stores the data that is written by the FPU (KPG-111D/111DN), tuning data (Deviation, Squelch, etc.), and firmware program (User mode, Test mode, Tuning mode, etc.). This data must be rewritten when replacing the flash memory.

■ SRAM (Static memory)

Note: The SRAM has temporary data area and work area.

6-3. LCD

The LCD is controlled using the bus lines on the connector (CN1) of the Control unit (X53-459). It corrects the LCD contrast voltage using IC1.

6-4. Key Detection Circuit

Keys are detected using the key scan circuit in IC108. The /KEYI signals that are normally pulled down go high when any key is pressed.

6-5. Low Battery Warning

The battery voltage is divided using R444 and R445 and is detected by the ASIC (IC108). When the battery voltage falls below the voltage set by the Low battery warning adjustment, the red LED blinks to notify the operator that it is time to replace the battery. If the battery voltage falls even more (approx. 5.8V), a beep sounds and transmission stops.

| Low battery warning | Battery condition |
|--|---|
| The red LED blinks during transmission. | The battery voltage is low but the transceiver is still usable. |
| The red LED blinks and the warning tone beeps while the PTT switch is pressed. | The battery voltage is low and the transceiver is not usable to make calls. |

6-6. DSP

The DSP circuit consists of a DSP (IC102) and processes the base band signal. The DSP operates on an external clock of 18.432MHz (the same as the IC108), the I/O section operates at 3.3V and the core section operates at 1.5V. The DSP carries out the following processes:

- 4 Level FSK processing
- Analog FM pre-emphasis/de-emphasis
- Vocoder processing between audio codec and modulation/demodulation
- CAI processing, such as error correction encoding
- QT/DQT encoding/decoding
- LTR encoding/decoding
- DTMF encoding/decoding
- MSK encoding/decoding
- 2-tone encoding/decoding
- Compressor/expander processing
- Voice scrambler processing
- Transmit/receive audio filtering processing
- Microphone amplifier AGC processing
- Audio mute processing
- Modulation level processing

7. Power Supply Circuit

The battery voltage (+B) is provided from the battery terminal on the TX/RX unit (X57). The battery voltage passes through the 2.5A fuse (F400), and goes to the RF final amplifier, AVR ICs (IC400, IC403), and Control unit (X53-459).

In the control unit, +B is connected to the DC/DC (IC407), AVR ICs (IC411, IC708, IC416), and voltage detector IC (IC414). The voltage detector watches the battery voltage. If the battery voltage is 5.6V or higher, the detector outputs High. While the output of IC414 is High, IC416 and Q409 provide 3.1V (31BU) to the backup-section.

When the VOL SW is turned on, SB1 becomes high (battery voltage). The DC/DC (IC407) operates if both SB1 and the output of the detector are high. IC407 outputs 3.8V and it activates IC404 (33M), IC717 (15M), and IC406 (33A). As a result, the ASIC and DSP operate.

The SBC signal becomes High after the ASIC operates, IC708 (5A), Q403 on the Control unit (SB2) and Q403 on the TX-RX unit (SB3) are turned on. IC402 and IC403 operate by turning on these AVR ICs and FET switches.

The 5UC signal becomes High when an option is installed on the universal connector. Then IC411 (50U) operates.

When the /SAVE signal becomes High, IC400 (50C) operates. The output of IC400 is connected to three FET switches (Q401, Q402, Q405). When the SBC signal becomes High, IC403 (33C) operates. The FET switches are controlled by the ASIC. Q405 (50T) is turned on in transmit mode. Q401 (50R) and Q402 (50IF) are turned on in receive mode.

When the VOL SW is turned off, the /PSW signal becomes Low. After detecting the /PSW signal, the ASIC changes the SBC signal to Low. Then the power supplies except IC416 (31BU) stop.

CIRCUIT DESCRIPTION

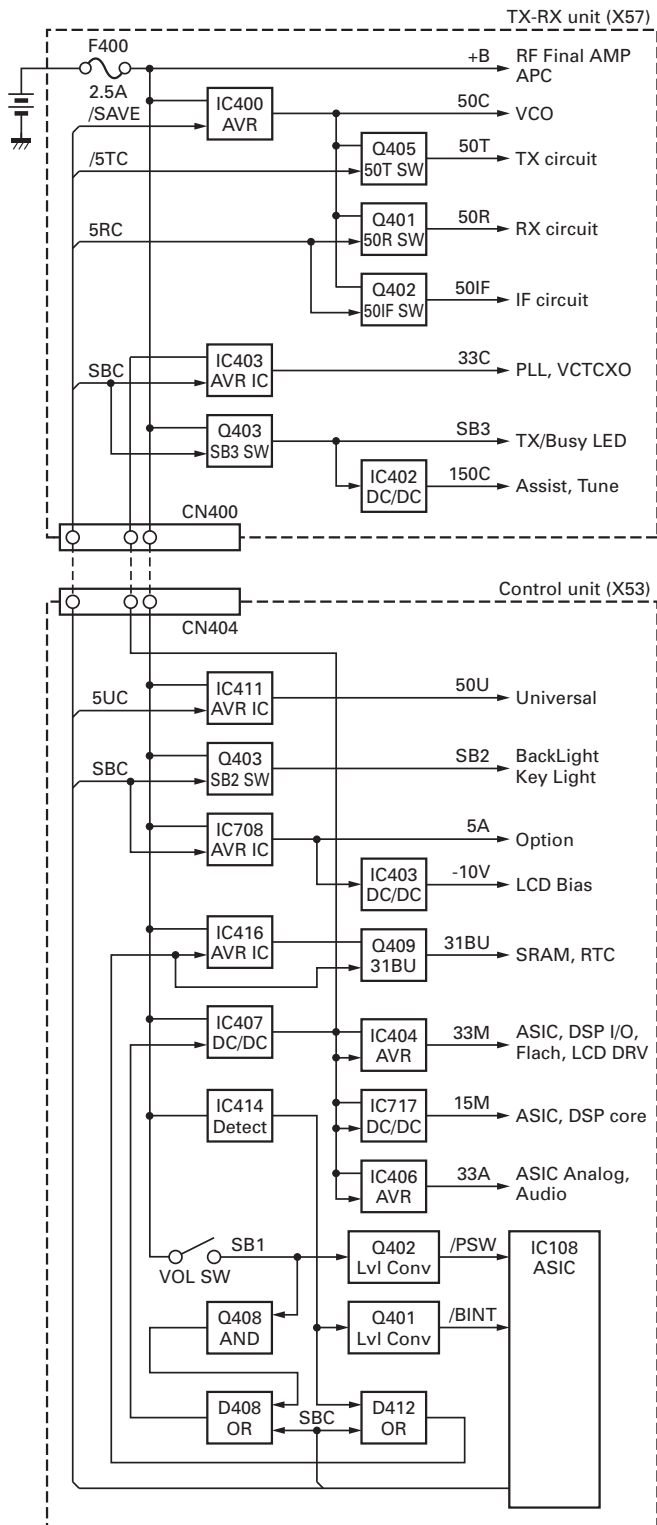


Fig. 8 Power supply circuit

8. Signaling Circuit

8-1. Encode (QT/DQT/LTR/DTMF/2-tone/MSK)

Each signaling data signal of QT, DQT, LTR, DTMF, 2-tone and MSK is generated by the DSP circuit, superposed on a modulation signal and output from IC108. The modulation balance of the QT/DQT/LTR signal is adjusted by the D/A converter (IC703) and the resulting signal is routed to the modulation input of the VCO and VCXO (X1). Each deviation of the TX QT, DQT, LTR, DTMF, 2-tone and MSK tone is adjusted by changing the output level of IC108 and the resulting signal is routed to the VCO and VCXO. The RX DTMF tone is routed to the receive audio signal system, and is output from the speaker.


8-2. Decode (QT/DQT/LTR/DTMF/2-tone/MSK)

The audio signal is removed from the FM detection signal sent to the DSP circuit and the resulting signal is decoded.

9. Comander Circuit

The term "comander" means compressor and expander. The comander reduces noise by utilizing a compressor and an expander. The transceiver contains a DSP (IC102) to perform this operation. The transceiver comander can be turned on or off using the FPU.

10. 150C DC/DC Converter Protect

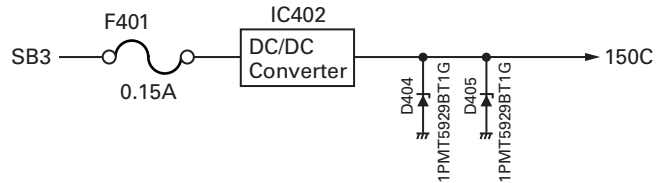

COMPONENTS DESCRIPTION

Control unit (X53-4590-14)

| Ref. No. | Part Name | Description |
|-----------|------------|---------------------------|
| IC1 | IC | LCD contrast |
| IC101 | IC | Flash memory |
| IC102 | IC | DSP |
| IC103 | IC | SRAM |
| IC104 | IC | 2 input AND gate |
| IC105 | IC | Reset |
| IC106 | IC | RTC |
| IC107 | IC | Buffer |
| IC108 | IC | ASIC |
| IC109 | IC | 2 input AND gate |
| IC401,402 | IC | Bus switch |
| IC403 | IC | Voltage doubling inverter |
| IC404 | IC | Voltage regulator (33M) |
| IC406 | IC | Voltage regulator (33A) |
| IC407 | IC | DC/DC converter |
| IC408 | IC | AF AMP |
| IC409 | IC | AF switch |
| IC411 | IC | Voltage regulator (50U) |
| IC412,413 | IC | Audio AMP |
| IC414 | IC | Reset |
| IC415 | IC | 2 input AND gate |
| IC416 | IC | Voltage regulator |
| IC417,418 | IC | Dual bus buffer |
| IC701 | IC | I/O control |
| IC702 | IC | APC LPF |
| IC703 | IC | D/A converter |
| IC704 | IC | RX AF LPF |
| IC705 | IC | Modulation LPF |
| IC706 | IC | MIC AMP |
| IC707 | IC | RX AF switch |
| IC708 | IC | Voltage regulator (5A) |
| IC709 | IC | Sidetone mute |
| IC710 | IC | MOD/MIC summing AMP |
| IC711 | IC | SQL BPF/SQL DC AMP |
| IC712 | IC | MIC switch |
| IC713 | IC | 1.65V REF/RX summing AMP |
| IC714 | IC | OPT switch |
| IC715,716 | IC | VOX AMP |
| IC717 | IC | DC/DC converter (15M) |
| Q1,2 | Transistor | LCD backlight switch |

| Ref. No. | Part Name | Description |
|----------|-------------|----------------------------|
| Q3 | FET | LCD backlight switch |
| Q4 | FET | MIC mute control |
| Q5 | FET | MIC mute switch |
| Q401,402 | FET | Level converter |
| Q403 | Transistor | SB2 switch |
| Q404 | FET | SB2 switch control |
| Q405 | FET | AF AMP switch |
| Q406,407 | Transistor | Voltage regulator (AF AMP) |
| Q408,409 | Transistor | DC switch |
| Q410 | FET | DC switch |
| Q411 | FET | Level converter |
| Q412 | FET | DC switch control |
| Q413~415 | Transistor | DC switch |
| Q702 | FET | Tone switch |
| Q703 | FET | W/N noise switch |
| Q704 | Transistor | SQL noise AMP |
| Q705,706 | Transistor | MIC AGC |
| Q707 | FET | MIC mute |
| D3,4 | LED | LCD backlight |
| D7,8 | LED | LCD backlight |
| D11 | Diode | LCD backlight switch |
| D12~16 | Diode | Reverse current prevention |
| D17~21 | Zener diode | Surge absorption |
| D22,23 | Diode | Surge absorption |
| D102 | Diode | Reverse current prevention |
| D401~404 | Diode | Key control |
| D405,406 | Diode | DC/DC converter |
| D407 | Diode | Over voltage prevention |
| D408 | Diode | DC/DC converter control |
| D409,410 | Diode | SP control |
| D412 | Diode | DC switch control |
| D414,415 | Diode | Reverse current prevention |
| D416 | Diode | 33M control |
| D417 | Diode | 33A control |
| D701 | Diode | 5A switch |
| D702 | Diode | PLD control |
| D703,704 | Diode | Detector |
| D705 | Diode | Noise detector |
| D706 | Diode | VOX detector |
| D707 | Diode | VOX |

COMPONENTS DESCRIPTION

TX-RX unit (X57-8950-11)

| Ref. No. | Part Name | Description |
|-----------|------------|-------------------------|
| IC1 | IC | Temperature sensor |
| IC2 | IC | AF AMP for VCO tune |
| IC3 | IC | PLL IC |
| IC4 | IC | OP AMP (VCO MOD/APC) |
| IC5 | IC | DC AMP for TCXO MOD |
| IC100 | IC | Auto power control |
| IC200,201 | IC | DC AMP for BPF |
| IC202 | IC | FM IC |
| IC203 | IC | Buffer |
| IC400 | IC | Voltage regulator (50C) |
| IC401 | IC | 50T control |
| IC402 | IC | DC/DC converter |
| IC403 | IC | Voltage regulator (33C) |
| IC404 | IC | OP AMP (RSSI/VAGC) |
| Q1,2 | Transistor | Buffer AMP switch |
| Q4 | Transistor | Buffer AMP |
| Q6 | Transistor | Ripple filter |
| Q7 | FET | T/R switch |
| Q8,10 | FET | VCO oscillation |
| Q9 | FET | T/R switch |
| Q11 | Transistor | Buffer AMP |
| Q12 | FET | Buffer AMP |
| Q13 | FET | Buffer AMP switch |
| Q100 | Transistor | Buffer AMP |
| Q102 | FET | Drive AMP |
| Q103 | FET | Pre-final AMP |
| Q104,105 | Transistor | APC switch |
| Q106 | FET | RF final AMP |
| Q107,109 | FET | APC switch |
| Q110 | Transistor | APC switch |
| Q201 | Transistor | 2nd Local tripler |
| Q202 | Transistor | IF AMP |

| Ref. No. | Part Name | Description |
|-----------------------|----------------------------|-----------------------------|
| Q203 | FET | Mixer |
| Q204 | FET | RF AMP |
| Q401 | FET | 50R switch |
| Q402 | FET | 50IF switch |
| Q403 | FET | SB3 switch |
| Q404 | FET | DC/DC converter switch |
| Q405 | Transistor | 50T switch |
| Q406 | Transistor | TX/RX LED switch |
| D2,3 | Diode | fin RF switch |
| D4 | Diode | Bypass diode |
| D5,6 | Diode | fin RF switch |
| D7 | Diode | Ripple filter |
| D8,9 D12~17 | Variable capacitance diode | Frequency control |
| D18 | Variable capacitance diode | TX modulation |
| D100 | Diode | Local switch |
| D103 | Zener diode | APC switch |
| D104,105 | Diode | Antenna switch |
| D106 | Zener diode | APC protect |
| D201 | Diode | Local switch |
| D204,205, D207,208 | Variable capacitance diode | Vari-cap tune |
| D209 | Diode | Antenna switch |
| D211 | Diode | Antenna switch |
| D213 | Diode | Reverse protection |
| D400 | Diode | Reverse protection |
| D401 | Diode | 50T control |
| D402 | LED | TX/RX LED |
| D403 | Diode | Reverse protection |
| D404,405 | Zener Diode | 15V DC/DC Converter protect |

PARTS LIST

△ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

NX-203

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Destination |
|---------------|---------|-------------|--------------------------------|-------------|
| NX-203 | | | | |
| 1 | 1A | A02-4002-23 | PLASTIC CABINET(6KEYS) | |
| 3 | 3A | A10-4111-21 | CHASSIS | |
| 4 | 2B | A62-1156-02 | PANEL(TOP) | |
| 6 | 1B,1D | B09-0712-03 | CAP ACCESSORY | |
| 7 | 1A | B11-1853-34 | FILTER(LCD) | |
| 8 | 1A | B11-1854-02 | ILLUMINATION GUIDE(LCD) | |
| 9 | 3B | B11-1855-04 | ILLUMINATION GUIDE(TX/BUSY) | |
| 10 | 1A | B38-0923-05 | LCD ASSY | |
| 12 | 1A | B42-7417-04 | STICKER | |
| 13 | 1B | B43-1606-14 | BADGE | |
| 14 | 2D | B62-2601-00 | INSTRUCTION MANUAL | |
| 17 | 2B | D32-0446-14 | STOPPER(16CH) | |
| 19 | 2A | E29-1241-04 | RELAY HARDWARE(VCO-PCB) | |
| 20 | 3A | E29-1242-04 | RELAY HARDWARE(VCO-CHASS) | |
| 21 | 3B | E58-0532-05 | RECTANGULAR RECEPTACLE(SP/MIC) | |
| 22 | 3B | E72-0425-13 | TERMINAL BLOCK | |
| 24 | 3A | F07-1959-14 | COVER(OP BOARD) | |
| 27 | 2A | G02-1865-13 | EARTH SPRING(SP) | |
| 28 | 1A | G10-1373-04 | FIBROUS SHEET(SP) | |
| 29 | 2B | G10-1807-04 | FIBROUS SHEET(TOP PANEL) | |
| 30 | 2A | G11-4272-14 | RUBBER CUSHION(SP) | |
| 31 | 2A | G11-4428-04 | SHEET(PTT) | |
| 32 | 3A | G11-4429-04 | RUBBER SHEET(FET) | |
| 33 | 3A | G11-4440-04 | SHEET(AIR) | |
| 34 | 2A | G11-4458-14 | SHEET(SP) | |
| 35 | 2A | G11-4459-04 | SHEET(TX-RX PCB) | |
| 36 | 3A | G11-4500-04 | SHEET(AIR) | |
| 37 | 1A | G11-4497-04 | SHEET(LCD) | |
| 38 | 2A | G11-4501-04 | SHEET(MIC ELEMENT) | |
| 39 | 1B | G11-4540-04 | SHEET(CABINET) | |
| 41 | 2A,3B | G13-2220-04 | CUSHION(ANT/OP BOARD) | |
| 40 | 2A | G13-2292-04 | CUSHION(TX-RX PCB) | |
| 43 | 2A | G13-2293-04 | CUSHION(50PIN FPC) | |
| 45 | 2A | G13-2294-04 | CUSHION(TERMINAL) | |
| 46 | 3B | G53-1762-02 | PACKING(TOP) | |
| 47 | 3B | G53-1763-03 | PACKING(TERMINAL BLOCK) | |
| 48 | 3A | G53-1764-03 | PACKING(OP BOARD COVER) | |
| 49 | 1A | G53-1765-11 | PACKING(6KEYS) | |
| 52 | 2B | G53-1768-04 | PACKING(VOL,SELECTOR O-RING) | |
| 53 | 1B,1D | G53-1769-04 | PACKING(CAP) | |
| 54 | 2B | G53-1792-04 | PACKING(SMA O-RING) | |
| 56 | 2A | J19-5505-11 | HOLDER(FG-SP) | |
| 57 | 2B | J19-5506-03 | HOLDER(VOL,SELECTOR) | |
| 58 | 2A | J19-5507-02 | HOLDER(OP BOARD) | |
| 59 | 2B | J21-8638-14 | MOUNTING HARDWARE(HOLDER) | |
| 60 | 1C | J29-0730-05 | BELT CLIP ACCESSORY | |
| 62 | 2B | J30-1296-04 | SPACER(VOL) | |
| 63 | 2B | J87-0028-05 | FPC(VOL,SELECTOR) | |
| 64 | 3B | J87-0007-25 | FPC(UNIVERSAL) | |
| 65 | 2B | J99-0745-04 | ADHESIVE SHEET | |
| 67 | 3A | J99-0711-04 | ADHESIVE SHEET(PTT FPC) | |
| 68 | 2B | J99-0712-14 | ADHESIVE SHEET(6KEY FPC) | |
| 69 | 1A,2A | J99-0714-04 | ADHESIVE SHEET(LCD) | |
| 70 | 3B | J99-0715-08 | ADHESIVE SHEET(UNIVERSAL) | |

| Ref. No. | Address | Parts No. | Description | Destination |
|-----------------------------------|----------|---------------|----------------------------------|-------------|
| 72 | 3B | J99-0747-04 | ADHESIVE SHEET(TERMINAL BLOCK) | |
| 77 | 3A | K25-2001-03 | PUSH KNOB(PTT) | |
| 78 | 1A | K29-9405-03 | KNOB(PTT) | |
| 79 | 1A | K29-9406-03 | BUTTON KNOB(SIDE KEY) | |
| 80 | 1B | K29-9407-03 | KNOB(VOL) | |
| 81 | 1B | K29-9408-13 | KNOB(SELECTOR) | |
| A | 1B,1D | N08-0564-04 | DRESSED SCREW ACCESSORY | |
| C | 3A | N09-2440-15 | SPECIAL SCREW(CASE) | |
| D | 2A,2B | N09-6549-04 | STEPPED SCREW(FG-SP HOLDER) | |
| E | 2B,3A | N09-6554-05 | PAN HEAD SCREW(ANT/OP BOARD) | |
| G | 1C | N09-6585-15 | PAN HEAD MACHINE SCREW ACCESSORY | |
| B | 3B | N0Z-0001-00 | HEXAGON HEAD SCREW(BATT-) | |
| F | 2B | N14-0844-04 | CIRCULAR NUT(VOL,SELECTOR) | |
| H | 1A,2A,2B | N83-2005-48 | PAN HEAD TAPTITE SCREW(PCB) | |
| S1 | 2B | S60-0437-05 | ROTARY SWITCH | |
| 85 | 2A | T07-0755-25 | SPEAKER | |
| 86 | 2A | T91-0575-05 | MIC ELEMENT | |
| VR1 | 2B | R31-0666-15 | V RESISTOR | |
| 90 | 2A | X41-3830-10 | SWITCH UNIT(PTT FPC) | |
| 91 | 2B | X41-3840-10 | SWITCH UNIT(6KEY FPC) | |
| 92 | 2A | X42-3510-10 | CORD ASSY(50PIN FPC) | |
| - | | X53-4590-15 | SERVICE CONTROL UNIT | |
| - | | X57-8950-11 | TX-RX UNIT | |
| 93 | 2B | X60-4080-10 | TERMINAL ASSY(SMA) | |
| 95 | 1D,2D | H12-4293-02 | PACKING FIXTURE | |
| 96 | 2D | H13-2135-04 | CARTON BOARD | |
| 97 | 3C | H52-2839-02 | ITEM CARTON CASE | |
| 98 | 2A | G1B-0193-00 | SHEET | |
| 99 | 1B | B42-9686-04 | STICKER(CASE) | |
| 100 | 1A | B42-9687-04 | STICKER(YELLOW) | |
| 101 | 3A | B42-9688-04 | STICKER(CHASSIS) | |
| CONTROL UNIT (X53-4590-14) | | | | |
| C1 | | CK73HBB1A104K | CHIP C 0.10UF | K |
| C2 | | CK73GB1E105K | CHIP C 1.0UF | K |
| C3 | | CK73GB1E105K | CHIP C 1.0UF | K |
| C4 | | CK73GB1E105K | CHIP C 1.0UF | K |
| C5 | | CK73GB1E105K | CHIP C 1.0UF | K |
| C6 | | CK73GB1E105K | CHIP C 1.0UF | K |
| C7 | | CK73HBB1A104K | CHIP C 0.10UF | K |
| C8 | | CK73HBB1A104K | CHIP C 0.10UF | K |
| C10 | | CK73HBB1A104K | CHIP C 0.10UF | K |
| C11 | | CK73HXR0J105K | CHIP C 1.0UF | K |
| C12 | | CK73HBB1H471K | CHIP C 470PF | K |
| C13 | | CK73HBB1H471K | CHIP C 470PF | K |
| C14 | | CK73HBB1H471K | CHIP C 470PF | K |
| C15 | | CK73HBB1H471K | CHIP C 470PF | K |
| C16 | | CC73HCH1H101J | CHIP C 100PF | J |
| C17 | | CC73HCH1H101J | CHIP C 100PF | J |
| C23 | | CK73HBB1H102K | CHIP C 1000PF | K |
| C24 | | CC73HCH1H470J | CHIP C 47PF | J |
| C25 | | CK73HBB1H102K | CHIP C 1000PF | K |
| C26 | | CK73HBB1H102K | CHIP C 1000PF | K |
| C27 | | CK73HBB1H102K | CHIP C 1000PF | K |
| C28 | | CC73HCH1H101J | CHIP C 100PF | J |
| C29 | | CC73HCH1H101J | CHIP C 100PF | J |
| C30 | | CC73HCH1H101J | CHIP C 100PF | J |
| C31 | | CC73HCH1H101J | CHIP C 100PF | J |

PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Destination | Ref. No. | Address | Parts No. | Description | Destination |
|----------|---------|---------------|---------------------|-------------|----------|---------|---------------|---------------------|-------------|
| C32 | | CC73HCH1H101J | CHIP C 100PF J | | C161 | | CK73HB1E682K | CHIP C 6800PF K | |
| C33 | | CC73HCH1H101J | CHIP C 100PF J | | C401 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C34 | | CC73HCH1H101J | CHIP C 100PF J | | C402 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C35 | | CK73HBB1H102K | CHIP C 1000PF K | | C403 | | CS77MP1C2R2M | CHIP TNL 2.2UF 16WV | |
| C36 | | CK73HB1E682K | CHIP C 6800PF K | | C404 | | CS77MP1C2R2M | CHIP TNL 2.2UF 16WV | |
| C37 | | CK73HBB1H102K | CHIP C 1000PF K | | C405 | | CS77MP1C2R2M | CHIP TNL 2.2UF 16WV | |
| C38 | | CC73HCH1H101J | CHIP C 100PF J | | C406 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C40 | | CC73HCH1H221J | CHIP C 220PF J | | C407 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C41 | | CC73HCH1H101J | CHIP C 100PF J | | C408 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C101 | | CK73HBB1A104K | CHIP C 0.10UF K | | C409 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C102 | | CK73HBB1A104K | CHIP C 0.10UF K | | C411 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C103 | | CK73HBB1A104K | CHIP C 0.10UF K | | C412 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C104 | | CK73HBB1A104K | CHIP C 0.10UF K | | C414 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C105 | | CK73HXR0J105K | CHIP C 1.0UF K | | C415 | | CS77BP1A100M | CHIP TNL 10UF 10WV | |
| C106 | | CK73HBB1E103K | CHIP C 0.010UF K | | C416 | | CK73FB1A106K | CHIP C 10UF K | |
| C107 | | CK73HBB1A104K | CHIP C 0.10UF K | | C417 | | CC73HCH1H221J | CHIP C 220PF J | |
| C109 | | CK73HBB1H102K | CHIP C 1000PF K | | C418 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C110 | | CK73HBB1H102K | CHIP C 1000PF K | | C419 | | CK73FB1E475K | CHIP C 4.7UF K | |
| C111 | | CK73HBB1A104K | CHIP C 0.10UF K | | C420 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C112 | | CK73HBB1A104K | CHIP C 0.10UF K | | C421 | | CK73HB1E682K | CHIP C 6800PF K | |
| C113 | | CK73HBB1A104K | CHIP C 0.10UF K | | C422 | | CC73HCH1H100C | CHIP C 10PF C | |
| C116 | | CK73HBB1A104K | CHIP C 0.10UF K | | C424 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C117 | | CK73HBB1A104K | CHIP C 0.10UF K | | C425 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C118 | | CK73HXR0J105K | CHIP C 1.0UF K | | C427 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C119 | | CK73HXR0J105K | CHIP C 1.0UF K | | C428 | | CC73HCH1H030C | CHIP C 3.0PF C | |
| C120 | | CK73HBB1A104K | CHIP C 0.10UF K | | C429 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C121 | | CK73HBB1A104K | CHIP C 0.10UF K | | C430 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C122 | | CK73HBB1E103K | CHIP C 0.010UF K | | C431 | | CK73FB1A106K | CHIP C 10UF K | |
| C123 | | CK73HBB1E103K | CHIP C 0.010UF K | | C433 | | CK73FB1A106K | CHIP C 10UF K | |
| C124 | | CK73HBB1E103K | CHIP C 0.010UF K | | C435 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C130 | | CK73HBB1E103K | CHIP C 0.010UF K | | C436 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C131 | | CK73HBB1A104K | CHIP C 0.10UF K | | C437 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C133 | | CS77MP0J100M | CHIP TNL 10UF 6.3WV | | C438 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C134 | | CK73HBB1E103K | CHIP C 0.010UF K | | C439 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C135 | | CK73HBB1H102K | CHIP C 1000PF K | | C440 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C136 | | CK73HBB1E103K | CHIP C 0.010UF K | | C441 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C137 | | CK73GB1E105K | CHIP C 1.0UF K | | C442 | | CK73HBB1H471K | CHIP C 470PF K | |
| C138 | | CK73HBB1A104K | CHIP C 0.10UF K | | C443 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C139 | | CK73HBB1A104K | CHIP C 0.10UF K | | C445 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C140 | | CK73HBB1A104K | CHIP C 0.10UF K | | C446 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C141 | | CC73HCH1H101J | CHIP C 100PF J | | C447 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C142 | | CS77MP0J100M | CHIP TNL 10UF 6.3WV | | C448 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C143 | | CK73HBB1E103K | CHIP C 0.010UF K | | C449 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C144 | | CK73GB1E105K | CHIP C 1.0UF K | | C450 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C145 | | CK73HBB1A104K | CHIP C 0.10UF K | | C452 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C146 | | CK73HBB1A104K | CHIP C 0.10UF K | | C453 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C147 | | CK73HBB1A104K | CHIP C 0.10UF K | | C454 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C148 | | CK73HBB1A104K | CHIP C 0.10UF K | | C455 | | CK73HBB1H471K | CHIP C 470PF K | |
| C149 | | CK73HBB1E103K | CHIP C 0.010UF K | | C456 | | CK73HBB1H471K | CHIP C 470PF K | |
| C150 | | CK73GB1E105K | CHIP C 1.0UF K | | C457 | | CK73HBB1H471K | CHIP C 470PF K | |
| C151 | | CK73HBB1A104K | CHIP C 0.10UF K | | C459 | | CK73HBB1H471K | CHIP C 470PF K | |
| C152 | | CK73HBB1A104K | CHIP C 0.10UF K | | C460 | | CK73HB1E682K | CHIP C 6800PF K | |
| C153 | | CK73HBB1A104K | CHIP C 0.10UF K | | C461 | | CK73HBB1H471K | CHIP C 470PF K | |
| C154 | | CK73HBB1A104K | CHIP C 0.10UF K | | C462 | | CK73HBB1H471K | CHIP C 470PF K | |
| C155 | | CK73HBB1A104K | CHIP C 0.10UF K | | C463 | | CK73HBB1H471K | CHIP C 470PF K | |
| C156 | | CK73HBB1H102K | CHIP C 1000PF K | | C464 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C157 | | CK73HBB1H102K | CHIP C 1000PF K | | C465 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C158 | | CK73HBB1E103K | CHIP C 0.010UF K | | C466 | | CK73HB1E682K | CHIP C 6800PF K | |
| C159 | | CK73HBB1A104K | CHIP C 0.10UF K | | C467 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C160 | | CK73HB1E682K | CHIP C 6800PF K | | C468 | | CK73HBB1A104K | CHIP C 0.10UF K | |

PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|---------------|------------------|------------------|----------|-------------|---------------|------------------------|------------------|
| C469 | | CK73HBB1H102K | CHIP C 1000PF K | | C763 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C470 | | CK73HBB1H102K | CHIP C 1000PF K | | C764 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C471 | | CK73HBB1C473K | CHIP C 0.047UF K | | C765 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C480 | | CK73HBB1E103K | CHIP C 0.010UF K | | C766 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C701 | | CK73HBB1A104K | CHIP C 0.10UF K | | C767 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C703 | | CK73GXR0J475K | CHIP C 4.7UF K | | C768 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C704 | | CK73HBB1A104K | CHIP C 0.10UF K | | C771 | | CK73HB1A224K | CHIP C 0.22UF K | |
| C705 | | CK73HBB1A104K | CHIP C 0.10UF K | | C772 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C706 | | CC73HCH1H680J | CHIP C 68PF J | | C775 | | CC73HCH1H470J | CHIP C 47PF J | |
| C707 | | CC73HCH1H270J | CHIP C 27PF J | | C777 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C708 | | CK73HBB1A104K | CHIP C 0.10UF K | | C778 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C709 | | CK73HXR0J105K | CHIP C 1.0UF K | | C779 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C710 | | CK73HBB1E103K | CHIP C 0.010UF K | | C780 | | CK73HB1A224K | CHIP C 0.22UF K | |
| C711 | | CK73HBB1A104K | CHIP C 0.10UF K | | C781 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C712 | | CK73HBB1E103K | CHIP C 0.010UF K | | C782 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C713 | | CK73HBB1H332K | CHIP C 3300PF K | | C785 | | CK73HB1A224K | CHIP C 0.22UF K | |
| C714 | | CK73HB1H122K | CHIP C 1200PF K | | C786 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C715 | | CK73HBB1A104K | CHIP C 0.10UF K | | C787 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C716 | | CK73HBB1H681K | CHIP C 680PF K | | C788 | | CC73HCH1H150J | CHIP C 15PF J | |
| C717 | | CK73HBB1E103K | CHIP C 0.010UF K | | C789 | | CC73HCH1H680J | CHIP C 68PF J | |
| C718 | | CK73HBB1H152K | CHIP C 1500PF K | | C790 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C720 | | CK73HBB1E103K | CHIP C 0.010UF K | | C791 | | CK73HB1A393K | CHIP C 0.039UF K | |
| C721 | | CK73HBB1A104K | CHIP C 0.10UF K | | C792 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C722 | | CK73HBB1E103K | CHIP C 0.010UF K | | C793 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C723 | | CK73HBB1A104K | CHIP C 0.10UF K | | C794 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C724 | | CK73HBB1E103K | CHIP C 0.010UF K | | C795 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C725 | | CC73HCH1E181J | CHIP C 180PF J | | C796 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C726 | | CK73HBB1A104K | CHIP C 0.10UF K | | C797 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C727 | | CK73HBB1A104K | CHIP C 0.10UF K | | C798 | | CS77BP1A100M | CHIP T NTL 10UF 10WV | |
| C728 | | CK73HB1H331K | CHIP C 330PF K | | C799 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C730 | | CK73HB1H331K | CHIP C 330PF K | | C800 | | CK73HBB1H152K | CHIP C 1500PF K | |
| C731 | | CK73HBB1E103K | CHIP C 0.010UF K | | C801 | | CK73HB1C223K | CHIP C 0.022UF K | |
| C732 | | CK73HBB1E103K | CHIP C 0.010UF K | | C802 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C734 | | CK73HBB1H102K | CHIP C 1000PF K | | C803 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C735 | | CK73HB1H122K | CHIP C 1200PF K | | C804 | | CC73HCH1H470J | CHIP C 47PF J | |
| C736 | | CK73HBB1A104K | CHIP C 0.10UF K | | C805 | | CK73HBB1H471K | CHIP C 470PF K | |
| C737 | | CK73HBB1A104K | CHIP C 0.10UF K | | C806 | | CK73HBB1H471K | CHIP C 470PF K | |
| C738 | | CK73HBB1H102K | CHIP C 1000PF K | | C808 | | CK73GXR0J475K | CHIP C 4.7UF K | |
| C739 | | CK73HB1E682K | CHIP C 6800PF K | | C809 | | CK73FB1A106K | CHIP C 10UF K | |
| C740 | | CK73HBB1H102K | CHIP C 1000PF K | | C812 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C742 | | CK73GB1E105K | CHIP C 1.0UF K | | CN1 | E40-6755-05 | | FLAT CABLE CONNECTOR | |
| C743 | | CK73HXR0J105K | CHIP C 1.0UF K | | CN22 | E23-1325-05 | | TERMINAL | |
| C744 | | CK73HBB1E103K | CHIP C 0.010UF K | | CN23 | E40-6758-05 | | PIN ASSY | |
| C745 | | CK73HBB1E103K | CHIP C 0.010UF K | | CN24 | E23-1325-05 | | TERMINAL | |
| C746 | | CK73HBB1E103K | CHIP C 0.010UF K | | CN403 | E40-6813-05 | | PIN ASSY | |
| C747 | | CK73HBB1A104K | CHIP C 0.10UF K | | CN404 | E40-6421-15 | | PIN ASSY | |
| C748 | | CK73HBB1A104K | CHIP C 0.10UF K | | CN405 | E40-6754-05 | | FLAT CABLE CONNECTOR | |
| C749 | | CC73HCH1H470J | CHIP C 47PF J | | CN701 | E40-6586-05 | | SOCKET FOR PIN ASSY | |
| C750 | | CC73HCH1H470J | CHIP C 47PF J | | CN710 | E40-6757-05 | | PIN ASSY | |
| C751 | | CK73GB1E105K | CHIP C 1.0UF K | | D3 | B30-2337-05 | | LED(YELLOW) | |
| C752 | | CC73HCH1H101J | CHIP C 100PF J | | D4 | B30-2337-05 | | LED(YELLOW) | |
| C753 | | CC73HCH1H101J | CHIP C 100PF J | | D7 | B30-2337-05 | | LED(YELLOW) | |
| C755 | | CC73HCH1H470J | CHIP C 47PF J | | D8 | B30-2337-05 | | LED(YELLOW) | |
| C756 | | CK73HBB1A104K | CHIP C 0.10UF K | | D11 | DA2S101 | | DIODE | |
| C757 | | CK73GXR0J475K | CHIP C 4.7UF K | | D12 | KDR720F-P | | SCHOTTKY BARRIER DIODE | |
| C758 | | CK73GXR0J475K | CHIP C 4.7UF K | | D13 | KDR720F-P | | SCHOTTKY BARRIER DIODE | |
| C759 | | CK73HBB1E103K | CHIP C 0.010UF K | | D14 | KDR720F-P | | SCHOTTKY BARRIER DIODE | |
| C760 | | CK73HBB1E103K | CHIP C 0.010UF K | | D15 | KDR720F-P | | SCHOTTKY BARRIER DIODE | |
| C761 | | CC73HCH1H100D | CHIP C 10PF D | | D16 | KDR720F-P | | SCHOTTKY BARRIER DIODE | |
| C762 | | CK73HBB1A104K | CHIP C 0.10UF K | | D17 | EMZ6.8N | | ZENER DIODE | |

PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Destination | Ref. No. | Address | Parts No. | Description | Destination |
|----------|---------|---------------|------------------------|-------------|----------|---------|----------------|-----------------------------|-------------|
| D18 | | HZC6.8-E | ZENER DIODE | | IC705 | | TC75W51FK(F) | MOS-IC | |
| D19 | | HZC6.8-E | ZENER DIODE | | IC706 | | TC75S51FE(F) | MOS-IC | |
| D20 | | NNCD6.8G-A | ZENER DIODE | | IC707 | | TC7W53FKF | MOS-IC | |
| D21 | | NNCD6.8G-A | ZENER DIODE | | IC708 | | XC6209B502P-G | MOS-IC | |
| D22 | | KDS123E-P | DIODE | | IC709 | | TC7W53FKF | MOS-IC | |
| D23 | | KDS123E-P | DIODE | | IC710 | | TC75W51FK(F) | MOS-IC | |
| D102 | | KDR720F-P | SCHOTTKY BARRIER DIODE | | IC711 | | TC75W51FK(F) | MOS-IC | |
| D401 | | 1SS388F | SCHOTTKY BARRIER DIODE | | IC712 | | TC7S66FUF | MOS-IC | |
| D402 | | 1SS388F | SCHOTTKY BARRIER DIODE | | IC713 | | TC75W51FK(F) | MOS-IC | |
| D403 | | 1SS388F | SCHOTTKY BARRIER DIODE | | IC714 | | TC7W53FKF | MOS-IC | |
| D404 | | 1SS388F | SCHOTTKY BARRIER DIODE | | IC715 | | TC75S51FE(F) | MOS-IC | |
| D405 | | 1SS388F | SCHOTTKY BARRIER DIODE | | IC716 | | TC75W51FK(F) | MOS-IC | |
| D406 | | HRB0502A | DIODE | | IC717 | | XC9235A15CM-G | MOS-IC | |
| D407 | | DA2S101 | DIODE | | L1 | | L92-0408-05 | CHIP FERRITE | |
| D408 | | KDS121-P | DIODE | | L2 | | L92-0408-05 | CHIP FERRITE | |
| D409 | | DA2S101 | DIODE | | L3 | | LB73G0BA-004 | CHIP FERRITE | |
| D410 | | DA2S101 | DIODE | | L4 | | L92-0408-05 | CHIP FERRITE | |
| D412 | | KDS121-P | DIODE | | L5 | | L92-0408-05 | CHIP FERRITE | |
| D414 | | KDR720F-P | SCHOTTKY BARRIER DIODE | | L6 | | L92-0408-05 | CHIP FERRITE | |
| D415 | | KDR720F-P | SCHOTTKY BARRIER DIODE | | L7 | | L92-0408-05 | CHIP FERRITE | |
| D416 | | 1SS388F | SCHOTTKY BARRIER DIODE | | L8 | | LB73G0BA-004 | CHIP FERRITE | |
| D417 | | 1SS388F | SCHOTTKY BARRIER DIODE | | L101 | | L92-0408-05 | CHIP FERRITE | |
| D701 | | KDS121-P | DIODE | | L102 | | L92-0408-05 | CHIP FERRITE | |
| D702 | | DA2S101 | DIODE | | L401 | | L33-1496-05 | SMALL FIXED INDUCTOR(22UH) | |
| D703 | | KDR731 | DIODE | | L402 | | LB73G0AK-001 | CHIP FERRITE | |
| D704 | | KDR731 | DIODE | | L403 | | L92-0466-05 | CHIP FERRITE | |
| D705 | | KDR731 | DIODE | | L409 | | LB73G0AK-001 | CHIP FERRITE | |
| D706 | | KDR731 | DIODE | | L410 | | LB73G0AK-001 | CHIP FERRITE | |
| D707 | | KDS123E-P | DIODE | | L411 | | LB73G0AK-001 | CHIP FERRITE | |
| F701 | | F53-0360-05 | FUSE | | L701 | | LB73G0BA-004 | CHIP FERRITE | |
| IC1 | | NJM2130F3-ZB | BI-POLAR IC | | L702 | | LB73H0AV-002 | BEADS CORE | |
| IC101 | | Note 1 | ROM IC | | L704 | | LB73H0AV-002 | BEADS CORE | |
| IC102 | | Note 1 | MPU IC | | L705 | | LB73H0AV-002 | BEADS CORE | |
| IC103 | | Note 1 | SRAM IC | | L706 | | LB73H0AV-002 | BEADS CORE | |
| IC104 | | TC7SH08FU-F | MOS-IC | | L707 | | LB73H0AV-002 | BEADS CORE | |
| IC105 | | XC6109C29AN-G | MOS-IC | | L708 | | LB73H0AV-002 | BEADS CORE | |
| IC106 | | RV5C386A | MOS-IC | | L709 | | LB73H0AV-002 | BEADS CORE | |
| IC107 | | SM5023CNDH-G | MOS-IC | | L710 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC108 | | Note1 | MOS-IC | | L711 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC109 | | TC7SH08FU-F | MOS-IC | | L712 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC401 | | TC74LCX245FK | MOS-IC | | L713 | | LB73H0AV-003 | BEADS CORE | |
| IC402 | | TC7W2245FK-F | MOS-IC | | L714 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC403 | | LM2682MMX | MOS-IC | | L715 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC404 | | XC6204B332D-G | MOS-IC | | L716 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC406 | | XC6204B332M-G | MOS-IC | | L717 | | LB73G0BJ-002 | CHIP FERRITE | |
| IC407 | | LT1616ES6-PBF | ANALOGUE IC | | L718 | | L92-0408-05 | CHIP FERRITE | |
| IC408 | | TC75S51FE(F) | MOS-IC | | L719 | | L33-1494-05 | SMALL FIXED INDUCTOR(4.7UH) | |
| IC409 | | TC7W66FK-F | MOS-IC | | Q1 | | 2SA1362-F(GR) | TRANSISTOR | |
| IC411 | | NJM2880U105ZB | ANALOGUE IC | | Q2 | | KTC4075E(Y,GR) | TRANSISTOR | |
| IC412 | | TPA6201A1DRBR | ANALOGUE IC | | Q3 | | SSM3K15TE(F) | FET | |
| IC413 | | TPA6201A1DRBR | ANALOGUE IC | | Q4 | | SSM3K15TE(F) | FET | |
| IC414 | | XC61CC5602N-G | MOS-IC | | Q5 | | 2SJ347F | FET | |
| IC415 | | TC7SET08FU-F | MOS-IC | | Q401 | | SSM6N16FE-F | FET | |
| IC416 | | S-812C31BPI-G | ANALOGUE IC | | Q402 | | SSM6N16FE-F | FET | |
| IC417 | | TC7WH126FK | MOS-IC | | Q403 | | 2SJ648-A | FET | |
| IC418 | | TC7WT125FUF | MOS-IC | | Q404 | | SSM3K15TE(F) | FET | |
| IC701 | | PCA9535BS | MOS-IC | | Q405 | | SSM6N16FE-F | FET | |
| IC702 | | TC75W51FK(F) | MOS-IC | | Q406 | | 2SB798AZ(DLDK) | TRANSISTOR | |
| IC703 | | M62364FP-F | MOS-IC | | Q407 | | KRC660U-P | DIGITAL TRANSISTOR | |
| IC704 | | TC75S51FE(F) | MOS-IC | | Q408 | | EMD12 | TRANSISTOR | |

PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|----------------|---------------------|------------------|----------|---------|--------------|---------------------|------------------|
| Q409 | | 2SA1955A-F | TRANSISTOR | | R120 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| Q410 | | SSM3K15TE(F) | FET | | R121 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q411 | | SSM6N16FE-F | FET | | R122 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q412 | | SSM3K15TE(F) | FET | | R123 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q413 | | 2SA1955A-F | TRANSISTOR | | R126 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| Q414 | | EMD12 | TRANSISTOR | | R127 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| Q415 | | EMD12 | TRANSISTOR | | R128 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| Q702 | | SSM3K15TE(F) | FET | | R129 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| Q703 | | SSM3K15TE(F) | FET | | R130 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| Q704 | | KTC4075E(Y,GR) | TRANSISTOR | | R131 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| Q705 | | 2SC4738(GR)F | TRANSISTOR | | R132 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q706 | | 2SA1832(GR)F | TRANSISTOR | | R133 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q707 | | 2SJ243-A | FET | | R135 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R1 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R136 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R2 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R137 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R3 | | RK73HB1J123J | CHIP R 12K J 1/16W | | R138 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R4 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R139 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R5 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R140 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R6 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R141 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R7 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R142 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R8 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R143 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R9 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R144 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R10 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R145 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R11 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R146 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R12 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R147 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R14 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | | R148 | | RK73HB1J151J | CHIP R 150 J 1/16W | |
| R15 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R149 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R16 | | RK73HB1J331J | CHIP R 330 J 1/16W | | R150 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R17 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R153 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R18 | | RK73HB1J822J | CHIP R 8.2K J 1/16W | | R154 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R19 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R155 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R20 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R156 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R21 | | RK73HB1J122J | CHIP R 1.2K J 1/16W | | R157 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R22 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R158 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R23 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R159 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R24 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R160 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R25 | | RK73HB1J122J | CHIP R 1.2K J 1/16W | | R161 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R26 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R162 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R27 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R163 | | RK73HB1J104D | CHIP R 100K D 1/16W | |
| R28 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R165 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R29 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R166 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R30 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R167 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R31 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R168 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R32 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R170 | | RK73HB1J103D | CHIP R 10K D 1/16W | |
| R33 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R171 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R34 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R172 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R35 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R173 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R40 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R174 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R101 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R175 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R102 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R176 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R103 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R177 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R105 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R178 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R107 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R180 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R110 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R181 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R111 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R182 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R113 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R183 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R115 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R184 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R116 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R185 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R118 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R186 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R119 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R187 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |

PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|--------------|---------------------|------------------|----------|---------|--------------|---------------------|------------------|
| R188 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R461 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R189 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R462 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R190 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R463 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R191 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R465 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R192 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R466 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R193 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R467 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R194 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R468 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R402 | | RK73HB1J151J | CHIP R 150 J 1/16W | | R469 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R404 | | RK73HB1J151J | CHIP R 150 J 1/16W | | R470 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R406 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R471 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R407 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R472 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R408 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R473 | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R409 | | RK73HB1J470J | CHIP R 47 J 1/16W | | R474 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R410 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R475 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R411 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R477 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R412 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R478 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R413 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R481 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R414 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R483 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R415 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R484 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R416 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R485 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R417 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R487 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R418 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R488 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R419 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R489 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R420 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R490 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R424 | | RK73HH1J683D | CHIP R 68K D 1/16W | | R491 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R425 | | RK73HH1J333D | CHIP R 33K D 1/16W | | R492 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R426 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R493 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R427 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R494 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R428 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R495 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R429 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R496 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R431 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R497 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R432 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R500 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R433 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R501 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R434 | | RK73HB1J393J | CHIP R 39K J 1/16W | | R502 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R435 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R503 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R436 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R504 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R437 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R506 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R438 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R507 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R439 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R508 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R440 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R509 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R441 | | RK73HB1J153J | CHIP R 15K J 1/16W | | R510 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R442 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R511 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R443 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R512 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R444 | | RK73HB1J564J | CHIP R 560K J 1/16W | | R513 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R445 | | RK73HB1J154J | CHIP R 150K J 1/16W | | R514 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R446 | | RK73HB1J274J | CHIP R 270K J 1/16W | | R515 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R447 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R516 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R448 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R517 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R449 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R518 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R450 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R519 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R451 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R520 | | RK73HB1J560J | CHIP R 56 J 1/16W | |
| R452 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R521 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R453 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R522 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R454 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R523 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R455 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R524 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R456 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R525 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R457 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R526 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R458 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R527 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R459 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R528 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R460 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R529 | | RK73HB1J101J | CHIP R 100 J 1/16W | |

PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|--------------|---------------------|------------------|----------|---------|--------------|---------------------|------------------|
| R530 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R743 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R531 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R744 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R532 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R745 | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R533 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R746 | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R534 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R748 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R535 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R749 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R536 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R750 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R537 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R752 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R538 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R753 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R539 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R754 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R540 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R755 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R541 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R756 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R543 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R757 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R544 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R758 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R545 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R759 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R546 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R761 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R547 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R762 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R548 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R763 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R549 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R764 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R550 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R765 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R701 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R766 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R702 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R767 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R703 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R768 | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R704 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R769 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R705 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R770 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R706 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R771 | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R707 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R775 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R709 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R777 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R710 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R778 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R711 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R779 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R712 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R780 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R713 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R782 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R714 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R783 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R715 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R784 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R716 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | | R785 | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R717 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R786 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R718 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R787 | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| R719 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R788 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R720 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R789 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R721 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R790 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R722 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R791 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R723 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R793 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R724 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R794 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R725 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R795 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R726 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R796 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R727 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R797 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R728 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R798 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R729 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R799 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R730 | | RK73HB1J471J | CHIP R 470 J 1/16W | | R800 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R731 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R801 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R732 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | R802 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R733 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R803 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R735 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R804 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R736 | | RK73HB1J823J | CHIP R 82K J 1/16W | | R805 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R737 | | RK73HB1J153J | CHIP R 15K J 1/16W | | R806 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R738 | | RK73HB1J563J | CHIP R 56K J 1/16W | | R807 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R739 | | RK73HB1J823J | CHIP R 82K J 1/16W | | R808 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R740 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R809 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R741 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R810 | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R742 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R811 | | RK73HB1J823J | CHIP R 82K J 1/16W | |

PARTS LIST

CONTROL UNIT (X53-4590-14)

TX-RX UNIT (X57-8950-11)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|---------------------------------|---------|---------------|----------------------------|------------------|----------|---------|---------------|----------------------|------------------|
| R812 | | RK73HB1J562J | CHIP R 5.6K J 1/16W | | C18 | | CK73HB1C103K | CHIP C 0.010UF K | |
| R813 | | RK73HB1J273J | CHIP R 27K J 1/16W | | C19 | | CK73HBB1H471K | CHIP C 1000PF K | |
| R814 | | RK73HB1J564J | CHIP R 560K J 1/16W | | C20 | | CC73HCH1H220G | CHIP C 22PF G | |
| R815 | | RK73HB1J104J | CHIP R 100K J 1/16W | | C21 | | CK73HBB1H471K | CHIP C 1000PF K | |
| R816 | | RK73HB1J683J | CHIP R 68K J 1/16W | | C22 | | CC73HCH1H390G | CHIP C 39PF G | |
| R818 | | RK73HB1J104J | CHIP R 100K J 1/16W | | C24 | | CC73HCH1H101J | CHIP C 100PF J | |
| R819 | | RK73HB1J103J | CHIP R 10K J 1/16W | | C25 | | CC73HCH1H101J | CHIP C 100PF J | |
| R820 | | RK73HB1J103J | CHIP R 10K J 1/16W | | C26 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| R821 | | RK73HB1J104J | CHIP R 100K J 1/16W | | C27 | | CK73HBB1A104K | CHIP C 1000PF K | |
| R822 | | RK73HB1J103J | CHIP R 10K J 1/16W | | C28 | | CC73HCH1H101J | CHIP C 100PF J | |
| R823 | | RK73HB1J103J | CHIP R 10K J 1/16W | | C29 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| R824 | | RK73HB1J393J | CHIP R 39K J 1/16W | | C30 | | CC730AD1H104J | CHIP C 0.1UF J | |
| R825 | | RK73HB1J104J | CHIP R 100K J 1/16W | | C31 | | CC73HCH1H220G | CHIP C 22PF G | |
| R826 | | RK73HB1J334J | CHIP R 330K J 1/16W | | C32 | | CC73HCH1H101J | CHIP C 100PF J | |
| R827 | | RK73HB1J184J | CHIP R 180K J 1/16W | | C34 | | CC73HCH1H470G | CHIP C 47PF G | |
| R828 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | C35 | | CC73HCH1H101J | CHIP C 100PF J | |
| R829 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | C36 | | CK73HBB1H471K | CHIP C 470PF K | |
| R830 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | | C37 | | CK73HBB1H471K | CHIP C 470PF K | |
| R831 | | RK73HB1J474J | CHIP R 470K J 1/16W | | C38 | | CK73HBB1H102K | CHIP C 1000PF K | |
| R832 | | RK73HB1J473J | CHIP R 47K J 1/16W | | C41 | | CK73HBB1H472K | CHIP C 4700PF K | |
| R833 | | RK73HB1J684J | CHIP R 680K J 1/16W | | C42 | | CK73HBB1H471K | CHIP C 470PF K | |
| R834 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | C43 | | CS77MA1VR15M | CHIP TNL 0.15UF 35WV | |
| R835 | | RK73HB1J153J | CHIP R 15K J 1/16W | | C44 | | CS77ABE1D100M | CHIP TNL 10UF 20WV | |
| R836 | | RK73HB1J473J | CHIP R 47K J 1/16W | | C45 | | CK73HBB1H471K | CHIP C 470PF K | |
| R837 | | RK73HB1J683J | CHIP R 68K J 1/16W | | C46 | | CK73HBB1H471K | CHIP C 470PF K | |
| R838 | | RK73HB1J564J | CHIP R 560K J 1/16W | | C47 | | CK73HBB1H471K | CHIP C 470PF K | |
| R839 | | RK73HB1J333J | CHIP R 33K J 1/16W | | C48 | | C93-1906-05 | PLASTIC FILM CAP | |
| R840 | | RK73HB1J123J | CHIP R 12K J 1/16W | | C50 | | CC73HCH1H101J | CHIP C 100PF J | |
| R841 | | RK73HB1J564J | CHIP R 560K J 1/16W | | C51 | | CC73HCH1H101J | CHIP C 100PF J | |
| R842 | | RK73HB1J104J | CHIP R 100K J 1/16W | | C52 | | CK73HBB1H471K | CHIP C 470PF K | |
| R843 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | C53 | | CK73FB0J106K | CHIP C 10UF K | |
| R844 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | | C54 | | CK73HBB1H471K | CHIP C 470PF K | |
| R845 | | RK73HB1J104J | CHIP R 100K J 1/16W | | C55 | | CK73GXROJ475K | CHIP C 4.7UF K | |
| R846 | | RK73HB1J471J | CHIP R 470 J 1/16W | | C56 | | CK73HXROJ105K | CHIP C 1.0UF K | |
| R847 | | RK73HB1J182J | CHIP R 1.8K J 1/16W | | C57 | | CC73HCH1H270J | CHIP C 27PF J | |
| R850 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | C58 | | CC73HCH1H470J | CHIP C 47PF J | |
| R851 | | RK73HB1J683J | CHIP R 68K J 1/16W | | C60 | | CK73HBB1H471K | CHIP C 470PF K | |
| R852 | | RK73HB1J683J | CHIP R 68K J 1/16W | | C62 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| TH1 | | ERTJOV104H | THERMISTOR | | C63 | | CK73HBB1H471K | CHIP C 470PF K | |
| TH701 | | ERTJOV104H | THERMISTOR | | C64 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| X101 | | L77-1802-05 | CRYSTAL RESONATOR(32768HZ) | | C65 | | CC73HCH1HR75B | CHIP C 0.75PF B | |
| X102 | | L77-3015-05 | TCXO (18.432M) | | C66 | | CC73HCH1H080B | CHIP C 8.0PF B | |
| | | | | | C67 | | CC73HCH1H100B | CHIP C 10PF B | |
| | | | | | C68 | | CC73HCH1H100B | CHIP C 10PF B | |
| | | | | | C69 | | CC73HCH1H100B | CHIP C 10PF B | |
| TX-RX UNIT (X57-8950-11) | | | | | | | | | |
| C1 | | CC73HCH1H101J | CHIP C 100PF J | | C70 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C3 | | CK73HB1C103K | CHIP C 0.010UF K | | C71 | | CK73GBB1H103K | CHIP C 0.010UF K | |
| C4 | | CC73HCH1H101J | CHIP C 100PF J | | C72 | | CK73GBB1H102K | CHIP C 1000PF K | |
| C5 | | CC73HCH1H100C | CHIP C 10PF C | | C74 | | CC73HCH1H0R5B | CHIP C 0.5PF B | |
| C6 | | CK73HB1C103K | CHIP C 0.010UF K | | C75 | | CC73HCH1H0R5B | CHIP C 0.5PF B | |
| C7 | | CK73GXR1C225K | CHIP C 2.2UF K | | C76 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C8 | | CK73HBB1H102K | CHIP C 1000PF K | | C77 | | CC73HCH1H220J | CHIP C 22PF J | |
| C9 | | CC73HCH1H100C | CHIP C 10PF C | | C78 | | CK73HBB1H471K | CHIP C 1000PF K | |
| C10 | | CC73HCH1H101J | CHIP C 100PF J | | C79 | | CC73HCH1H101J | CHIP C 100PF J | |
| C11 | | CC73HCH1H101J | CHIP C 100PF J | | C81 | | CC73HCH1H470J | CHIP C 47PF J | |
| C12 | | CK73HBB1H471K | CHIP C 1000PF K | | C82 | | CK73FB0J106K | CHIP C 10UF K | |
| C13 | | CC73HCH1H101J | CHIP C 100PF J | | C83 | | CK73HBB1H471K | CHIP C 470PF K | |
| C15 | | CK73HBB1H471K | CHIP C 1000PF K | | C84 | | CC73HCH1H050B | CHIP C 5.0UF B | |
| C16 | | CC73HCH1H101J | CHIP C 100PF J | | C85 | | CK73HXROJ105K | CHIP C 1.0UF K | |
| C17 | | CC73HCH1H101J | CHIP C 100PF J | | C87 | | CK73HB1C103K | CHIP C 0.010UF K | |

PARTS LIST

TX-RX UNIT (X57-8950-11)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|---------------|----------------------|------------------|----------|---------|---------------|------------------|------------------|
| C88 | | CC73HCH1H101J | CHIP C 100PF J | | C178 | | CC73HCH1H120J | CHIP C 12PF J | |
| C90 | | CK73HBB1A104K | CHIP C 0.10UF K | | C179 | | CC73HCH1H100B | CHIP C 10PF B | |
| C91 | | CK73HBB1A104K | CHIP C 0.10UF K | | C180 | | CC73GCH1H120G | CHIP C 12PF G | |
| C92 | | CC73HCH1H020B | CHIP C 2.0PF B | | C190 | | CC73GCH1H270G | CHIP C 27PF G | |
| C93 | | CC73HCH1H330J | CHIP C 33PF J | | C191 | | CC73GCH1H181J | CHIP C 180PF J | |
| C100 | | CC73HCH1H150J | CHIP C 15PF J | | C193 | | CC73GCH1H330G | CHIP C 33PF G | |
| C101 | | CK73HBB1H102K | CHIP C 1000PF K | | C201 | | CK73GB1H104K | CHIP C 0.10UF K | |
| C102 | | CK73HBB1H102K | CHIP C 1000PF K | | C202 | | CK73GB1H104K | CHIP C 0.10UF K | |
| C104 | | CC73HCH1H100C | CHIP C 10PF C | | C203 | | CC73HCH1H070B | CHIP C 7.0PF B | |
| C106 | | CK73HBB1H102K | CHIP C 1000PF K | | C204 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C109 | | CK73HBB1H471K | CHIP C 470PF K | | C206 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C111 | | CK73HBB1H102K | CHIP C 1000PF K | | C207 | | CC73HCH1H100B | CHIP C 10PF B | |
| C112 | | CC73HCH1H560J | CHIP C 56PF J | | C208 | | CC73HCH1H680J | CHIP C 68PF J | |
| C114 | | CK73HBB1H102K | CHIP C 1000PF K | | C209 | | CC73HCH1H101J | CHIP C 100PF J | |
| C115 | | CK73HBB1H102K | CHIP C 1000PF K | | C210 | | CK73HBB1H471K | CHIP C 470PF K | |
| C116 | | CK73HBB1A104K | CHIP C 0.10UF K | | C211 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C117 | | CK73HBB1H102K | CHIP C 1000PF K | | C212 | | CC73HCH1H680J | CHIP C 68PF J | |
| C119 | | CC73HCH1H180J | CHIP C 18PF J | | C213 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C120 | | CK73HBB1H471K | CHIP C 470PF K | | C215 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C122 | | CK73HBB1H102K | CHIP C 1000PF K | | C216 | | CC73HCH1H220G | CHIP C 22PF G | |
| C123 | | CK73HBB1A104K | CHIP C 0.10UF K | | C217 | | CC73HCH1H470J | CHIP C 47PF J | |
| C124 | | CC73HCH1H560J | CHIP C 56PF J | | C219 | | CC73HCH1H060B | CHIP C 6.0PF B | |
| C125 | | CK73HBB1H102K | CHIP C 1000PF K | | C220 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C127 | | CC73HCH1H100C | CHIP C 10PF C | | C221 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C128 | | CS77MA1A6R8M | CHIP TMTL 6.8UF 10WV | | C222 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C129 | | CK73HBB1A104K | CHIP C 0.10UF K | | C223 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C130 | | CK73HBB1H102K | CHIP C 1000PF K | | C224 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C131 | | CK73GB1E105K | CHIP C 1.0UF K | | C225 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C132 | | CK73HBB1H102K | CHIP C 1000PF K | | C226 | | CK73HBB1H471K | CHIP C 470PF K | |
| C133 | | CK73HBB1H471K | CHIP C 470PF K | | C227 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C134 | | CK73HBB1H471K | CHIP C 470PF K | | C228 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C135 | | CC73GCH1H220G | CHIP C 22PF G | | C229 | | CC73HCH1H100B | CHIP C 10PF B | |
| C136 | | CK73GBB1H102K | CHIP C 1000PF K | | C230 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C139 | | CK73HBB1H471K | CHIP C 470PF K | | C231 | | CC73HCH1H100B | CHIP C 10PF B | |
| C140 | | CC73GCH1H070B | CHIP C 7.0PF B | | C232 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C141 | | CK73HBB1H471K | CHIP C 470PF K | | C233 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C142 | | CC73GCH1H090B | CHIP C 9.0PF B | | C234 | | CK73FB1E474K | CHIP C 0.47UF K | |
| C143 | | CC73HCH1H101J | CHIP C 100PF J | | C235 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C144 | | CC73GCH1H240G | CHIP C 24PF G | | C236 | | CK73FB1A106K | CHIP C 10UF K | |
| C145 | | CK73HB1C103K | CHIP C 0.010UF K | | C237 | | CK73FB1A106K | CHIP C 10UF K | |
| C146 | | CC73GCH1H090B | CHIP C 9.0PF B | | C238 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C148 | | CK73HBB1H102K | CHIP C 1000PF K | | C239 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C149 | | CC73GCH1H120G | CHIP C 12PF G | | C240 | | CC73HCH1H040B | CHIP C 4.0PF B | |
| C150 | | CK73HBB1A104K | CHIP C 0.10UF K | | C241 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C151 | | CK73GBB1C104K | CHIP C 0.10UF K | | C242 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C152 | | CK73GB1E105K | CHIP C 1.0UF K | | C244 | | CC73HCH1H120G | CHIP C 12PF G | |
| C154 | | CC73GCH1H030B | CHIP C 3.0PF B | | C245 | | CK73FB1A475K | CHIP C 4.7UF K | |
| C155 | | CK73HBB1H471K | CHIP C 470PF K | | C246 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C156 | | CK73HB1C103K | CHIP C 0.010UF K | | C247 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C158 | | CC73GCH1H330G | CHIP C 33PF G | | C248 | | CC73HCH1H220G | CHIP C 22PF G | |
| C159 | | CK73HBB1H471K | CHIP C 470PF K | | C249 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C160 | | CK73HBB1A104K | CHIP C 0.10UF K | | C250 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| C163 | | CC73GCH1H120G | CHIP C 12PF G | | C251 | | CC73HCH1H060B | CHIP C 6.0PF B | |
| C165 | | CC73GCH1H070B | CHIP C 7.0PF B | | C252 | | CC73HCH1H470G | CHIP C 47PF G | |
| C166 | | CC73GCH1H560J | CHIP C 56PF J | | C254 | | CC73HCH1H100B | CHIP C 10PF B | |
| C167 | | CC73HCH1H101J | CHIP C 100PF J | | C259 | | CC73HCH1H820J | CHIP C 82PF J | |
| C168 | | CC73HCH1H101J | CHIP C 100PF J | | C261 | | CC73HCH1H270J | CHIP C 27PF J | |
| C169 | | CK73HBB1A104K | CHIP C 0.10UF K | | C262 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C173 | | CK73HBB1H471K | CHIP C 470PF K | | C264 | | CC73HCH1H270J | CHIP C 27PF J | |
| C177 | | CC73HCH1H220J | CHIP C 22PF J | | C267 | | CK73HBB1H102K | CHIP C 1000PF K | |

PARTS LIST

TX-RX UNIT (X57-8950-11)

| Ref. No. | Address | Parts No. | Description | Destination | Ref. No. | Address | Parts No. | Description | Destination |
|----------|---------|---------------|----------------------|-------------|----------|---------|---------------|----------------------------|-------------|
| C268 | | CC73HCH1H390J | CHIP C 39PF J | | C429 | | CC73HCH1H470J | CHIP C 47PF J | |
| C270 | | CC73HCH1H1R5B | CHIP C 1.5PF B | | C430 | | CC73HCH1H470J | CHIP C 47PF J | |
| C273 | | CC73HCH1H330J | CHIP C 33PF J | | C431 | | CC73HCH1H470J | CHIP C 47PF J | |
| C274 | | CK73HBB1H102K | CHIP C 1000PF K | | C432 | | CC73HCH1H470J | CHIP C 47PF J | |
| C275 | | CK73HBB1A104K | CHIP C 0.10UF K | | C433 | | CC73HCH1H470J | CHIP C 47PF J | |
| C276 | | CK73HBB1A104K | CHIP C 0.10UF K | | C434 | | CC73HCH1H470J | CHIP C 47PF J | |
| C278 | | CK73HBB1H102K | CHIP C 1000PF K | | C435 | | CC73HCH1H470J | CHIP C 47PF J | |
| C281 | | CK73HB1C103K | CHIP C 0.010UF K | | C436 | | CC73HCH1H470J | CHIP C 47PF J | |
| C282 | | CK73GB1E105K | CHIP C 1.0UF K | | C437 | | CC73HCH1H470J | CHIP C 47PF J | |
| C283 | | CK73HBB1H102K | CHIP C 1000PF K | | C438 | | CC73HCH1H470J | CHIP C 47PF J | |
| C284 | | CK73HBB1H102K | CHIP C 1000PF K | | C439 | | CC73HCH1H470J | CHIP C 47PF J | |
| C285 | | CK73HBB1H102K | CHIP C 1000PF K | | C440 | | CC73HCH1H470J | CHIP C 47PF J | |
| C286 | | CK73HBB1H102K | CHIP C 1000PF K | | C441 | | CC73HCH1H470J | CHIP C 47PF J | |
| C290 | | CC73HCH1H150J | CHIP C 15PF J | | C442 | | CC73HCH1H470J | CHIP C 47PF J | |
| C291 | | CK73HBB1H102K | CHIP C 1000PF K | | C443 | | CC73HCH1H470J | CHIP C 47PF J | |
| C295 | | CC73HCH1H100B | CHIP C 10PF B | | C444 | | CC73HCH1H470J | CHIP C 47PF J | |
| C296 | | CC73HCH1H020B | CHIP C 2.0PF B | | C445 | | CC73HCH1H470J | CHIP C 47PF J | |
| C297 | | CC73HCH1H010B | CHIP C 1.0PF B | | C447 | | CC73HCH1H470J | CHIP C 47PF J | |
| C298 | | CC73HCH1H020B | CHIP C 2.0PF B | | C449 | | CC73HCH1H470J | CHIP C 47PF J | |
| C299 | | CC73HCH1H180J | CHIP C 18PF J | | C450 | | CC73HCH1H470J | CHIP C 47PF J | |
| C301 | | CC73HCH1H180J | CHIP C 18PF J | | C451 | | CC73HCH1H470J | CHIP C 47PF J | |
| C304 | | CC73HCH1H120J | CHIP C 12PF J | | C452 | | CC73HCH1H470J | CHIP C 47PF J | |
| C306 | | CC73HCH1H390J | CHIP C 39PF J | | C453 | | CC73HCH1H470J | CHIP C 47PF J | |
| C307 | | CC73HCH1H180J | CHIP C 18PF J | | C454 | | CC73HCH1H470J | CHIP C 47PF J | |
| C310 | | CC73HCH1H470G | CHIP C 47PF G | | C455 | | CC73HCH1H470J | CHIP C 47PF J | |
| C311 | | CK73HB1C103K | CHIP C 0.010UF K | | C456 | | CC73HCH1H470J | CHIP C 47PF J | |
| C312 | | CK73GB1H104K | CHIP C 0.10UF K | | C457 | | CC73HCH1H470J | CHIP C 47PF J | |
| C314 | | CK73HBB1A104K | CHIP C 0.10UF K | | C458 | | CC73HCH1H470J | CHIP C 47PF J | |
| C316 | | CK73HBB1H102K | CHIP C 1000PF K | | C460 | | CC73HCH1H470J | CHIP C 47PF J | |
| C317 | | CC73HCH1H100B | CHIP C 10PF B | | C462 | | CK73HBB1H471K | CHIP C 470PF K | |
| C320 | | CC73HCH1H010B | CHIP C 1.0PF B | | C463 | | CK73HBB1H471K | CHIP C 470PF K | |
| C355 | | CK73HBB1A104K | CHIP C 0.10UF K | | C464 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C356 | | CK73HBB1A104K | CHIP C 0.10UF K | | C465 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C362 | | CC73HCH1H330J | CHIP C 33PF J | | C466 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C386 | | CC73HCH1H070B | CHIP C 7.0PF B | | C467 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C400 | | CC73GCH1H220J | CHIP C 22PF J | | C468 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C402 | | CK73HBB1H471K | CHIP C 470PF K | | C470 | | CC73HCH1H470J | CHIP C 47PF J | |
| C403 | | CK73HBB1H471K | CHIP C 470PF K | | C472 | | CC73HCH1H470J | CHIP C 47PF J | |
| C404 | | CK73GB1E105K | CHIP C 1.0UF K | | C473 | | CC73HCH1H470J | CHIP C 47PF J | |
| C405 | | CK73GB1E105K | CHIP C 1.0UF K | | C474 | | CC73HCH1H470J | CHIP C 47PF J | |
| C406 | | CK73GB1E105K | CHIP C 1.0UF K | | C475 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C407 | | CK73GBB1C224K | CHIP C 0.22UF K | | C476 | | CC73HCH1H470J | CHIP C 47PF J | |
| C408 | | CK73GB1E105K | CHIP C 1.0UF K | | C478 | | CC73HCH1H470J | CHIP C 47PF J | |
| C409 | | C92-0765-05 | CHIP TNTL 4.7UF 16WV | | C479 | | CC73HCH1H470J | CHIP C 47PF J | |
| C410 | | CK73GBB1C224K | CHIP C 0.22UF K | | C480 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C411 | | CK73HBB1A104K | CHIP C 0.10UF K | | C499 | | CC73HCH1H470J | CHIP C 47PF J | |
| C414 | | CK73GBB1C224K | CHIP C 0.22UF K | | CF200 | | L72-1017-05 | CERAMIC FILTER | |
| C415 | | CK73HBB1H471K | CHIP C 470PF K | | CF201 | | L72-1020-05 | CERAMIC FILTER | |
| C416 | | CK73GB1E105K | CHIP C 1.0UF K | | CN102 | | E23-1326-05 | TERMINAL | |
| C417 | | CC73HCH1E181J | CHIP C 180PF J | | CN400 | | E40-6422-15 | SOCKET FOR PIN ASSY | |
| C418 | | CK73GB1E105K | CHIP C 1.0UF K | | CN401 | | E40-6752-05 | FLAT CABLE CONNECTOR | |
| C419 | | CC73HCH1H220J | CHIP C 22PF J | | CN736 | | E40-6358-05 | SOCKET FOR PIN ASSY | |
| C420 | | CK73HBB1H471K | CHIP C 470PF K | | D2 | | HVC131 | DIODE | |
| C421 | | CK73GBB1C224K | CHIP C 0.22UF K | | D3 | | HVC131 | DIODE | |
| C422 | | CK73GB1E105K | CHIP C 1.0UF K | | D4 | | KDS123E-P | DIODE | |
| C423 | | CK73GBB1C224K | CHIP C 0.22UF K | | D5 | | HVC131 | DIODE | |
| C424 | | CK73GB1E105K | CHIP C 1.0UF K | | D6 | | HVC131 | DIODE | |
| C425 | | CK73GB1E105K | CHIP C 1.0UF K | | D7 | | HSC119 | DIODE | |
| C426 | | CC73HCH1H470J | CHIP C 47PF J | | D8 | | 1SV325F | VARIABLE CAPACITANCE DIODE | |
| C428 | | CC73HCH1H470J | CHIP C 47PF J | | D9 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |

PARTS LIST

TX-RX UNIT (X57-8950-11)

| Ref. No. | Address | Parts No. | Description | Destination | Ref. No. | Address | Parts No. | Description | Destination |
|----------|---------|---------------|-----------------------------|-------------|----------|---------|---------------|------------------------------|-------------|
| D12 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | L24 | | L40-2778-67 | SMALL FIXED INDUCTOR(27NH) | |
| D13 | | HVC376B | VARIABLE CAPACITANCE DIODE | | L25 | | L40-1285-92 | SMALL FIXED INDUCTOR(120NH) | |
| D14 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | L26 | | LK73G0AQ3R3K | SMALL FIXED INDUCTOR(3.3UH) | |
| D15 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | L27 | | LK73G0AQ3R3K | SMALL FIXED INDUCTOR(3.3UH) | |
| D16 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | L29 | | L40-1085-71 | SMALL FIXED INDUCTOR(100NH) | |
| D17 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | L30 | | L40-6875-92 | SMALL FIXED INDUCTOR(68NH) | |
| D18 | | 1SV278F | VARIABLE CAPACITANCE DIODE | | L98 | | LB73H0AV-003 | BEADS CORE | |
| D100 | | HSC277 | DIODE | | L99 | | LB73H0AV-003 | BEADS CORE | |
| D103 | | HZU2ALL | ZENER DIODE | | L100 | | LK73G0AFR10J | SMALL FIXED INDUCTOR(100NH) | |
| D104 | | HVC131 | DIODE | | L102 | | L40-6875-92 | SMALL FIXED INDUCTOR(68NH) | |
| D105 | | HVC131 | DIODE | | L103 | | LK73G0AFR10J | SMALL FIXED INDUCTOR(100NH) | |
| D106 | | HZU5CLL | ZENER DIODE | | L104 | | LB73G0BD-005 | CHIP FERRITE | |
| D201 | | HSC277 | DIODE | | L105 | | L40-4775-92 | SMALL FIXED INDUCTOR(47NH) | |
| D204 | | 1SV305F | VARIABLE CAPACITANCE DIODE | | L106 | | L41-1085-43 | SMALL FIXED INDUCTOR(100NH) | |
| D205 | | 1SV305F | VARIABLE CAPACITANCE DIODE | | L107 | | LB73F0AW-002 | CHIP FERRITE | |
| D207 | | 1SV305F | VARIABLE CAPACITANCE DIODE | | L108 | | LK73G0AF15NJ | SMALL FIXED INDUCTOR(15NH) | |
| D208 | | 1SV305F | VARIABLE CAPACITANCE DIODE | | L109 | | LR7920DD37N7J | CHIP INDUCTOR | |
| D209 | | HVC131 | DIODE | | L110 | | LR7920DD37N7J | CHIP INDUCTOR | |
| D211 | | HVC131 | DIODE | | L111 | | L34-4576-05 | AIR-CORE COIL | |
| D213 | | HVC131 | DIODE | | L112 | | LB73F0AW-002 | CHIP FERRITE | |
| D400 | | 1SR154-400 | DIODE | | L113 | | LR7920DD27N4J | AIR-CORE COIL | |
| D401 | | HSC119 | DIODE | | L114 | | LR7920DD21N9J | AIR-CORE COIL | |
| D402 | | B30-2278-05 | LED(RED/YELLOW) | | L115 | | L41-2295-39 | SMALL FIXED INDUCTOR(2.2U) | |
| D403 | | 1SS388F | SCHOTTKY BARRIER DIODE | | L117 | | LR7920DC45N5J | AIR-CORE COIL | |
| D404 | | 1PMT5929BT1G | ZENER DIODE | | L118 | | LR7920DD16N9J | AIR-CORE COIL | |
| D405 | | 1PMT5929BT1G | ZENER DIODE | | L119 | | LR7920DD12N2J | AIR-CORE COIL | |
| F400 | | F53-0324-15 | FUSE(2.5A) | | L201 | | L40-5681-86 | SMALL FIXED INDUCTOR(0.56UH) | |
| F401 | | F53-0479-05 | FUSE(0.15A) | | L202 | | L40-1891-86 | SMALL FIXED INDUCTOR(1.8U) | |
| IC1 | | LM73C1MKX-0 | MOS-IC | | L203 | | L41-4778-45 | SMALL FIXED INDUCTOR(47NH) | |
| IC2 | | LMC7101BIM5 | MOS-IC | | L204 | | LB73G0BD-005 | CHIP FERRITE | |
| IC3 | | SKY72310362LF | MOS-IC | | L205 | | LR7720AER27J | SMALL FIXED INDUCTOR(0.27U) | |
| IC4 | | TC75W51FUJ | MOS-IC | | L206 | | LR7720AER56J | SMALL FIXED INDUCTOR(0.56U) | |
| IC5 | | TLV2381IDBV | MOS-IC | | L207 | | LK73G0AFR10J | SMALL FIXED INDUCTOR(100NH) | |
| IC100 | | TA75W01FUJ | BIPOLAR IC | | L208 | | LK73G0AF33NJ | SMALL FIXED INDUCTOR(33NH) | |
| IC200 | | TLV2381IDBV | MOS-IC | | L209 | | LK73G0AF33NJ | SMALL FIXED INDUCTOR(33NH) | |
| IC201 | | TLV2381IDBV | MOS-IC | | L210 | | L41-6878-14 | SMALL FIXED INDUCTOR(68NH) | |
| IC202 | | TK10931VTL-G | ANALOGUE IC | | L214 | | LB73G0BD-005 | CHIP FERRITE | |
| IC203 | | MCP6021-E/OT | MOS-IC | | L215 | | L41-6878-14 | SMALL FIXED INDUCTOR(68NH) | |
| IC400 | | TK11250CUCB | MOS-IC | | L220 | | L41-6878-14 | SMALL FIXED INDUCTOR(68NH) | |
| IC401 | | TC75S51FE(F) | MOS-IC | | L223 | | L40-5675-92 | SMALL FIXED INDUCTOR(56NH) | |
| IC402 | | XC9101D09AK-G | MOS-IC | | L224 | | L41-5678-14 | SMALL FIXED INDUCTOR(56NH) | |
| IC403 | | TK71733S | BI-POLAR IC | | L226 | | LB73G0BD-005 | CHIP FERRITE | |
| IC404 | | TC75W51FUJ | MOS-IC | | L230 | | L40-2702-86 | SMALL FIXED INDUCTOR(27U) | |
| L1 | | LR7720AE4R7J | SMALL FIXED INDUCTOR(4.7U) | | L250 | | L40-1085-57 | SMALL FIXED INDUCTOR(100NH) | |
| L2 | | L40-5667-92 | SMALL FIXED INDUCTOR(5.6NH) | | L400 | | LB73F0AW-002 | CHIP FERRITE | |
| L3 | | L40-5667-92 | SMALL FIXED INDUCTOR(5.6NH) | | L401 | | L33-1462-05 | SMALL FIXED INDUCTOR(68UH) | |
| L5 | | L40-8275-92 | SMALL FIXED INDUCTOR(82NH) | | L402 | | L41-2285-14 | SMALL FIXED INDUCTOR(220NH) | |
| L6 | | L40-5667-92 | SMALL FIXED INDUCTOR(5.6NH) | | Q1 | | EMD12 | TRANSISTOR | |
| L7 | | L40-5667-92 | SMALL FIXED INDUCTOR(5.6NH) | | Q2 | | LTA014YEBFS8 | TRANSISTOR | |
| L8 | | LK73G0AF39NJ | SMALL FIXED INDUCTOR(39NH) | | Q4 | | 2SC5636 | TRANSISTOR | |
| L10 | | LB73H0AV-003 | BEADS CORE | | Q6 | | 2SC5383-T111 | TRANSISTOR | |
| L11 | | L40-1891-86 | SMALL FIXED INDUCTOR(1.8U) | | Q7 | | SSM6L05FU-F | FET | |
| L12 | | LK73G0AQ3R3K | SMALL FIXED INDUCTOR(3.3UH) | | Q8 | | 2SK508NV(K52) | FET | |
| L15 | | L92-0446-05 | SMALL FIXED INDUCTOR(220NH) | | Q9 | | 2SJ347F | FET | |
| L16 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | | Q10 | | 2SK508NV(K52) | FET | |
| L17 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | | Q11 | | 2SC5636 | TRANSISTOR | |
| L18 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | | Q12 | | 2SK879-F(Y) | FET | |
| L19 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | | Q13 | | SSM3K15TE(F) | FET | |
| L20 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | | Q100 | | 2SC5636 | TRANSISTOR | |
| L23 | | L40-5678-67 | SMALL FIXED INDUCTOR(56NH) | | Q102 | | 2SK3077F | FET | |

PARTS LIST

TX-RX UNIT (X57-8950-11)

| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|---------------|--------------------------|------------------|----------|---------|--------------|---------------------|------------------|
| Q103 | | RD01MUS1-T113 | FET | | R49 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| Q104 | | 2SC5383-T111 | TRANSISTOR | | R50 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| Q105 | | LTC044EEBFS8 | DIGITAL TRANSISTOR | | R51 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| Q106 | | RD07MVS1BT122 | FET | | R52 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| Q107 | | 2SK1824-A | FET | | R53 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| Q109 | | SSM3K15TE(F) | FET | | R54 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| Q110 | | EMD5 | DIGITAL TRANSISTOR ARRAY | | R55 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q201 | | 2SC5108F/Y/ | TRANSISTOR | | R56 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| Q202 | | 2SC4215-F(Y) | TRANSISTOR | | R57 | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| Q203 | | 3SK318 | FET | | R58 | | RK73HB1J823J | CHIP R 82K J 1/16W | |
| Q204 | | 3SK294-FP | FET | | R59 | | RN73HH1J104D | CHIP R 100K D 1/16W | |
| Q401 | | SSM6L05FU-F | FET | | R60 | | RN73HH1J104D | CHIP R 100K D 1/16W | |
| Q402 | | SSM6L05FU-F | FET | | R62 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| Q403 | | SSM6L05FU-F | FET | | R63 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| Q404 | | SSM5H01TU-F | FET | | R64 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| Q405 | | 2SA1955A-F | TRANSISTOR | | R67 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| Q406 | | UMG9N | DIGITAL TRANSISTOR ARRAY | | R69 | | RK73HB1J560J | CHIP R 56 J 1/16W | |
| R1 | | RK73HH1J474D | CHIP R 470K D 1/16W | | R70 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R2 | | RK73HB1J470J | CHIP R 47 J 1/16W | | R71 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R3 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R72 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R5 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R74 | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R6 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R75 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R7 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | | R76 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R8 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R77 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R9 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R100 | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R10 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R101 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R11 | | RK73HB1J223J | CHIP R 22K J 1/16W | | R102 | | RK73HB1J271J | CHIP R 270 J 1/16W | |
| R12 | | RK73HB1J223J | CHIP R 22K J 1/16W | | R103 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R15 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R104 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R17 | | RK73HH1J184D | CHIP R 180K D 1/16W | | R105 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R18 | | RK73HH1J473D | CHIP R 47K D 1/16W | | R106 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R19 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R107 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R21 | | RK73HB1J106J | CHIP R 10M J 1/16W | | R111 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R22 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R118 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R23 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R119 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R24 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R120 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R25 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R123 | | RK73HB1J331J | CHIP R 330 J 1/16W | |
| R26 | | RK73HB1J331J | CHIP R 330 J 1/16W | | R124 | | RK73HB1J180J | CHIP R 18 J 1/16W | |
| R27 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R126 | | RK73HB1J273J | CHIP R 27K J 1/16W | |
| R28 | | RK73HB1J223J | CHIP R 22K J 1/16W | | R127 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R29 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R129 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R30 | | RK73HB1J563J | CHIP R 56K J 1/16W | | R130 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R31 | | RK73HB1J121J | CHIP R 120 J 1/16W | | R131 | | RK73HB1J561J | CHIP R 560 J 1/16W | |
| R32 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R133 | | RK73HB1J331J | CHIP R 330 J 1/16W | |
| R33 | | RK73HB1J223J | CHIP R 22K J 1/16W | | R134 | | RK73HB1J561J | CHIP R 560 J 1/16W | |
| R34 | | RK73HH1J391D | CHIP R 390 D 1/16W | | R135 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R35 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R136 | | RK73EB2ER39J | CHIP R 0.39 J 1/4W | |
| R36 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | | R137 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R37 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R138 | | RK73EB2ER39J | CHIP R 0.39 J 1/4W | |
| R38 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R139 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R39 | | RK73HB1J152J | CHIP R 1.5K J 1/16W | | R141 | | RK73EB2ER39J | CHIP R 0.39 J 1/4W | |
| R40 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R142 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R41 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R144 | | RK73HH1J154D | CHIP R 150K D 1/16W | |
| R42 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R145 | | RK73HH1J154D | CHIP R 150K D 1/16W | |
| R43 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R146 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R44 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R147 | | RK73HH1J184D | CHIP R 180K D 1/16W | |
| R45 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R148 | | RK73HH1J184D | CHIP R 180K D 1/16W | |
| R46 | | RK73HH1J331D | CHIP R 330 D 1/16W | | R149 | | RK73HH1J184D | CHIP R 180K D 1/16W | |
| R47 | | RK73HB1J220J | CHIP R 22 J 1/16W | | R150 | | RK73HH1J184D | CHIP R 180K D 1/16W | |
| R48 | | RK73HH1J271D | CHIP R 270 D 1/16W | | R151 | | RK73HB1J103J | CHIP R 10K J 1/16W | |

PARTS LIST

TX-RX UNIT (X57-8950-11)


| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|--------------|---------------------|------------------|----------|---------|--------------|---------------------|------------------|
| R152 | | RK73EB2E823J | CHIP R 82K J 1/4W | | R254 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R153 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R255 | | RK73HB1J272J | CHIP R 2.7K J 1/16W | |
| R154 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R256 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R155 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R257 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R156 | | RK73HB1J182J | CHIP R 1.8K J 1/16W | | R260 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R157 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R262 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R158 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R263 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R161 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R265 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R162 | | RK73HB1J271J | CHIP R 270 J 1/16W | | R268 | | RK73HB1J680J | CHIP R 68 J 1/16W | |
| R163 | | RK73HB1J271J | CHIP R 270 J 1/16W | | R269 | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R164 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R272 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R165 | | RK73HB1J474J | CHIP R 470K J 1/16W | | R273 | | RK73HB1J823J | CHIP R 82K J 1/16W | |
| R166 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R274 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R167 | | RK73HB1J183J | CHIP R 18K J 1/16W | | R276 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R168 | | RK73HB1J124J | CHIP R 120K J 1/16W | | R277 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R170 | | RK73HB1J224J | CHIP R 220K J 1/16W | | R279 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R171 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | | R280 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R176 | | RK73HB1J331J | CHIP R 330 J 1/16W | | R281 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R177 | | RK73HB1J331J | CHIP R 330 J 1/16W | | R282 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R202 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R283 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R203 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R285 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R204 | | RK73HB1J561J | CHIP R 560 J 1/16W | | R289 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R205 | | RK73HB1J224J | CHIP R 220K J 1/16W | | R293 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R206 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R295 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R207 | | RK73HB1J224J | CHIP R 220K J 1/16W | | R296 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R208 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R299 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R209 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R300 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R210 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R301 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R211 | | RK73HB1J334J | CHIP R 330K J 1/16W | | R302 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R212 | | RK73HB1J221J | CHIP R 220 J 1/16W | | R303 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R214 | | RK73HB1J564J | CHIP R 560K J 1/16W | | R304 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R216 | | RK73HB1J221J | CHIP R 220 J 1/16W | | R305 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R218 | | RK73HB1J221J | CHIP R 220 J 1/16W | | R307 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R220 | | RK73HB1J470J | CHIP R 47 J 1/16W | | R310 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R221 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R311 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R222 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R313 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R223 | | RK73HB1J274J | CHIP R 270K J 1/16W | | R314 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R225 | | RK73HB1J681J | CHIP R 680 J 1/16W | | R318 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R226 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R319 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R227 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | | R320 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R228 | | RK73HB1J221J | CHIP R 220 J 1/16W | | R321 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R229 | | RK73HB1J103J | CHIP R 10K J 1/16W | | R322 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R230 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R325 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R231 | | RK73HB1J223J | CHIP R 22K J 1/16W | | R326 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R233 | | RK73HB1J183J | CHIP R 18K J 1/16W | | R400 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R234 | | RK73HB1J823J | CHIP R 82K J 1/16W | | R402 | | RK73HB1J330J | CHIP R 33 J 1/16W | |
| R235 | | RK73HB1J823J | CHIP R 82K J 1/16W | | R404 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R236 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | | R405 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R237 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | | R406 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R238 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | | R407 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R239 | | RK73HB1J823J | CHIP R 82K J 1/16W | | R408 | | RK73GB2A100J | CHIP R 10 J 1/10W | |
| R240 | | RK73HB1J823J | CHIP R 82K J 1/16W | | R409 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R241 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | | R410 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R242 | | RK73HB1J473J | CHIP R 47K J 1/16W | | R411 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R243 | | RK73HB1J183J | CHIP R 18K J 1/16W | | R412 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R245 | | RK73HB1J104J | CHIP R 100K J 1/16W | | R413 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R246 | | RK73HB1J101J | CHIP R 100 J 1/16W | | R415 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R248 | | RK73HB1J100J | CHIP R 10 J 1/16W | | R417 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R251 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | R418 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R253 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | R419 | | RK73HB1J473J | CHIP R 47K J 1/16W | |

PARTS LIST

TX-RX UNIT (X57-8950-11)


| Ref. No. | Address | Parts No. | Description | Desti- nation | Ref. No. | Address | Parts No. | Description | Desti- nation |
|----------|---------|--------------|---------------------|------------------|----------|---------|-----------|-------------|------------------|
| R420 | | RK73HB1J473J | CHIP R 47K J 1/16W | | | | | | |
| R421 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | | | | | |
| R422 | | RK73HB1J474J | CHIP R 470K J 1/16W | | | | | | |
| R423 | | RK73HB1J123J | CHIP R 12K J 1/16W | | | | | | |
| R424 | | RK73HH1J274D | CHIP R 270K D 1/16W | | | | | | |
| R425 | | RK73HH1J223D | CHIP R 22K D 1/16W | | | | | | |
| R426 | | RK73HB1J100J | CHIP R 10 J 1/16W | | | | | | |
| R427 | | RK73HB1J391J | CHIP R 390 J 1/16W | | | | | | |
| R428 | | RK73HB1J821J | CHIP R 820 J 1/16W | | | | | | |
| R429 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | | | | | | |
| R430 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | | | | | | |
| R436 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | | | | | |
| R438 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | | | | | | |
| R439 | | RK73HH1J183D | CHIP R 18K D 1/16W | | | | | | |
| R440 | | RK73HB1J474J | CHIP R 470K J 1/16W | | | | | | |
| R451 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | | | | | |
| R452 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | | | | | | |
| R490 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | | | | | |
| R498 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | | | | | |
| R499 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | | | | | | |
| R500 | | RK73HB1J103J | CHIP R 10K J 1/16W | | | | | | |
| R501 | | RK73HB1J103J | CHIP R 10K J 1/16W | | | | | | |
| R959 | | RK73HB1J562J | CHIP R 5.6K J 1/16W | | | | | | |
| S1 | | S70-0483-05 | TACT SWITCH | | | | | | |
| TH100 | | ERTJOV104H | THERMISTOR | | | | | | |
| X1 | | L77-3014-05 | TCXO (19.2M) | | | | | | |
| XF200 | | L71-0679-05 | MCF (58.05MHZ) | | | | | | |

EXPLODED VIEW

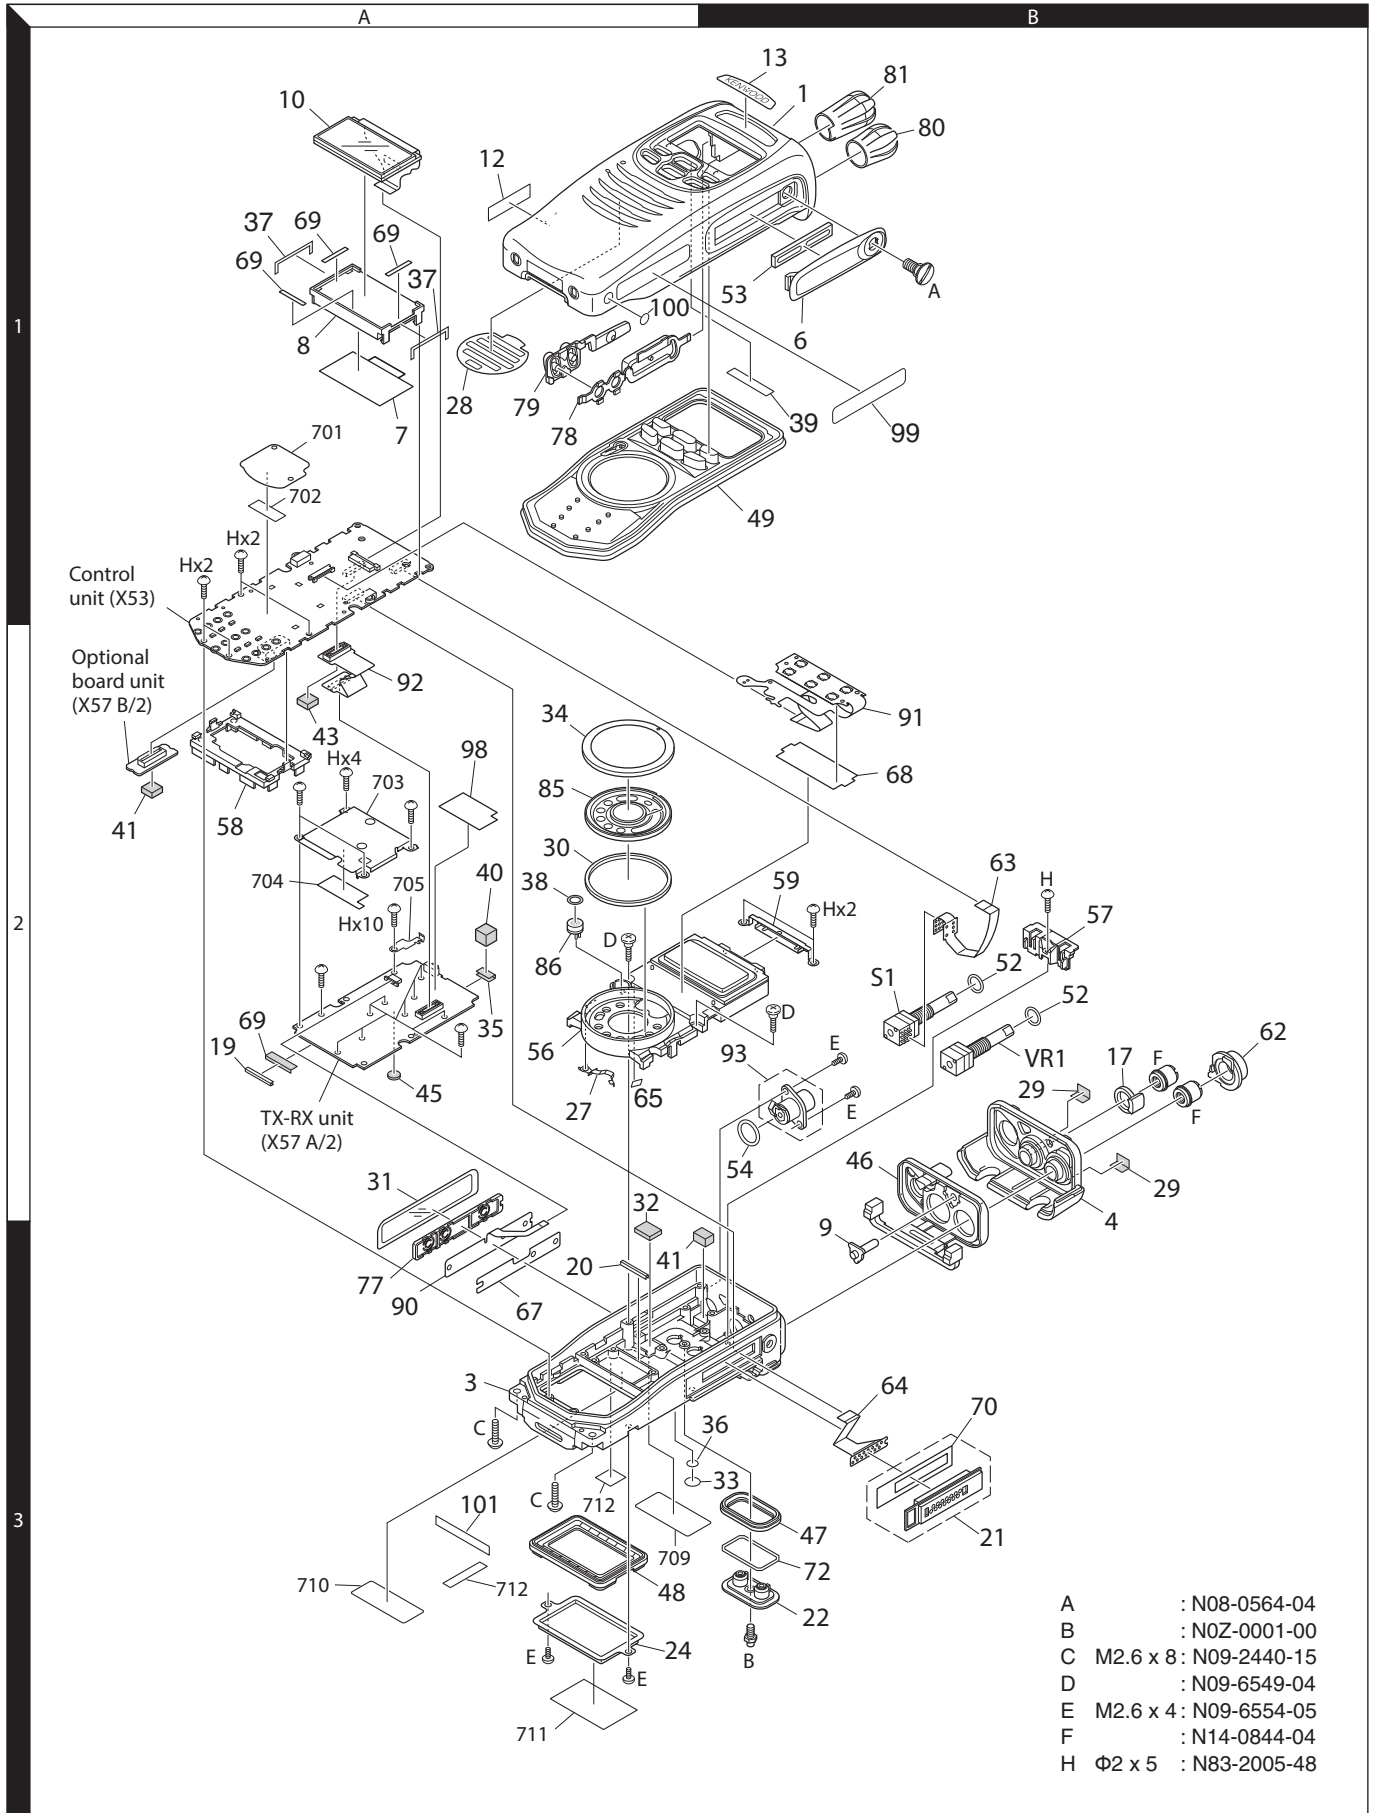

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

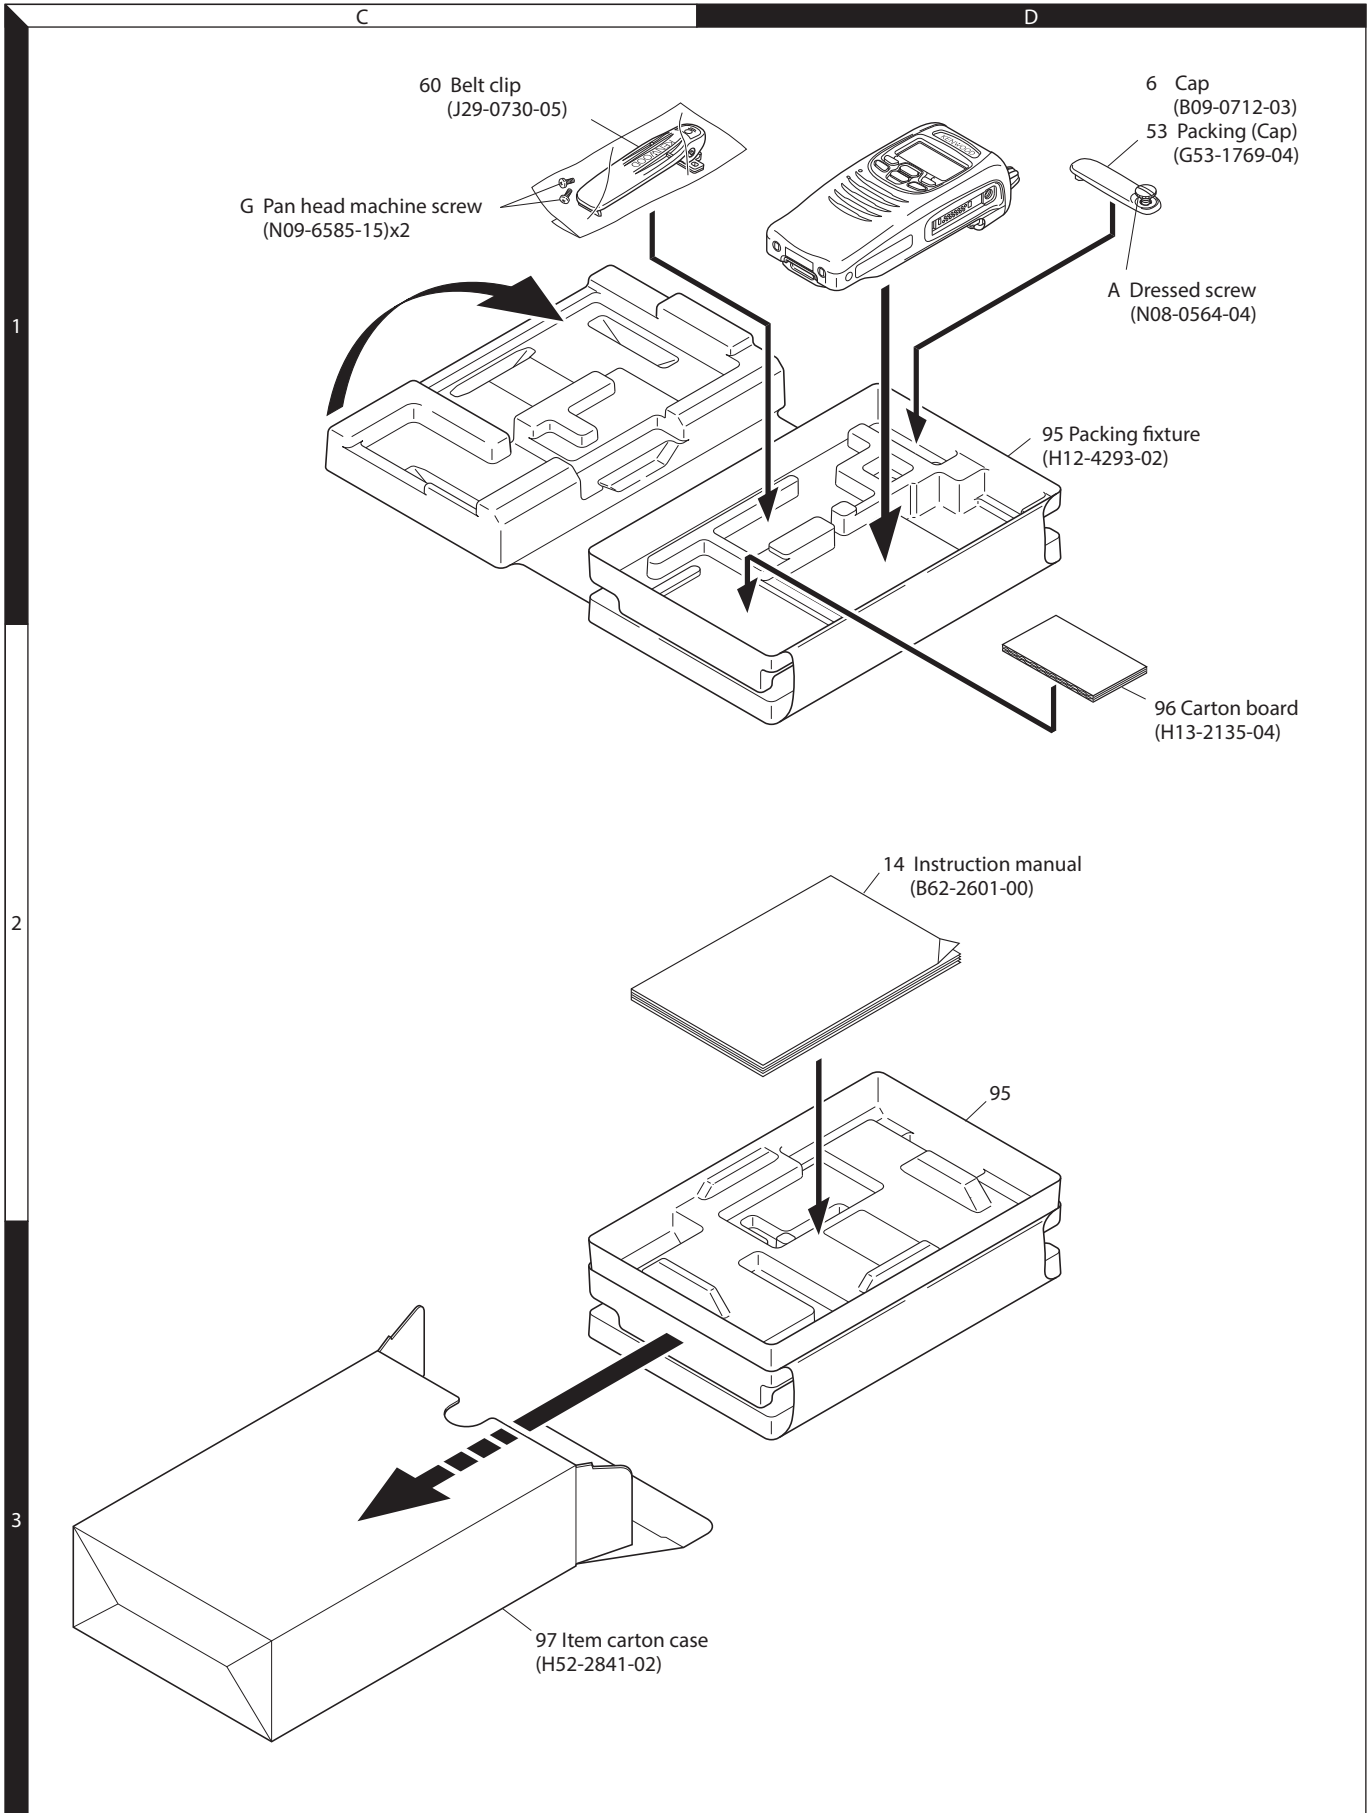

TROUBLE SHOOTING

Fault Diagnosis of the BGA (Ball Grid Array) IC

■ Overview

A flowchart for determining whether or not the transceiver can be powered on (the LCD does not function even if the power switch is turned on) due to broken BGA parts.

■ BGA parts


ASIC (IC108), DSP (IC102), FLASH (IC101), SRAM (IC103)

When the BGA IC is problematic, please bring the printed circuit board (X53-4590-15 for 6-key) in for service. Various ESN/default adjustment values are written on the printed circuit board for service.


Additionally various ESN stickers are included. (Please refer to pages 37 and 38.)

After the printed circuit board has been readjusted, please attach any ESN stickers to the chassis. When "ESN Validation" is used with NXDN Trunking, you must modify the ESN register.


● Checking power supply voltage

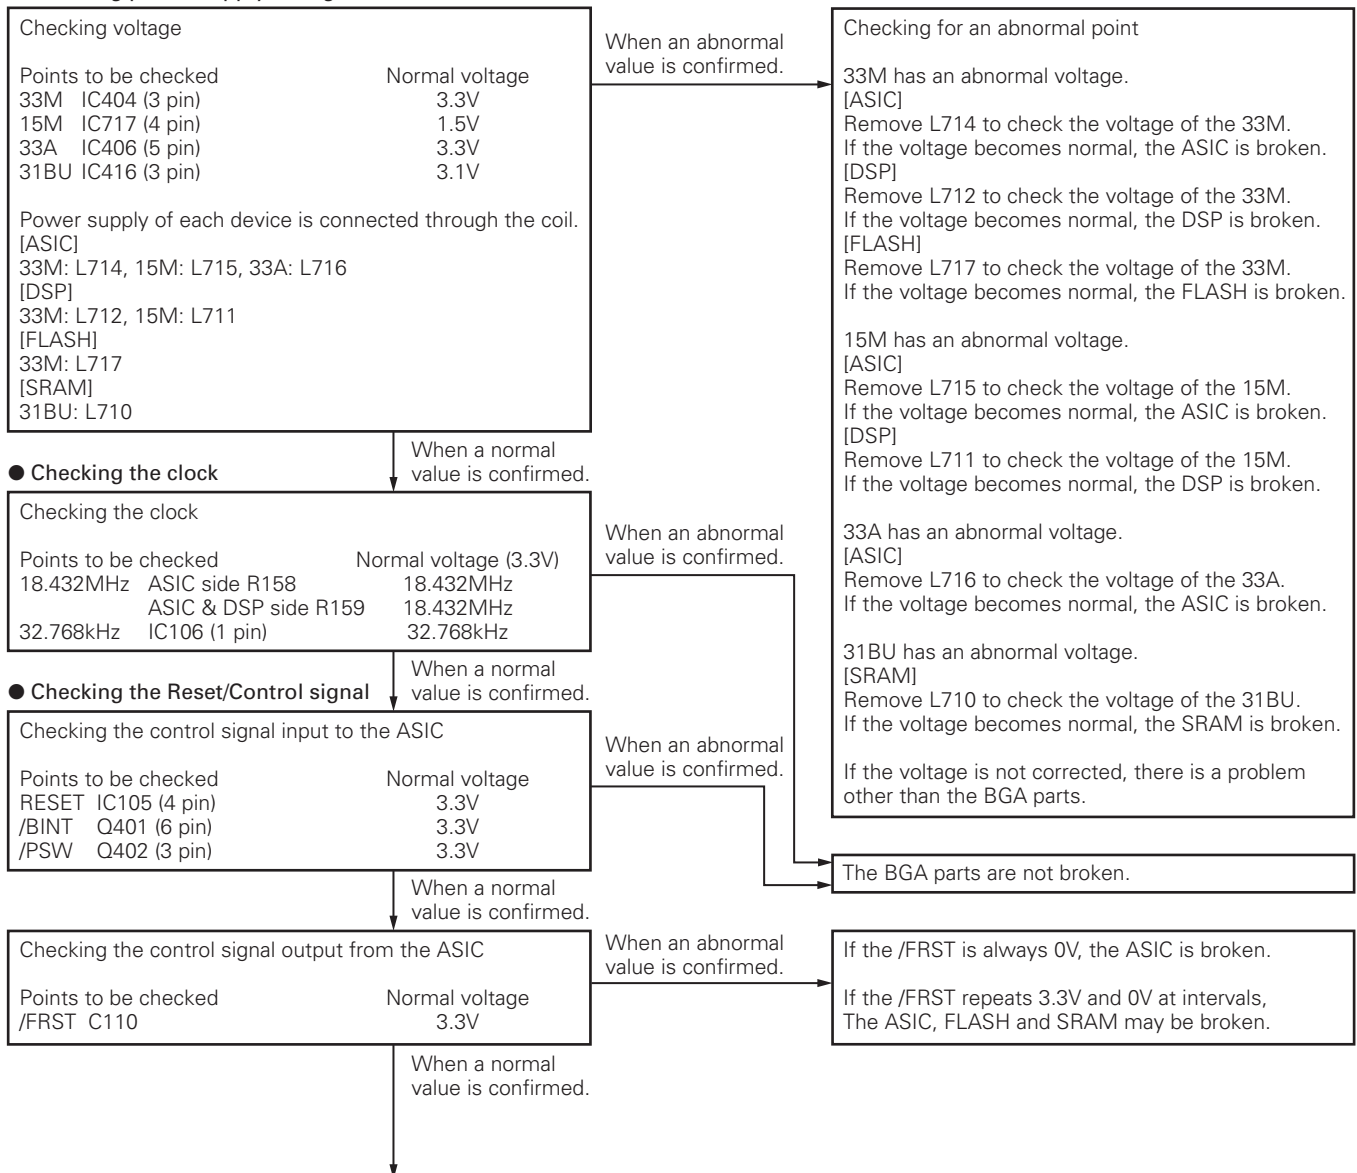

TROUBLE SHOOTING

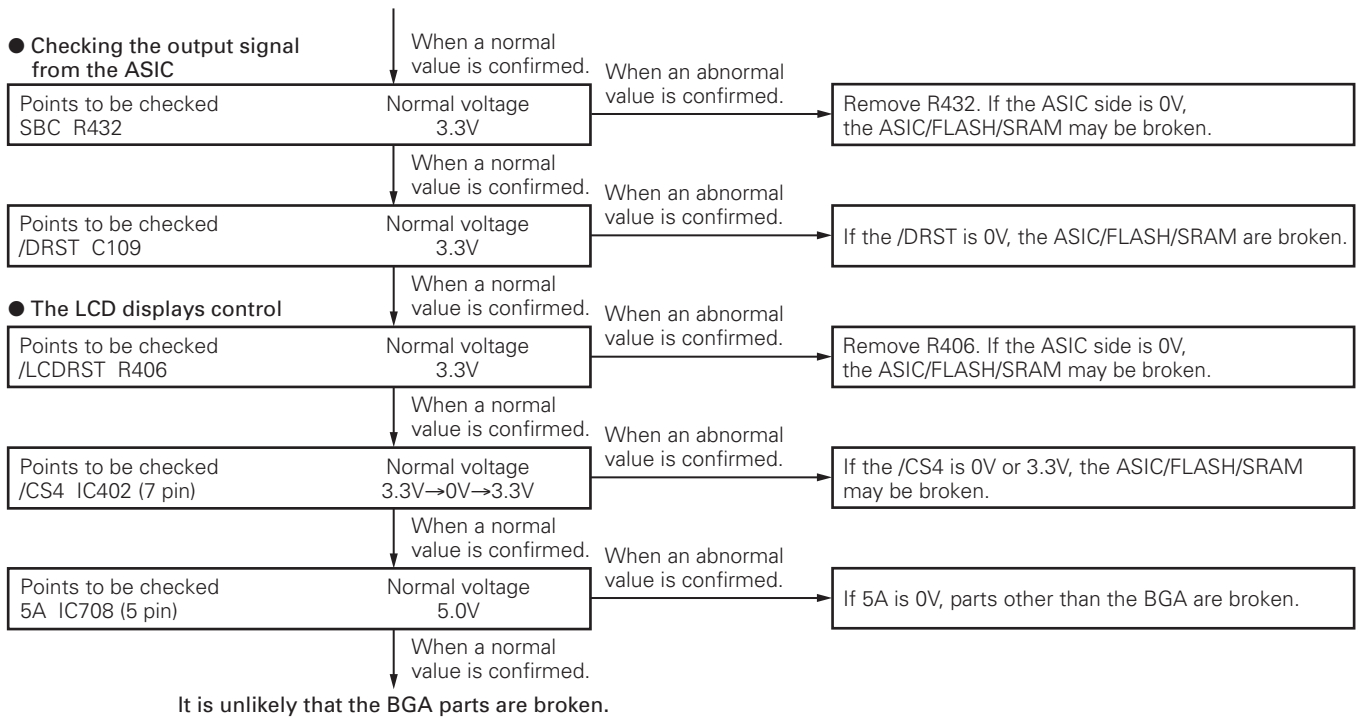

● **When an error display appears on the LCD.**

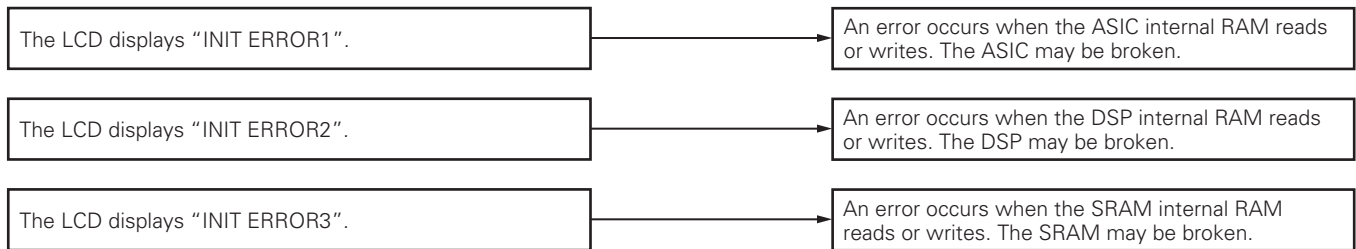

■ **Descriptions of signal names**

- | | | |
|---------------|---|---------------------|
| 1) RST(RESET) | : ASIC reset signal | LOW → Reset |
| 2) /BINT | : Battery final voltage monitoring | LOW → Final voltage |
| 3) /PSW | : Power switch signal | LOW → ON |
| 4) /FRST | : FLASH reset signal | LOW → Reset |
| 5) SBC | : Switch B control | HIGH → ON |
| 6) /DRST | : DSP reset signal | LOW → Reset |
| 7) /LCDRST | : LCD reset signal | LOW → Reset |
| 8) /CS4 | : LCD controller chip select signal | LOW → Active |
| 9) 5A | : Analog peripheral control 5.0V power supply | |


TROUBLE SHOOTING

Replacing Control Unit

■ Control unit Information

| Model Name | Original Control unit Number | For Service Control unit Number |
|-------------------|------------------------------|---------------------------------|
| NX-203 (K: 6-key) | X53-4590-14 | X53-4590-15 |

■ Method of confirming “Original Control unit” and “Service Control unit”

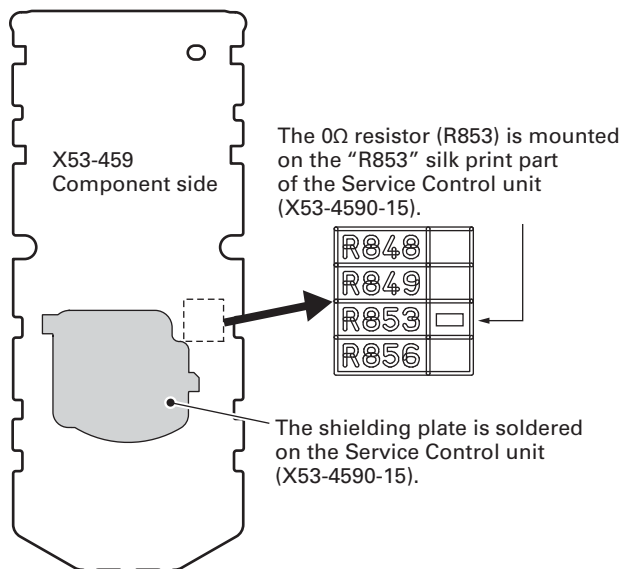

| X53-459 | R849 | R853 | R856 |
|---------|--------|--------|--------|
| 0-14 | (None) | (None) | (None) |
| 0-15 | (None) | 0Ω | (None) |

Note:

- The 0Ω resistor (R853) is used to differentiate the destination with a visual check. These are not connected with any PCB pattern; they are specifically for production control. There is no need to change the mount of these resistors.
- There is no difference between the schematic diagram of the Service Control unit (X53-4590-15) is connected with GND (ground) only.)

■ Supplied Accessories of “Service Control unit”

| Item (Including Parts Number) | Quantity |
|-------------------------------|----------|
| Control Unit (X53-459) | 1 |
| KENWOOD ESN Label | 1 |
| NXDN ESN Label | 1 |

■ “Service Control unit” Data

The following data is written on the service control unit:

| Data Type | Description |
|--|---|
| Firmware | NX-203/303 Firmware. |
| FPU Data (PC programming mode) | X53-459 (NX-303) K type data. |
| Various Adjustment Data (PC Test mode) | General adjustment values for the X53-459 (NX-303). |
| KENWOOD ESN | Model name: [X53-459] NX-203/303S Type: K The same number as the KENWOOD ESN label is written. |
| NXDN ESN | The same number as the NXDN ESN label is written. |


■ After Changing the PCB

- After changing the printed circuit board, write the up-to-date Firmware following the instructions in the “REALIGNMENT - 6.Firmware Programming Mode”.
- Using the KPG-111D/111DN, select your desired item (Model Name and Frequency) from the Model> Product Information menu, then use Program> Write Data to the Transceiver to write the FPU data (PC Programming mode). When writing to the transceiver, a Warning Message, corresponding to the item selected, appears. Click [OK] to continue writing the data.
- Enter Program> Test Mode, then adjust the various adjustment data (PC Test Mode) as described in the “ADJUSTMENT”.
- Attach the new labels corresponding to the new printed circuit board. (Refer to the images on page 38 for label placement.)
- If necessary, write the FPU data used by the customer with the KPG-111D/111DN.

TROUBLE SHOOTING

Note:


- When using the ESN Validation function of NXDN Trunking, the NXDN ESN number changes when the circuit board is changed (the number is written on the circuit board); the NXDN Trunking System cannot be accessed. Use the KPG-110SM on the NXDN Trunking System side to reprogram the NXDN ESN number.
- When a new printed circuit board is used, the KENWOOD ESN changes, as does the Transceiver Information display of the KPG-111D/111DN, but this does not have any effect on the operation of the transceiver.
- If changing to the original KENWOOD ESN and NXDN ESN, please contact our service center.

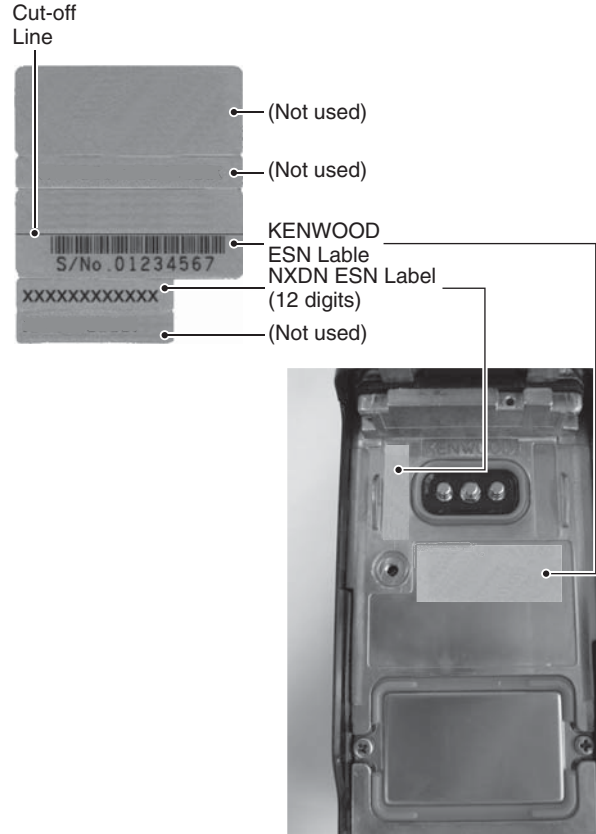

Note: A UPC code and UPC barcode is not printed on the KENWOOD ESN Label. If necessary, cut the label at the cut-off line and attach only the serial number.

ADJUSTMENT

Controls

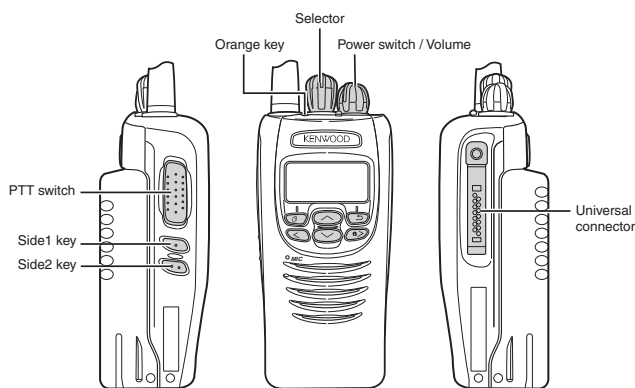

Panel Test Mode

■ Test mode operation features

This transceiver has a test mode. **To enter test mode, press and hold the [↵] key while turning the transceiver power ON. Before the transceiver enters test mode, the frequency version information appears on the LCD momentarily.** Test mode can be inhibited by programming. To exit test mode, turn the transceiver power OFF. The following functions are available in test mode.

ADJUSTMENT

■ Key operation

| Key | "FNC" not appears on the sub LCD display | |
|------------|---|--|
| | Function | Display |
| [Selector] | - | - |
| [^] | Push: Test channel up Hold: Test channel up continuously | Channel No. |
| [v] | Push: Test channel down Hold: Test channel down continuously | Channel No. |
| [Side1] | Push: Squelch level up Hold: Squelch off | Squelch level Squelch off: [v] icon appears |
| [Side2] | Wide/Narrow/Very narrow | Wide: "w" Narrow: "n" Very narrow: "v" |
| [@] | Shift to panel tuning mode | - |
| [>] | Function on | "FNC" appears on the sub LCD display |
| [<] | MSK 1200bps and 2400bps | 2400bps: [v] icon appears |
| [>] | Push: Test signaling up Hold: Test signaling up continuously | Signaling No. |
| [Orange] | - | - |
| [PTT] | Transmit | - |

| Key | "FNC" appears on the sub LCD display | |
|------------|--------------------------------------|--------------------------|
| | Function | Display |
| [Selector] | - | - |
| [^] | Function off | - |
| [v] | Analog/NXDN | Analog: "A" NXDN: "N" |
| [Side1] | Function off | - |
| [Side2] | LCD all lights | LCD all point appears |
| [@] | High power/Low power | High: "H" Low: "L" |
| [>] | Function off | - |
| [<] | Compander on/off | On: [v] icon appears |
| [>] | Beat shift on/off | On: [v] icon appears |
| [Orange] | Function off | - |
| [PTT] | Transmit | - |


• LED indicator

Red LED Lights during transmission.
Green LED Lights when there is carrier.

• Sub LCD indicator

"FNC" Appears at function on.

• LCD display in panel test mode

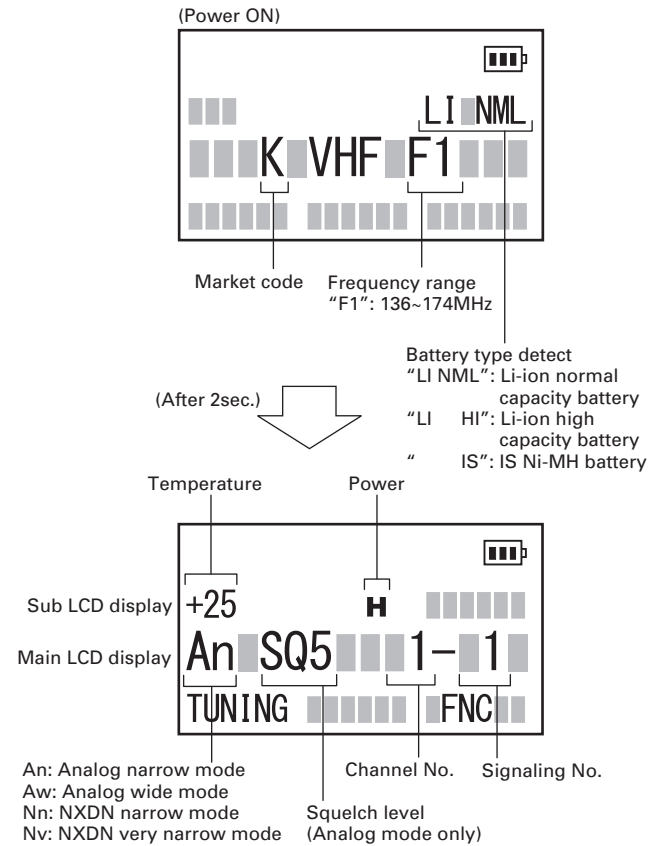

■ Frequency and Signaling

The transceiver has been adjusted for the frequencies shown in the following table. When required, readjust them following the adjustment procedure to obtain the frequencies you want in actual operation.

• Test frequency

| CH | RX (MHz) | TX (MHz) |
|------|-----------|-----------|
| 1 | 155.05000 | 155.10000 |
| 2 | 136.05000 | 136.10000 |
| 3 | 173.95000 | 173.90000 |
| 4 | 155.00000 | 155.00000 |
| 5 | 155.20000 | 155.20000 |
| 6 | 155.40000 | 155.40000 |
| 7~16 | - | - |

ADJUSTMENT

• Analog mode signaling

| No. | RX | TX |
|-----|---|---|
| 1 | None | None |
| 2 | None | 100Hz Square Wave |
| 3 | LTR Data: AREA=0, GOTO=12 HOME=12 ID=47, FREE=25 | LTR Data: AREA=0, GOTO=12 HOME=12 ID=47, FREE=25 |
| 4 | QT: 67.0Hz | QT: 67.0Hz |
| 5 | QT: 151.4Hz | QT: 151.4Hz |
| 6 | QT: 210.7Hz | QT: 210.7Hz |
| 7 | QT: 254.1Hz | QT: 254.1Hz |
| 8 | DQT: D023N | DQT: D023N |
| 9 | DQT: D754I | DQT: D754I |
| 10 | DTMF: 159D | DTMF: 159D |
| 11 | None | DTMF Code 9 |
| 12 | 2-tone: A: 304.7Hz B: 3106.0Hz | 2-tone: A: 304.7Hz B: 3106.0Hz |
| 13 | Single Tone: 979.9Hz | Single Tone: 979.9Hz |
| 14 | None | Single Tone: 1000Hz |
| 15 | None | MSK |
| 16 | MSK | MSK |

• NXDN mode signaling

| No. | RX | TX |
|-----|------|---------------------------|
| 1 | RAN1 | RAN1 |
| 2 | None | PN9 |
| 3 | RAN1 | Maximum deviation pattern |

RAN: Radio Access Number

PN9: Pseudo-Random Pattern (for production only)

No.7,9 item: PC test mode only

Panel Tuning Mode

■ Preparations for tuning the transceiver

Before attempting to tune the transceiver, connect the unit to a suitable power supply.

Whenever the transmitter is turned, the unit must be connected to a suitable dummy load (i.e. power meter).


The speaker output connector must be terminated with a 8Ω dummy load and connected to an AC voltmeter and an audio distortion meter or a SINAD measurement meter at all times during tuning.

■ Transceiver tuning (To enter tuning mode)

To enter tuning mode, press the [Ⓜ] key while the transceiver is in test mode. Use the [←] key to write tuning data through tuning modes, and the [∧]/[∨] key to adjust tuning requirements (1 to 4096 appears on the LCD).

Use the [▶] key to select the adjustment item through tuning modes. Use the [↵] key to adjust 5 reference level adjustments, and use the [Side2] key to switch between Wide/Narrow/Very narrow.

• LCD display in panel tuning mode

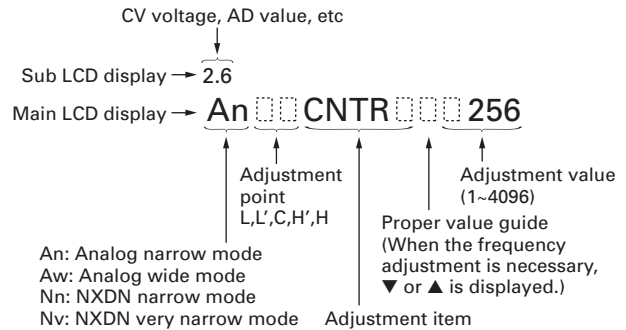

■ Key operation


| Key | Function | |
|------------|--|------------------------------|
| | Push | Hold (1 second) |
| [Selector] | | - |
| [∧] | Adjustment value up | Continuation up |
| [∨] | Adjustment value down | Continuation down |
| [Side1] | Auto adjustment start | - |
| [Side2] | Wide/Narrow/Very narrow | - |
| [Ⓜ] | Shift to panel test mode | - |
| [↵] | To enter 5 reference level adjustments | - |
| [←] | Writes the adjustment value | - |
| [▶] | Go to next adjustment item | Back to last adjustment item |
| [Orange] | | - |
| [PTT] | | Transmit |

■ 5 reference level adjustments frequency

| Tuning point | RX (MHz) | TX (MHz) |
|--------------|-----------|-----------|
| Low | 136.05000 | 136.10000 |
| Low' | 145.55000 | 145.60000 |
| Center | 155.05000 | 155.10000 |
| High' | 164.55000 | 164.60000 |
| High | 173.95000 | 173.90000 |

ADJUSTMENT

■ Adjustment item supplement

| Adjustment Item | Description |
|---|--|
| LCD contrast | The contrast of LCD display can be changed. |
| Counterclockwise Volume | “Counterclockwise Volume” is adjusted at the minimum volume position. “Clockwise Volume” is adjusted at the maximum volume position. These adjustments can correct the volume variation. |
| Clockwise Volume | Both “Counterclockwise Volume” and “Clockwise Volume” must be adjusted. (The curve data of volume is applied.) |
| Receive Assist | The lock voltage of VCO (Receive) is adjusted. This item must be adjusted before all adjustment items for receiver section are adjusted. |
| Transmit Assist | The lock voltage of VCO (Transmit) is adjusted. This item must be adjusted before all adjustment items for transmitter section are adjusted. |
| Frequency | Frequency stability is adjusted under receiving condition with SSG. The SSG needs 0.003ppm accuracy so please use a standard oscillator if necessary. This item can be adjusted only in PC Test Mode so that the adjustment value is not changed easily. |
| High Transmit Power | High Transmit Power is adjusted. |
| Low Transmit Power | Low Transmit Power is adjusted. |
| Balance | The transmit audio frequency response is adjusted. This item is adjusted so that the deviation of 2kHz becomes the same deviation of 20Hz. This item must be adjusted before all adjustment items for deviations are adjusted. |
| Maximum Deviation (NXDN Narrow/Very Narrow) | Maximum Deviation of NXDN (Narrow/Very Narrow) is adjusted. |
| Maximum Deviation (Analog Wide/Narrow) | Maximum Deviation of Analog (Wide/Narrow) is adjusted. This item must be adjusted before all adjustment items for tone deviations are adjusted. Note: “Maximum Deviation (Analog Narrow)” must be adjusted before “CWID Deviation (NXDN Very Narrow)” is adjusted. |
| QT Deviation | QT tone deviation is adjusted. |
| DQT Deviation | DQT tone deviation is adjusted. |
| LTR Deviation | LTR tone deviation is adjusted. |
| DTMF Deviation | DTMF tone deviation is adjusted. |
| Single Tone Deviation | The deviation of Single Tone used in “2-tone” is adjusted. |
| MSK Deviation | MSK tone deviation is adjusted. |
| CWID Deviation | CWID tone deviation is adjusted. CWID is used to inform the others who is transmitting on a 6.25-kHz spacing channel. (In FCC rule, Analog mode or CWID is required for each channel-spacing.) |
| VOX 1 | VOX sensitivity at “VOX 1” is adjusted. |
| VOX 10 | VOX sensitivity at “VOX 10” is adjusted. |
| Sensitivity 1 | Band-Pass Filter is adjusted. The performance of Receive Sensitivity is improved. |
| Sensitivity 2 | The gain of RF amplifier is adjusted. The performance of the interfering wave is improved. |
| RSSI Reference | The minimum RSSI level for scan stop is adjusted. |
| Open Squelch | The squelch level at level “5” is adjusted. |
| Low RSSI | RSSI display level “  ” is adjusted. |
| High RSSI | Both “Low RSSI” and “High RSSI” must be adjusted. (The curve data of RSSI level is applied.) |
| Tight Squelch | The squelch level at level “9” is adjusted. |
| Battery Warning Level | Battery Warning Level (LED blinking level) is adjusted. Battery Warning Level minus 0.4V is the transmission inhibited level. |

ADJUSTMENT

■ Adjustment item and Display

| Order | Adjustment item | Main LCD display | Sub LCD display | Aw (Analog Wide) | An (Analog Narrow) | Nn (NXDN Narrow) | Nv (NXDN Very Narrow) | Adjust item Number |
|-------|----------------------------|------------------|--------------------------|------------------|--------------------|------------------|-----------------------|------------------------|
| | | | | Adjustment range | | | | |
| 1 | LCD contrast | CNTR | - | 1 point ADJ | | | | Common Section 2 |
| | | | | 1~256 | | | | |
| 2 | Counterclockwise Volume | VOL1 | VOL measurement value | 1 point ADJ | | | | Common Section 3 |
| | | | | 1~256 | | | | |
| 3 | Clockwise Volume | VOL2 | VOL measurement value | 1 point ADJ | | | | Common Section 4 |
| | | | | 1~256 | | | | |
| 4 | Receive Assist | RAST | (CV voltage) | 5 point ADJ | | | | Common Section 5 |
| | | | | 1~4096 | | | | |
| 5 | Transmit Assist | TAST | (CV voltage) | 5 point ADJ | | | | Common Section 5 |
| | | | | 1~4096 | | | | |
| 6 | High Transmit Power | HIPWR | - | - | 5 | - | - | Transmitter Section 1 |
| | | | | 1~1024 | | | | |
| 7 | Low Transmit Power | LOPWR | - | - | 5 | - | - | Transmitter Section 2 |
| | | | | 1~1024 | | | | |
| 8 | Balance | BAL | (Encode frequency) | - | 5 | - | - | Transmitter Section 3 |
| | | | | 1~256 | | | | |
| 9 | Maximum Deviation (NXDN) | NDEV | - | - | - | 5 | 5 | Transmitter Section 4 |
| | | | | 1~1024 | | | | |
| 10 | Maximum Deviation (Analog) | ADEV | - | 5 | 5 | - | - | Transmitter Section 5 |
| | | | | 1~1024 | | | | |
| 11 | QT Deviation | QT | - | 1 | 1 | - | - | Transmitter Section 6 |
| | | | | 1~1024 | | | | |
| 12 | DQT Deviation | DQT | - | 1 | 1 | - | - | Transmitter Section 7 |
| | | | | 1~1024 | | | | |
| 13 | LTR Deviation | LTR | - | 1 | 1 | - | - | Transmitter Section 8 |
| | | | | 1~1024 | | | | |
| 14 | DTMF Deviation | DTMF | - | 1 | 1 | - | - | Transmitter Section 9 |
| | | | | 1~1024 | | | | |
| 15 | Single Tone Deviation | TONE | - | 1 | 1 | - | - | Transmitter Section 10 |
| | | | | 1~1024 | | | | |
| 16 | MSK Deviation | MSK | - | 1 | 1 | - | - | Transmitter Section 11 |
| | | | | 1~1024 | | | | |
| 17 | CWID Deviation | CWID | - | - | - | - | 1 | Transmitter Section 12 |
| | | | | 1~1024 | | | | |
| 18 | VOX1 | VOX1 | VOX measurement value | 1 point ADJ | | | | Transmitter Section 13 |
| | | | | 1~256 | | | | |
| 19 | VOX10 | VOX10 | VOX measurement value | 1 point ADJ | | | | Transmitter Section 14 |
| | | | | 1~256 | | | | |
| 20 | Sensitivity 1 | SENS1 | (RSSI measurement value) | - | 5 | - | - | Receive Section 2 |
| | | | | 1~256 | | | | |


ADJUSTMENT

| Order | Adjustment item | Main LCD display | Sub LCD display | Aw (Analog Wide) | An (Analog Narrow) | Nn (NXDN Narrow) | Nv (NXDN Very Narrow) | Adjust item Number |
|-------|-----------------------|------------------|----------------------------|------------------|--------------------|------------------|-----------------------|------------------------|
| | | | | Adjustment range | | | | |
| 21 | Sensitivity 2 | SENS2 | (RSSI measurement value) | - | 5 | - | - | Receive Section 3 |
| | | | | 1~256 | | | | |
| 22 | RSSI Reference | RRSSI | (RSSI measurement value) | 5 | 5 | - *1 | 5 | Receive Section 4 |
| | | | | 1~256 | | | | |
| 23 | Open Squelch | SQL | (ASQDET measurement value) | 5 | 5 | - *1 | 5 | Receive Section 5 |
| | | | | 1~256 | | | | |
| 24 | Low RSSI | LRSSI | (RSSI measurement value) | 5 | 5 | - *1 | 5 | Receive Section 6 |
| | | | | 1~256 | | | | |
| 25 | High RSSI | HRSSI | (RSSI measurement value) | 5 | 5 | - *1 | 5 | Receive Section 7 |
| | | | | 1~256 | | | | |
| 26 | Tight Squelch | SQLT | (ASQDET measurement value) | 5 | 5 | - | - | Receive Section 8 |
| | | | | 1~256 | | | | |
| 27 | Battery Warning Level | BATT | (BATT measurement value) | 1 point ADJ | | | | Transmitter Section 15 |
| | | | | 1~256 | | | | |


*1: Because NXDN Narrow is adjusted by adjusting Analog Narrow, it is not necessary to adjust NXDN Narrow.

■ Panel tuning mode flow chart

Note: In this Panel tuning mode flow chart, the Adjustment item name is modified.

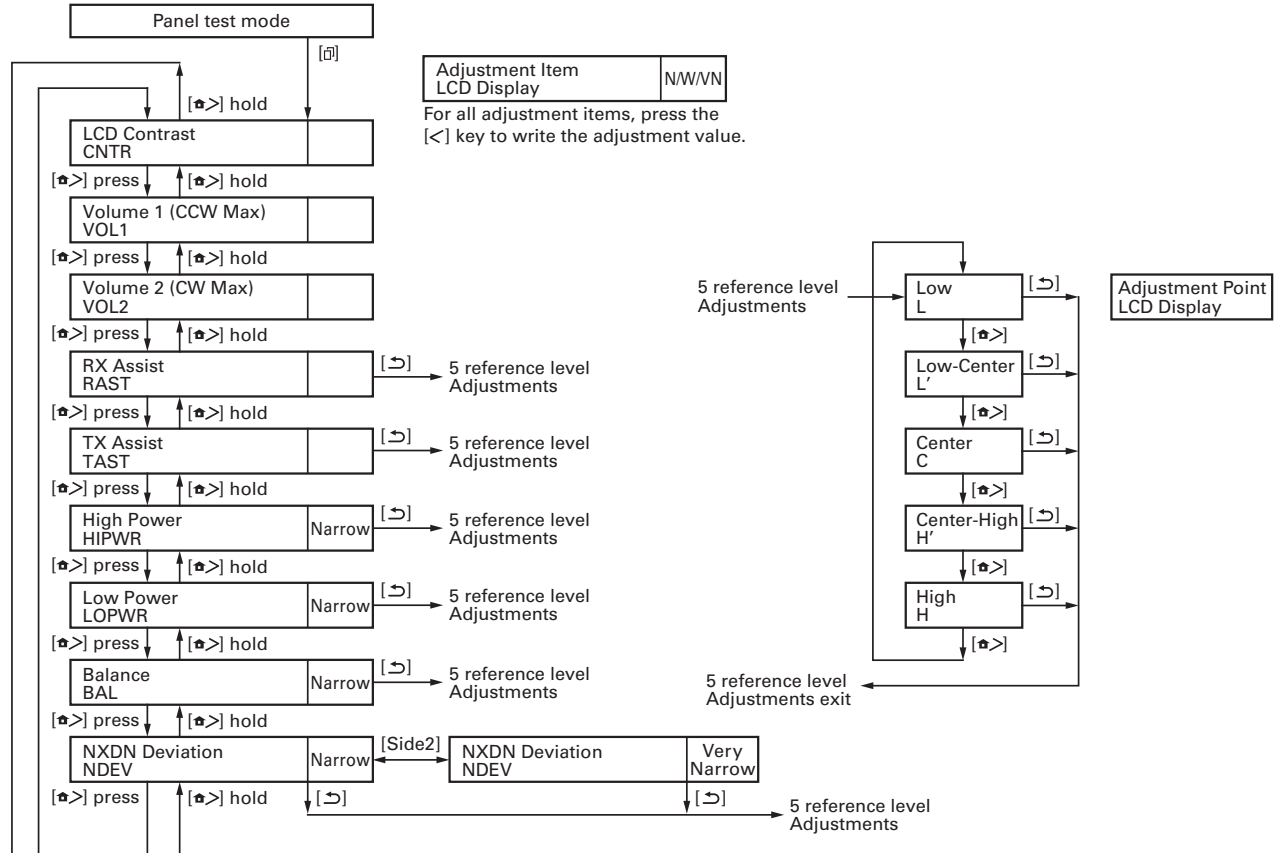

ADJUSTMENT

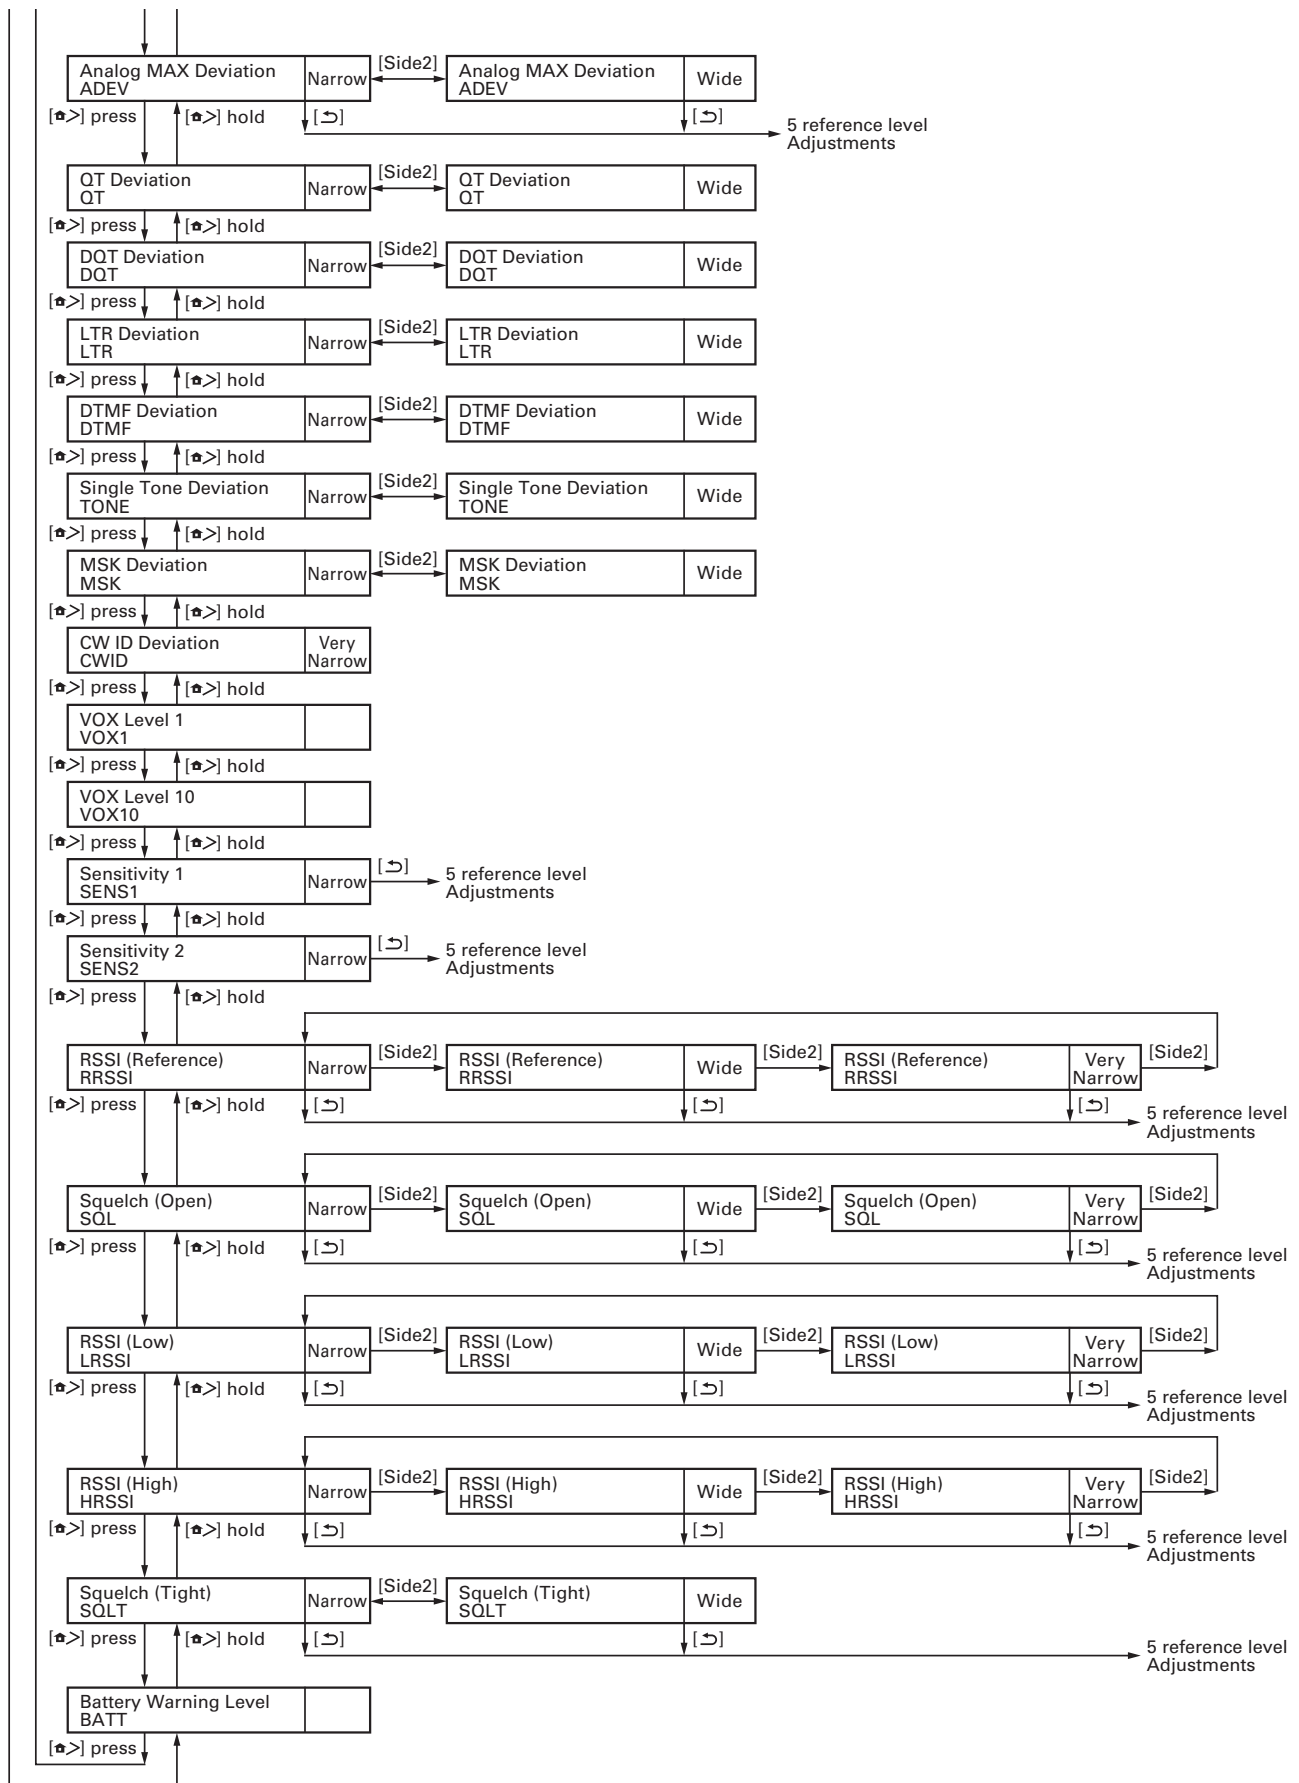

ADJUSTMENT

Test Equipment Required for Alignment

| Test Equipment | Major Specifications | |
|---------------------------------------|---|--|
| 1. Standard Signal Generator (SSG) | Frequency Range Modulation Output When performing the Frequency adjustment, the following accuracy is necessary. • 0.003ppm Use a standard oscillator for adjustments, if necessary. | 136 to 174MHz Frequency modulation and external modulation -127dBm/0.1μV to greater than -20dBm/22.4mV |
| 2. Power Meter | Input Impedance Operation Frequency Measurement Capability | 50Ω 136 to 174MHz Vicinity of 10W |
| 3. Deviation Meter | Frequency Range | 136 to 174MHz |
| 4. Digital Volt Meter (DVM) | Measuring Range Input Impedance | 10mV to 10V DC High input impedance for minimum circuit loading |
| 5. Oscilloscope | | DC through 30MHz |
| 6. High Sensitivity Frequency Counter | Frequency Range Frequency Stability | 10Hz to 1000MHz 0.2ppm or less |
| 7. Ammeter | | 5A |
| 8. AF Volt Meter (AF VM) | Frequency Range Voltage Range | 50Hz to 10kHz 1mV to 10V |
| 9. Audio Generator (AG) | Frequency Range Output | 50Hz to 5kHz or more 0 to 1V |
| 10. Distortion Meter | Capability Input Level | 3% or less at 1kHz 50mV to 10Vrms |
| 11. 8Ω Dummy Load | | Approx. 8Ω, 3W |
| 12. Regulated Power Supply | | 5V to 10V, approx. 3A Useful if ammeter equipped |

■ Antenna connector adapter

The antenna connector of this transceiver uses an SMA terminal.

Use an antenna connector adapter [SMA(f) – BNC(f) or SMA(f) – N(f)] for adjustment. (The adapter is not provided as an option, so buy a commercially-available one.)


■ Nut wrench

In order to turn the volume nut and the channel selector nut, use a recommendation tool.

KENWOOD part No.: W05-1123-00


■ Battery jig (W05-1370-00)

Connect the power cable properly between the battery jig installed in the transceiver and the power supply, and be sure output voltage and the power supply polarity prior to switching the power supply ON, otherwise over voltage and reverse connection may damage the transceiver, or the power supply or both.

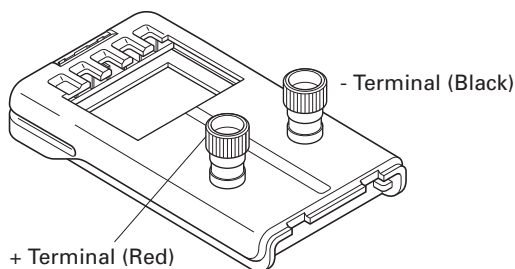

Note:

- When using the battery jig, you must measure the voltage at the terminals of the battery jig. Otherwise, a slight voltage drop may occur within the power cable, between the power supply and the battery jig, especially while the transceiver transmits.

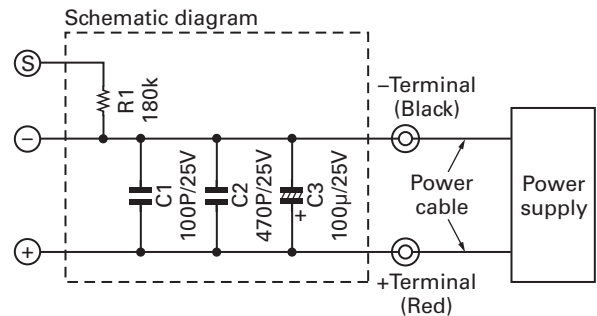

ADJUSTMENT

■ Universal connector


Use the interface cable (KPG-36A/36U/36X) for PC tuning or the lead wire with plug (E30-3287-28) and screw (N08-0535-08) for panel tuning. Connect the plug to the universal connector of the transceiver and tighten the screw.

The lead wire with plug (E30-3287-28) and screw (N08-0535-08) terminals are as follows. Numbers are universal connector terminal numbers.



Caution

1. When connecting the plug to the universal connector of the transceiver, a short circuit may occur. To prevent this, be sure to turn the transceiver POWER switch off.
2. Since the RX AF output is a BTL output, there is a DC component. Isolate this with a capacitor or transformer as shown in the figure.
3. Do not connect an instrument between red or black and GND.

• Universal connector

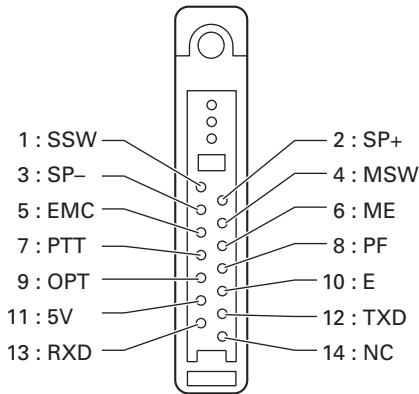

• Panel tuning

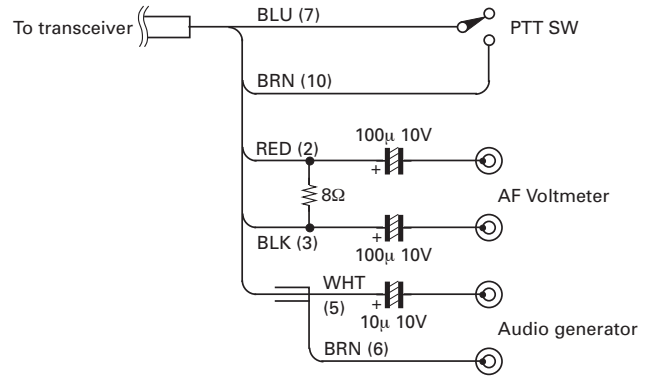
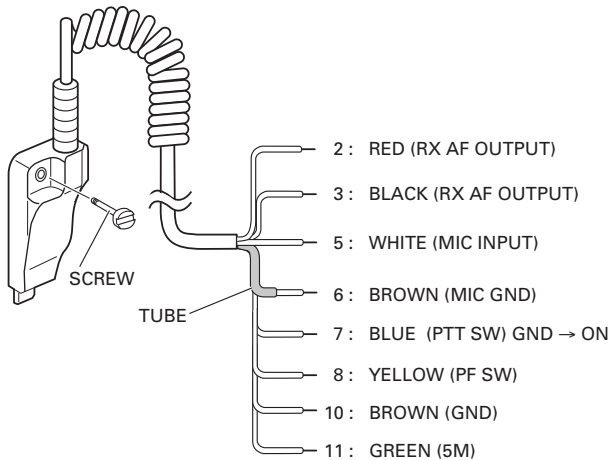


Note: Pin 1 (SSW) and Pin 4 (MSW) are connected to Pin 10 (GND) to active External SP and External MIC.

• PC tuning

Connect the wires to the PCB in the connector case of interface cable.

For output the wires out of the connector case, need to process the connector case.

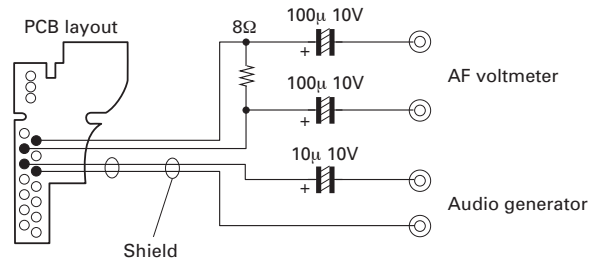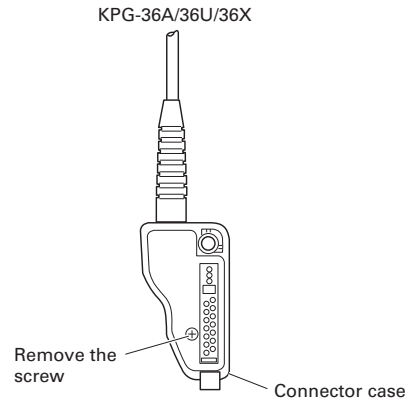

ADJUSTMENT

Radio Check Section

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|-------------------------------------|---------------------------------------|---|--|-------|----------------------------|------------|-------|---|--|
| | Panel test mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 1. Frequency check | 1) CH-Sig: 1-1 PTT: ON | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | f. counter | Panel | ANT | | | Check an internal temperature of radio within 25°C ± 2°C. | ±0.5ppm -75.55Hz~ +77.55Hz~ @155.1MHz |
| 2. High power check (Batt: 7.5V) | 1) CH-Sig: 1-1 PTT: ON | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | Power meter Ammeter | | | | | Check | 4.5W~5.5W 2.0A or less |
| | 2) CH-Sig: 2-1 PTT: ON | 2) Test Channel Channel: 2 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | | | | | | | |
| | 3) CH-Sig: 3-1 PTT: ON | 3) Test Channel Channel: 3 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | | | | | | | |
| 3. Low power check (Batt: 7.5V) | 1) CH-Sig: 1-1 PTT: ON | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | | | | | | | 0.7W~1.2W 1.0A or less |
| | 2) CH-Sig: 2-1 PTT: ON | 2) Test Channel Channel: 2 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | | | | | | | |
| | 3) CH-Sig: 3-1 PTT: ON | 3) Test Channel Channel: 3 Test Signaling Mode: Analog Signaling: 1 PTT: Press [Transmit] button. | | | | | | | |
| 4. MIC sensitivity check | 1) CH-Sig: 1-1 AG: 1kHz PTT: ON | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 AG: 1kHz PTT: Press [Transmit] button. | Deviation meter Oscilloscope AG AF VM | | ANT Universal connector | | | Adjust AG input to get a standard MOD. | 12.5mV±5.8mV |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|----------------------|--|---|--|------|----------------------------|------------|-------|--------|--------------------------|
| | Panel test mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 5. Sensitivity check | 1) CH-Sig: 1-1 SSG output Wide: -117dBm (0.32μV) (MOD: 1kHz/±3kHz) Narrow: -117dBm (0.32μV) (MOD: 1kHz/±1.5kHz) | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 SSG output Wide: -117dBm (0.32μV) (MOD: 1kHz/±3kHz) Narrow: -117dBm (0.32μV) (MOD: 1kHz/±1.5kHz) | SSG AF VM Oscilloscope Distortion meter 8Ω Dummy load | | ANT Universal connector | | | Check | 12dB SINAD or more |

Common Section

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|----------------------------|--|--|----------------|------|----------|------------|--|--|---|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 1. Setting | 1) BATT terminal voltage: 7.5V 2) SSG standard modulation [Wide] MOD: 1kHz, DEV: 3kHz [Narrow] MOD: 1kHz, DEV: 1.5kHz | | | | | | | | |
| 2. LCD contrast | 1) Adj item: [CNTR] Adjust: [***] Press [<] key to store the adjustment value. | 1) Adj item: [LCD Contrast] Press [Apply] button to store the adjustment value. | | | | Panel | [Panel tuning mode] [<], [>] [PC test mode] [<], [>] | Adjust the LCD contrast by looking. | This item is needed when the LCD ASSY (B38-0923-05) is replaced. |
| 3. Counterclockwise Volume | 1) Adj item: [VOL1] Adjust: [***] | 1) Adj item: [Counterclockwise Volume] | | | | | | [Panel tuning mode] Turn the volume knob counterclockwise fully. Press [<] key to store the adjustment value. [PC test mode] Turn the volume knob counterclockwise fully. Press [Apply] button to store the adjustment value. | This item is needed when the variable resistor (R31-0666-05) is replaced. |
| 4. Clockwise Volume | 1) Adj item: [VOL2] Adjust: [***] | 1) Adj item: [Clockwise Volume] | | | | | | [Panel tuning mode] Turn the volume knob clockwise fully. Press [<] key to store the adjustment value. [PC test mode] Turn the volume knob clockwise fully. Press [Apply] button to store the adjustment value. | |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|---------------------|--|---|----------------|-------|----------|------------|--|--|--|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 5. Receive Assist | 1) Adj item: [RAST] Adjust: [****] 2) Adj item: [L RAST]→ [L' RAST]→[C RAST]→ [H' RAST]→[H RAST] Adjust: [****] Press [←] key to store the adjustment value. | 1) Adj item: [Receive Assist] 2) Adj item: [Low], [Low'], [Center], [High'], [High] Press [Apply All] button to store the adjustment value. | | | | Panel | [Panel tuning mode] [∧], [∨] [PC test mode] [◀], [▶] | The sub LCD display and [V] indicator on the PC window shows VCO lock voltage. Change the adjustment value to get VCO lock voltage within the limit of the specified voltage. Note: Confirm the VCO lock voltage approximately 3 seconds after the adjustment value is changed. | 2.5V±0.1V [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| Transmit Assist | 1) Adj item: [TAST] Adjust: [****] 2) Adj item: [L TAST]→ [L' TAST]→[C TAST]→ [H' TAST]→[H TAST] Adjust: [****] PTT : ON (RF power is not output.) Press [←] key to store the adjustment value. | 1) Adj item: [Transmit Assist] 2) Adj item: [Low], [Low'], [Center], [High'], [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value. | | | | | | | |
| 6. Frequency adjust | * The Frequency adjustment can be performed only in PC test mode. | 1) Adj item: [Frequency] SSG output : -20dBm (22.4mV) (CW (without modulation)) Caution: Perform the frequency adjustment under the following conditions. • Temperature range of +23°C to +27°C (+73.4°F to +80.6°F). (The temperature is displayed on the Frequency adjustment screen of the KPG-111D/111DN and the LCD of the transceiver.) • Use an accuracy of 0.003ppm for the SSG. (Use a standard oscillator if necessary.) | SSG | Panel | ANT | | [Side1] | [PC test mode] Press [Start] button of "Auto Tuning". Press [Apply] button to store the adjustment value after the automatic adjustment was finished. | [PC test mode] The value of "IF20" will become around "0" after the adjustment was finished. Remark: "Frequency" is adjusted under receiving condition with SSG. |

ADJUSTMENT

Transmitter Section

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|---|--|--|---------------------------------|-------|----------|------------|---|---|--|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 1. High Transmit Power adjust (Batt: 7.5V) | 1) Adj item: [HIPWR] Adjust: [****] 2) Adj item: [L HIPWR]→ [L' HIPWR]→ [C HIPWR]→ [H' HIPWR]→ [H HIPWR] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [High Transmit Power] 2) Adj item: [Low], [Low'], [Center], [High'], [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value. | Power meter Ammeter | Panel | ANT | Panel | [Panel tuning mode] [∧], [∨] [PC test mode] [◀],[▶] | 5.0W | ±0.2W 2.0A or less [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| 2. Low Transmit Power adjust (Batt: 7.5V) | 1) Adj item: [LOPWR] Adjust: [****] 2) Adj item: [L LOPWR]→ [L' LOPWR]→ [C LOPWR]→ [H' LOPWR]→ [H LOPWR] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [Low Transmit Power] 2) Adj item: [Low], [Low'], [Center], [High'], [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value. | | | | | | 0.8W | ±0.1W 1.0A or less [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| 3. Balance adjust *2 | 1) Adj item: [BAL] Adjust: [***] Deviation meter LPF: 3kHz HPF: OFF 2) Adj item: [L BAL]→ [L' BAL]→[C BAL]→ [H' BAL]→[H BAL] Adjust: [***] PTT: ON Press [◀] key to store the adjustment value. Sub LCD: Tone frequency [Side1] key: Press while transmitting to change 20Hz and 2kHz. | 1) Adj item: [Balance] Deviation meter LPF : 3kHz HPF : OFF 2) Adj item: [Low], [Low'], [Center], [High'], [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value. [2kHz Sine Wave Check box]: Check while transmitting change to 2kHz. | Deviation meter Oscilloscope | | | | | The Deviation of 20Hz frequency is fixed. Change the 2kHz adjustment value to become the same deviation of 20Hz within the specified range. | 2kHz Tone deviation is within ±1.0% of 20Hz tone deviation. [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| *2: Refer to the "Necessary Deviation adjustment item for each signaling and mode" table on pages 54 and 55. Balance adjustment is common with the adjustment of all signaling deviations. | | | | | | | | | |
| 4. Maximum Deviation (NXDN) adjust *3 [Narrow] | 1) Adj item: [Nn NDEV] Adjust: [****] Deviation meter LPF: 3kHz HPF: OFF 2) Adj item: [NnL NDEV]→ [NnL' NDEV]→ [NnC NDEV]→ [NnH' NDEV]→ [NnH NDEV] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [Maximum Deviation (NXDN Narrow)] Deviation meter LPF: 3kHz HPF: OFF 2) Adj item: [Low], [Low'], [Center], [High'], [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value. | Deviation meter Oscilloscope | Panel | ANT | Panel | [Panel tuning mode] [∧], [∨] [PC test mode] [◀],[▶] | 3056Hz | 2995~3117Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|--|---|--|---------------------------------|-------|----------|------------|--|---|--|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| Maximum Deviation (NXDN) adjust *3 [Very Narrow] | 1) Adj item: [Nv NDEV] Adjust: [*****] 2) Adj item: [NvL NDEV]→ [NvL' NDEV]→ [NvC NDEV]→ [NvH' NDEV]→ [NvH NDEV] Adjust: [*****] PTT: ON Press [<] key to store the adjustment value. | 1) Adj item: [Maximum Deviation (NXDN Very Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] PTT: Press [Transmit] button. Press [Apply All] button to store the adjustment value. | Deviation meter Oscilloscope | Panel | ANT | Panel | [Panel tuning mode] [<], [>] [PC test mode] [◀], [▶] | 1337Hz | 1311~1363Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| 5. Maximum Deviation (Analog) adjust *3 [Narrow] | 1) Adj item: [An ADEV] Adjust: [*****] 2) Adj item: [AnL ADEV]→ [AnL' ADEV]→ [AnC ADEV]→ [AnH' ADEV]→ [AnH ADEV] Adjust: [*****] Press [<] key to store the adjustment value. | 1) Adj item: [Maximum Deviation (Analog Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] Press [Apply All] button to store the adjustment value. | | | | | | Write the same adjustment value of "NXDN Deviation [Narrow]" for each adjustment point. Transmit at each adjustment point and check that the Analog deviation is between 2050Hz and 2150Hz. Deviation meter LPF: 15kHz HPF: OFF [Panel tuning mode] PTT: ON [PC test mode] PTT: Press [Transmit] button | 2050~2150Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| [Wide] | 1) Adj item: [Aw ADEV] Adjust: [*****] 2) Adj item: [AwL ADEV]→ [AwL' ADEV]→ [AwC ADEV]→ [AwH' ADEV]→ [AwH ADEV] Adjust: [*****] Press [<] key to store the adjustment value. | 1) Adj item: [Maximum Deviation (Analog Wide)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] Press [Apply All] button to store the adjustment value. | | | | | | Write the same adjustment value of "NXDN Deviation [Narrow]" for each adjustment point. Transmit at each adjustment point and check that the Analog deviation is between 4150Hz and 4250Hz. Deviation meter LPF: 15kHz HPF: OFF [Panel tuning mode] PTT: ON [PC test mode] PTT: Press [Transmit] button | 4150~4250Hz [PC test mode] Press [Apply All] button to store the adjustment value after all adjustment point was adjusted. |
| *3: Refer to the "Necessary Deviation adjustment item for each signaling and mode" table on pages 54 and 55. Regarding Maximum Deviation (Analog), it is common with the adjustment of all analog signalings. | | | | | | | | | |
| 6. QT Deviation adjust *4 [Narrow] | 1) Adj item: [An QT] Adjust: [*****] Deviation meter LPF: 3kHz HPF: OFF PTT: ON Press [<] key to store the adjustment value. | 1) Adj item: [QT Deviation (Analog Narrow)] Deviation meter LPF: 3kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | Deviation meter Oscilloscope | Panel | ANT | Panel | [Panel tuning mode] [<], [>] [PC test mode] [◀], [▶] | Write the value as followings. 513 (Reference value) | 0.35kHz±0.05kHz |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|---|--|---|---------------------------------|-------|----------|------------|---|---|--------------------------|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| QT Deviation adjust *4 [Wide] | 1) Adj item: [Aw QT] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [QT Deviation (Analog Wide)] PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | Deviation meter Oscilloscope | Panel | ANT | Panel | [Panel tuning mode] [∧], [∨] [PC test mode] [◀],[▶] | Write the value as followings. 513 (Reference value) | 0.75kHz±0.05kHz |
| 7. DQT Deviation adjust *4 [Narrow] | 1) Adj item: [An DQT] Adjust: [****] Deviation meter LPF: 3kHz HPF: OFF PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [DQT Deviation (Analog Narrow)] Deviation meter LPF: 3kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | Write the value as followings. 415 (Reference value) | 0.35kHz±0.05kHz |
| [Wide] | 1) Adj item: [Aw DQT] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [DQT Deviation (Analog Wide)] PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | 0.75kHz±0.05kHz | |
| 8. LTR Deviation adjust *4 [Narrow] | 1) Adj item: [An LTR] Adjust: [****] Deviation meter LPF: 3kHz HPF: OFF PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [LTR Deviation (Analog Narrow)] Deviation meter LPF: 3kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | Write the value as followings. 465 (Reference value) | 0.75kHz±0.05kHz |
| [Wide] | 1) Adj item: [Aw LTR] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [LTR Deviation (Analog Wide)] PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | 1.00kHz±0.05kHz | |
| 9. DTMF Deviation adjust *4 [Narrow] | 1) Adj item: [An DTMF] Adjust: [****] Deviation meter LPF: 15kHz HPF: OFF PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [DTMF Deviation (Analog Narrow)] Deviation meter LPF: 15kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | Write the value as followings. 540 (Reference value) | 1.25kHz±0.05kHz |
| [Wide] | 1) Adj item: [Aw DTMF] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [DTMF Deviation (Analog Wide)] PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | 2.50kHz±0.05kHz | |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|--|--|---|---------------------------------|-------|---------------------|------------|---|--|--|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 10. Single Tone Deviation adjust *4 [Narrow] | 1) Adj item: [An TONE] Adjust: [****] Deviation meter LPF: 15kHz HPF: OFF PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [Single Tone Deviation (Analog Narrow)] Deviation meter LPF: 15kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | Deviation meter Oscilloscope | Panel | ANT | Panel | [Panel tuning mode] [↵], [↶] [PC test mode] [◀],[▶] | Write the value as followings. 513 (Reference value) | 1.50kHz±0.05kHz |
| | [Wide] | 1) Adj item: [Aw TONE] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | | | | | | | 1) Adj item: [Single Tone Deviation (Analog Wide)] PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. |
| 11. MSK Deviation adjust *4 [Narrow] | 1) Adj item: [An MSK] Adjust: [****] Deviation meter LPF: 15kHz HPF: OFF PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [MSK Deviation (Analog Narrow)] Deviation meter LPF: 15kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | Write the value as followings. 513 (Reference value) | 1.50kHz±0.05kHz |
| | [Wide] | 1) Adj item: [Aw MSK] Adjust: [****] PTT: ON Press [◀] key to store the adjustment value. | | | | | | | 1) Adj item: [MSK Deviation (Analog Wide)] PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. |
| 12. CWID Deviation adjust *4 [Very Narrow] | 1) Adj item: [Nv CWID] Adjust: [****] Deviation meter LPF: 15kHz HPF: OFF PTT: ON Press [◀] key to store the adjustment value. | 1) Adj item: [CW ID Deviation (NXDN Very Narrow)] Deviation meter LPF: 15kHz HPF: OFF PTT: Press [Transmit] button. Press [Apply] button to store the adjustment value. | | | | | | Write the value as followings. 376 (Reference value) | 1.10kHz±0.10kHz |
| *4: Refer to the "Necessary Deviation adjustment item for each signaling and mode" table on pages 54 and 55. | | | | | | | | | |
| 13. VOX1 adjust | 1) Adj item: [VOX1] Adjust: [****] AG: 1kHz/45mV at MIC terminal | 1) Adj item: [VOX1] AG: 1kHz/45mV at MIC terminal | AG | Panel | Universal connector | | | [Panel tuning mode] After apply signal from AG, press [◀] key to store the adjustment value. [PC test mode] After apply signal from AG, press [Apply] button to store the adjustment value. | |
| 14. VOX10 adjust | 1) Adj item: [VOX10] Adjust: [****] AG: 1kHz/3mV at MIC terminal | 1) Adj item: [VOX10] AG: 1kHz/3mV at MIC terminal | | | | | | | |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|----------------------------|---|--|--------------------|-------|----------------------|------------|-------|---|---|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 15. BATT detection writing | 1) Adj item: [BATT] Adjust: [***] PTT: ON | 1) Adj item:[Battery Warning Level] PTT: Press [Transmit] button. | Power meter DVM | Panel | ANT BATT terminal | | | Press the PTT switch or [Transmit] button on the PC window. Apply 6.20V to battery terminal. Confirm that one pre-determined numeric in the range 1 to 256 appears. [Panel tuning mode] Press [<] key to store the adjustment value. [PC test mode] Press [Apply] button to store the adjustment value. | |
| 16. BATT detection check | [Panel test mode] 1) CH-Sig: 1-1 BATT terminal voltage: 6.0V while transmitting | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 BATT terminal voltage: 6.0V while transmitting | | | | | | Check | The transceiver can transmit with causing the LED to blink. |

■ Necessary Deviation adjustment item for each signaling and mode

The following shows the necessary adjustment items for each signaling deviation. Please read the following table like the following example. In the case of the signaling "QT (Wide)"; this signaling is composed of three elements [Balance, Maximum Deviation (Analog Wide) and QT Deviation (Wide)]. Please adjust Balance and Maximum Deviation (Analog Wide) before adjusting QT Deviation (Wide).

| Mode | Signaling | Necessary adjustment and order | | |
|--------|-----------------|---|---|-------------|
| | | Wide | Narrow | Very Narrow |
| Analog | Audio | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) | - |
| | QT | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) Step3. QT Deviation (Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. QT Deviation (Narrow) | - |
| | DQT | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) Step3. DQT Deviation (Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. DQT Deviation (Narrow) | - |
| | LTR | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) Step3. LTR Deviation (Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. LTR Deviation (Narrow) | - |
| | DTMF | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) Step3. DTMF Deviation (Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. DTMF Deviation (Narrow) | - |
| | 2TONE | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) Step3. Single Tone Deviation (Analog Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. Single Tone Deviation (Analog Narrow) | - |
| | MSK (FleetSync) | Step1. Balance adjust Step2. Maximum Deviation (Analog Wide) Step3. MSK Deviation (Analog Wide) | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. MSK Deviation (Analog Narrow) | - |

ADJUSTMENT

| Mode | Signaling | Necessary adjustment and order | | |
|------|-----------|--------------------------------|---|---|
| | | Wide | Narrow | Very Narrow |
| NXDN | Audio | - | Step1. Balance adjust Step2. Maximum Deviation (NXDN Narrow) | Step1. Balance adjust Step2. Maximum Deviation (NXDN Very Narrow) |
| | CWID | - | - | Step1. Balance adjust Step2. Maximum Deviation (Analog Narrow) Step3. CWID Deviation (NXDN Very Narrow) |

- Balance is common with all the above deviation adjustments. If Balance (Transmitter Section 3) has already adjusted, please skip Step1 and adjust from Step2.
- Maximum Deviation (Analog Wide/Narrow) is common with all the analog signaling deviations and CWID Deviation (NXDN Very Narrow). If Balance and Maximum Deviation (Analog Wide/Narrow) (Transmitter Section 5) have already adjusted, please skip Step2 and adjust from Step3.

Receiver Section

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|-------------------------|---|--|-----------------------------------|-------|----------------------------|---|--|---|--------------------------|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 1. AF level setting | [Panel test mode] 1) CH-Sig: 1-1 SSG output: -47dBm (1mV) (MOD: 1kHz/±1.5kHz) Wide/Narrow: Narrow Beat Shift: Uncheck Companer: Uncheck | 1) Test Channel Channel: 1 Test Signaling Mode: Analog Signaling: 1 Wide/Narrow: Narrow Beat Shift: Uncheck Companer: Uncheck SSG output: -47dBm (1mV) (MOD: 1kHz/±1.5kHz) | SSG DVM AF VM Dummy load | Panel | ANT Universal connector | Panel | Volume knob | Turn the Volume knob to obtain 0.63V AF output. | 0.63V±0.1V |
| 2. Sensitivity 1 adjust | 1) Adj item: [SENS1] Adjust: [***] 2) Adj item: [L SENS1]→ [L' SENS1]→ [C SENS1]→ [H' SENS1]→ [H SENS1] Adjust: [***] Press [◀] key to store the adjustment value. | 1) Adj item: [Sensitivity 1] 2) Adj item: [Low], [Low'], [Center], [High'], [High] Press [Apply All] button to store the adjustment value. | SSG AF VM Oscilloscope | Panel | ANT Universal connector | [Panel tuning mode] [∧], [∨] [PC test mode] [◀],[▶] | Write the value as followings. [L SENS1] / [Low] : 10 (Preset) [L' SENS1] / [Low'] : 50 (Preset) [C SENS1] / [Center] : 95 (Fixed) [H' SENS1] / [High'] : 135 (Fixed) [H SENS1] / [High] : 180 (Fixed) | Increase the adjustment value from step 2 adjustment value (preset value) of "2. Sensitivity 1 adjust". | |
| | 3) Adj item: [L SENS1]→ [L' SENS1]→ Adjust: [***] | 3) Adj item: [Low], [Low'] | | | | | | | |
| | Caution: Perform the step 3 adjustments of "3. Sensitivity 2 adjust" before performing the [L SENS1] and [L' SENS1] adjustment. | | | | | | | | |
| | SSG output: -90dBm (7.08μV) (MOD: 1kHz/±1.5kHz) Press [◀] key to store the adjustment value. | SSG output: -90dBm (7.08μV) (MOD: 1kHz/±1.5kHz) Press [Apply All] button to store the adjustment value. | | | | | | | |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|---|---|---|---|-------|----------------------------|------------|--|--|--|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| 3. Sensitivity 2 adjust | 1) Adj item: [SENS2] Adjust: [***] 2) Adj item: [L SENS2]→ [L' SENS2]→ [C SENS2]→ [H' SENS2]→ [H SENS2] Adjust: [***] Press [◀] key to store the adjustment value. | 1) Adj item: [Sensitivity 2] 2) Adj item: [Low], [Low'], [Center], [High'], [High] Press [Apply All] button to store the adjustment value. | SSG AFVTVM Oscilloscope | Panel | ANT Universal connector | Panel | [Panel tuning mode] [∧], [∨] [PC test mode] [◀],[▶] | Write the value as followings. [L SENS2] / [Low] : 180 (Fixed) [L' SENS2] / [Low'] : 180 (Fixed) [C SENS2] / [Center] : 175 (Fixed) [H' SENS2] / [High'] : 175 (Fixed) [H SENS2] / [High] : 185 (Fixed) | |
| | 3) Adj item: [L SENS2]→ [L' SENS2] Adjust: [***] Press [◀] key to store the adjustment value. | 3) Adj item: [Low], [Low'] Press [Apply All] button to store the adjustment value. | | | | | | Write the value as followings. [L SENS2]/[Low] : 256 [L' SENS2]/[Low'] : 256 | |
| 4. RSSI reference adjust *5 [Analog Narrow] | 1) Adj item: [An RRSSI] Adjust: [***] 2) Adj item: [AnL RRSSI]→ [AnL' RRSSI]→ [AnC RRSSI]→ [AnH' RRSSI]→ [AnH RRSSI] Adjust: [***] SSG output: 12dB SINAD level -3dB (MOD: 1kHz/±1.5kHz) | 1) Adj item: [RSSI Reference (Analog Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: 12dB SINAD level -3dB (MOD: 1kHz/±1.5kHz) | SSG Distortion meter Oscilloscope | Panel | ANT Universal connector | | [Panel tuning mode] After input signal from SSG, press [◀] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value. | | |
| | [Analog Wide] | 1) Adj item: [Aw RRSSI] Adjust: [***] 2) Adj item: [AwL RRSSI]→ [AwL' RRSSI]→ [AwC RRSSI]→ [AwH' RRSSI]→ [AwH RRSSI] Adjust: [***] SSG output: 12dB SINAD level -3dB (MOD: 1kHz/±3kHz) | | | | | | | 1) Adj item: [RSSI Reference (Analog Wide)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: 12dB SINAD level -3dB (MOD: 1kHz/±3kHz) |
| [NXDN Very Narrow] | 1) Adj item: [Nv RRSSI] Adjust: [***] 2) Adj item: [NvL RRSSI]→ [NvL' RRSSI]→ [NvC RRSSI]→ [NvH' RRSSI]→ [NvH RRSSI] Adjust: [***] SSG output: 12dB SINAD level for Analog Narrow -3dB (MOD: 1kHz/±1.5kHz) | 1) Adj item: [RSSI Reference (NXDN Very Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: 12dB SINAD level for Analog Narrow -3dB (MOD: 1kHz/±1.5kHz) | | | | | | Adjust with the analog signal. | |
| *5: Because RSSI reference (NXDN Narrow) is adjusted by adjusting RSSI reference (Analog Narrow), it is not necessary to adjust RSSI reference (NXDN Narrow). | | | | | | | | | |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|--|--|---|----------------|-------|----------------------------|------------|-------|--|--------------------------------|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| Low RSSI at -118dBm adjust *7 [Analog Wide] | 1) Adj item: [Aw LRSSI] Adjust: [***] 2) Adj item: [AwL LRSSI]→ [AwL' LRSSI]→ [AwC LRSSI]→ [AwH' LRSSI]→ [AwH LRSSI] Adjust: [***] SSG output: -118dBm (0.28μV) (MOD: 1kHz/±3kHz) | 1) Adj item: [Low RSSI (Analog Wide)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: -118dBm (0.28μV) (MOD: 1kHz/±3kHz) | SSG | Panel | ANT Universal connector | | | [Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value. | Adjust with the analog signal. |
| [NXDN Very Narrow] | 1) Adj item: [Nv LRSSI] Adjust: [***] 2) Adj item: [NvL LRSSI]→ [NvL' LRSSI]→ [NvC LRSSI]→ [NvH' LRSSI]→ [NvH LRSSI] Adjust: [***] SSG output: -118dBm (0.28μV) (MOD: 1kHz/±1.5kHz) | 1) Adj item: [Low RSSI (NXDN Very Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: -118dBm (0.28μV) (MOD: 1kHz/±1.5kHz) | | | | | | | |
| *7: Because Low RSSI at -118dBm (NXDN Narrow) is adjusted by adjusting Low RSSI at -118dBm (Analog Narrow), it is not necessary to adjust Low RSSI at -118dBm (NXDN Narrow). | | | | | | | | | |
| 7. High RSSI at -80dBm adjust *8 [Analog Narrow] | 1) Adj item: [An HRSSI] Adjust: [***] 2) Adj item: [AnL HRSSI]→ [AnL' HRSSI]→ [AnC HRSSI]→ [AnH' HRSSI]→ [AnH HRSSI] Adjust: [***] SSG output: -80dBm (22.4μV) (MOD: 1kHz/±1.5kHz) | 1) Adj item: [High RSSI (Analog Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: -80dBm (22.4μV) (MOD: 1kHz/±1.5kHz) | SSG | Panel | ANT Universal connector | | | [Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value. | |
| [Analog Wide] | 1) Adj item: [Aw HRSSI] Adjust: [***] 2) Adj item: [AwL HRSSI]→ [AwL' HRSSI]→ [AwC HRSSI]→ [AwH' HRSSI]→ [AwH HRSSI] Adjust: [***] SSG output: -80dBm (22.4μV) (MOD: 1kHz/±3kHz) | 1) Adj item: [High RSSI (Analog Wide)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: -80dBm (22.4μV) (MOD: 1kHz/±3kHz) | | | | | | | |

ADJUSTMENT

| Item | Condition | | Measurement | | | Adjustment | | | Specifications / Remarks |
|--|---|--|----------------|-------|-------------------------|------------|-------|--|--------------------------------|
| | Panel tuning mode | PC test mode | Test-equipment | Unit | Terminal | Unit | Parts | Method | |
| High RSSI at -80dBm adjust *8 [NXDN Very Narrow] | 1) Adj item: [Nv HRSSI] Adjust: [***] 2) Adj item: [NvL HRSSI]→ [NvL' HRSSI]→ [NvC HRSSI]→ [NvH' HRSSI]→ [NvH HRSSI] Adjust: [***] SSG output: -80dBm (22.4μV) (MOD: 1kHz/±1.5kHz) | 1) Adj item: [High RSSI (NXDN Very Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: -80dBm (22.4μV) (MOD: 1kHz/±1.5kHz) | SSG | Panel | ANT Universal connector | | | [Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value. | Adjust with the analog signal. |
| *8: Because High RSSI at -80dBm (NXDN Narrow) is adjusted by adjusting High RSSI at -80dBm (Analog Narrow), it is not necessary to adjust High RSSI at -80dBm (NXDN Narrow). | | | | | | | | | |
| 8. Tight Squelch adjust (Squelch level 9 adjust) [Analog Narrow] | 1) Adj item: [An SQLT] Adjust: [***] 2) Adj item: [AnL SQLT]→ [AnL' SQLT]→ [AnC SQLT]→ [AnH' SQLT]→ [AnH SQLT] Adjust: [***] SSG output: 12dB SINAD level +5dB (MOD: 1kHz/±1.5kHz) | 1) Adj item: [Tight Squelch (Analog Narrow)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: 12dB SINAD level +5dB (MOD: 1kHz/±1.5kHz) | SSG | Panel | ANT Universal connector | | | [Panel tuning mode] After input signal from SSG, press [<] key to store the adjustment value. [PC test mode] After input signal from SSG, press [Apply] button to store the adjustment value. | |
| [Analog Wide] | 1) Adj item: [Aw SQLT] Adjust: [***] 2) Adj item: [AwL SQLT]→ [AwL' SQLT]→ [AwC SQLT]→ [AwH' SQLT]→ [AwH SQLT] Adjust: [***] SSG output: 12dB SINAD level +5dB (MOD: 1kHz/±3kHz) | 1) Adj item: [Tight Squelch (Analog Wide)] 2) Adj item: [Low], [Low'], [Center], [High'], [High] SSG output: 12dB SINAD level +5dB (MOD: 1kHz/±3kHz) | | | | | | | |

TERMINAL FUNCTION

Control unit (X53-4590-14)

| Pin No. | Name | I/O | Function |
|--------------|----------|-----|--------------------------------------|
| CN1 | | | |
| 1 | /CS | O | Chip select output |
| 2 | /RES | O | LCD reset output |
| 3 | A0 | O | Address bus 0 output |
| 4 | /WR | O | WR bus output |
| 5 | D0 | I/O | Data bus 0 |
| 6 | D1 | I/O | Data bus 1 |
| 7 | D2 | I/O | Data bus 2 |
| 8 | D3 | I/O | Data bus 3 |
| 9 | D4 | I/O | Data bus 4 |
| 10 | D5 | I/O | Data bus 5 |
| 11 | D6 | I/O | Data bus 6 |
| 12 | D7 | I/O | Data bus 7 |
| 13 | VDD | O | 3.3V LCD power supply output |
| 14 | VSS | - | GND |
| 15 | VDD | O | 3.3V LCD power supply output |
| 16 | V1 | - | LCD drive power supply |
| 17 | V2 | - | LCD drive power supply |
| 18 | V3 | - | LCD drive power supply |
| 19 | V4 | - | LCD drive power supply |
| 20 | V5 | O | LCD drive power supply |
| CN23 | | | |
| 1 | ME | - | Internal MIC GND |
| 2 | EMC | I | Internal MIC input |
| 3 | SP+ | O | BTL output + for internal speaker |
| 4 | SP+ | O | BTL output + for internal speaker |
| 5 | SP- | O | BTL output – for internal speaker |
| 6 | SP- | O | BTL output – for internal speaker |
| 7 | 6_/KEYI1 | I | Key matrix input (KEYI1 for 6-key) |
| 8 | 6_/KEYO2 | O | Key matrix output (KEYO2 for 6-key) |
| 9 | BL_SB | O | LCD backlight voltage output |
| 10 | 6_/KEYO0 | O | Key matrix output (KEYO0 for 6-key) |
| 11 | 6_/KEYO1 | O | Key matrix output (KEYO1 for 6-key) |
| 12 | BL_SB | O | LCD backlight voltage output |
| 13 | 6_/KEYI0 | I | Key matrix input (KEYI0 for 6-key) |
| 14 | AGND | - | GND |
| CN403 | | | |
| 1 | 33A | O | 3.3V for volume level |
| 2 | VOL_GND | - | GND for volume level |
| 3 | VOL | I | Volume level input for audio control |
| 4 | EN3 | I | Rotary switch input |
| 5 | AGND | - | GND |
| 6 | EN4 | I | Rotary switch input |
| 7 | EN1 | I | Rotary switch input |
| 8 | EN2 | I | Rotary switch input |

| Pin No. | Name | I/O | Function |
|--------------|----------|-----|---|
| 9 | +B | O | Power output after passing through the fuse |
| 10 | SB1 | I | Power input after power switch |
| CN404 | | | |
| 1 | LED_G | O | Green LED control output |
| 2 | /EMG | I | Emergency (Orange) key input |
| 3 | LED_R | O | Red LED control output |
| 4 | IFC | I | TX-RX PCB version recognition input |
| 5 | /SAVE | O | 50C Reg. control output |
| 6 | I2CCK | O | TCXO thermometer clock output |
| 7 | /5TC | O | 50T Reg. switch control output |
| 8 | I2CSDA | I/O | TCXO thermometer data input/output |
| 9 | SBC | O | SB3 switch control output |
| 10 | /T_R | O | TX/RX control output |
| 11 | TV2 | O | RX tuning voltage 2 output |
| 12 | ASSIST | O | VCO tuning voltage output |
| 13 | TV1 | O | RX tuning voltage 1 output |
| 14 | VAGC | I | AGC voltage input |
| 15 | 5RC | O | 50R switch control output |
| 16 | TCXO_MOD | O | TCXO modulation output |
| 17 | PGND | - | GND |
| 18 | RSSI | I | RSSI voltage input |
| 19 | PGND | - | GND |
| 20 | CV | I | CV voltage input |
| 21 | AGND | - | GND |
| 22 | NC | - | No connection |
| 23 | NC | - | No connection |
| 24 | +B | I | Power input after passing through the fuse |
| 25 | +B | I | Power input after passing through the fuse |
| 26 | +B | I | Power input after passing through the fuse |
| 27 | +B | I | Power input after passing through the fuse |
| 28 | NC | - | No connection |
| 29 | NC | - | No connection |
| 30 | AGND | - | GND |
| 31 | /PTT | I | PTT input |
| 32 | Side_G | O | Key matrix output (SIDE1,2 key) |
| 33 | Side_1 | I | Key matrix input (SIDE1 key) |
| 34 | W_/N | O | W/N control output |
| 35 | SDO1 | O | PLL serial data output |
| 36 | Side_2 | I | Key matrix input (SIDE2 key) |
| 37 | /PCS_RF | O | PLL enable output |
| 38 | /DSW | O | APC voltage discharge switch control output |
| 39 | APC | O | APC control voltage output |
| 40 | /APCSW | O | APC switch control output |
| 41 | VCO_MOD | O | VCO modulation output |

TERMINAL FUNCTION

| Pin No. | Name | I/O | Function |
|-------------------------------|--------|-----|--|
| 42 | THP | I | Thermistor voltage input |
| 43 | PLD | I | PLL lock detect input |
| 44 | 38M | O | 38M output |
| 45 | SCK1 | O | PLL clock output |
| 46 | GND | - | GND |
| 47 | S_DET | I | Battery select input |
| 48 | GND | - | GND |
| 49 | NC | - | No connection |
| 50 | IF_DET | I | IF input |
| CN405 | | | |
| 1 | SSW | I | EXT/INT speaker switch input |
| 2 | SP+ | O | BTL output + for external speaker |
| 3 | SP- | O | BTL output - for external speaker |
| 4 | MSW | I | EXT/INT MIC switch input |
| 5 | EMC | I | External MIC input |
| 6 | ME | - | External MIC GND |
| 7 | PTT | I | External PTT input |
| 8 | PF | I | Programmable function key input |
| 9 | OPT | I/O | Option interface I/O |
| 10 | E | - | GND |
| 11 | 5V | O | 5V output |
| 12 | TXD | O | Serial data output |
| 13 | RXD | I | Serial data input |
| 14 | NC | - | No connection |
| CN701 (for production) | | | |
| 1~20 | | | |
| CN710 | | | |
| 1 | OPT1 | I/O | Refer to "CN710 26-pin connector specification" described on pages 64 to 66. |
| 2 | OPT3 | I/O | |
| 3 | 26P_RD | I | |
| 4 | 26P_TD | O | |
| 5 | NC | - | |
| 6 | OPT4 | O | |
| 7 | OPT10 | O | |
| 8 | OPT5 | O | |
| 9 | DGND | - | |
| 10 | AGND | - | |
| 11 | AI | I | |
| 12 | AO | O | |
| 13 | AGND | - | |
| 14 | 5V | O | |
| 15 | OPT9 | I | |
| 16 | DTI | I | |
| 17 | OPT8 | I/O | |
| 18 | OPT11 | O | |
| 19 | OPT7 | I/O | |

| Pin No. | Name | I/O | Function |
|---------|------|-----|--|
| 20 | OPT2 | I/O | Refer to "CN710 26-pin connector specification" described on pages 64 to 66. |
| 21 | TXO | O | |
| 22 | RXEO | O | |
| 23 | RXEI | I | |
| 24 | TXI | I | |
| 25 | OPT6 | O | |
| 26 | POW | O | |

TX-RX unit (X57-8950-11 A/2)

| Pin No. | Name | I/O | Function |
|--------------|----------|-----|---|
| CN900 | | | |
| 1 | LED_G | I | Green LED control input |
| 2 | /EMG | O | Emergency (Orange) key output |
| 3 | LED_R | I | Red LED control input |
| 4 | IFC | O | TX-RX PCB version recognition output |
| 5 | /SAVE | I | 50C Reg. control input |
| 6 | I2CCK | I | TCXO thermometer clock input |
| 7 | /5TC | I | 50T Reg. switch control input |
| 8 | I2CSDA | I/O | TCXO thermometer data input/output |
| 9 | SBC | I | SB3 switch control input |
| 10 | /T_R | I | TX/RX control input |
| 11 | TV2 | I | RX tuning voltage 2 input |
| 12 | ASSIST | I | VCO tuning voltage input |
| 13 | TV1 | I | RX tuning voltage 1 input |
| 14 | VAGC | O | AGC voltage output |
| 15 | 5RC | I | 50R switch control input |
| 16 | TCXO_MOD | I | TCXO modulation input |
| 17 | GND | - | GND |
| 18 | RSSI | O | RSSI voltage output |
| 19 | GND | - | GND |
| 20 | CV | O | CV voltage output |
| 21 | GND | - | GND |
| 22 | NC | - | No connection |
| 23 | NC | - | No connection |
| 24 | +B | O | Power output after passing through the fuse |
| 25 | +B | O | Power output after passing through the fuse |
| 26 | +B | O | Power output after passing through the fuse |
| 27 | +B | O | Power output after passing through the fuse |
| 28 | NC | - | No connection |
| 29 | NC | - | No connection |
| 30 | GND | - | GND |
| 31 | /PTT | O | PTT output |

TERMINAL FUNCTION

| Pin No. | Name | I/O | Function |
|---------|---------|-----|--|
| 32 | Side_G | I | Key matrix input (SIDE1,2 key) |
| 33 | Side_1 | O | Key matrix output (SIDE1 key) |
| 34 | W_N | I | No connection |
| 35 | SDO1 | I | PLL serial data input |
| 36 | Side_2 | O | Key matrix output (SIDE2 key) |
| 37 | /PCS_RF | I | PLL enable input |
| 38 | /DSW | I | APC voltage discharge switch control input |
| 39 | APC | I | APC control voltage input |
| 40 | /APCSW | I | APC switch control input |
| 41 | VCO_MOD | I | VCO modulation input |
| 42 | THP | O | Thermistor voltage output |
| 43 | PLD | O | PLL lock detect output |
| 44 | 38M | I | 38M input |
| 45 | SCK1 | I | PLL clock input |
| 46 | GND | - | GND |
| 47 | S_DET | O | Battery select output |
| 48 | GND | - | GND |
| 49 | NC | - | No connection |
| 50 | IF_DET | O | IF output |
| CN401 | | | |
| 1 | PTT | I | Internal PTT input |
| 2 | GND | - | GND |
| 3 | Side_G | O | Key matrix output (SIDE1,2 key) |
| 4 | Side_1 | I | Key matrix input (SIDE1 key) |
| 5 | Side_2 | I | Key matrix input (SIDE2 key) |

Option board unit (X57-8950-11 B/2)

| Pin No. | Name | I/O | Function |
|---------|--------|-----|----------|
| CN736 | | | |
| 1 | OPT1 | I/O | |
| 2 | OPT3 | I/O | |
| 3 | 26P_RD | O | |
| 4 | 26P_TD | I | |
| 5 | NC | - | |
| 6 | OPT4 | I | |
| 7 | OPT10 | I | |
| 8 | OPT5 | I | |
| 9 | DGND | - | |
| 10 | AGND | - | |
| 11 | NC | - | |
| 12 | NC | - | |
| 13 | AGND | - | |
| 14 | 5V | I | |
| 15 | OPT9 | O | |
| 16 | DTI | O | |
| 17 | OPT8 | I/O | |
| 18 | OPT11 | I | |
| 19 | OPT7 | I/O | |
| 20 | OPT2 | I/O | |
| 21 | TXO | I | |
| 22 | RXEO | I | |
| 23 | RXEI | O | |
| 24 | TXI | O | |
| 25 | OPT6 | I | |
| 26 | POW | I | |

Refer to "CN736 Option board connector specification" described on page 67.

Solder Pad

| Name | I/O | Signal Type | Function | Rating and Condition | | | | |
|------|-----|-------------|-----------------------|----------------------------|-----|-----|-------|------|
| | | | | Parameter | Min | Typ | Max | Unit |
| PTT2 | O | Digital | PTT output | [Output] Output Impedance | | | 10k | Ω |
| PTT1 | I | Digital | PTT input | [Input] VIH | 2.8 | | 3.3 | V |
| | | | | [Input] VIL | 0 | | 0.5 | V |
| MDSW | I | Digital | Man-down switch input | [Input] VIH | 2.8 | | 3.3 | V |
| | | | | [Input] VIL | 0 | | 0.5 | V |
| GND | - | GND | GND | Allowable current value | | | | mA |
| TXD | O | Digital | Serial data output | VOH (I _o =-5mA) | 4.0 | - | 5.3 | V |
| | | | | VOL (I _o =5mA) | 0 | - | 0.8 | V |
| | | | | Baud Rate | | | 19200 | bps |
| RXD | I | Digital | Serial data input | VIH | 2.8 | - | 5.3 | V |
| | | | | VIL | 0 | - | 0.8 | V |
| | | | | Baud Rate | | | 19200 | bps |
| RSSI | O | Analog | RSSI output | Output Impedance | | | 10k | Ω |

TERMINAL FUNCTION

Universal connector

| Pin No. | Name | I/O | Signal Type | Function | Rating and Condition | | | | |
|---------|------|-----|-------------|--|--|-----|------|--------|------|
| | | | | | Parameter | Min | Typ | Max | Unit |
| 1 | SSW | I | Digital | EXT/INT speaker switch input L: External speaker ON H: Internal speaker ON | VIH | 2.8 | - | 5.3 | V |
| | | | | | VIL | 0 | - | 0.7 | V |
| 2 | SP+ | O | Analog | BTL output + for external speaker | [8Ω load] Max output power (1kHz, Batt=7.5V) | | 1.3 | 1.8 | W |
| | | | | | [8Ω load] DC Bias | | 2.5 | | V |
| | | | | | [8Ω load] Allowable Frequency | 300 | | 3000 | Hz |
| 3 | SP- | O | Analog | BTL output - for external speaker | [16Ω load] Max output power (1kHz, Batt=7.5V) | | 0.9 | 1.4 | W |
| | | | | | [16Ω load] DC Bias | | 2.5 | | V |
| | | | | | [16Ω load] Allowable Frequency | 300 | | 3000 | Hz |
| 4 | MSW | I | Digital | EXT/INT MIC switch input L: External MIC ON H: Internal MIC ON | VIH | 2.8 | - | 5.3 | V |
| | | | | | VIL | 0 | - | 0.5 | V |
| 5 | EMC | I | Analog | External MIC input | Audio Level (STD deviation) | 7.7 | 12.5 | 17.3 | mV |
| | | | | | DC Bias | | 3.3 | | V |
| | | | | | Allowable Frequency | 300 | | 3000 | Hz |
| | | | | | Input Impedance | - | 1.8 | - | kΩ |
| 6 | ME | - | - | External MIC GND | | | | | |
| 7 | PTT | I | Digital | External PTT input L: PTT ON | VIH | 2.8 | - | 5.3 | V |
| | | | | | VIL | 0 | - | 0.7 | V |
| 8 | PF | I | Analog | Programmable function key input | V (PF2 key ON) | 2.2 | - | 2.8 | V |
| | | | | | V (PF1 key ON) | 1.7 | - | 2.2 | V |
| | | | | | V (PF1, PF2 key ON) | 1.3 | - | 1.7 | V |
| 9 | OPT | I | Digital | Man-down input Programmable active H/L | VIH | 2.8 | - | 5.3 | V |
| | | | | | VIL | 0 | - | 0.7 | V |
| 10 | E | - | - | GND | | | | | |
| 11 | 5V | - | Power | 5V power supply output (Output control is FPU programmable) | Output Voltage (Iout=100mA) | 4.9 | 5.0 | 5.1 | V |
| | | | | | Maximum Current | - | - | 0.2 | A |
| 12 | TXD | O | Digital | Serial data output | VOH (Io=-5mA) | 4.0 | - | 5.3 | V |
| | | | | | VOL (Io=5mA) | 0 | - | 0.8 | V |
| | | | | | Baud Rate | | | 19200 | bps |
| 13 | RXD | I | Digital | Serial data input | VIH | 2.8 | - | 5.3 | V |
| | | | | | VIL | 0 | - | 0.8 | V |
| | | | | | Baud Rate | | | 115200 | bps |
| 14 | NC | - | - | Not used (reserved for future option) | | | | | |

TERMINAL FUNCTION

CN710 26-pin connector specification

| Pin No. | Name | I/O | Signal Type | Rating and Condition | | | | |
|---------|--------|-----|----------------|---|-----|------|-------|-------------------|
| | | | | Parameter | Min | Typ | Max | Unit |
| 1 | OPT1 | I/O | Digital | [Input] VIH | 2.8 | | 3.3 | V |
| 6 | OPT4 | | | [Input] VIL | 0 | | 0.5 | V |
| 8 | OPT5 | | | [Output] VOH | 2.8 | | 3.5 | V |
| 17 | OPT8 | | | [Output] VOL | 0 | | 0.5 | V |
| 18 | OPT11 | | | | | | | |
| 2 | OPT3 | I/O | Digital | [Input] VIH | 2.8 | | 3.3 | V |
| 19 | OPT7 | | | [Input] VIL | 0 | | 0.5 | V |
| 20 | OPT2 | | | [Output] VOH | 2.8 | | 3.5 | V |
| 25 | OPT6 | | | [Output] VOL | 0 | | 0.5 | V |
| 3 | 26P_RD | I | Digital | [Input] VIH | 2.8 | | 3.3 | V |
| | | | | [Input] VIL | 0 | | 0.5 | V |
| | | | | Baud Rate | | | 19200 | bps |
| 4 | 26P_TD | O | Digital | [Output] VOH | 2.8 | | 3.5 | V |
| | | | | [Output] VOL | 0 | | 0.5 | V |
| | | | | Baud Rate | | | 19200 | bps |
| 15 | OPT9 | I | Analog | Input Amplitude (Square wave) | - | 3.3 | - | V _{p-p} |
| | | | | Coupling Capacitor | - | 0.01 | - | μF |
| | | | | Input Impedance | 22k | - | - | Ω |
| | | | | Allowable Frequency | 300 | - | 3000 | Hz |
| 7 | OPT10 | O | Analog/Digital | Output Amplitude (1kHz, 60% deviation) | 0.9 | 1.3 | 1.7 | V _{p-p} |
| | | | | Coupling Capacitor | | 0.1 | | μF |
| | | | | Output Impedance | | | 22k | Ω |
| | | | | Allowable Frequency | 300 | | 3000 | Hz |
| 11 | AI | I | Analog | Input Amplitude (1kHz, 60% deviation) | 0.3 | 0.5 | 0.7 | V _{p-p} |
| | | | | Coupling Capacitor | - | 0.1 | - | μF |
| | | | | Input Impedance | - | 12k | - | Ω |
| | | | | Allowable Frequency | 300 | - | 3000 | Hz |
| 12 | AO | O | Analog | Output Amplitude (1kHz, 60% deviation) | 30 | 50 | 70 | mV _{p-p} |
| | | | | Coupling Capacitor | - | 0.1 | - | μF |
| | | | | Output Impedance | - | 35k | - | Ω |
| | | | | Allowable Frequency | 300 | | 3000 | Hz |
| 16 | DTI | I | Analog | Input Amplitude (1kHz, 60% deviation) | 0.8 | 1.1 | 1.4 | V _{p-p} |
| | | | | Coupling Capacitor | - | 0.1 | - | μF |
| | | | | Input Impedance | 22k | - | - | Ω |
| | | | | Allowable Frequency | 300 | - | 3000 | Hz |
| 21 | TXO | O | Analog | Output Amplitude (1kHz, 60% deviation) while external MIC | 160 | 260 | 360 | mV _{p-p} |
| | | | | Output Amplitude (1kHz, 60% deviation) while internal MIC | - | 130 | - | mV _{p-p} |
| | | | | Coupling Capacitor | - | 0.1 | - | μF |
| | | | | Output Impedance | - | - | 2.2k | Ω |
| | | | | Allowable Frequency | 300 | | 3000 | Hz |

TERMINAL FUNCTION

| Pin No. | Name | I/O | Signal Type | Rating and Condition | | | | |
|---------|------|-----|-------------|--|-----|-----|------|-------|
| | | | | Parameter | Min | Typ | Max | Unit |
| 22 | RXEO | O | Analog | Output Amplitude (1kHz, 60% deviation) | 450 | 640 | 830 | mVp-p |
| | | | | Coupling Capacitor | - | 0.1 | - | μF |
| | | | | Output Impedance | - | - | 2.2k | Ω |
| | | | | Allowable Frequency | 300 | - | 3000 | Hz |
| 23 | RXEI | I | Analog | Input Amplitude (1kHz, 60% deviation) | 450 | 640 | 830 | mVp-p |
| | | | | Coupling Capacitor | | 0.1 | | μF |
| | | | | Input Impedance | 22k | | | Ω |
| | | | | Allowable Frequency | 300 | | 3000 | Hz |
| 24 | TXI | I | Analog | Input Amplitude (1kHz, 60% deviation) while external MIC | 160 | 260 | 360 | mVp-p |
| | | | | Input Amplitude (1kHz, 60% deviation) while internal MIC | - | 130 | - | mVp-p |
| | | | | Coupling Capacitor | - | 0.1 | - | μF |
| | | | | Input Impedance | 22k | - | - | Ω |
| | | | | Allowable Frequency | 300 | - | 3000 | Hz |
| 14 | 5V | O | Power | Output Voltage | | 5 | | V |
| | | | | Output Current | | | 78 | mA |
| 26 | POW | O | Power | Output Voltage | | 7.5 | | V |
| | | | | Output Current | | | 100 | mA |
| 9 | DGND | - | GND | Allowable current value (Total current of 3 pins) | | | 100 | mA |
| 10 | AGND | | | | | | | |
| 13 | | | | | | | | |
| 5 | NC | - | - | - | | | | |

CN710 26-pin connector specification

| Pin No. | Name | Device | I/O | Connection | Function |
|---------|--------|-----------|-----|------------|---|
| 1 | OPT1 | ANI board | O | Aux Input | [COR] Conv/LTR L: Activity receiving H: Not activity receiving [TOR] Conv/LTR L: Activity receiving (Sub Tone or LTR ID is OK) H: Not activity receiving [LOK] Conv L: TX Complete H: Not TX Complete LTR L: TX Link Complete (until TX finishes) H: Not TX Link Complete |
| | | VGS-1 | I | BUSY | BUSY indication |
| 2 | OPT3 | ANI board | I | KEY | TX requirement input |
| | | VGS-1 | I | PLAY | PLAY indication |
| 3 | 26P_RD | ANI board | - | - | - |
| | | VGS-1 | I | SO | Serial data input |

TERMINAL FUNCTION

| Pin No. | Name | Device | I/O | Connection | Function |
|---------|--------|-----------|-----|--------------|--|
| 4 | 26P_TD | ANI board | - | - | - |
| | | VGS-1 | O | SI | Serial data output |
| 5 | NC | - | - | - | - |
| 6 | OPT4 | ANI board | O | PTT | PTT signal output |
| | | VGS-1 | O | EN | Enable |
| 7 | OPT10 | ANI board | - | - | - |
| | | VGS-1 | O | USEL | UART speed select output |
| 8 | OPT5 | ANI board | O | Emergency | Emergency signal output |
| | | VGS-1 | O | RST | Reset output |
| 9 | DGND | ANI board | - | A- | GND |
| | | VGS-1 | - | DGND | DGND |
| 10 | AGND | ANI board | - | A- | GND |
| | | VGS-1 | - | AGND | AGND |
| 11 | AI | ANI board | - | - | - |
| | | VGS-1 | I | AO | VGS Audio input |
| 12 | AO | ANI board | - | - | - |
| | | VGS-1 | O | AI | VGS Audio output |
| 13 | AGND | ANI board | - | A- | GND |
| | | VGS-1 | - | AGND | AGND |
| 14 | 5V | ANI board | - | - | Note: POW and 5V can not be used simultaneously. |
| | | VGS-1 | O | 5C | 5V power supply |
| 15 | OPT9 | ANI board | I | Sidetone | Sidetone input |
| | | VGS-1 | - | - | - |
| 16 | DTI | ANI board | I | Data Out | Data signal input |
| | | VGS-1 | - | - | - |
| 17 | OPT8 | ANI board | I | Tone Control | Speaker mute signal input |
| | | VGS-1 | - | - | - |
| 18 | OPT11 | ANI board | O | Man-Down | Man-Down output |
| | | VGS-1 | - | - | - |
| 19 | OPT7 | ANI board | I | MIC Mute | MIC mute signal input |
| | | VGS-1 | - | - | - |
| 20 | OPT2 | ANI board | I | Aux Output | Emergency signal input |
| | | VGS-1 | - | - | - |
| 21 | TXO | ANI board | - | - | - |
| | | VGS-1 | - | - | - |
| 22 | RXEO | ANI board | - | - | - |
| | | VGS-1 | - | - | - |
| 23 | RXEI | ANI board | - | - | - |
| | | VGS-1 | - | - | - |
| 24 | TXI | ANI board | - | - | - |
| | | VGS-1 | - | - | - |
| 25 | OPT6 | ANI board | - | - | - |
| | | VGS-1 | - | - | - |
| 26 | POW | ANI board | O | A+ | Switched B output |
| | | VGS-1 | - | - | Note: POW and 5V can not be used simultaneously. |


TERMINAL FUNCTION

CN736 Option board connector specification

| Pin No. | Name | Device | I/O | Connection | Function |
|---------|--------|-----------|-----|--------------|---|
| 1 | OPT1 | ANI board | I | Aux Output | [COR] Conv/LTR L: Activity receiving H: Not activity receiving [TOR] Conv/LTR L: Activity receiving (Sub Tone or LTR ID is OK) H: Not activity receiving [LOK] Conv L: TX Complete H: Not TX Complete LTR L: TX Link Complete (until TX finishes) H: Not TX Link Complete |
| 2 | OPT3 | ANI board | O | KEY | TX requirement output |
| 3 | 26P_RD | ANI board | - | - | - |
| 4 | 26P_TD | ANI board | - | - | - |
| 5 | NC | - | - | - | - |
| 6 | OPT4 | ANI board | I | PTT | PTT signal input |
| 7 | OPT10 | ANI board | - | - | - |
| 8 | OPT5 | ANI board | I | Emergency | Emergency signal input |
| 9 | DGND | ANI board | - | A- | GND |
| 10 | AGND | ANI board | - | A- | GND |
| 11 | NC | - | - | - | - |
| 12 | NC | - | - | - | - |
| 13 | AGND | ANI board | - | A- | GND |
| 14 | 5V | ANI board | - | - | Note: POW and 5V can not be used simultaneously. |
| 15 | OPT9 | ANI board | O | Sidetone | Sidetone output |
| 16 | DTI | ANI board | O | Data Out | Data signal output |
| 17 | OPT8 | ANI board | O | Tone Control | Speaker mute signal output |
| 18 | OPT11 | ANI board | I | Man-Down | Man-Down input |
| 19 | OPT7 | ANI board | O | MIC Mute | MIC mute signal output |
| 20 | OPT2 | ANI board | O | Aux Output | Emergency signal output |
| 21 | TXO | ANI board | - | - | - |
| 22 | RXEO | ANI board | - | - | - |
| 23 | RXEI | ANI board | - | - | - |
| 24 | TXI | ANI board | - | - | - |
| 25 | OPT6 | ANI board | - | - | - |
| 26 | POW | ANI board | I | A+ | Switched B input |

NX-203 PC BOARD




CONTROL UNIT (X53-4590-14)
Component side view (J79-0131-39)

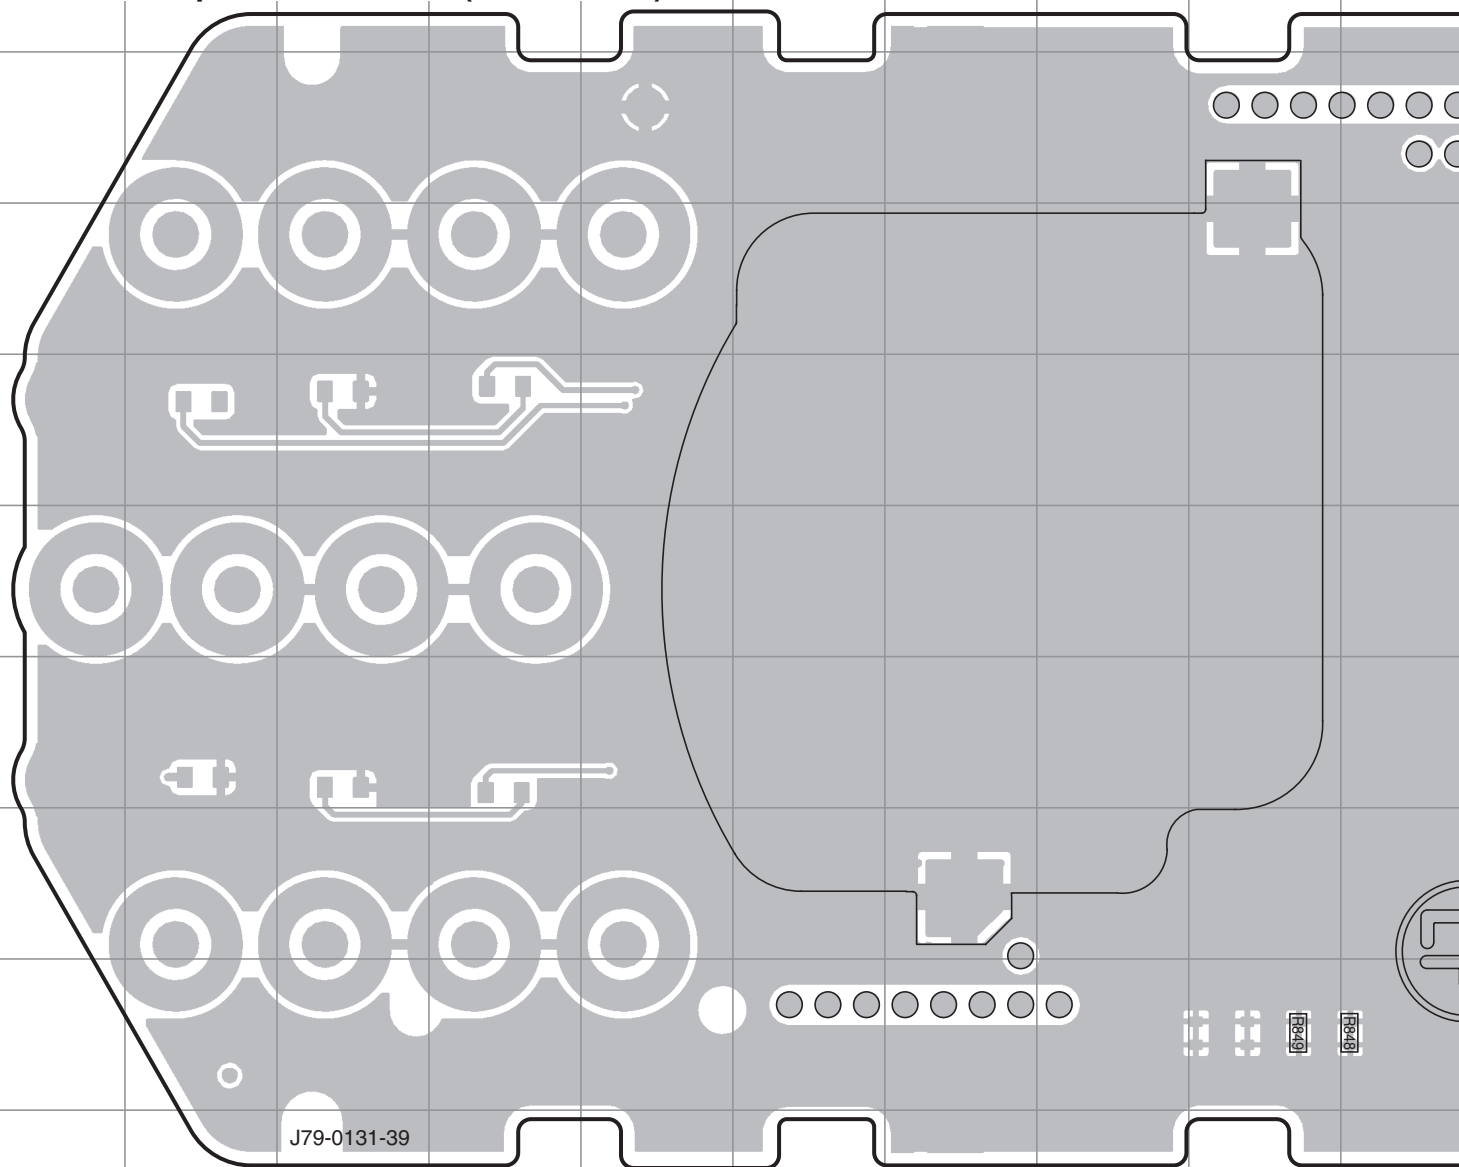

| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|
| IC1 | 6K | D8 | 10Q | D20 | 8M |
| IC415 | 8K | D11 | 7L | D21 | 8M |
| Q1 | 7K | D12 | 7M | D22 | 8L |
| Q2 | 7L | D13 | 7M | D23 | 9L |
| Q3 | 6L | D14 | 7M | | |
| Q4 | 4L | D15 | 7L | | |
| Q5 | 4L | D16 | 7L | | |
| D3 | 3O | D17 | 9L | | |
| D4 | 3Q | D18 | 4L | | |
| D7 | 10O | D19 | 4L | | |


PC BOARD NX-203

CONTROL UNIT (X53-4590-14) Component side view (J79-0131-39)

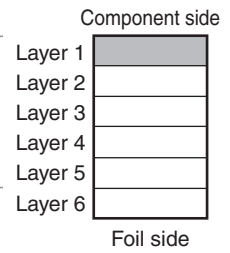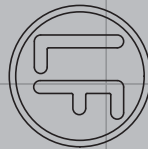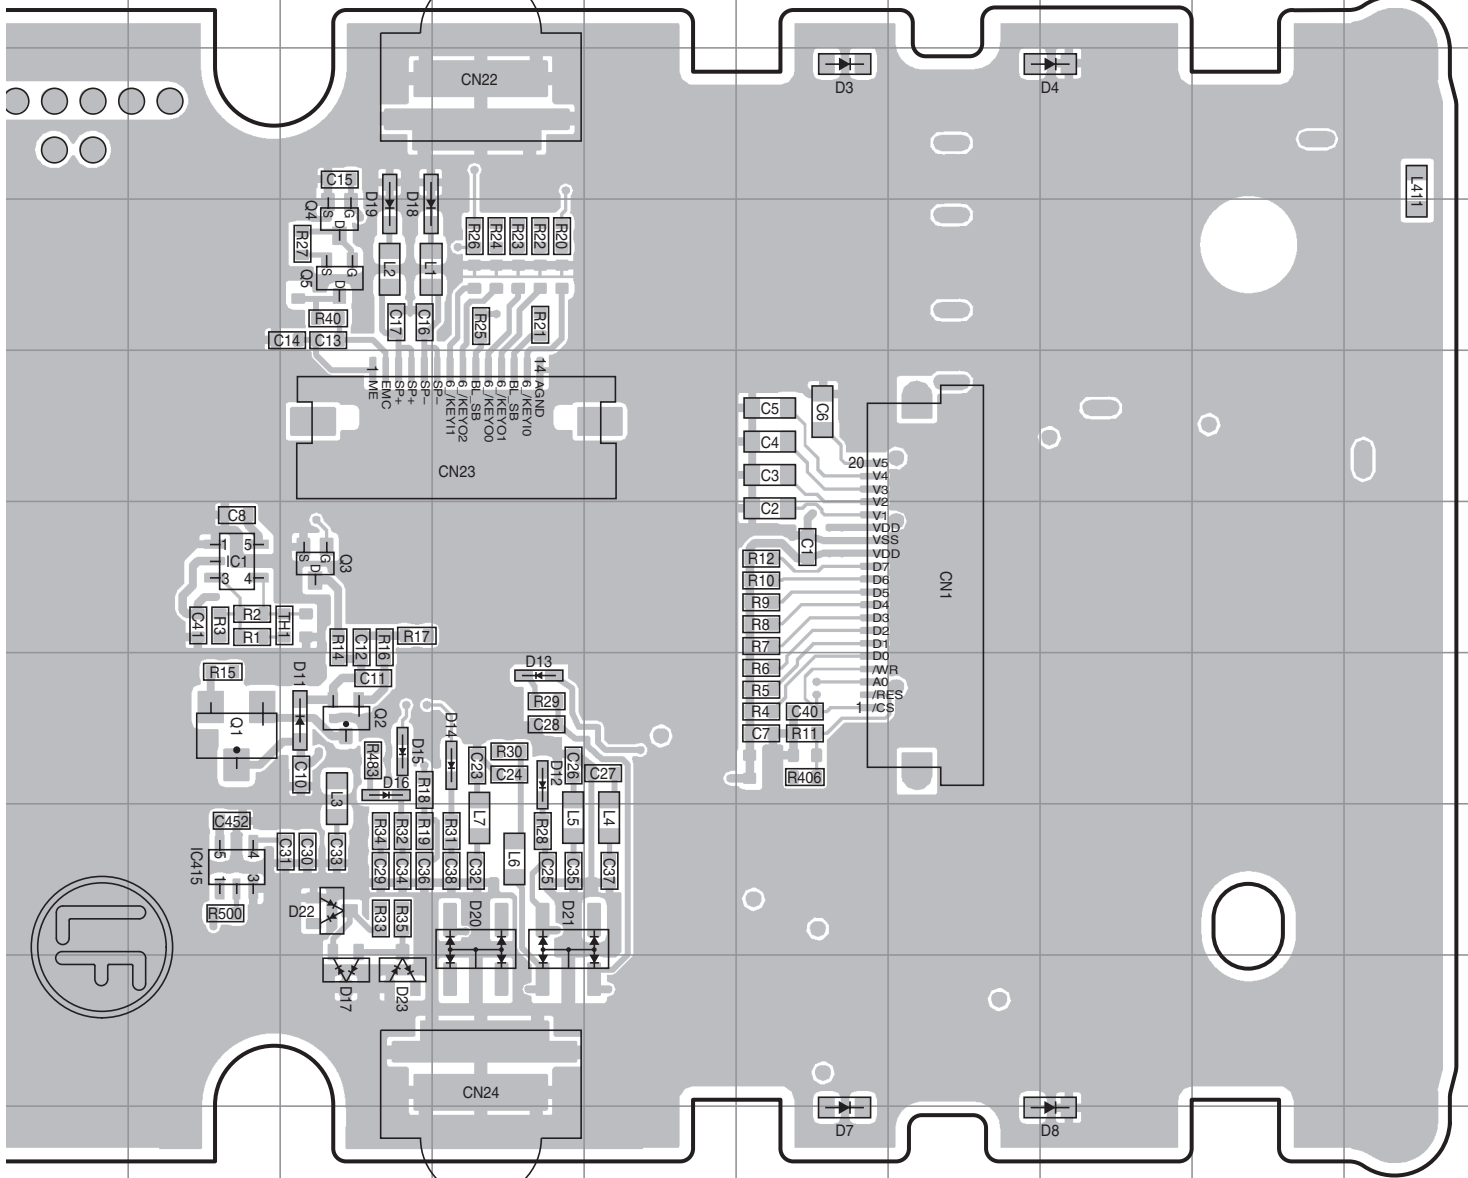

NX-203 PC BOARD


CONTROL UNIT (X53-4590-14) Foil side view (J79-0131-39)

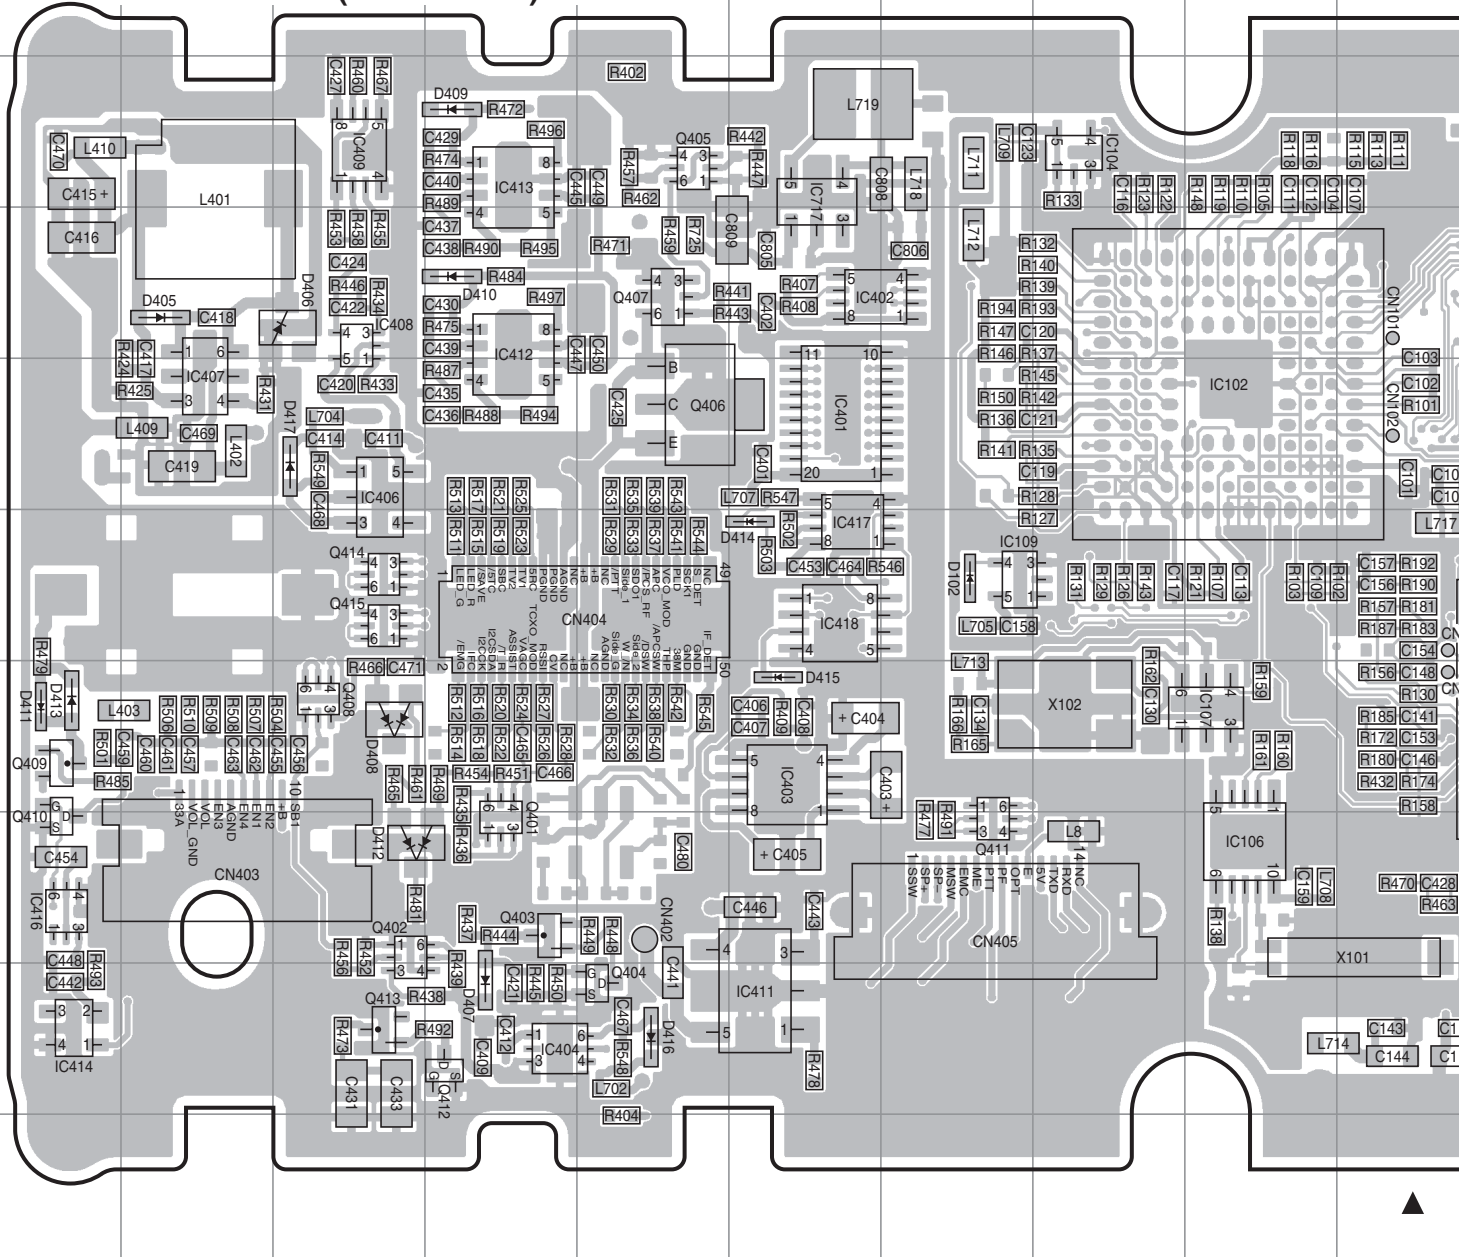

| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|
| IC101 | 5K | IC404 | 9D | IC701 | 7Q | IC713 | 4Q | Q408 | 7C | Q706 | 5O | D410 | 4D | D705 | |
| IC102 | 5I | IC406 | 5C | IC702 | 5R | IC714 | 5R | Q409 | 7A | Q707 | 4N | D411 | 7A | D706 | |
| IC103 | 4K | IC407 | 5B | IC703 | 7P | IC715 | 5P | Q410 | 8A | D102 | 6G | D412 | 8C | D707 | |
| IC104 | 3H | IC408 | 4C | IC704 | 3P | IC716 | 5N | Q411 | 8G | D401 | 4M | D413 | 7A | | |
| IC105 | 4L | IC409 | 3C | IC705 | 9N | IC717 | 3F | Q412 | 9D | D402 | 5M | D414 | 6F | | |
| IC106 | 8I | IC411 | 9F | IC706 | 7N | Q401 | 8D | Q413 | 9C | D403 | 5M | D415 | 7F | | |
| IC107 | 7I | IC412 | 4D | IC707 | 3P | Q402 | 8C | Q414 | 6C | D404 | 5M | D416 | 9E | | |
| IC108 | 7K | IC413 | 3D | IC708 | 9Q | Q403 | 8D | Q415 | 6C | D405 | 4B | D417 | 5C | | |
| IC109 | 6G | IC414 | 9A | IC709 | 4R | Q404 | 9E | Q702 | 4R | D406 | 4C | D701 | 8R | | |
| IC401 | 5F | IC416 | 8A | IC710 | 6N | Q405 | 3E | Q703 | 6R | D407 | 9D | D702 | 8R | | |
| IC402 | 4F | IC417 | 6F | IC711 | 6S | Q406 | 5E | Q704 | 7R | D408 | 7C | D703 | 4O | | |
| IC403 | 7F | IC418 | 6F | IC712 | 6N | Q407 | 4E | Q705 | 5O | D409 | 3D | D704 | 3O | | |

NX-203 PC BOARD


TX-RX UNIT (X57-8950-11) (A/2) Component side view (J79-0434-09 A/2)

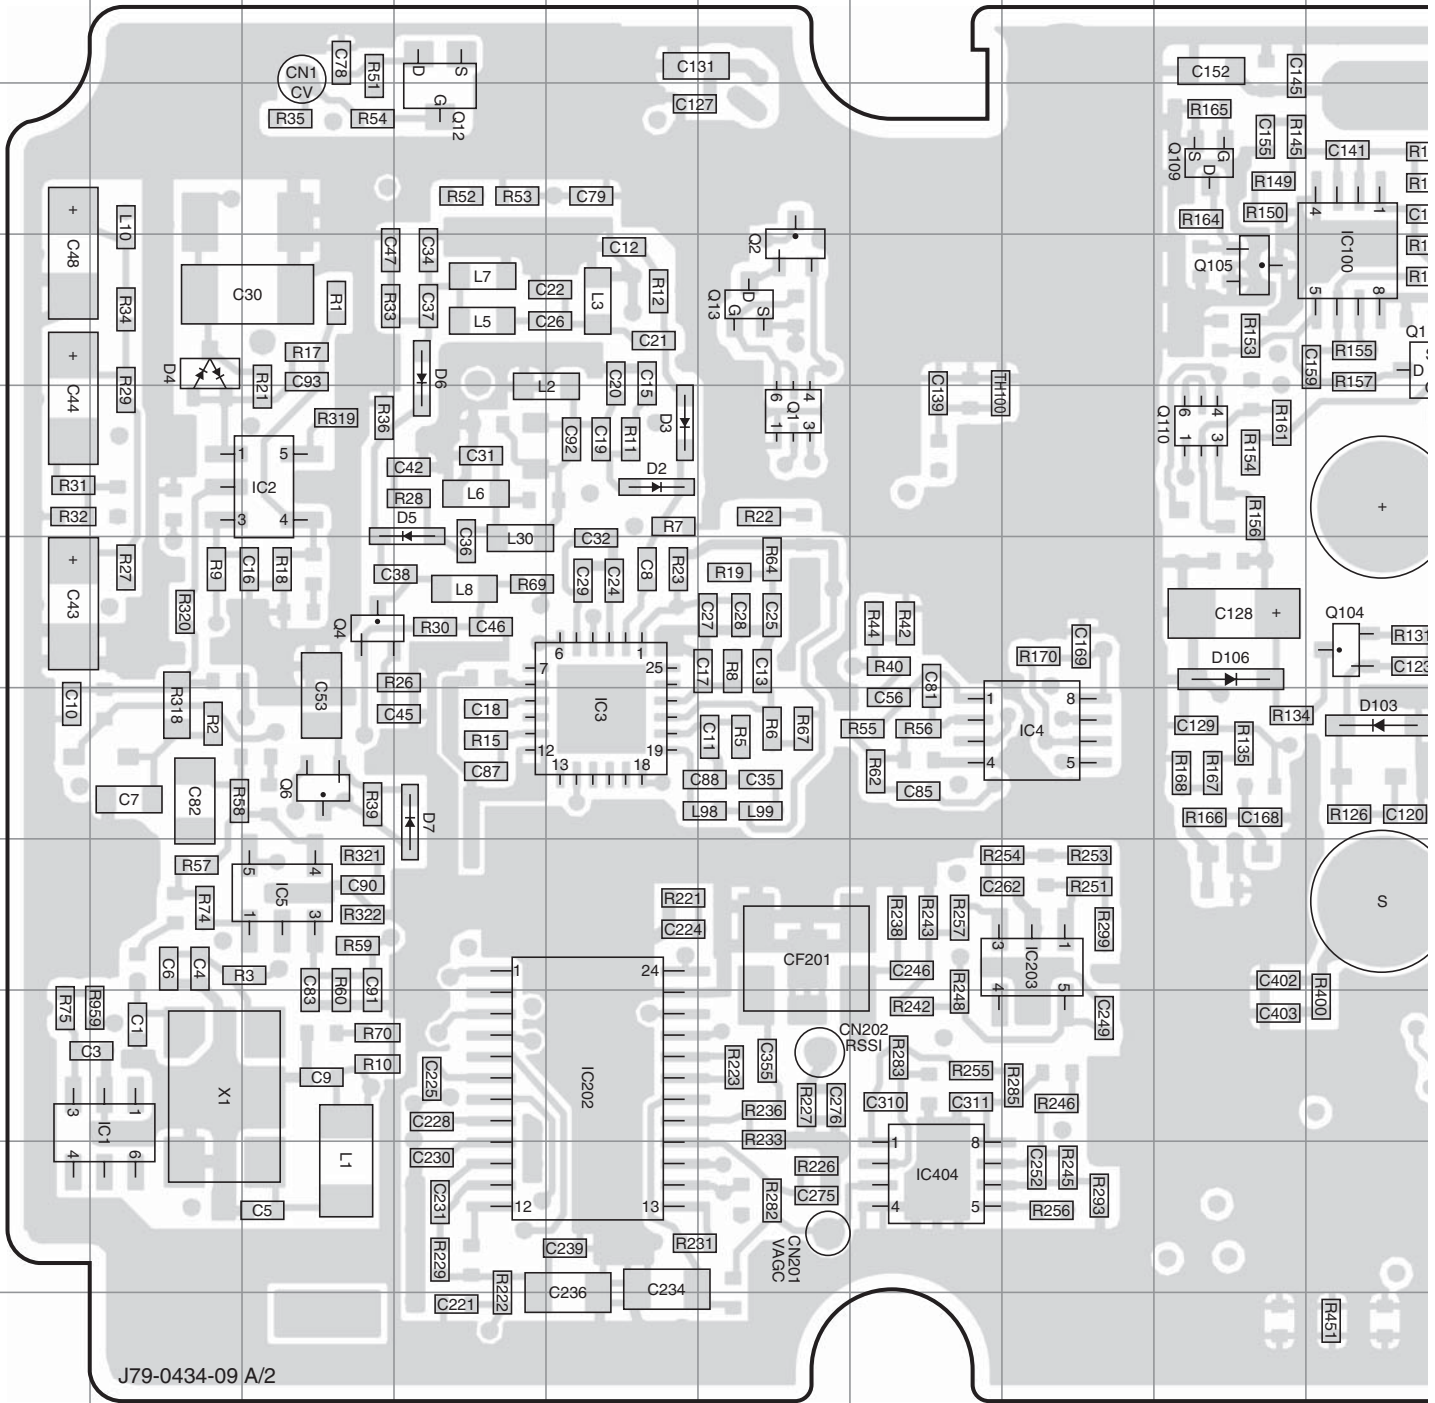



| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|
| IC1 | 9B | IC203 | 8H | Q6 | 7C | Q401 | 7M | D5 | 5D | D403 | 4N |
| IC2 | 5C | IC400 | 5N | Q12 | 3D | Q403 | 7N | D6 | 4D | D404 | 9P |
| IC3 | 7E | IC401 | 4P | Q13 | 4F | Q404 | 9O | D7 | 7D | D405 | 8P |
| IC4 | 7H | IC402 | 9O | Q104 | 6J | Q405 | 4N | D103 | 7J | | |
| IC5 | 8C | IC404 | 10G | Q105 | 4I | Q406 | 9P | D106 | 6I | | |
| IC100 | 4J | Q1 | 5F | Q107 | 4J | D2 | 5E | D400 | 5M | | |
| IC200 | 7K | Q2 | 4F | Q109 | 3I | D3 | 5E | D401 | 5P | | |
| IC202 | 9E | Q4 | 6C | Q110 | 5I | D4 | 4B | D402 | 8P | | |

PC BOARD NX-203

TX-RX UNIT (X57-8950-11) (A/2) Component side view (J79-0434-09 A/2)

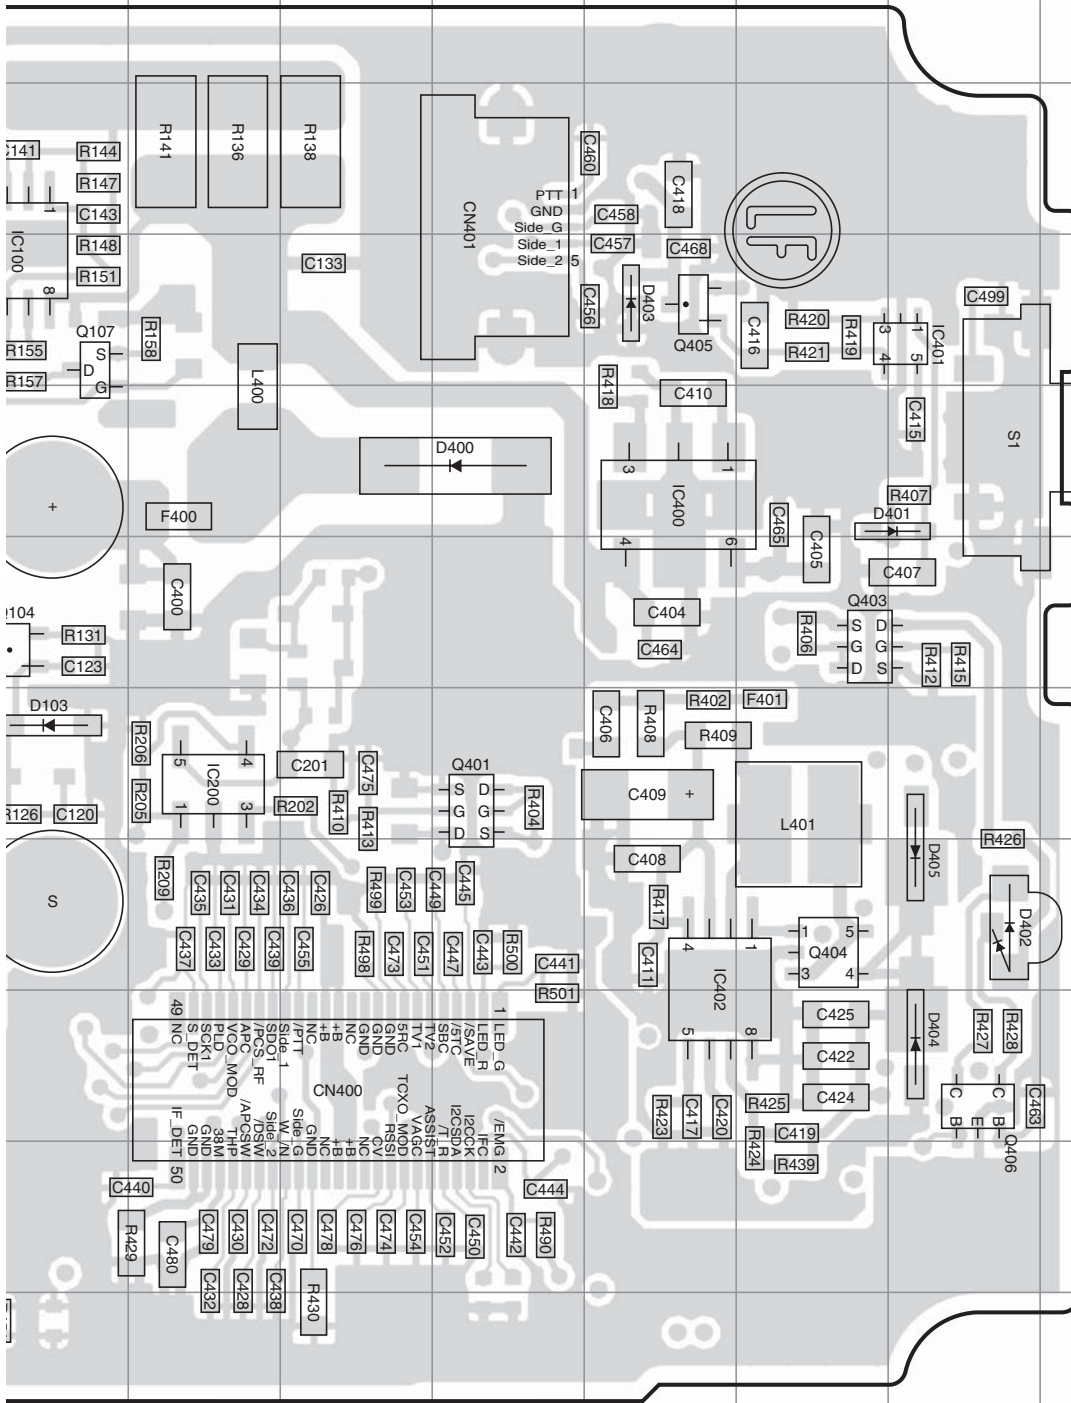




TX-RX UNIT (X57-8950-11) (B/2)

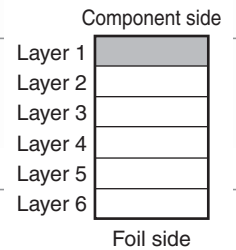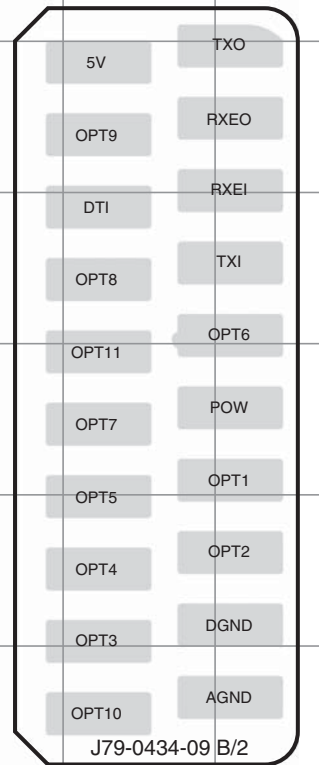

NX-203 PC BOARD


TX-RX UNIT (X57-8950-11) (A/2)
Foil side view (J79-0434-09 A/2)

TX-RX UNIT (X57-8950-11) (B/2)

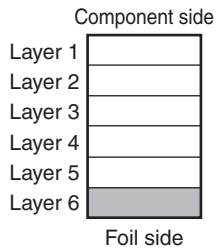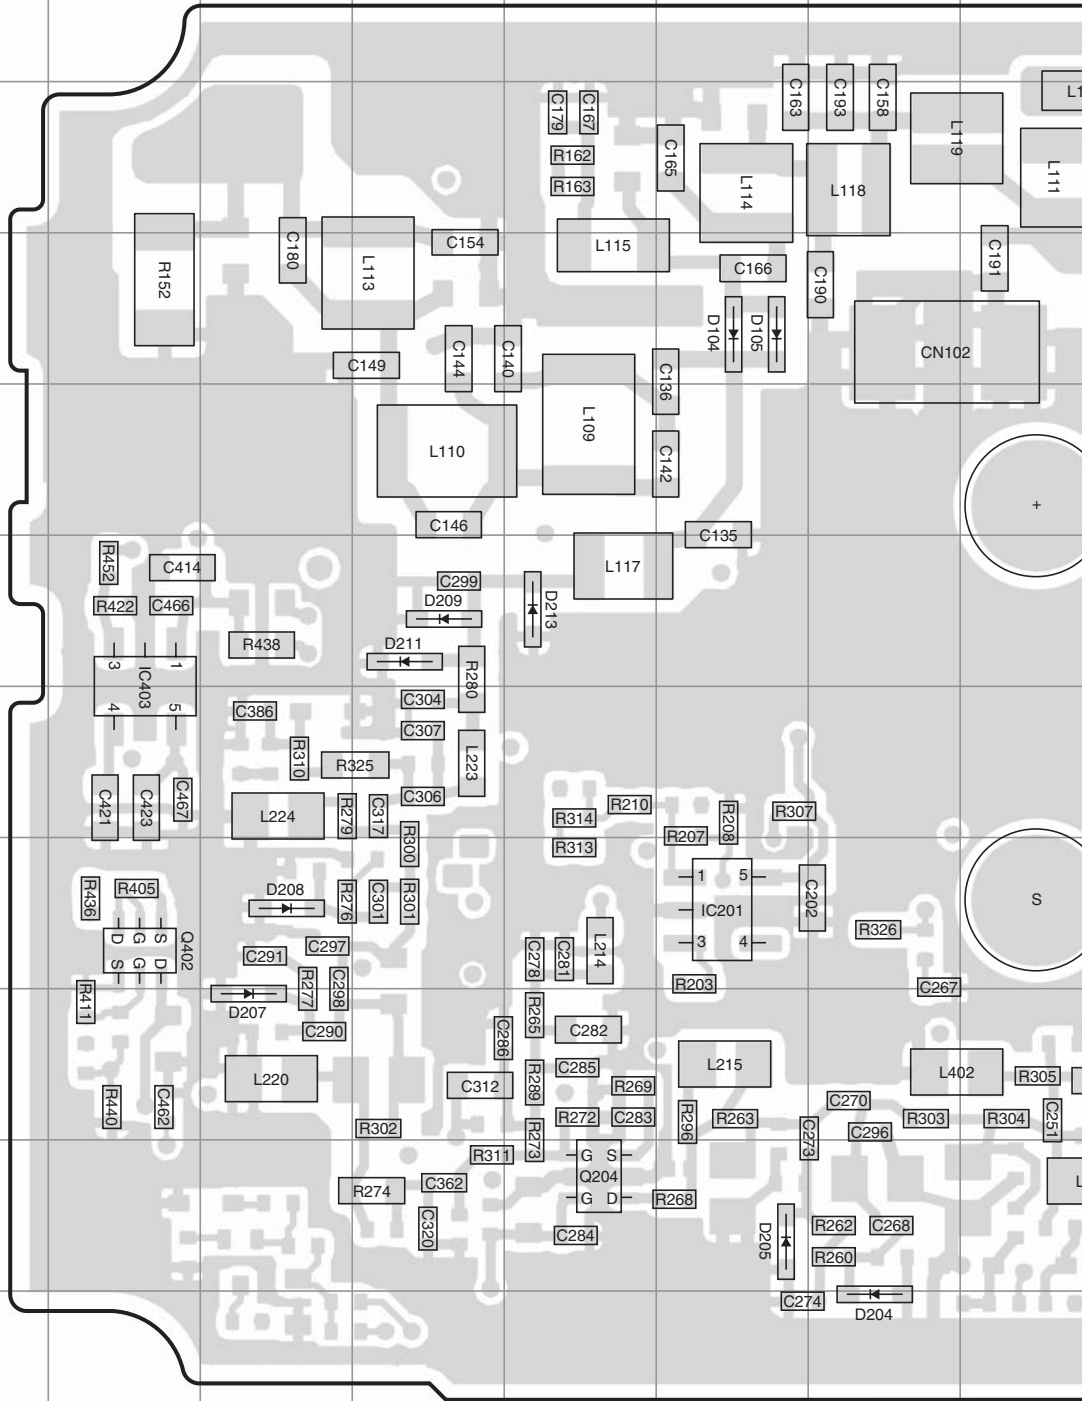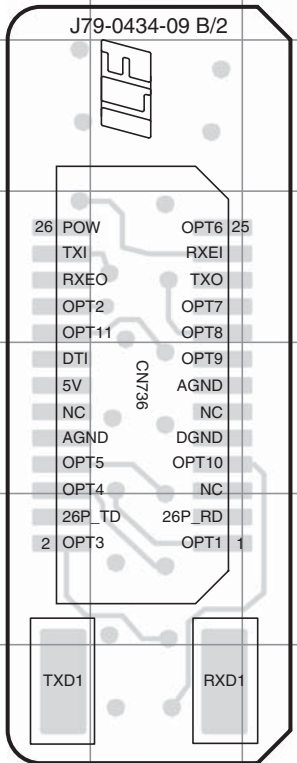


PC BOARD NX-203

TX-RX UNIT (X57-8950-11) (A/2)
Foil side view (J79-0434-09 A/2)

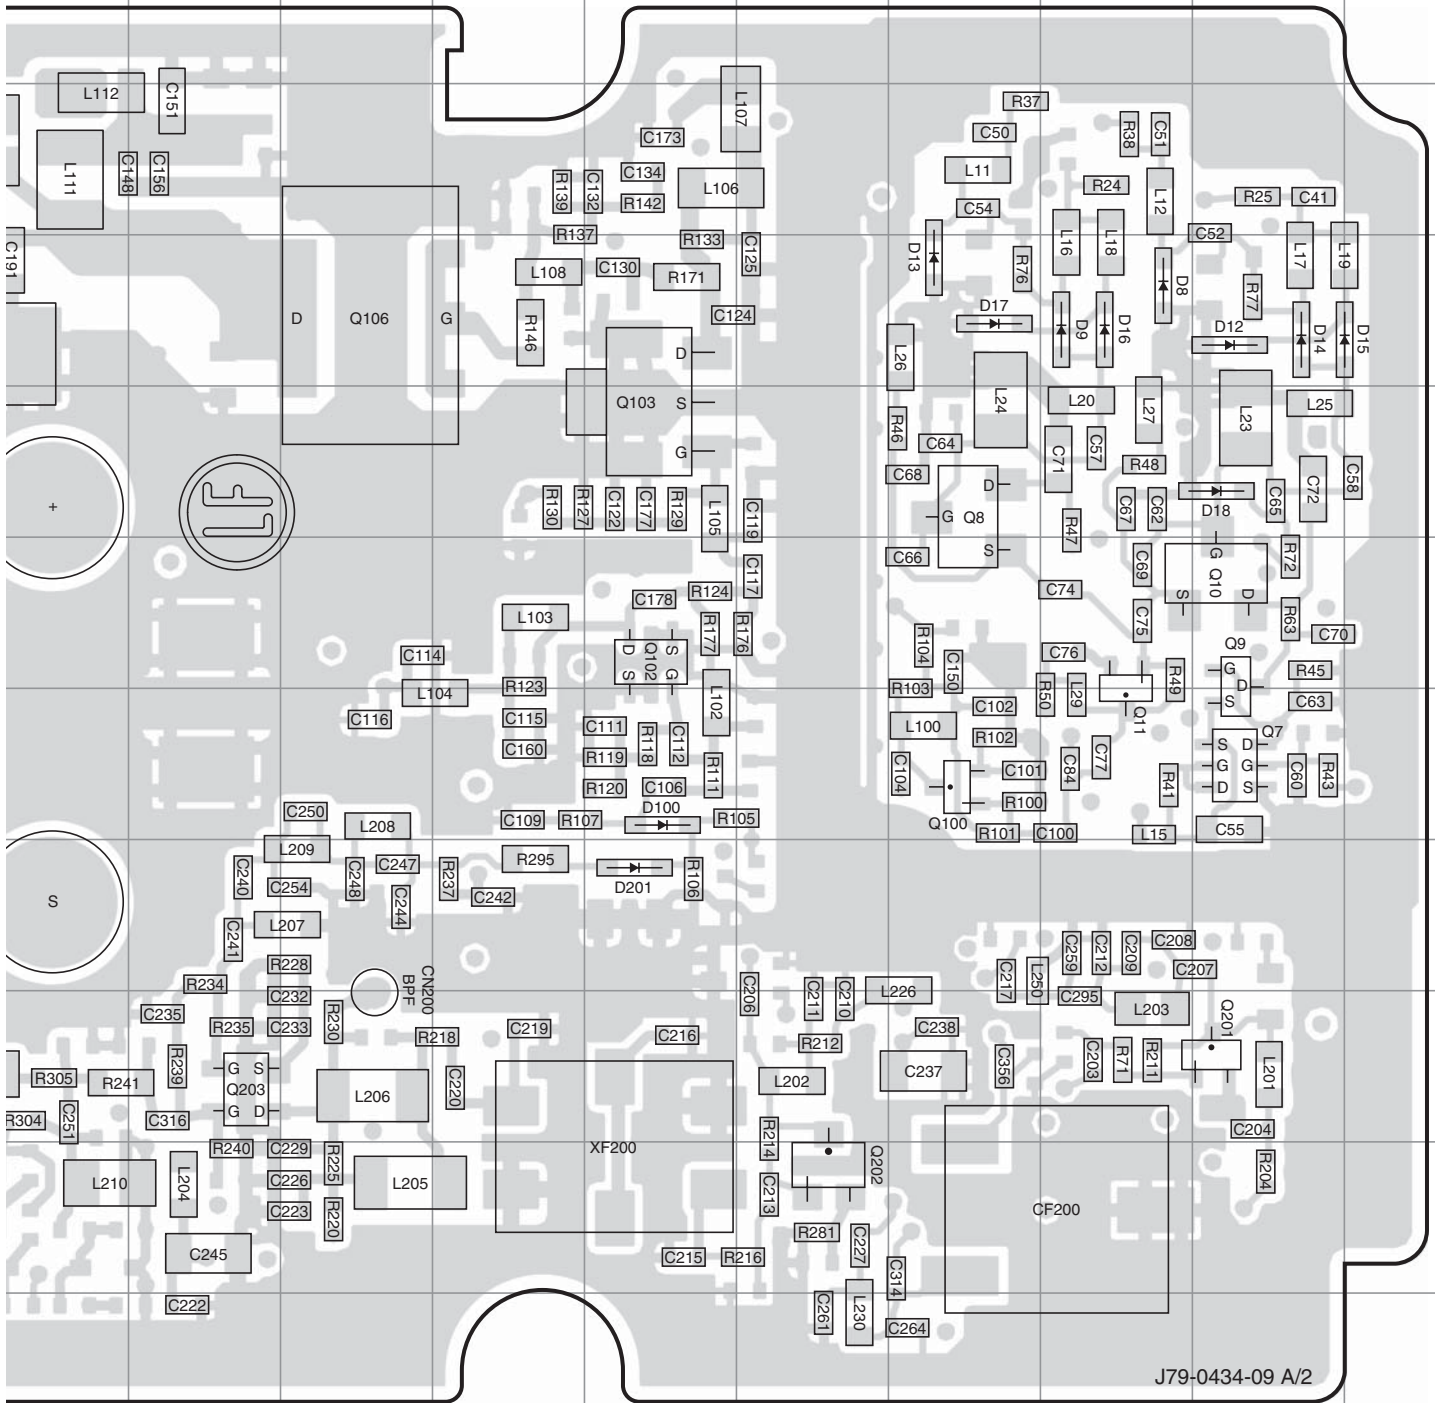


| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|
| IC201 | 8H | Q100 | 7P | Q204 | 10G | D15 | 4S | D201 | 8N | D213 | 6G |
| IC403 | 7D | Q102 | 6N | Q402 | 8D | D16 | 4Q | D204 | 11I | | |
| Q7 | 7R | Q103 | 5N | D8 | 4Q | D17 | 4P | D205 | 10H | | |
| Q8 | 5P | Q106 | 4L | D9 | 4Q | D18 | 5R | D207 | 9E | | |
| Q9 | 6R | Q201 | 9R | D12 | 4R | D100 | 7N | D208 | 8E | | |
| Q10 | 6R | Q202 | 10O | D13 | 4P | D104 | 4H | D209 | 6F | | |
| Q11 | 7Q | Q203 | 9K | D14 | 4R | D105 | 4H | D211 | 6F | | |


INTERCONNECTION DIAGRAM

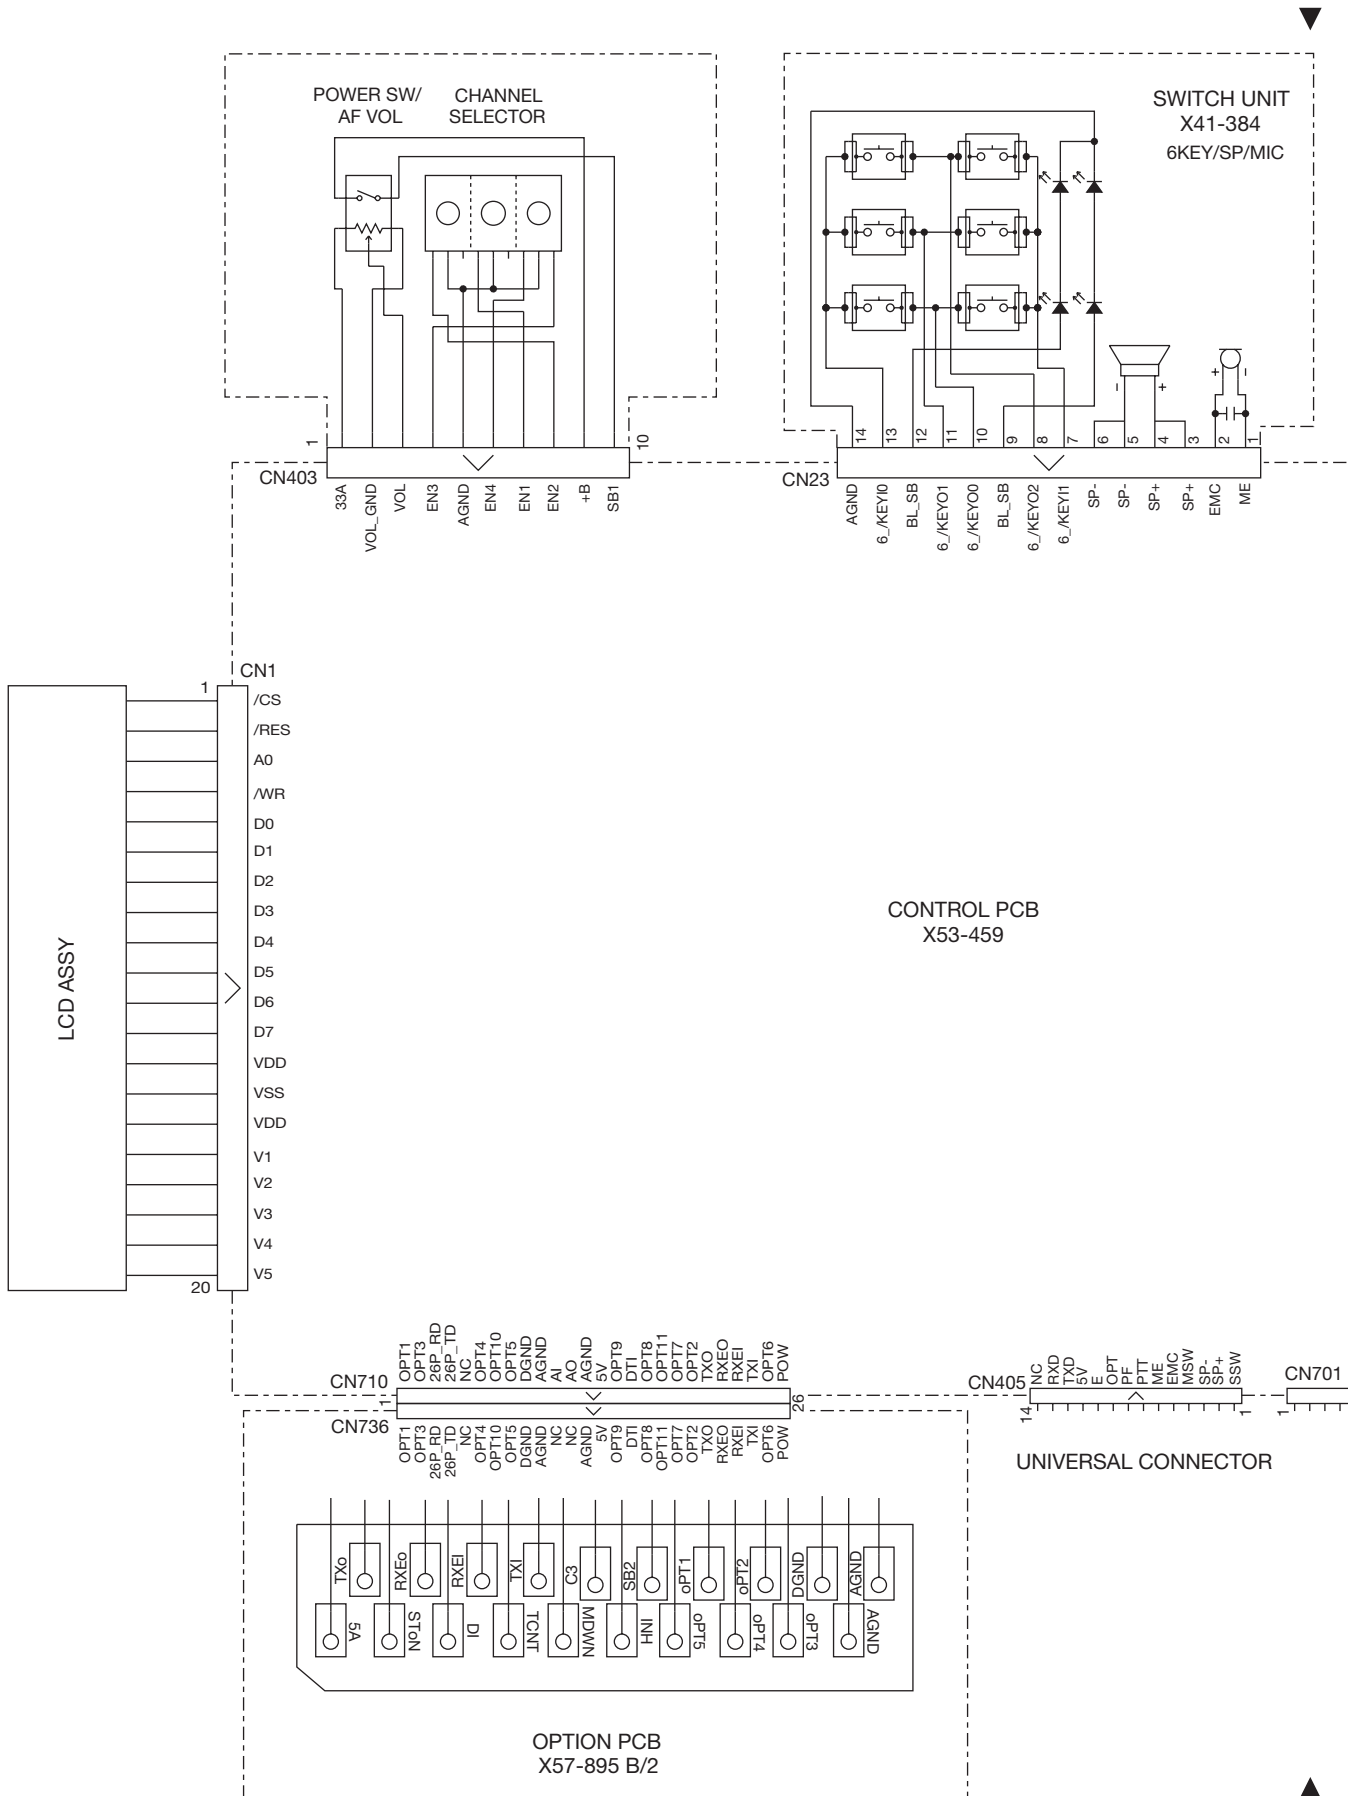

INTERCONNECTION DIAGRAM

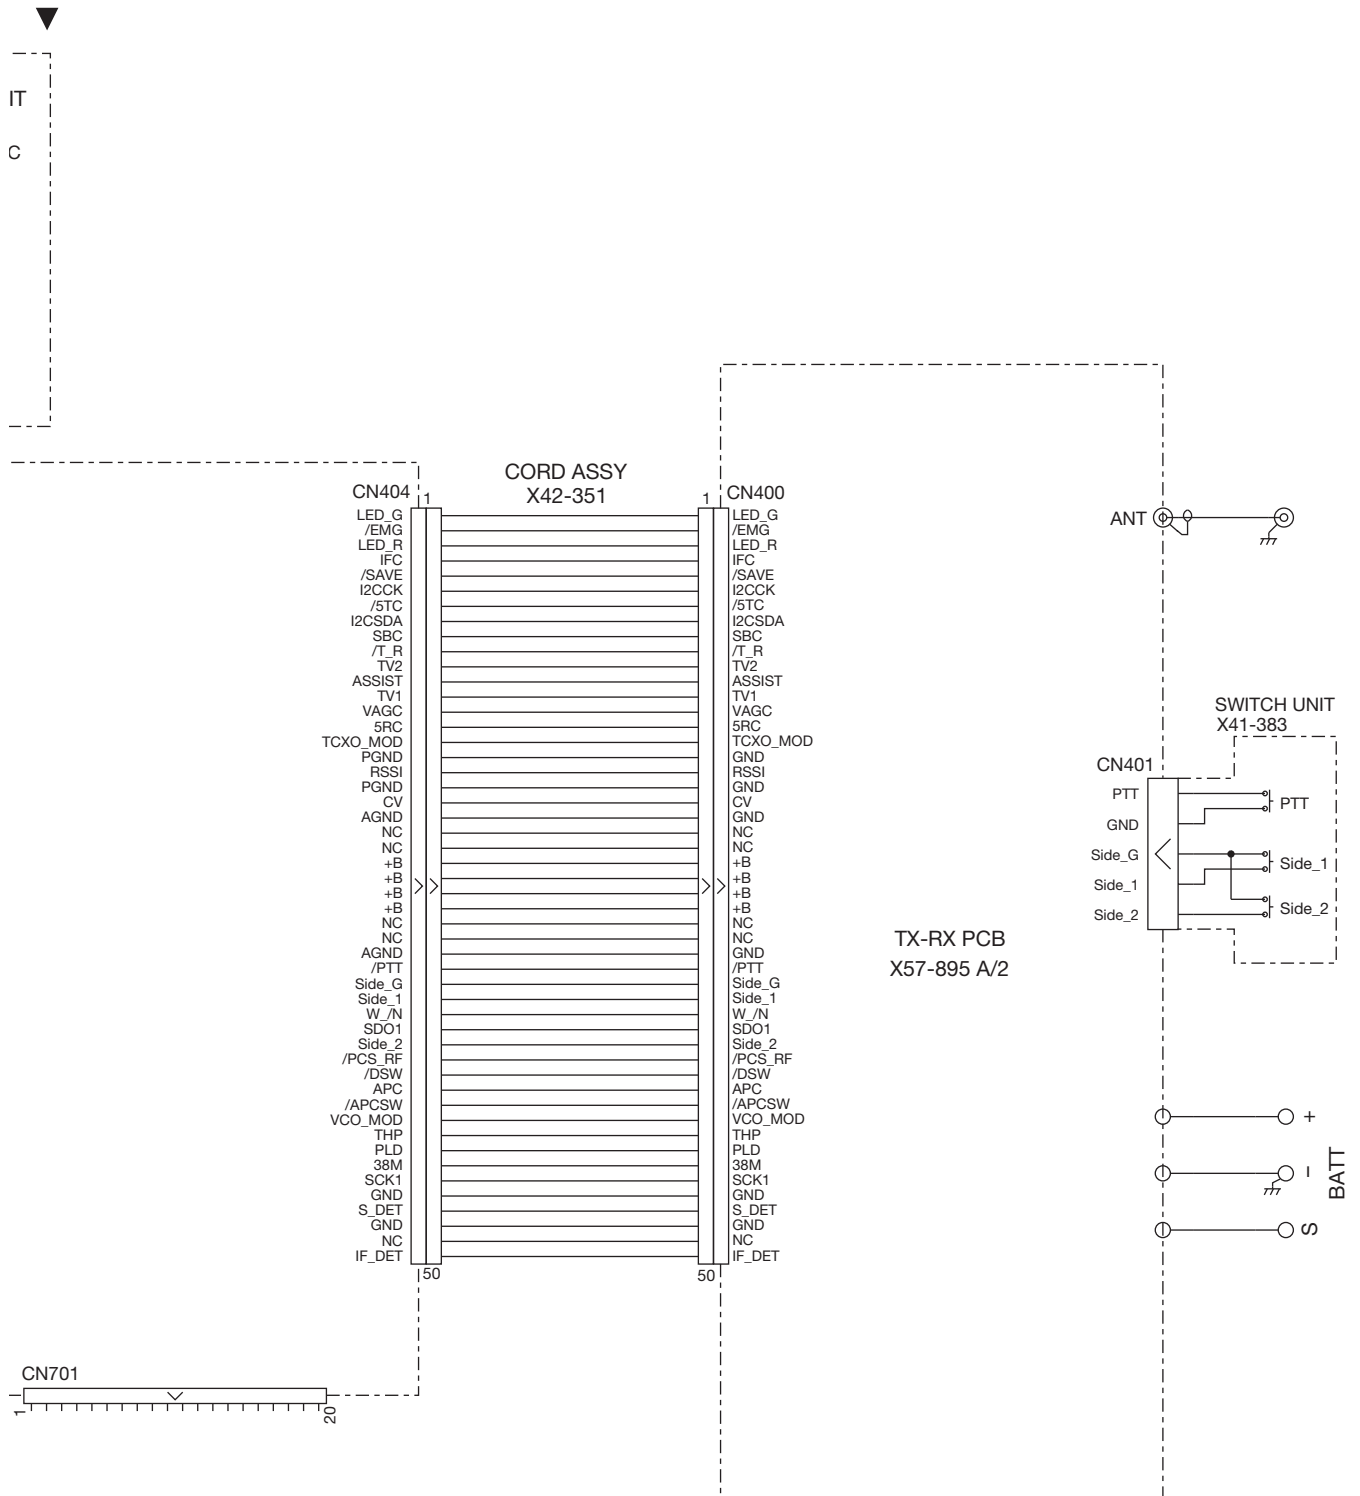


NX-203 SCHEMATIC DIAGRAM

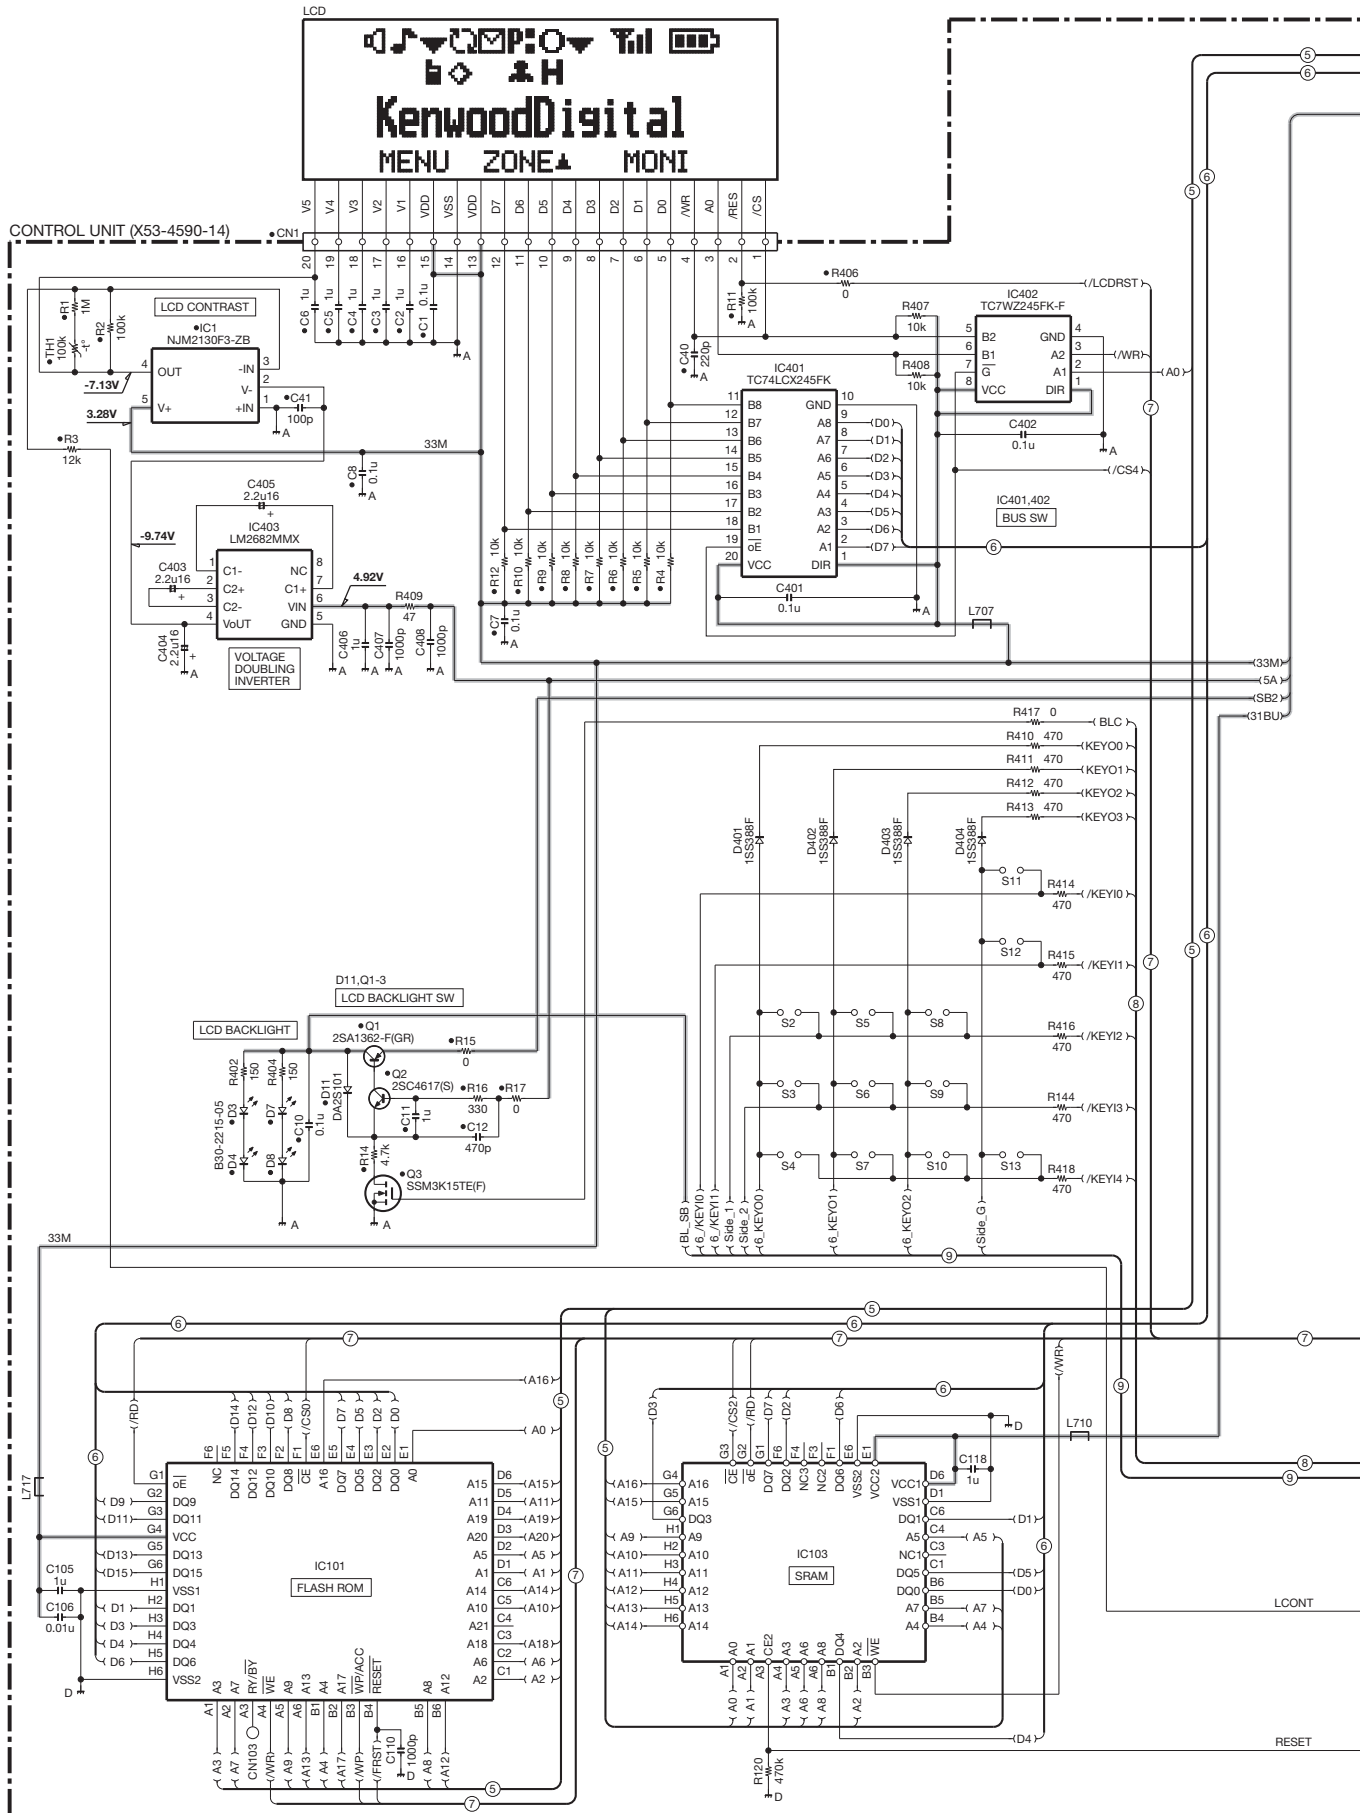

NX-203 SCHEMATIC DIAGRAM

CONTROL UNIT (X53-4590-14)

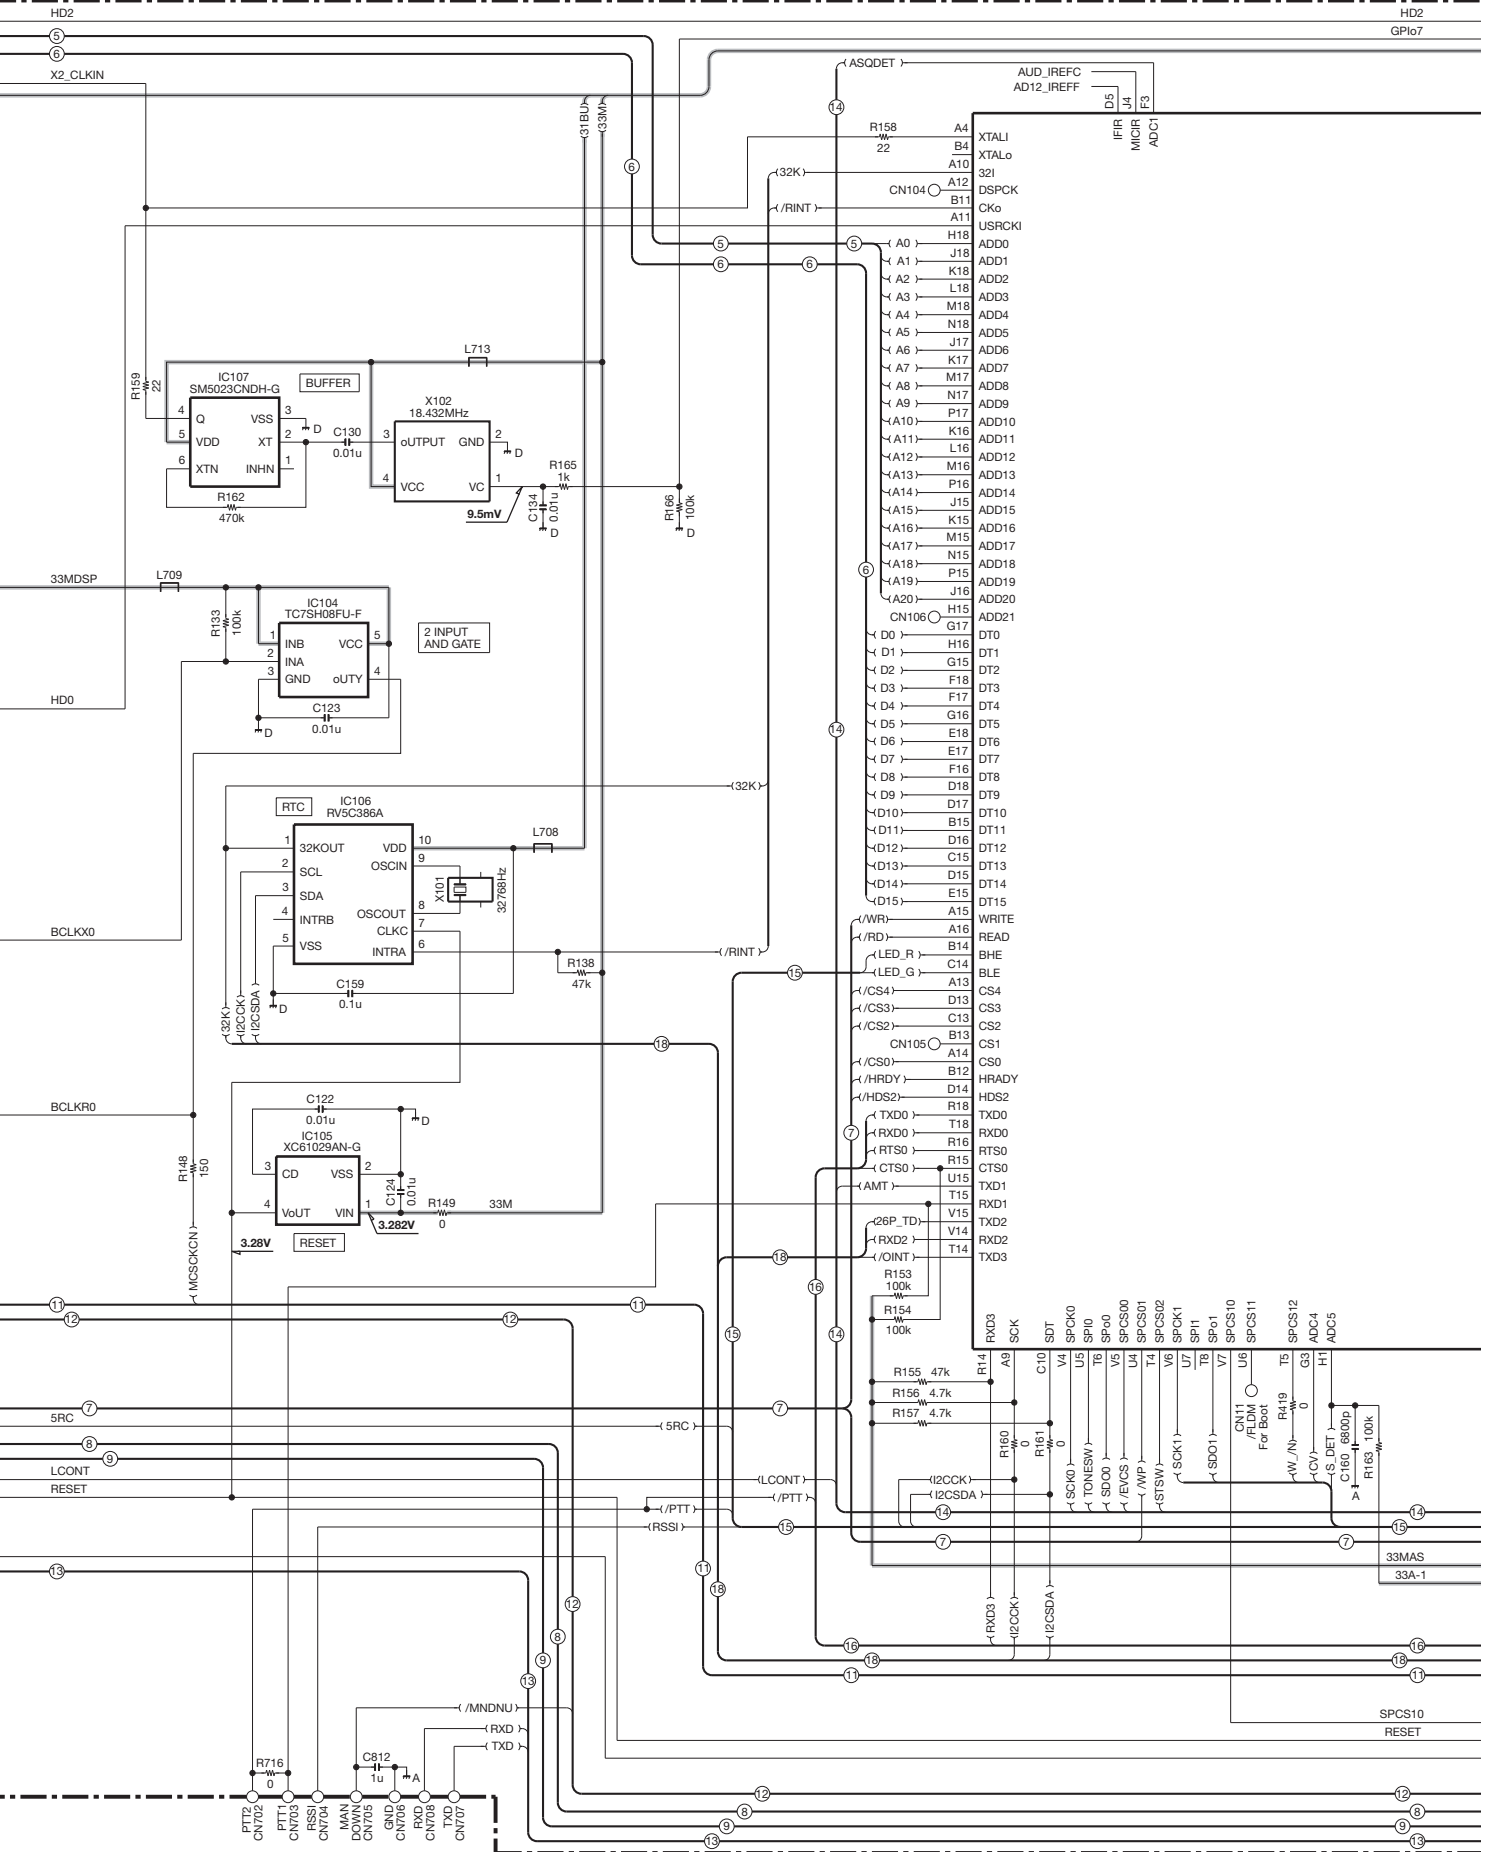

SCHEMATIC DIAGRAM NX-203

CONTROL UNIT (X53-4590-14)


HD2
GPIO7

HD2
GPIO7


33A-1



IC108
ASIC

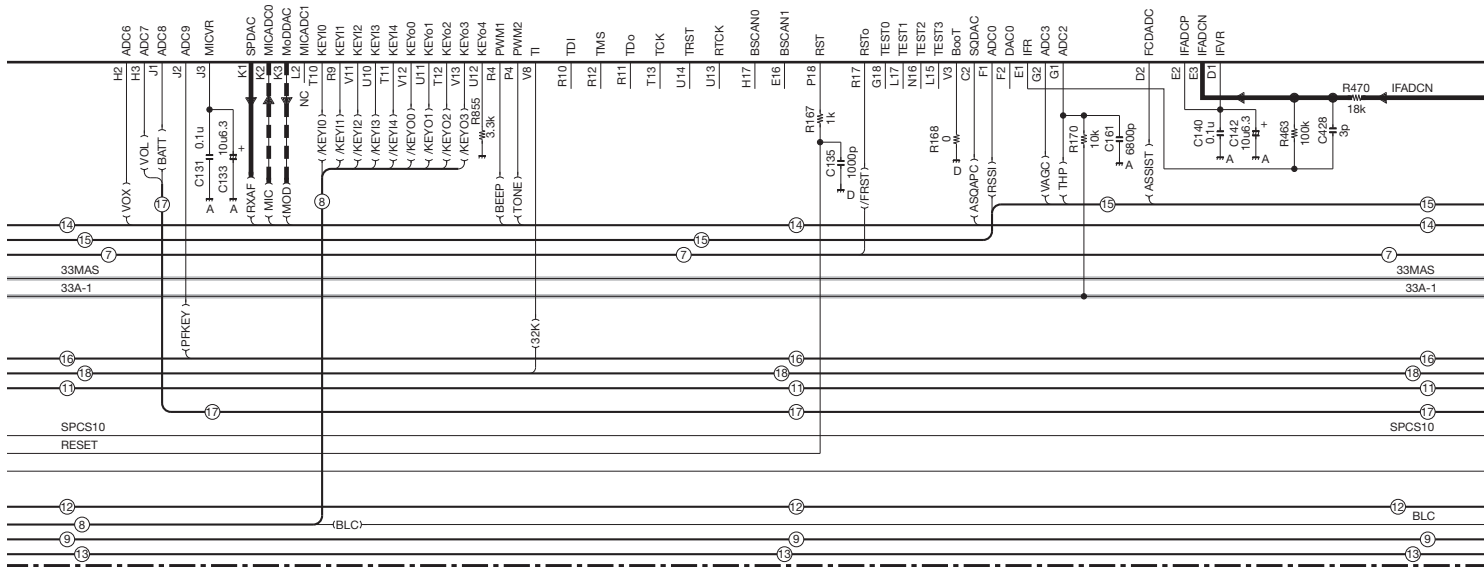


NX-203 SCHEMATIC DIAGRAM

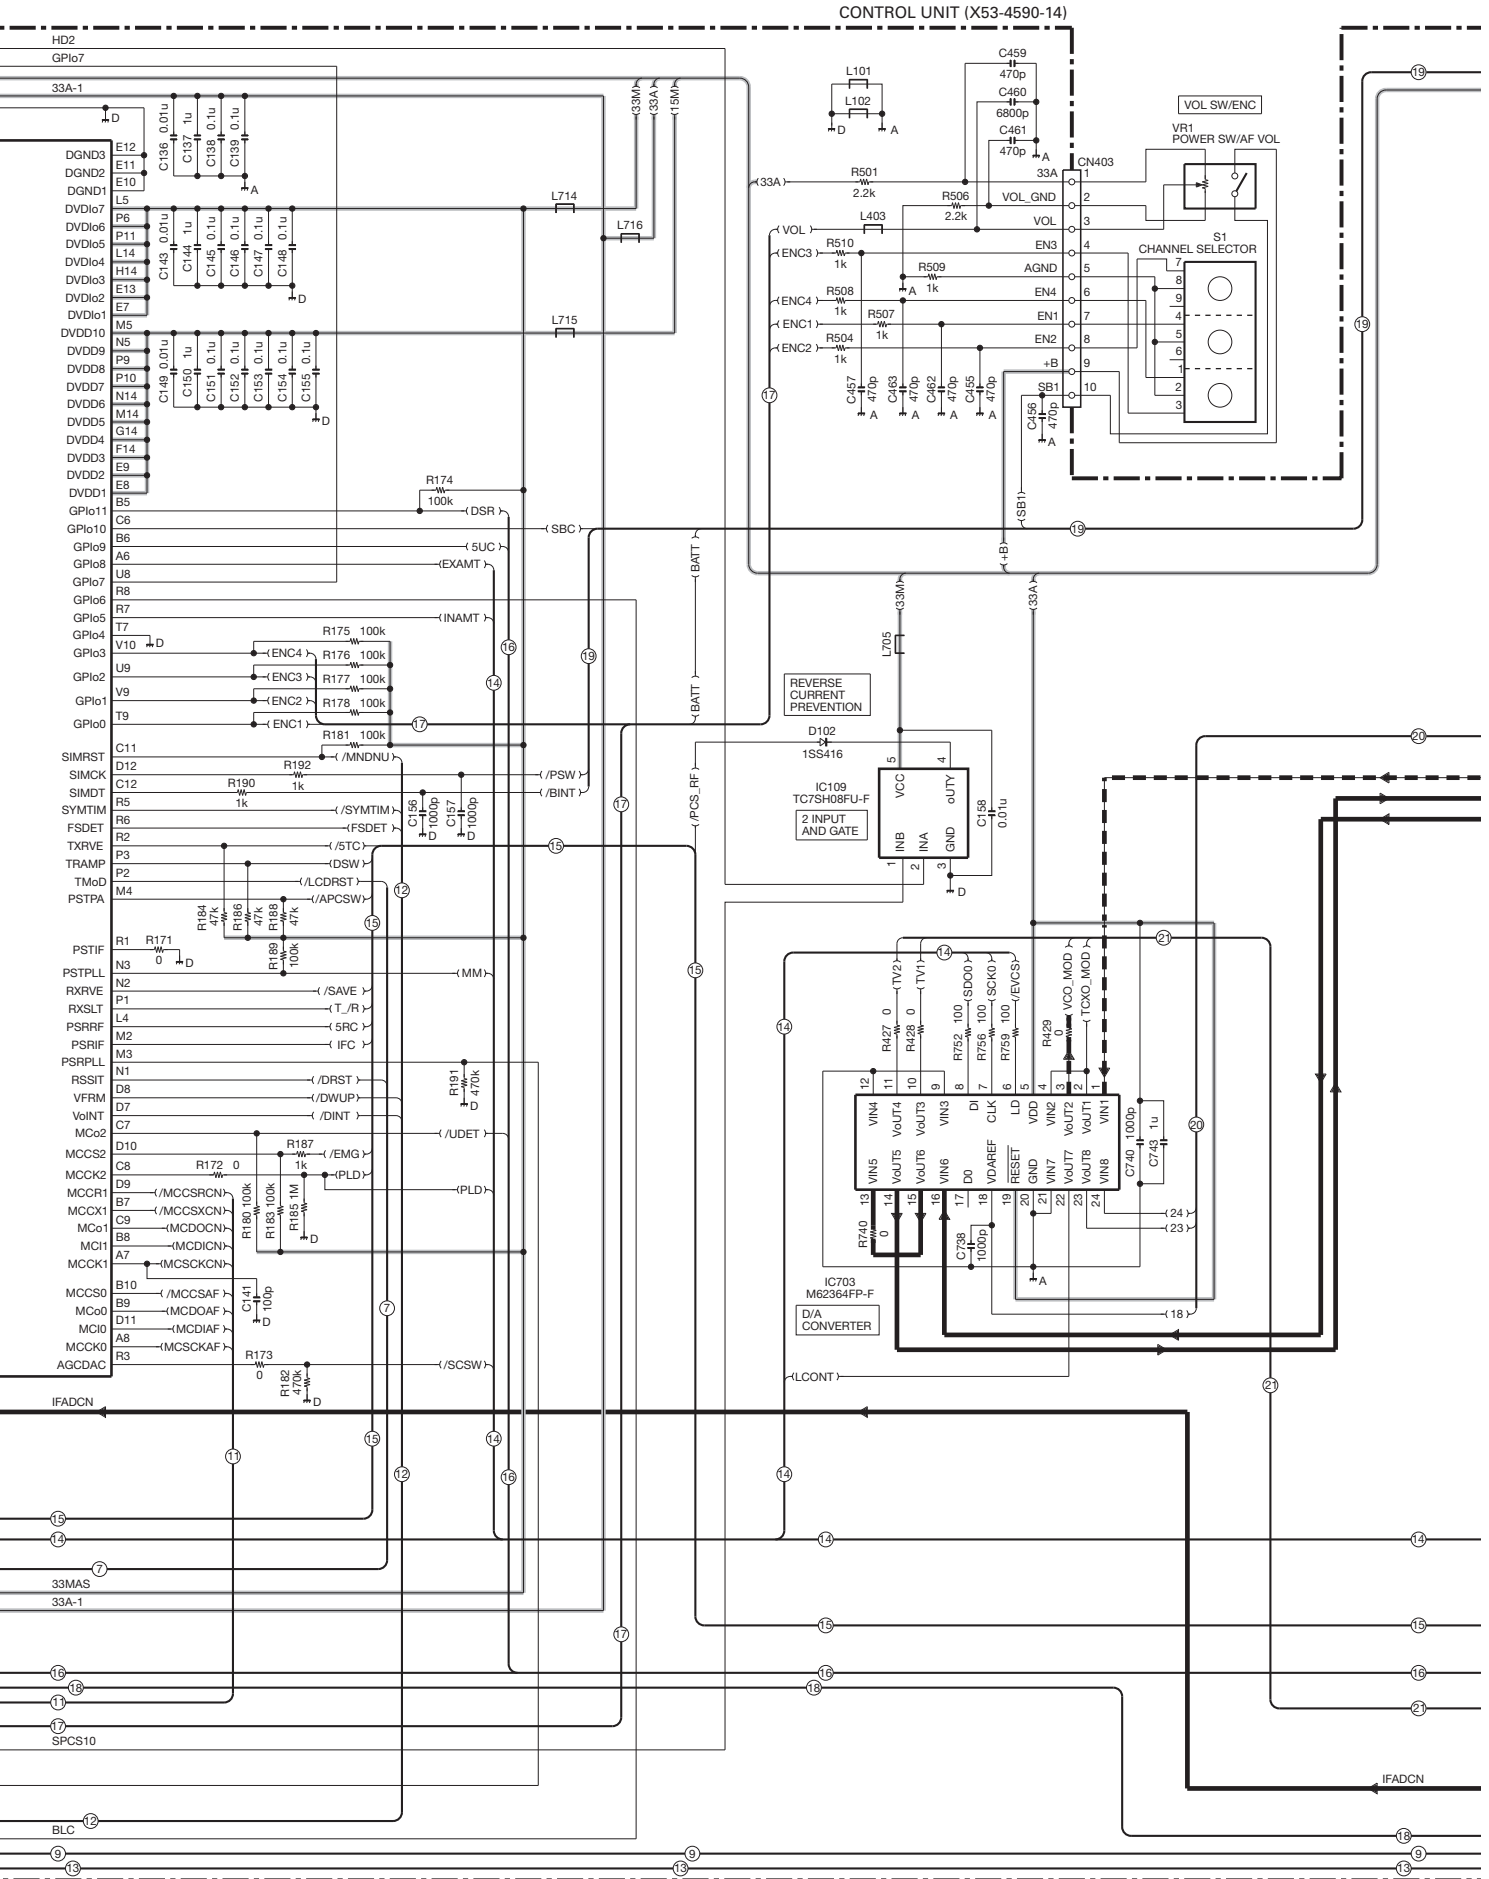


SCHEMATIC DIAGRAM NX-203

CONTROL UNIT (X53-4590-14)

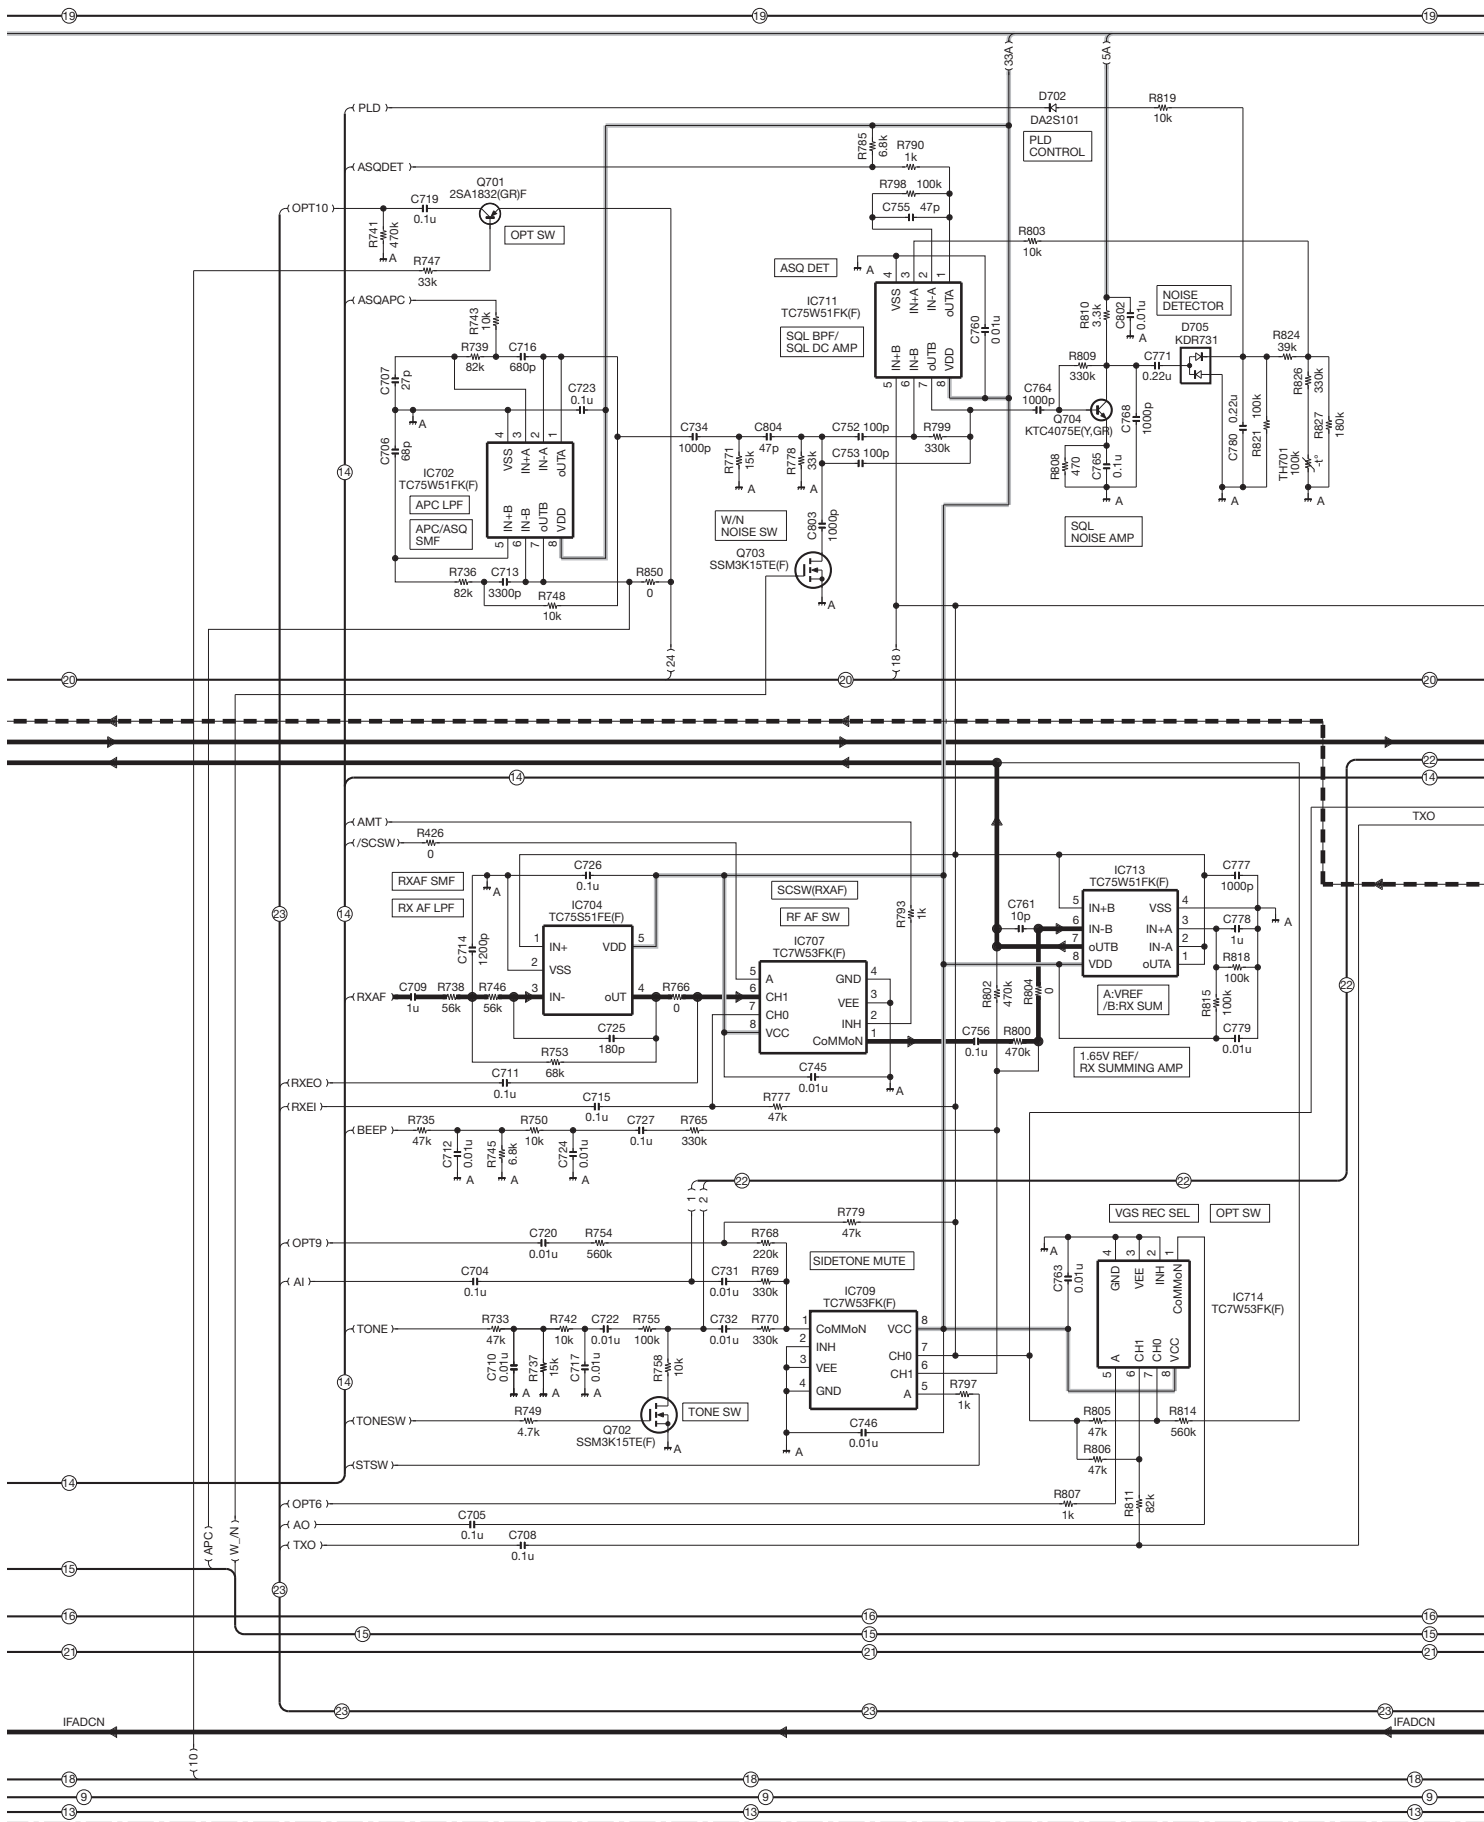


NX-203 SCHEMATIC DIAGRAM

CONTROL UNIT (X53-4590-14)

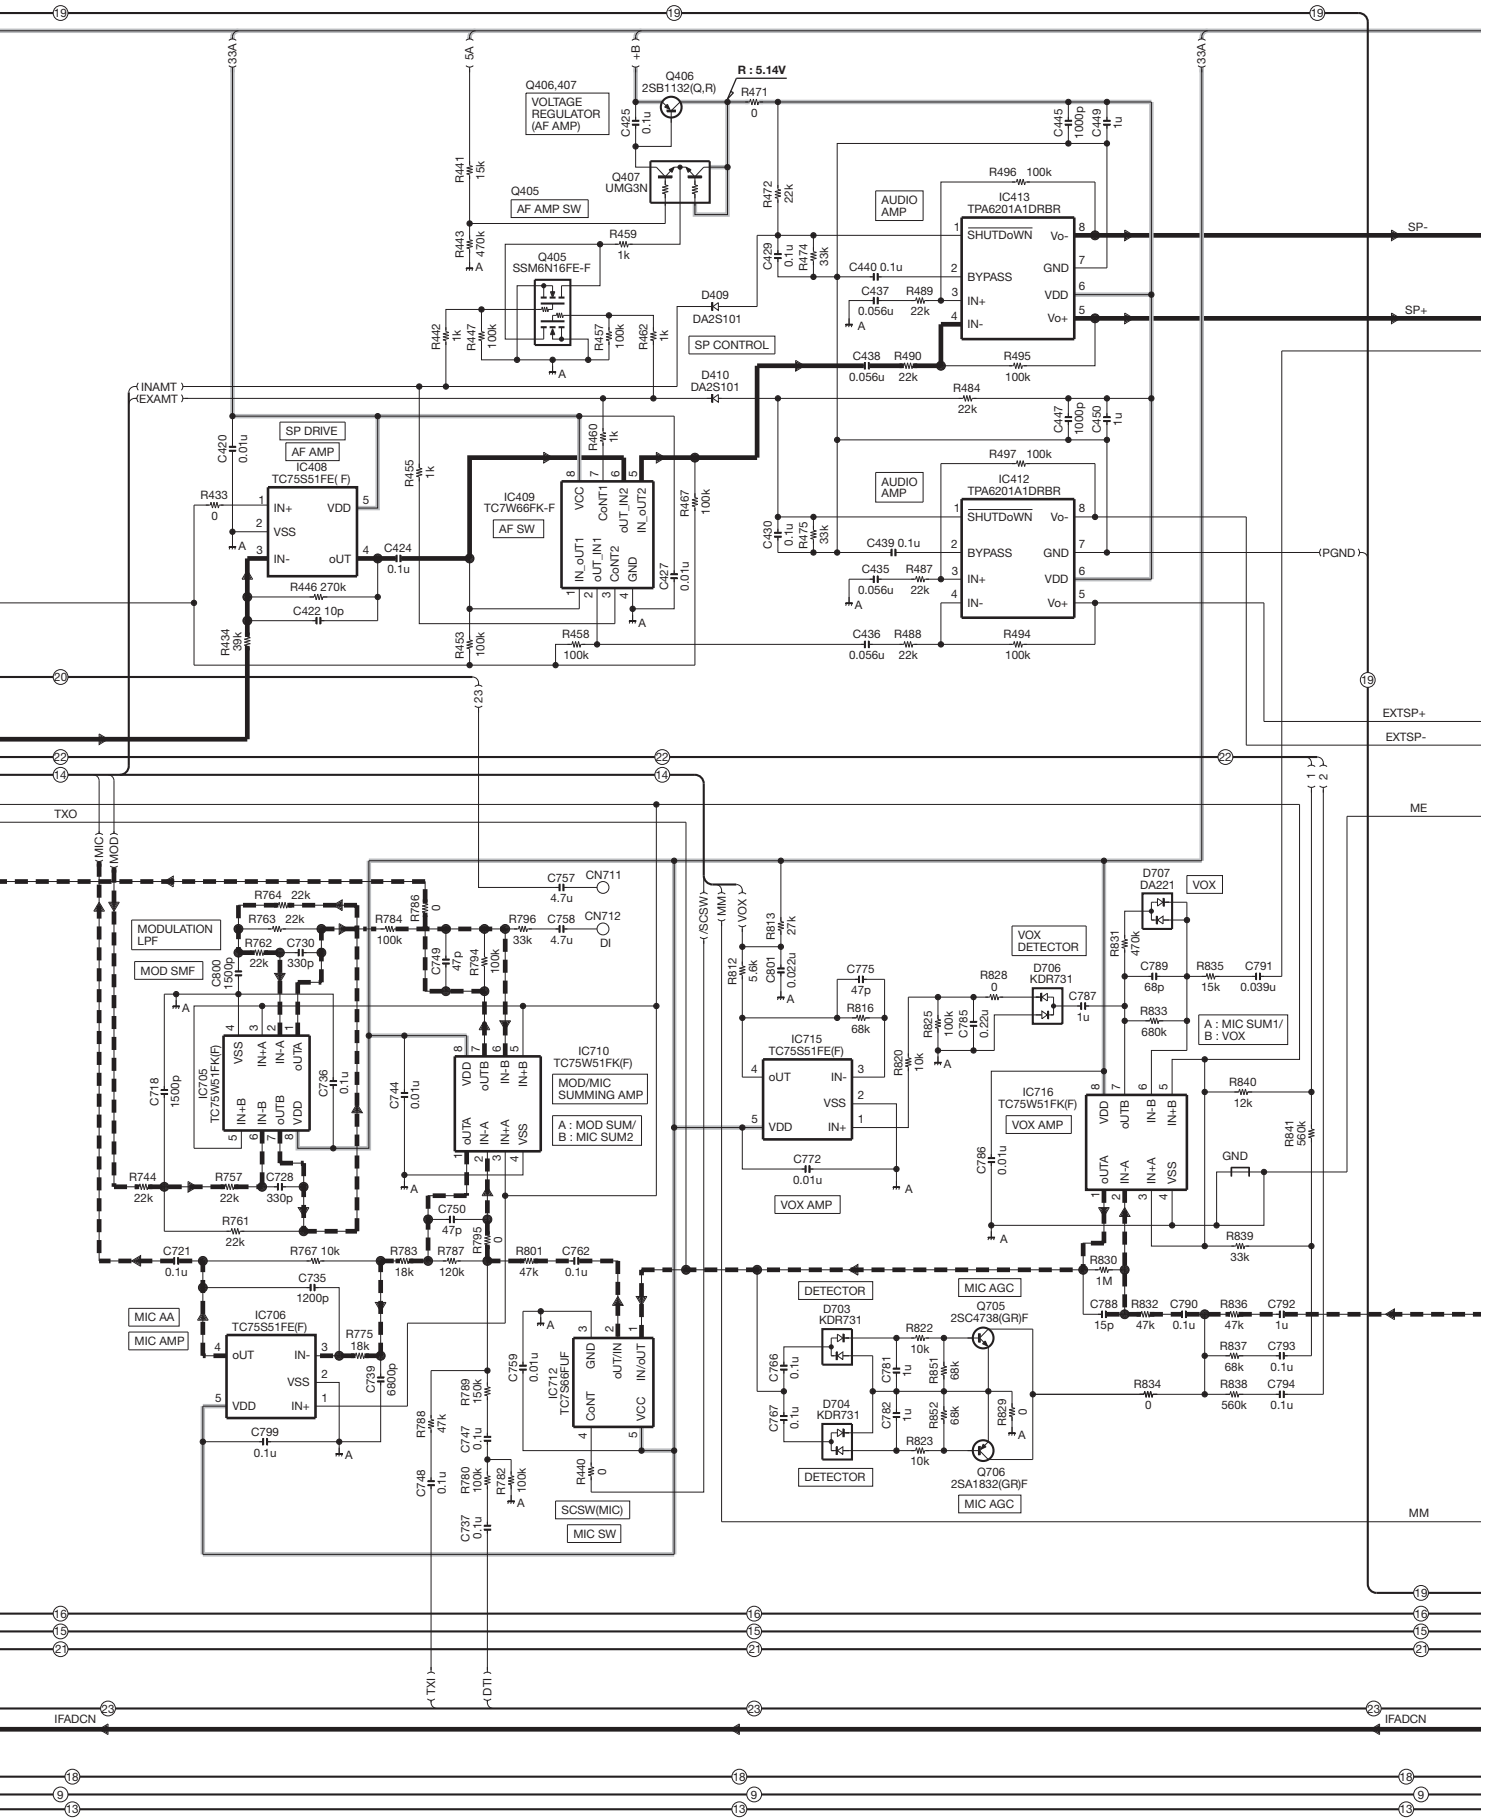


SCHEMATIC DIAGRAM NX-203

CONTROL UNIT (X53-4590-14)

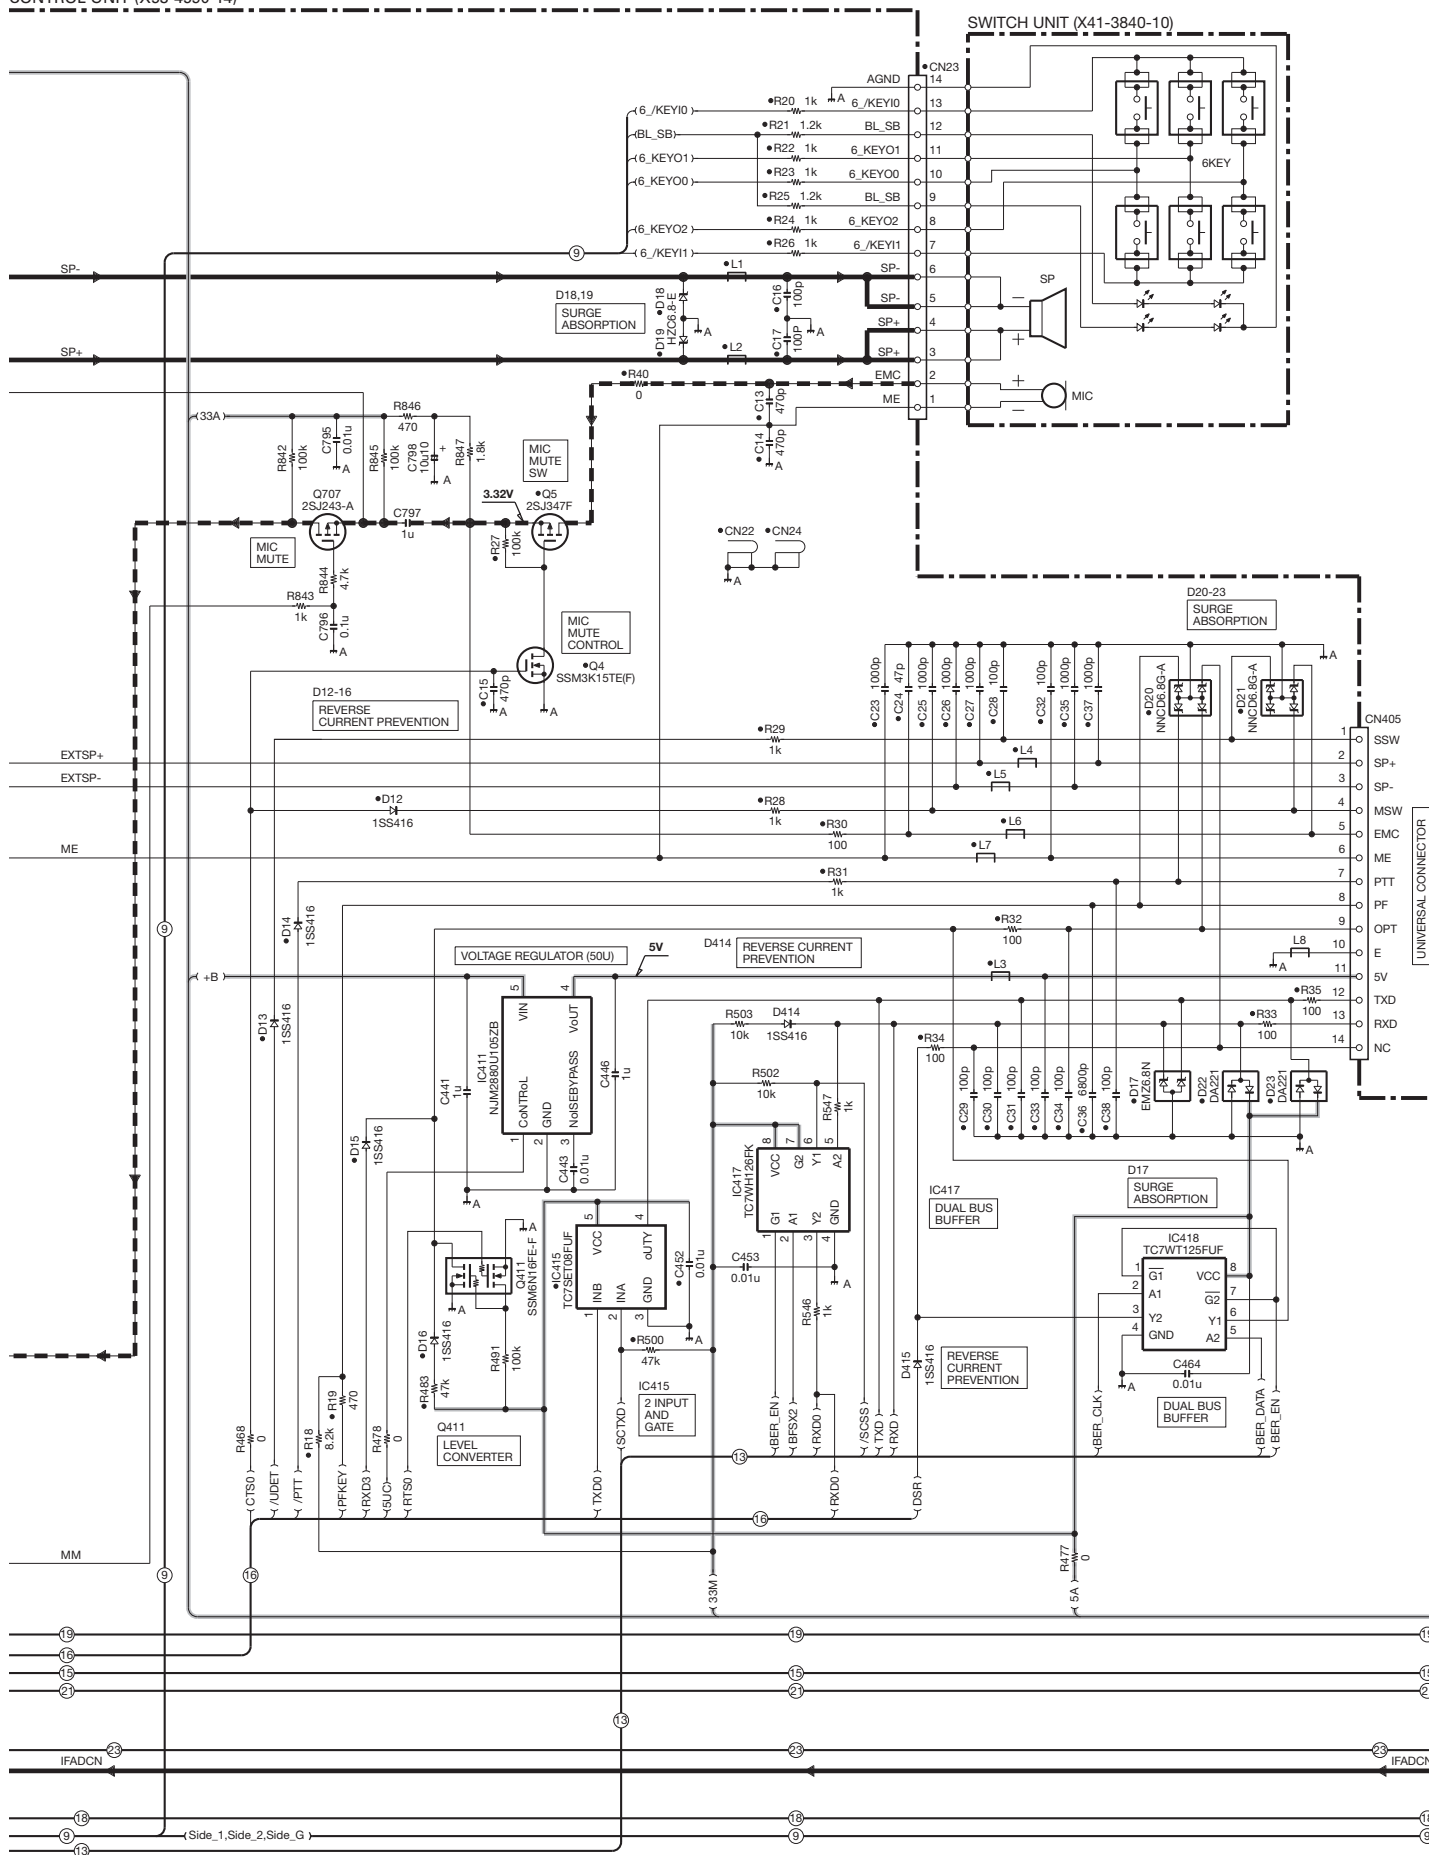


NX-203 SCHEMATIC DIAGRAM

CONTROL UNIT (X53-4590-14)

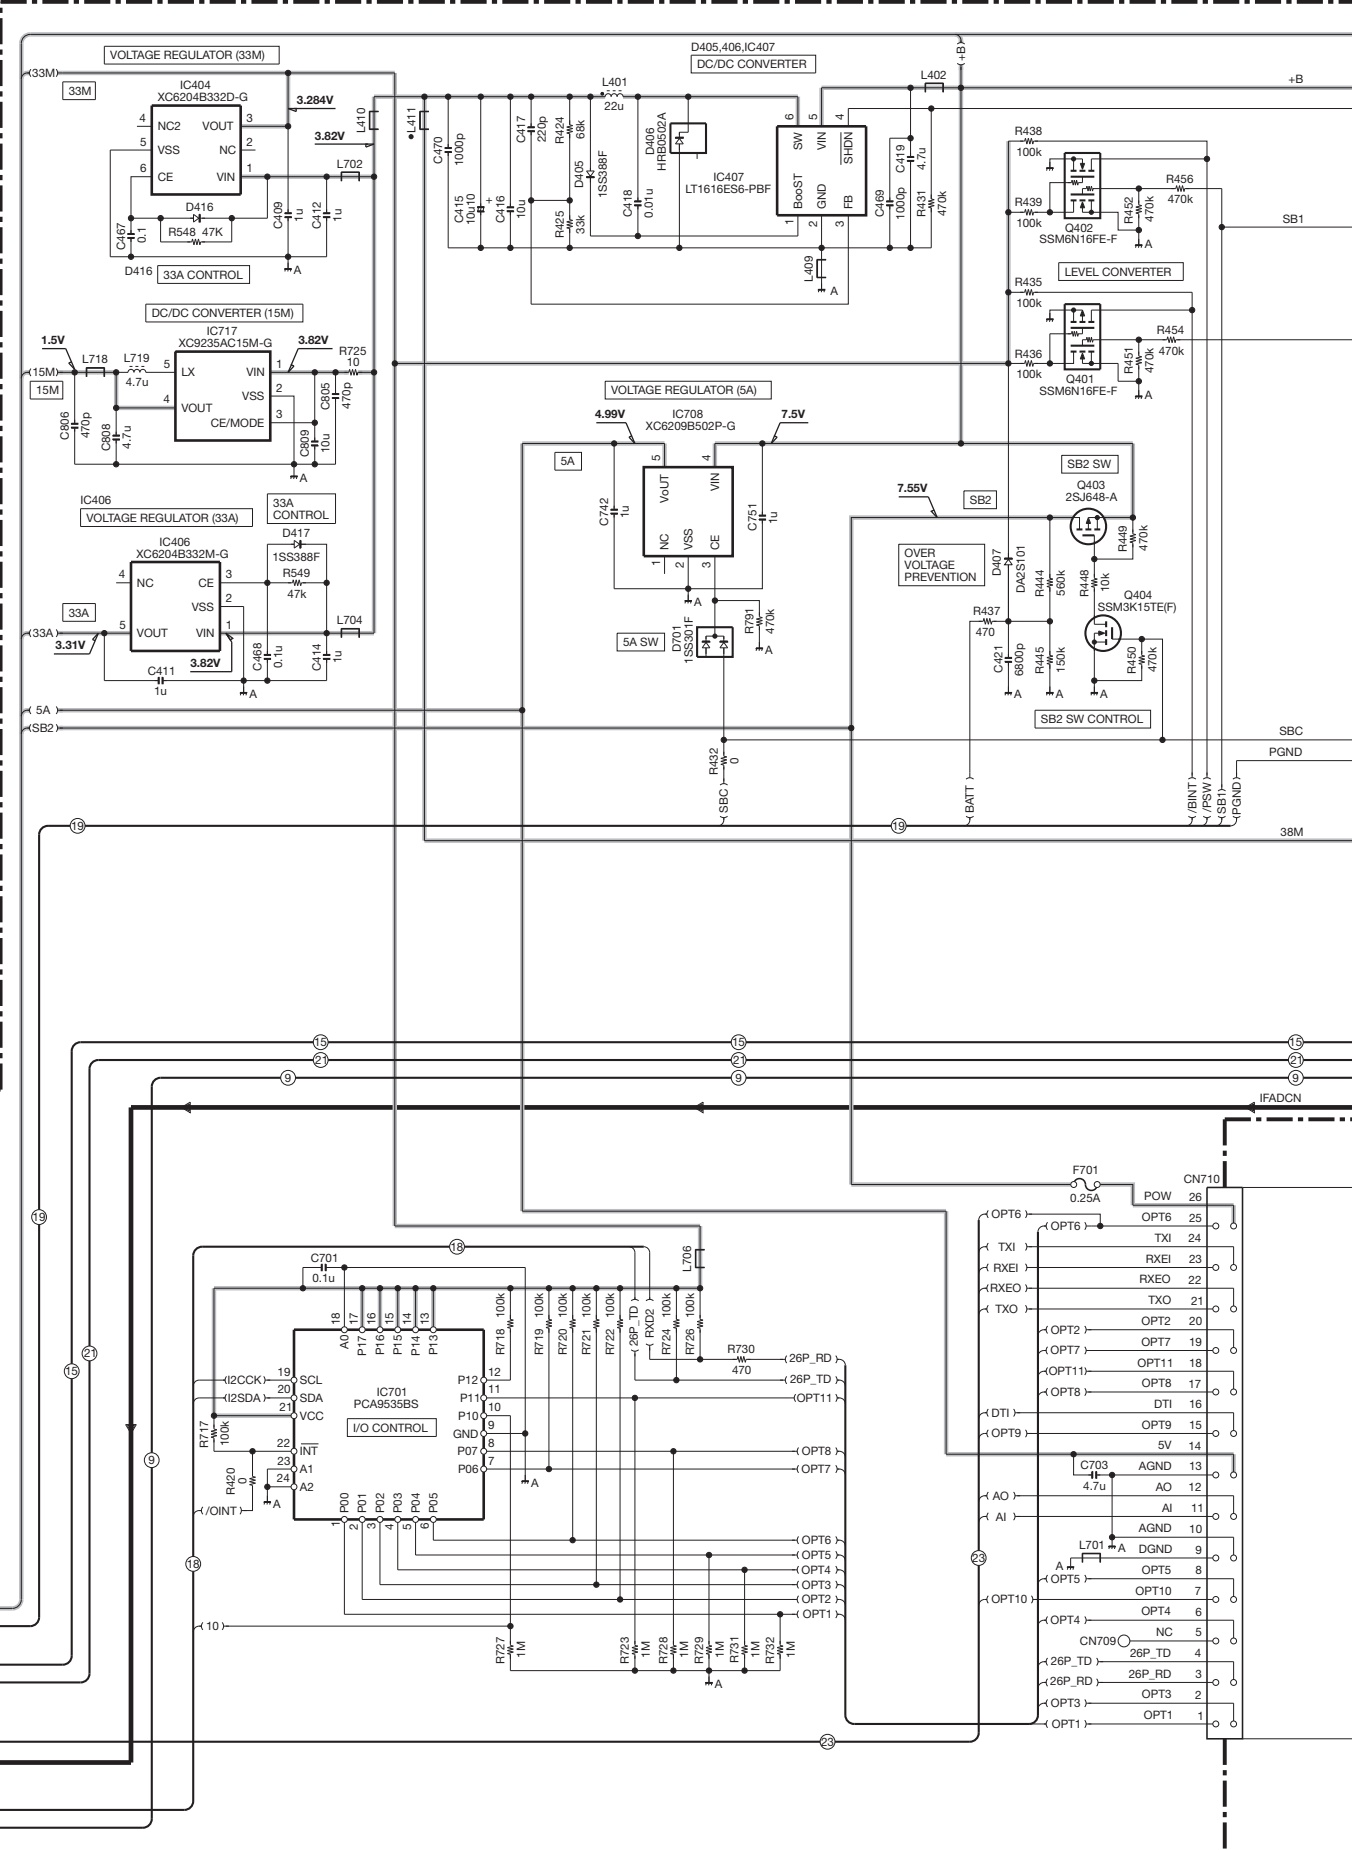


SCHEMATIC DIAGRAM NX-203

CONTROL UNIT (X53-4590-14)

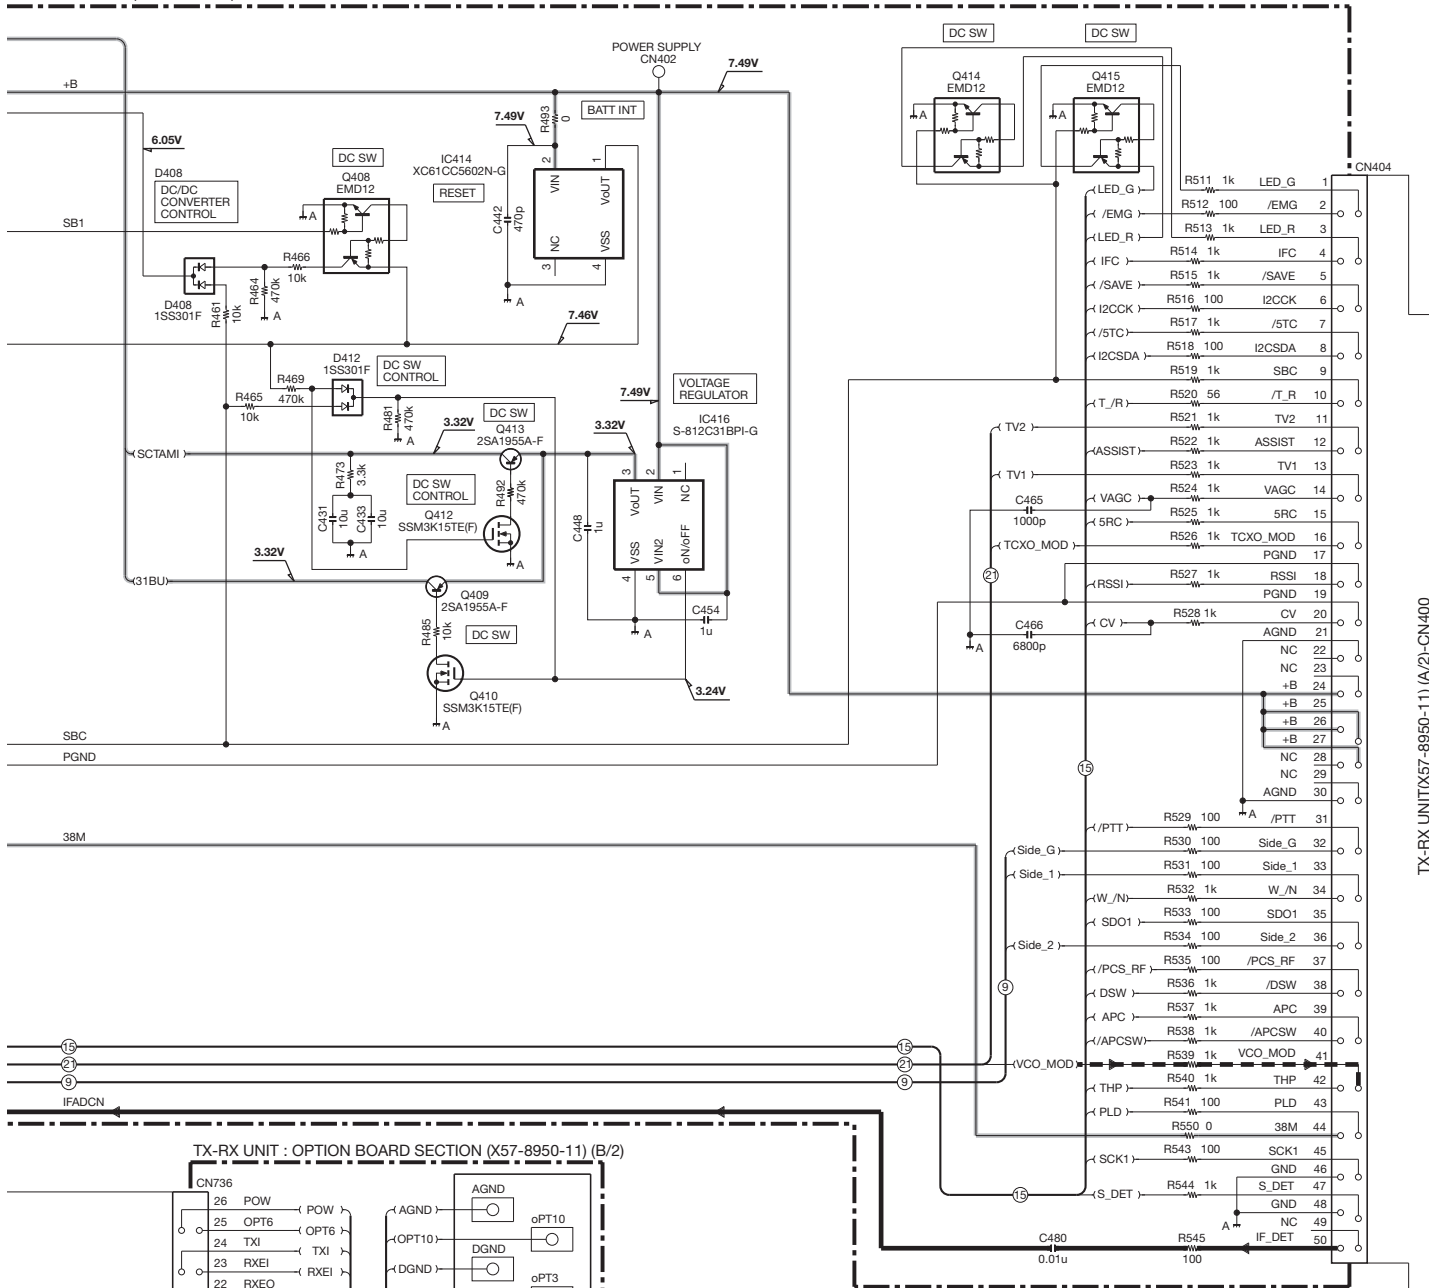

TX-RX UNIT(X57-8950-11) (A/2)-CN400



TX-RX UNIT : OPTION BOARD SECTION (X57-8950-11) (B/2)

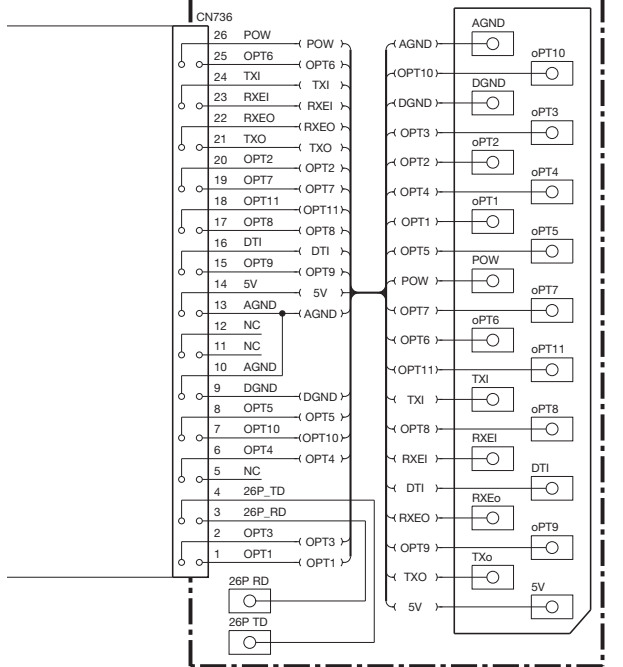

NX-203 SCHEMATIC DIAGRAM


TX-RX UNIT : (X57-8950-11) (A/2)

SWITCH UNIT
(X41-3830-10)

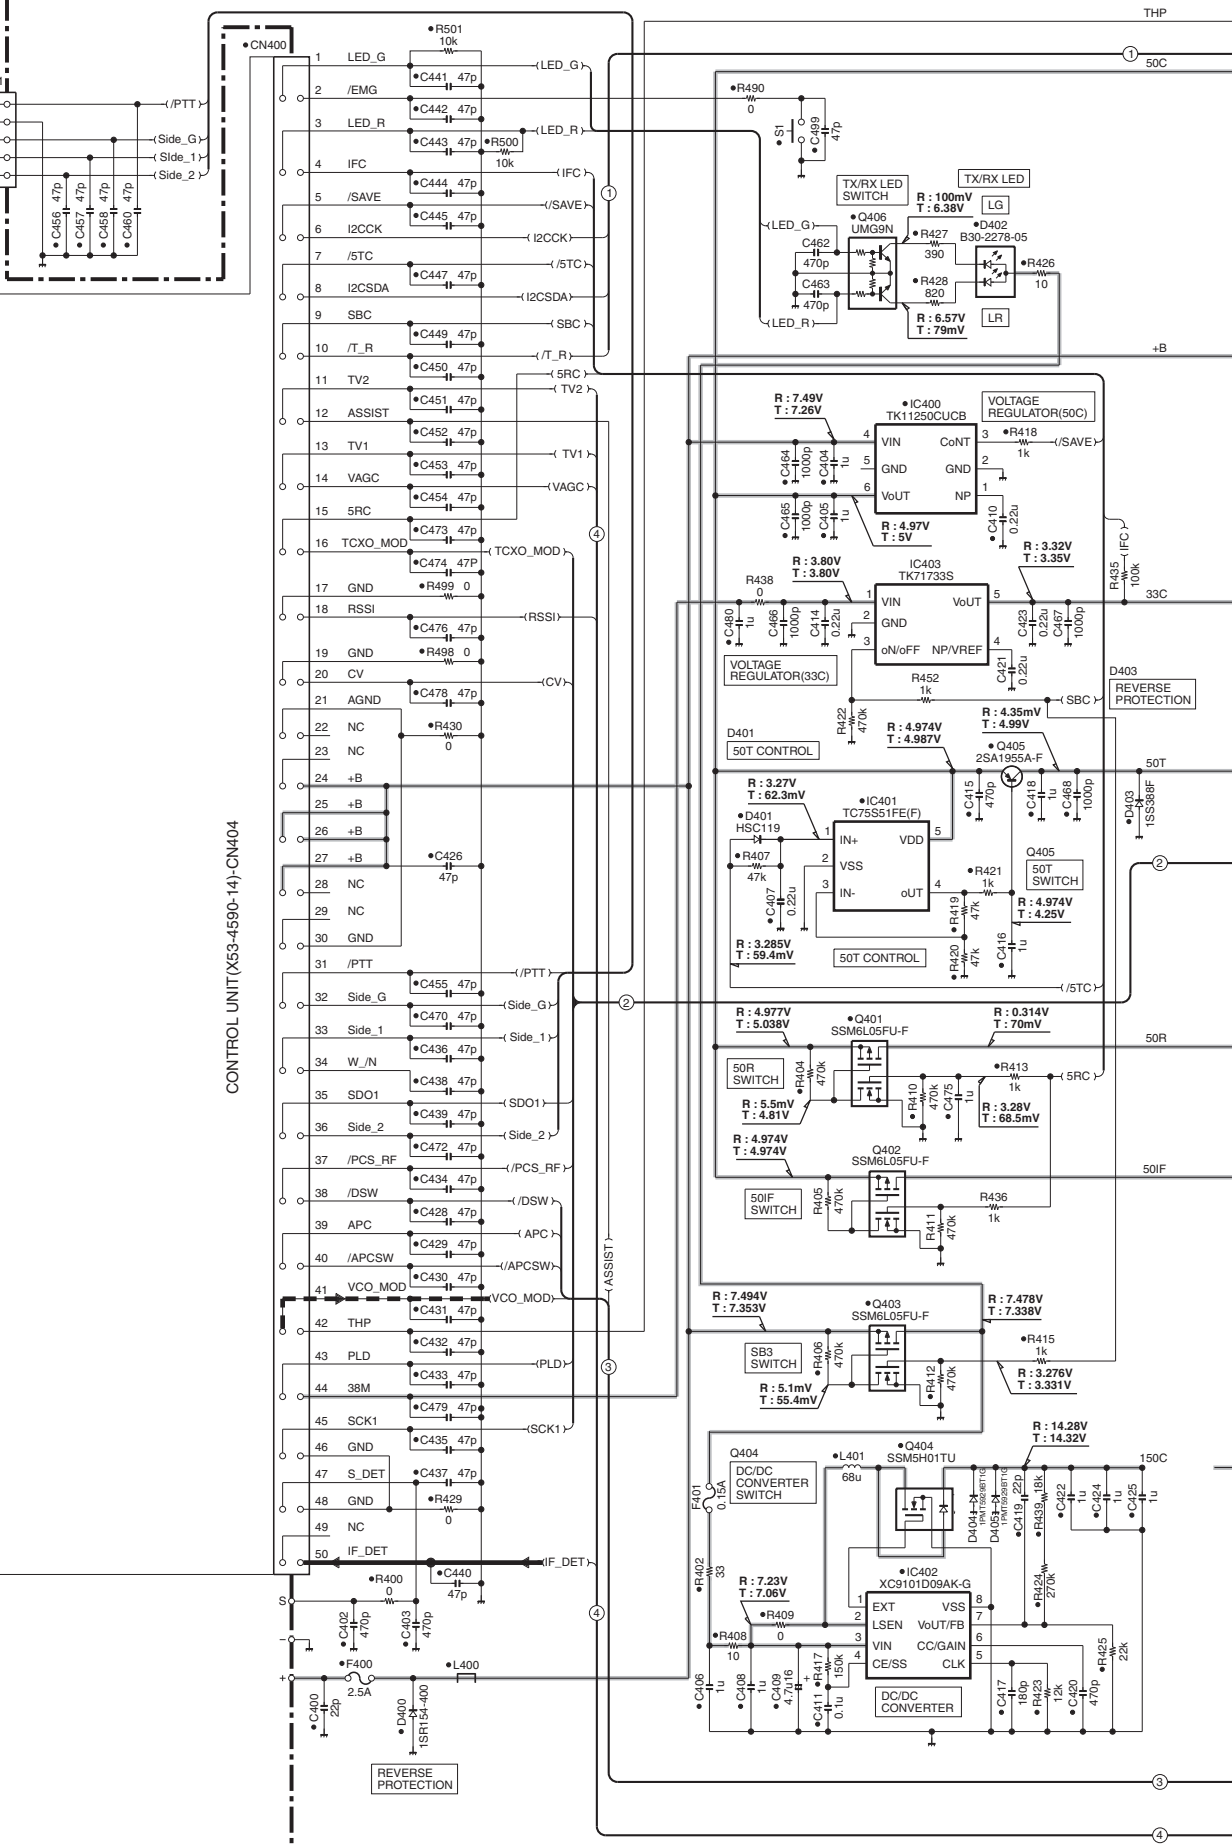


SCHEMATIC DIAGRAM NX-203

TX-RX UNIT (X57-8950-11) (A/2)

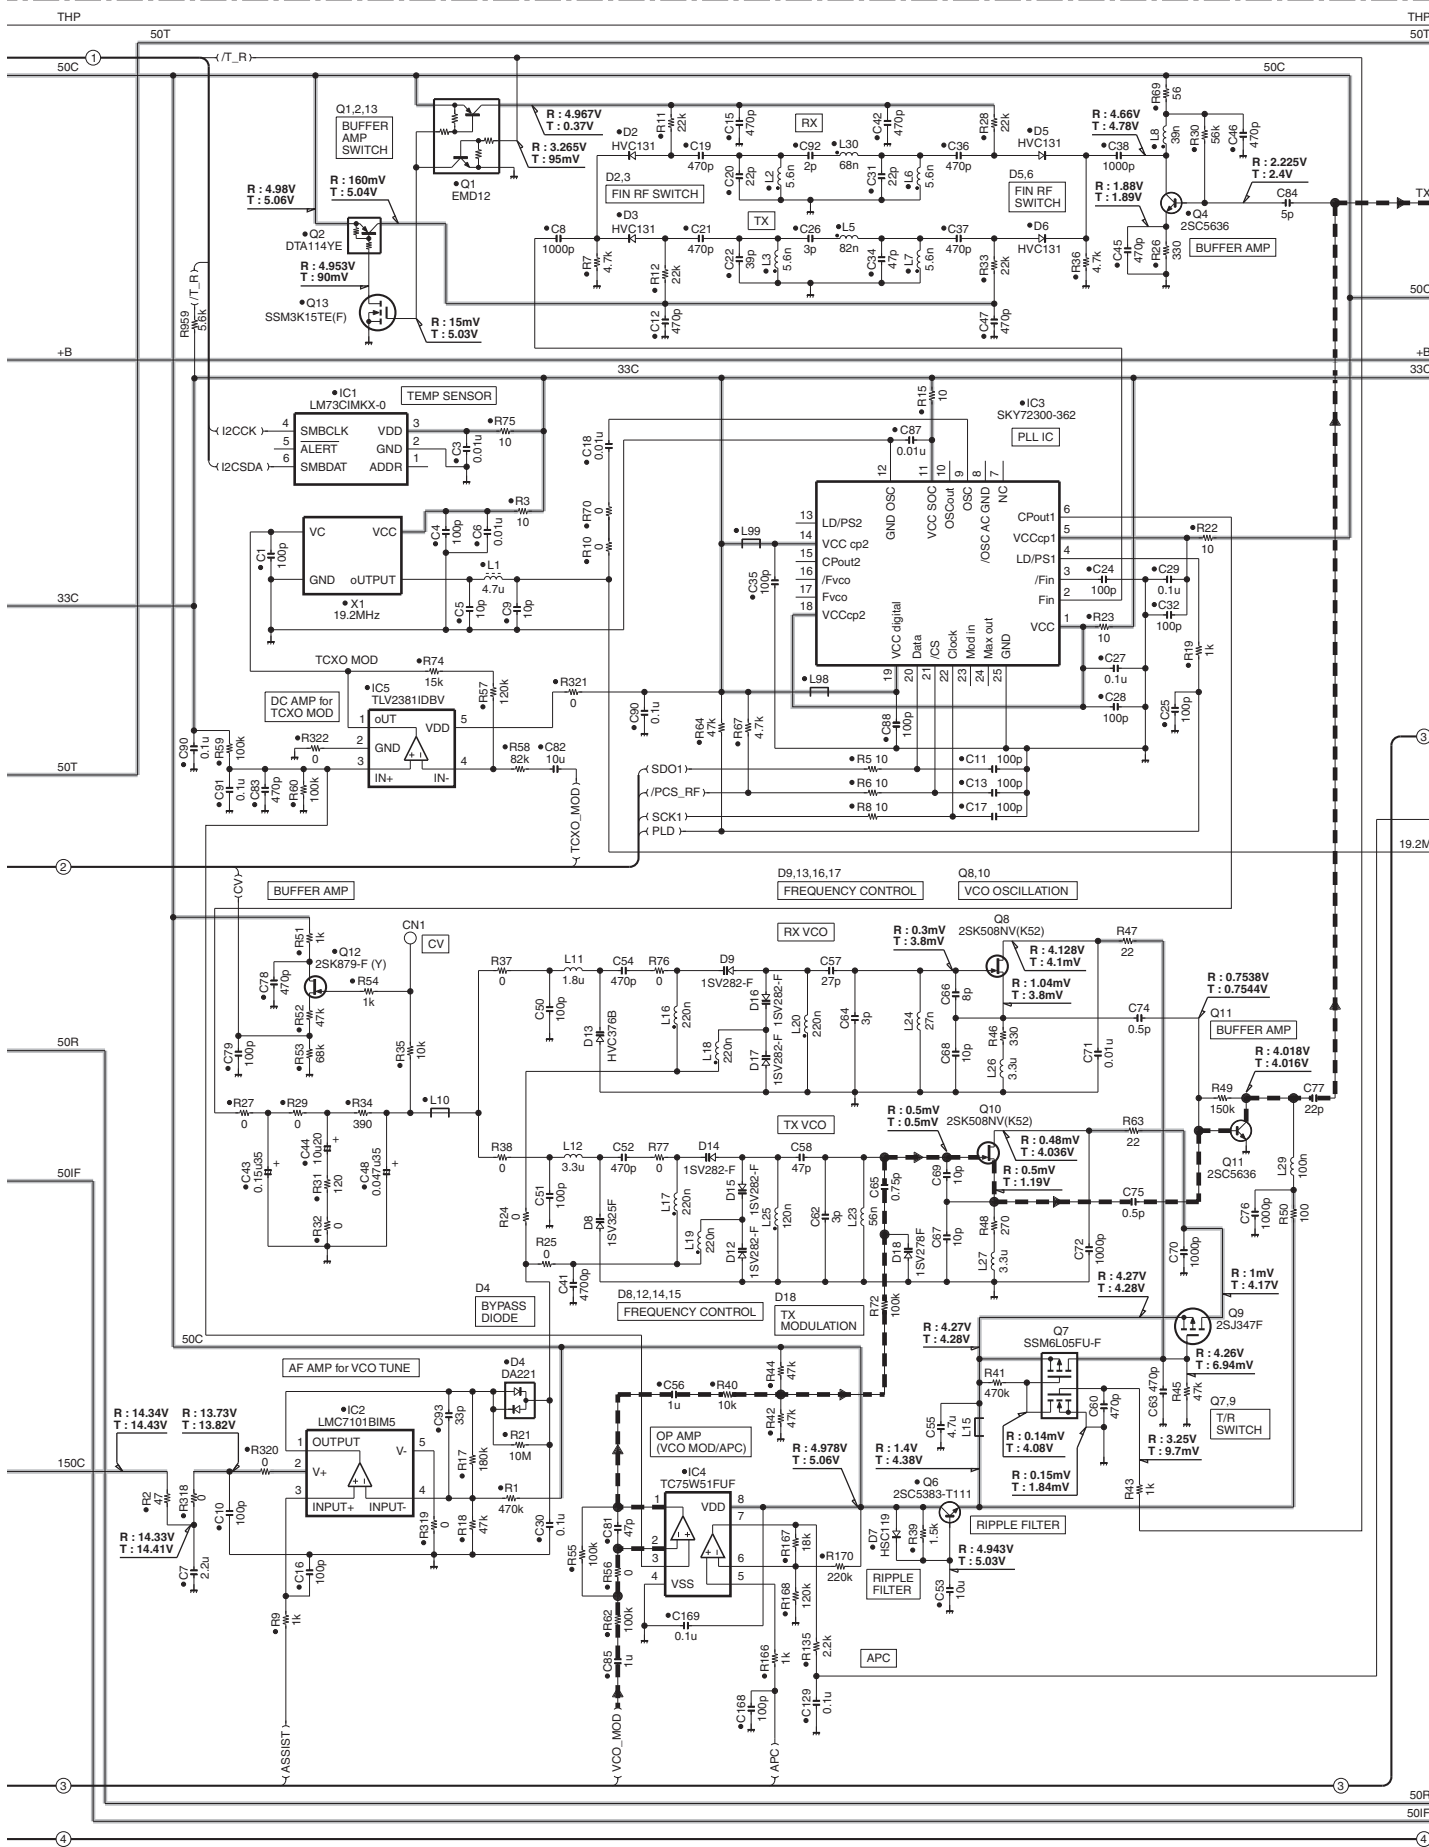


NX-203 SCHEMATIC DIAGRAM

TX-RX UNIT (X57-8950-11) (A/2)

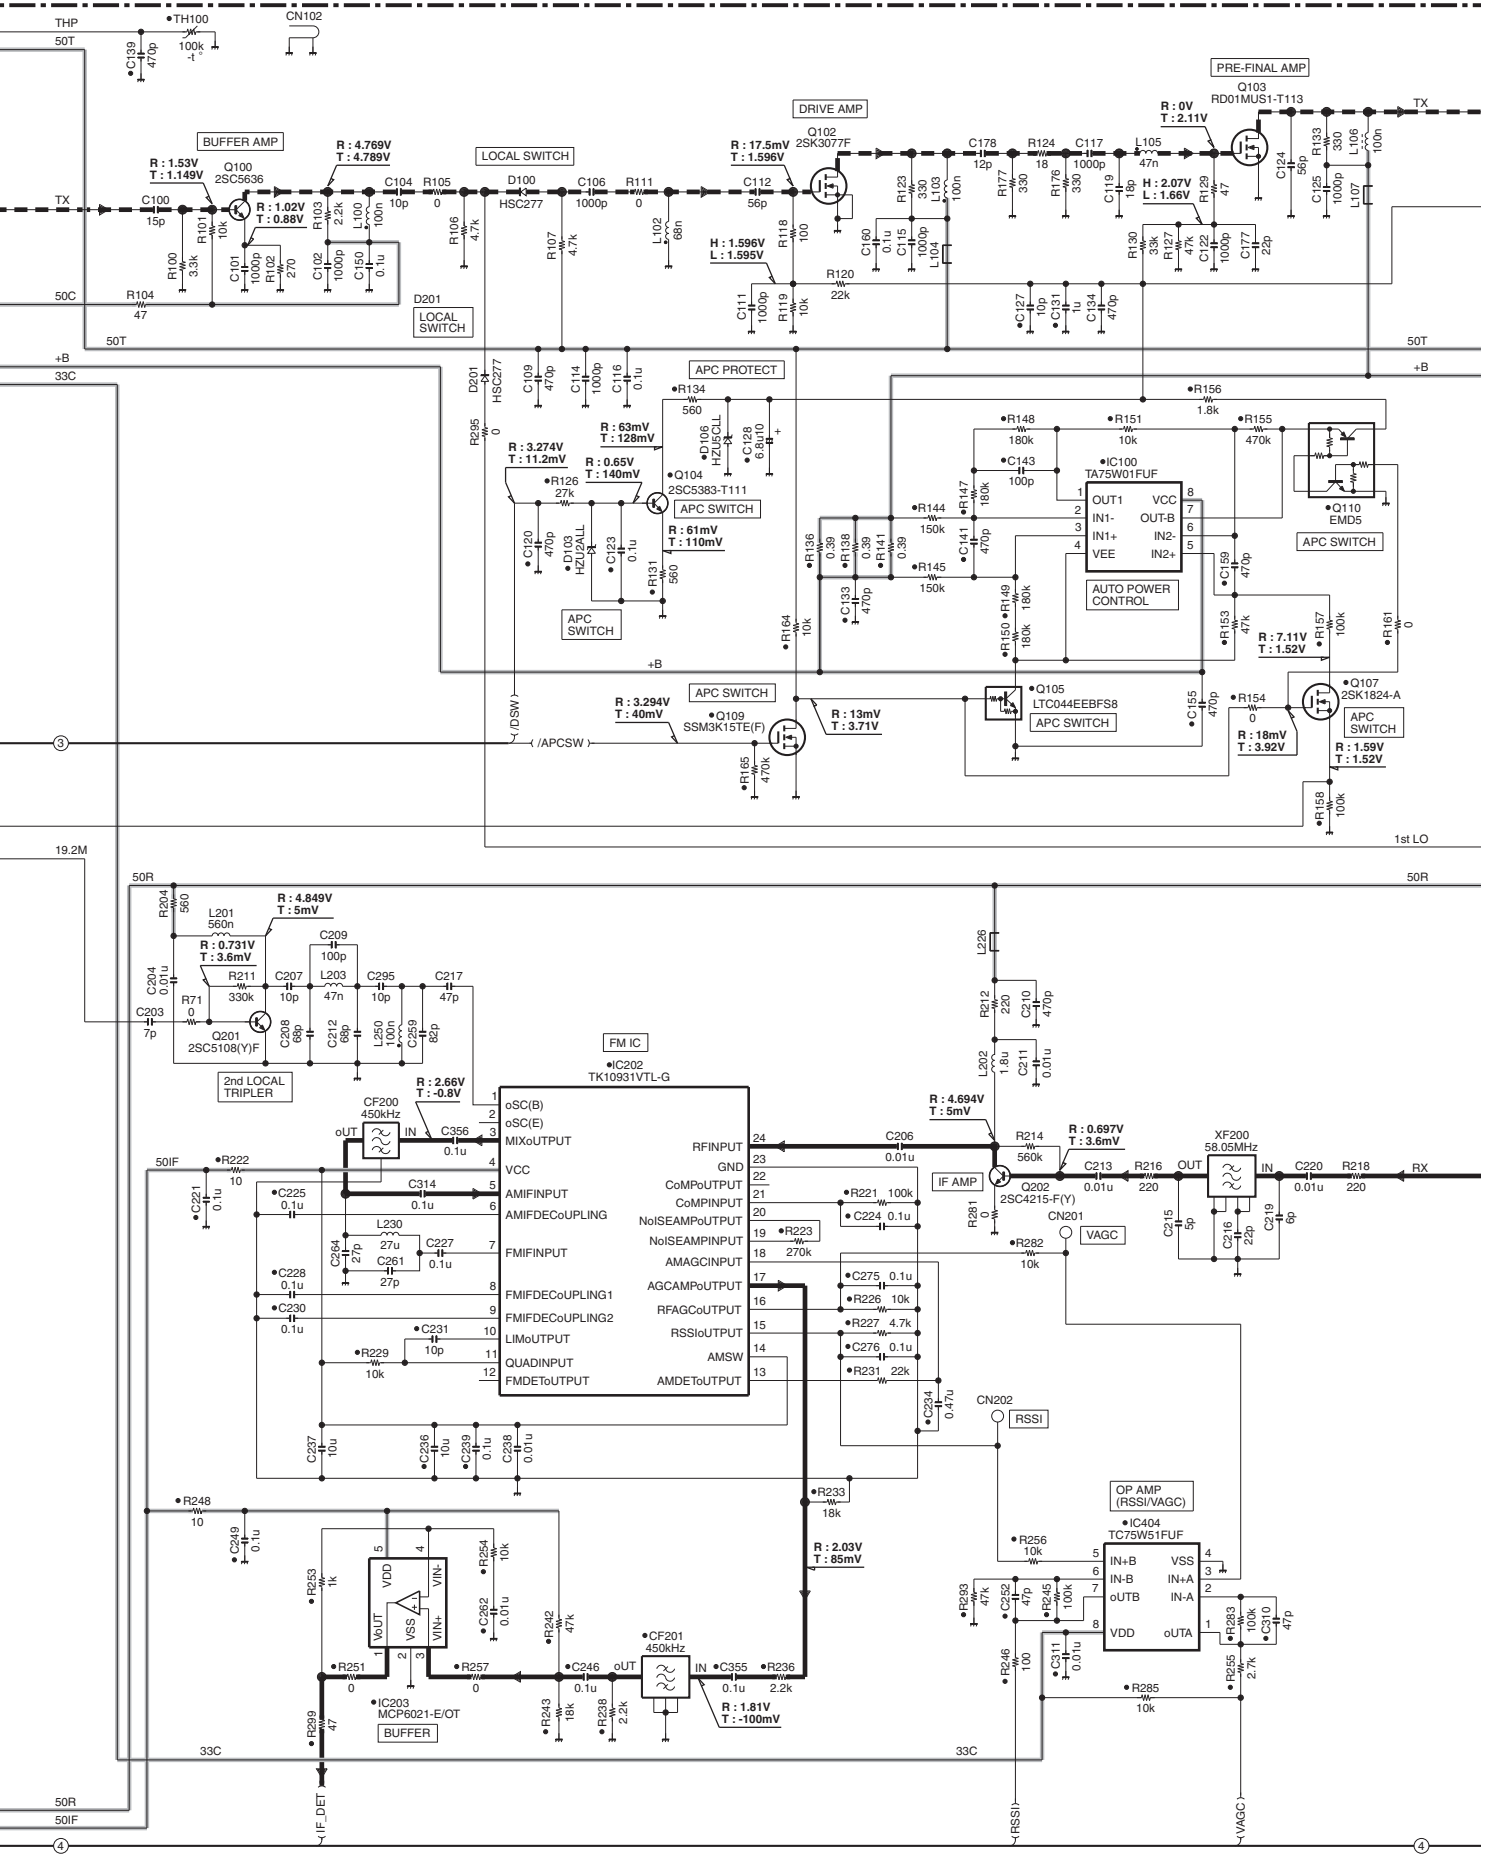

SCHEMATIC DIAGRAM NX-203


TX-RX UNIT (X57-895-11) (A/2)

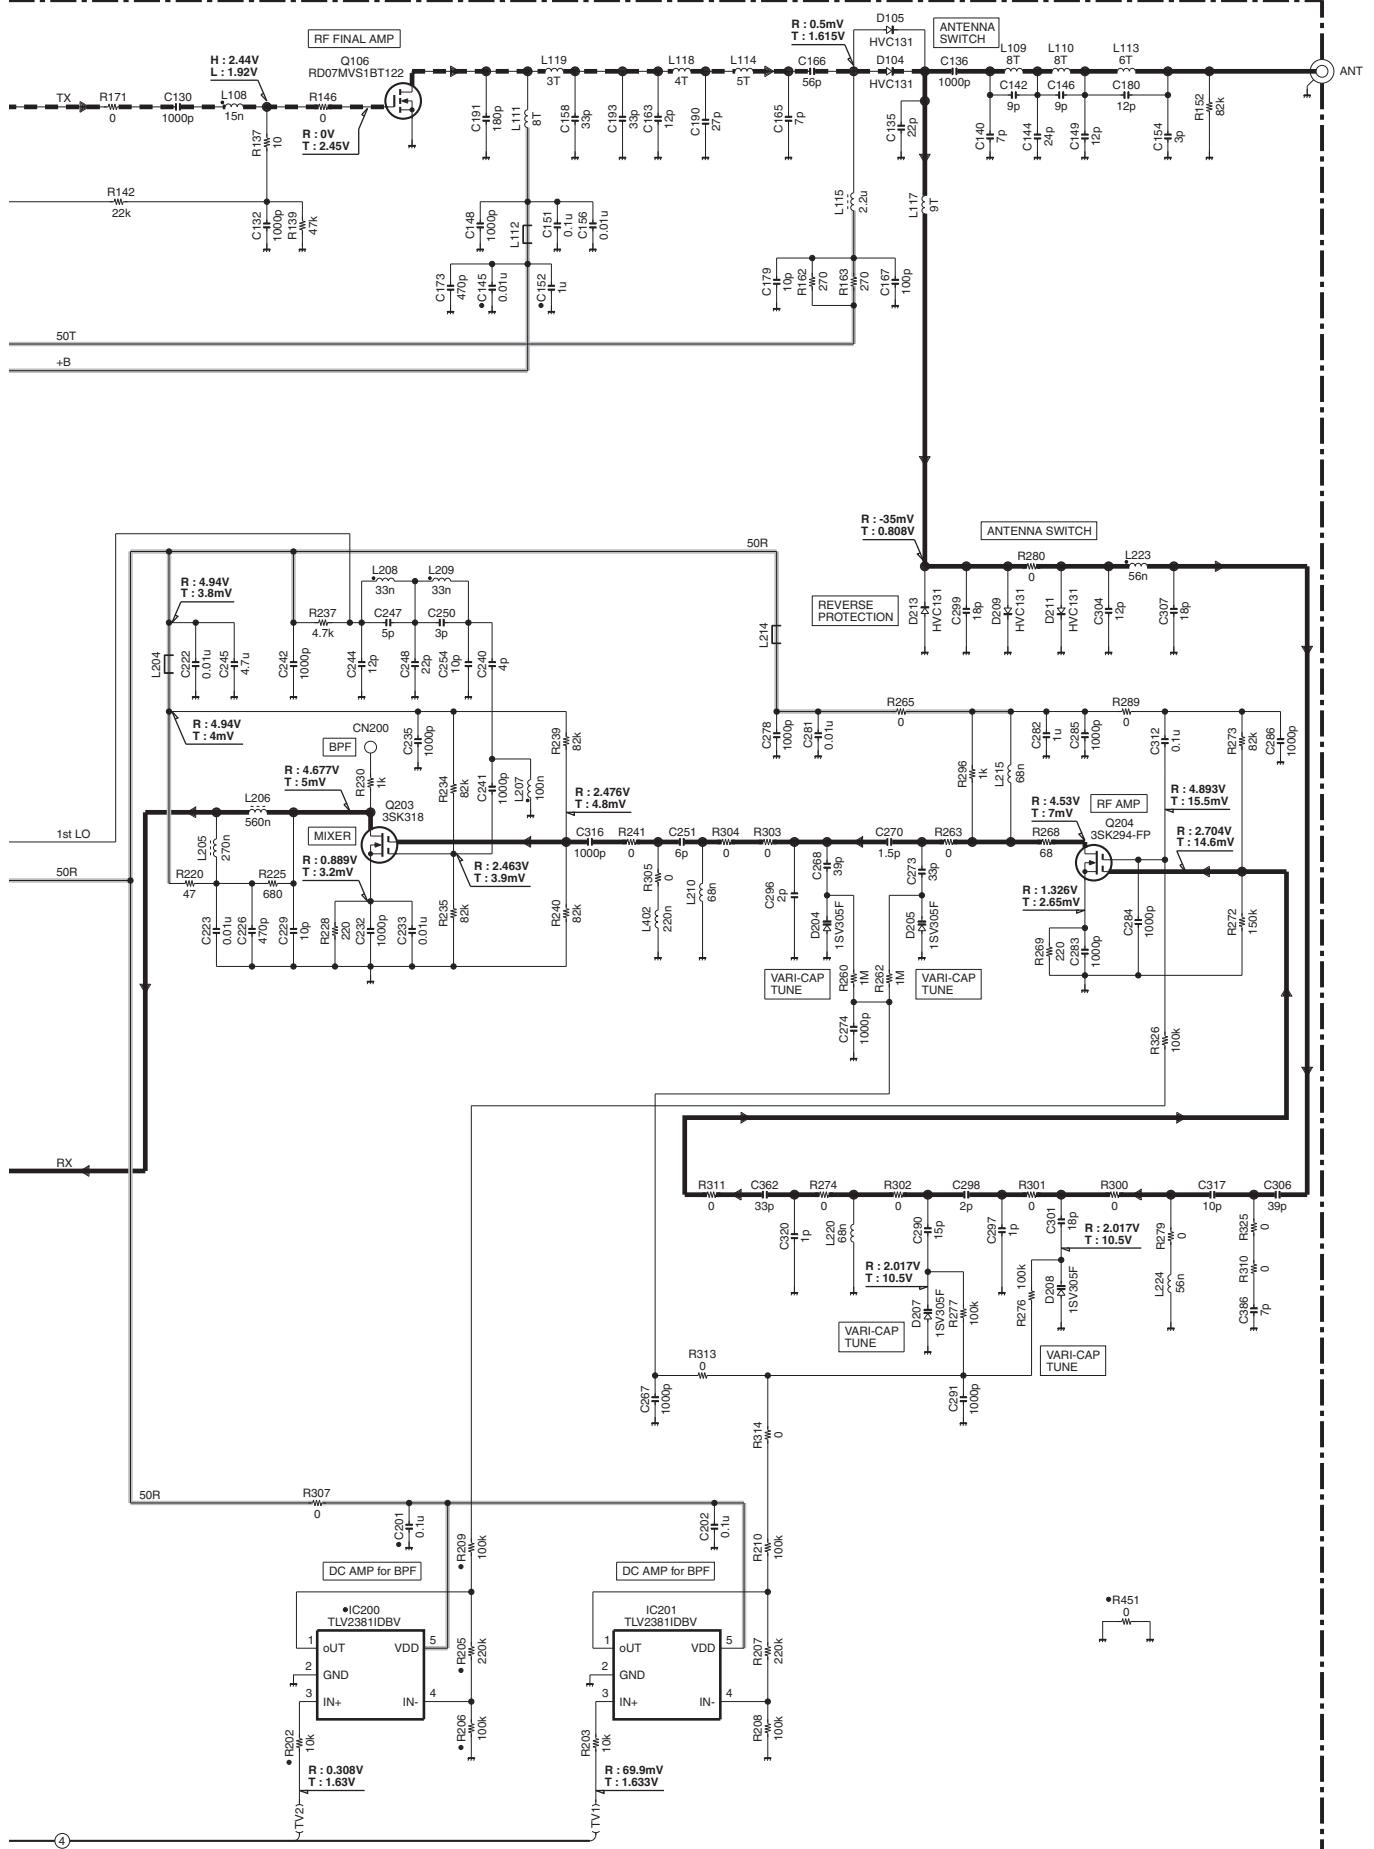


Note : The components marked with a dot (●) are parts of layer 1.

NX-203 BLOCK DIAGRAM

Control unit (X53-4590-14)

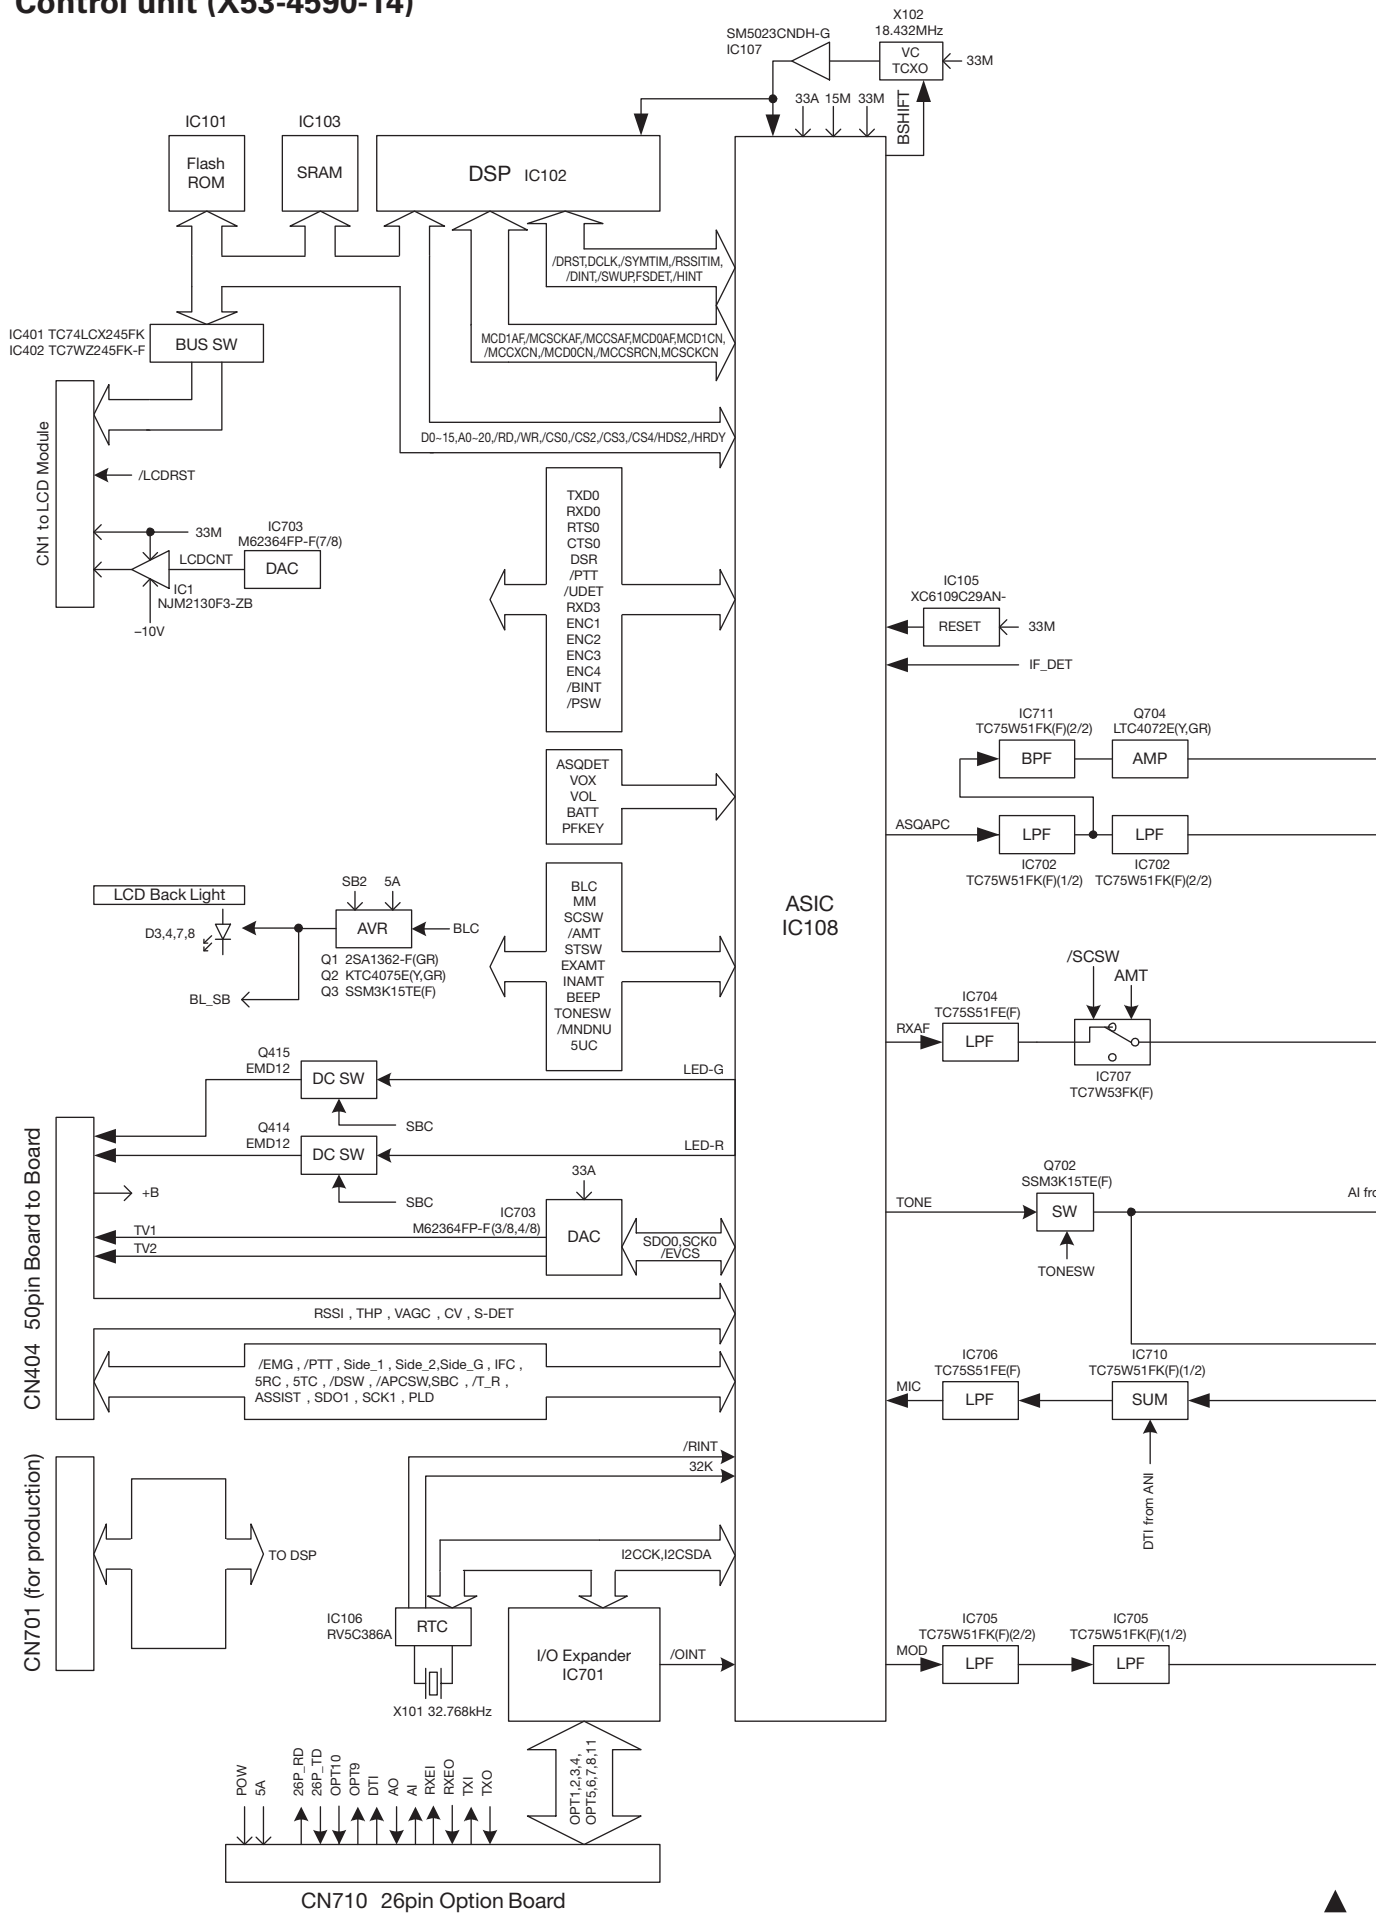


BLOCK DIAGRAM NX-203



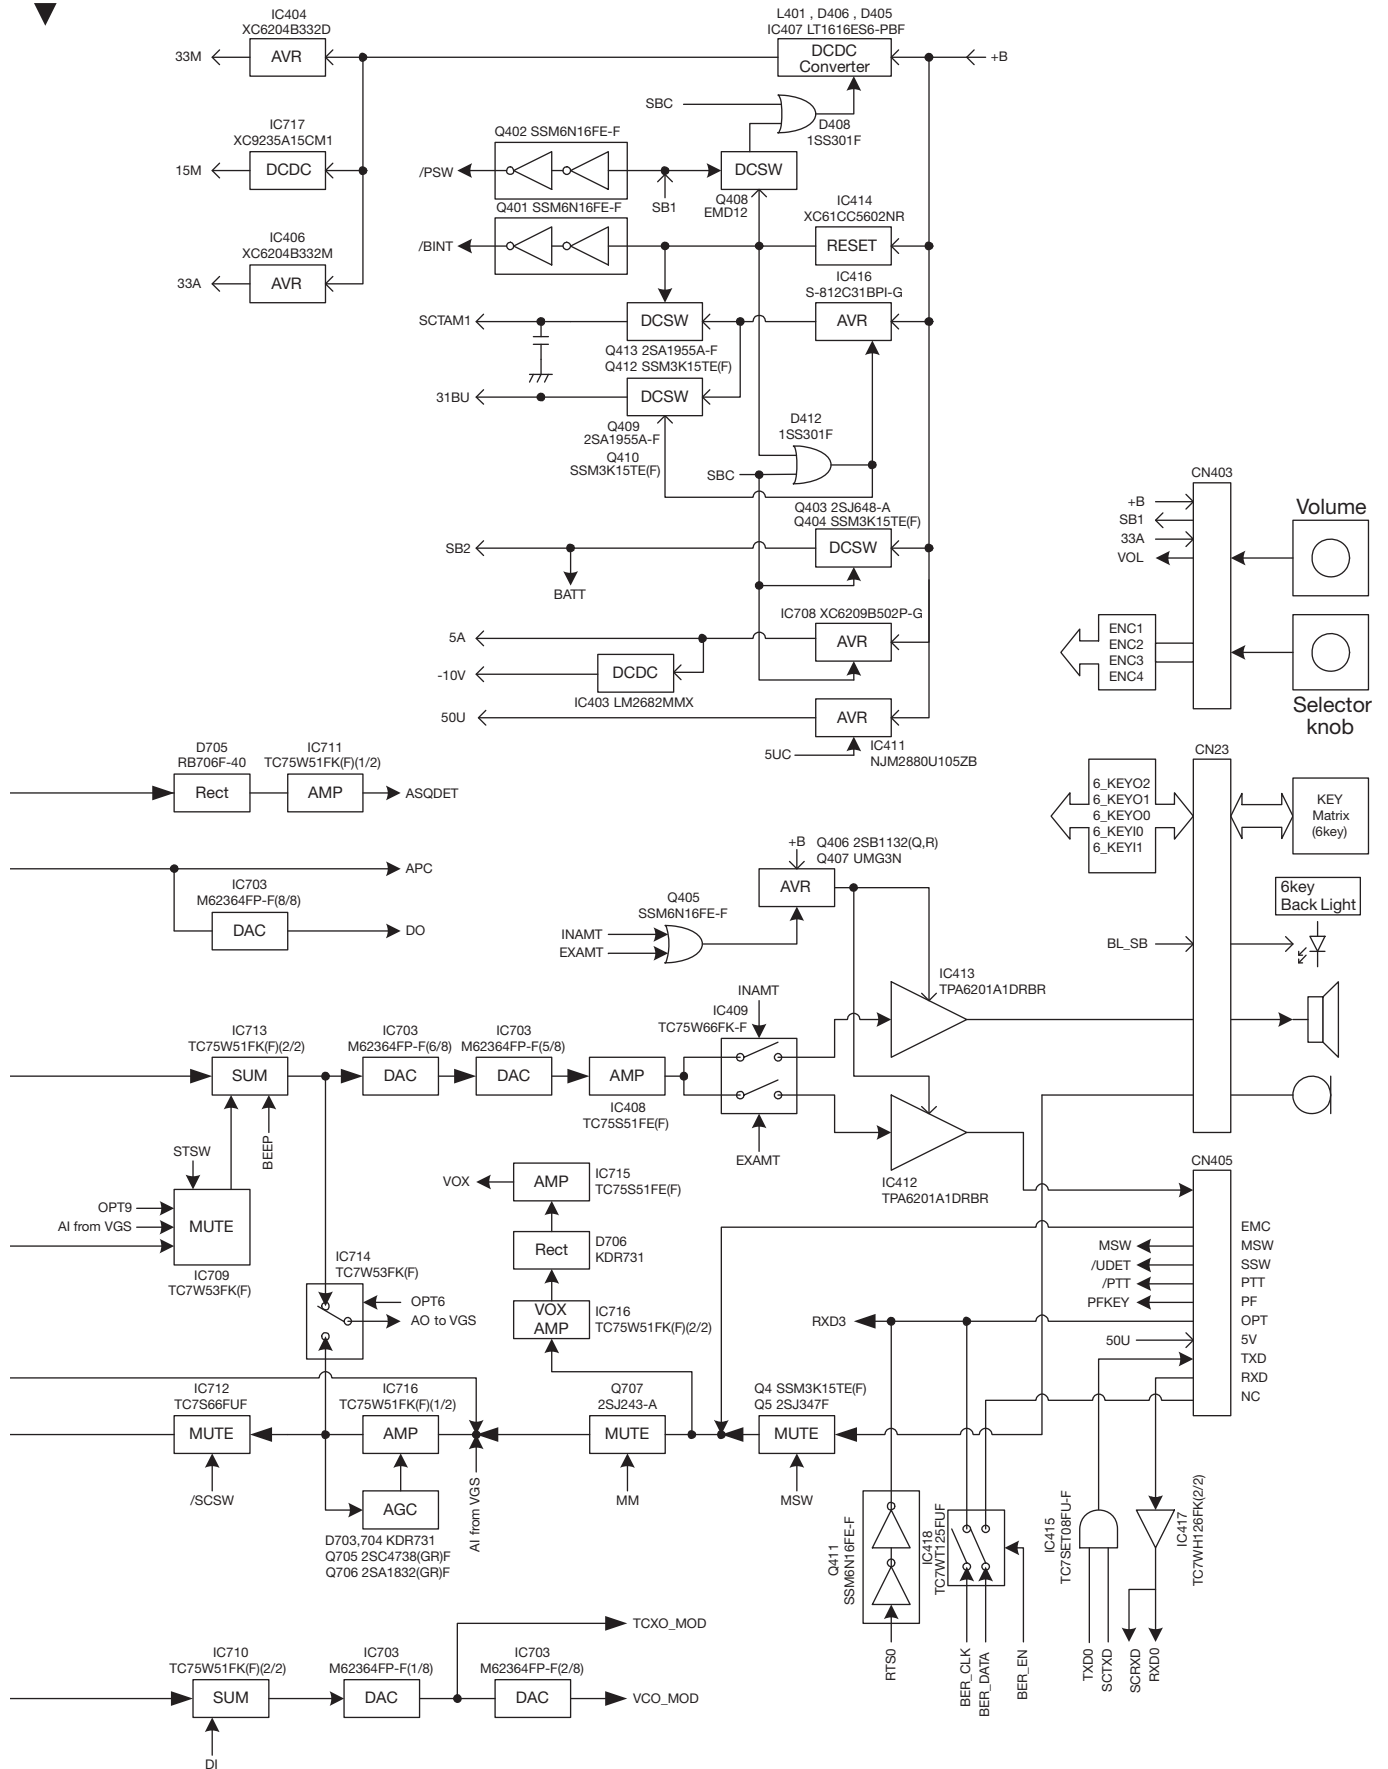


BLOCK DIAGRAM

TX-RX unit (X57-8950-11)

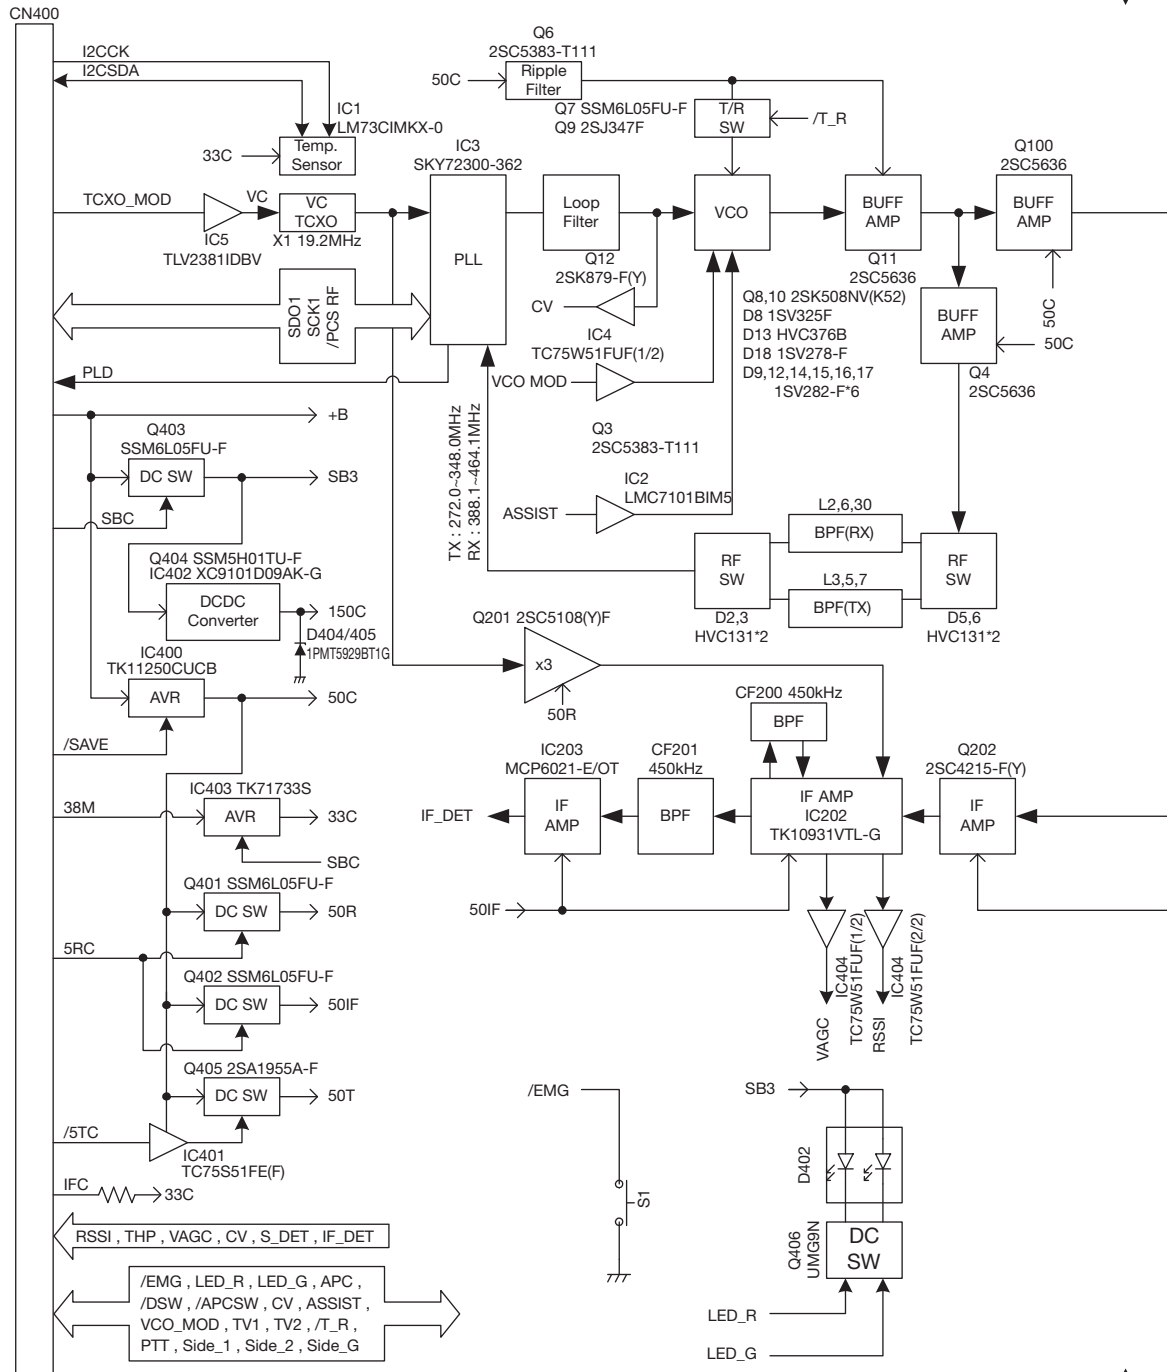


BLOCK DIAGRAM

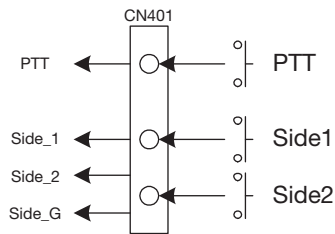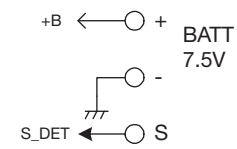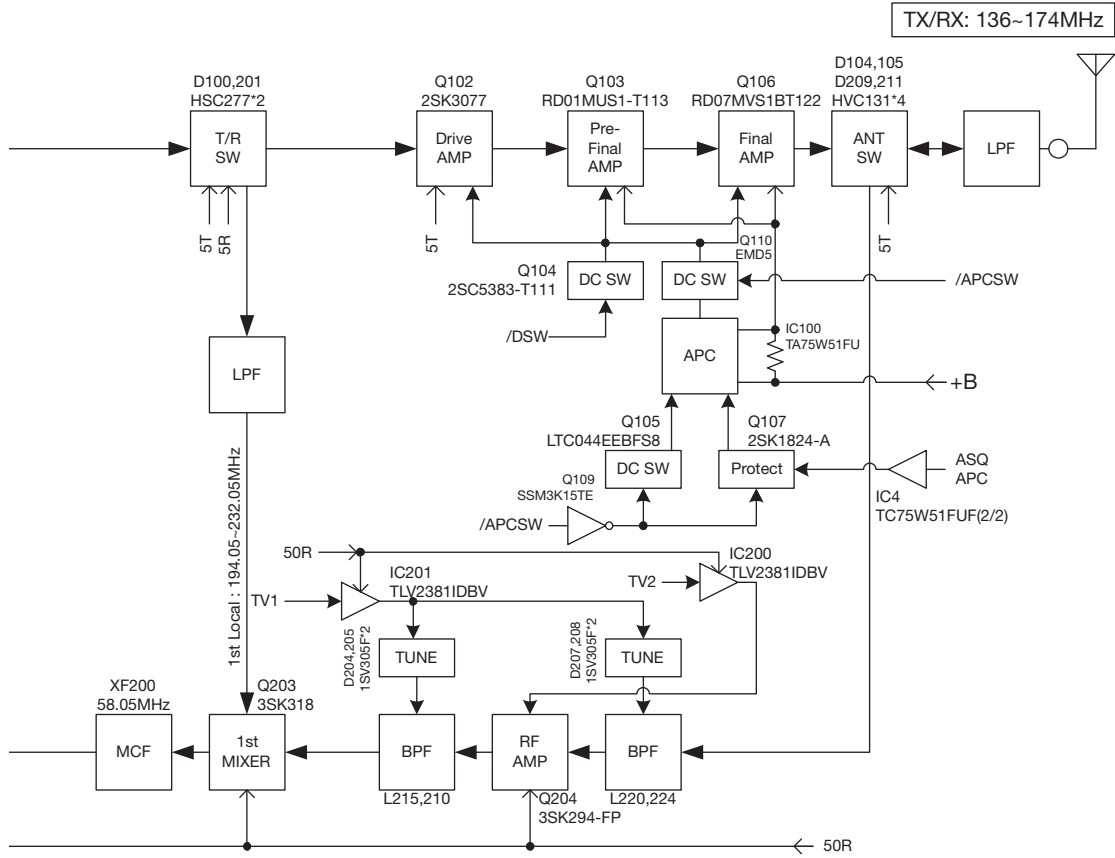


LEVEL DIAGRAM

Receiver Section

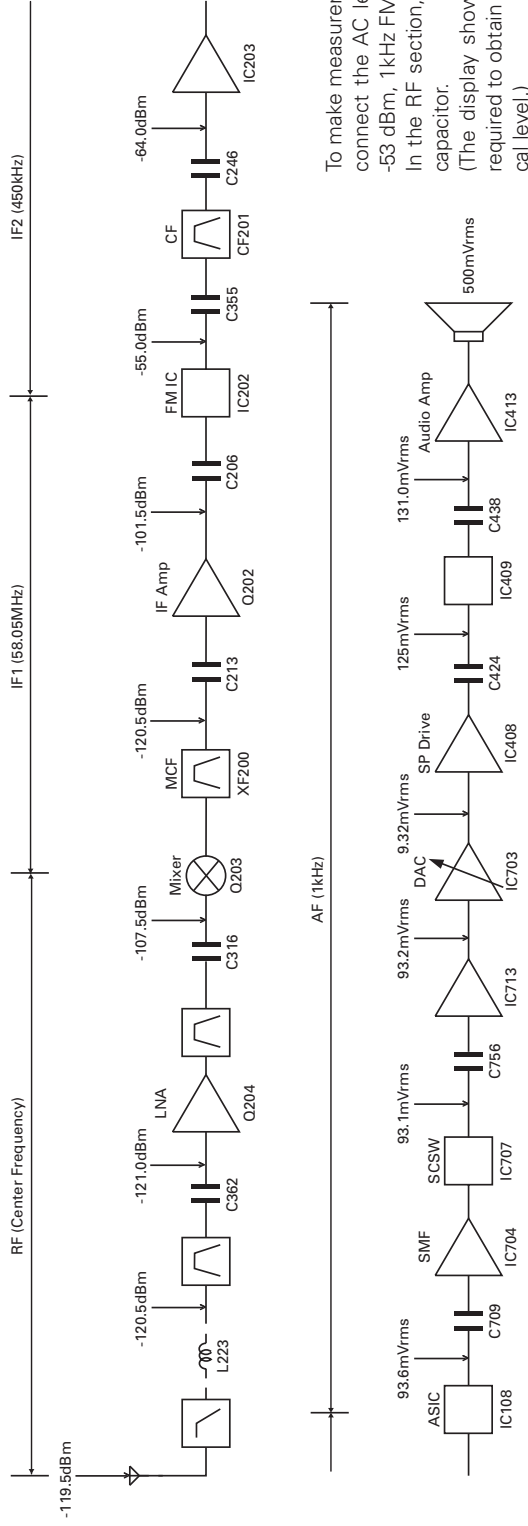

To make measurements in the AF section, connect the AC level meter. (ANT input: -53 dBm, 1kHz FM, 3kHz DEV (Wide)) In the RF section, use a 1000pF capacitor. (The display shows the SSG input value required to obtain 12dB SINAD without local level.)

Transmitter Section

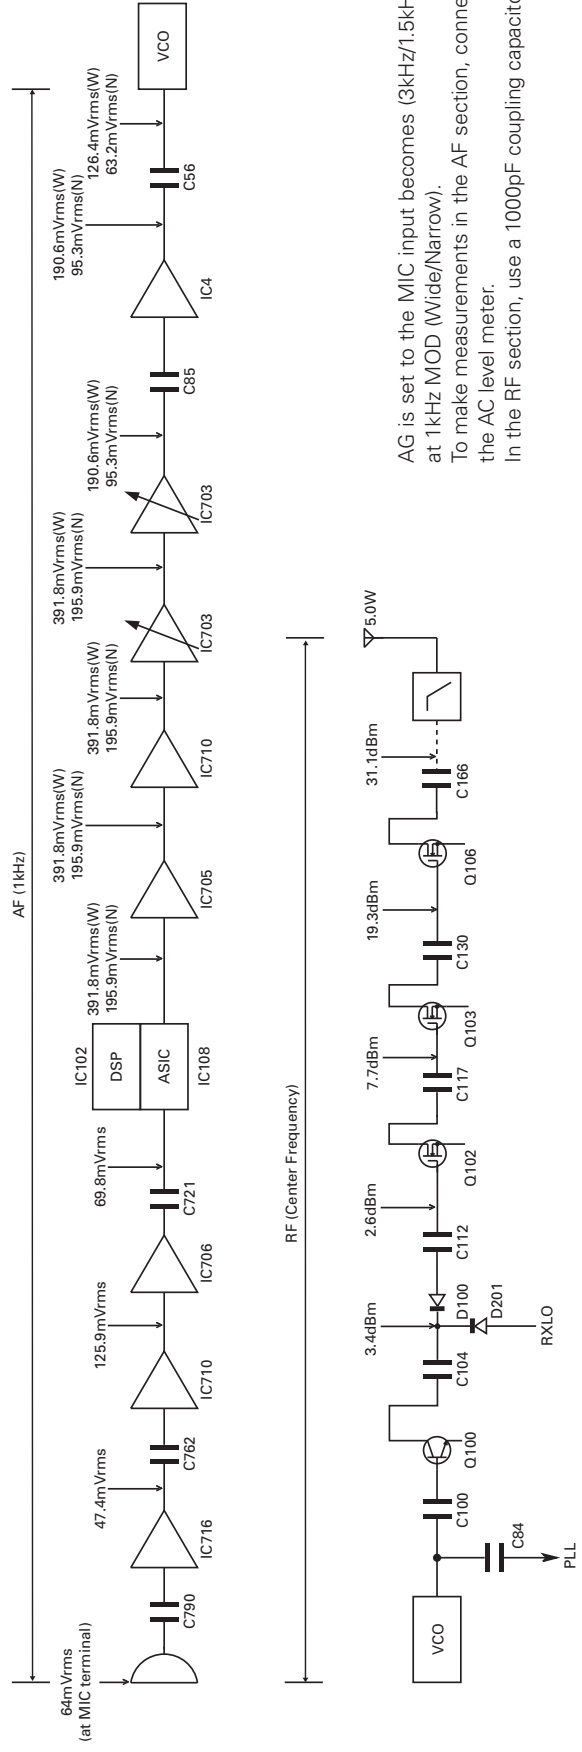

AG is set to the MIC input becomes (3kHz/1.5kHz) at 1kHz MOD (Wide/Narrow). To make measurements in the AF section, connect the AC level meter. In the RF section, use a 1000pF coupling capacitor.

OPTIONAL ACCESSORIES

KNB-50NC (Ni-MH Battery Pack)

■ External View



■ Specifications

Voltage..... 7.2V
Battery capacity..... 2000mAh

SPECIFICATIONS

GENERAL

| | |
|---|---|
| Frequency Range..... | 136~174 MHz |
| Number of Channels..... | 512 |
| Zones..... | 128 |
| Max. Channels per Zone..... | 250 |
| Channel Spacing..... | Analog: 12.5/15/25/30 kHz Digital: 6.25/12.5 kHz |
| Operating Voltage..... | 7.5V DC \pm 20% |
| Battery Life (with KNB-50NC)..... | 5-5-90 duty cycle: More than 11 hours 10-10-80 duty cycle: More than 7 hours |
| Operating Temperature Range..... | -22°F to +140°F (-30°C to +60°C) |
| Frequency Stability..... | \pm 2.0ppm |
| Antenna Impedance..... | 50 Ω |
| Dimensions (W x H x D) (Projections not included) | |
| Radio only..... | 2.28 x 5.02 x 1.63 in. (58 x 127.5 x 41.3 mm) |
| with KNB-50NC..... | 2.28 x 5.02 x 2.01 in. (58 x 127.5 x 51.1 mm) |
| Weight | |
| Radio only..... | 8.82 oz (250 g) |
| with KNB-50NC..... | 18.70 oz (530 g) |

RECEIVER

| | |
|---------------------------------|---|
| Sensitivity..... | Digital @6.25kHz (3% BER): 0.20 μ V Digital @12.5kHz (3% BER): 0.25 μ V Analog (12dB SINAD): 0.25 μ V |
| Selectivity..... | Analog @25kHz: 72dB Analog @12.5kHz: 65dB |
| Intermodulation Distortion..... | Analog: 70dB (\pm 50, 100kHz) |
| Spurious Response..... | Analog: 70dB |
| Audio Distortion..... | Less than 3% |
| Audio Output..... | 500mW/8 Ω |

TRANSMITTER

| | |
|------------------------|--|
| RF Power Output..... | 5W/1W |
| Spurious Response..... | 70dB |
| FM Hum and Noise..... | Analog @25kHz: 45dB Analog @12.5kHz: 40dB |
| Audio Distortion..... | Less than 3% |
| Modulation..... | 16K0F3E, 11K0F3E, 8K30F1E, 8K30F1D, 8K30F7W, 4K00F1E, 4K00F1D, 4K00F7W, 4K00F2D |

Analog measurements made per TIA/EIA 603 and specifications shown are typical.

JVC KENWOOD Corporation reserves the right to change specifications without prior notice or obligation.

MEMO



KENWOOD


JVCKENWOOD Corporation
Communications Systems Business Unit

NX-203 PC BOARD

PC BOARD NX-203


CONTROL UNIT (X53-4590-14)
Component side view (J79-0131-39)

CONTROL UNIT (X53-4590-14)
Component side view (J79-0131-39)

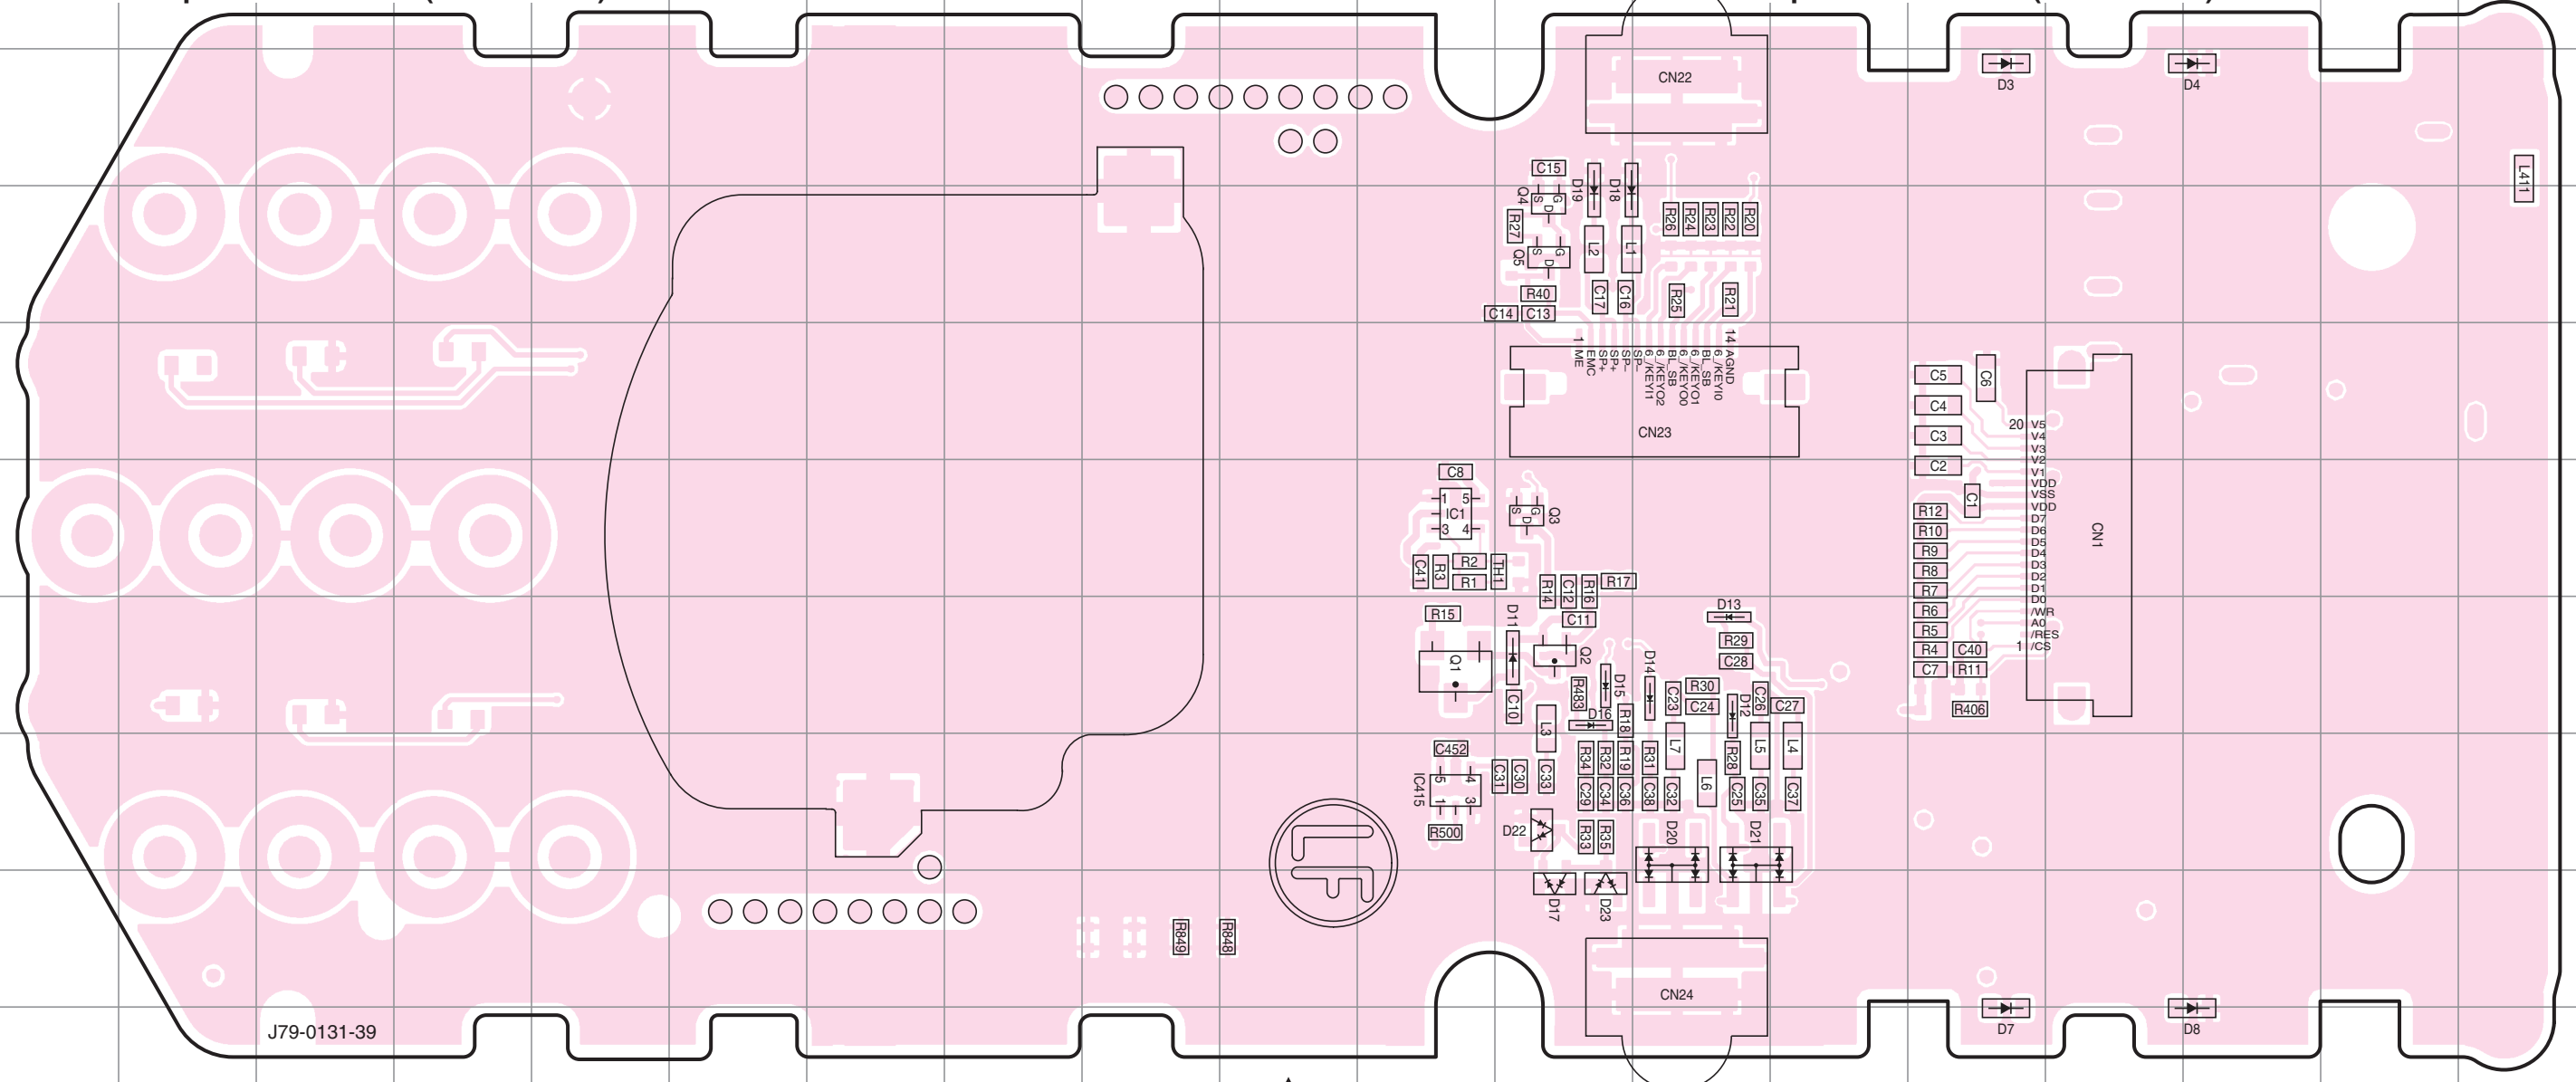

J79-0131-39

| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|
| IC1 | 6K | D8 | 10Q | D20 | 8M |
| IC415 | 8K | D11 | 7L | D21 | 8M |
| Q1 | 7K | D12 | 7M | D22 | 8L |
| Q2 | 7L | D13 | 7M | D23 | 9L |
| Q3 | 6L | D14 | 7M | | |
| Q4 | 4L | D15 | 7L | | |
| Q5 | 4L | D16 | 7L | | |
| D3 | 3O | D17 | 9L | | |
| D4 | 3Q | D18 | 4L | | |
| D7 | 10O | D19 | 4L | | |

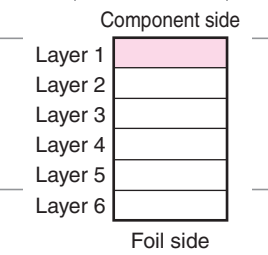


NX-203 PC BOARD

PC BOARD NX-203


CONTROL UNIT (X53-4590-14)
Foil side view (J79-0131-39)

CONTROL UNIT (X53-4590-14)
Foil side view (J79-0131-39)

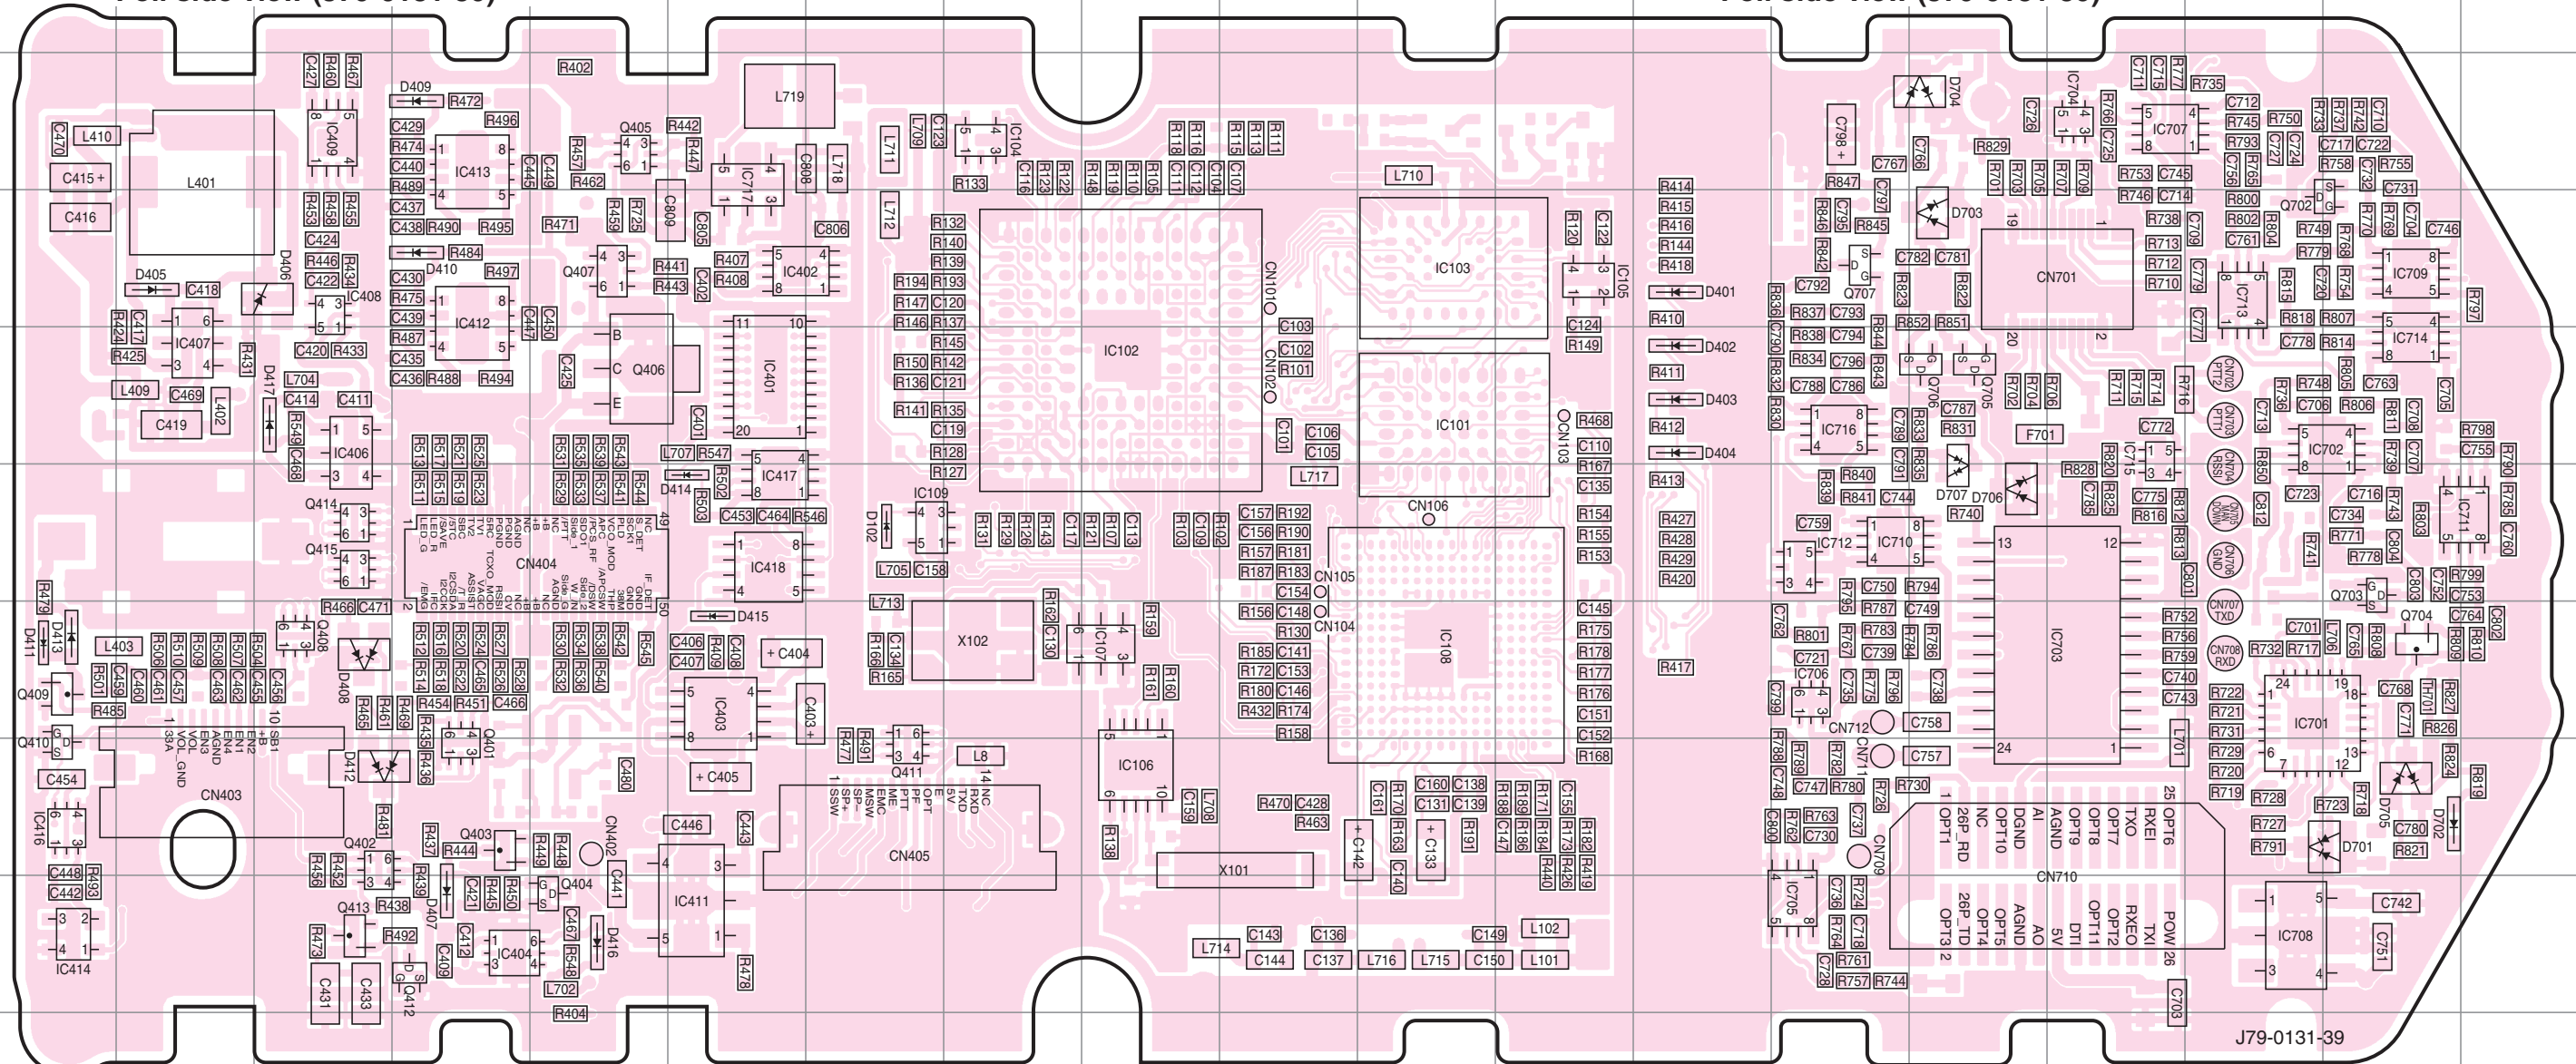

J79-0131-39

| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|
| IC101 | 5K | IC404 | 9D | IC701 | 7Q | IC713 | 4Q | Q408 | 7C | Q706 | 5O | D410 | 4D | D705 | 8R |
| IC102 | 5I | IC406 | 5C | IC702 | 5R | IC714 | 5P | Q409 | 7A | Q707 | 4N | D411 | 7A | D706 | 6O |
| IC103 | 4K | IC407 | 5B | IC703 | 7P | IC715 | 5P | Q410 | 8A | D102 | 6G | D412 | 8C | D707 | 6O |
| IC104 | 3H | IC408 | 4C | IC704 | 3P | IC716 | 5N | Q411 | 8G | D401 | 4M | D413 | 7A | | |
| IC105 | 4L | IC409 | 3C | IC705 | 9N | IC717 | 3F | Q412 | 9D | D402 | 5M | D414 | 6F | | |
| IC106 | 8I | IC411 | 9F | IC706 | 7N | Q401 | 8D | Q413 | 9C | D403 | 5M | D415 | 7F | | |
| IC107 | 7I | IC412 | 4D | IC707 | 3P | Q402 | 8C | Q414 | 6C | D404 | 5M | D416 | 9E | | |
| IC108 | 7K | IC413 | 3D | IC708 | 9Q | Q403 | 8D | Q415 | 6C | D405 | 4B | D417 | 5C | | |
| IC109 | 6G | IC414 | 9A | IC709 | 4R | Q404 | 9E | Q702 | 4R | D406 | 4C | D701 | 8R | | |
| IC401 | 5F | IC416 | 8A | IC710 | 6N | Q405 | 3E | Q703 | 6R | D407 | 9D | D702 | 8R | | |
| IC402 | 4F | IC417 | 6F | IC711 | 6S | Q406 | 5E | Q704 | 7R | D408 | 7C | D703 | 4O | | |
| IC403 | 7F | IC418 | 6F | IC712 | 6N | Q407 | 4E | Q705 | 5O | D409 | 3D | D704 | 3O | | |

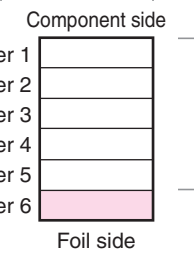


NX-203 PC BOARD



PC BOARD NX-203

TX-RX UNIT (X57-8950-11) (A/2)
Component side view (J79-0434-09 A/2)


TX-RX UNIT (X57-8950-11) (A/2)
Component side view (J79-0434-09 A/2)

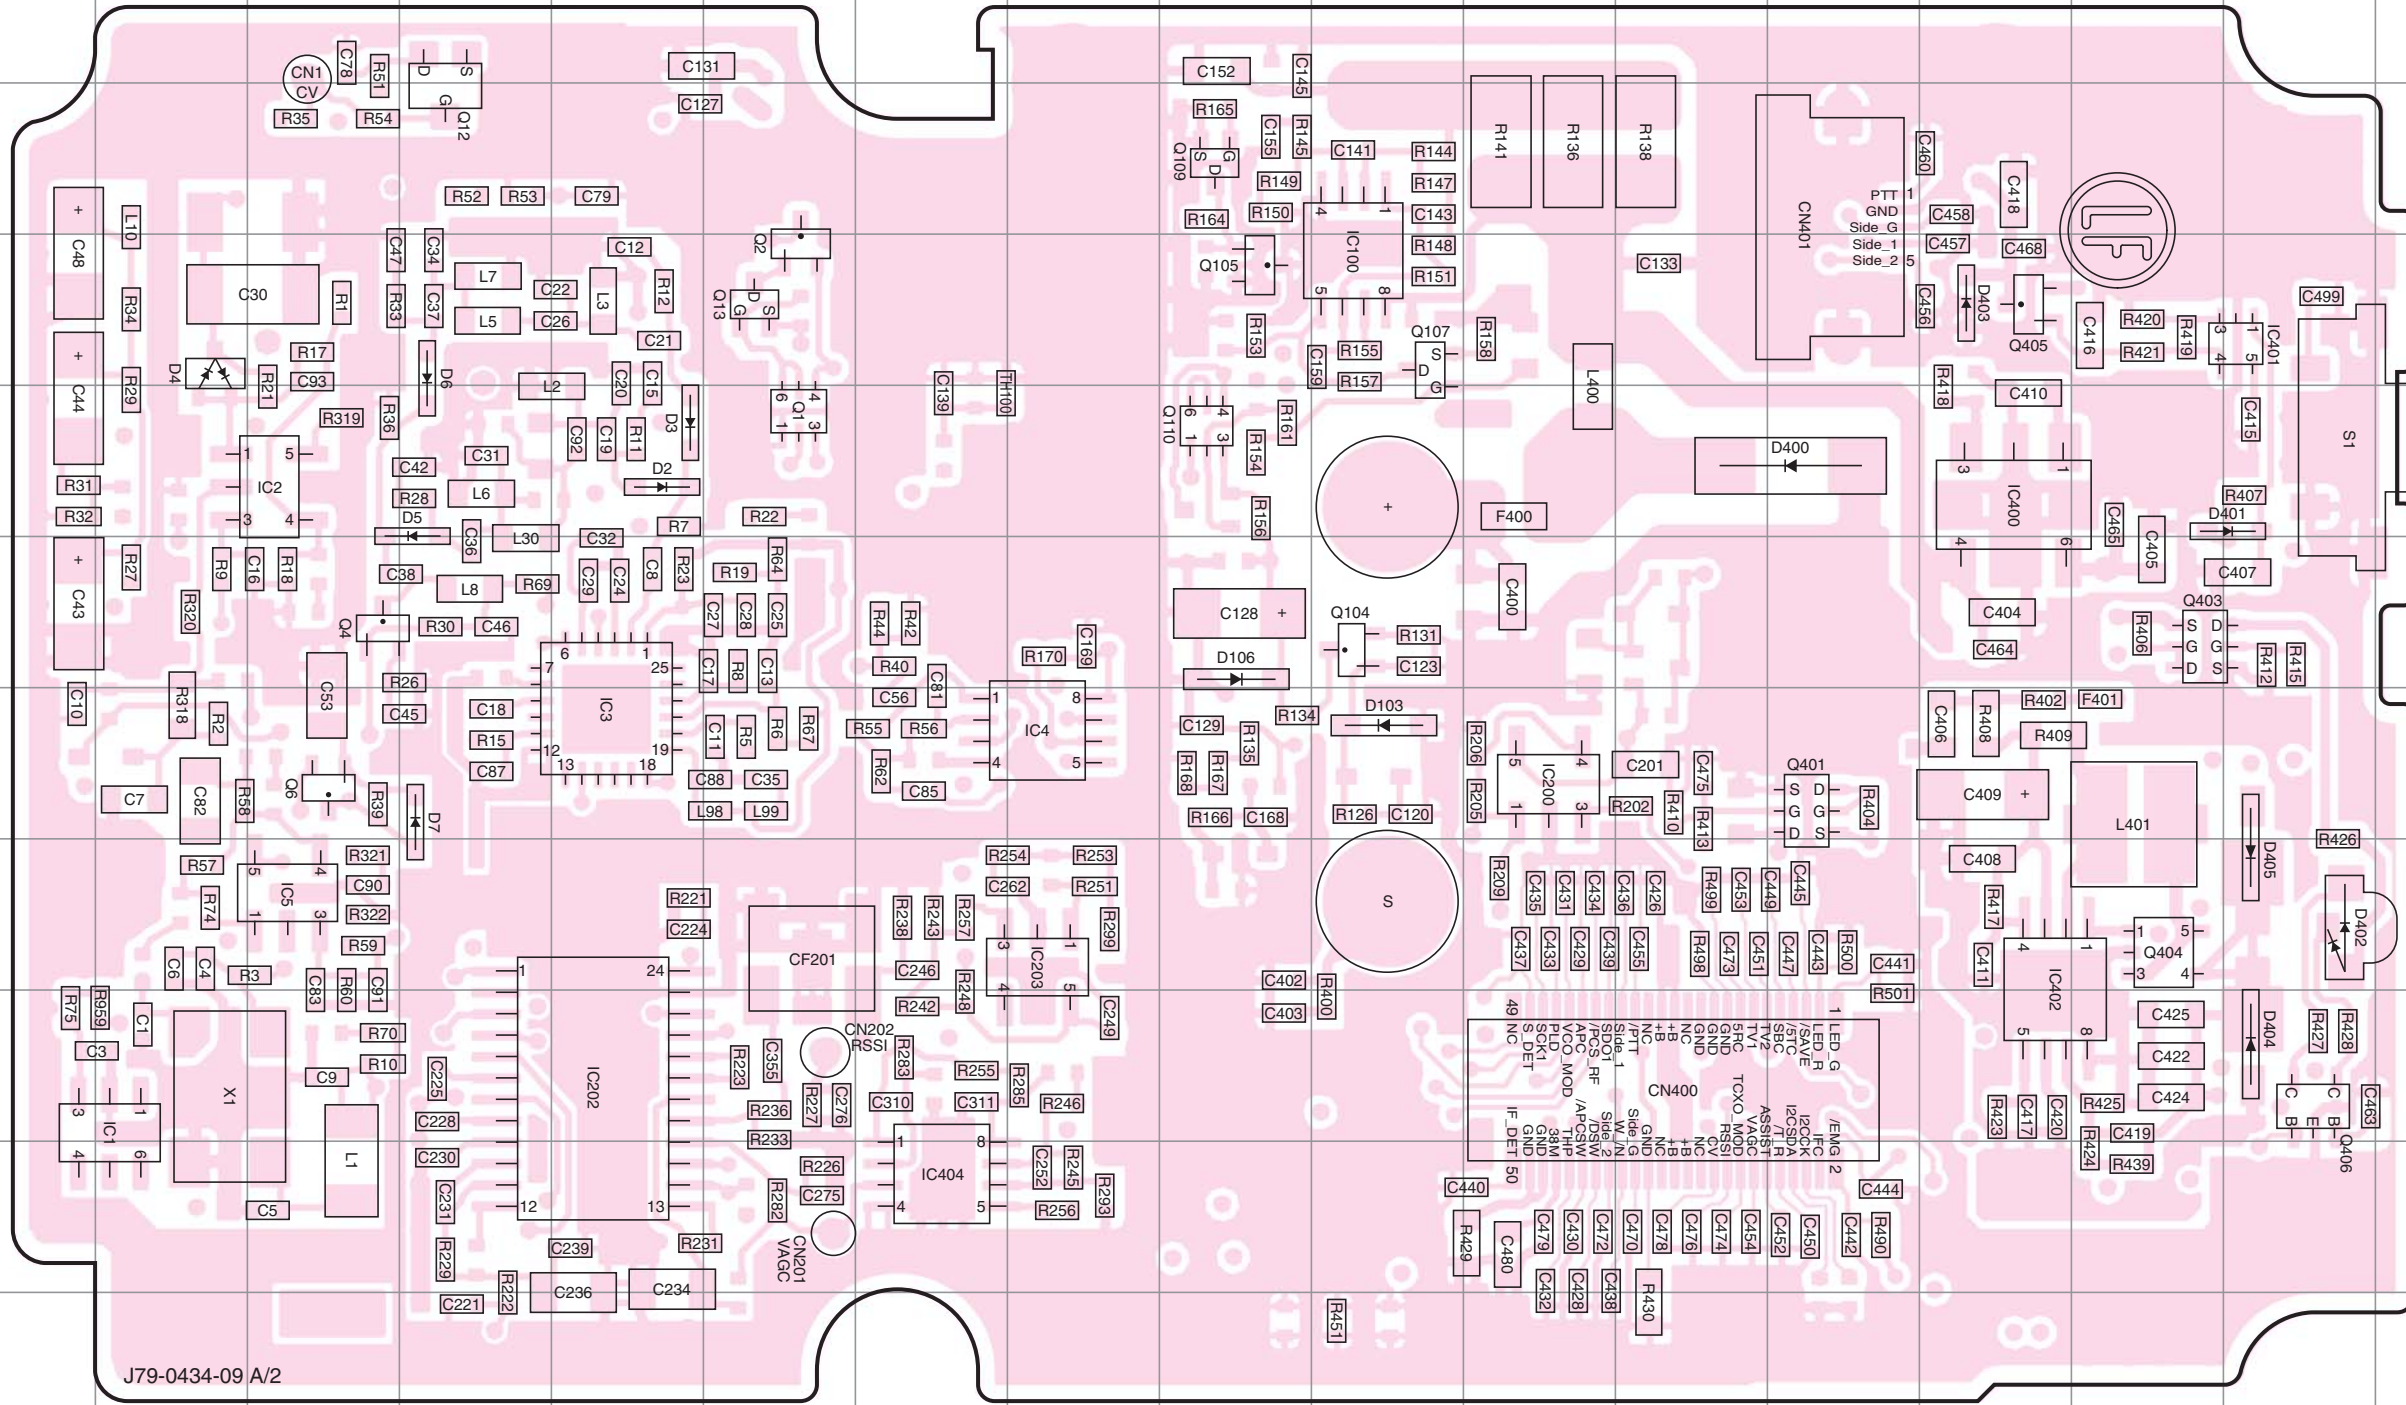


TX-RX UNIT (X57-8950-11) (B/2)

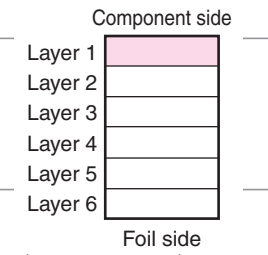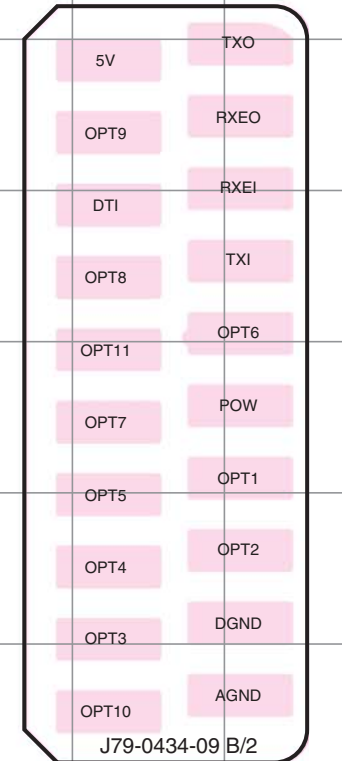





| Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address | Ref. No. | Address |
|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|----------|---------|
| IC1 | 9B | IC203 | 8H | Q6 | 7C | Q401 | 7M | D5 | 5D | D403 | 4N |
| IC2 | 5C | IC400 | 5N | Q12 | 3D | Q403 | 7N | D6 | 4D | D404 | 9P |
| IC3 | 7E | IC401 | 4P | Q13 | 4F | Q404 | 9O | D7 | 7D | D405 | 8P |
| IC4 | 7H | IC402 | 9O | Q104 | 6J | Q405 | 4N | D103 | 7J | | |
| IC5 | 8C | IC404 | 10G | Q105 | 4I | Q406 | 9P | D106 | 6I | | |
| IC100 | 4J | Q1 | 5F | Q107 | 4J | D2 | 5E | D400 | 5M | | |
| IC200 | 7K | Q2 | 4F | Q109 | 3I | D3 | 5E | D401 | 5P | | |
| IC202 | 9E | Q4 | 6C | Q110 | 5I | D4 | 4B | D402 | 8P | | |

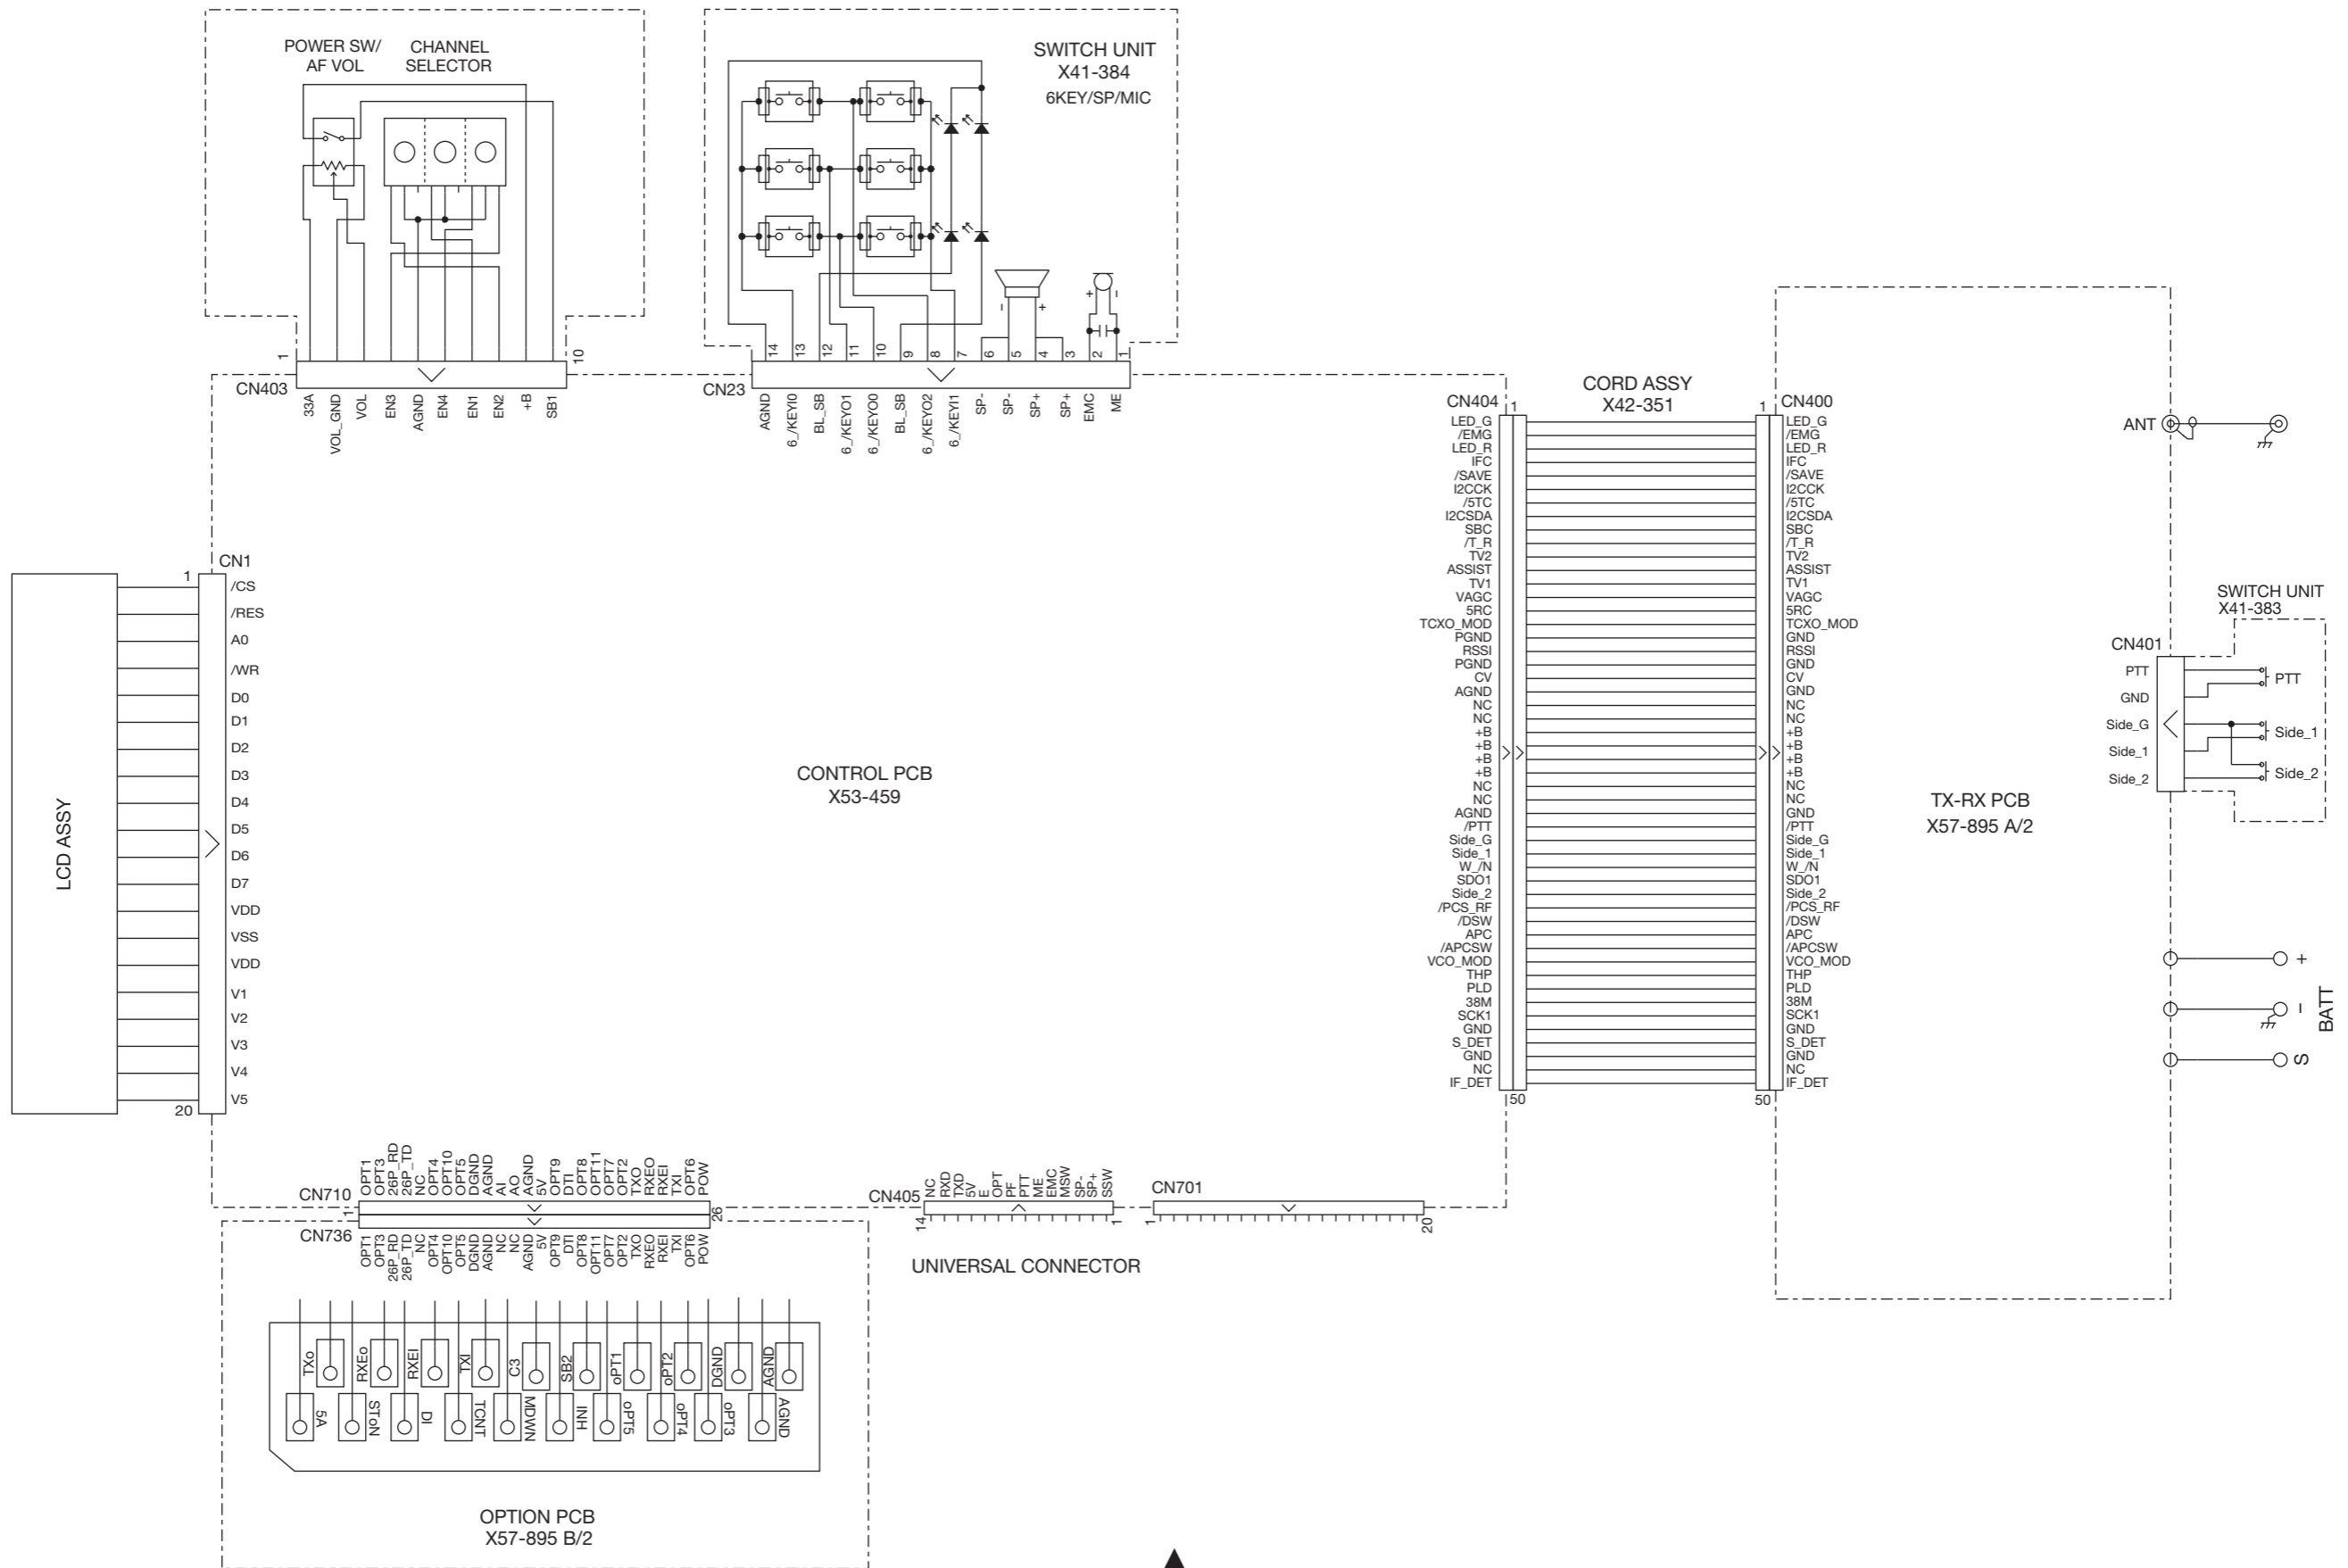



TRUCK UNIT (K03-11) (K03-11) (K03-11)

TRUCK UNIT (K03-11) (K03-11) (K03-11)

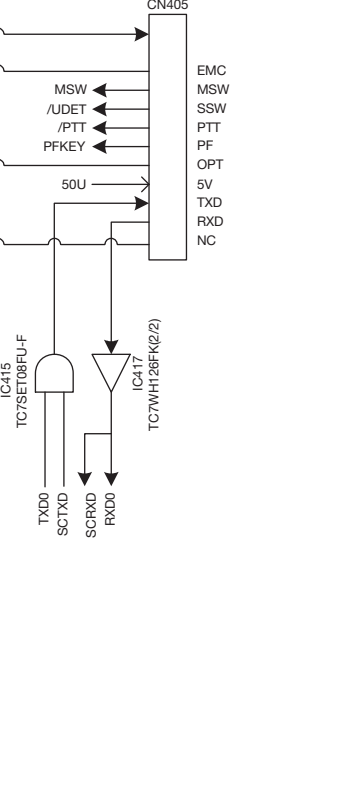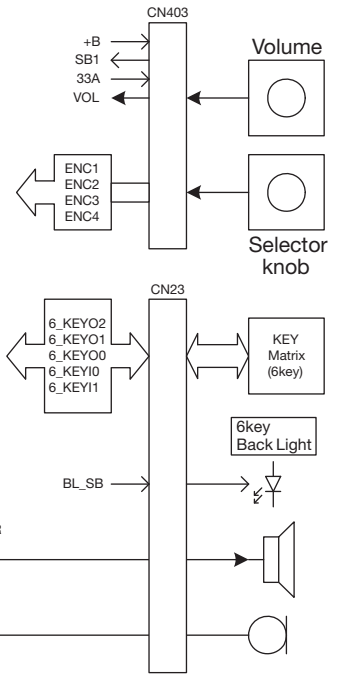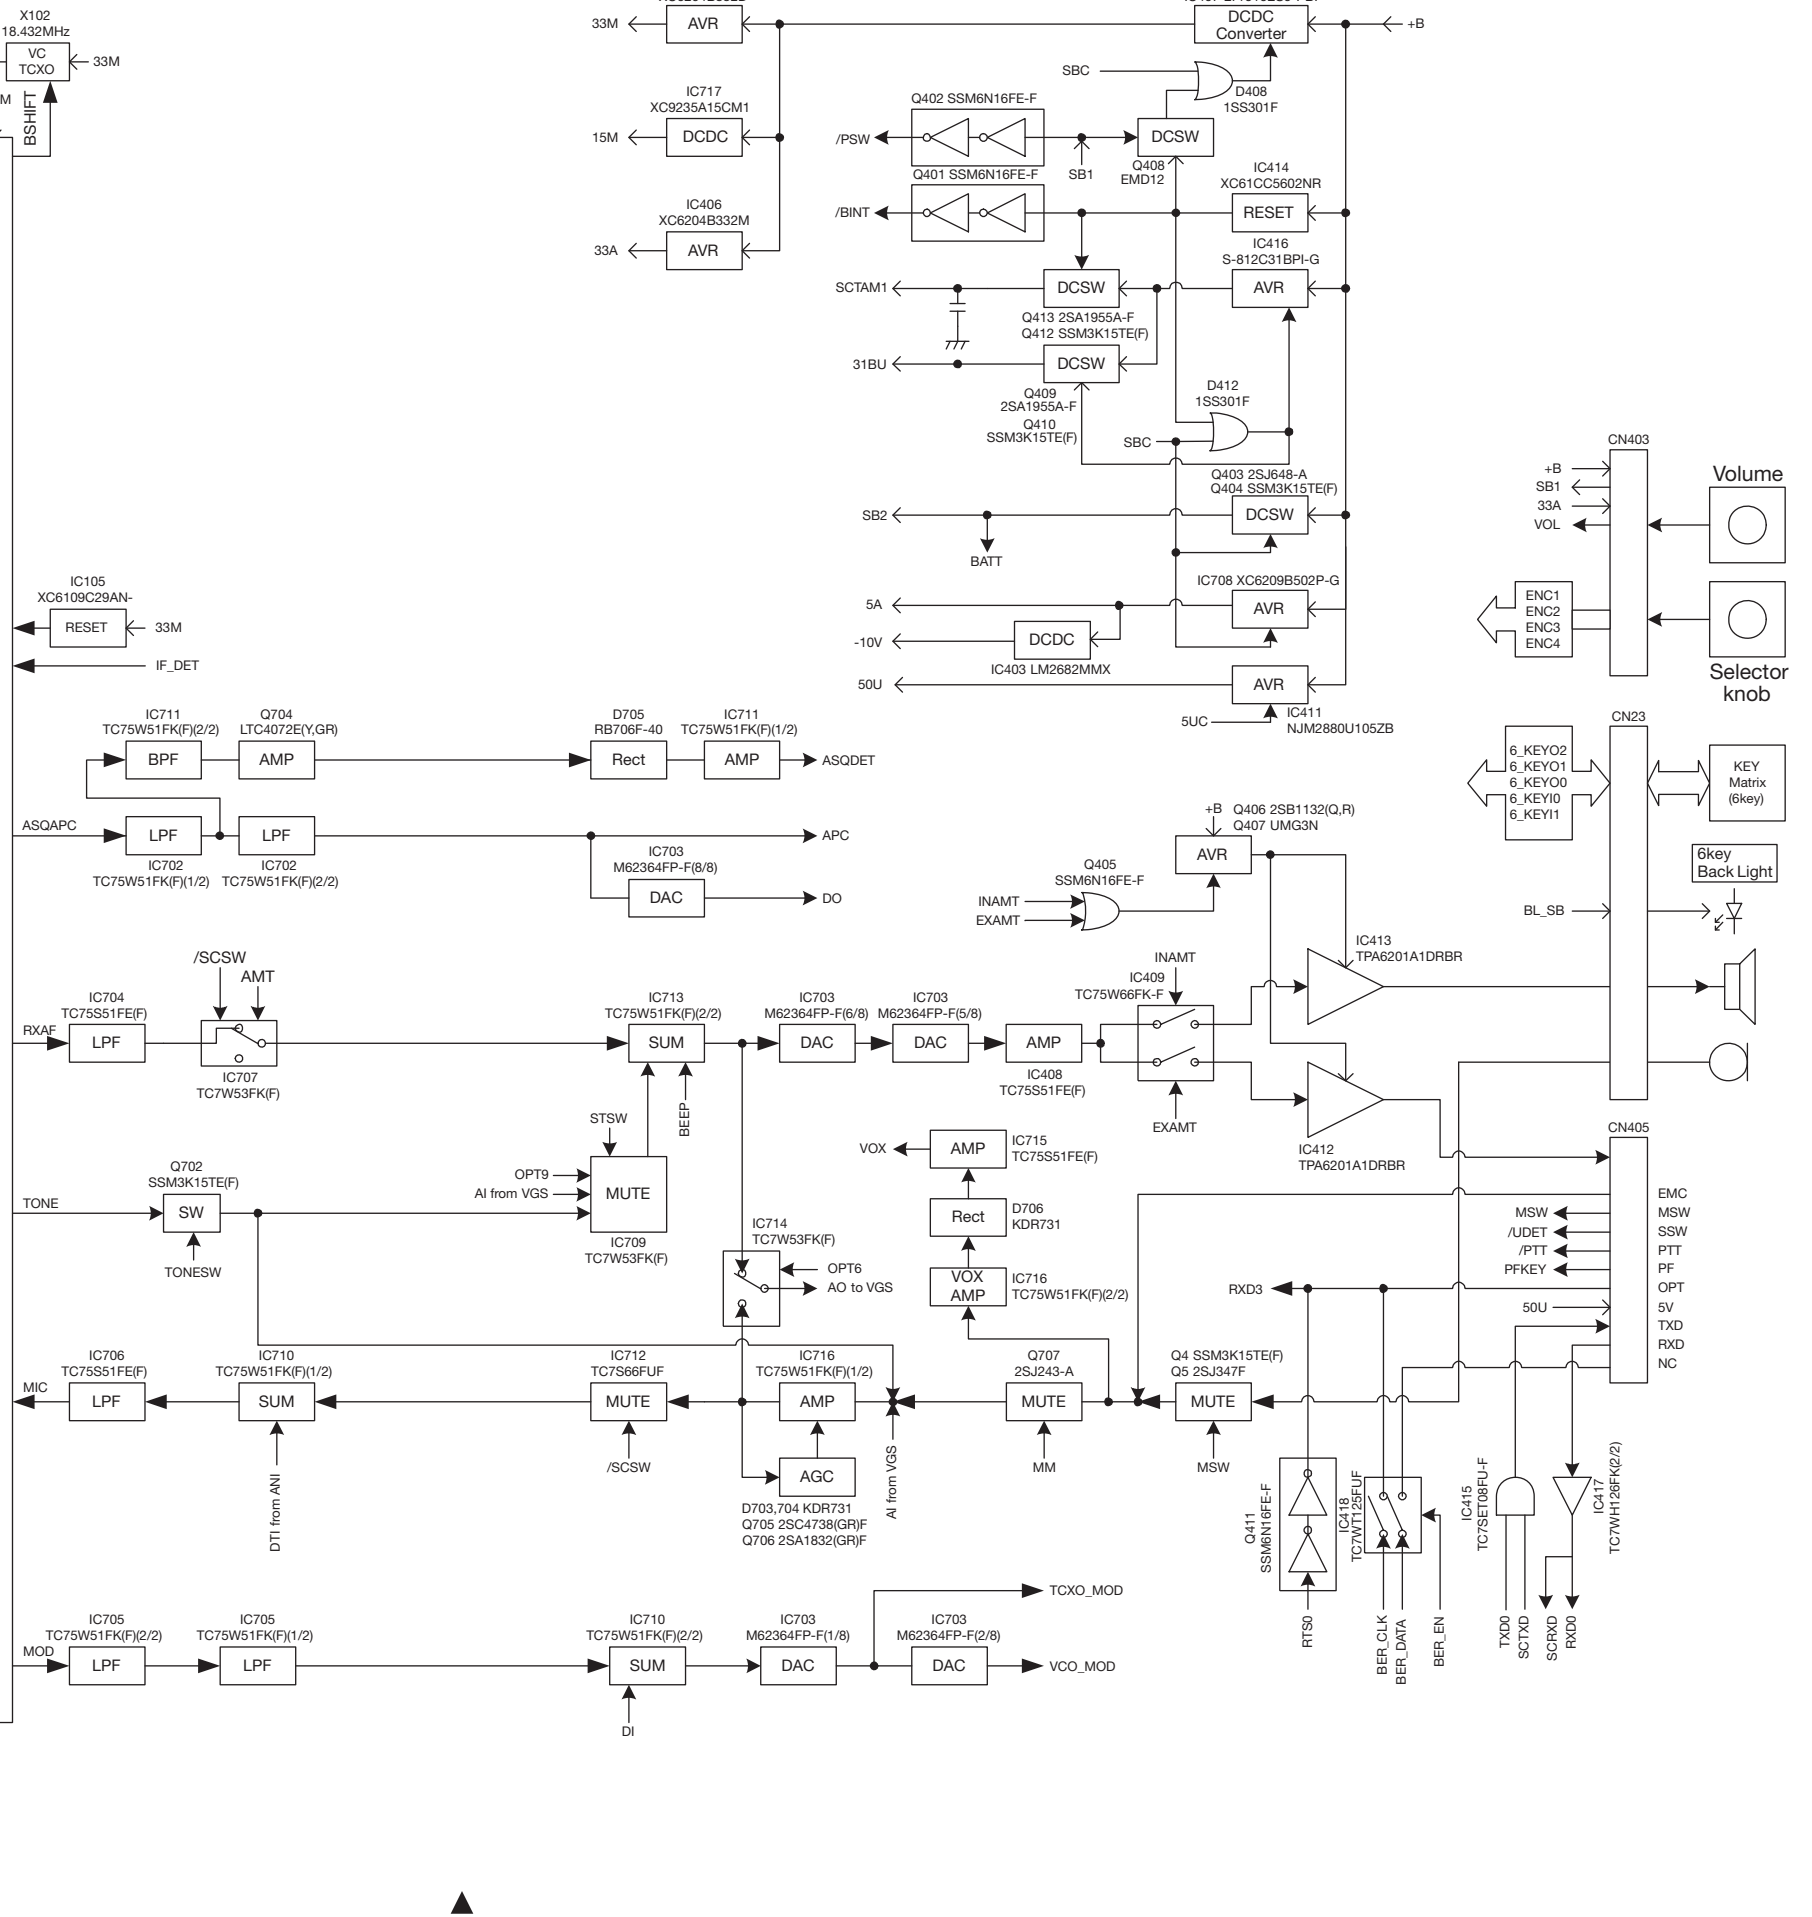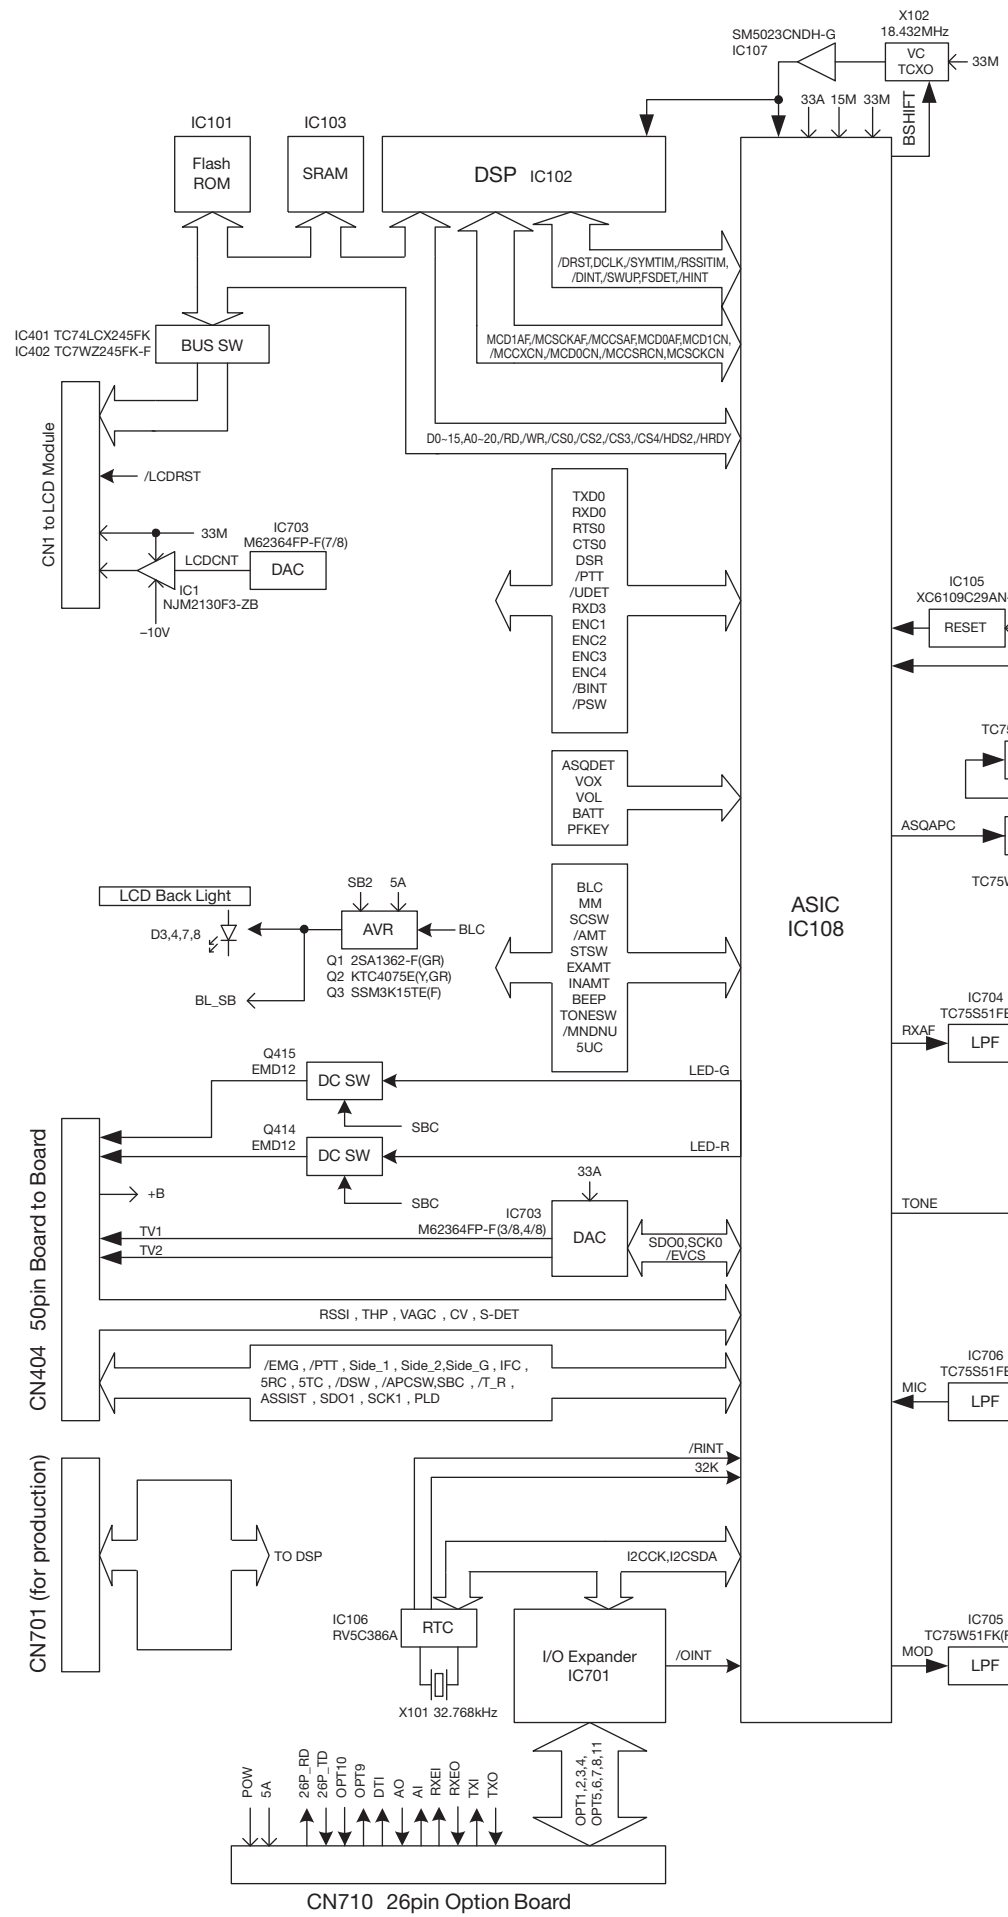

CN710 26pin Option Board

