


R3764/65/66/67H Series R3765/67G Series Network Analyzer

Programming Manual

OPERATION

ADVANTEST®
ADVANTEST CORPORATION

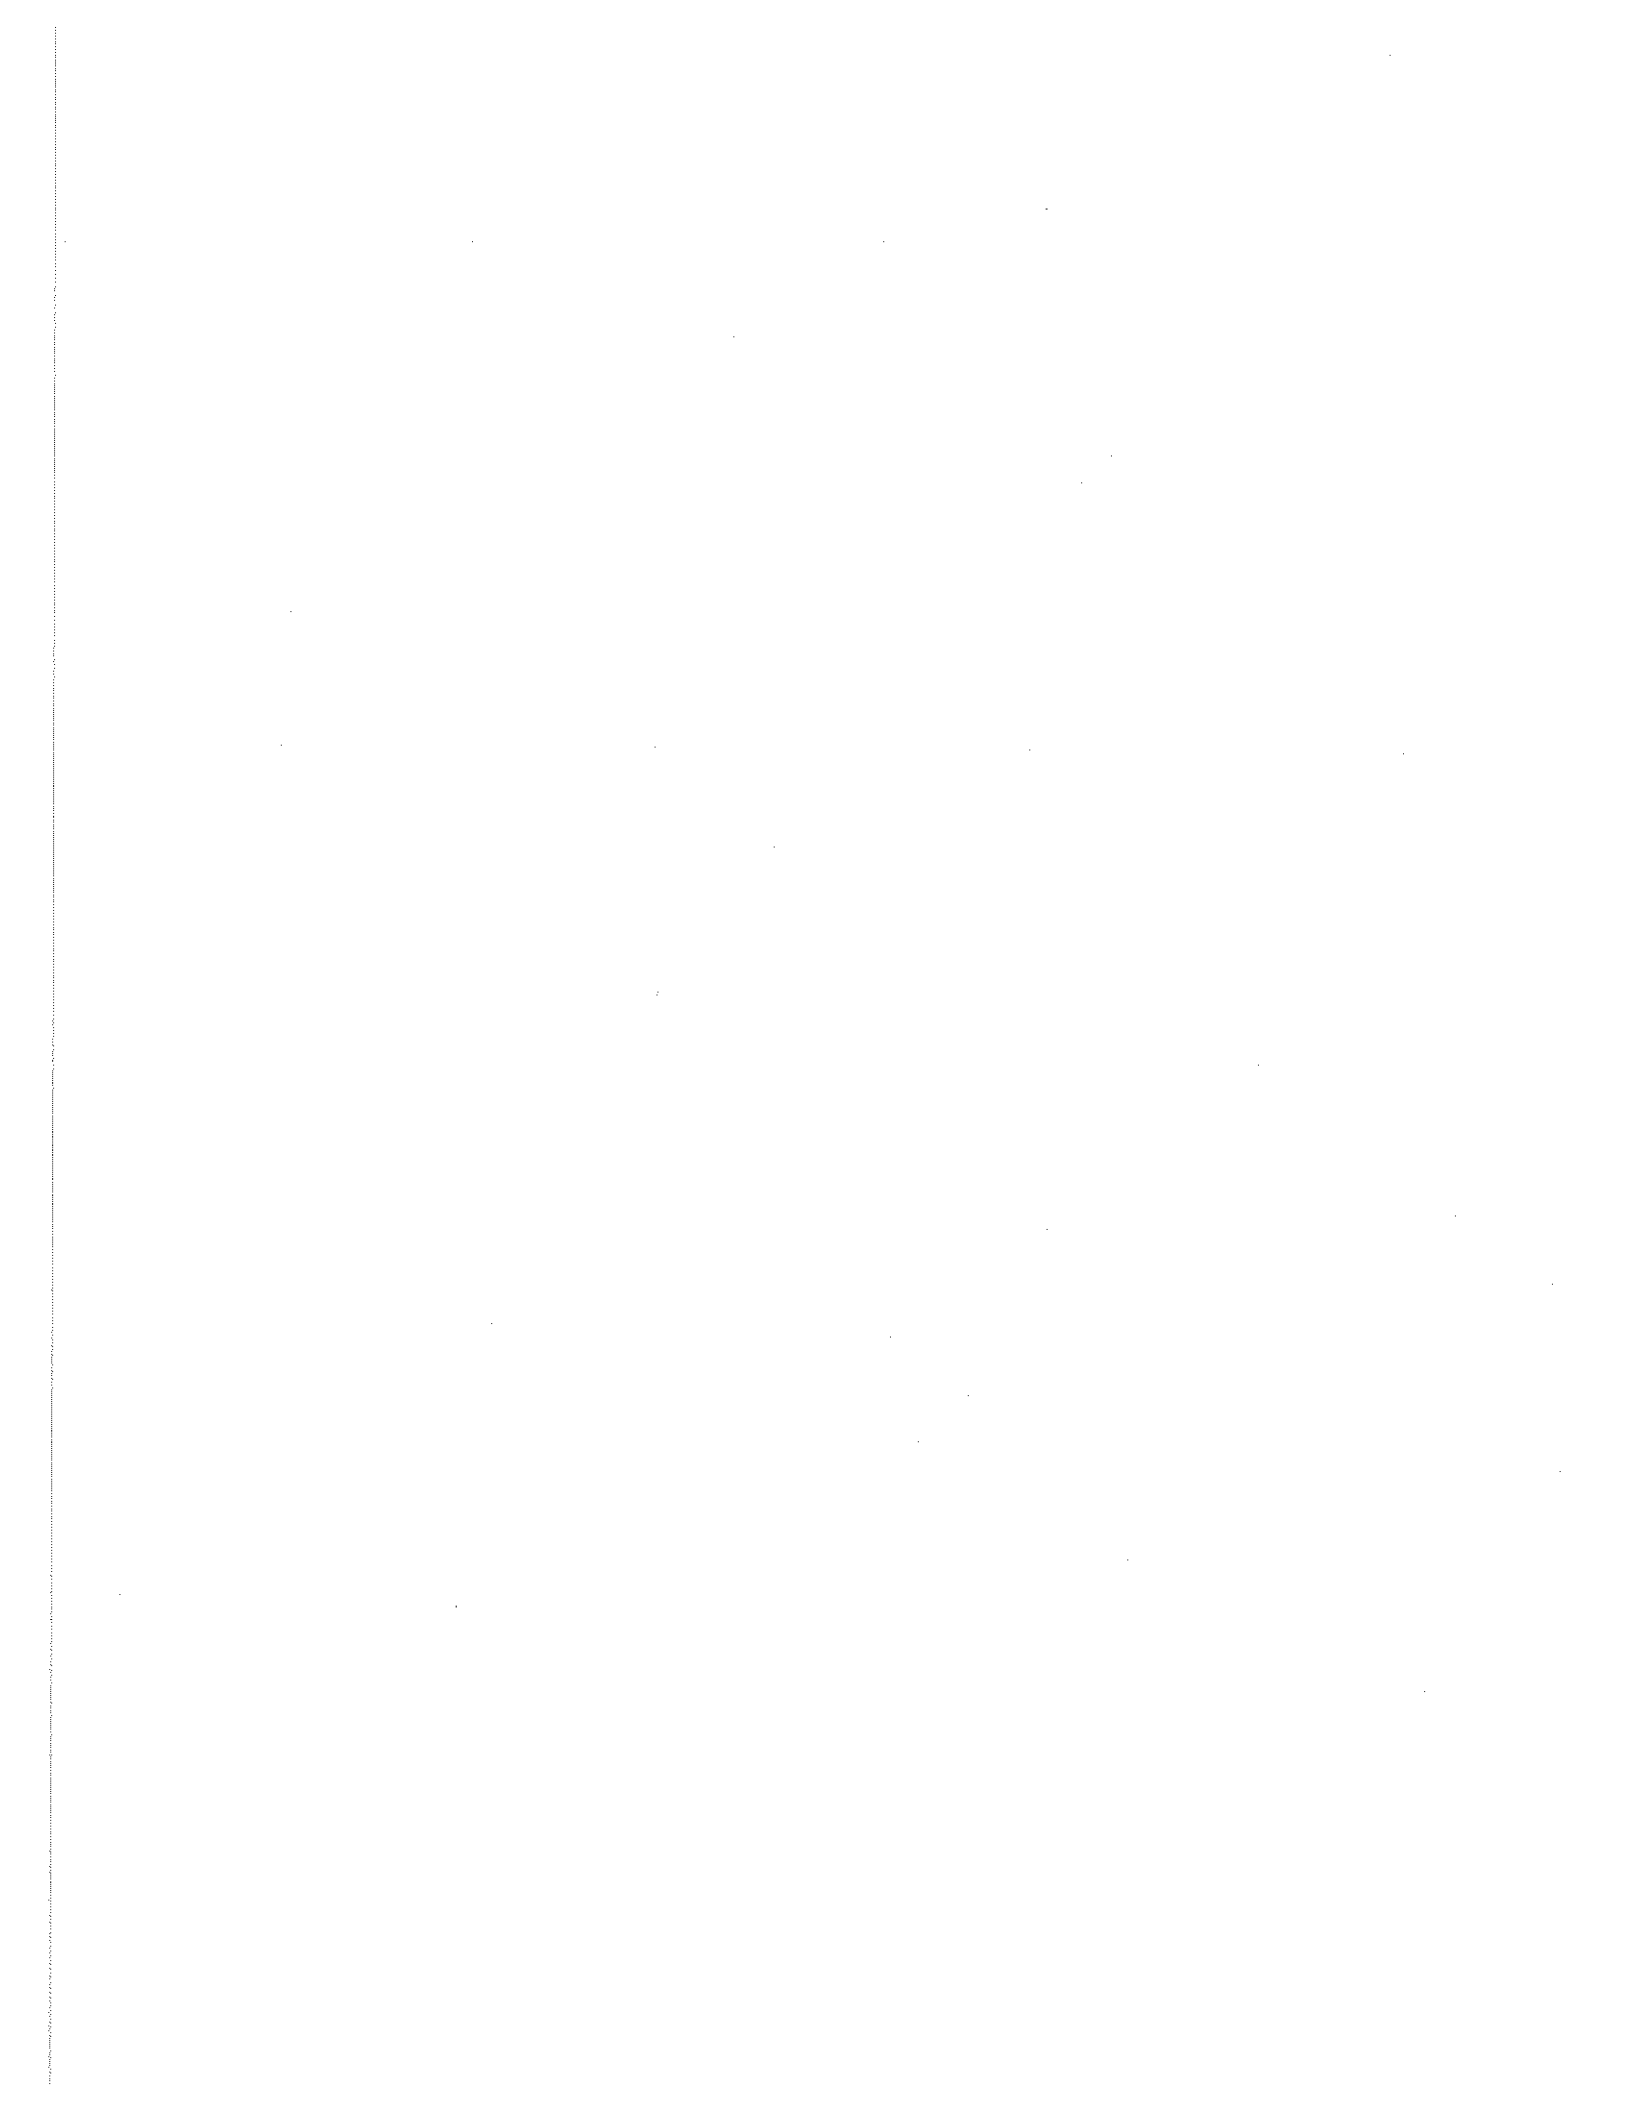

ADVANTEST®

ADVANTEST CORPORATION

***R3764/65/66/67H Series
R3765/67G Series
Network Analyzer
Programming Manual***

MANUAL NUMBER FFE-8324180G00

Applicable models

R3764AH/BH/CH

R3765AH/BH/CH

R3766AH/BH/CH

R3767AH/BH/CH

R3765AG/BG/CG

R3767AG/BG/CG

Safety Summary

To ensure thorough understanding of all functions and to ensure efficient use of this instrument, please read the manual carefully before using. Note that Advantest bears absolutely no responsibility for the result of operations caused due to incorrect or inappropriate use of this instrument.

If the equipment is used in a manner not specified by Advantest, the protection provided by the equipment may be impaired.

- **Warning Labels**

Warning labels are applied to Advantest products in locations where specific dangers exist. Pay careful attention to these labels during handling. Do not remove or tear these labels. If you have any questions regarding warning labels, please ask your nearest Advantest dealer. Our address and phone number are listed at the end of this manual.

Symbols of those warning labels are shown below together with their meaning.

DANGER: Indicates an imminently hazardous situation which will result in death or serious personal injury.

WARNING: Indicates a potentially hazardous situation which will result in death or serious personal injury.

CAUTION: Indicates a potentially hazardous situation which will result in personal injury or a damage to property including the product.

- **Basic Precautions**

Please observe the following precautions to prevent fire, burn, electric shock, and personal injury.

- Use a power cable rated for the voltage in question. Be sure however to use a power cable conforming to safety standards of your nation when using a product overseas.
- When inserting the plug into the electrical outlet, first turn the power switch OFF and then insert the plug as far as it will go.
- When removing the plug from the electrical outlet, first turn the power switch OFF and then pull it out by gripping the plug. Do not pull on the power cable itself. Make sure your hands are dry at this time.
- Before turning on the power, be sure to check that the supply voltage matches the voltage requirements of the instrument.
- Be sure to plug the power cable into an electrical outlet which has a safety ground terminal. Grounding will be defeated if you use an extension cord which does not include a safety ground terminal.
- Be sure to use fuses rated for the voltage in question.
- Do not use this instrument with the case open.
- Do not place objects on top of this product. Also, do not place flower pots or other containers containing liquid such as chemicals near this product.

Safety Summary

- When the product has ventilation outlets, do not stick or drop metal or easily flammable objects into the ventilation outlets.
- When using the product on a cart, fix it with belts to avoid its drop.
- When connecting the product to peripheral equipment, turn the power off.

- **Caution Symbols Used Within this Manual**

Symbols indicating items requiring caution which are used in this manual are shown below together with their meaning.

DANGER: Indicates an item where there is a danger of serious personal injury (death or serious injury).


WARNING: Indicates an item relating to personal safety or health.

CAUTION: Indicates an item relating to possible damage to the product or instrument or relating to a restriction on operation.


- **Safety Marks on the Product**

The following safety marks can be found on Advantest products.

 : ATTENTION - Refer to manual.

 : Protective ground (earth) terminal.

 : DANGER - High voltage.

 : CAUTION - Risk of electric shock.

- **Replacing Parts with Limited Life**

The following parts used in the instrument are main parts with limited life.

Replace the parts listed below before their expected lifespan has expired to maintain the performance and function of the instrument.

Note that the estimated lifespan for the parts listed below may be shortened by factors such as the environment where the instrument is stored or used, and how often the instrument is used.

The parts inside are not user-replaceable. For a part replacement, please contact the Advantest sales office for servicing.

There is a possibility that each product uses different parts with limited life. For more information, refer to Chapter 1.

Main Parts with Limited Life

Part name	Life
Unit power supply	5 years
Fan motor	5 years
Electrolytic capacitor	5 years
LCD display	6 years
LCD backlight	2.5 years
Floppy disk drive	5 years
Memory backup battery	5 years

- **Hard Disk Mounted Products**

The operational warnings are listed below.

- Do not move, shock and vibrate the product while the power is turned on. Reading or writing data in the hard disk unit is performed with the memory disk turning at a high speed. It is a very delicate process.
- Store and operate the products under the following environmental conditions.
 - An area with no sudden temperature changes.
 - An area away from shock or vibrations.
 - An area free from moisture, dirt, or dust.
 - An area away from magnets or an instrument which generates a magnetic field.
- Make back-ups of important data.
 - The data stored in the disk may become damaged if the product is mishandled. The hard disc has a limited life span which depends on the operational conditions. Note that there is no guarantee for any loss of data.

- **Precautions when Disposing of this Instrument**

When disposing of harmful substances, be sure dispose of them properly with abiding by the state-provided law.

Harmful substances: (1) PCB (polycarbon biphenyl)
 (2) Mercury
 (3) Ni-Cd (nickel cadmium)
 (4) Other

Items possessing cyan, organic phosphorous and hexadic chromium and items which may leak cadmium or arsenic (excluding lead in solder).

Example: fluorescent tubes, batteries

Environmental Conditions

This instrument should be only be used in an area which satisfies the following conditions:

- An area free from corrosive gas
- An area away from direct sunlight
- A dust-free area
- An area free from vibrations

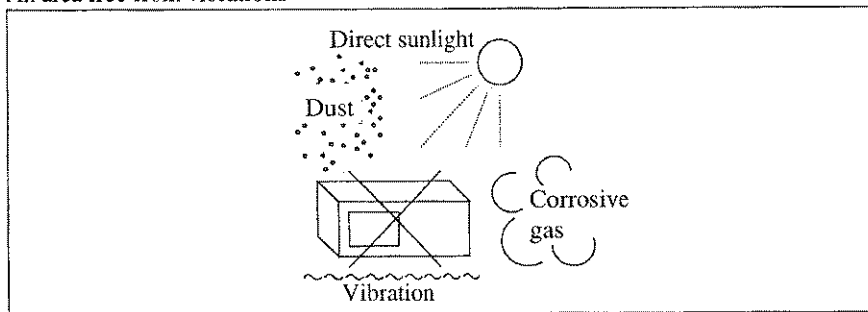


Figure-1 Environmental Conditions

- Operating position

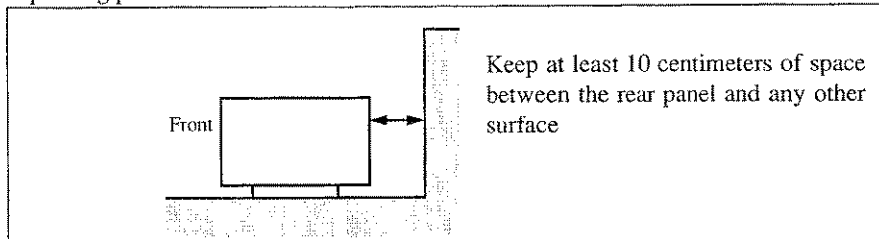


Figure-2 Operating Position

- Storage position

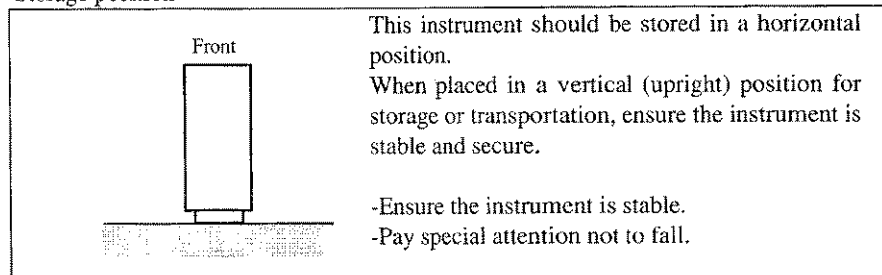


Figure-3 Storage Position

This instrument can be used safely under the following conditions:

- Altitude of up to 2000 m
- Installation Categories II
- Pollution Degree 2

Part 1

11/11/2017 11:11:11 AM

PREFACE

How to use this manual

1. The following describes the structure of this manual.

- Part 1: Built-in BASIC
- Part 2: GPIB

Reference: For details of the network analyzer section names functions and key operations, refer to the pertinent instruction manual.

- R3764/66H Series Network Analyzer Operation Manual
- R3765/67H Series Network Analyzer Operation Manual
- R3765/67G Series Network Analyzer Operation Manual

2. Unless otherwise specified in this manual, R3764/66 series is applicable to R3764/66H series and R3765/67 series is applicable to R3765/67H series or R3765/67G series.

3. Distinction of panel key and softkey in this manual.

Panel keys: (Example) [CH1], [5]

Soft keys: (Example) {POWER}, {LOGMAG}

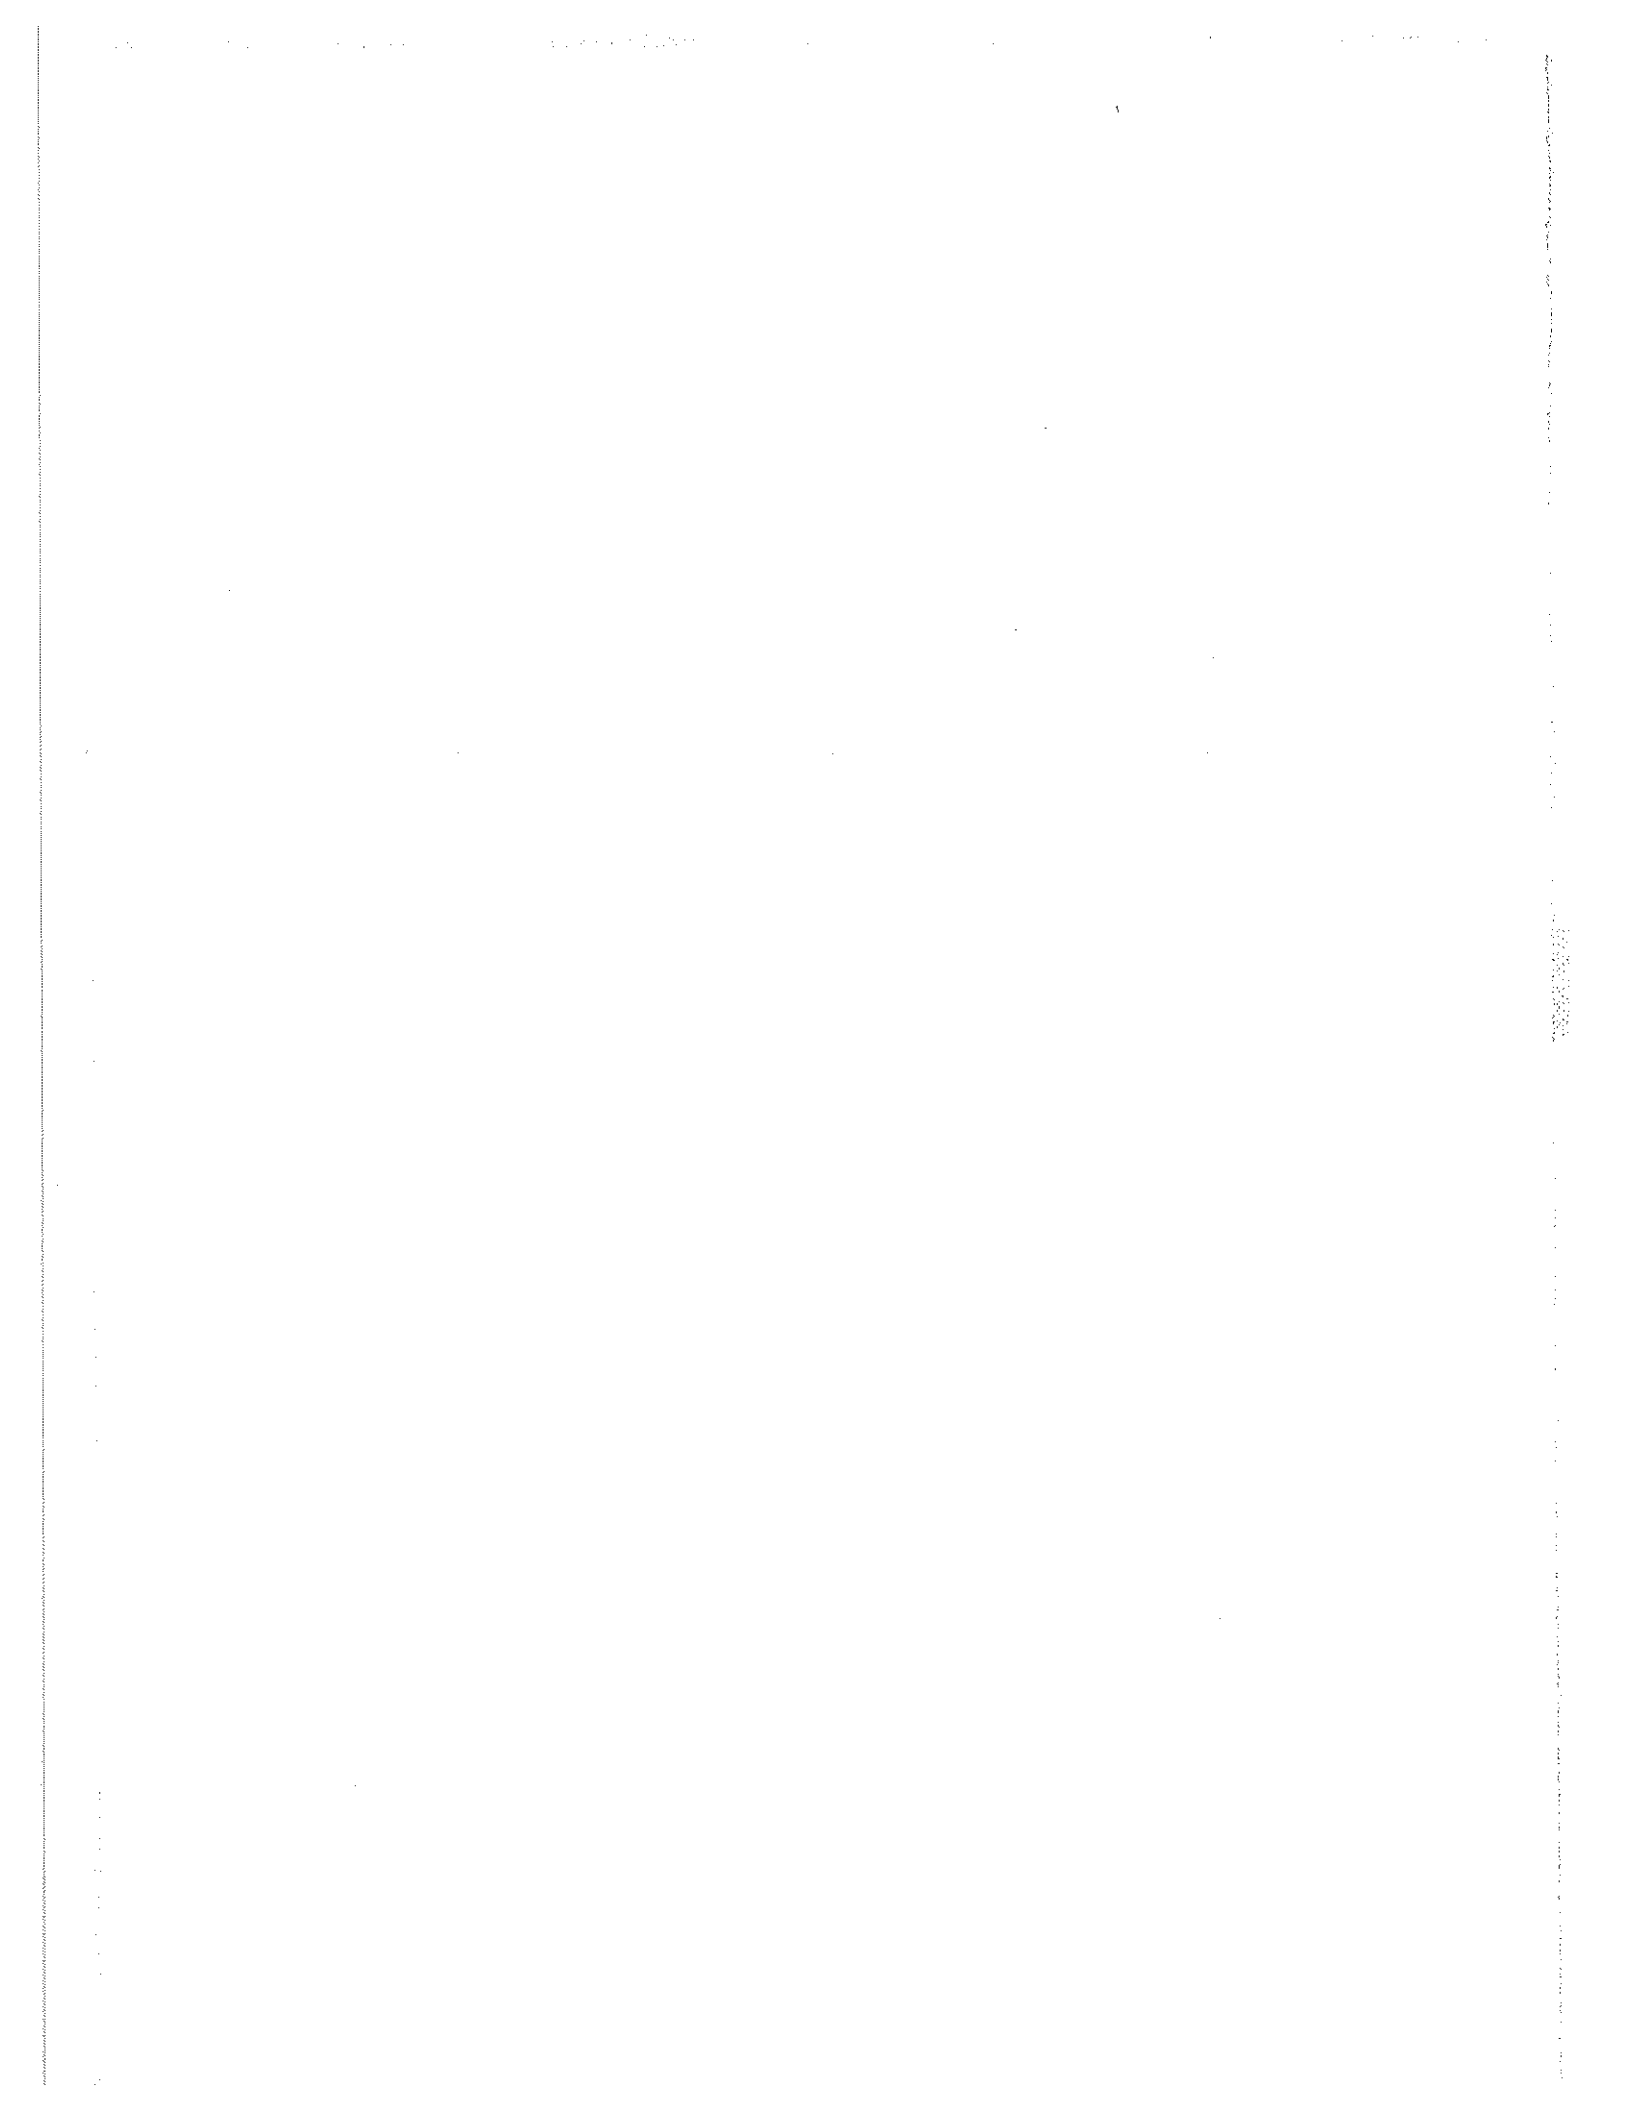


TABLE OF CONTENTS


1.	INTRODUCTION	1-1
1.1	Command and statement syntax	1-1
1.2	GPIB mode	1-2
1.3	Floppy Disk	1-3
1.4	File Management	1-6
1.5	Keyboard	1-8
2.	OPERATING BASICS	2-1
2.1	Program Creating	2-1
2.2	Program Carrying Out	2-2
2.3	Program Ending	2-2
3.	BASIC COMMANDS	3-1
3.1	Various Commands	3-1
3.1.1	List of Command Function	3-2
3.1.2	List of Command Syntax	3-3
3.1.3	Precautions Common to All Commands	3-4
3.2	Command Grammar and Application	3-5
4.	BASIC STATEMENT	4-1
4.1	Programming Rules	4-1
4.1.1	Program Structure	4-1
4.1.2	Object	4-4
4.1.3	Operators	4-9
4.2	Various Statements	4-12
4.2.1	Statement Function List	4-12
4.2.2	Statement Syntax List	4-14
4.3	Statement Syntax and Use	4-20
4.4	Built-in Function	4-92
4.4.1	Outline	4-92
4.4.2	List of Built-In Function	4-104
4.4.3	Function Obtaining Address Point	4-108
4.4.4	Function Obtaining Frequency	4-110
4.4.5	Function Obtaining Response	4-111
4.4.6	Function calculating Max. value, Min. value	4-113
4.4.7	Function Obtaining Bandwidth, etc.	4-115
4.4.8	Ripple Analysis Function-1	4-118
4.4.9	Ripple Analysis Function-2	4-124
4.4.10	Direct Search	4-128
4.4.11	Data Transfer	4-130
5.	PARALLEL I/O PORT	5-1
5.1	Parallel I/O Port	5-1

Table of Contents

5.2	Connector Internal Pin Assigned and Signal Standard	5-3
5.3	Mode Setting of Port	5-5
5.4	Each Port Operation Method	5-6
5.5	INPUT 1, OUTPUT 1, and OUTPUT 2 Terminals	5-7
6.	ERROR MESSAGES	6-1
6.1	How to Check Error Message Line Number	6-1
6.2	How to Check Program Current Position	6-1
6.3	Error Message List	6-1
	ALPHABETICAL INDEX	I-1


LIST OF ILLUSTRATIONS

No.	Title	Page
1-1	External Appearance and Names of Parts of Micro-Floppy Disk	1-3
1-2	Inserting Floppy Disk (for R3765/67)	1-4
1-3	Write-Protect Tab Position	1-5
5-1	Timing Chart of WRITE STROBE	5-1
5-2	36-pin Connector Internal Pin Assignment and Signal	5-3

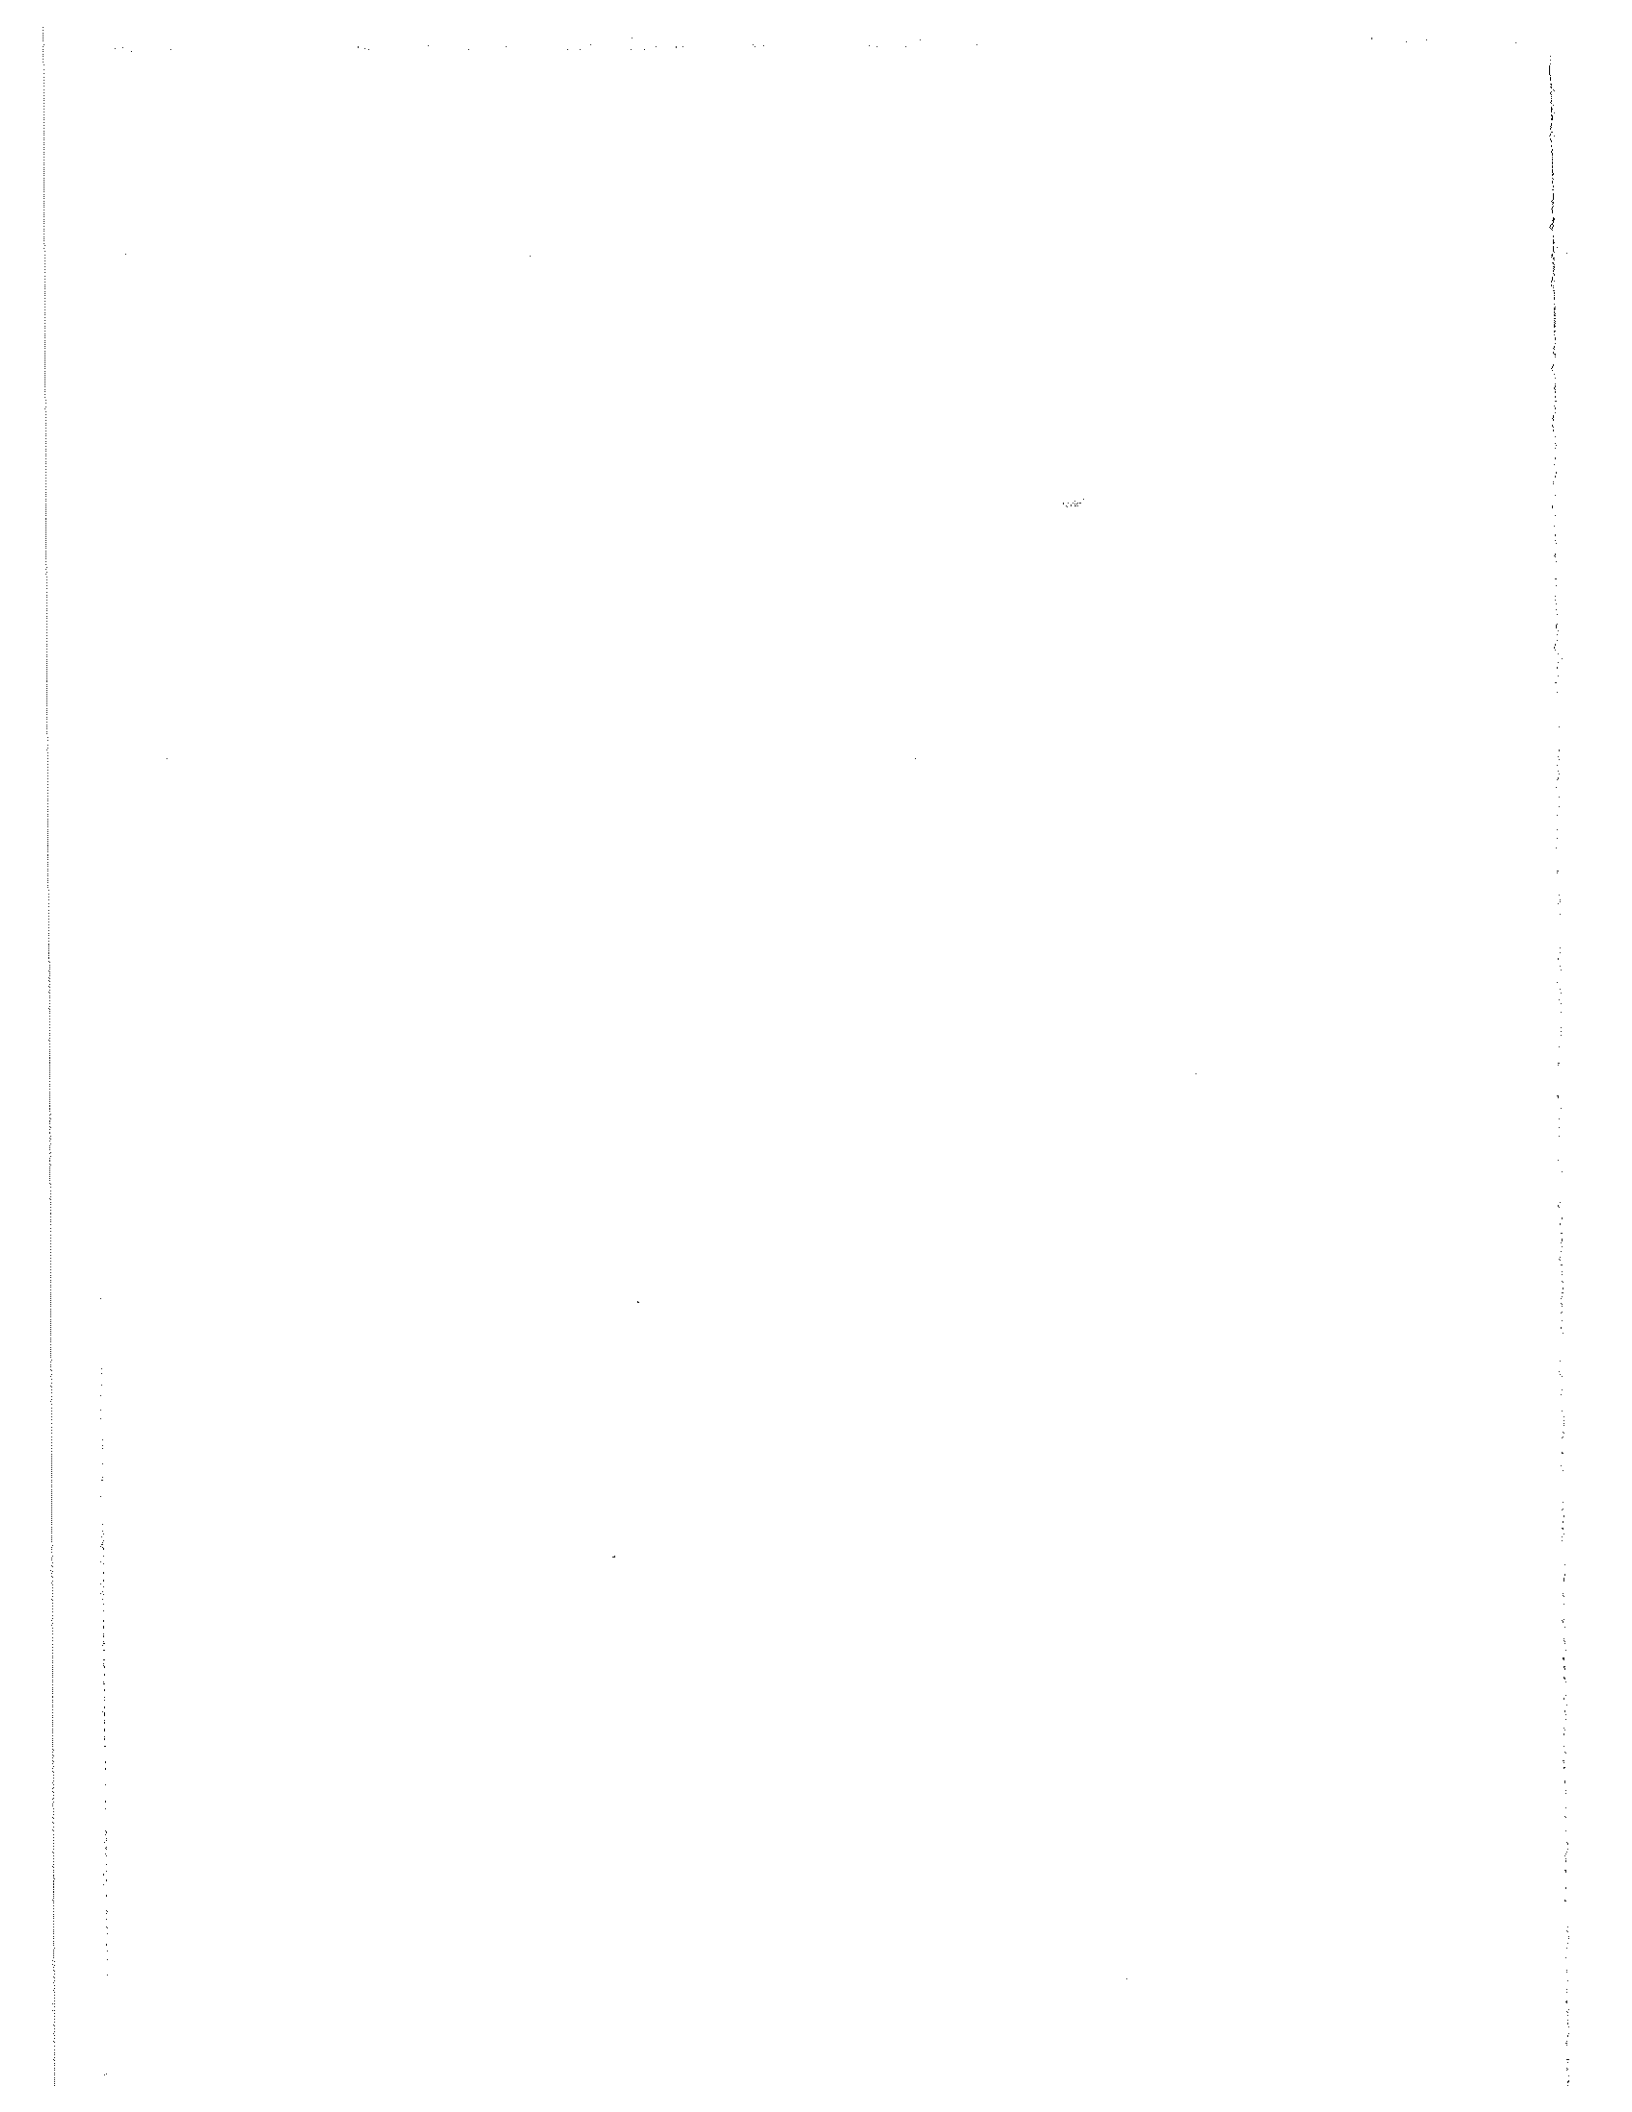

LIST OF TABLES

No.	Title	Page
4-1	Key Word List	4-2
4-2	Correspondence Table between Full Name and Short Name	4-3
4-3	Escape sequences	4-5
4-4	Alphanumeric Characters	4-5
4-5	Relation between measurement point number and addition value of address point	4-93
4-6	Each measurement channel and analysis channel	4-94
4-7	Each measurement channel and analysis channel	4-95
4-8	Each measurement channel and analysis channel	4-96
4-9	Each measurement channel and analysis channel	4-97
4-10	Each measurement channel and analysis channel	4-98

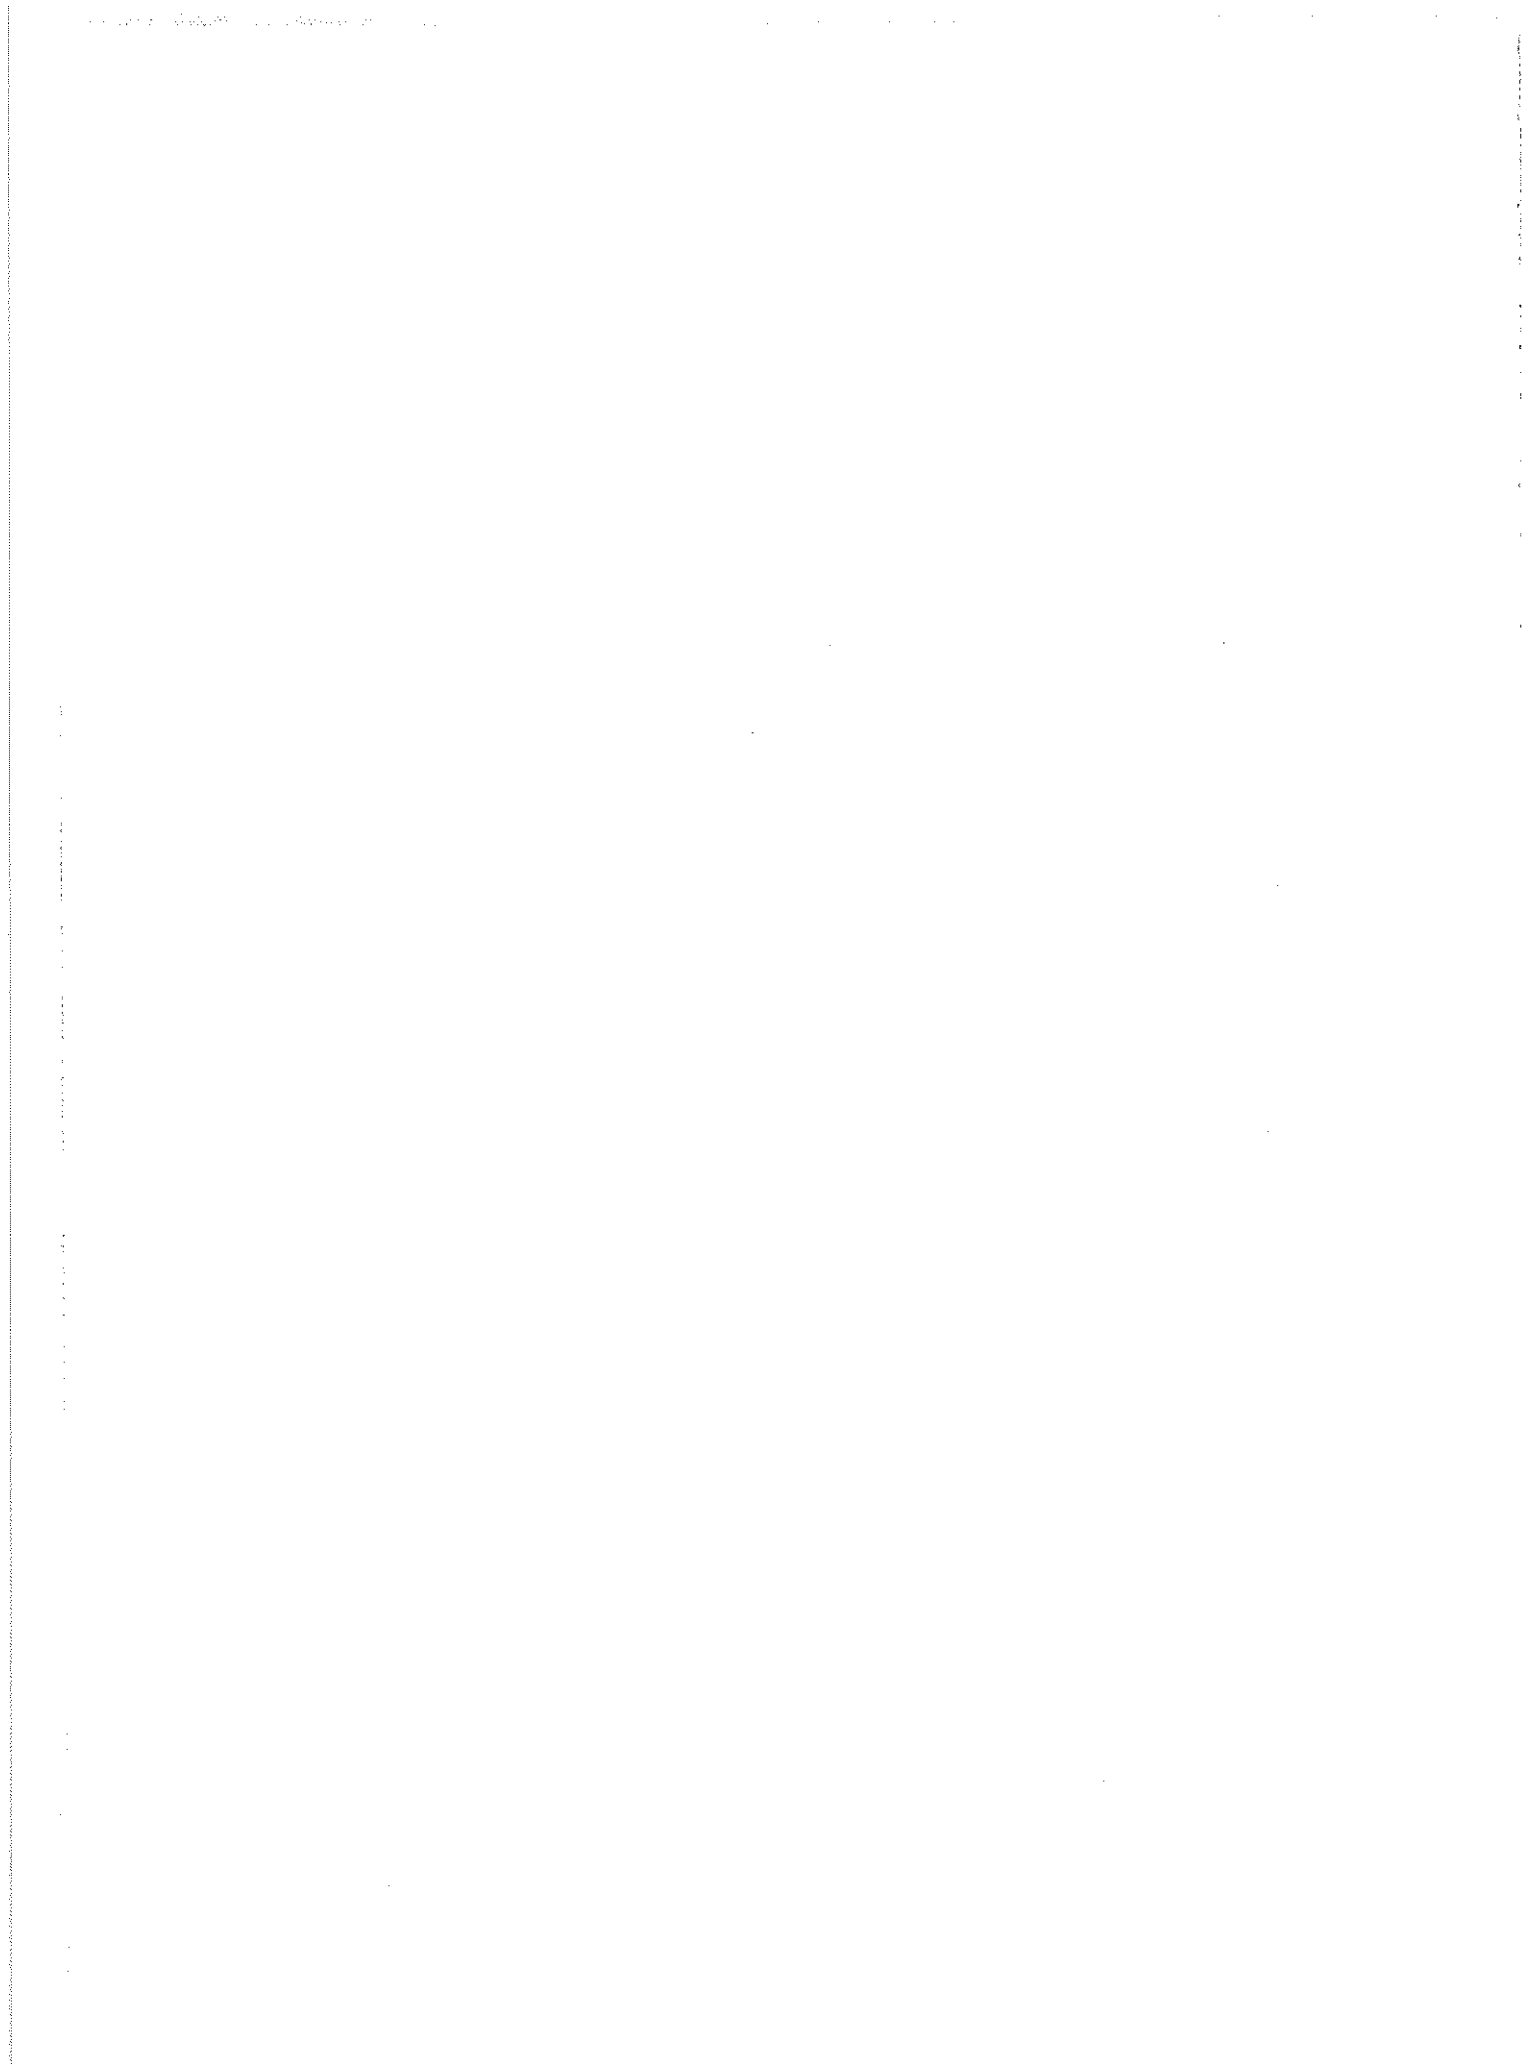

1. INTRODUCTION

The BASIC language built into the network analyzer is equipped with general-purpose BASIC commands, GPIB control purpose commands, and exclusive built-in functions, enabling the network analyzer to be used for simple configuration of small GPIB systems.

1.1 Command and statement syntax


The syntax for the commands and statements used for this analyzer is explained in Chapters 3 and 4 of this manual with both schematic and descriptive representations for intuitive understanding.

1. Schematic representation

To represent a syntax, the analyzer disassembles it into its elements and connects them with straight lines.

Statements should always be read in the direction of the arrows. If a statement jumps to multiple branches on the way, the analyzer will go to one of them. If a loop is formed in the representation, the loop can be passed any number of times.

Description example:

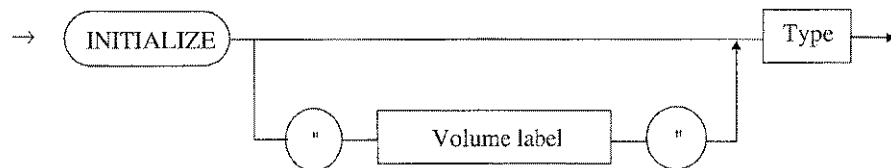

2. Meanings of symbols used for descriptive representation

- Part enclosed with symbols []: Indicates that the enclosed item is an option (omissible).
- Part enclosed with symbols < >: Indicates that the enclosed item is not an option (un-omissible).
- Part enclosed with symbols { }: Indicates that the enclosed item is repeatable 0 times or more.
- Symbol |: Indicates "or". (ex. A | B - A or B is selectable.)

Example of representation: INITIALIZE ["volume label"] <type>

3. Meanings of words used for schematic and descriptive representations

- Numerical value representation expression:
 - Any one of numeric value constant, numeric value variable, and expression
- Character string representation expression:
 - Expression consisting of character string constant, character string variable, character string function, and sub-string
- Equipment address:
 - Address of device connected to GPIB

1.2 GPIB mode

1.2 GPIB mode

The analyzer operates in either of two modes: ADDRESSABLE or CONTROL. The switching between the modes is performed using the CONTROL command or from the front panel.

For the use of the CONTROL command, refer to "3. BASIC COMMANDS". For the use of the front panel, refer to the instruction manual for the pertinent unit.

1. ADDRESSABLE mode

The ADDRESSABLE mode is a normal mode. In this mode, the analyzer is controlled by an external controller.

If the built-in BASIC program of the analyzer is run in this mode, the analyzer will operate as follows:

- If "CONTROL 7;4" of the BASIC command has not been set:
Data can be transmitted/received between the built-in BASIC of the analyzer and an external controller.
However, since the ENTER and OUTPUT instructions of the built-in BASIC have higher priority, setting cannot be performed using a GPIB command from the external controller.
Perform setting using a GPIB command from the external controller, stop the built-in BASIC program or set "CONTROL 7;4".
- If "CONTROL 7;4" of the BASIC command has been set:
In contrast with "CONTROL 7;4" of the BASIC command has not been set, setting can be performed using a GPIB command from an external controller.
In other words, the system operates in the same manner as when the built-in BASIC is stopped. However, no data can be transmitted/received between the built-in BASIC and the external controller.

2. SYSTEM CONTROLLER mode

The built-in BASIC program enables the analyzer to control the measurement function and the externally connected units.

NOTE: *In this page, the BASIC built in the analyzer is called the built-in BASIC in order to distinguish from the external controller. But when the distinction from the external is not needed hereafter, it's called BASIC.*

1.3 Floppy Disk

The floppy disk is used for storing/reading the setting condition and the measured data or a BASIC program and the files from the BASIC program.

The floppy disk format complies with MS-DOS, enabling programs to be created or data to be analyzed using a personal computer corresponding to MS-DOS.

In the analyzer, the disks initialized with the following formats can be used:

2DD (Double-sided double-density):	720 Kbytes (512 bytes, 9 sectors)
2HD (Double-sided high-density):	1.2 Mbytes (1024 bytes, 8 sectors)
	1.2 Mbytes (512 bytes, 15 sectors)
	1.4 Mbytes (512 bytes, 18 sectors)

CAUTION: The analyzer automatically discriminates between 2DD and 2HD disks. 2DD floppy disks formatted to hold 1.2 Mbytes or 1.4 Mbytes and 2HD floppy disks formatted to hold 720 Kbytes cannot be used.

1. External appearance and names of micro-floppy disk

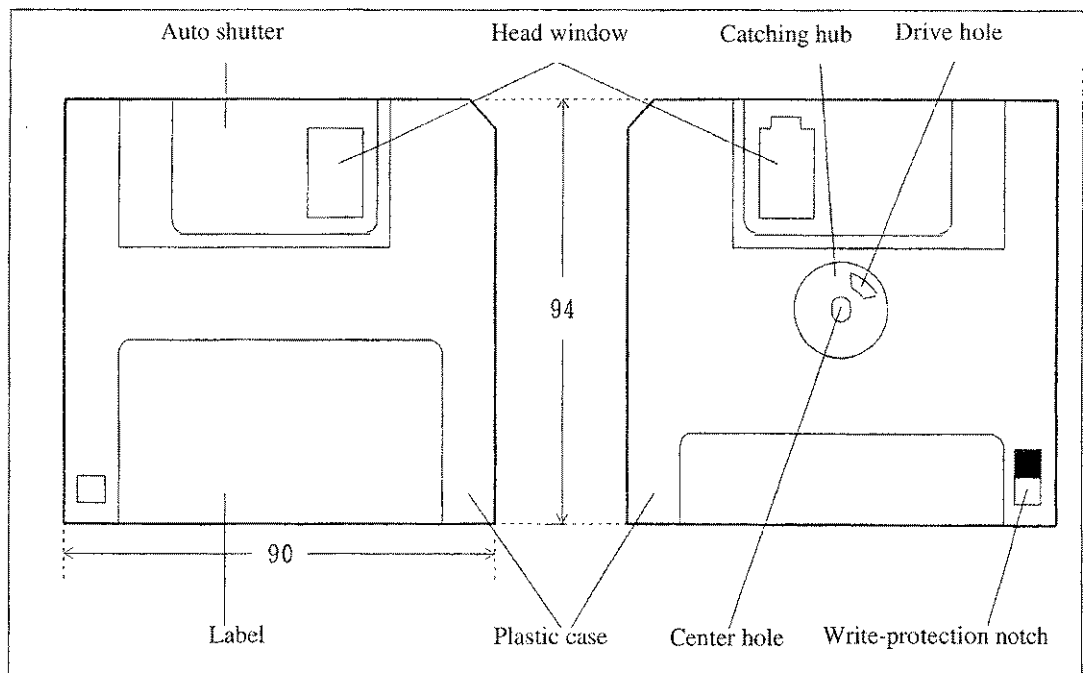


Figure 1-1 External Appearance and Names of Parts of Micro-Floppy Disk

1.3 Floppy Disk

- Label: Adhesive label for floppy disk
- Head window: The READ/WRITE head is positioned at the corresponding opening on the back of the floppy disk. The head is aligned with this slot.
When the floppy disk is pulled out from the drive slot, the auto shutter closes to protect the disk.
- Catching hub (drive hole, center hole): When the floppy disk is inserted into the drive slot, a spindle which uses a catching magnet on the drive side fixes and rotates the floppy disk.
- Write-protect window: Writing can be prohibited to prevent important data from being erased by mistake.

2. Insertion and handling of floppy disks

Insert the floppy into the disk drive with the label facing upwards, as shown in Figure 1-2.

Check that the disk is fully inserted in the drive by pushing it in with a finger. The disk is ejected automatically when the eject button is pressed.

CAUTION: *Never press the eject button while the floppy drive lamp is blinking, since this could result in incorrect operation or data loss.*

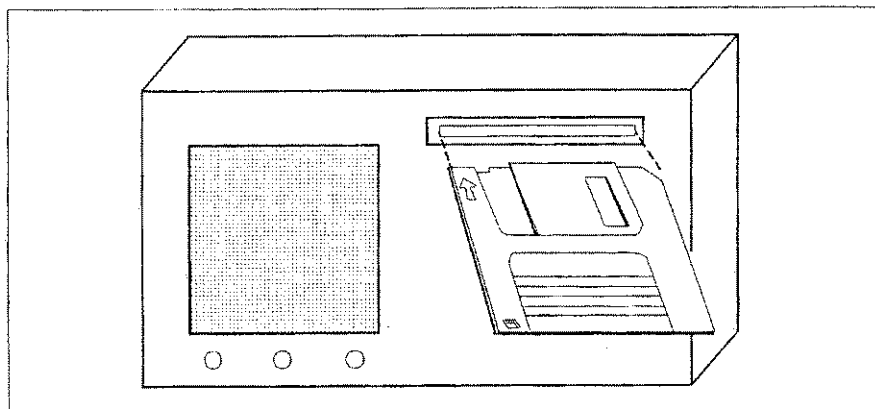


Figure 1-2 Inserting Floppy Disk (for R3765/67)

When handling floppy disks, pay attention to the following items.

- Keep away from materials which generate a strong magnetic field.
- Do not expose to extreme heat or direct sunlight.
- Take care to avoid cigarette ash and other contaminants.
- Do not touch the magnetic surface.
- Do not place heavy objects on disks.
- Damaged disks (wet, dripped, bent, etc.) or those which have been contaminated with foreign particles should be changed.

3. Write protect

Important data should be protected from accidental erasure by using the write-protect shutter.

To protect data, slide the write-protect tub (Figure 1-3).

Writing is possible when the tub is closed to the center hole and not possible when furthest from the center hole.

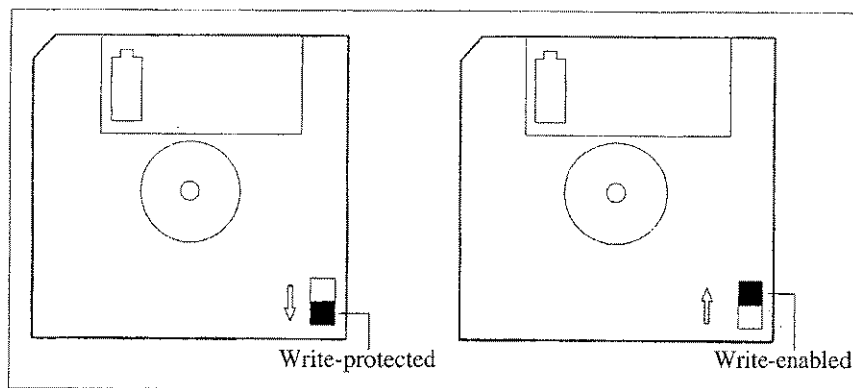


Figure 1-3 Write-Protect Tab Position

1.4 File Management

1.4 File Management

The management of disk files for the analyzer is the same as for disk files created by MS-DOS. In other words, the analyzer can use MS-DOS-formatted floppy disks itself, and files created by the analyzer can be referenced from MS-DOS.

1. File

Generally, a group of data is called a "file". BASIC programs edited on personal computers (PCs) and data created by BASIC are all stored as files.

2. Directory

Each directory can manage the file.

The analyzer does not have a function to create the directory, but can refer to files in the sub-directory.

3. Drive

Files are stored on disks such as floppy disks and memory disks. A unit which reads and writes files is called a "drive". Each drive manages one disk. The following four drives are provided for the analyzer:

- For R3764/65/66/67H series

A: Floppy disks

Same as floppy disks created using MS-DOS

B: Memory disks which cannot be backed up

These disks are automatically formatted when the analyzer is switched on. When the analyzer is switched off, the contents of the disk are lost.

BASIC can use up to 128 Kbytes, but when the register is used, the usable capacity decreases.

C: Memory disks which can be backed up

The contents of the disk can be maintained when the analyzer is switched off.

BASIC can use up to 900 Kbytes, but when the register is used, the usable capacity decreases.

D: Read-only memory disks

These disks maintain the system program of the analyzer.

BASIC cannot use these memory disks.

To select the current drive, refer to the instruction manual for each model of analyzer.

- For R3765/67G series

Files are stored on disks such as floppy disks and memory disks. A unit which reads and writes files is called a "drive". Each drive manages one disk. The following five drives are provided for the analyzer:

A: Floppy disks

Floppy disks formatted as FAT16 on MSDOS Ver. 3.0 can be used.

B: Memory disks which cannot be backed up

Part of the built-in memory (DRAM) is allocated to the disk drive. Turning the power supply off deletes all the created files.

BASIC can use up to 128 Kbytes, but when the register is used, the usable capacity decreases.

C: Compact flash disk

The instrument is equipped with a compact flash disk used as a memory device.

BASIC can use up to 900 Kbytes, but when the register is used, the usable capacity decreases.

D: Compact flash disk

These disks maintain the system program of the analyzer.
BASIC cannot use these memory disks.

E: Compact flash disk

These disks maintain the system program of the analyzer.
BASIC cannot use these memory disks.

NOTE: *The maximum capacity varies depending on the option.*

To select the current drive, refer to the instruction manual for each model of analyzer.

4. Specifying files

The following shows how to specify a file containing drive and directory.

"drive name:/directory name/file name"

Usually, MS-DOS uses "\" ("\" in English mode) as a delimiter of directory. But this analyzer uses "/" instead. As "\" in the character string is used in particular in this analyzer as described in "4. BASIC statement", the analyzer uses "/" but not "\".

5. Initializing floppy disks

When a new floppy disk is to be used, it must first be initialized (formatted).

The following three initialization methods are possible:

- Execute the FORMAT command contained in MS-DOS by using the personal computer and use the formatted disk in the analyzer.
- Analyzer panel operation (Refer to the description of the panel operation.)
- Execute the INITIALIZE command contained in the BASIC program of the analyzer.

Generally, the format of floppy disk has the following five types.

- 1.44 Mbytes type (2HD, 512 bytes, 18 sectors)
- 1.2 Mbytes type (2HD, 1024 bytes, 8 sectors)
- 1.2 Mbytes type (2HD, 512 bytes, 15 sectors)
- 720 Kbytes type (2DD, 512 bytes, 9 sectors)
- 640 Kbytes type (2DD, 512 bytes, 8 sectors)

The analyzer can use these four types of floppy disk but 640 Kbytes type.

NOTE: *In PC9801 series, the default is 640 Kbytes type format when 2DD floppy is formatted by FORMAT command.*

The floppy used in this analyzer must be formatted to be 720 Kbytes type format.

1.5 Keyboard

1.5 Keyboard

101 type keyboard and 106 type keyboard prescribed by OADG (PC Open Architecture Developers' Group) can be connected.

In case of R3765/67 series, pressing PROGRAM key on the front panel, the keyboard for BASIC can be input.

CAUTION: *The keyboard must be connected before turning the power on.
If it's connected after turning the power on, the normal operation cannot be guaranteed.*

2. OPERATING BASICS

How to create, carry out, and end the program are shown below.

2.1 Program Creating

1. Creating with personal computer

The input and the edit are performed with personal computer, and the program is saved into the floppy disk in the form of ASCII.

2. Creating with keyboard

The input is performed with the line numbers of program, and the program is saved into the floppy disk.

CAUTION: *There's no constraint about the file extension, but in order to distinguish BASIC program files from others, use BAS for the extension.*

The character code that can be handled in BASIC is 7 bits ASCII code.

But if the following characters are used in the program statement, the program loading is stopped at the line, for they are not used in BASIC. (Except the case enclosed in double quotation marks.)

·
,
/
{
}
|

2.2 Program Carrying Out

2.2 Program Carrying Out

1. For R3764/66 series
 1. Mount the floppy disk, in which the program you want to carry out is saved, to the floppy disk drive of the analyzer.
 2. Press [LOAD] to display the files in the floppy disk.
 3. Use [↑] or [↓] to move the cursor to the file name which you want to load.
 4. Pressing [ENT], the program is loaded.
 5. Pressing [RUN], the program is carried out.
2. For R3765/67 series
 1. Mount the floppy disk, in which the program you want to carry out is saved, to the floppy disk drive of the analyzer.
 2. Press [RUN] to display the controller menu.
 3. Press {LOAD MENU} to display the files in the floppy disk.
 4. Use {CURSOR↑} or {CURSOR↓} cursor to move the cursor to the file name which you want to load.
 5. Pressing {LOAD}, the program is loaded.
 6. Pressing {RUN}, the program is carried out.

2.3 Program Ending

1. R3764/66 series
 1. Pressing [STOP], the program ends.
2. R3765/67 series
 1. Press [RUN] to display the controller menu.
 2. Pressing {STOP}, the program ends.

3. BASIC COMMANDS


In the BASIC, commands and statements are used.

Commands are carried out directly (not in the program) basically, while statements are carried out in the program basically.

Here describes about commands first.

3.1 Various Commands

BASIC has commands to edit, carry out programs and operate files. The following shows the structure of the BASIC commands..

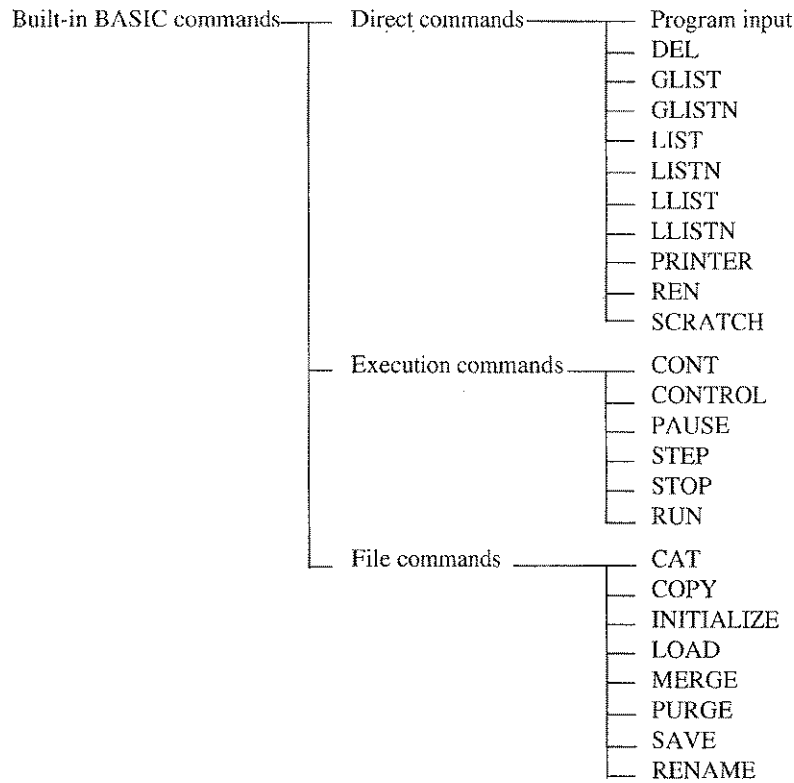

Note: A capital letter is used for command.

In these commands, some can be carried out in the program as statements

3.1.1 List of Command Function

3.1.1 List of Command Function

Command		Function	Possible as statements
EDIT commands	Program input	Stores the statement as a program.	×
	DEL	Deletes the specified line number.	×
	GLIST	Outputs the program list to the GPIB.	○
	GLISTN	Outputs the program list to the GPIB.	○
	LIST	Displays the program list on the screen.	○
	LISTN	Displays the program list on the screen.	○
	LLIST	Outputs the program list to the serial port.	○
	LLISTN	Outputs the program list to the serial port.	○
	PRINTER	Sets the GPIB address of the printer.	○
REN	Changes the line number.	○	
SCRATCH	Deletes the already input program.	×	
EXECUTION commands	CONT	Runs the program again.	×
	CONTROL	Sets the BASIC control variables. (Environment setup)	○
	PAUSE	Suspends the program. (Enables CONT command)	○
	STEP	Runs the program one line.	×
	STOP	Stops the program. (Disables CONT command)	○
RUN	Runs the program.	○	
FILE commands	CAT	Displays the file name in the current drive onto the screen.	○
	COPY	Copies the file.	○
	INITIALIZE	Initializes the floppy disk.	○
	LOAD	Loads (Invokes) the program.	○
	MERGE	Loads (Invokes) the program to add it to the already input program.	○
	PURGE	Purges the file.	○
	SAVE	Saves (Stores) the program.	○
	RENAME	Renames the file name.	○

3.1.2 List of Command Syntax

Command		Syntax
EDIT commands	Program input DEL GLIST GLISTN LIST LISTN LLIST LLISTN PRINTER REN SCRATCH	Line number Statement DEL Start line [, End line] GLIST [Start line] [, [End line]] GLISTN [Start line] [, [Number of line]] LIST [Start line] [, [End line]] LISTN [Start line] [, [Number of line]] LLIST [Start line] [, [End line]] LLISTN [Start line] [, [Number of line]] PRINTER Device address REN [[Current line number] [, <New line number> [, <Increment value>]]] SCRATCH [1 2]
EXECUTION commands	CONT CONTROL PAUSE STEP STOP RUN	CONT [Line number] CONTROL <Resistor number>;<Value> PAUSE STEP [Line number] STOP RUN [Line number "File name"]
FILE commands	CAT COPY INITIALIZE LOAD MERGE PURGE SAVE RENAME	CAT ["DATE"] COPY "Current file name", "New file name" INITIALIZE ["Volume label"] <Type> LOAD "File name" MERGE "File name" PURGE "File name" SAVE "File name" RENAME "Current file name", "New file name"

3.1.3 Precautions Common to All Commands

3.1.3 Precautions Common to All Commands

The following precautions are common to all of the built-in BASIC commands:

1. Parameters

The character string representation expression and numeric value representation expression can be used to specify command parameters. In other words, variables used in the BASIC command can be used. If the number used is a real number, digits to the right of the decimal point will be omitted.

The description of each command uses representations such as integers and character strings for easy understanding.

2. Boundary of expression

In principle, when the BASIC command uses multiple expressions continuously, a space can be used instead of a comma, as long as the boundary of the expressions can be interpreted in the syntax.

3. Line number in LIST, LISTN, LLIST, LLISTN, GLIST, and GLISTN.

The line number setting range is 1 to 65535.

If 0 or any value below the first line number of the program is specified, the analyzer will interpret that the first line of the program has been specified.

If 65535 or any value over the end line number of the program is specified, the analyzer will interpret that the end line of the program has been specified.

If the number which has been specified does not exist, the nearest number over the specified line number is selected. The label can be specified instead of the line number.

3.2 Command Grammar and Application

This index is used to easily find in Section 3.2.

<u>GPIB Command</u>	<u>Pages</u>
CAT	3-6
CONT	3-6
CONTROL	3-7
COPY	3-9
DEL	3-10
GLIST	3-11
GLISTN	3-12
INITIALIZE (INIT)	3-13
MERGE	3-18
LIST	3-14
LISTN	3-15
LLIST	3-16
LLISTN	3-17
LOAD	3-18
PAUSE	3-19
PRINTER	3-19
PURGE	3-19
SAVE	3-22
SCRATCH	3-23
REN	3-20
RENAME	3-21
STEP	3-23
RUN	3-21
STOP	3-24

3.2 Command Grammar and Application


1. Program Input

The commands and statements described in Chapters 3 and 4 can be entered as a program if line numbers are added to them.

If the same line number exists in a program which has already been input, the newly entered number will replace it. If the same line number does not exist, the new number will be added or inserted.

2. CAT

- Outline The CAT command is used to list the names of the files stored on the current drive.
- Syntax (1)-1

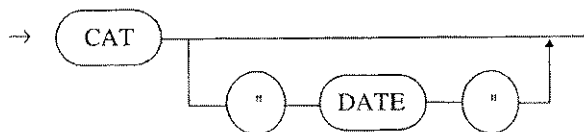


(1)-2
 CAT ["DATE"]

- Description The CAT command lists the names of the files and directories stored on the current drive.
 CAT: Displays the registered number, the file name, the number of bytes used, and the file attribute in that order from the left.
 CAT "DATE": Displays the registered number, the file name, and the date the file was created in that order from the left.

NOTE: For the information how to handle files, refer to "1.4 File Management".

3. CONT

- Outline The CONT command is used to restart the BASIC program.
- Syntax (1)-1

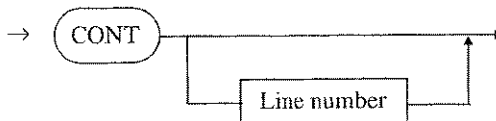

(1)-2
 CONT [Line number]


- Description • The CONT command restarts the BASIC program which is paused by the PAUSE command at the next of the line where the program pauses.
 • The CONT command restarts the BASIC program at the desired (specified) line. Cannot be used to initialize variables.
 • The CONT command cannot be used as a statement in the program.
- Example CONT
 CONT 200

4. CONTROL

- Outline
- Syntax

The CONTROL command is used to set the detailed values concerning the BASIC control (environment setup).

(1)-1



(1)-2

Description Register number;Value

- Description

- The CONTROL command specifies the items to be controlled by the register number. The value followed by a semicolon is the actual value.
- The value 1 to 9 can be set to the register number. The contents of each register are as follows. (However, the register 4 has not been used by means of internal structure.)

NOTE: *The contents of Register 1 shown below may differ depending on the model used.*

<Register 1> ... Initial value: 79

Sets a serial I/O port. The total of values added up is used to specify the serial I/O port. The following underlined-value is each default value which has been already set when the analyzer is turned on.

For R3764/65/66/67H series

1. Baud rate:	0; 1200 baud	3. Parity:	<u>0</u> ; None
	1; 2400 baud		16; Odd
	2; 4800 baud		48; Even
	<u>3</u> ; 9600 baud		
2. Character length:	0; 5 bits	4. Stop-bit number:	0; None
	4; 6 bits		<u>64</u> ; 1 bit
	8; 7 bits		128; 1.5 bits
	<u>12</u> ; 8 bits		192; 2 bits

For R3765/67G series

1. Baud rate:	0; 1200 baud	2. Parity:	<u>0</u> ; None
	1; 2400 baud		16; Odd
	2; 4800 baud		48; Even
	<u>3</u> ; 9600 baud		
	256; 14400 baud		
	257; 19200 baud	3. Character length:	
	258; 28800 baud		8; 7 bit
	259; 38400 baud		<u>12</u> ; 8 bit
	512; 57600 baud	4. Stop-bit number:	

3.2 Command Grammar and Application

5. Desired output	64; 1 bit
0; Serial port	128; 1.5 bits
1024; Printer port	192; 2 bits

Example: When 9600 bps for baud rate, 8 bits for character length, even parity for parity, and 2 bits for stop-bit number are used:

CONTROL 1;3+12+48+192
or
CONTROL 1;255

<Register 2>... Initial value: 0

With the command LLIST or GLIST, specifies the print position from the left side by entering the number of spaces.

Example: When the list output is moved to the right by five characters
Execute the CONTROL 2;5 first and the LLIST or GLIST, five spaces will be inserted immediately before the line number, then the list will be displayed after that.

<Register 3> ... Initial value: 0

Specifies whether the BASIC program will be displayed in full name or short name.

- 0: Full name
- 1: Short name

For the relationship between the full and short names, refer to Table 4-2.

<Register 5> ... Initial value: 0

Specifies whether the maintenance command POKE is available or not.

- 0: Not available
- 1: Available

<Register 7> ... Initial value: 0

Used for GPIB setting. Each value must be set as follows:

- 0: Sets GPIB mode to ADDRESSABLE.
- 1: Sets GPIB mode to SYSTEM CONTROLLER.
- 2: Transmits REQUEST CONTROL (request for control privilege).
- 4: Enables GPIB command setting from the external controller during BASIC operation.

<Register 8> ... Initial value: 0

Sets ON/OFF of DMA transfer mode.

- 0: OFF
- 1: ON

<Register 9> ... Initial value: 1

Specifies a desired output instrument for PRINT. The total of values added up is used to set up.


- 1: Default output (front panel indicator of each model)
- 2: Output to maintenance port (terminal)
- 4: Output to external monitor or R3765/67 LCD

Example 1:Output to default and maintenance port
CONTROL 9;3

Example 2:Output to default, maintenance port and external monitor
CONTROL 9;7

5. COPY

- Outline The COPY command is used to copy the files.
- Syntax (1)-1



(1)-2

COPY "current file name", "new file name"


- Description
 - The COPY command copies the contents of the current file name to a new file name.
 - When a new file name has already existed, the contents of the current file is overwritten.
 - If the new file name is the same as the current file name, then the error will be occurred.
 - Both of two file names can be specified by using a character-string expression.
 - If the drives are specified, the copy between the drives can be made. If there's no specification about the drive, the file copy is carried out in the current drive.

NOTE: For the information how to handle files, refer to "1.4 File Management".

3.2 Command Grammar and Application

6. DEL

- Outline The DEL command is used to delete lines in the program.
- Syntax (1)-1

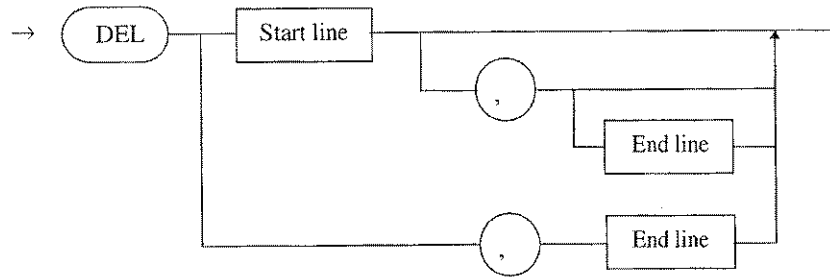

(1)-2

DEL <Start line [, [end line] > | <, end line>

NOTE: A space may be used instead of a comma.
The line number setting range is 1 through 65535.


- Description
 - The DEL command deletes the program from the start line to the end line.
 - If the line number is omitted, the no operation will be performed.
 - The DEL command cannot be used as a statement in the program.
- Example
 - DEL 10 Deletes the 10th line only of the program.
 - DEL 10, Deletes the program from line 10 to the end line.
 - DEL 10,100 Deletes the program from line 10 to line 100.
 - DEL, 100 Deletes the program from the start line to line 100.

7. GLIST

- Outline
- Syntax

The GLIST command is used to output a program list to peripheral devices such as a printer, etc. through the GPIB.

(1)-1

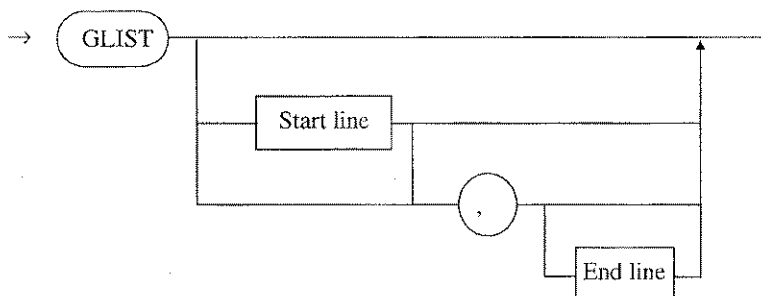

(1)-2

GLIST [Start line [, [end line]]] | [, [end line]]

NOTE: A space may be used instead of a comma.
 The line number setting range is 1 through 65535.
 The label can be used instead of the line number.

- Description
 - The GLIST command outputs the BASIC programs list to peripheral devices such as a printer, etc. connected with the GPIB.
 - The printer GPIB address can be define by the PRINTER statement or the panel key operation of R3764/66, R3765/67.
 - SYSTEM CONTROLLER is made by the panel operation of the analyzer.
- Example

GLIST	Outputs all lines of the program list.
GLIST 100	Outputs the 100th line only of the program list.
GLIST 100,	Outputs the program list from line 100 to the end line.
GLIST 100, 200	Outputs the program list from line 100 to line 200.
GLIST,	Outputs all lines of the program list. (Same as GLIST)
GLIST, 200	Outputs the program list from the start line to line 200.


3.2 Command Grammar and Application

8. GLISTN

- Outline
- Syntax

The GLISTN command is used to output a program list to peripheral devices such as a printer, etc. through the GPIB.

(1)-1

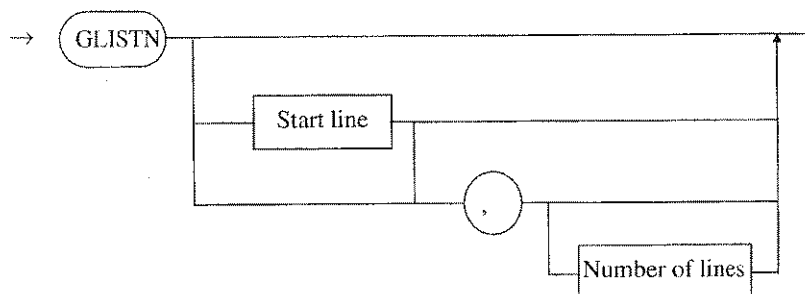

(1)-2

GLISTN [Start line [, [number of lines]]] | [, [number of lines]]


NOTE: A space may be used instead of a comma.
 The line number setting range is 1 through 65535.
 The label can be used instead of the line number.

- Description
 - The GLISTN command outputs the BASIC programs list to peripheral devices such as a printer, etc. connected with the GPIB.
 - The printer GPIB address can be define by the PRINTER statement or the panel key operation of R3764/67, R3765/67.
 - SYSTEM CONTROLLER is made by the panel operation of the analyzer.
 - The GLISTN command outputs specified lines of the program list from the start line number specified at the start line.
 - When the line number is a negative value, this command outputs the program list toward the lower order numbers.
- Example

GLISTN	Outputs all lines of the program list.
GLISTN 100	Outputs the 100th line only of the program list.
GLISTN 100,	Outputs the program list from line 100 to the end line.
GLISTN 100, 20	Outputs 20 lines of the program list from line 100.
GLISTN,	Outputs all lines of the program list. (Same as GLISTN)
GLISTN, 20	Outputs 20 lines of the program list from the start line.

9. INITIALIZE (INIT)

- Outline The INITIALIZE command is used to initialize a floppy disk.
- Syntax (1)-1

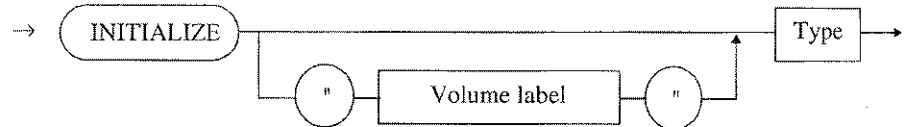

(1)-2

INITIALIZE ["Volume label"] Type

- Description
 - The INITIALIZE command initializes a new floppy disk or the floppy disk to be copied with the format specified by the floppy type setting.
 - The volume label can be specified at the initialization. If omitted, there is no volume label
 - Specify the types of floppy disks as follows:
 - Floppy type: 0; 720 KB (512 bytes, 9 sectors) 2DD
 - 1; 1.2 MB (1024 bytes, 8 sectors) 2HD
 - 2; 1.4 MB (512 bytes, 18 sectors) 2HD
 - 3; 1.2 Mbytes (512 bytes, 15 sectors) 2HD

CAUTION: The analyzer automatically discriminates between 2DD and 2HD disks. If the different type (floppy disk) is inserted in the floppy disk drive, make sure to initialize it with the following default setting:


Default setting: 720 KB for 2DD (type 0)
1.2 MB for 2HD (type 1)

NOTE: For the information how to handle files, refer to "1.4 File Management".

3.2 Command Grammar and Application

10. LIST

- Outline The LIST command is used to display a program list on the display.
- Syntax (1)-1

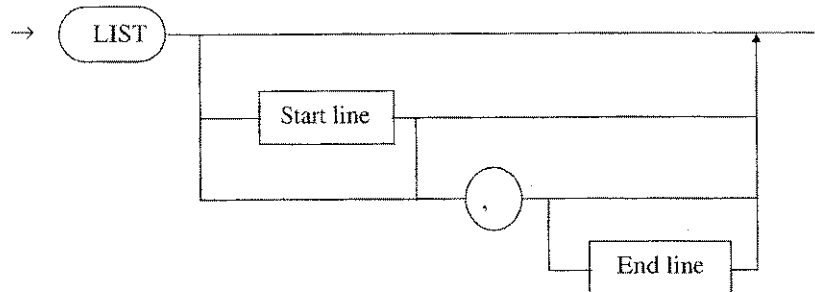

(1)-2

LIST [Start line [, [end line]]] | [, [end line]]

NOTE: A space may be used instead of a comma.
 The line number setting range is 1 through 65535.
 The label can be used instead of the line number.

- Description
 - The LIST command displays the BASIC program list specified by the parameters on the display.
 - The display of the program list can be aborted using the STOP key. However, since the stop operation differs from the program operation, the program list cannot be re-displayed from the aborted line.
- Example


LIST	Outputs all lines of the program list.
LIST 100	Outputs the 100th line only of the program list.
LIST 100,	Outputs the program list from line 100 to the end line.
LIST 100, 200	Outputs the program list from line 100 to line 200.
LIST,	Outputs all lines of the program list. (Same as LIST)
LIST, 200	Outputs the program list from the start line to line 200.

11. LISTN

- Outline
- Syntax

The LISTN command is used to display a program list on the display.

(1)-1

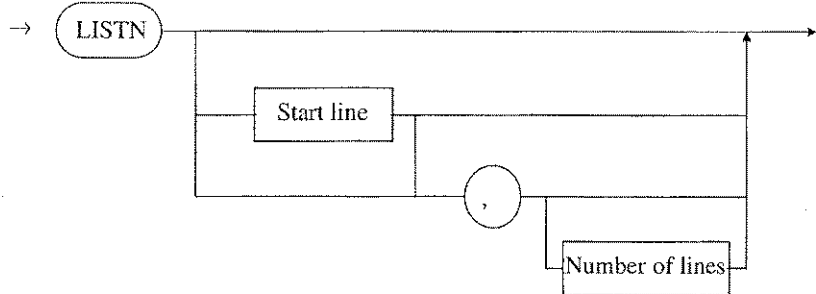

(1)-2

LISTN [Start line [, [number of lines]]] [, [number of lines]]

NOTE: *A space may be used instead of a comma.
 The line number setting range is 1 through 65535.
 The label can be used instead of the line number.*


- Description The LISTN command displays the BASIC program list specified by the parameters on the display.
- Example

LISTN	Outputs all lines of the program list.
LISTN 100	Outputs the 100th line only of the program list.
LISTN 100,	Outputs the program list from line 100 to the end line.
LISTN 100, 20	Outputs 20 lines of the program list from line 100.
LISTN,	Outputs all lines of the program list. (Same as LISTN)
LISTN, 20	Outputs 20 lines of the program list from the start line.

3.2 Command Grammar and Application

12. LLIST

- Outline The LLIST command is used to output a program list to peripheral devices such as a printer, etc. through the serial port.
- Syntax (1)-1

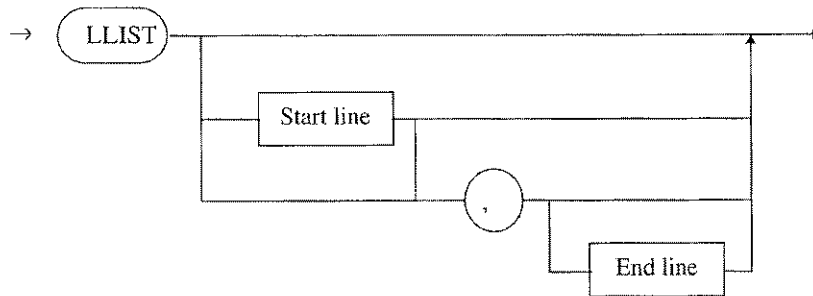

(1)-2

LLIST [Start line [, [end line]]] | [, [end line]]

NOTE: *A space may be used instead of a comma.
 The line number setting range is 1 through 65535.
 The label can be used instead of the line number.*

- Description The LLIST command outputs the BASIC program list to peripheral devices such as a printer, etc. connected with the serial port.
- Example LLIST Outputs all lines of the program list.
 LLIST 100 Outputs the 100th line only of the program list.
 LLIST 100, Outputs the program list from line 100 to the end line.
 LLIST 100, 200 Outputs the program list from line 100 to line 200.
 LLIST, Outputs all lines of the program list. (Same as LLIST)
 LLIST, 200 Outputs the program list from the start line to line 200.


NOTE: *When the R3765/67G series is used, the CONTROL command changes the data output to the printer port.*

13. LLISTN

- Outline
- Syntax

The LLISTN command is used to output a program list to peripheral devices such as a printer, etc through the serial port.

(1)-1

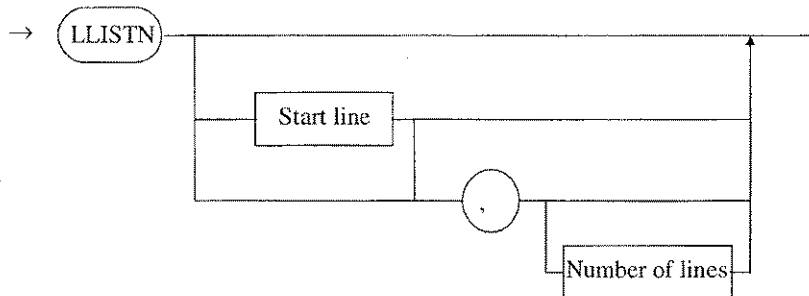

(1)-2

LLISTN [Start line [, [number of lines]]] | [, [number of lines]]

NOTE: The line number setting range is 1 through 65535.
The label can be used instead of the line number.

- Description
 - The LLISTN command outputs the BASIC program list to peripheral devices such as a printer, etc. connected with the serial port.
 - The LLISTN command outputs specified lines of the program list from the start line number specified at the start line.
 - When the line number is a negative value, this command outputs the program list toward the lower order line numbers.
- Example


LLISTN	Outputs all lines of the program list.
LLISTN 100	Outputs the 100th line only of the program list.
LLISTN 100,	Outputs the program list from line 100 to the end line.
LLISTN 100, 20	Outputs 20 lines of the program list from line 100.
LLISTN,	Outputs all lines of the program list. (Same as LLISTN)
LLISTN, 20	Outputs 20 lines

NOTE: When the R3765/67G series is used, the CONTROL command changes the data output to the printer port.

3.2 Command Grammar and Application

14. LOAD

- Outline The LOAD command is used to load the BASIC program file.
- Syntax (1)-1




(1)-2
LOAD "file name"

- Description
 - Loads the file specified by the file name. The files except BASIC must not be loaded.
 - If there's no specification about the drive, loads from the current drive.
 - If the program with no line number is loaded, the line number is attached automatically.

NOTE: For the information how to handle files, refer to "1.4 File Management".

15. MERGE

- Outline The MERGE command is used to load the BASIC program file and overwrite onto the program in the memory.
- Syntax (1)-1



(1)-2
MERGE "file name"

- Description
 - The MERGE command differs from the LOAD command, since the BASIC buffer is not initialized before loading.
 - The program already existing in the BASIC memory is not deleted unless the line number is the same.
 - The program without line number cannot be loaded.
 - The combination of the SCRATCH and MERGE commands represents the same function as the LOAD command.

NOTE: For the information how to handle files, refer to "1.4 File Management".

16. PAUSE

- Outline The PAUSE command is used to pause (suspend) a program operation.
- Syntax (1)-1



(1)-2

PAUSE

- Description
 - The PAUSE command suspends the BASIC program temporarily, or the BASIC program itself stops the program temporarily.
 - The program is restarted again at the next line of the suspended line by the CONT command.

- Example


```

10 FOR I=1 TO 9
20   GOTO 60
30   GOTO *PRT
40 NEXT I
50 PAUSE
60 !
70 X = I * I
80 GOTO 30
90 *PRT
100 PRINT I; "*" ;I; "=" ;X
110 GOTO 40
            
```

17. PRINTER

Refer to "44.PRINTER" in section 4.3.

18. PURGE

- Outline The PURGE command is used to purge files.
- Syntax (1)-1



(1)-2

PURGE "file name"


- Description
 - The PURGE command is used to purge files. Note that the purged files cannot be restored.
 - If there's no specification about the drive, the object drive is the current one.

NOTE: For the information how to handle files, refer to "1.4 File Management".

3.2 Command Grammar and Application

19. REN

- Outline The REN command is used to renew the line numbers of program.
- Syntax (1)-1

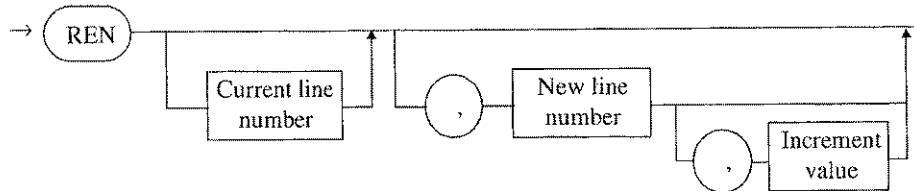

(1)-2


REN [[Current line number] [, New line number [, Increment value]]]

NOTE: *A space may be used instead of a comma.
The setting range of the current line number, the new line number and the increment value is 1 through 65535.*

- Description
 - The current line number specifies the head of the line number to be renewed in the current program.
 - The new line number specifies the start of the renewed line number.
 - The increment value specifies the step of the renewed line number.
 - The REN command renews the line number used in the GOTO and GOSUB statements corresponding to the new line number.
 - The REN command cannot be used to specify the line number exceeds 65535. Do not specify the program line with changing/modifying the order.
- Example
 - REN: Renews the start line to 10, and changes the line number by 10 steps till the end line.
 - REN 30, 50, 3: Renews the line number 30 to 50, and changes the line number by 3 steps till the end line.

20. RENAME

- Outline The RENAME command is used to rename the file name stored on a drive.
- Syntax (1)-1



(1)-2


RENAME "Current file name", "New file name"

- Description
 - The RENAME command renames only the file name stored without changing its contents.
 - If the same file exists in a floppy which has already been created, then no operation will be performed.
 - RENAME cannot be executed between the different drives. If there is no specification about the drive, the object drive is the current one.

NOTE: For the information how to handle files, refer to "1.4 File Management".

21. RUN

- Outline The RUN command is used to execute the BASIC program.
- Syntax (1)-1

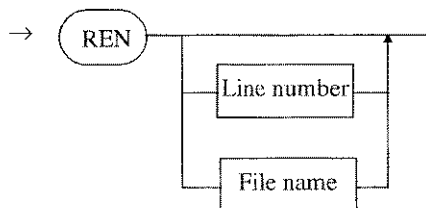

(1)-2

RUN [line number | file name]

- Description
 - The RUN command executes the BASIC program from the specified line.
 - If no line number is specified, the program will be executed from the start line.
 - If a file name is specified, the program will be executed after the specified file loaded. The start line cannot be specified.
 - When the RUN command is executed, all the variables are cleared and also the array declarations are forcibly cleared before program execution.
- Example RUN
 RUN 200

3.2 Command Grammar and Application

22. SAVE

- Outline
- Syntax

The SAVE command is used to save the BASIC program files.

(1)-1




(1)-2

SAVE "file name"

- Description

- The SAVE command stores the program (stored in the memory) into the file specified in the statement.
- If the already existed file name is specified, the specified file is assumed to update, then the file is overwritten.
- If there's no specification about the drive, the object drive is the current one.

CAUTION: *The file name uses numerics, alphabets and symbols (except for double quotations, and specify the file name as follows:*

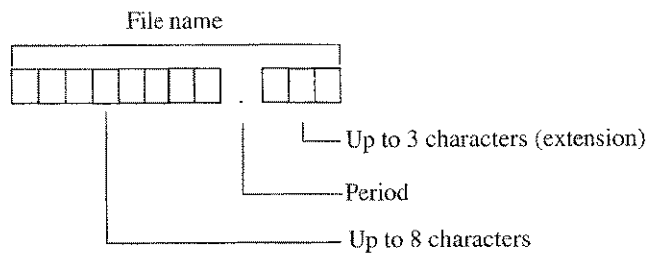

Use .BAS as much as possible for the extension.


NOTE: *For the information how to handle files, refer to "1.4 File Management".*

23. SCRATCH

- Outline
- Syntax

The SCRATCH command is used to scratch (erase) the BASIC program stored in the memory.

(1)-1

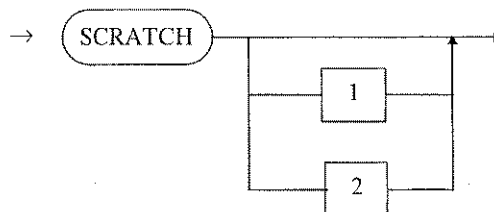

(1)-2

SCRATCH [1 | 2]

- Example

SCRATCH: Erases all the programs stored in the BASIC buffer.

SCRATCH 1: Initializes the program data only stored in the BASIC buffer.


SCRATCH 2: Initializes the program procedure only stored in the BASIC buffer.

24. STEP

- Outline
- Syntax

The STEP command is used to execute the only one line of the BASIC program.

(1)-1



(1)-2

STEP [line number]

- Description
- Example

- will be performed in the FOR statement.

- If the line number is omitted, the next line of currently suspended line is performed.

STEP
STEP 100

3.2 Command Grammar and Application

25. STOP

- Outline The STOP command is used to stop the BASIC program.
- Syntax (1)-1



(1)-2
STOP

- Description The STOP command stops the BASIC program execution or the BASIC program itself stops the program execution.

4. BASIC STATEMENT

4.1 Programming Rules


4.1.1 Program Structure

1. Statement

The BASIC program consists of various statements.

The statements are grouped into two types; control statement and executable statement.

Each statement consists of key words and expressions. The decision of the construction is the syntax rule for grammar.

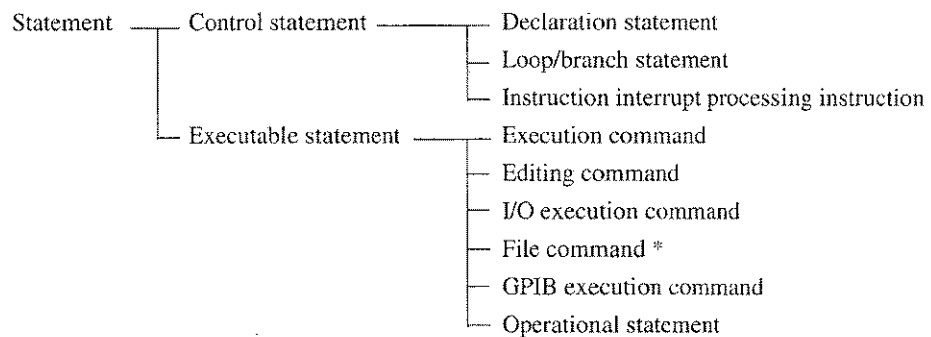

* : Describes in "Chapter 3. BASIC COMMANDS".

2. Key word

The term whose meaning and application are predetermined with BASIC is called a "key word". The same name as the key word cannot be used for any other purpose.

The key word that is frequently used and whose full name is long has a short name.

To change the appearance from the full name to the short name, CONTROL command should be used to set the control register 3 should be set to "0".

For information of key word list, refer to Table 4-1.

The relationship between the full and short names is shown in Table 4-2.

4.1.1 Program Structure

Table 4-1 Key Word List

AND	APPEND	AS	ASCII	BAND	BASIC(*)
BINARY	BNOT	BOR	BREAK	BUZZER	BXOR
CASE	CAT	CHKDSK	CIRCLE(*)	CLEAR	CLOSE
CLS	CMD	COLOR(*)	CONSOLE	CONT	CONTINUE
CONTROL	COPY	DELAY	COUNT	CSR	CURSOR
DATA	DEL	ELSE	DELIMITER	DIM	DISABLE
DSTAT	DUMP	ERROR	ENABLE	END	ENT
ENTER	GLISTN	GOSUB	EVENT	FOR	FORMAT
GLIST	INITIALIZE	INP	GOTO	GPRINT	IF
INIT	ISRQ	KEY	INPUT	INTEGER	INTERFACE
INTR	LISTEN	LISTN	LABEL(*)	LINE(*)	LINETYPE(*)
LIST	LPRINT	LOAD	LLIST	LLISTN	LOCAL
LOCKOUT	NOT	OFF	MERGE	MOVE(*)	NEXT
OUTPUT	OUT	PRF	ON	OPEN	OR
PRINT	PRINTER	RENAME	PAUSE	PEEK	POKE
RESTORE	PURGE	RUN	PRINTF	READ	RECTANGLE(*)
REQUEST	RETURN	SRQ	REM	REMOTE	REN
SEND	SPRINTF	THEN	SAVE	SCRATCH	SELECT
TALK	TEXT	UNTIL(*)	STEP	STOP	SYSTEM(*)
UNL	UNT		TIME	TO	TRIGGER
WAIT	XOR		USE	USING	USE

Note: A capital letter is used for keyword.

(*): They are the reserved keywords. Though they are not used, they cannot be used for variable names.

Table 4-2 Correspondence Table between Full Name and Short Name

Full Name	Short Name
CURSOR	CSR
ENTER	ENT
INITIALIZE	INIT
INPUT	INP
OUTPUT	OUT
PRINTF	PRF
USING	USE
PRINT	?

3. Expression

The expression consists of the object and operator and can be placed anywhere it can be grammatically specified to. (However, since the condition expression of IF statement interpret the symbol "-" as equal sign because of the compatibility with the conventional BASIC, the assignment expression cannot be written.)

There are three kinds of expressions, depending on which kinds of data type is used for the final value as a result of computation.

<arithmetic expression> <character string expression><logical expression>


Arithmetic expression: Results in an integer value or real value,

logical expression: Is determined by the syntax regardless of whether the expression includes the logical operator within itself and estimates the final value as logical value, i.e., "0" is false and "1" is true.

4.1.2 Object

4.1.2 Object

The item to be processed by BASIC is called "object". The object may be a constant, variable, and function and each object type consists of:

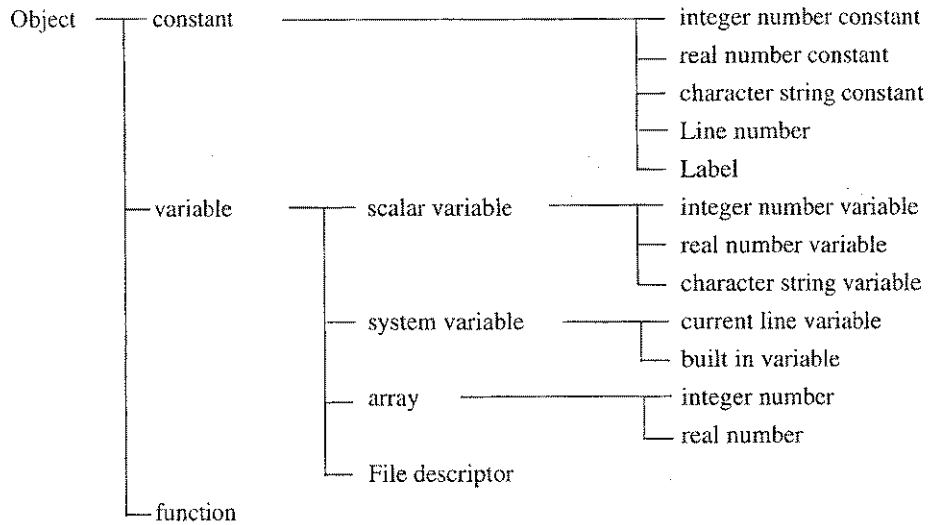

1. Constant

- Integer number constant

The constant which has no decimal point within a program is considered as an integer number. Since the constant is represented using four bytes inside, it can range from -2,147,483,648 to +2,147,483,647.

- Real number constant

The constant which has a decimal point or is represented using a floating decimal point such as 1E+20 is considered as a real number. Since the constant is represented using eight bytes (IEEE) inside, it can range from approx. -1E+308 to approx. 1E+308 and has an accuracy of 15 digits.

- Character string constant

To represent a character string, it must be enclosed with double quotation marks ("). It is possible to specify any character string between the empty string "" and a maximum of 128 character string. The unit of the included character is 8 bits and it is possible to represent up to 256 kinds of character units of 0 to 255. ASCII codes are used as character codes, which register special symbols to codes from 128 to 255.

For the program to represent the codes which are not assigned to the keyboard or to enter the INPUT statement, the form field (f) method is prepared using "\". Similarly, "\"" can be written to include the double quotation mark " into the character string.

To represent the ASCII control characters, escape sequences are prepared, as follows:

Table 4-3 Escape sequences

Escape sequences	Meanings	total number	Decimal number
\b	Back space	010	8
\t	Horizontal TAB	011	9
\n	Line field (new line)	012	10
\v	Vertical TAB	013	11
\f	Form field (clear screen)	014	12
\r	Carriage return	015	13

- Line number
Line number is shown by integer 1 to 65535, and specifies the line of the BASIC program.
- Label
Label can be used instead of the line number. For declaration, an asterisk (*) should be added to the beginning of the program.
The usable character is the same as the variable. However, since it is not a variable, any character cannot be substituted. In addition, the positions where the label can be written are limited to the line number part described in "4.3 Statement Syntax and Use" or the part where "label" is written.
- 2. Variable
The name of variable consists of up to 20 alphanumeric characters, starting with an alphabetic character.
If the last character of the variable name is \$: Character string variable
If the last character is (integer): Array type variable
If INTEGER statement does not declare the variable type, the variable is used as a real number type.

Table 4-4 Alphanumeric Characters

1,2,3,4,5,6,7,8,9,0
a,b,c,d,e,f,g,h,i,j,k,l,m,n,o,p,q,r,s,t,u,v,w,x,y,z
A,B,C,D,E,F,G,H,I,J,K,L,M,N,O,P,Q,R,S,T,U,V,W,X,Y,Z
-

4.1.2 Object

Example:	Variable types	
	value, v123:	Real number variable
	string\$, s123\$:	Character string variable
	array(3):	Array type real number variable
	INTEGER code:	Integer variable
	INTEGER week(7):	Array type integer number variable

- Scalar variable
 - Integer number variable
 - Real number variable
 - Character string variable

As long as the variable is not initialize, "0" is assigned to the numeric type variable. Therefore, if the variable is to be initialized to a specific value, it is necessary to specifically substitute a value in the program.

The value which can be stored each data type has the same amplitude as for the constant. The character string variable does not have the array. The character string has the length attribute similarly to the character string constant. To declare the length, DIM statement should be used.

```
DIM string${100}
```

If the reference is made without the declaration, the variable is considered as 18 character string. A part of the character string can be handled using the sub-string operator ([]).

Refer to "(7) Sub-string operator" in section 4.1.3.

```
string$ = "ADVANTEST CORPORATION"
PRINT string${1,14} ; "."
```

Result

```
ADVANTEST CORP.
```

- System variable
 - Current line variable @

Stores the line number of the program which is currently performed. Any value cannot be substituted.

LIST @: Displays the line currently performed.
 - Built -in variable

Is the variable which is automatically registered when the BASIC starts. The variable is initialized to a specific value and can be changed by substituting a specific value. To return it to the value when the BASIC starts, substitute that value specifically or initialize the BASIC with SCRATCH 1,SCRATCH.

```
PI: 3.14159.....
EXP: 2.71828.....
```

- Array

For declaration of the array, use DIM, INTEGER statement.

- Numeric value type array

If the reference is made without any declaration, the amplitude of that array (number of elements) is 10 as shown in the declaration below. The attached character is always assigned starting at 1.

```
DIM array(10)
```

```
INTEGER array(10)
```

- Real number type array DIM real(20)

- Integer number type array INTEGER int(30,40)

- File descriptor

The BASIC reads and writes files by using the file descriptor. Declaration is not necessary, but OPEN connects to the real file name. After OPENed, specify the file descriptor by using ENTER or OUTPUT to refer to the file. Since the file descriptor is a special variable, it cannot perform operations or print like other variables can.

3. Functions

All the functions are built-in type and grouped into the integer number type, real number type, and character string type, depending on its return value. In addition, since the function call can be written in an operation expression, it can be handled similarly to the variable.

```
string$ = "ADVANTEST"
PRINT string$
A = NUM("A")
a = NUM("a")
FOR idx = 1 TO LEN(string$);
  b = NUM(string${idx;1}) - A + a
  string${idx;1}=CHR$(b)
NEXT idx
PRINT STRING$
```

Result

```
ADVANTEST
```

```
advantest
```

4.1.2 Object

- Built-in functions


Functions	Descriptions
SIN (Arithmetic expression)	Sine (sin)
COS (Arithmetic expression)	Cosine (cos)
TAN (Arithmetic expression)	Tangent (tan)
ATN (Arithmetic expression)	Reverse tangent (\tan^{-1}) Unit of angle = radian
LOG (Arithmetic expression)	Natural logarithm
SQR (Arithmetic expression)	Square root
ABS (Arithmetic expression)	Absolute value
NUM (Character string expression)	Returns ASCII code for the first one character of the character string expression. Example: NUM ("A")--> 65
CHR\$ (Arithmetic expression)	Returns the character string of the ASCII code one character corresponding to the value of the arithmetic expression. Example: CHR\$ (65)--> "A"
LEN (Character string expression)	Returns the length of the character string expression. Example: LEN ("ADVANTEST")--> 9
POS (Arithmetic expression 1, Arithmetic expression 2)	Returns the digit of the head character of the character string corresponding to the character string expression 2 in the character string expression 1. Example: POS ("ADVANTEST", "AN")--> 4
Built-in functions	Functions to handle the measurement value For details, refer to "4.4 Built-in Function".

Though there is no built-in function to convert from character string to numeric variable and from numeric variable to character string, the conversion can be performed by assignment statement.

Example: A\$=A
A="123.4"

4.1.3 Operators

Operator are used to operate the object operand. An expression is coded by combining operators and objects.

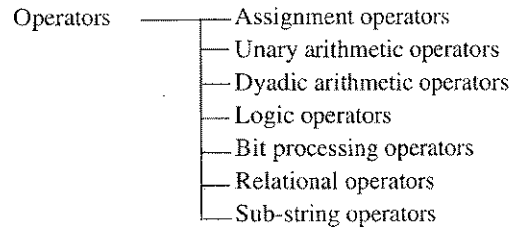

1. Assignment operators

The key word existed in the standard BASIC, which is called "LET" is not provided for the assignment operator. Assignment expression contains has its values and and makes up an expression.

```

PRINT a=1          ---> 1.0
PRINT a$="ADVANTEST" ---> "ADVANTEST"
PRINT (a=1)+a      ---> 2.0
  
```

The assignment operators are shown below:

=: Normal assignment

In the assignment for character-string variables, transmits the only effective value of right part.

```

Example: DIM string$ [20]
          PRINT LEN (string$ = "12345")
  
```

Result

5

=: Converts the value depending on the data type of left part, then assigns it to variable.

```

Example: string$ = 123.456 ---> "123.456"
          numeric = "123" ---> 123
          integer = 123.456 ---> 123
  
```

+=: a += 10 ---> a = a + 10

-=: a -= 10 ---> a = a - 10

*=: a *= 10 ---> a = a * 10

/=: a /= 10 ---> a = a / 10

%=: a %= 10 ---> a = a % 10

=<: Assigns the character strings left-justify to variables.

=>: Assigns the character strings right-justify to variables.

4.1.3 Operators

2. Unary arithmetic operators

-: Minus sign

+: Plus sign

++: Front/Back Increment

Front $b = ++a$... Adds 1 to a, then assigns ++a to b.

Back $b = a++$... Assigns a++ to b, then adds 1 to a.

--: Front/Back Decrement

Front $b = --a$... Subtracts 1 from a, then assigns --a to b.

Back $b = a--$... Assigns a-- to b, then subtracts 1 from a.

Example: $a = 10$; PRINT a++; PRINT a; PRINT --a; PRINT --a; print a

Result

10.0

11.0

10.0

9.0

9.0

NOTE: *The operations of front/back increment-decrement cannot be performed to the constant (real constant, integer constant).*

3. Dyadic arithmetic operators

+: Addition

-: Subtraction

*: Multiplication

/: Division

?: Modulo calculation (remainder)

^: Involution

&: Coupling characters

4. Logic operators

NOT Example NOT 1 Result 0

AND Example 1 AND 0 Result 0

OR Example 1 OR 0 Result 0

XOR Example 1 XOR 0 Result 0

5. Bit processing operators

In numeric expressions, only the integer type is available. Real type may result in an error.

BNOT	Example	B NOT 0	Result	-1
BAND	Example	2 BAND 3	Result	2
BOR	Example	2 BOR 3	Result	3
BXOR	Example	2 BXOR 3	Result	1

6. Relational operators

The following operators are provided, and the result of applying these operators is a boolean value, either TRUE or FALSE. At this case, TRUE is 1, and FALSE is 0. When the relational operation is resulted based on the BASIC syntax, if the value calculated finally resulted in 0, the result is determined as FALSE. All the values other than calculated values become TRUE.

=: Equal
 <>: Not equal (or !=)
 <
 >
 <=
 >=

Since the relational operations always perform the arithmetic operation according to the IF statement condition, the operator "=" is determined unconditionally as relational operator. Therefore, the assignment expression cannot be included in the IF statement conditional expression.

7. Sub-string operators

Enables to specify the character-string expression in part as character string.

Character-string expression [arithmetic expression 1, arithmetic expression 2]:

The sub-string operator is considered (defined) as from.
 "ADVANTEST" [1,5] ---> "ADVAN"

Character-string expression [arithmetic expression 1, arithmetic expression 2]:

The sub-string operator is considered (defined) as from.
 "ADVANTEST" [6,4] ---> "TEST"

4.2 Various Statements

4.2 Various Statements

4.2.1 Statement Function List

1. Basic (fundamental) statement

(1 of 2)

Statement	Function
BUZZER	Sounds the buzzer.
CLS	Clears the screen.
CONSOLE	Specifies the scroll area.
CURSOR	Moves the cursor.
DATA	Defines the numeric value or character string to be read out by READ statement.
DATE\$	Reads out the date of timer (RTC) built into the analyzer.
DIM	Defines the array variable or character-string variable.
DISABLE INTR	Disables the acceptance of the interruption.
ENABLE INTR	Enables the acceptance of the interruption.
ERRM\$	Returns the error message.
ERRN	Returns the error number.
FOR-TO-STEP, NEXT, BREAK, CONTINUE	Executes the loop processing.
FRE	Returns the BASIC program memory remaining capacity.
GOSUB,RETURN	Branches or returns to the subroutine.
GOTO	Branches to the specified line.
GPRINT	Outputs to the numeric value or character string to the GPIB.
IF-THEN, ELSE, END IF	Conditional branch
INPUT	Inputs from the panel key.
INTEGER	Defines the variable as an integer type.
KEY\$	Returns the panel key code of the analyzer.
LPRINT	Outputs the numeric value or character string to the serial port.
LET	Substitutes the expression for variable.
OFF ERROR	Cancels the branch when detecting the BASIC error.
OFF ISRQ	Cancels the interruption branch by ISRQ.
OFF KEY	Cancels the interruption branch by key input.
OFF SRQ	Cancels the interruption branch by SRQ.
ON DELAY	Branches after the specified time elapses.
ON ERROR	Defines the branch when detecting the BASIC error.
ON ISRQ	Defines the interruption branch by the internal request.
ON KEY	Defines the interruption branch by key input.
ON SRQ	Defines the interruption branch by externally GPIB SRQ.
PRINT [USING]	Displays the numeric value or character string.
PRINTER	Sets the printer GPIB address.

(2 of 2)

Statement	Function
PRINTF	Displays the numeric value or character string.
READ	Assigns the constant of DATA statement to the variable.
REM	Annotation
RESTORE	Specifies the data line to be read in next READ statement.
SELECT, CASE, END SELECT	Executes the multi branches with condition of expression value.
SPRINTF	Assigns the result according to PRINTF format to the character string.
TIMES	Returns the value of timer (RTC) built into the analyzer.
TIMER	Reads out and resets the value of the built-in system timer.
WAIT	Waits for the specified time.
WAIT EVENT	Waits for the occurrence of the specified event.

2. GPIB control statement

Statement	Function
CLEAR	Clears the device.
DELIMITER	Specifies the block delimiter.
ENTER	Inputs from the GPIB.
INTERFACE CLEAR	Clears the GPIB interface.
LOCAL	Cancel the remote control.
LOCAL LOCKOUT	Local lockout
OUTPUT	Outputs to the GPIB.
REMOTE	Remote control
REQUEST	Sets the status byte.
SEND	Outputs (sends) the command, data, and others to the GPIB.
SPOLL	Reads out the status byte.
TRIGGER	Outputs the group-execute trigger.

3. File control statement

Statement	Function
CLOSE	Closes the file.
DSTAT	Obtains the directory contents of floppy disk for the BASIC variable.
ENTER [USING]	Reads out the data from the file.
OFF END	Cancel the processing specified by ON END statement.
ON END	Defines the processing at the end of file.
OPEN	Opens the file.
OUTPUT [USING]	Outputs (writes) the data to the file.

4.2.2 Statement Syntax List

4.2.2 Statement Syntax List

1. Basic statement

(1 of 2)

Statement	Syntax
BUZZER	BUZZER <tone><time>
CLS	CLS
CONSOLE	CONSOLE <start line><end line>
CURSOR	CURSOR <X axis><Y axis>
DATA	DATA numeric constant character-string constant {, numeric constant character-string constant}
DATE\$	(1) DATE\$ (2) DATE\$ = "YY/MM/DD"
DIM	DIM <C> {, <C>}
DISABLE INTR	DISABLE INTR
ENABLE INTR	ENABLE INTR
ERRM\$	ERRM\$ (error number)
ERRN	ERRN
FOR-TO-STEP, NEXT, BREAK, CONTINUE	FOR numeric variable = numeric expression TO numeric expression [STEP numeric expression] [BREAK] [CONTINUE] NEXT [numeric variable]
FRE	FRE (numeric)
GOSUB, RETURN	GOSUB line number label RETURN
GOTO	GOTO line number label
GPRINT	GPRINT [A {, I; A}]
IF-THEN, ELSE, END IF	(1) IF <conditional expression> THEN <statement> (2) IF <conditional expression> THEN [ELSE IF <conditional expression> THEN] [multi statements] [ELSE] [multi statements] END IF
INPUT	INPUT ["<character-string>",] A {, A}
INTEGER	INTEGER {, }
KEY\$	KEY\$
LPRINT	LPRINT [A {, I; A}]
LET	LET <D> <E> {; <D> <E>}
OFF ERROR	OFF ERROR
OFF ISRQ	OFF ISRQ
OFF KEY	OFF KEY [key code]

(2 of 2)

Statement	Syntax
OFF SRQ	OFF SRQ
ON DELAY	ON DELAY time GOTO GOSUB line number label
ON ERROR	ON ERROR GOTO GOSUB line number label
ON ISRQ	ON ISRQ GOTO GOSUB line number label
ON KEY	ON KEY key code GOTO GOSUB line number label
ON SRQ	ON SRQ GOTO GOSUB line number label
PRINT {USING}	(1) PRINT [A {, !;A}] (2) PRINT USING format setup expression ; {, A}
PRINTER	PRINTER numeric expression
PRINTF	PRINTF format expression {, A}
READ	READ input item {, input item}
REM	REM [character string] or ![character string]
RESTORE	RESTORE line number label
SELECT, CASE, END SELECT	SELECT <numeric expression character-string expression> CASE <numeric expression character-string expression> multi statements [CASE ELSE] [multi statements] END SELECT
SPRINTF	SPRINTF character-string variable format specification {, A}
TIMES	TIMER (0 1)
TIMER	(1) TIMES\$ (2) TIMES\$ = "HH:MM:SS"
WAIT	WAIT time
WAIT EVENT	WAIT EVENT <event number>

A: numeric expression | character-string expression

B: numeric variable name [(numeric expression {, numeric expression})]

C: character-string variable [numeric expression]

D: numeric variable = Numeric expression

E: character-string variable = | =< | =>character-string expression

4.2.2 Statement Syntax List

- In PRINT USING format specification, specify the following image specifications by using a comma among images.
image specifications
 - D: Specifies the output digits with No. of D. A space is used to fill up the remaining blank in the specified field.
 - Z: Specifies the output digits with No. of Z. A zero is used to fill up the remaining blank in the specified field.
 - K: Displays the expression as it is.
 - S: Displays the PRINT USING format with a + or - sign flag at the position of S.
 - M: Displays the PRINT USING format with a - for negative and a space for positive at the position of M.
 - .: Displays the PRINT USING format to match the position "." with coming the decimal point.
 - E: Displays PRINT USING format with the exponent format (e, sign, exponent).
 - H: Same as K. However, use a comma for a decimal point.
 - R: Same as ".". However, use a comma for a decimal point.
 - *: Specifies the output digits with the number of *. A space is used to fill up the remaining blank in the specified field.
 - A: Displays one character.
 - k: Displays the character-string expression as it is.
 - X: Displays the character of one space.
 - Literal: Encloses a literal with \" when writing it to the format expression.
 - B: Displays the expression result using an ASCII code.
 - @: Form lead
 - +: Moves the display position to the top of the same line.
 - : Line feed
 - #: Does not line feed.
 - n: Specifies the number of repetition of each image by using numerics.

- In PRINTF format specification, specify the parameter immediately followed after % by using the following image.
 %[-] [0] [m] [. n] character
 - : Justifies the character with no space from left (if no specification, then from right).
 - 0: Sets the character, which is justified for the remaining blank in the specified field, to be 0.
 - m: Reserves the field for the character "m".
 - .n: Outputs the PRINT USING format with n-digit accuracy. In character string, this setup value is used for an actual character-string length.
- Character: d; decimal with sign s; character string
 o; octal e; floating-point expression (exponent format)
 x; hexadecimal f; floating-point expression

2. GPIB statement

Statement	Syntax
CLEAR	CLEAR [device address {, device address}]
DELIMITER	DELIMITER numeric expression
ENTER	ENTER device address ; B {, B}
INTERFACE CLEAR	INTERFACE CLEAR
LOCAL	LOCAL [device address {, device address}]
LOCAL LOCKOUT	LOCAL LOCKOUT
OUTPUT	OUTPUT device address {, device address} ;A {, A}
REMOTE	REMOTE [device address {, device address}]
REQUEST	REQUEST integer
SEND	SEND <C> <D> {, <C> <D>}
SROLL	SROLL (Device address)
TRIGGER	TRIGGER [device address {, device address}]

A: numeric expression

B: numeric variable

C: <CMD | DATA | LISTEN | TALK> [numeric expression {, numeric expression}]

D: UNL | UNT

4.2.2 Statement Syntax List

3. File control statement

Statement	Syntax
CLOSE	CLOSE #FD *
DSTAT	(1) DSTAT 0 <number of file> (2) DSTAT <index> <file name> <attribute> <size> <number of sector> <year> <month> <date> <time> <minute> <start sector> (3) DSTAT ;SELECT <character string> COUNT <variable>
ENTER [USING]	(1) ENTER #FD ; input item {, input item} (2) ENTER #FD USING "image specification" ; input item {, input item } }
OFF END	OFF END #FD
ON END	ON END #FD GOTO GOSUB integer label expression
OPEN	OPEN "file name" FOR processing mode AS #FD [; type]
OUTPUT [USING]	(1) OUTPUT #FD ; output item {, output item} (2) OUTPUT #FD USING "image specification" ; output item {, output item } }

FD: file descriptor

Processing mode: INPUT | OUTPUT

Type: BINARY | TEXT | ASCII

- ENTER USING image specification
image specification

- D: Interprets the numeric of D as an input digit and reads out it, then assigns it to the variable of the input item.
- Z: Same as D.
- K: Reads one line and converts it to the numeric data, then assigns it to the variable of the input item.
- S: Same as D.
- M: Same as D.
- .: Same as D.
- E: Same as K
- H: Same as K. However, use a comma for a decimal point.
- *: Same as D.
- A: Reads the number of A and assigns it to the character-string variable.
- k: Reads one line and assigns it to the character-string variable.
- X: Skips one character.
- Literal: Skips the the character-string numeric data enclosed with \".
- B: Reads one character and assigns it to the input item using an ASCII code.
- @: Skips one-byte data.
- +: Same as @.
- : Same as @.

- #: Ignored in ENTER statement.
- n: Specifies the number of repetition of each image by using numerics.
- OUTPUT USING image specification
 - image specification
 - D: Specifies the output digits with No. of D. A space is used to fill up the remaining blank in the specified field.
 - Z: Specifies the output digits with No. of Z. A zero is used to fill up the remaining blank in the specified field.
 - K: Displays the expression as it is.
 - S: Displays the OUTPUT USING with a + or - sign flag at the position of S.
 - M: Displays the OUTPUT USING with a - for negative and a space for positive at the position of M.
 - .: Displays the OUTPUT USING to match the position "." with coming the decimal point.
 - E: Displays OUTPUT USING with the exponent format (e, sign, exponent).
 - H: Same as K. However, use a comma for a decimal point.
 - R: Same as ".". However, use a comma for a decimal point.
 - *: Specifies the output digit with the number of *. A space is used to fill up the remaining blank in the specified field.
 - A: Displays one character.
 - k: Displays the character-string expression as it is.
 - X: Displays the character of one space.
 - Literal: Encloses the literal with \" when writing it in the format expression.
 - B: Displays the expression result using an ASCII code.
 - @: Outputs the form lead.
 - +: Outputs the carriage return.
 - : Outputs the line feed.
 - #: Does not hang the line feed immediately followed after the last item.
 - n: Specifies the number of repetition of each image by using numerics.

4.3 Statement Syntax and Use

4.3 Statement Syntax and Use

This index is used to easily find in Section 4.3.


<u>Operation Key</u>	<u>Pages</u>	<u>Operation Key</u>	<u>Pages</u>
CLEAR	4-22	ON SRQ, ON ISRQ	4-64
CLOSE	4-23	OPEN	4-66
CLS	4-24	OUTPUT	4-68
CONSOLE	4-24	OUTPUT USING	4-71
CURSOR	4-25	PRINTER	4-76
BUZZER	4-21	PRINTF	4-77
DATA	4-26	READ	4-78
DATE\$	4-27	REM	4-79
DELIMITER	4-28	SELECT, CASE, ENS SELECT	4-84
DIM	4-29	REMOTE	4-80
DISABLE INTR	4-30	SEND	4-85
ENABLE INTR	4-32	REQUEST	4-81
ENTER	4-33	RESTORE	4-83
ENTER USING	4-36	SROLL	4-86
ERRM\$	4-38	SPRINTF	4-87
ERRN	4-39	TIMES	4-89
DSTAT	4-31	TIMER	4-88
GOSUB, RETURN	4-43	TRIGGER	4-90
FOR-TO-STEP, NEXT, BREAK, CONTINUE	4-40	PRINT	4-73
GOTO	4-44	WAIT	4-91
GPRINT, LPRINT	4-45	WAIT EVENT	4-91
FRE	4-42		
IF-THEN, ELSE, END IF	4-46		
INPUT	4-49		
INTEGER	4-50		
INTERFACE CLEAR	4-52		
KEY\$	4-53		
LET	4-54		
LOCAL	4-55		
LOCAL LOCKOUT	4-56		
OFF END	4-57		
OFF ERROR	4-57		
OFF KEY	4-58		
OFF SRQ, OFF ISRQ	4-59		
ON DELAY	4-60		
ON END	4-61		
ON ERROR	4-62		
ON KEY	4-63		

1. BUZZER

- Outline
- Syntax

The BUZZER statement is used to sound alarm.

(1)-1



(1)-2

BUZZER integer 1, integer 2

NOTE: An integer 1 is used to specify the tone at the range of 0 (high tone) to 65535 (low tone).
An integer 2 is used to specify the duration (unit: ms)

- Description
- Example

The BUZZER statement sounds the buzzer built into the analyzer in accordance with the specified range

```

10 FOR I=0 TO 255
20   BUZZER I, 10
30 NEXT I
40 STOP
  
```


4.3 Statement Syntax and Use

2. CLEAR

- Outline
- Syntax

The CLEAR statement is used to set the all devices connected to a GPIB or the selected particular devices to an initial state. In other word, this statement clears the all setup values for devices.

(1)-1

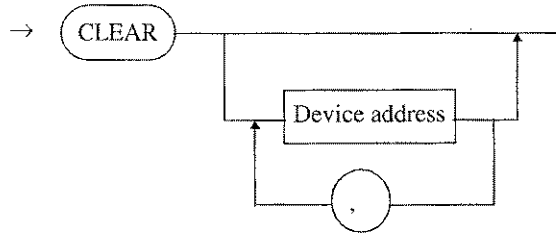

(1)-2

CLEAR [device address {, device address}]

- Description
- Example
- Note

- If only the CLEAR statement is performed without specifying the device address, the universal Device Clear (DCL) command will be sent. By the DCL command, all the devices, which is connected to a GPIB, could be set to the initial state.
- When the device address is specified followed after the CLEAR statement, only the devices which are specified by the device address are addressed, then the Select Device Clear (SDC) command is sent. By the SDC command, only the particular devices is set to the initial state. Multiple unit-address can be specified.
- The initial state that is defined for each unit in the CLEAR statement depends on each unit.

```
10 CLEAR
20 CLEAR 2
30 CLEAR 1, 3, 5, 7
```


The CLEAR statement is not available in ADDRESSABLE mode.

3. CLOSE

- Outline
- Syntax

The CLOSE statement is used to close files assigned to a file descriptor.

(1)-1

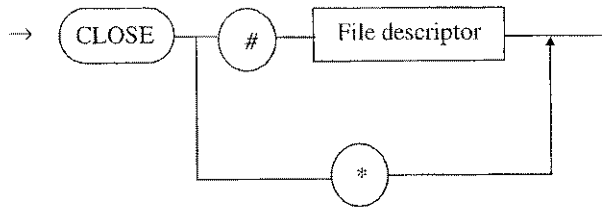

(1)-2

CLOSE <#file descriptor | *>

- Description
 - All files opened by the OPEN command must be closed before removing a floppy disk or turning off the power of devices. If not, the files may be damaged.
 - In BASIC program, when operation is suspended using the PAUSE or STOP key, files are not closed automatically. In other cases, all files are closed automatically after programming, also after termination with an error. However, if ON ERROR is set in instrument, the files will not be closed. By reasons above, be sure to perform the close operation certainly by using the following method (specification method for closing all files using the command) at the error termination.

CLOSE *

- The files are closed automatically when command such as SCRATCH or LOAD is executed.

NOTE: For the information how to handle files, refer to "1.4 File Management".

4.3 Statement Syntax and Use

4. CLS

- Outline The CLS statement is used to clear the display on the screen.
- Syntax (1)-1




(1)-2

CLS

- Description
 - The CLS statement clears the characters displayed on the screen and immediately returns the cursor to the original position.
 - The CLS statement clears the scroll range specified by CONSOLE.
- Example 10 CLS

5. CONSOLE

- Outline The CONSOLE statement is used to specify the scroll range.
- Syntax (1)-1



(1)-2

CONSOLE start line , end line

NOTE: If any value below the start line is specified as the end line, the start line is assigned to the end line


- Description
 - The CONSOLE statement sets the scroll range of the text screen.
 - The range of start line and end line is specified as follows:

R3764/66 (fluorescent character display tube);	0 to 7
R3764/66 (external monitor);	0 to 29
R3765/67;	0 to 29
- Example


```
10 CONSOLE 0,5
20 PRINT "This is Network Analyzer"
30 PRINT "...Sweep Check Program...."
40 STOP
```


6. CURSOR

- Outline The CURSOR statement is used to move the cursor to the specified coordinate position.
- Syntax (I)-1



(I)-2

CURSOR numeric expression 1, numeric expression 2

NOTE: *Numeric expression 1: X-axis specification (column direction)*
 Numeric expression 2: Y-axis specification (line direction)
 A space may be used instead of a comma.

- Description
 - The CURSOR statement moves the cursor to the specified position on the screen.
 - The numeric expression 1 is used to specify X-axis coordinate, and the numeric expression 2 is used to specify Y-axis coordinate.
 - The range of X-axis coordinate and Y-axis coordinate is specified as follows:
 R3764/66 (fluorescent character display tube);

$0 \leq X \leq 31$ $0 \leq Y \leq 7$

R3764/66 (external monitor); $0 \leq X \leq 79$ $0 \leq Y \leq 29$

R3765/67; $0 \leq X \leq 66$ $0 \leq Y \leq 29$

- Example


```

10 CLS
20 X=4:Y=4:X1=1:Y1=1
30 CURSOR X, Y:PRINT "";
40 X=X+X1:Y=Y+Y1
50 CURSOR X, Y:PRINT "*";
60 IF X<=0 OR 67<=X THEN X1 *=-1
70 IF Y<=0 OR 29<=Y THEN Y1 *=-1
80 GOTO 30
90 STOP
      
```


4.3 Statement Syntax and Use

7. DATA

- Outline
- Syntax

The DATA statement is used to define the numeric and the character string to be read out by the READ statement.

(1)-1

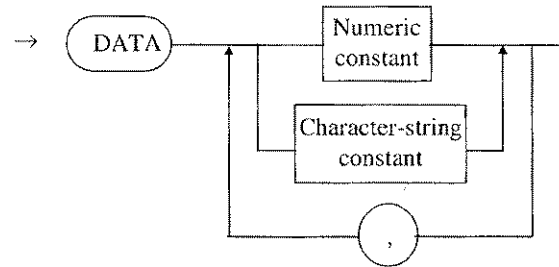

(1)-2

DATA <numeric constant | character-string constant> {, <numeric constant | character-string constant> }

- Description
- Note

- Since the DATA statement does not become the object to be executed, so it can be placed in any statement number. Generally, the DATA statement is necessary based on the order read out by the READ statement.
 - The READ statement searches the DATA statement in the program and retrieves the data to be read.
 - To change this order, use the RESTORE statement.
 - In DATA statement, multiple constants can be defined, by using commas or spaces for separating the constants. The character string is enclosed with double quotation as character-string constant.
 - After the DATA statement, multi-statement separated by a colon cannot be used.
- In DATA statement, the parameters (expressions) which include variables cannot be used.

8. DATES\$

- Outline
- Syntax

The DATES\$ statement is used to read out date and to change the date.


(1)-1



(1)-2

DATES\$

(2)-1



(2)-2

DATES\$ = "year/month/day"

- Description

- The DATES\$ statement reads out the date of the system built-in timer (RTC).

- The read out date can be changed.

Input as follows:

DATES\$=" 0/1/1"

or

DATES\$=" 00/01/01"

- Example


```

10 DIM DS[10]
20 DS=DATES$
30 PRINT "Date is ":DS
40 PRINT "Date Reset"
50 DATES$="0/1/1"
60 STOP
    
```

4.3 Statement Syntax and Use

9. DELIMITER

- Outline The DELIMITER statement is used to select four types of delimiters and to set them.
- Syntax (1)-1



(1)-2

DELIMITER numeric expression


- Description • The DELIMITER statement sets the delimiter corresponding to the number resulted by numeric expression.
The following table shows the selection numbers and the types of delimiters.

Selection No.	Type of delimiter
0	Outputs 2-byte code of CR and LF. Also outputs single signal EOI immediately with LF output.
1	Outputs 1-byte code of LF.
2	Outputs single signal EOI immediately with end of data byte.
3	Outputs 2-byte code of CR and LF.

- If the result of numeric expression exceeds the range of 0 to 3, an error may occur.
Numeric digits that follow after a decimal point are ignored and recognized as an integer.
- "DELIMITER = 0" is automatically set as a default value when the power is turned on.
- Example 10 DELIMITER 0
 20 DELIMITER 1

10. DIM

- Outline The DIM statement is used to define the array variable or character-string variable.
- Syntax (1)-1

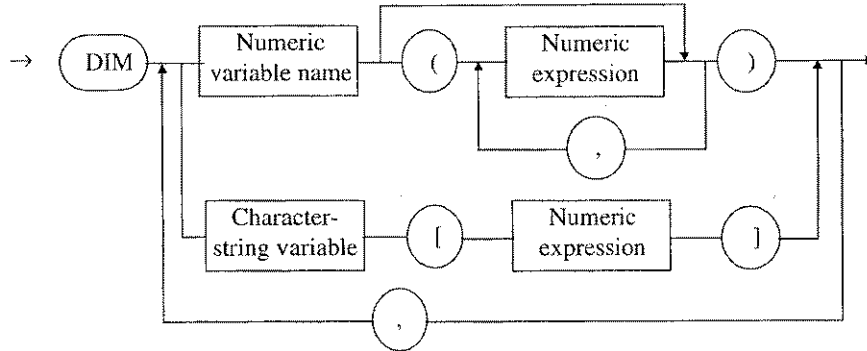

(1)-2

DIM <A | B> {, <A | B>}

NOTE: *A: numeric variable name [(numeric expression [, numeric expression])]*
 B: character-string variable [numeric expression]


- Description
 - When the array variable and character-string variable are used, the array variable name and the character length of array variable must be defined by DIM statement. If the array variable is used with no definition, the array variable will become 10 prime numbers in one dimension, and the character string will be the length of 18 characters.
 - When the array declaration is performed by the DIM statement, the specified size array variable is reserved into memory. If more array declaration is performed, the remaining capacity (space) of BASIC program will be decreased and then the program may stop and will be resulted in an error (memory space full).
 - The numeric expression that indicates an array variable size recognizes the real number as an integer by omitting the digit followed after a decimal point, even if the calculation has resulted in a real expression. A zero cannot be used for an array variable.
 - Numeric expression is used to declare the length of character string for character-string variable.

• Example	10 DIM N(5)	<Result>
	20 FOR I = 1 TO 5	0.5
	30 N(I) = I*I/2	2.0
	40 NEXT I	4.5
	50 FOR I = 1 TO 5	8.0
	60 PRINT N(I)	12.5
	70 NEXT I	

4.3 Statement Syntax and Use

11. DISABLE INTR

- Outline The DISABLE INTR statement is used to prohibit the interruption reception.
- Syntax (1)-1



(1)-2

DISABLE INTR

- Description
 - The DISABLE INTR statement prohibits the interruption by ENABLE INTR statement.
 - When the interruption is permitted again after the DISABLE INTR statement performs, the ENABLE INTR statement must be performed. At this case, the branch condition set by ON XXX statement is kept as the previous condition. However, if the condition of interruption branch is changed, it can be set using ON XX or OFF XXX statement before the ENABLE INTR performs.
 - After immediately executing (running) the program, the interruption is prohibited until the ENABLE INTR is executed.
- Example

```
10 ON KEY 1 GOTO 60
20 ENABLE INTR
30 ! LOOP
40 GOTO 30
50 !
60 DISABLE INTR
70 PRINT "KEY 1 INTERRUPT"
80 STOP
```

12. DSTAT

• Outline

The DSTAT statement is used to obtain the contents of directory for BASIC variable.

• Syntax

(1)

DSTAT <index> <variable>

(2)

DSTAT <index> <filename> <fileattribute> <size> <sectors>
 <year> <month> <day> <hour> <minutes> <start-sector>

(3)

DSTAT ; SELECT <string> COUNT <variable>

• Description

• Syntax of (1)

The DSTAT statement checks the number of files stored in the directory of file system. A zero is specified for 1st parameter <index>, and numeric variable for 2nd parameter. The result is assigned to the 2nd parameter.

• Syntax of (2)

The DSTAT statement obtains the directory information of file system for BASIC variable. The index of the directory is specified by 1st parameter <index>. The settable values are between 1 to the number of stored files (the number of stored file is the value obtained by syntax of (1)).

For 2nd parameter, character-string variable is specified. The file name of result is stored for the 2nd parameter.

For 3rd parameter and after, all of the parameters are specified with numeric variables. In these parameters, the following contents are assigned:

fileattribute	File attribute (when file has multiple attributes, the parameter is output by adding each number.) 1. READ ONLY 4. SYSTEM FILE 16. DIRECTORY 8. VOLUME LABEL 32. ARCHIVE FILE
size	File size (number of byte)
sectors	Number of sector
year, month, day	Date of file created
hour, minutes	Time of file created
start-sector	Start sector of file

4.3 Statement Syntax and Use

- Syntax of (3)

The DSTAT statement assigns the number of file specified by parameter <character string> to the parameter <variable>.

This syntax is used for searching files whether the specified file is existed in the directory or not.

? : Same as one character

* : Same as one character or more

[] : Same as any one character of character string enclosed with [].


If parameter is specified with [character 1 - character 2], then it is the same as the character between character 1 and character 2.

13. ENABLE INTR

- Outline
- Syntax

The ENABLE ENTER statement is used to permit the interruption reception.

(1)-1



(1)-2

ENABLE INTR

- Description

- The ENABLE ENTER statement permits the interruption reception, and enables the interruption branch defined by ON XXX statement.
- If the interruption is permitted again after performing the DISABLE INTR, then the ENABLE INTER statement must be executed.
- After immediately executing the program, the interruption cannot be performed until the ENABLE INTR statement is performed.

- Example

```
10 ON KEY 1 GOTO 60
20 ENABLE INTR
30 ! LOOP
40 GOTO 30
50 !
60 PRINT "KEY 1"
70 GOTO 20
```

CAUTION: *If the interruption defined by ON XXX statement occurs, then the interruption cannot be used after immediately the program branches, even if the ENABLE INTER statement is executed (same as DISABLE INTR statement). That is to prevent the Nest for the interruption processing, if the next interruption occurred during interruption. To enable the interruption branch continuously, the ENABLE INTR statement is required again to permit the interruption.*


14. ENTER

• Outline

- (1) The ENTER statement obtains data from a GPIB and a parallel I/O.
- (2) The ENTER statement read data from file and assigns the data to an input item.

• Syntax

(1)-1

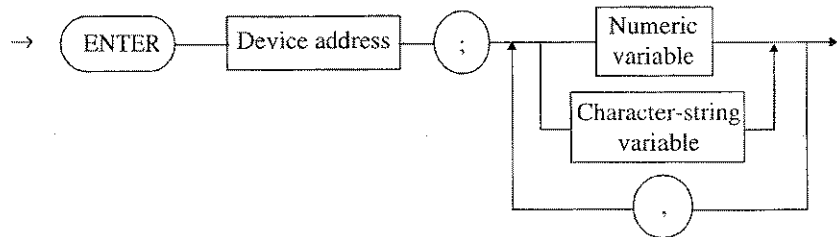


(1)-2

ENTER device address; <numeric variable | character-string variable>
{, <numeric variable | character-string variable>}

Device address: 0 to 30; Device address connected to an external GPIB.

- 31; Data input from measurement section of the analyzer.
- 34; Read out of parallel port Flip/Flop condition.
- 35; Data read out of parallel port C.
- 36; Data read out of parallel port D.
- 37; Data read out of parallel port CD.

(2)-1

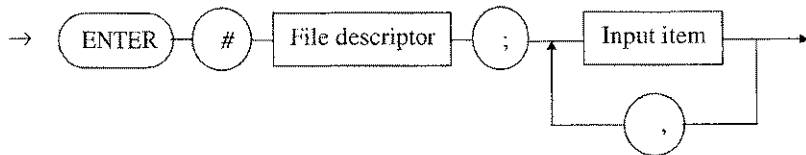

(2)-2

ENTER # file descriptor ; input item {, input item }

• Description

Syntax of (1)

- The ENTR statement inputs data from the unit specified by device address through a GPIB and stores the data into BASIC variable as numeric variable or character string. Pay attention that the controller will stop the operation without completing handshake if talker function is not provided for the unit specified by the device address.
When character-string variable is used, it must be defined by DIM statement.
- In character staring input, pay attention that the input data will overflow and the overflowed data will be ignored, if the length of character string variable used for destination is not enough.

4.3 Statement Syntax and Use

- Example


```

10 ENTER 1;A
20 DIM A$(100), B$(20)
30 ENTER 2;A$
40 ENTER 3;B$
      
```

NOTE: When *SYSTEM CONTROLLER* mode is selected, the device specified by the address is set as talker and the data are obtained.

Syntax of (2)

- The ENTER statement reads data as data-type format corresponding input item from the file assigned to the file descriptor, and assigns the data to the input item.

NOTE: For the information how to handle files, refer to "1.4 File Management".

- Example 1:

BINARY file


The ENTER statement assigns an internal data as it is. It also enables to read the data of the number of byte indicated by the header contents after reading each header such as integer of 4 byte, real number of 8 byte, and character string of 4 byte.

Since the number of byte to be read is decided by the type of input item, the same type as OUTPUT is required for preventing the data difference

```

10 INTEGER I
20 DIM R
30 OPEN "FILE" FOR INPUT AS #FD
40 ENTER #FD;I,R,S$
      
```

Number of byte to be read differs according to the variable type to be assigned

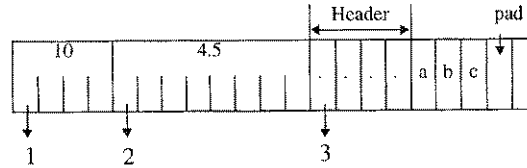


- 1 : When the variable is an integer, 4-byte data is read and assigned to the variable.
- 2 : When the variable is a real number, 8-byte data is read and assigned to the variable.
- 3 : When the variable is a character string, 4-byte header and header length are read and assigned to the variable.

• Example 2:

TEXT file

Regardless of the number of input items, the TEXT file is read out until the line field. The TEXT file is recognized as one data until a comma and converted into the input-item type, then it is assigned. If the number of input items is more, it cannot be assigned to the variables. Therefore, these values stored in advance are remaining. In reverse, if the number of variables is less than the number of actual data, the data are omitted.

```
10 INTEGER I
20 DIM R
30 OPEN "FILE" FOR INPUT AS #FD;TEXT
40 ENTER #FD;I,R,S$
```

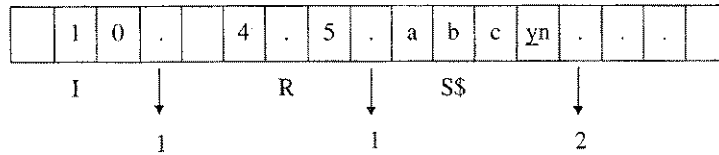


1 :Each item is delimited with a string of commas.
 2 :LF followed after the final item is used.

• Example 3:

ASCII file

The 2-byte header and its data according to the header length are read out. The ASCII file is converted into the variable type and assigned.


```
10 INTEGER I
20 DIM R
30 OPEN "FILE" FOR INPUT #FD;ASCII
40 ENTER #FD;I,R,S$
```



4.3 Statement Syntax and Use

15. ENTER USING

- Outline The ENTER USING statement is used to enter data to the input item from the file by using the image specification format.
- Syntax (1)-1

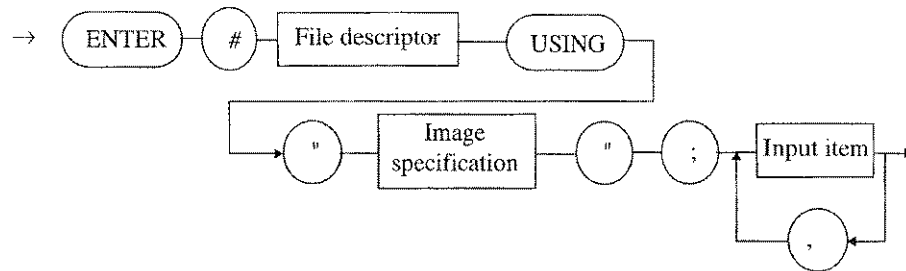

(1)-2

ENTER #file descriptor USING "image specification" ; input item {, input item}

NOTE: ENT can be used instead of the ENTER, and USE for the USING.


- Description The ENTER USING statement enters the data to the input item from the file assigned to the file descriptor by using the image specification format. It is effective only when opened as a TEXT file.
- image specification
- D: Recognizes the numeric of D as a numeric digit and reads out it, then assigns it to the variable of the input item.
 - Z: Same as D.
 - K: Reads out one line and converts it into the numeric data, then assigns it to the variable of the input item.
 - S: Same as D.
 - M: Same as D.
 - .: Same as D.
 - E: Same as K.
 - H: Same as K. However, use a comma for a decimal point.
 - *: Same as D.
 - A: Reads the number of A and assigns it to the character-string variable.
 - k: Reads one line and assigns it to the character-string variable.
 - X: Skips one-character data.
 - Literal: Skips the the character-string numeric data enclosed with \".
 - B: Reads one character and assigns it to the input item using an ASCII code.
 - @: Skips one-byte data.
 - +: Same as @
 - : Same as @
 - #: Ignored in ENTER statement.

n: Specifies the number of repetition of each image by using numerics.
For example, 3D.2D is the same as for DDD.DD, and 4A for AAAA.

NOTE: For the information how to handle files, refer to "1.4 File Management".

• Example

```
10 INTEGER INT
20 DIM REL
30 ENTER #FD USING "ZZZ,DD.D,3A";INT,REL,S$
```

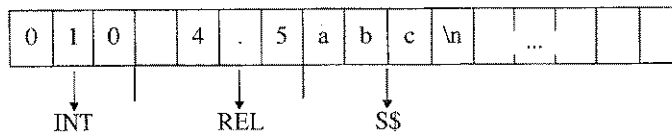


INT: Reads out 3-byte data and converts it into an integer-type data, then assigns it to the variable INT.

REL: The DD.D of image specification corresponds to the REL of the input item. Reads out 4-byte data and converts it into a real-type data, then assigns it to the variable REL. After the execution, the REL becomes 4.5.

S\$: Reads out 3-byte data and assigns it to the variable S\$. After the execution, the A\$ becomes "abc".

```
10 DIM A,B
20 ENTER #FD USING "SDDD,X,MZZZ";A,B
```

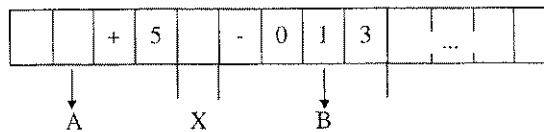


A,B: Reads out 4-byte data and converts it into a real-type data, then assigns it to the variables A and B.

After the execution, the A = 5.0, and the B = -13.0.

The image specification X can read 1-byte data, however, cannot assign it to the variable. Converts the data, which is input using an SDDD format, into a real-type data, and assigns it to the variable A. The image specification X is not required for variable, it skips one character.

The MZZZZ corresponds to the variable B and enters 4-byte data to convert it into a real-type data, then assigns it to the variable B.

```
10 DIM A
20 ENTER #FD USING "K";A
```



4.3 Statement Syntax and Use

Execution result A=123.5

The STRING123.5## is read out and converted into the real-type data of input variable A. When the input item is a real-type data, the preceding character strings other than numerics, signs (+, -), and exponents (E, e) are ignored and only the numerics are obtained. Only the numerics can be detected. If the character other than numerics is detected, the conversion is terminated.

For the image specifications such as K, E, k, and H, since LF represents terminator, the data from the current file pointer to the LF as one data are assigned to the variables.

16. ERRM\$

- Outline
- Syntax

The ERRM\$ statement is the system function which is used to return an error message of the number specified.

(1)-1



(1)2

ERRM\$ (error number)

- Description
 - The ERRM\$ statement returns the error message specified by parameters. Particularly, if 0 as a parameter is specified, the ERRM\$ returns the error message immediately displayed.
 - The error numbers are constructed from as follows:
 Error classes * 256 + error message number
 Error classes: 1; Data input
 2; Data calculation processing
 3; Built-in function
 4; BASIC syntax
 5; Others
 - If the numbers which include the error classes are specified, only the error message numbers will be displayed. Therefore, the ERRN can be specified for the error numbers.

17. ERRN

- Outline The ERRN statement is the system variable which holds an error number.
- Syntax (1)-1



(1)-2

ERRN


- Description
 - The ERRN statement is the system variable, which holds the error number occurred when the BASIC program is being executed.
 - The ERRN is initialized to 0 when the BASIC program starts, and if an error occurs, its number will be assigned to the ERRN. To initialize this assigned value to 0, forcibly assign 0 to the ERRN or re-start the BASIC program.
 - The error numbers are constructed from as follows:
 - Error classes * 256 + error message number
 - Error classes: 1; Data input
 - 2; Data calculation processing
 - 3; Built-in function
 - 4; BASIC syntax
 - 5; Others

4.3 Statement Syntax and Use

18. FOR-TO-STEP, NEXT, BREAK, CONTINUE

- Outline This statement consists of the program loop (loop processing) by combining with FOR statement and NEXT statement.


- Syntax (1)-1

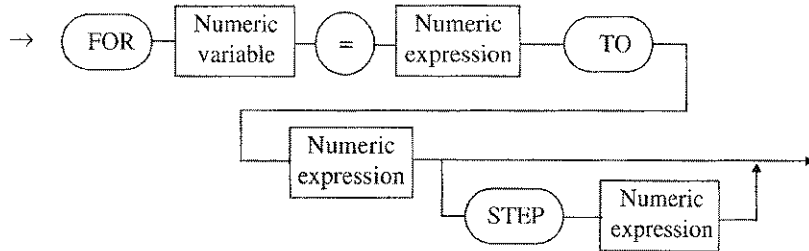

(1)-2

FOR numeric variable = numeric expression TO numeric expression
[STEP numeric expression]


(2)-1



(2)-2

BREAK


(3)-1



(3)-2

CONTINUE

(4)-1

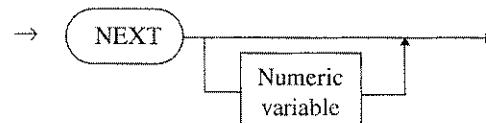

(4)-2

NEXT [numeric variable]

- Description
 - This statement uses the numeric variable specified as a loop counter (repetition) and enables to increase the value from the initial value to the final value by the increased step. If the counter value exceeds the final value, then the loop will terminate. The counter increment/decrement is performed by the NEXT statement. Therefore, the program created between FOR statement and NEXT statement is looped repeatedly.
 - The values of the initial, final, step are as follows:
FOR A=(initial value) TO (final value) STEP (increment)
 - If STEP (increment) value is omitted, the value is automatically incremented by 1.
 - Nest is available between FOR statement and NEXT statement.
 - The numeric variable name of the loop counter used for a pair of FOR statement and NEXT statement, be sure to use the same name. If the numeric variable name is different, an error may occur.
 - If the value of numeric variable used for the loop counter is changed when the loop processing is executed between FOR statement and NEXT statement, the normal loop processing could not be performed.
 - If the numeric variable followed after NEXT statement is omitted, the NEXT statement will automatically correspond to immediately FOR statement.
 - BREAK statement can be used to exit in FOR-NEXT loop.
 - CONTINUE statement branches to the next step loop in FOR-NEXT loop.
 - For example, if a loop like FOR I=0 TO 10 STEP -1 is specified, the line in the loop ends without performed.


- Example

```
10 FOR R=11 TO 0 STEP -5
20   FOR I=0 TO PI STEP PI/180
30     X=SIN(I)*R+23
40     Y=COS(I)*R+15
50     CURSOR X,Y:PRINT "*"
60   NEXT I
70 NEXT R
80 STOP
```

4.3 Statement Syntax and Use

19. FRE

- Outline The FRE statement is the system function which returns the memory space of BASIC.
- Syntax (1)-1




(1)-2

FRE (numeric value)

- Description
 1. When the numeric value is 0.
 - Returns the memory space roughly with the bite number to be used by the BASIC.
 - This statement checks the memory space roughly and performs no re-structure strictly. Therefore, saving and re-loading the data may result in more memory capacity.
 2. When the numeric value is 1.
 - Returns the memory space roughly with the bite number to be used by the built-in function.
 3. Others
 - Returns 0.
- Example PRINT FRE(0)

20. GOSUB, RETURN


- Outline This statement is used to branch/return to the specified subroutine.
- Syntax (1)-1

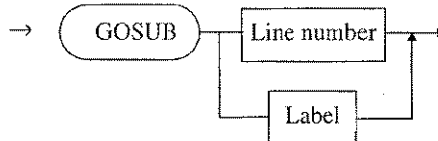

(1)-2

GOSUB <line number | label>

(2)-1



(2)-2

RETURN

- Description
 - Moves the processing control to the defined line number subroutine and returns to the next statement to the GOSUB statement by the RETURN statement.
 - Be sure to input the RETURN statement at the end of subroutine and return the processing control to the main program.
 - If the RETURN statement is executed without the branch to subroutine, an error may occur.
 - Since Nest is available between the GOSUB statement and RETURN statement, the processing can branch to the other subroutine. If more Nest is performed, the remaining capacity (space) of BASIC program will be decreased and then an error may occur.
 - If the line number or the label defined in GOTO/GOSUB does not exist, the program is not executed. When it runs, "Undefined LABEL" is displayed and the program stops by error without executing any line.

- Example


```

10 FOR I=1 TO 9
20   GOSUB 60
30   GOSUB *PRT
40 NEXT I
50 STOP
60 ! SUB ROUTINE
70 X = I * I
80 RETURN
90 *PRT ! SUB ROUTINE
100 PRINT I; " * " ;I; " = " ;X
110 RETURN

```


4.3 Statement Syntax and Use

21. GOTO

- Outline
- Syntax

The GOTO statement is used to branch to the specified line.

(1)-1

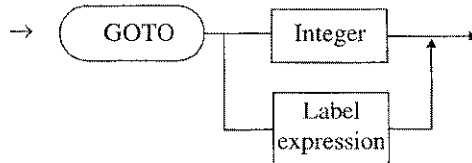

(1)-2

GOTO <integer | label expression>

- Description
 - The GOTO statement branches to the specified line number unconditionally.
 - If the line number or the label defined in GOTO/GOSUB does not exist, the program is not executed. When it runs, "Undefined LABEL" is displayed and the program stops by error without executing any line.


- Example

```
10 FOR I=1 TO 9
20   GOTO 60
30   GOTO *PRT
40 NEXT I
50 STOP
60 !
70 X = I * I
80 GOTO 30
90 *PRT
100 PRINT I; " * " ;I; " = " ;X
110 GOTO 40
```

22. GPRINT, LPRINT

- Outline This statement is used to output numerics or character strings.
GPRINT: GPIB output
LPRINT: Serial output

- Syntax (1)-1

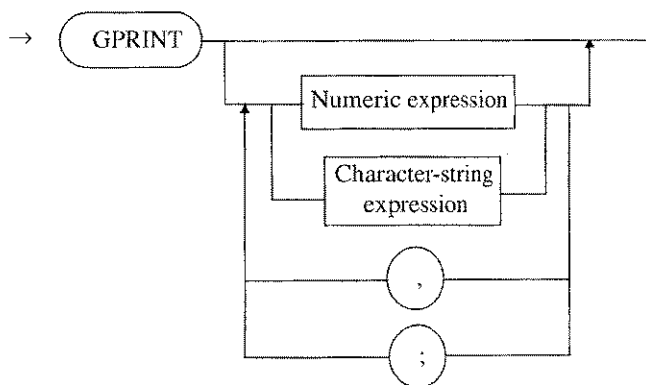

(1)-2

GPRINT [<numeric expression | character-string expression> {, | <numeric expression | character-string expression>}]

(2)

The LPRINT is the same as the GPRINT

- Description
 - This statement displays the numerics or character strings specified by the GPRINT or LPRINT.
 - When the multiple numerics or character strings are delimited with a comma and specified, they are continuously output without LF.
 - If a semicolon is used at the end of the GPRINT/LPRINT statement, LF could not be performed after the termination of print out. Therefore, if the next GPRINT/LPRINT statement is executed, the line followed after the previous output line will be output continuously.
 - When GPRINT is used to output data to GPIB printer, be sure to set SYSTEM CONTROLLER by the analyzer panel operation and set up the printer address.
- Example


```
100 PRINTER 1
110 FOR I=0 TO 20
120  GPRINT I
130  LPRINT I
140 NEXT I
150 STOP
```


NOTE: When the R3765/67G series is used, the CONTROL command changes the data output by the LPRINT to the printer port.

4.3 Statement Syntax and Use

23. IF-THEN, ELSE, END IF

- Outline This statement is used to perform the branch based on the condition branch and the specified statement.


- Syntax (1)-1



(1)-2

IF conditional expression THEN statement

(2)-1

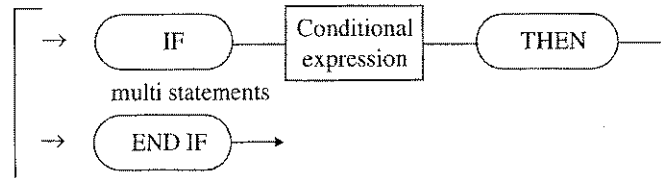


(2)-2

IF conditional expression THEN

multi statements

END IF

(3)-1

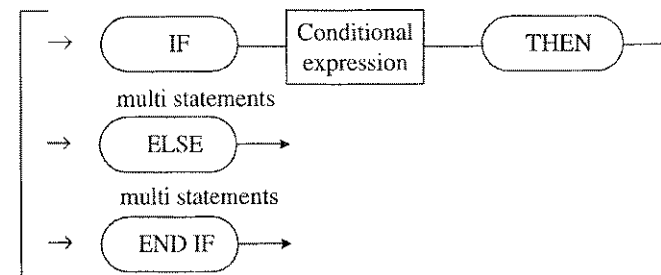

(3)-2

IF conditional expression THEN


multi statements

ELSE

multi statements

END IF

(4)-1

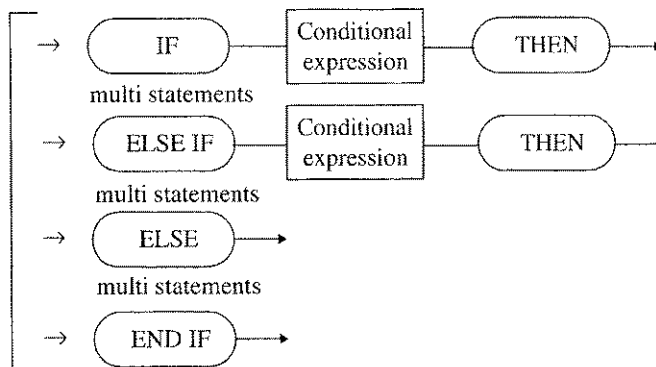

(4)-2

IF conditional expression THEN

multi statements

ELSE IF conditional expression THEN

multi statements

ELSE

multi statements

END IF

- Description

- Generally, the condition expression represents a logical expression, however, numeric expression can be used in this statement other than the logical expression used relational operators. In this case, when the calculation result becomes 0 only, the value is determined as FALSE, and the values other 0 is estimated as TRUE.
- Depending on the condition of logical expression, branching and processing the program can be performed.
- When the logical expression is defined, the THEN statement can be executed. The other statements can be followed after the THEN statement and the next statement can be executed.
- If the logical expression cannot be concluded, the next line is performed.
- The following six types of relational operators are provided:

A=B	Returns true if A equal to B; false otherwise.
A>B	Returns true if A is greater than B; false otherwise.
A<B	Returns true if A is less than B; false otherwise.
A>=B	Returns true if A is greater than or equal to B; false otherwise
A<=B	Returns true if A is less than or equal to B; false otherwise.
A<>B	Returns true if A does not equal to B; false otherwise.

In the logical expression above, both values A and B consist of numeric expression. The comparison between numeric expression and character-string expression can be performed.

Network Analyzer Programming Manual (Part 1)


4.3 Statement Syntax and Use

- Example

```
10 FLG = 0
20 FOR I=0 TO 10
30   PRINT I;
40   IF (I % 2) =0 THEN FLG = 1
50   IF FLG = 1 THEN
60     PRINT " EVEN" ;
70     FLG = 0
80   END IF
90 PRINT
100 NEXT I
110 STOP
```


24. INPUT

- Outline The INPUT statement is used to assign the data entered by keys to numeric variables.
- Syntax (1)-1

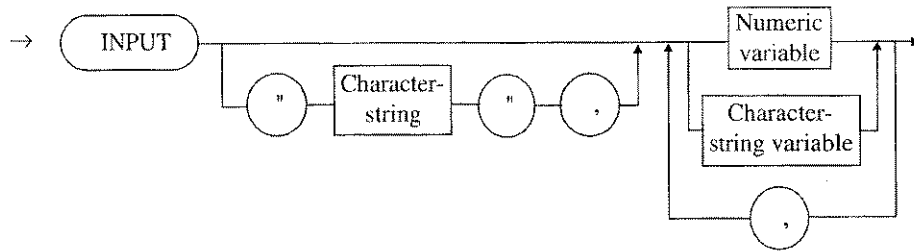

(1)-2

INPUT ["character-string",] <numeric variable | character-string variable> {,<numeric variable | character-string variable>}

- Description
 - When the INPUT statement is executed, then the program is temporarily suspended and waits for next key to be input. The waiting state for the key input is continued until the ENTER key is pressed. If the ENTER key is pressed after data input, the data will be assigned to variables.
 - Both numeric variable and character-string variable can be handled in the INPUT statement. In case of numeric variable input, if the characters other than numeric (such as alphabets, symbols, and others) are entered, then they will be ignored. If no numeric is existed, then 0 will be assigned to the variable. If only the ENTER key is pressed, no assignment can be performed. In other words, the value immediately before the INPUT statement has been remaining.
 - To enter a character constant, it is not required to be enclosed with double quotation marks.

- Example


```

10 OUTPUT 31; "OLDC OFF"
20 OUTPUT 31; "INIT:CONT OFF"
30 INPUT "CENTER FREQUENCY(MHz) ?" ,CF
40 INPUT "SPAN FREQUENCY(KHz)?" ,SF
50 OUTPUT 31; "FREQ:CENT " ,CF, "MHz"
60 OUTPUT 31; "FREQ:SPAN " ,SF, "KHz"
70 OUTPUT 31; "INIT"
80 PRINT "MAX = " ,MAX(0,1200,0)
90 STOP
            
```


4.3 Statement Syntax and Use

25. INTEGER

- Outline
- Syntax

The INTEGER statement is used to declare that the variable or array variable is an integer type.

(1)-1

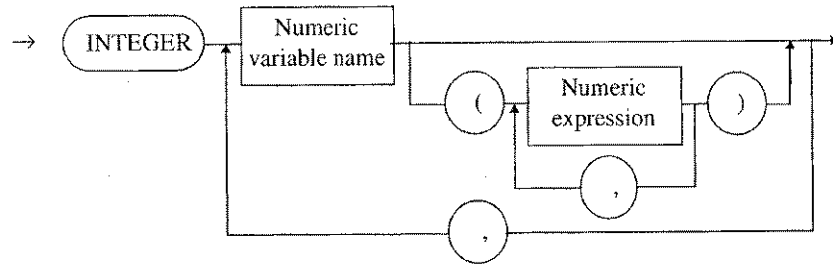

(1)-2

INTEGER A[B] { , A[B] }

A: Numeric variable name

B: (Numeric expression { , Numeric expression })

- Description

- When a numeric variable or an array variable is specified in the INTEGER statement, the variable is determined as an integer type after the specification.
- The numeric handled in the integer-type variable, it is the same as the range of an integer constant.
-2147483648 to +2147483647
- In the variables which handle only the integers, the declaration in the INTEGER statement is recommended to shorten the processing time.
- When the array declaration is used in the INTEGER statement, the specified-size array variable is reserved on the memory. If larger array declaration is performed, an error may occur due to the rack of memory space (memory space full) and then the program execution will be forcibly terminated. (memory space full)
- When multiple subscripts are specified, the array variables are also specified according to the number of dimension. (Number of dimension is specified as long as the memory space is permitted.)

- Example

```

10 INTEGER ARRAY(2,3)
20 PRINT "J/I " ;
30 PRINT USING "X,3D,3D,3D" ;1,2,3
40 PRINT " " ;
50 FOR I = 1 TO 2
60   FOR J = 1 TO 3
70     ARRAY(I,J) = I*10 + J
80   NEXT J
90 NEXT I
100 FOR I = 1 TO 2

```

```
110 PRINT
120 PRINT USING " 2D,2X,# " ;I
130   FOR J = 1 TO 3
140     PRINT USING "3D,#" ;ARRAY(I,J)
150   NEXT J
160 NEXT I
```

<Result>

```
J/I 1 2 3
  1 11 12 13
  2 21 22 23
```

CAUTION: *The variable which is once specified as an integer type by the INTEGER statement, if the instruction is deleted by the DEL or comment statement, the specified variable (integer type) is not changed. To change the specified integer-type variable into a real-type variable again, add the DIM instruction or execute the SAVE/LOAD command once and then perform the RUN command.*

4.3 Statement Syntax and Use

26. INTERFACE CLEAR

- Outline The INTERFACE CLEAR statement is used to initialize the all GPIB interfaces connected with the analyzer.

- Syntax (1)-1



(1)-2

INTERFACE CLEAR

- Description When the INTERFACE CLEAR statement is executed, the GPIB single signal IFC is output approximately 100 μ s.
If the all GPIB interface devices connected with the analyzer receive the IFC signal, then the setting state of talker or listener will be canceled.
- Example 10 INTERFACE CLEAR
- Note The INTERFACE CLEAR statement is not available in the ADDRESSABLE mode.

27. KEY\$

- Outline The KEY\$ statement is used to return the code of panel key.
- Syntax (1)-1

→ 

(1)-2

KEY\$


- Description The KEY\$ statement returns the code pressed at the last operation. When this code is referred once, the contents of this variable is cleared.
- Example

```
10 A$=KEY$
20 IF A$="1" THEN
30   GOSUB *TEST1
40 ELSE IF A$="2" THEN
50   GOSUB *TEST2
60 END IF
70 GOTO 10
80 STOP
100 *TEST1
110 PRINT "Check1 Start !!"
120 .....
130 RETURN
200 *TEST2
210 PRINT "Check2 Start !!"
220 .....
230 RETURN
```

4.3 Statement Syntax and Use

28. LET

- Outline (The LET statement is not used in the program, the assignment statement can be used directly.)
The LET statement is used to assign to the variable.
- Syntax (1)-1

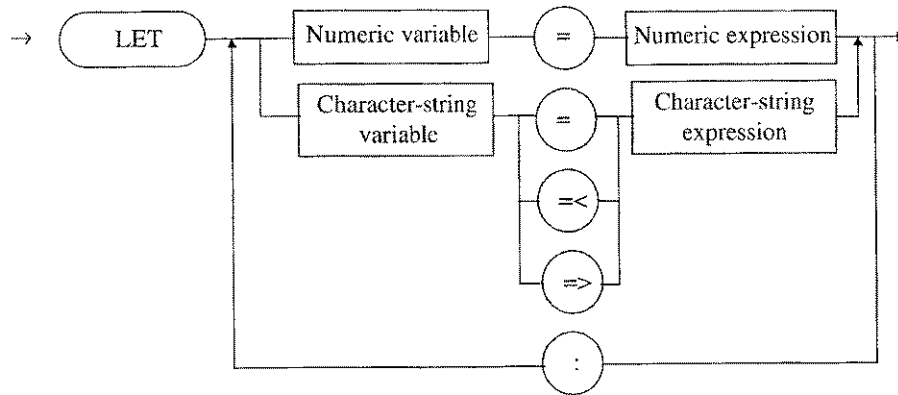

(1)-2

LET <A | B> { : <A | B> }

A: numeric variable = numeric expression

B: character-string variable = | =< | => character-string expression

- Description
 - The signs used in this statement indicate an assignment and differ from the sign used in arithmetic operation.
 - If the left part of sign is a numeric, the numeric part of character string is converted and then assigned.
Especially, when character string is assigned:
 - when =: Only the length of right part is assigned.
 - when =>: If the character string of the right part is shorter than the left one, spaces are used to assign the different values from the top of the left part.
 - when =<: Spaces are used to fill up to the blank.
- Therefore, the signs => and =< are assignment operators which are available only for character strings.


• Example	10 DIM STR\$	<After the execution>
	20 PRINT "123456789012345678"	123456789012345678
	30 STR\$ = "ABC" :PRINT STR\$	ABC
	40 STR\$ =< "OPQ" :PRINT STR\$	OPQ
	50 STR\$ => "XYZ" :PRINT STR\$	XYZ

29. LOCAL

- Outline
- Syntax

The LOCAL statement is used to cancel the specified device from the remote state or to set the remote-enable (REN) line to FALSE.

(1)-1

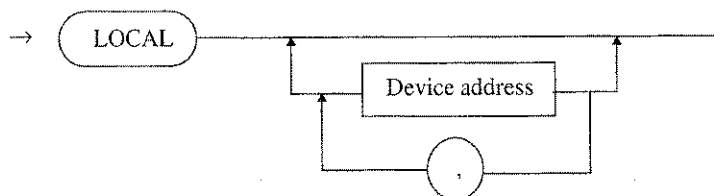

(1)-2

LOCAL [device address {, device address}]

- Description
 - If only the LOCAL statement is executed without specifying the device address, then the GPIB remote-enable line will become FALSE (High level) and all the devices on the GPIB will be a local state. If the REN is FALSE, pay attention that the setting of GPIB device could not be performed (cannot be controlled by GPIB).
 - To set the REN to TRUE (Low level) again, execute the REMOTE.
 - If the device address is specified followed after the LOCAL, only the device specified by the device address could be addressed, and the remote state will be canceled.
- Example


```
10 LOCAL
20 LOCAL 1
30 LOCAL 1,2,3
```
- Note


The LOCAL state is not be available in the ADDRESS mode.

4.3 Statement Syntax and Use

30. LOCAL LOCKOUT

- Outline The LOCAL LOCKOUT statement is used to prohibit the function which controls the local/remote state from the panel key of the device connected to the GPIB.

- Syntax (1)-1



(1)-2

LOCAL LOCKOUT


- Description
 - When each device is remote state (controlled by GPIB), the panel key of each device is locked except for the LOCAL key and the data setting cannot be performed from each panel.
When the LOCAL key is pressed during the remote state, the data setting is available since each device become local state. Therefore, various errors occur during the remote control and the control cannot be performed correctly.
In this case, if the LOCAL LOCKOUT statement is executed, its function enables to lock the all devices on the GPIB and the setting from each device panel can be completely prohibited.
 - When the LOCAL LOCKOUT statement is executed, the local lockout (LLO) of universal command is sent to the GPIB.
 - To cancel the local lockout state, use the LOCAL command to set the REN line to FALSE (High level).
- Example 10 LOCAL LOCKOUT
- Note The LOCAL LOCKOUT statement is not available in the ADDRESSABLE mode.

31. OFF END

- Outline
- Syntax

The OFF END statement is used to cancel the processing of the end of file specified by the ON END statement.

(1)-1



(1)-2

OFF END # file descriptor

- Description

After canceling the branch defined into file descriptor, if the end of file occurs, the following error message will be displayed and the program will be terminated.
end of "DATAFILE" file

NOTE: For the information how to handle files, refer to "1.4 File Management".

32. OFF ERROR

- Outline
- Syntax

The OFF ERROR statement is used to cancel the branch function when an error occurs.

(1)-1



(1)-2

OFF ERROR

- Description
- Example

The OFF ERROR statement prohibits the error branch defined by the ON ERROR statement.

```


10 ON ERROR GOTO 100
:
100 OFF ERROR
110 PRINT "Error Code", ERRN
120 STOP

```

4.3 Statement Syntax and Use

33. OFF KEY

- Outline The OFF KEY statement is used to cancel the branch function by interruption of KEY input.
- Syntax (1)-1



(1)-2

OFF KEY [key code]


- Description The OFF KEY statement prohibits the branch by the interruption of the analyzer KEY input, which is permitted by the ON KEY statement.
- Example

```
10 ON KEY 2 GOTO 100
20 ENABLE INTR
30 ! LOOP
40 GOTO 30
100 OFF KEY
110 PRINT "OFF KEY"
120 STOP
```

34. OFF SRQ, OFF ISRQ

- Outline This statement is used to cancel the function and definition by the interruption of SRQ or ISRQ.

- Syntax (1)-1

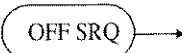→ 

(1)-2

OFF SRQ

(2)

The OFF ISRQ is the same as the OFF SRQ.

- Description
 - OFF SRQ
This statement prohibits the branch by the interruption, which is permitted by the ON SRQ.
 - OFF ISRQ
This statement prohibits the branch by the interruption, which is permitted by the ON ISRQ.

- Example


```
100 OUTPUT 31; "OLDC OFF"
110 OUTPUT 31; "START:OPER:ENAB 8;*SRE 128":SPOLL(31)
120 ON ISRQ GOTO *MAX
130 OUTPUT 31; "INIT:CONT OFF;:ABOR;:INIT"
140 ENABLE INTR
150 ! LOOP
160 GOTO 150
170 *MAX
180 DISABLE INTR
190 OFF ISRQ
200 PRINT MAX(0,1200,0)
210 STOP
```

Address	Contents
110	Enables the SRQ.
120	Sets the interruption branch of the internal SRQ.
130	Single sweep.
170	Interruption reception.
180	Interruption prohibition.
190	Cancel the interruption branch of the internal SRQ.
200	Displays the maximum level.


4.3 Statement Syntax and Use

35. ON DELAY

- Outline
- Syntax

The ON DELAY statement is used to branch after the specified time elapsed.

(1)-1

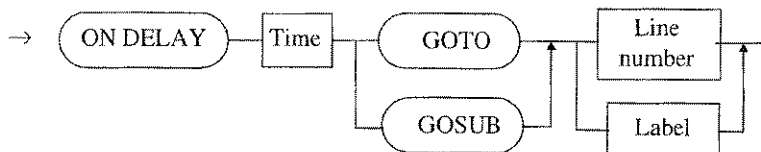

(1)-2

ON DELAY time <GOTO | GOSUB> <line number | label>

NOTE: The unit of time is msec, and the setting range is between 0 to 65535.


- Description
 - The ON DELAY statement branches according to the statement after the specified time elapsed.
 - Acceptance of the interruption should be permitted by the ENABLE INTR statement.
- Example


```

10 INTEGER T
20 T=50
30 ENABLE INTR
40 ON DELAY T GOSUB *TEST
50 STOP
100 *TEST
110 PRINT T;"[msec] Delay"
120 RETURN
            
```

36. ON END

- Outline The ON END statement is used to define the processing (destination branch) at the end of file.
- Syntax (1)-1

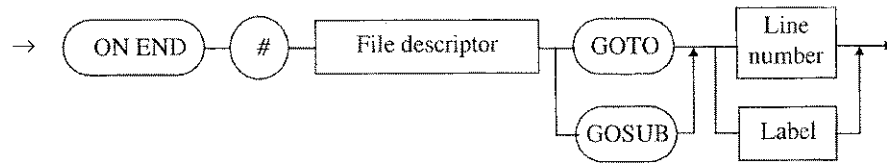

(1)-2

ON END #file descriptor <GOTO | GOSUB><line number | label>

- Description The ON END statement reads out the data from the file by the ENTER command, if the data to be entered is not existed with reading out the end of file, the result will be the end of file.
If the processing declaration is omitted in the ON END statement, after closing the file, an error message will be displayed and the program will terminate.

NOTE: For the information how to handle files, refer to "1.4 File Management".


4.3 Statement Syntax and Use

37. ON ERROR

- Outline
- Syntax

The ON ERROR statement is used to permit the branch when an error occurs.

(1)-1

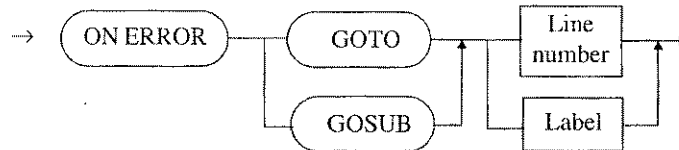

(1)-2

ON ERROR <GOTO | GOSUB> <line number | label>

- Description


- If an error occurs during the BASIC program, the statement number and error message of the program will be displayed and the program will terminate. Especially, if the built-in function error which demands the service request of the measuring device, only the error message will be displayed and the program will continue the operation. To detect the error to branch, use the ON ERROR statement is used.
- To categorize the generated error, the ERRN system variable which stores the error number is provided.
- After generating the error, if the error is not recovered by the error processing, then the endless loop will be performed. To prevent this trouble, the OFF ERROR statement must be used (written).

- Example

ON ERROR GOTO 1000

38. ON KEY

- Outline The ON KEY statement is used to permit the branch by the interruption of KEY input.
- Syntax (1)-1

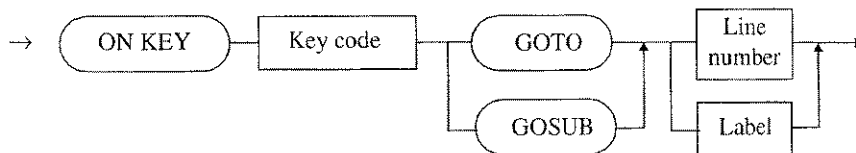

(1)-2

ON KEY key code <GOTO | GOSUB> <line number | label>

- Description
 - The ON KEY statement branches by the interruption of KEY input during the program execution.
 - The branch is executed after completing the processing of the statement being executed when the interruption is generated.
 - The return position of the statement when the program branches to the sub-routine is the next statement of the statement being executed when the interruption is generated.
 - The key codes are constructed from the numerics of 1 to 6. They correspond to the function key on the front panel and the F1 to F6 on the key board. In addition, when the keyboard is connected to the analyzer, the key codes correspond to F1 to F6 on the key board.
 - Acceptance of the interruption should be permitted by the ENABLE INTR statement.


<ul style="list-style-type: none"> • Example 	<pre> 10 CLS 20 ON KEY 1 GOTO 1000 30 ON KEY 2 GOTO 1100 40 ON KEY 3 GOTO 1200 50 ON KEY 4 GOTO 1300 60 ON KEY 5 GOTO 1400 70 ON KEY 6 GOTO 1500 75 CNT = 10 80 *HERE: 85 I = 0: PRINT " " 90 IF I=CNT THEN FOTO *HERE 100 ++I: PRINT ">" ; 110 ENABLE INTR 120 GOTO 90 1000 PRINT "FIRST KEY" 1001 CNT = 1 1010 GOTO *HERE 1100 PRINT "SECOND KEY" 1101 CNT = 10 1110 GOTO *HERE 1200 PRINT "THIRD KEY" 1201 CNT = 20 1210 GOTO *HERE 1300 PRINT "FOURTH KEY" 1301 CNT = 30 1310 GOTO *HERE 1400 PRINT "FIFTH KEY" 1401 CNT = 40 1410 GOTO *HERE 1500 PRINT "SIXTH KEY" 1501 CNT = 50 1510 GOTO *HERE </pre>
---	---

4.3 Statement Syntax and Use

39. ON SRQ, ON ISRQ

- Outline The ON SRQ statement is used to permit the interruption branch by the GPIB external SRQ signal. (It is available in ON SRQ controller mode only.)
The ON ISRQ statement is used to permit the interruption branch when the internal interruption factor is generated.

- Syntax (1)-1

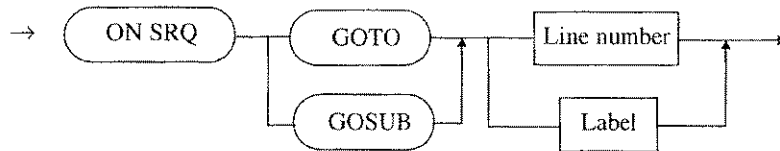

(1)-2

ON SRQ <GOTO | GOSUB> <line number | label>

(2)

The ON ISRQ is the same as the ON SRQ

- Description
 - This statement branches by the interruption during the program execution.
 - The branch is executed after completing the processing of the statement being executed when the interruption is generated.
 - The return position of the statement when the program branches to the sub-routine is the next statement of the statement being executed when the interruption is generated.
 - The ON SRQ statement performs the interruption branch by the SRQ signal from the GPIB external during the controller mode in progress.
 - Acceptance of the interruption should be permitted by the ENABLE INTR statement.

- Example Sample program which searches the MAX every single sweep.

```


100 OUTPUT 31;"OLDC OFF"
110 ON ISRQ GOTO *MAX
120 OUTPUT 31; "STAT:OPER;ENAB 8;*SRE 128" :SPOLL(31)
130 ENABLE INTR
135 OUTPUT 31; "INIT:CONT OFF::ABOR::INIT"
140 ! LOOP
150 GOTO 140
160 *MAX
170 DISABLE INTR:SPOLL(31)
180 PRINT MAX(0,1200,0)
190 GOTO 130
    
```


Address	Contents
110	Sets the interruption branch of the internal SRQ.
120	Enables the SRQ.
130	Interruption reception.
135	Single sweep.
170	Interruption prohibition.
180	Displays the maximum level.

4.3 Statement Syntax and Use

40. OPEN

- Outline The OPEN statement is used to assign the file descriptor to the file and to open the by with the specified processing mode.
- Syntax (1)-1

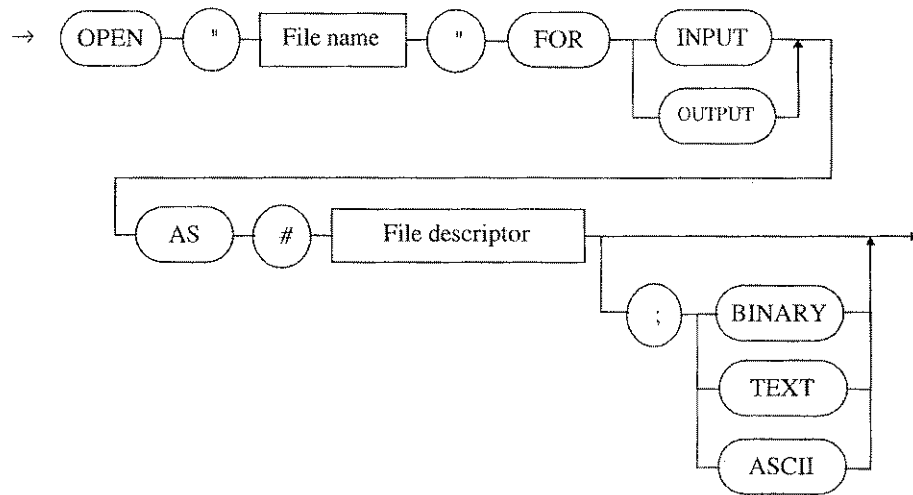

(1)-2

OPEN "file name" FOR processing mode AS #file descriptor [; file type]

Processing mode: INPUT | OUTPUT

File type: BINARY | TEXT | ASCII

- Description • To recognize the file for the program, the OPEN statement assigns the file descriptor to the file and to open the by with the specified processing mode.

Processing mode

Two processing modes are provided.

OUTPUT: Used for writing the data to files.

INPUT: Used for reading out the data from files.

File descriptor

Generally, writing/reading files uses the ENTER or OUTPUT mode.

For these commands, the file descriptor is used to recognize the target files.

To name the file descriptor, use alphanumeric followed after #.

File type

Three file types (BINARY, TEXT, and ASCII) are provided.

If the file type is not specified, BINARY type is automatically set.

BINARY: Stores the data without changes. An integer type is 4-byte data, a real type for 8-byte data, and a character-string type for header 4-byte. In case of the character-string type, ASCII data is followed after the header 4-byte. If the number of character data is an odd, then one space of 1-byte will be followed after the data.

TEXT: Converts data into ASCII codes and outputs the data, and "-" or space is followed before the numeric. The USING specification can be used for the TEXT file.


ASCII: Represents the input/output item using ASCII codes followed after 2-byte header. "-" or space is followed before the numeric. If the number of the character data is an even, then one space will be followed after the data.

- When the file descriptor already assigned the file to the other file is opened, the previous assigned file is closed and the specified file is newly opened.
- The same files cannot be opened using the multiple file-descriptor at the same time.



NOTE: For the information how to handle files, refer to "1.4 File Management".

• Example

```
10 OPEN "DATA.BAS" FOR OUTPUT AS #FD; TEXT
20 OUTPUT #FD;10,4.5,"abc"
```




```
10 OPEN "DATA.BAS" FOR OUTPUT AS #FD; ASCII
20 OUTPUT #FD;10,4.5,"abc"
```



4.3 Statement Syntax and Use

41. OUTPUT

- Outline (1) The OUTPUT statement is used to output the data to GPIB or parallel port.
(2) The OUTPUT statement is used to output (write) the data to files.
- Syntax (1)-1

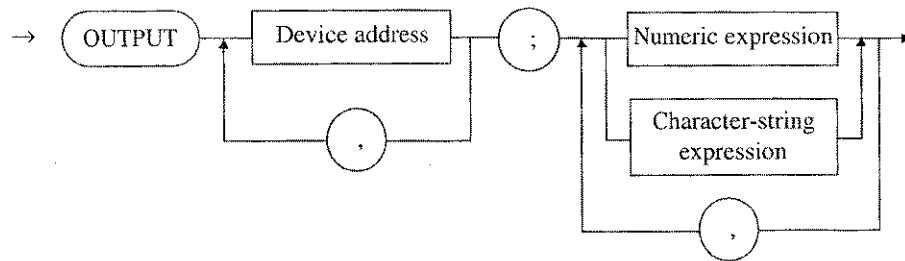

(1)-2

OUTPUT device address {, device address} ; <numeric expression | character-string expression> {, <numeric expression | character-string expression>}

Device address:

0 to 30; Address of the external GPIB device.

31; Output to the measurement section of the analyzer.

33; Output to the A port of parallel port.

34; Output to the B port of parallel port.


35; Output to the C port of parallel port and set/reset of Flip/Flop.

36; Output to the D port of parallel port and set of port mode.

37; Output to the CD port of parallel port.

Only when the device addresses are between 0 and 30, plural device addresses can be specified.

(2)-1

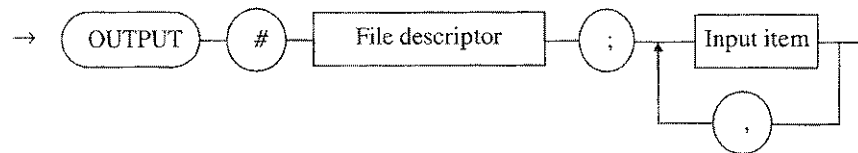

(2)-2

OUTPUT # file descriptor ; input item {, input item}

- Description

Syntax of (1)

- The OUTPUT statement sends numeric and character string as an ASCII data to the specified device by the device address. Multiple device address can be specified by delimiting with a string of commas. The numeric expression and the character-string expression are used together by delimiting with a string of commas.

- If the OUTPUT statement is executed when the REN line is TRUE (Low level), the unit specified by the device address will be automatically remote state. To cancel the remote state by the program, execute the LOCAL statement.

- Example

```
10 A=5
20 B=10
30 OUTPUT A;"STARTF", B,"MHz"
```

- Note

In the SYSTEM CONTROLLER mode, the specified address device is set as the listener and the data is output.

When the external listener is not existed, this command cannot be executed.

Syntax of (2)

The OUTPUT statement converts the data into the BASIC format and then outputs the file assigned to the file descriptor.

The OUTPUT statement reads out the converted BASIC-format data and assigns it to its input item.


- Example 1:

BINARY file

Outputs data without changes. A character string is output with the header which indicates the length of 4-byte character string. If the number of character data is an odd, then one space of 1-byte will be followed after the data.

```
10 OPEN "FILE" FOR OUTPUT AS #FD
20 OUTPUT #FD;10,4.5,"abc"
```

NOTE: For the information how to handle files, refer to "1.4 File Management".



Header has each data length.

4.3 Statement Syntax and Use

- Example 2:


TEXT file

Converts data into ASCII codes and outputs the data.

The signs (space or minus) for numeric data is placed to the top of the field.

```
10 OPEN "FILE" FOR OUTPUT AS #FD;TEXT
```

```
20 OUTPUT #FD;10,4.5,"abc"
```

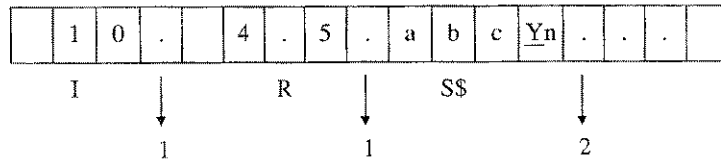

1 : Each item is delimited with a string of commas.

2 : LF followed after the final item is output.

- Example 3:


ASCII file

Converts data into ASCII codes and outputs the data.

The signs (space or minus) for numeric data is placed to the top of the field. If the number of character data is an odd, then one space of 1-byte will be followed after the data.

```
10 OPEN "FILE" FOR INPUT #FD;ASCII
```


```
20 OUTPUT #FD;10,4.5,"abc"
```



Header has each data length.

42. OUTPUT USING

- Outline The OUTPUT USING statement is used to output data with the specified data-type to the file assigned to the #file descriptor. Only the TEXT file is effective.
- Syntax (1)-1

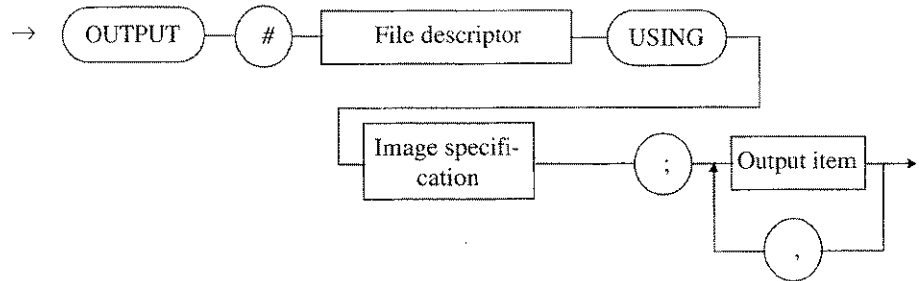

(1)-2

OUTPUT # file descriptor USING image specification ; output item {, output item}

NOTE: *OUT can be used instead of the OUTPUT, and USE for the USING.*

- Description
 - When the USING and the image specification are specified, the format is converted and output. The image specification must be specified by character-string expression.
 - The specified file descriptor when the file is opened is used. The file descriptor is assigned for the file to be objected at the file open. After that, the processing for the file can be performed through this file descriptor.

image specification

- D: Specifies the output digits with No. of D. A space is used to fill up the remaining blank in the specified field.
- Z: Specifies the output digits with No. of Z. A zero is used to fill up the remaining blank in the specified field.
- K: Displays the expression as it is.
- S: Displays the OUTPUT USING with a + or - sign flag at the position of S.
- M: Displays the OUTPUT USING with a - for negative and a space for positive at the position of M.
- .: Displays the OUTPUT USING to match the position "." with coming the decimal point.
- E: Displays OUTPUT USING with the exponent format (e, sign, exponent).
- H: Same as K. However, use a comma for a decimal point.
- R: Same as ".". However, use a comma for a decimal point.
- *: Specifies the output digit with the number of *. A space is used to fill up the remaining blank in the specified field.
- A: Displays one character.


4.3 Statement Syntax and Use

- k: Displays the character-string expression as it is.
- Literal: Encloses the literal with \" when writing it in the format expression.
- X: Displays the character of one space.
- B: Displays the expression result using an ASCII code.
- @: Outputs the form lead.
- +: Outputs the carriage return.
- : Outputs the line feed.
- #: Does not hang the line feed immediately followed after the last item.
- n: Specifies the number of repetition of each image by using numerics.
For example, 3D.2D is the same as for DDD.DD, and 4A for AAAA.


NOTE: For the information how to handle files, refer to "1.4 File Management".

• Example

OUTPUT #FD USING "ZZZ,DD.D,3A";10,4.5,"abc"

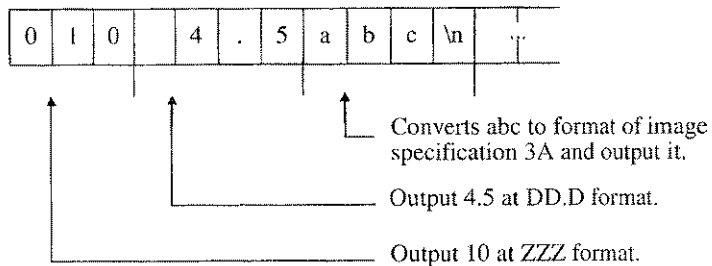

OUTPUT #FD USING "SDDD,X,MZZZ";+5,-13.57

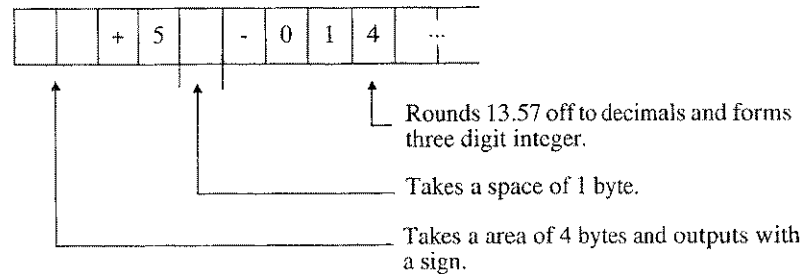


43. PRINT [USING]

- Outline
- Syntax

The PRINT [USING] statement is used to display numerics or character strings.

(1)-1

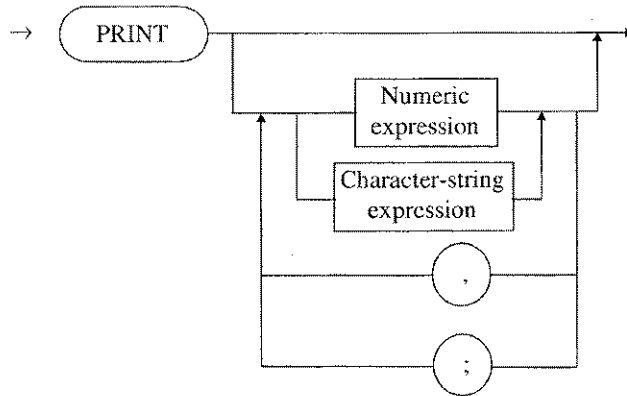

(1)-2

PRINT [numeric expression | character-string expression {, | ; numeric expression | character-string expression}]

- Description

- The PRINT [USING] statement displays the specified numeric or character string.
- When the multiple numerics or character strings are delimited with a comma and specified, they are continuously output without LF.
- If a semicolon is used at the end of the PRINT statement, LF could not be performed after the termination of print out. Therefore, if the next PRINT statement is executed, the line followed after the previous output line will be output continuously.

- Example

```
10 PRINT 123*456
20 PRINT "ABC"
30 PRINT "Freq.=",A, "Hz"
40 PRINT I,
```

4.3 Statement Syntax and Use

- In PRINT USING format specification expression ; [expression [...]]

The format specification expression (character-string expression), specify the image specification by using a comma among image. The end of the format specification expression is automatically returned with line feed.

image specifications

- D: Specifies the output digits with No. of D. A space is used to fill up the remaining blank in the specified field.
- Z: Specifies the output digits with No. of Z. A zero is used to fill up the remaining blank in the specified field.
- K: Displays the expression as it is.
- S: Displays the PRINT USING format with a + or - sign flag at the position of S.
- M: Displays the PRINT USING format with a - for negative and a space for positive at the position of M.
- .: Displays the PRINT USING format to match the position "." with coming the decimal point.
- E: Displays PRINT USING format with the exponent format (e, sign, exponent).
- H: Same as K. However, use a comma for a decimal point.
- R: Same as ".". However, use a comma for a decimal point.
- *: Specifies the output digits with the number of *. A space is used to fill up the remaining blank in the specified field.
- A: Displays one character.
- k: Displays the character-string expression as it is.
- X: Displays the character of one space.
- Literal: Encloses a literal with \" when writing it to the format expression.
- B: Displays the expression result using an ASCII code.
- @: Form lead
- +: Moves the display position to the top of the same line.
- : Line feed
- #: Does not line feed.
- n: Specifies the number of repetition of each image by using numerics. For example, 3D.2D is the same as for DDD.DD, and 4A for AAAA.

- Example 1 10 PRINT USING "4Z,2X,5D,2X,5*" ;123,-444,567

<After the execution>

0123 -444 **567

- Example 2 10 PRINT USING "S3D,X,S3D" ; -4.5,465
20 PRINT USING "M3Z.Z,X,M3ZR3Z" ;1.26,-5.452

<After the execution>

-5 +456

001.3 -005.452

- Example 3 10 PRINT USING "K,X,H" ;5.03884e+22,4.5563

<After the execution>

5.03884e+22 4.5563

- Example 4 10 PRINT USING "k,#" ;"character:"
20 PRINT USING "B" ;69

<After the execution>

character:E

- Example 5 10 PRINT USING "\ \" ,+,A" ; "*"

20 PRINT USING "k,-, \" .END. \" " ; "string"

<After the execution>

*.....

string

.END.

- Example 6


	<After the execution>
100 PRINT USING "DDD.DD" ;1.2	1.20
110 PRINT USING "ZZZ.ZZ" ;1.2	001.20
120 PRINT USING "K" ;1.2	1.2
130 PRINT USING "SDDD.DD" ;1.2	+1.20
140 PRINT USING "MDDD.DD" ;1.2	1.20
150 PRINT USING "MDDD.DD" ;-1.2	-1.20
160 PRINT USING "H" ; 1.2	1,2
170 PRINT USING "DDDRDD" ; 1.2	1,20
180 PRINT USING "***.*)" ; 1.2	**1.20
190 PRINT USING "A" ; "a"	a
200 PRINT USING "k" ; "string"	string
210 PRINT USING "B" ; 42	*
220 PRINT USING "3D.2D" ;1.2	1.20

4.3 Statement Syntax and Use

44. PRINTER

- Outline The PRINTER statement is used to specify the device address for sending the data to the printer.]

- Syntax (1)-1



(1)-2

PRINTER numeric expression


- Description
 - The PRINTER statement sets the printer device address connected to the GPIB.
 - Be sure to specify the printer device address to the analyzer by the PRINTER statement before executing the GPRINT, GLIST and GLISTN statement.
 - The device address is the integers from 0 to 30.
- Example 10 PRINTER 1

45. PRINTF

- Outline
- Syntax

The PRINTF statement is used to display numerics or character strings.

(1)-1

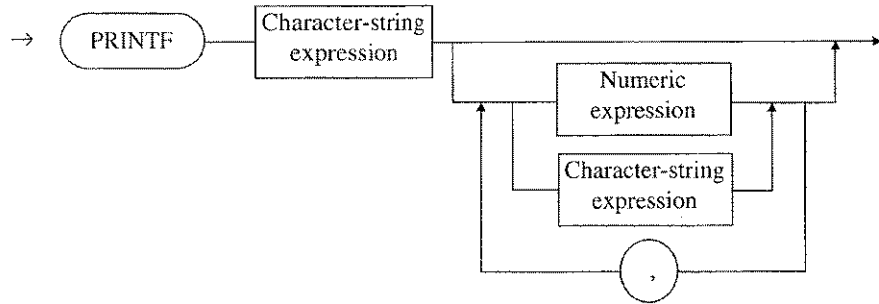

(1)-2

PRINTF character-string expression [numeric expression | character-string expression { , numeric expression | character-string expression }]

- Description

- The PRINTF statement displays the specified numeric or character string.
- When the multiple numerics or character strings are delimited with a comma and specified, they are continuously output without LF. To line feed, use a "\n" in the format specification expression.
- The first parameter character-string expression is used to specify the preceding parameter format.
- The following format specification are provided.

- PRINTF format specification expression ; [[expression [expression [...]]]]

The method of format specification is similarly to the Printf function of C language. The format specification expression is a character-string type and the output format is defined by the following method. The character string other than this format is normally output. If "%" is necessary, add "%" immediately followed after the "%".

%[-] [0] [m] [. n] character

- : Justifies the character with no space from left (if no specification, then from right).
- 0: Sets the character, which is justified for the remaining blank in the specified field, to be 0.
- m: Reserves the field for the character "m".
- .n: Outputs the PRINT USING format with n-digit accuracy. In character string, this setup value is used for an actual character-string length.

Character: d; decimal with sign s; character string

o; octal

e; floating-point expression (exponent format)

x; hexadecimal

f; floating-point expression

4.3 Statement Syntax and Use

- Example


```


10 N = 500000
20 U = LOG(1+1/N)
30 V = U - 1 / N
40 PRINTF "%7d %16.5e %16.5e \n" ,N,U,V
50 PRINTF "%s\n" , "end"

```

<After the execution>
500000 2.00000e-06 -1.99994e-12
end

46. READ

- Outline The READ statement is used to assign the constant in the DATA statement to the variable.
- Syntax (1)-1

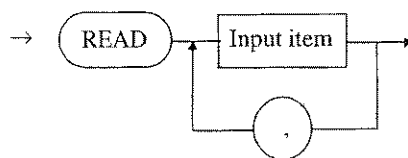


(1)-2
READ input item { , input item }

- Description
 - The READ statement reads the numeric or character string defined in the DATA statement to the variable specified by the argument.
 - The READ statement catches the READ statement and searches the DATA statement in the program.
 - In the first READ statement, basically (it must be changed by RESTORE statement), the READ searches the constant value from top line to final line in order, and the first searched value is assigned to the variable. After that, the constant corresponding to the DATA statement is searched and assigned to the variable.
 - If the constant value specified the DATA statement is less, an error will occur.
 - It is not necessary that the variable value read out by the READ statement and the constant value in one line of DATA statement are the same.

47. REM

- Outline The REM statement is an annotation for program.
- Syntax (1)-1



(1)-2

REM character-string

- Description
 - The REM statement is used to add the annotation to the program.
 - Since the REM statement is no execution statement, any character string can be used followed after the REM statement. All the characters, numerics, and symbols can be used.
 - An exclamation mark may be used instead of the REM statement.
 - Multi statements using colons followed after the REM statement cannot be used. All the statements are determined as annotation statement.
- Example


```

10 REM "PROGRAM 1"
20 ! 1983-JUN-02
30 A=A+1:! INCREMENT A
      
```


4.3 Statement Syntax and Use

48. REMOTE

- Outline
- Syntax

The REMOTE statement is used to set the specified device to the remote state or to set the remote enable (REN) line to TRUE.

(1)-1

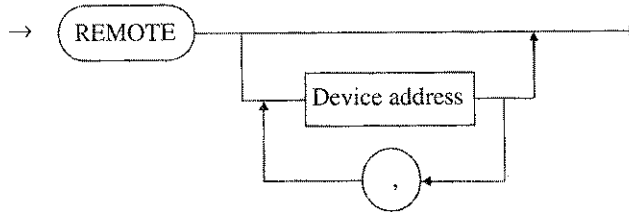

(1)-2

REMOTE [device address {, device address }]

- Description

- If only the REMOTE statement is executed without specifying the device address, the remote enable (REN) line of the GPIB will become TRUE (Low level) and the device connected on the GPIB will be set to the remote-controlled state. To set the REN line to FALSE (High level), execute the LOCAL statement.
- If the device address followed after the REMOTE statement is specified, only the device address specified by its device address will be set to the remote-controlled state (only when the REN line is TRUE). Multiple device addresses can be specified. To cancel the remote-controlled state, execute the LOCAL statement.
- The REMOTE statement is used to set the selected device to the remote-controlled state, however, if the following statements are executed, then the specified device will be automatically set to the remote-controlled state without executing the REMOTE statement.
 CLEAR[device address {, device address }]
 OUTPUT device address {, device address} ; <output data> {, <output data> }
 REMOTE[device address {, device address }]
 SEND LISTEN device address {, device address}
 TRIGGER device address {, device address}

- Example

```
10 REMOTE 1
20 REMOTE 5
30 REMOTE 1,2,3
```


NOTE: The REMOTE statement is not available in the ADDRESSABLE mode.

49. REQUEST

- Outline
- Syntax

The REQUEST statement is used to set the status byte which is sent to the external GPIB controller in the ADDRESSABLE mode.

(1)-1



(1)-2

REQUEST integer


NOTE: The integer can be set to a value between 0 and 255.

- Description
- Example
- Note

- The REQUEST statement sets the status byte which is sent to the external GPIB controller in the ADDRESSABLE mode.
- To transmit the service request (SRQ), the values of 64 to 127 or 192 to 255 (bit 6 indicates "1") must be set.

10 REQUEST 65

- The REQUEST statement is not available in the SYSTEM CONTROLLER mode.
- Note that the serial poll is used to read the status byte from an external controller. The *STB? of the GPIB command cannot be used.
- When the SRQD of the GPIB command is executed, the bit 6 of the status byte is always transmitted as "0". This means that the SRQ is not transmitted.
- Notice on the status byte
There are two output paths for a status byte as shown below:

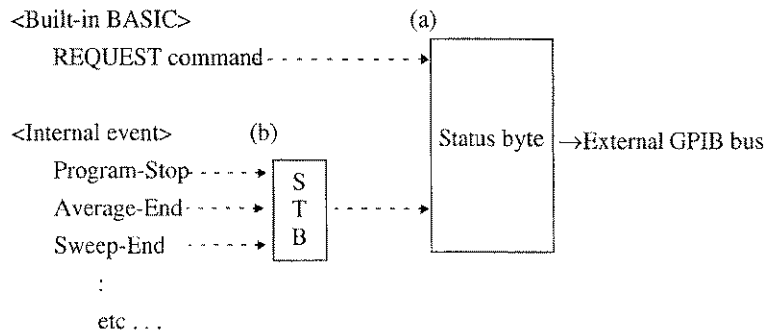

- (a) This is a status byte which is output through the external GPIB bus. This byte can be read out by using the serial poll (bit 6 of RQS is set to 0 (zero) when read out).
- (b) Corresponds to the status register for the internal event. This register's contents can be read out by executing the " * STB?". (Bit 6 (MSS) will not change when this is done).

4.3 Statement Syntax and Use

NOTE: *The output of (a) is the one most recently stored (by either <Built-in BASIC> or the <Internal event>).*

When executing the REQUEST command under <Built-in BASIC>, the specified value is immediately saved to (a).

When executing a command under <Internal event>, the specified value is saved to (a) if any changes in (b) are detected.

Bit change in (b) can be masked (except the MAV bit (Bit = 4)) by setting enable registers for each registers up to (b).

The MAV bit is set to "1" when receiving a query command; "0" when outputting a query data (including executions of the <Built-in BASIC>). In other words, there is a bit change each time a query command is executed.

The contents of (b) have precedence over the REQUEST command when a query command is executed before sending the contents of (a) (which has already been set by the REQUEST command) via a serial poll.

The status byte is always cleared by executing " CLS" followed by "REQUEST 0".*


** CLS" is effective for register groups up to (b). However the bit status of (a) cannot be changed if (b) is already "0" (zero) (because there are no changes in (b), (a) stays unchanged).*

50. RESTORE

- Outline
- Syntax

The RESTORE statement is used to specify the DATA line which is read out in the next READ statement.

(1)-1

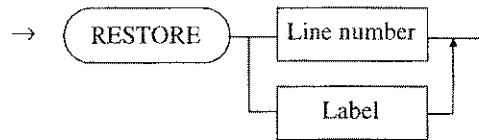

(1)-2

RESTORE

- Description


- The line number is specified by the line number or label.
Unless otherwise specified, the constant of the DATA statement is read out from the first line of the program in order, and the DATA statement which is objected for the next READ statement in the RESTORE statement.
- The line number of the argument is the first line number from which the DATA statement search is to start. Therefore, the DATA statement to be specified may be written on the line from which the DATA statement search is to start or any subsequent line.

4.3 Statement Syntax and Use

51. SELECT, CASE, ENS SELECT

- Outline This statement is used to perform the multiple branches on condition of the one expression value.

- Syntax (1)-1

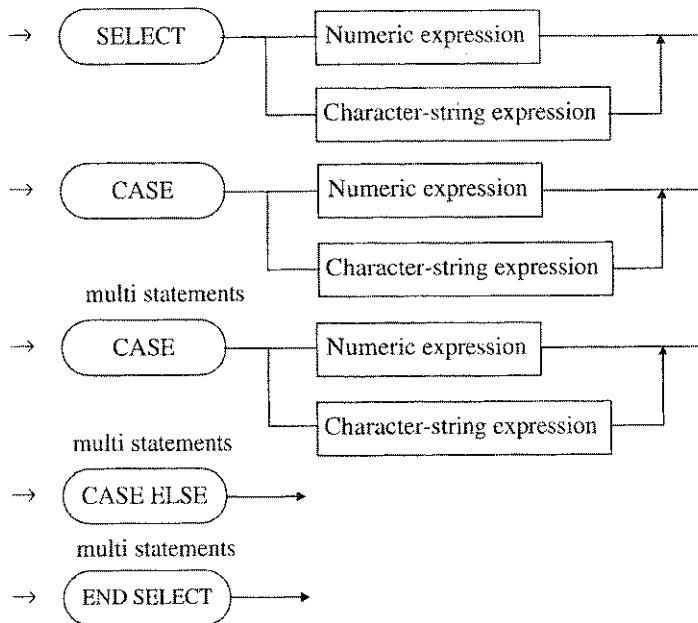

- (1)-2

```

SELECT <numeric expression | character-string expression>
CASE <numeric expression | character-string expression>
    multi statements
CASE <numeric expression | character-string expression>
    multi statements
CASE ELSE
    multi statements
END SELECT
    
```


- Description
 - This statement executes the multiple statements which are agreed with the expression value specified by the SELECT statement followed after the CASE statement. The next statements such as CASE, CASE ELSE, or END SELECT can be objected for the execution.
 - Nesting can be preformed in the SELECT statement. In this case, an internal SELECT statement includes the other statements.

52. SEND

- Outline
- Syntax

The SEND statement is used to output the command and data to a GPIB.

(1)-1

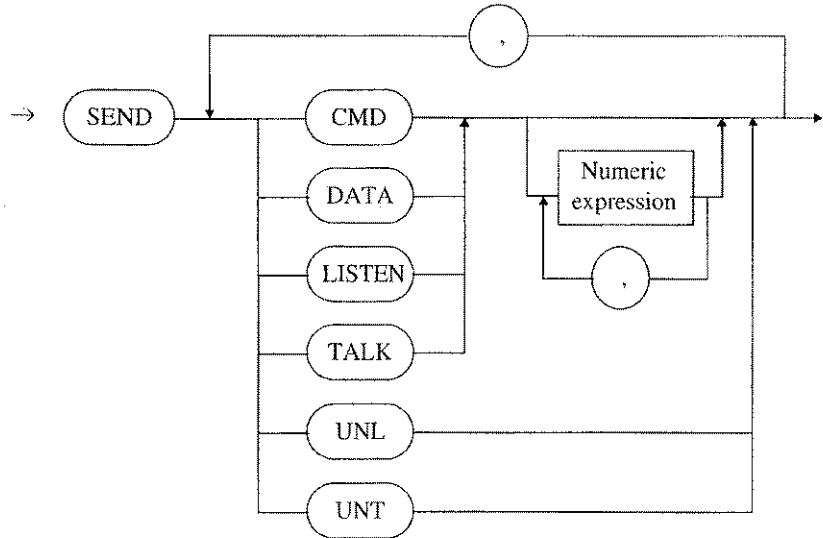

(1)-2

SEND <A | B> { , <A | B> }

A : <CMD | DATA | LISTEN | TALK> [numeric expression { , numeric expression }]

B : UNL | UNT

- Description

The SEND statement sends (transmits) the universal command, the address command, and the data independently to the GPIB.

CMD: Sets the ATN line to TRUE (Low level) and sends the numerics given to the GPIB. The numeric is converted into an 8-bit binary data and output to the GPIB. Therefore, the numerics to be used are the range of 0 to 255 and the numerics of decimal point expression are automatically converted into integers.

DATA: Sets the ANT line to FALSE (High level) and sends the numerics given to the GPIB. The numerics to be used are the same as CMD.

LISTEN: Sends the numerics given to the GPIB as listener address group (LAG). Multiple numerics can be specified.

TALK: Sends the numerics given to the GPIB as talker address group (TAG). Multiple numerics cannot be specified.

UNL: Sends the UNL command to the GPIB. The listener (device specified as listener before executing this command) can be canceled.

UNT: Sends the UNT command to the GPIB. The talker (device specified as talker before executing this command) can be canceled.

4.3 Statement Syntax and Use

- Example


```
10 SEND UNT UNL LISTEN 1, 2, 3 TALK 4
20 SEND UNT CMD 63, 33 DATA 30,54
```
- Note


The SEND statement is not available in the ADDRESSABLE mode.

53. SPOLL

- Outline

The SPOLL statement is used to perform the serial polling of the specified device and to read out the status byte.
- Syntax

(1)-1



(1)-2
 SPOLL (device address)

- Description
 - When the analyzer is set to the SYSTEM CONTROLLER mode, the SPOLL statement executes the serial polling for the other GPIB devices.
 - When the device address is 0 to 30, the SPOLL statement executes the serial polling for the devices corresponding to each address.
 - When the device address is 31, the SPOLL statement retrieves the status byte for the analyzer regardless of whether the analyzer is set to the SYSTEM CONTROLLER mode or the ADDRESSABLE mode.
- Example



```
10 OUTPUT 31;"OLDC ON"
20 ON ISRQ GOTO 70
30 ENABLE INTR
40 OUTPUT 31;"SRQE"
50 OUTPUT 31;"SINGLE"
60 GOTO 60
70 PRINT SPOLL(31)
80 STOP
```
- Note

In the ADDRESSABLE mode, if the device address between 0 to 30 is specified and the SPOLL is executed, the value "0" will be returned.

54. SPRINTF

- Outline The SPRINTF statement is used to convert the format in accordance with the format conversion of the PRINTF command and to assign the result to the character-string variable.

- Syntax (1)-1

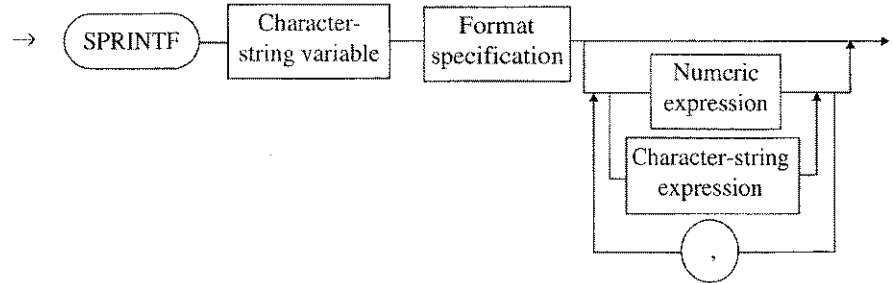

(1)-2

SPRINTF character-string variable format specification [numeric expression | character-string expression {, numeric expression | character-string expression}]

- Description
 - The SPRINTF statement converts the expression value in accordance with the format conversion of the PRINTF command, and assigns the result to the character-string variable of first parameter.
 - Pay attention to the format specification, the number of expression, and the character-string variable size for storing the result. If the character string for storing the result does not have enough capacity (free space), the BASIC buffer may be damaged. The method of format specification is refer to "45. PRINTF" of section 4.3.


4.3 Statement Syntax and Use

55. TIMER

- Outline
- Syntax

The TIMER statement is used to read/reset the internal system time.

(1)-1

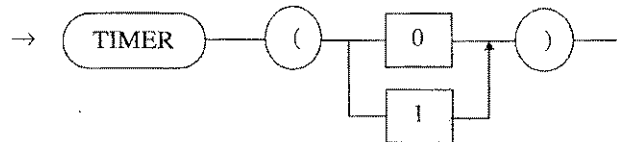

(1)-2

TIMER (0 | 1)

- Description

- The TIMER statement is the built-in function, which returns the internal system time with the device of sec. This function is mainly used to check the measurement operation time.
When the argument 0 is specified: Reads out the internal system time.
When the argument 1 is specified: Resets the internal system time.
- The read out value with the resolution of 10msec includes an error of ± 10 msec.

- Example

```

10 INTEGER I
20 TIMER(1)
30 FOR I=0 TO 10000
40 NEXT I
50 T1=TIMER(0)
60 !
70 TIMER(1)
80 FOR I=0 TO 10000
90 PRINT I
100 NEXT I
110 T2=TIMER(0)
120 !
130 PRINT "PRINT Command execute time is ";T2-T1
140 STOP
    
```


56. TIMES\$

- Outline The TIMES\$ statement is used to read/set the time of the built-in timer.
- Syntax (1)-1



(1)-2

TIMES\$

(2)-1



(2)-2

TIMES\$="hour : minute : second"

- Description
 - The TIMES\$ statement reads out the time of the built-in timer (RTC).
 - The TIMES\$ statement can change the time which is read out.

Input as follows:

TIMES\$="23:43:12"

TIMES\$="11:5:6"

- Example


```

10 DIM T$(10)
20 T$=TIMES$
30 PRINT "Time is "; T$
40 PRINT "Time Reset"
50 TIMES$="0:0:0"
60 STOP
      
```


4.3 Statement Syntax and Use

57. TRIGGER

- Outline
- Syntax

The TRIGGER statement is used to send the group execute trigger (GET) of address command group (ACG) to the all devices connected to the GPIB or to the particular device selected.

(1)-1

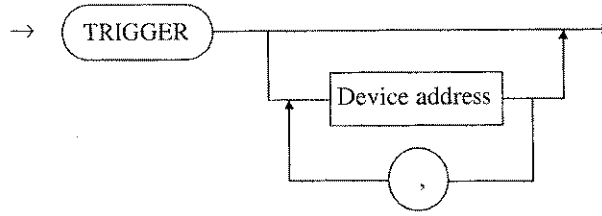

(1)-2

TRIGGER [device address {, device address }]


- Description
 - If only the TRIGGER statement is executed without specifying the device address, only the the group execute trigger (GET) of address command will be transmitted. In this case, the device to be triggered must be set as listener in advance.
 - If the device address followed after the TRIGGER statement is specified, the GET command will be transmitted to only the device address specified by its device address.
- Example

```
10 TRIGGER 1
20 TRIGGER
```
- Note

The TRIGGER statement is not available in the ADDRESSABLE mode.

58. WAIT

- Outline The WAIT statement is used to wait for the specified time.
- Syntax (1)-1



(1)-2

WAIT time


- Description The WAIT statement waits for the specified time. The unit of time is msec. The setting range of time between 0 to 65535.
- Example


```

10 INTEGER T
20 T=30
30 PRINT T;"[msec] Wait !!"
40 WAIT T
50 STOP
      
```

59. WAIT EVENT

- Outline The WAIT EVENT statement is used to wait the event until the specified event is generated.
- Syntax (1)-1



(1)-2

WAIT EVENT event number

- Description The WAIT EVENT statement waits the event until the specified event number is generated.
Event number: 1;sweep end
- Example


```

10 INTEGER EV
20 EV=1
25 OUTPUT 31;"OLDC OFF"
30 OUTPUT 31;"INIT:CONT OFF;;ABOR;INIT"
40 WAIT EVENT EV
50 PRINT "SWEEP FINISHED"
60 STOP
      
```

4.4 Built-in Function

4.4 Built-in Function

4.4.1 Outline

The Built-in function is a function which is built into the analyzer and can perform a high-speed processing. The data measured with a network analyzer by using the built-in function.

The built-in function is available for analyzing or judging the measured data. The basic function is used similarly as the existing network analyzer R3751, however, care is taken to partially added or deleted functions. Also the processing speed is improved.

The numeric values in the built-in function cannot specify the device. Any value is managed as a standard device.

Example: When calculating 10KHz address point

$$P = \text{POINT2}(1\text{E}+8, 0)$$

Also the response data from the built-in function is similarly processed as the numeric value of the standard unit.

1. Measurement data and address point

Use the address point for specifying the analysis range of the measurement data or the position in the measurement data. The address point specifies the measurement data by using the value of 0 through 1200. The measurement point is corresponded as follows:

- When the measurement point number is 1201

First data	Address point 0
2nd data	Address point 1
3rd data	Address point 2
:	
n-th data	Address point n-1
:	
1201st data	Address point 1200

- When the measurement point number is 601

First data	Address point 0
2nd data	Address point 2
3rd data	Address point 4
:	
n-th data	Address point 2(n-1)
:	
601st data	Address point 1200

- When the measurement point number is 301

First data Address point 0
 2nd data Address point 4
 3rd data Address point 8
 :
 n-th data Address point 4(n-1)
 :
 301st data Address point 1200

Thus at the measurement point of 1200, the address point increases 1 and at the another point, it increases 1 or more.

Relation between measurement point number and addition value of address point is as follows:

Table 4-5 Relation between measurement point number and addition value of address point

Measurement point number	Addition value of address point	Measurement point number	Addition value of address point
1201	1	101	12
801 *	1	51	24
601	2	21	60
401	3	11	120
301	4	6	240
201	6	3	600

* : When the measurement point is 801, the addition value of address point is 1. If 801 to 1200 points are specified, error arises.

Also this relation applies to user sweep and program sweep. When the user sweep and the program sweep are executed in the measurement point of 1201, the addition point of address point is always 1. The data is arranged at the beginning of the address point, 0. When the measurement point number is set to 601, further the total of the segment point number doesn't excess 601, the measurement data is arranged every other point. Also if an address point is specified when the measurement point number is changed, the specification of built-in function is not needed to be changed.

4.4.1 Outline

2. Analysis channel

In the analysis channel, the analyzed data is specified by the built-in function. The data to be analyzed in the analyzer is as follows. The complex number data cannot be used for the analysis, but can be used for the data transmission.

- Display data
- Main trace data
- Sub trace data
- Main trace complex number data
- Sub trace complex number data

Analysis channel specification for these data is as follows.

- Display data

In the display data, the displayed data is stored. The stored data is changed by the display format or the specification of the measure. The contents of memory data are unsettled.

Table 4-6 Each measurement channel and analysis channel

CH1	CH2	CH3	CH4	
0	1	4	5	Measurement display first waveform data *1
8	9	12	13	Measurement display second waveform data *2
2	3	6	7	Memory display first waveform data *3
10	11	14	15	Memory display second waveform data *4

*1 : When 1 waveform is displayed in 1 screen, the display data is stored. When 2 waveforms are displayed in 1 screen, the first waveform is stored.

The first waveform : S11 when the format is LOGMAG&PHASE, further LOGMAG measure is S11&S21.

*2 : When 1 waveform is displayed in 1 screen, the contents are unsettled. When 2 waveforms are displayed in 1 screen, the second waveform is stored.

The second waveform : S21 when the format is LOGMAG&PHASE, further PHASE measure is S11&S21.

*3 : When the copy is not performed to the memory, the contents are unsettled.

*4 : Even if the copy is performed to the memory, if the waveform display is not the second one then, the contents are unsettled.

- Main trace data

The trace data is the data to be the display data. LOGMAG, phase, real number part, and imaginary number part data are stored as internal data. Since these internal data are kept regardless of the display format, it's effective to analyze the data which is not in the display data. This data is not changed even if the display data operates 'smoothing'.

When 1 screen has 2 measurement data like S11&S21, each waveform is called as follows in order to distinguish.

The trace data which corresponds to the first waveform :Main trace data

The trace data which corresponds to the second waveform :Sub trace data

In the case like S11 and S21, the trace data is always main one.

Table 4-7 Each measurement channel and analysis channel

CH1	CH2	CH3	CH4	
32	36	48	52	LOGMAG data *1
33	37	49	53	Phase data *1
34	38	50	54	Real part data *1
35	39	51	55	Imaginary part data *1
40	44	56	60	LOGMAG data of memory *2
41	45	57	61	Phase data of memory *2
42	46	58	62	Real part data of memory *2
43	47	59	63	Imaginary part data of memory *2

*1 : If the measurement is not performed on the specified channel, the contents become indefinite.

*2 : If the copy to the memory is not performed, the contents become indefinite.

4.4.1 Outline

- Sub trace data

Table 4-8 Each measurement channel and analysis channel

CH1	CH2	CH3	CH4	
64	68	80	84	LOGMAG data *1
65	69	81	85	Phase data *1
66	70	82	86	Real part data *1
67	71	83	87	Imaginary part data *1
72	76	88	92	LOGMAG data of memory *2
73	77	89	93	Phase data of memory *2
74	78	90	94	Real part data of memory *2
75	79	91	95	Imaginary part data of memory *2

*1 : If the measurement is not performed on the specified channel, the contents become indefinite.

*2 : If the copy to the memory is not performed, the contents become indefinite.

- Main trace complex number data

When treating the internal complex number data, only the data transmission like TRANSR or TRANSW can be performed.

Table 4-9 Each measurement channel and analysis channel

CH1	CH2	CH3	CH4	
128	192	256	320	Trace data *1
132	196	260	324	Trace memory data *2
129	193	257	321	Data after corrective operation *1
130	194	258	322	Memory data after corrective operation *2
131	195	259	323	Data before corrective operation *1
133	197	261	325	Normalize standard data *3
134	198	262	326	1 port correction :Direction error coefficient *3
135	199	263	327	1 port correction :Source match error coefficient *3
136	200	264	328	1 port correction :Reflection tracking error coefficient *3
137	201	265	329	2 port correction :Forward direction error coefficient *4
138	202	266	330	2 port correction :Forward direction source match error coefficient *4
139	203	267	331	2 port correction :Forward direction reflection tracking error coefficient *4
140	204	268	332	2 port correction :Forward direction load match error coefficient *4
141	205	269	333	2 port correction :Forward direction transmission tracking error coefficient *4
142	206	270	334	2 port correction :Forward direction isolation error coefficient *4
143	207	271	335	2 port correction :Reverse direction error coefficient *4
144	208	272	336	2 port correction :Reverse direction source match error coefficient *4
145	209	273	337	2 port correction :Reverse direction reflection tracking error coefficient *4
146	210	274	338	2 port correction :Reverse direction load match error coefficient *4
147	211	275	339	2 port correction :Reverse direction transmission tracking error coefficient *4
148	212	276	340	2 port correction :Reverse direction isolation error coefficient *4
149	213	277	341	Normalize & Isolation correction :Normalize standard data *3
150	214	278	342	Normalize & Isolation correction :Isolation error coefficient *3

*1 : If the measurement is not performed on the specified channel, the contents become indefinite.

*2 : If the copy to the memory is not performed, the contents become indefinite.

*3 : If the correction is not performed, the contents become indefinite.

*4 : If the correction is not performed, the contents become indefinite. The contents of CH1 and CH3, and CH2 and CH4 correction data become the same.

4.4.1 Outline

- Sub trace complex number data
Sub trace complex number data is assigned as follows.

Table 4-10 Each measurement channel and analysis channel

CH1	CH2	CH3	CH4	
160	224	288	352	Trace data *1
164	228	292	356	Trace memory data *2
161	225	289	353	Data after corrective operation *1
162	226	290	354	Memory data after corrective operation *2
163	227	291	355	Data before corrective operation *1
165	229	293	357	Normalize standard data *3
166	230	294	358	1 port correction : Direction error coefficient *3
167	231	295	359	1 port correction : Source match error coefficient *3
168	232	296	360	1 port correction : Reflection tracking error coefficient *3
169	233	297	361	2 port correction : Forward direction error coefficient *4
170	234	298	362	2 port correction : Forward direction source match error coefficient *4
171	235	299	363	2 port correction : Forward direction reflection tracking error coefficient *4
172	236	300	364	2 port correction : Forward direction load match error coefficient* 4
173	237	301	365	2 port correction : Forward direction transmission tracking error coefficient *4
174	238	302	366	2 port correction : Forward direction isolation error coefficient *4
175	239	303	367	2 port correction : Reverse direction error coefficient *4
176	240	304	368	2 port correction : Reverse direction source match error coefficient *4
177	241	305	369	2 port correction : Reverse direction reflection tracking error coefficient *4
178	242	306	370	2 port correction : Reverse direction load match error coefficient *4
179	243	307	371	2 port correction : Reverse direction transmission tracking error coefficient *4
180	244	308	372	2 port correction : Reverse direction isolation error coefficient *4
181	245	309	373	Normalize & Isolation correction : Normalize standard data *3
182	246	310	374	Normalize & Isolation correction : Isolation error coefficient *3

- *1 : If the measurement is not performed on the specified channel, the contents become indefinite.
- *2 : If the copy to the memory is not performed, the contents become indefinite.
- *3 : The command which can be used in controller mode was used in addressable mode.
- *4 : The command which can be used in addressable mode was used in controller mode.

3. Response formats for built-in function

Response formats for built-in function are provided for three types.

- Measurement point
Address point including measurement data.
Example;MAX function
- Address point
At other than measurement point, interpolate to set the value of address point.
Example;VALUE function
- Compensate
Interpolate to set a value.
Example;CVALUE function

4.4.1 Outline

4. Additional analysis channels for the R3765CG or R3767CG with OPT11 or OPT14

The following analysis channels are available for the R3765CG and R3767CG equipped with OPT11 or OPT14

CH1	CH2	
592	593	3-port correction: P1 to P3: Forward direction reflection tracking error coefficient *4
594	595	*1 Forward direction directive error coefficient *4
596	597	Forward direction source match error coefficient *4
598	599	Forward direction transmission tracking error coefficient *4
600	601	Forward direction isolation error coefficient *4
602	603	Forward direction load match error coefficient *4
604	605	Reverse direction reflection tracking error coefficient *4
606	607	Reverse direction directive error coefficient *4
608	609	Reverse direction source match error coefficient *4
610	611	Reverse direction transmission tracking error coefficient *4
612	613	Reverse direction isolation error coefficient *4
614	615	Reverse direction load match error coefficient *4
616	617	3-port correction: P1 to P3: Forward direction reflection tracking error coefficient *4
618	619	*2 Forward direction directive error coefficient *4
620	621	Forward direction source match error coefficient *4
622	623	Forward direction transmission tracking error coefficient *4
624	625	Forward direction isolation error coefficient *4
626	627	Forward direction load match error coefficient *
628	629	Reverse direction reflection tracking error coefficient *4
630	631	Reverse direction directive error coefficient *4
632	633	Reverse direction source match error coefficient *4
634	635	Reverse direction transmission tracking error coefficient *4
636	637	Reverse direction isolation error coefficient *4
638	639	Reverse direction load match error coefficient *4
640	641	3-port correction: P2 to P3: Forward direction reflection tracking error coefficient *4
642	643	*3 Forward direction directive error coefficient *4
644	645	Forward direction source match error coefficient *4
646	647	Forward direction transmission tracking error coefficient *4
648	649	Forward direction isolation error coefficient *4
650	651	Forward direction load match error coefficient *4
652	653	Reverse direction reflection tracking error coefficient *4
654	655	Reverse direction directive error coefficient *4

CH1	CH2	
656	657	Reverse direction source match error coefficient *4
658	659	Reverse direction transmission tracking error coefficient *4
660	661	Reverse direction isolation error coefficient *4
662	663	Reverse direction load match error coefficient *4
664	665	3-port correction: PORT1 Reserve *4
666	667	3-port correction: PORT2 Reserve *4
668	669	3-port correction: PORT3 Reserve *4

- *1: Errors occurring between PORT1 and PORT2
- *2: Errors occurring between PORT1 and PORT3
- *3: Errors occurring between PORT2 and PORT3
- *4: Indefinite when errors have not been corrected.

4.4.1 Outline

5. Additional analysis channels for the R3765CG or R3767CG with OPT14

For the R3765CG or R3767CG equipped with OPT14, the following analysis channels are available in addition to the channels listed in "(4) Additional channels used for the R3765CG or R3767CG equipped with OPT11 or OPT14."

- Analysis channels for 3-port corrections

CH1	CH2	
670	671	3-port correction: P1 to P4: Forward direction reflection tracking error coefficient *3
672	673	*1 Forward direction directive error coefficient *3
674	675	Forward direction source match error coefficient *3
676	677	Forward direction transmission tracking error coefficient *3
678	679	Forward direction isolation error coefficient *3
680	681	Forward direction load match error coefficient *3
682	683	Reverse direction reflection tracking error coefficient *3
684	685	Reverse direction directive error coefficient *3
686	687	Reverse direction source match error coefficient *
688	689	Reverse direction transmission tracking error coefficient *3
690	691	Reverse direction isolation error coefficient *3
692	693	Reverse direction load match error coefficient *3
694	695	3-port correction: P2 to P4: Forward direction reflection tracking error coefficient *3
696	697	*2 Forward direction directive error coefficient *3
698	699	Forward direction source match error coefficient *3
700	701	Forward direction transmission tracking error coefficient *3
702	703	Forward direction isolation error coefficient *3
704	705	Forward direction load match error coefficient *3
706	707	Reverse direction reflection tracking error coefficient *3
708	709	Reverse direction directive error coefficient *3
710	711	Reverse direction source match error coefficient *3
712	713	Reverse direction transmission tracking error coefficient *3
714	715	Reverse direction isolation error coefficient *3
716	717	Reverse direction load match error coefficient *3

*1: Errors occurring between PORT1 and PORT4. Used when a 3-port full cal using PORT1, PORT2 and PORT4 is performed.

*2: Errors occurring between PORT2 and PORT4. Used when a 3-port full cal using PORT1, PORT2 and PORT4 is performed.

*3: Indefinite when errors have not been corrected.

The analysis channels between PORT1 and PORT2 that are used to perform 3-port corrections using PORT1, PORT2 and PORT4 are the same as the analysis channels of PORT1 in "4. Additional channels for the R3765CG or R3767CG with OPT11 or OPT14."

- Analysis channels for 4-port corrections

CHI	CH2	
718	719	4-port correction: P3 to P4: Forward direction reflection tracking error coefficient *2
720	721	*1 Forward direction directive error coefficient *2
722	723	Forward direction source match error coefficient *2
724	725	Forward direction transmission tracking error coefficient *2
726	727	Forward direction isolation error coefficient *2
728	729	Forward direction load match error coefficient *2
730	731	Reverse direction reflection tracking error coefficient *2
732	733	Reverse direction directive error coefficient *2
734	735	Reverse direction source match error coefficient *2
736	737	Reverse direction transmission tracking error coefficient *2
738	739	Reverse direction isolation error coefficient *2
740	741	Reverse direction load match error coefficient *2

*1: Errors occurring between PORT3 and PORT4

*2: Indefinite when errors have not been corrected.

The analysis channels used for 4-port corrections, which are not listed above, are the same as the analysis channels used for 3-port corrections.

CHI	CHI	
592 to 614	593 to 615	4-port correction: P1 to P2 (use the same analysis channel used for a 3-port correction between PORT1 and PORT2)
616 to 638	617 to 639	4-port correction: P1 to P3 (use the same analysis channel used for a 3-port correction between PORT1 and PORT3)
640 to 662	641 to 663	4-port correction: P2 to P3 (use the same analysis channel used for a 3-port correction between PORT2 and PORT3)
670 to 692	671 to 693	4-port correction: P1 to P4 (use the same analysis channel used for a 3-port correction between PORT1 and PORT4)
694 to 716	694 to 717	4-port correction: P2 to P4 (use the same analysis channel used for a 3-port correction between PORT2 and PORT4)
718 to 740	719 to 741	4-port correction: P3 to P4

4.4.2 List of Built-In Function

4.4.2 List of Built-In Function

- Address point relation

POINT1(F,C):	meas point;	Measurement point closed to specified frequency
POINT2(F,C):	address point;	Address point closed to specified frequency
DPOINT(F0,F1,C):	address point;	Address point width corresponding to specified frequency width
POINT1L(F,C):	meas point;	Max. measurement point less than specified frequency
POINT1H(F,C):	meas point;	Min. measurement point more than specified frequency
POINT2L(F,C):	address point;	Max. address point less than specified frequency
POINT2H(F,C):	address point;	Min. address point more than specified frequency
SWPOINT(C):	meas point;	Latest measurement point
- Frequency relation

FREQ(P,C):	address point;	Frequency corresponding to specified address point
DFREQ(P0,P1,C):	address point;	Frequency width corresponding to specified address point width
SWFREQ(C):	meas point;	Latest measurement frequency
- Response relation

VALUE(P,C):	address point;	Response value in specified address point
DVALUE(P0,P1,C):	address point;	Difference of response values between specified address points
CVALUE(F,C):	compensate;	Response value in specified frequency
DCVALUE(F0,F1,C):	compensate;	Difference of response values between specified frequencies
SWVALUE(C):	meas point;	Latest response value

- Max. value/Min. value relation

MAX(P0,P1,C):	meas point;	Max. response value between specified address points
FMAX(P0,P1,C):	meas point;	Max. response frequency between specified address points
PMAX(P0,P1,C):	meas point;	Measurement point in max. response between specified address points
MIN(P0,P1,C):	meas point;	Min. response value between specified address points
FMIN(P0,P1,C):	meas point;	Min. response frequency between specified address points
PMIN(P0,P1,C):	meas point;	Measurement point in min. response between specified address points
- Bandwidth relation

BND(P,X,C):	compensate;	Bandwidth attenuating specified data from specified address point
BNDL(P,X,C):	compensate;	Frequency in low frequency side attenuating specified data from specified address point
BNDH(P,X,C):	compensate;	Frequency in high frequency side attenuating specified data from specified address point
CBND(F,X,C):	compensate;	Bandwidth attenuating specified data from specified address point
CBNDL(F,X,C):	compensate;	Frequency in low frequency side attenuating specified data from specified frequency
CBNDH(F,X,C):	compensate;	Frequency in high frequency side attenuating specified data from specified frequency
MBNDI(P0,P1,P,N,La,Fa,C):	compensate;	Frequency in low frequency side, frequency in high frequency side, center frequency and bandwidth attenuating specified data from specified address point between specified address points
MBNSO(P0,P1,P,N,La,Fa,C):	compensate;	Frequency in low frequency side, frequency in high frequency side, center frequency and bandwidth attenuating specified data from specified address point between specified address points

4.4.2 List of Built-In Function

- Ripple relation-1
- | | | |
|-----------------------|-------------|--|
| RPL1(P0,P1,dX,dY,C): | meas point; | Difference in max. value and min. value between specified address points |
| RPL2(P0,P1,dX,dY,C): | meas point; | Max. value of difference in max. value and min. value adjoining between specified address points |
| RPL3(P0,P1,dX,dY,C): | meas point; | Max. value adding difference in max. value and min. value adjoining between specified address points |
| RPL4(P0,P1,dX,dY,C): | meas point; | Max. point of difference in max. value and min. value adjoining between specified address points |
| RPL5(P0,P1,dX,dY,C): | meas point; | Largest value of max. value between specified address points |
| RPL6(P0,P1,dX,dY,C): | meas point; | Smallest value of max. value between specified address points |
| RPLF(P0,P1,dX,dY,C): | meas point; | Frequency difference in first max. value and min. value between specified points |
| RPLR(P0,P1,dX,dY,C): | meas point; | Response difference in first max. value and min. value between specified points |
| RPLH(P0,P1,dX,dY,C): | meas point; | Response value in first max. value between specified address points |
| FRPLH(P0,P1,dX,dY,C): | meas point; | Frequency in first max. value between specified address points |
| PRPLH(P0,P1,dX,dY,C): | meas point; | Measured point in first max. value between specified address points |
| RPLL(P0,P1,dX,dY,C): | meas point; | Response value in first min. value between specified address points |
| FRPLL(P0,P1,dX,dY,C): | meas point; | Frequency in first min. value between specified address points |
| FRPLL(P0,P1,dX,dY,C): | meas point; | Measured point in first min. value between specified address points |

- Ripple relation-2

NRPLH(P0,P1,dX,dY,C):	meas point;	Nos. of max. point between specified address points
NRPLL(P0,P1,dX,dY,C):	meas point;	Nos. of min. point between specified address points
PRPLHN(N,C):	meas point;	Measured point in N-th max. value with NRPLH
PRPLL(N,C):	meas point;	Measured point in N-th min. value with NRPLL
FRPLHN(N,C):	meas point;	Frequency in N-th max. value with NRPLH
FRPLL(N,C):	meas point;	Frequency in N-th min. value with NRPLL
VRPLHN(N,C):	meas point;	Response value in N-th max. value with NRPLH
VRPLL(N,C):	meas point;	Response value in N-th min. value with NRPLL
PRPLHM(Pa,C):	meas point;	Measured point array in max. value with NRPLH
PRPLLM(Pa,C):	meas point;	Measured point array in min. value with NRPLL
FRPLHM(Xa,C):	meas point;	Frequency array in max. value with NRPLH
FRPLLM(Xa,C):	meas point;	Frequency array in min. value with NRPLL
VRPLHM(Xa,C):	meas point;	Response value array in max. value with NRPLH
VRPLLM(Xa,C):	meas point;	Response value array in min. value with NRPLL
- Direct search relation

DIRECT(P0,P1,X,C):	address point;	Address point closed to first detected data between specified address points
DIRECTL(P0,P1,X,C):	meas point;	Measured point in first detected data by search of low frequency side between specified address points
DIRECTH(P0,P1,X,C):	meas point;	Measured point in first detected data by search of high frequency side between specified address points
CDIRECT(F0,F1,X,C):	compensate;	Frequency in first detected data between specified frequencies
CDIRECTL(F0,F1,X,C):	compensate;	Frequency in first detected data by search of low frequency side
CDIRECTH(F0,F1,X,C):	compensate;	Frequency in first detected data by search of high frequency side between specified frequencies
DDIRECT(P0,P1,X,C):	address point;	Address point width in specified data between specified address points
CDDIRECT(F0,F1,X,C):	compensate;	Bandwidth in specified data between specified frequencies
ZEROPHS(P0,P1,C):	compensate;	Frequency in zero (0) phase between specified address points

4.4.3 Function Obtaining Address Point

- Data transfer relation

TRANSR(P0,P1,Xa,C):

meas point; Transfer of measured data between specified address points to array

TRANSW(P0,P1,Xa,C):

meas point; Transfer from array to specified address point

P,P0,P1: Address point specification
F,F0,F1: Frequency specification
C: Analysis channel specification
dX: Gradient horizontal axis specification
dY: Gradient vertical axis specification
X: Level specification
N: Number(s) and N-th specification
Xa,La,Fa: Array specification
Pa: Integer array specification

4.4.3 Function Obtaining Address Point

1. Functions which obtains measurement point POINT1, POINT1L, POINT1H

POINT1 (frequency, analysis channel)
POINT1L (frequency, analysis channel)
POINT1H (frequency, analysis channel)

Explanation: Obtain a measurement point in specified frequency.

POINT1 function: Obtains the measurement point closed to specified frequency. Round to the nearest whole number by conversion to measured point.

POINT1L function: Obtains the largest measurement point less than specified frequency. Omit the figures by conversion to measured point.

POINT1H function: Obtains the smallest measurement point more than specified frequency. Raise to a unit by conversion to measured point.

Usage: Most built-in functions have set an address point to an argument. For using other built-in functions, convert a frequency to a measurement point. When analysis range is specified, raising to a unit or omitting is accurate for specifying the range.

Example: P0=POINT1L(F0,0)
 P1=POINT1H(F1,0)
 X=MAX(P0,P1,0) Search the max. value in the range including the frequency, F0, F1.
 P=POINT1(F,0)
 Y=VALUE(P,0) Read out the measured data closed to the frequency, F.

2. Functions which obtains address point POINT2, POINT2L, POINT2H

POINT2	(frequency, analysis channel)
POINT2L	(frequency, analysis channel)
POINT2H	(frequency, analysis channel)

Explanation: Obtain an address point in specified frequency.

POINT2 function: Obtains the address point closed to specified frequency. Round to the nearest whole number by conversion to address point.

POINT2L function: Obtains the largest address point less than specified frequency. Omit the figures by conversion to address point.

POINT2H function: Obtains the smallest address point more than specified frequency. Raise to a unit by conversion to address point.

Usage: Most built-in functions have set an address point to an argument. For using other built-in functions, convert a frequency to an address point.

Example: P=POINT2(F,0)
 Y=VALUE(P,0)

Read out the measured data closed to the frequency, F, measured data at measurement point and at other cases interpolate to read out.

3. Function which obtains address point width DPOINT

DPOINT	(frequency1, frequency2, analysis channel)
--------	--

Explanation: Obtain an address point width corresponding to frequency width.

4.4.4 Function Obtaining Frequency

4. Function which obtains the latest measurement point SWPOINT

SWPOINT (analysis channel)

Explanation: Calculate the latest measurement point during sweep.

Usage: Sweep condition is shown by using SWPOINT (analysis channel).

As the following example, the data swept during the sweep can be analyzed.

Example: *SWEEPING1
IF SWPOINT(0)<P1 THEN GOTO *SWEEPING1
X=MAX(P0,P1,0)

CAUTION: When the analyzer is sweeping at high speed, the measured point is intermittently read out.

4.4.4 Function Obtaining Frequency

1. Function which obtains frequency FREQ

FREQ (address point, analysis channel)

Explanation: Convert address point to frequency.

Usage: Convert the function value which returns address point to frequency

Example: P=PMAX(0,1200,0)
F=FREQ(P,0)
X=VALUE(P,0)

Obtain the max. frequency and response value. Calculate at the higher speed since the search is once executed without using MAX, FMAX.

2. Function which obtains frequency width DFREQ

DFREQ (address point1, address point2, analysis channel)

Explanation: Convert from specified address point to frequency width.

3. Function which obtains latest width SWFREQ

SWFREQ (analysis channel)

Explanation: Obtain the latest measurement frequency during measurement.

Usage: Sweeping frequency are shown by using SWFREQ(analysis channel).

Example: *SWEEPING1
IF SWFREQ(0)<F1 THEN GOTO *SWEEPING1
X=CVALUE(F1)

CAUTION: When the analyzer is sweeping at high speed, the measured point is intermittently read out.

4.4.5 Function Obtaining Response

1. Function which obtains response VALUE

VALUE (address point, analysis channel)

Explanation: Read out response in specified address point. When address point is not measurement point, interpolate to obtain.

Usage: Convert the function value which returns address point to response value.

Example: P=PMAX(0,1200,0)
F=FREQ(P,0)
X=VALUE(P,0)

Obtain the max. frequency and response value. Calculate at the higher speed since the search is once executed without using MAX, FMAX.

2. Function which obtains response difference DVALUE

DVALUE (address point1, address point2, analysis channel)

Explanation: Obtain each difference of response value in specified address point.

4.4.5 Function Obtaining Response

3. Function which obtains response value CVALUE

CVALUE (frequency, analysis channel)

Explanation: Obtain response value corresponding to specified frequency.

4. Function which obtains response difference DCVALUE

DCVALUE (frequency1, frequency2, analysis channel)

Explanation: Calculate each difference of response values in specified frequency.

5. Function which obtains latest response value SWVALUE

SWVALUE (analysis channel)

Explanation: Obtain the latest measured response value during measurement.

Usage: Available for adjustment by monitoring a response value.

Example: *ADJUST

```
IF SWVALUE(33)<=PHASE1 THEN GOTO *ADJUST_END  
OUTPUT 33;C  
GOTO *ADJUST  
*ADJUST_END
```

Output to parallel I/O till a phase value drops less than a designated value.

CAUTION: *When the analyzer is sweeping at high speed, the measured point is intermittently read out.*

4.4.6 Function calculating Max. value, Min. value

1. Function which calculates max. response value MAX

MAX (start address point, end address point, analysis channel)

Explanation: Searches max. response value between specified address points.

Usage: Used when the response value of resonance point is calculated.

Example: X=MAX(0,1200,0)

2. Function which obtains the frequency of max. response FMAX

FMAX (start address point, end address point, analysis channel)

Explanation: Calculates the frequency of max. response between specified address points.

Usage: Used when the frequency of resonance point is calculated.

Example: F=FMAX(0,1200,0)

3. Function which obtains the measurement point of max. response PMAX

PMAX (start address point, end address point, analysis channel)

Explanation: Calculates the measurement point of max. response between specified address points.

Usage: Used when the frequency of resonance point, response value or also address point in another analysis is obtained.

Example 1: P=PMAX(0,1200,0)

F=FREQ(P,0)

X=VALUE(P,0)

Obtain the frequency and response value from the measured point in the max. value. Calculate at the higher speed since the search is once executed, compared with the use of MAX, FMAX.

Example 2: P=PMAX(0,1200,0)

FB=BND(P,3,0)

Obtain the bandwidth of -3dB from peak value.

4.4.6 Function calculating Max. value, Min. value

4. Function which obtains min. response value MIN

MIN (start address point, end address point, analysis channel)

Explanation: Search the min. response value between specified address points.

Usage: Used when the response value of anti-resonance point is obtained.

Example: X=MIN(0,1200,0)

5. Function which obtains the frequency of min. response FMIN

FMIN (start address point, end address point, analysis channel)

Explanation: Calculates the frequency of min. response between specified address points.

Usage: Used when the frequency of anti-resonance point is obtained.

Example: F=FMIN(0,1200,0)

6. Function which obtains the measurement point of min. response PMIN

PMIN (start address point, end address point, analysis channel)

Explanation: Calculates the measurement point of min. response between specified address points.

Usage: Used when the frequency of anti-resonance point and response value are obtained.

Example: P=PMIN(0,1200,0)

F=FREQ(P,0)

X=VALUE(P,0)

Obtain the frequency and response value from the measured point in the min. value. Calculate at the higher speed since the search is once executed, compared with the use of FMIN, MIN.

4.4.7 Function Obtaining Bandwidth, etc.

1. Function which obtains bandwidth BND

BND (address point, attenuation level, analysis channel)

Explanation: Obtain the bandwidth by searching the point which attenuated the specified attenuation level value from the specified address point.

The search is executed outside the specified address point.

Usage: Obtain 3dB less bandwidth, etc.

Example: $P = \text{PMAX}(0, 1200, 0)$
 $F = \text{BND}(P, 3, 0)$

Obtain 3dB less bandwidth.

2. Function which obtains frequency of low frequency side in bandwidth BNDL

BNDL (address point, attenuation level, analysis channel)

Explanation: Obtain the frequency by searching the point to the low frequency side, which attenuated the specified attenuation level value from the specified address point. The search is executed outside the specified address point.

Usage: Obtain center frequency, combined with BNDH.

3. Function which obtains frequency of high frequency side in bandwidth BNDH

BNDH (address point, attenuation level, analysis channel)

Explanation: Obtain the frequency by searching the point to the high frequency side, which attenuated the specified attenuation level value from the specified address point. The search is executed outside the specified address point.

Usage: Obtain center frequency, combined with BNDL.

Example: $P = \text{PMAX}(0, 1200, 0)$
 $FH = \text{BNDH}(P, 3, 0)$
 $FL = \text{BNDL}(P, 3, 0)$
 $FB = FH - FL$
 $FC = (FL + FH) * 0.5$

4.4.7 Function Obtaining Bandwidth, etc.

4. Function which obtains bandwidth CBND

CBND (frequency, attenuation level, analysis channel)

Explanation: Obtain the bandwidth by searching the point which attenuated the specified attenuation level value from the specified frequency.

The search is executed outside the specified address point.

Usage: Obtain 3dB less bandwidth, etc.

Example: $F=BND(F,3,0)$

Obtain 3dB less bandwidth.

5. Function which obtains frequency of low frequency side in bandwidth CBNDL

CBNDL (frequency, attenuation level, analysis channel)

Explanation: Obtain the frequency by searching the point to the low frequency side, which attenuated the specified attenuation level value from the specified frequency.

Usage: Obtain center frequency, combined with CBNDH.

6. Function which obtains frequency of high frequency side in bandwidth CBNDH

CBNDH (frequency, attenuation level, analysis channel)

Explanation: Obtain the frequency by searching the point to the low frequency side, which attenuated the specified attenuation level value from the specified frequency.

Usage: Obtain center frequency, combined with CBNDL.

Example: $FH=CBNDH(F,3,0)$

$FL=CBNDL(F,3,0)$

$FB=FH-FL$

$FC=(FL+FH)*0.5$

7. Function which obtains bandwidth analysis for multiple attenuation levels MBNDI

<p>MBNDI (start address point, end address point, standard address point, nos. of attenuation level, attenuation level array, array storing analysis result such as bandwidth, analysis channel)</p>
--

Explanation: Multiple attenuation levels are once analyzed. Outputs four types of frequency in low frequency side, frequency in high frequency side, center frequency and bandwidth to one attenuation level.

The attenuation level is specified in array and the analysis result is stored in array. The search is executed outside the specified address point. The array for attenuation level should be in order of low level.

Usage: Calculate at high speed when multiple attenuation levels are analyzed.

Available when four frequencies are required to one attenuation level.

Example: DIM L(3), F(3,4)

L(1)=1.0

L(2)=3.0

L(3)=10.0

P =PMAX(0,1200,0)

N =MBNDI(0,1200,P,3,L(1),F(1,1),0)

In this case, the followings are stored in the array F.

F(1,1) Frequency in low frequency side at attenuation level of 1.0

F(1,2) Frequency in high frequency side at attenuation level of 1.0

F(1,3) Center frequency at attenuation level of 1.0

F(1,4) Bandwidth at attenuation level of 1.0

F(2,1) Frequency in low frequency side at attenuation level of 3.0

F(2,2) Frequency in high frequency side at attenuation level of 3.0

F(2,3) Center frequency at attenuation level of 3.0

F(2,4) Bandwidth at attenuation level of 3.0

F(3,1) Frequency in low frequency side at attenuation level of 10.0

F(3,2) Frequency in high frequency side at attenuation level of 10.0

F(3,3) Center frequency at attenuation level of 10.0

F(3,4) Bandwidth at attenuation level of 10.0

When the search ca not be executed, (0.0) is entered. To N, the nos. of attenuation level is entered.

4.4.8 Ripple Analysis Function-1

8. Function which obtains bandwidth analysis for multi attenuation levels MBNDO

MBNDI (start address point, end address point, standard address point, nos. of attenuation level, attenuation level array, array storing analysis result such as bandwidth, analysis channel)

Explanation: The function is the same as MBNDI, however, the search is executed from outside to inside.

Usage: Used when the search is executed from outside to inside.

Example: DIM L(3), F(3,4)
L(1)=1.0
L(2)=3.0
L(3)=10.0
P =PMAX(0,1200,0)
N =MBNDO(0,1200,P,3,L(1),F(1,1),0)

In this case, the array F is stored similarly at MBNDI.

4.4.8 Ripple Analysis Function-1

1. Function which obtains the difference between the max. value and min. value RPL1

RPL1 (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)

Explanation: Calculates the difference between the max. value and min. value by detecting the highest or lowest value between the specified address points in accordance with the gradient coefficient for horizontal or vertical axis.

Usage: Analyzes the ripple to be measured.

Example: X=RPL1(0,1200,1,0.5,0)
Calculates the difference between the max. value and min. value in the ripple which drops or raise 0.5dB a point.

2. Function which calculates the difference between the max. value and min. value RPL2

RPL2 (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)

Explanation: Detects the max. value or min. by detecting the max. or min value between specified address points according to the gradient coefficient for horizontal or vertical axis. Calculate the max. value in the difference between the closed max. value and min. value.

The max. value is low frequency side to the closed max. and min. value.

Usage: Analyzes the ripple to be measured.

Example: $P = \text{PMAX}(0, 1200, 0)$
 $X = \text{RPL2}(0, P, 1, 0.5, 0)$

Calculates the difference between the max. value and min. value closed to the left to the peak point in the ripple which drops or raise 0.5dB a point.

3. Function which calculates the max. for the value adding the difference between the max. value and min. value RPL3

RPL3	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
------	--

Explanation: Detect the max. and min. value between the specified points in accordance with the gradient coefficient in the vertical and horizontal axis. Calculate the max. value by adding the difference between the max. and min. value or the difference between the min. and max. value.

Usage: Analyzes the ripple to be measured.

Example: $X = \text{RPL3}(0, 1200, 1, 0.5, 0)$

Analyzes the ripple which drops or raise 0.5dB a point.

4. Function which calculates the difference between the max. value and min. value RPL4

RPL4	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
------	--

Explanation: Detect the max. value or min. by detecting the max. or min value between specified address points according to the indent coefficient for horizontal or vertical axis. Calculate the max. value in the difference between the closed max. value and min. value.

The max. value is low frequency side to the closed max. and min. value.

The pair of the max. and min. is conversed to RPL2.

Usage: Analyze the ripple to be measured.

Example: $P = \text{PMAX}(0, 1200, 0)$

$X = \text{RPL4}(P, 1200, 1, 0.5, 0)$

Calculates the difference between the max. value and min. value closed to the left to the peak point in the ripple which drops or raise 0.5dB a point.

4.4.8 Ripple Analysis Function-1

5. Function which obtains the max. value in the highest mark. RPL5

RPL5 (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)

Explanation: Detect the max. value between the specified points according to the indent coefficient for horizontal or vertical axis to calculate the max. value.

Usage: Analyze the ripple spurious to be measured.

Example: X=RPL5(P0,P1,1,0.5,0)

Obtain the max. value in the ripple which drops or raise 0.5dB a point.

6. Function which obtains the min. value in the max. value RPL6

RPL6 (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the max. value in the min.

Usage: Analyze the ripple spurious to be measured.

Example: X=RPL6(P0,P1,1,0.5,0)

Obtain the max. value in the min. in the ripple which drops or raise 0.5dB a point.

7. Function which calculates the frequency difference between the min. value and max. value RPLF

RPLF (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to calculate the frequency difference between the first max. value and next min. value.

Usage: Analyze the ripple to be measured.

Example: X=RPLF(P0,P1,1,0.5,0)

Calculate the frequency difference between the max. value and min. value in the ripple which drops or raise 0.5dB a point.

8. Function which calculates the response difference between the max. value and min. value RPLR

RPLR	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
------	--

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to calculate the response difference between the first max. value and the next min. value.

Usage: Analyzes the ripple to be measured.

Example: X=RPLR(P0,P1,1,0.5,0)

Calculates the response difference between the max. value and min. in the ripple which drops or raise 0.5dB a point.

9. Function which obtains the response value in the max. value RPLH

RPLH	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
------	--

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the response value in the first max. value.

Usage: Analyze the ripple to be measured.

Example: X=RPLH(P0,P1,1,0.5,0)

Obtain the max. response value in the ripple which drops or raise 0.5dB a point.

10. Function which obtains frequency in max. value FRPLH

FRPLH	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
-------	--

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the frequency in the first max. value.

Usage: Analyze the ripple to be measured.

Example: X=FRPLH(P0,P1,1,0.5,0)

Obtain the frequency in max. in the ripple which drops or raise 0.5dB a point.

4.4.8 Ripple Analysis Function-1

11. Function which obtains measurement point in the max. value PRPLH

PRPLH	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
-------	--

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the measurement point in the first max. value.

Usage: Analyze the ripple to be measured.

Example: X=PRPLH(P0,P1,1,0.5,0)

Obtain the max. measurement value in the ripple which drops or raise 0.5dB a point.

12. Function which obtains response value in min. value RPLL

RPLL	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
------	--

Explanation: Detect the min. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the frequency in the first min. value.

Usage: Analyze the ripple to be measured.

Example: X=RPLL(P0,P1,1,0.5,0)

Obtain the response value in min. in the ripple which drops or raise 0.5dB a point.

13. Function which obtains frequency in the min. value FRPLL

FRPLL	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
-------	--

Explanation: Detect the min. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the frequency in the first min. value.

Usage: Analyze the ripple to be measured.

Example: X=FRPLL(P0,P1,1,0.5,0)

Obtain the min. frequency in the ripple which drops or raise 0.5dB a point.

14. Function which obtains measurement point in the min. value PRPLL

PRPLL	(start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
-------	--

Explanation: Detect the min. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to obtain the measurement point in the first min. value.

Usage: Analyze the ripple to be measured.

Example: X=PRPLL(P0,P1,1,0.5,0)

Obtain the min. measurement point in the ripple which drops or raise 0.5dB a point.

4.4.9 Ripple Analysis Function-2

4.4.9 Ripple Analysis Function-2

1. Function which obtains the number of the max. value NRPLH

NRPLH (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
--

Explanation: Detect the max. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to calculate the number of the max. value by storing the max. value information inside.

Usage: Analyze the ripple to be measured.

Example: NH=NRPLH(0,1200,1,0.5,0)

Obtain the number of the max. value in the ripple which drops or raise 0.5dB a point.

2. Function which obtain the number of the min. value NRPLL

NRPLL (start address point, end address point, gradient coefficient for horizontal axis, gradient coefficient for vertical axis, analysis channel)
--

Explanation: Detect the min. value between the specified points in accordance with the gradient coefficient for horizontal or vertical axis to calculate the number of the max. value by storing the min. value information inside.

Usage: Analyze the ripple to be measured.

Example: NL=NRPLL(0,1200,1,0.5,0)

Obtain the number of the min. value in the ripple which drops or raise 0.5dB a point.

3. Function which obtains measurement point for the max. or min. value PRPLHN, PRPLLN

PRPLHN (number specification of ripple, analysis channel)
PRPLLN (number specification of ripple, analysis channel)

Explanation: PRPLHN; Calculate the measurement point for the N-th max. value in NRPLH.

PRPLLN; Calculate the measurement point for the N-th min. value in NRPLL.

Example: NH =NRPLH(0,1200,1,0.5,0)

NL =NRPLL(0,1200,1,0.5,0)

PH2=PRPLHN(2,0)

PL2=PRPLLN(2,0)

Execute the NRPLH, NRPLL to calculate the measurement point for the second max. or min value.

4. Function which obtains frequency for the max. or min. value FRPLHN, FRPLLN

FRPLHN (number specification of ripple, analysis channel)
FRPLLN (number specification of ripple, analysis channel)

Explanation: FRPLHN; Obtain the frequency for the N-th max. value in NRPLH.

FRPLLN; Obtain the frequency for the N-th min. value in NRPLL.

Usage: Analyze the ripple to be measured.

Example: NH =NRPLH(0,1200,1,0.5,0)

NL =NRPLL(0,1200,1,0.5,0)

FH2=FRPLHN(2,0)

FL2=FRPLLN(2,0)

Execute the NRPLH, NRPLL to obtain the frequency for the second max. or min value.

4.4.9 Ripple Analysis Function-2

5. Function which obtains response value for the max. or min. value VRPLHN, VRPLLN

VRPLHN (number specification of ripple, analysis channel) VRPLLN (number specification of ripple, analysis channel)
--

Explanation: VRPLHN; Obtain the response value for the N-th max. value in NRPLH.

VRPLLN; Obtain the response value for the N-th min. value in NRPLL.

Usage: Analyze the ripple to be measured.

Example: NH =NRPLH(0,1200,1,0.5,0)

NL =NRPLL(0,1200,1,0.5,0)

XH2=VRPLHN(2,0)

XL2=VRPLLN(2,0)

Execute the NRPLH, NRPLL to obtain the response value for the second max. or min value.

6. Function which batches process of calculating measurement point for the max. or min. value PRPLHM, PRPLLM

PRPLHM (integer array, analysis channel) PRPLLM (integer array, analysis channel)
--

Explanation: PRPLHM; Calculate the measurement point in the max. value in NRPLH.

PRPLLM; Calculate the measurement point in the min. value in NRPLL.

Usage: Analyzes the ripple to be measured.

Example: INTEGER PH(600),PL(600)

NH =NRPLH(0,1200,1,0.5,0)

NL =NRPLL(0,1200,1,0.5,0)

NH =PRPLHM(PH(1),0)

NL =PRPLLM(PL(1),0)

Execute the NRPLH, NRPLL to enter the measurement point in the max. and min value in the array.

7. Function which batches process of obtaining frequency for the max. or min. value

FRPLHM, FRPLLM

FRPLHM (real array, analysis channel)
FRPLLM (real array, analysis channel)

Explanation: FRPLHM; Obtain the frequency in the max. value in NRPLH.
FRPLLM; Obtain the frequency in the min. value in NRPLL.

Usage: Analyze the ripple to be measured.

Example: DIM FH(600),FL(600)
NH =NRPLH(0,1200,1,0.5,0)
NL =NRPLL(0,1200,1,0.5,0)
NH =FRPLHM(FH(1),0)
NL =FRPLLM(FL(1),0)

Execute the NRPLH, NRPLL to enter the frequency in the max. and min value in the array.

8. Function which batches process of obtaining response value for the max. or min. value

VRPLHM, VRPLLM

VRPLHM (real array, analysis channel)
VRPLLM (real array, analysis channel)

Explanation: VRPLHM; Obtain the response value in the max. value in NRPLH.
VRPLLM; Obtain the response value in the min. value in NRPLL.

Usage: Analyze the ripple to be measured.

Example: DIM XH(600),XL(600)
NH =NRPLH(0,1200,1,0.5,0)
NL =NRPLL(0,1200,1,0.5,0)
NH =VRPLHM(XH(1),0)
NL =VRPLLM(XL(1),0)

Execute the NRPLH, NRPLL to enter the response value in the max. and min value in the array.

4.4.10 Direct Search

4.4.10 Direct Search

1. Function which obtains address point corresponding to specified response DIRECT

```
DIRECT (start address point, end address point, response value, analysis channel)
```

Explanation: Search the specified response value between specified address points to set the corresponded address point. The search direction is from low frequency to high frequency.

Example: P=DIRECT(0,1200,-10.0,0)

Search the data position of -10dB.

2. Function which calculates measurement point corresponding to specified response DIRECTL, DIRECTH

```
DIRECTL (start address point, end address point, response value, analysis channel)  
DIRECTH (start address point, end address point, response value, analysis channel)
```

Explanation: Search the specified response value between specified address points to set the corresponded measurement point. The search direction of DIRECTL is from low frequency to high frequency and of DIRECTH is from high frequency to low frequency. when a response corresponds to the specified response, the measurement point is returned. When it not corresponded, the measurement point more than the specified response value is returned. Therefore, The continuous search is easy to execute.

Example: P0=DIRECTL(0,1200,-3.0,0)
P1=DIRECTH(0,1200,-3.0,0)
F =DFREQ(P0,P1,0)

Search from outside to calculate the bandwidth.

3. Function which obtains frequency corresponding to specified response CDIRECT

```
CDIRECT (start frequency, end frequency, response value,analysis channel)
```

Explanation: Search the specified response value between specified responses to calculate the corresponded address point. The search direction is from low frequency to high frequency.

Example: F=CDIRECT(F0,F1,-10.0,0)

Obtain the data position of -10dB.

4. Function which obtains frequency corresponding to specified response
CDIRECTL, CDIRECTH

CDIRECTL (start frequency, end frequency, response value,analysis channel)
CDIRECTH (start frequency, end frequency, response value,analysis channel)

Explanation: Search the specified response value between specified address points to obtain the corresponded frequency. The search direction of CDIRECTL is from low frequency to high frequency and of CDIRECTH is from high frequency to low frequency.

Example: $F0=CDIRECTL(F0,F1,-3.0,0)$
 $F1=CDIRECTH(F0,F1,-3.0,0)$
 $F =F1-F0$

Search from outside to calculate the bandwidth.

5. Function which obtains address point width in specified response DDIRECT

DDIRECT (start address point, end address point, response value,analysis channel)

Explanation: Search the specified response value between the specified address points to the high frequency side to obtain the address point width from two detected measured points.

6. Function which obtains bandwidth in specified response CDDIRECT

CDDIRECT (start address point, end address point, response value,analysis channel)

Explanation: Search the specified response value between the specified frequencies to the high frequency side to calculate the bandwidth from two detected measured points.

7. Function which obtains frequency in zero phase ZEROPHS

ZEROPHS (start frequency, end frequency, response value,analysis channel)

Explanation: Detect the phase zero between the specified address points to obtain the frequency.

4.4.11 Data Transfer

4.4.11 Data Transfer

1. Function which reads data of specified analysis channel to array TRANSR

TRANSR (start address point, end address point, real array, analysis channel)

Explanation: Read the measured data in the specified analysis channel by specifying the address point to the BASIC array to return the number of data.

Usage: Used when the measured data is secondary processed.

Example: DIM X(1201)
N =TRANSR(0,1200,X(1),0)

2. Function which writes description of array to specified analysis channel TRANSW

TRANSW (start address point, end address point, real array, analysis channel)

Explanation: Write the description of the BASIC array to the specified analysis channel.

Usage: Used when the measured data is secondary processed.

Example: DIM X(1201)
N =TRANSW(0,1200,X(1),0)

5. PARALLEL I/O PORT

5.1 Parallel I/O Port

The parallel I/O port is the input/output port to communicate with the handler or peripherals.

The parallel I/O connector on the back panel is used for communication. Figure 5-1 shows the internal pin assignment and signals of the connector. These I/O port is controlled with ENTER and OUTPUT commands.

- Input/output port

There are two output ports and two input/output ports, as follows:

- Port only for output: A port: 8-bit width
B port: 8-bit width
- Input/output port: C port: 4-bit width
D port: 4-bit width

- Port C status output, port D status output

Shows the settings of the input of the input/output ports C and D. It is low when C or D port is set to input, it is high when it is set to output

- Write strobe output for output port

By generating a negative pulse on the write strobe output, it shows which output port is used for data output.

Figure 5-1 shows the timing chart of the write strobe output and data output.

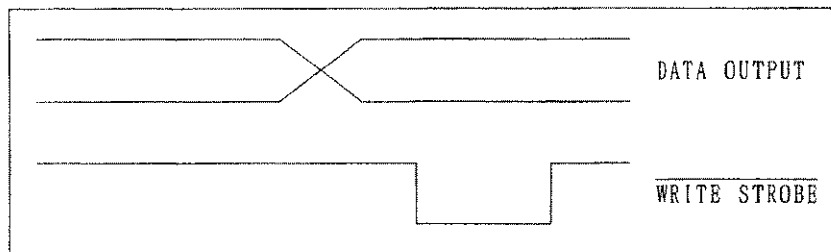


Figure 5-1 Timing Chart of WRITE STROBE

- INPUT 1 input

By entering a negative pulse on the INPUT 1, the outputs 1 and 2 are set to LOW. The pulse width of the input signal to be entered in the INPUT 1 should be more than 1 μ s.

- OUTPUT 1 and 2


These two signal lines are the latch output terminals set to LOW when a negative pulse is entered on the INPUT 1. It can be set to LOW or HIGH with the BASIC command (OUTPUT).

- PASS/FAIL output

Generates LOW when the result of the limit test is PASS and HIGH when the result is FAIL. This function is available only when the limit test function is ON.

5.1 Parallel I/O Port

- Write strobe output for PASS/FAIL output
When the limit test result is output to the PASS/FAIL output line, generates a negative pulse.
- SWEEP END
When the analyzer finishes the sweeping, generates a negative pulse with a width of $10\mu\text{s}$.
- +5V output
+5 V output is provided for the external device. The maximum current to be supplied is 100mA. This line has a fuse which will be blown when overcurrent flows for circuit protection. The fuse needs to be replaced.
- EXT TRIG input
By entering a negative pulse on this line, it is possible to trigger the sweeping measurement. The pulse width should be at least $1\mu\text{s}$. The sweeping starts at the falling edge of the pulse. When this signal line is used, the trigger source should be set externally.

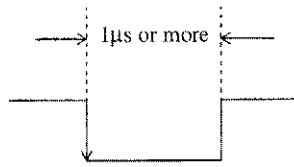

5.2 Connector Internal Pin Assigned and Signal Standard

Pin No.	Signal name	Function
1	GND	Ground
2	INPUT1	Negative logic pulse input of TTL level (width: 1μs or more)
3	OUTPUT1	Negative logic latch output of TTL level
4	OUTPUT2	Negative logic latch output of TTL level
5	Output port A0	Negative logic latch output of TTL level
6	Output port A1	Negative logic latch output of TTL level
7	Output port A2	Negative logic latch output of TTL level
8	Output port A3	Negative logic latch output of TTL level
9	Output port A4	Negative logic latch output of TTL level
10	Output port A5	Negative logic latch output of TTL level
11	Output port A6	Negative logic latch output of TTL level
12	Output port A7	Negative logic latch output of TTL level
13	Output port B0	Negative logic latch output of TTL level
14	Output port B1	Negative logic latch output of TTL level
15	Output port B2	Negative logic latch output of TTL level
16	Output port B3	Negative logic latch output of TTL level
17	Output port B4	Negative logic latch output of TTL level
18	EXT TRIG	EXTERNAL TRIGGER input (width: 1μs or more),negative logic
19	Output port B5	Negative logic latch output of TTL level
20	Output port B6	Negative logic latch output of TTL level
21	Output port B7	Negative logic latch output of TTL level
22	Input/output port C0	Negative logic state input/latch output of TTL level
23	Input/output port C1	Negative logic state input/latch output of TTL level
24	Input/output port C2	Negative logic state input/latch output of TTL level
25	Input/output port C3	Negative logic state input/latch output of TTL level
26	Input/output port D0	Negative logic state input/latch output of TTL level
27	Input/output port D1	Negative logic state input/latch output of TTL level
28	Input/output port D2	Negative logic state input/latch output of TTL level
29	Input/output port D3	Negative logic state input/latch output of TTL level
30	Port C status	TTL level, Input mode: LOW, Output mode: HIGH
31	Port D status	TTL level, Input mode: LOW, Output mode: HIGH
32	Write strobe signal	TTL level, Negative logic, Pulse output
33	PASS/FAIL signal	TTL level, PASS: LOW, FAIL: HIGH, latch output
34	SWEEP END signal	TTL level, Negative logic, Pulse output (width: 10μs or more)
35	+5V	+5V 100mA MAX
36	Write strobe signal (PASS/FAIL)	TTL level, Negative logic, Pulse output


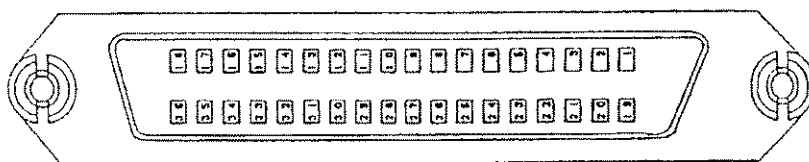


Figure 5-2 36-pin Connector Internal Pin Addignment and Signal

5.2 Connector Internal Pin Assigned and Signal Standard

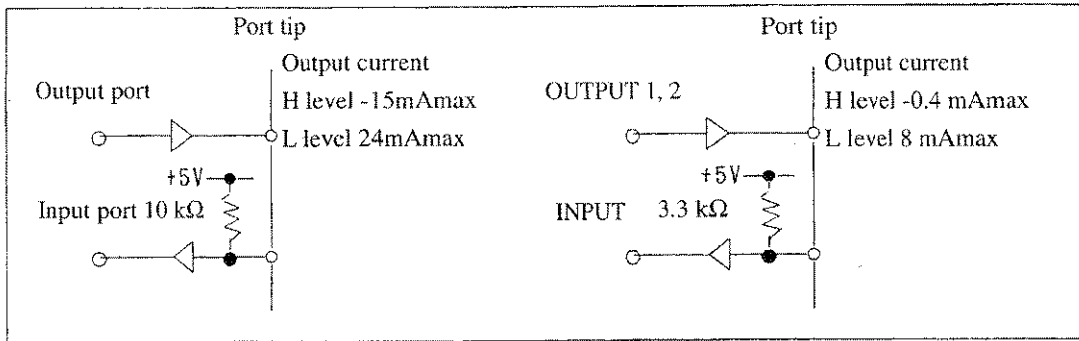

5.3 Mode Setting of Port

Command	Output port	Input port
OUTPUT36 ; 16	A, B, C, D	
OUTPUT36 ; 17	A, B, D	C
OUTPUT36 ; 18	A, B, C	D
OUTPUT36 ; 19	A, B	CD

To use a parallel I/O port, first set the mode setting of port. The combination of the setting command and the input port is referred the above table.

Example

```
10 OUTPUT 36;19
20 OUTPUT 33;255
30 ENTER 37;A
```

Set the output port for port A and port B, and the input port for port CD.

5.4 Each Port Operation Method

5.4 Each Port Operation Method

Describes the operation method by built-in BASIC.

OUTPUT statement (for output) and ENTER statement (for input) are used for data input/output. In the relationship between each port and BASIC command, the addresses used in each statement (OUTPUT and ENTER statements) is distinguished.

1. BASIC format

OUTPUT (address); (data)

ENTER (address); [variable]

(An Input data becomes numeric value of variable name.)

2. Address and data area

Address	Port to be used
33	Port A (Output only: OUTPUT statement only)
34	Port B (Output only: OUTPUT statement only)
35	Port C (Input/output: ENTER, OUTPUT)
36	Port D (Input/output: ENTER, OUTPUT)
37	Port CD (Input/output: ENTER, OUTPUT)

- OUTPUT 33, 34, 37
OUTPUT×× ; 0 to 255 (8bit)
- OUTPUT 35, 36
OUTPUT×× ; 0 to 15 (4bit)

NOTE: *The OUTPUT 35 concerns with the Set/Reset of Flip Flop.*

- ENTER 35, 36
ENTER ××; numeric variable (4bit) (Data from 0 to 15 are assigned.)
- ENTER 37
ENTER 37 ; numeric variable (8bit) (Data from 0 to 255 are assigned.)

5.5 INPUT 1, OUTPUT 1, and OUTPUT 2 Terminals

By combining with the signal lines of INPUT 1, OUTPUT 1, and OUTPUT 2, convenient functions are provided to easily control external devices.

The functions are; function which sets two latch outputs to LOW by pulse input to INPUT 1, and function which detects the state of variable OUTPUT 1 by INPUT 1. Also, the state of OUTPUTs 1 and 2 can be controlled by OUTPUT command.

1. Setting OUTPUT 1 and OUTPUT 2, and Reset

The following four types are provided for set/reset as follows:

- Setting OUTPUT 1:OUTPUT 35 ; 16
- Setting OUTPUT 2:OUTPUT 35 ; 48
- Resetting OUTPUT 1:OUTPUT 35 ; 80
- Resetting OUTPUT 2:OUTPUT 35 ; 112

2. INPUT 1 (external input)

The state of variable OUTPUT 1 by INPUT 1 can be observed by ENTER statement.

```
ENTER 34;(numeric variable)
```

If the numeric variable is set to 1, OUTPUT 1 will become ON (Low level: negative logic), if 0, the result will become OFF (High level).

```
Example  10  OUTPUT 36 ; 16
         20  ENTER 34 ; A
         30  IF A<> 1 THEN GOTO 20
         40  OUTPUT 33 ; 1
         :
```


By observing the state of OUTPUT 1, if OUTPUT 1 is set to ON, then 1 is output to the port A.

5.5 INPUT 1, OUTPUT 1, and OUTPUT 2 Terminals

1. Examples of INPUT 1, OUTPUT 1, and OUTPUT2

When program is executed by trigger switch:

- Circuit example

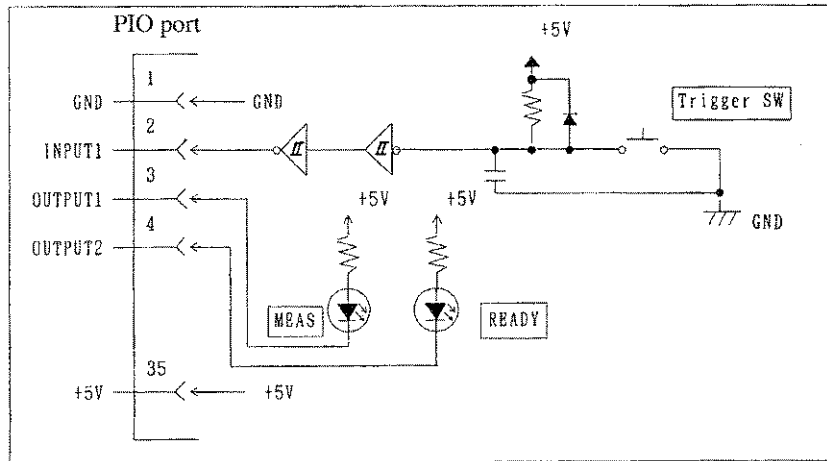

- Program example

Waiting time for measurement: Represents READY .

During measurement operation: Represents MEAS .


```

10  OUTPUT 35;80 )
20  OUTPUT 35;112 )   READY MEAS turns OFF.
:                                     Network analyzer initial setup
:
100 OUTPUT 35;48 )   READY turns ON.
100 ENTER 34;A )
120 IF A<>1 THEN GOTO 110 Recognition of Trigger SW
130 OUTPUT 35;112   READY turns OFF.
:
:                                     Measurement routine
500 OUTPUT 35;80   MEAS turns OFF.
510 GOTO 100       When repeating the measurement
520 STOP
    
```

2. Usage example of output ports A and B

When LED is used for selecting devices (when port A is used):

- Circuit example

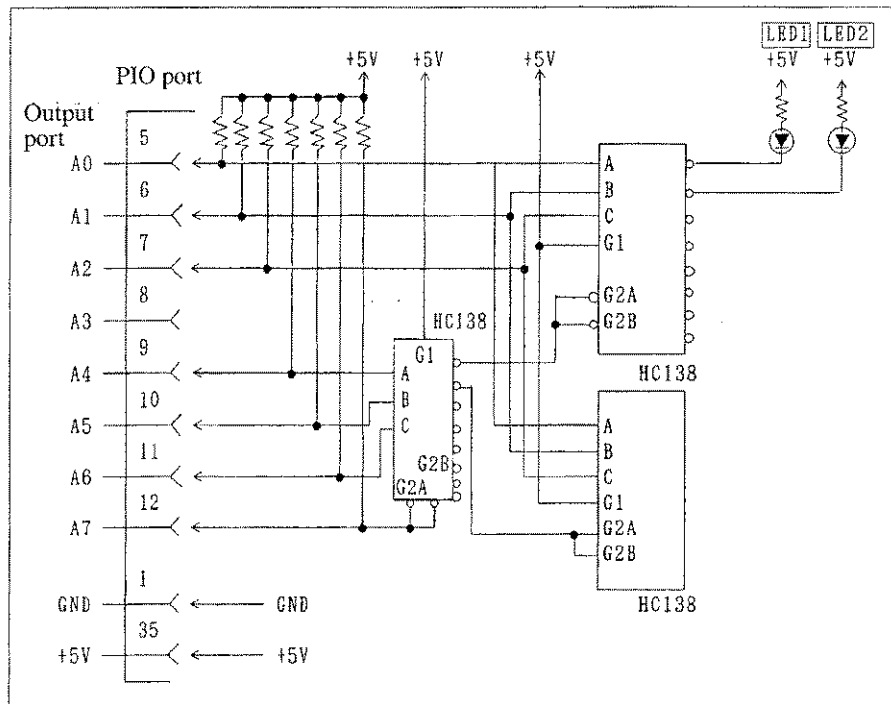

- Program example

```

10  OUTPUT 36 ; 16 Defines ports A, B, C, and D as output port.
20  OUTPUT 33 ; 0  Initializes LED.
30
:
:           Measurement and judgment
:           ( measurement variable: A
:           judgment area: JED0 to JED1, JED1 to JED2... )
500  IF A>=JED0 AND A<JED1 THEN OUTPUT 33 ; 0XFF
      (when JED0 to JED1, lights up LED 1.)
510  IF A>=JED1 AND A<JED2 THEN OUTPUT 33 ; 0XFF
      (when JED1 to JED2, lights up LED 2.)
:
800  GOTO 30
810  STOP
    
```


Network Analyzer Programming Manual (Part 1)

5.5 INPUT 1, OUTPUT 1, and OUTPUT 2 Terminals

3. Usage example of input ports C and D

Example to change routine whether bit 0 of I/O port C is 0 or 1

- Circuit example

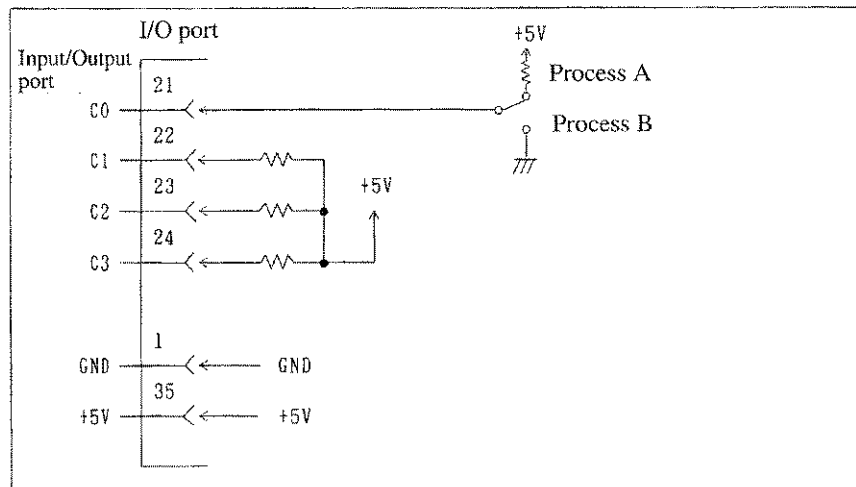

- Program example (Check the port C by pressing Trigger SW in step 1.)


```

10  OUTPUT 36 ; 19           Defines ports A and B as output port.
20  OUTPUT 35 ; 80          Defines ports C and D as input port.
30  OUTPUT 35 ; 112
   :
100 *TRIG                   Network analyzer initial setup
110 ENTER 34 ; A
120 IF A<>1 THEN GOTO *TRIG
130 ENTER 35 ; B           Obtains value of port C.
140 IF B=1 THEN GOTO *ROUT-B
150 *ROUT-A
   :                       Process A
490 GOTO *TRIG
500 *ROUT-B
   :                       Process B
900 GOTO *TRIG
910 STOP
            
```

6. ERROR MESSAGES

6.1 How to Check Error Message Line Number

When the PRINT ERRMS(0) statement is executed, the line number of suspended position and the last error message will be displayed.

6.2 How to Check Program Current Position

The symbol "@" is a system variable, which stores the the line number of the program being executed. The current line number, program position and suspended position of the program can be checked by using the @ system variable.

Example: PRINT @ ... Displays the paused position of the program.

6.3 Error Message List

NOTE:

1. *The error messages are described in the following table in the order of error class (error number).
(After the table, correspondence table in alphabetical order is also provided.)
Character strings are explained as XXX.
Numerics are described as YYY.*
 2. *Error class*
 - 1: Data input
 - 2: Data calculation processing
 - 3: Built-in function
 - 4: BASIC syntax
 - 5: Others
-

6.3 Error Message List

(1 of 3)

Error class (Error number)	Error message	Description
1(22)	xxx1(xxx2) error	xxx1 command is not available for xxx2 file.
1(23)	xxx1(xxx2, xxx3) error	xxx1 command is not available for xxx2 file and xxx3 file.
1(64)	"xxx" file cannot be opened.	The file could not be opened or dose not exist.
1(65)	xxx: "xxx" file was opened with xxx mode.	The file was accessed with different mode from it was opened.
1(66)	cannot read data from "xxx" file.	The specified character number could not be read from xxx file.
1(67)	cannot write data into "xxx" file.	Data can not be written to xxx file.
1(69)	"xxx" file is already opened with another PATH.	The file already opened was tried to open again.
1(72)	file is NOT open.	File is not registered in the specified descriptor. (File has not been opened).
1(74)	end of "xxx" file.	Data was read to EOF(End Of File).
1(75)	"xxx" file already exists.	The existing file was tried to open with OUTPUT mode.
1(77)	Already 8 files are opened.	More than 8 files were tried to be opened.
1(79)	CANNOT assigned into this token	Cannot be assigned into the character variable.
1(95)	GPIB SYNTAX ERROR	The GPIB command is incorrect.
1(96)	Abort	The GPIB control statement was aborted in the execution, or an error occurred on the GPIB bus.
1(98)	Not controller	The command which can be used in controller mode was used in addressable mode.
1(99)	Not Talker/Listener	The command which can be used in addressable mode was used in controller mode.
2(1)	0 divide	0 division (n/0) was executed.
2(10)	xxx: CANNOT convert into string	Conversion into character string is not available.
2(32)	string length is too long	Declaration of character string variable exceeded the maximum value (128).
2(33)	Array's range error	Subscript of the array variable is out of declaration range.
2(41)	yyy: UNIT addr error in xxx	GPIB address is incorrectly specified.
2(43)	yyy is invalid value in xxx	yyy is invalid in xxx instruction.
2(48)	CANNOT move line.	The end line was specified exceeding 65535 in the REN command.
2(51)	Overflow value	The value of operation exceeded the allowable range

(2 of 3)

Error class (Error number)	Error message	Description
2(60)	yyy: Undefined Control Register	The register number of CONTROL instruction is not correct.
2(63)	Unmatched DATA's value-sand READ variable	Data read in READ statement does not exist.
2(85)	file format error	A terminator that should be within 256 characters is not.
3(11)	xxx function error	An parameter error was detected the built-in function.
3(94)	xxx function error. message	An error was detected the built-in function.
4(2)	xxx: invalid type in xxx	xxx contains an invalid type.
4(3)	NO operand in xxx	Operation format for xxx was set incorrectly.
4(5)	Program does NOT exist	Executed the program not exist.
4(6)	xxx: Syntax error	The syntax is not correct.
4(7)	undefined ON condition	ON state was incorrectly defined.
4(9)	xxx: Invalid TARGET operand in xxx	The operand syntax in xxx contains an error.
4(12)	Unbalanced NEXT statement	NEXT statement does not exist even the existence of FOR statement.
4(13)	FOR's nest is abnormal.	Nesting to FOR statement could not execute properly.
4(14)	FOR variable does NOT exist.	The counter variable of FOR statement does not exist.
4(15)	FOR <init value> does NOT exist.	The initial value of FOR statement does not exist.
4(16)	Unbalanced FOR variable in NEXT	Relation between For statement and NEXT statement is not normal.
4(17)	Unbalanced BREAK	BREAK statement does not exist between FOR statement and NEXT statement.
4(18)	Uninstalled type (xxx)	Variable was incorrectly formatted.
4(19)	Label xxx already exists.	Label for xxx is already exist.
4(20)	Unbalanced xxx	Statement construction is not balanced.
4(21)	Not available ASCII char(yyy)	ASCII code is not available.
4(24)	xxx: invalid first type in xxx	The first part of command syntax is incorrect.
4(25)	xxx: invalid second type in xxx	The second part of command syntax is incorrect.
4(26)	xxx: invalid source type in xxx	The type of source side is invalid for assignment of expression.

6.3 Error Message List

(3 of 3)

Error class (Error number)	Error message	Description
4(27)	xxx: invalid target type in xxx	The type of target variable is invalid for assignment.
4(29)	Invalid dimension parameter	Parameter of an array variable is not correct.
4(31)	string declaration error	[] was used in numeric variable.
4(34)	Unbalanced line No.	Specified line does not exist.
4(37)	Undefined label	Specified label does not exist.
4(38)	label not found	Specified label does not exist.
4(39)	Unknown line No.	Specifying line does not exist.
4(40)	expression format error	Expression is formatted incorrectly.
4(43)	yyy is invalid value in xxx	yyy is invalid in xxx instruction.
4(44)	Unbalanced xxx block	xxx block is not matched (FOR statement, IF statement, etc.).
4(45)	Not found THEN in xxx	THEN was not found after IF statement.
4(47)	Not found line No. yyy	Line No. yyy is not found.
4(49)	Substring error	Substring is incorrectly specified.
4(50)	parameter error	Parameter is not set correctly.
4(52)	Unmatched IMAGE-spec in USING	Specification of IMAGE in USING is unmatched.
4(54)	yyy error(s) appeared.	The label line number is not correct.
4(55)	Program CANNOT be continued.	The terminated program was tried to restart again.
4(56)	Line No.yyy is out of range.	Specification of line number exceeded the program range.
4(68)	cannot specify "USING"	USING can not be specified by the specified file type.
4(70)	Not found DATA statement	DATA statement was not found in the direction of RESTORE.
4(71)	xxx nest overflow	The nesting exceeded the capacity.
4(78)	SELECT nesting overflow	Nesting to SELECT statement exceeded the capacity.
4(93)	Program cannot changed	Program change was tried in the execution of program.

Correspondence table in alphabetical order

(1 of 3)

Error message	Error class (Error number)
Abort	1(96)
Already 8 files are opened.	1(77)
Array's range error	2(33)
CANNOT assigned into this token	1(79)
CANNOT move line.	2(48)
cannot read data from "xxx" file.	1(66)
cannot specify "USING"	4(68)
cannot write data into "xxx" file.	1(67)
end of "xxx" file.	1(74)
expression format error	4(40)
file format error	2(85)
file is NOT open.	1(72)
FOR <init value> does NOT exist.	4(15)
FOR variable does NOT exist.	4(14)
FOR's nest is abnormal.	4(13)
GPIB SYNTAX ERROR	1(95)
Invalid dimension parameter	4(29)
label not found	4(38)
Label xxx already exists.	4(19)
Line No.yyy is out of range.	4(56)
NO operand in xxx	4(3)
Not available ASCII char(yyy)	4(21)
Not controller	1(98)
Not found DATA statement	4(70)
Not found line No. yyy	4(47)
Not found THEN in xxx	4(45)
Not Talker/Listener	1(99)
Overflow value	2(51)
parameter error	4(50)
Program CANNOT be continued.	4(55)
Program cannot changed	4(93)
Program does NOT exist	4(5)


6.3 Error Message List

(2 of 3)

Error message	Error class (Error number)
SELECT nesting overflow	4(78)
string declaration error	4(31)
string length is too long	2(32)
Substring error	4(49)
Unbalanced BREAK	4(17)
Unbalanced FOR variable in NEXT	4(16)
Unbalanced line No.	4(34)
Unbalanced NEXT statement	4(12)
Unbalanced xxx	4(20)
Unbalanced xxx block	4(44)
Undefined label	4(37)
undefined ON condition	4(7)
Uninstalled type (xxx)	4(18)
Unknown line No.	4(39)
Unmatched DATA's values and READ variable	2(63)
Unmatched IMAGE-spec in USING	4(52)
xxx function error	3(11)
xxx function error. message	3(94)
xxx nest overflow	4(71)
xxx1(xxx2) error	1(22)
xxx1(xxx2, xxx3) error	1(23)
xxx: CANNOT convert into string	2(10)
xxx: invalid first type in xxx	4(24)
xxx: invalid second type in xxx	4(25)
xxx: invalid source type in xxx	4(26)
xxx: Invalid TARGET operand in xxx	4(9)
xxx: invalid target type in xxx	4(27)
xxx: invalid type in xxx	4(2)
xxx: Syntax error	4(6)
xxx: "xxx" file was opened with xxx mode.	1(65)
"xxx" file cannot be opened.	1(64)
"xxx" file already exists.	1(75)
"xxx" file is already opened with another PATH.	1(69)


(3 of 3)

Error message	Error class (Error number)
yyy error(s) appeared.	4(54)
yyy is invalid value in xxx	2(43),4(43)
yyy: Undefined Control Register	2(60)
yyy: UNIT addr error in xxx	2(41)
0 divide	2(1)

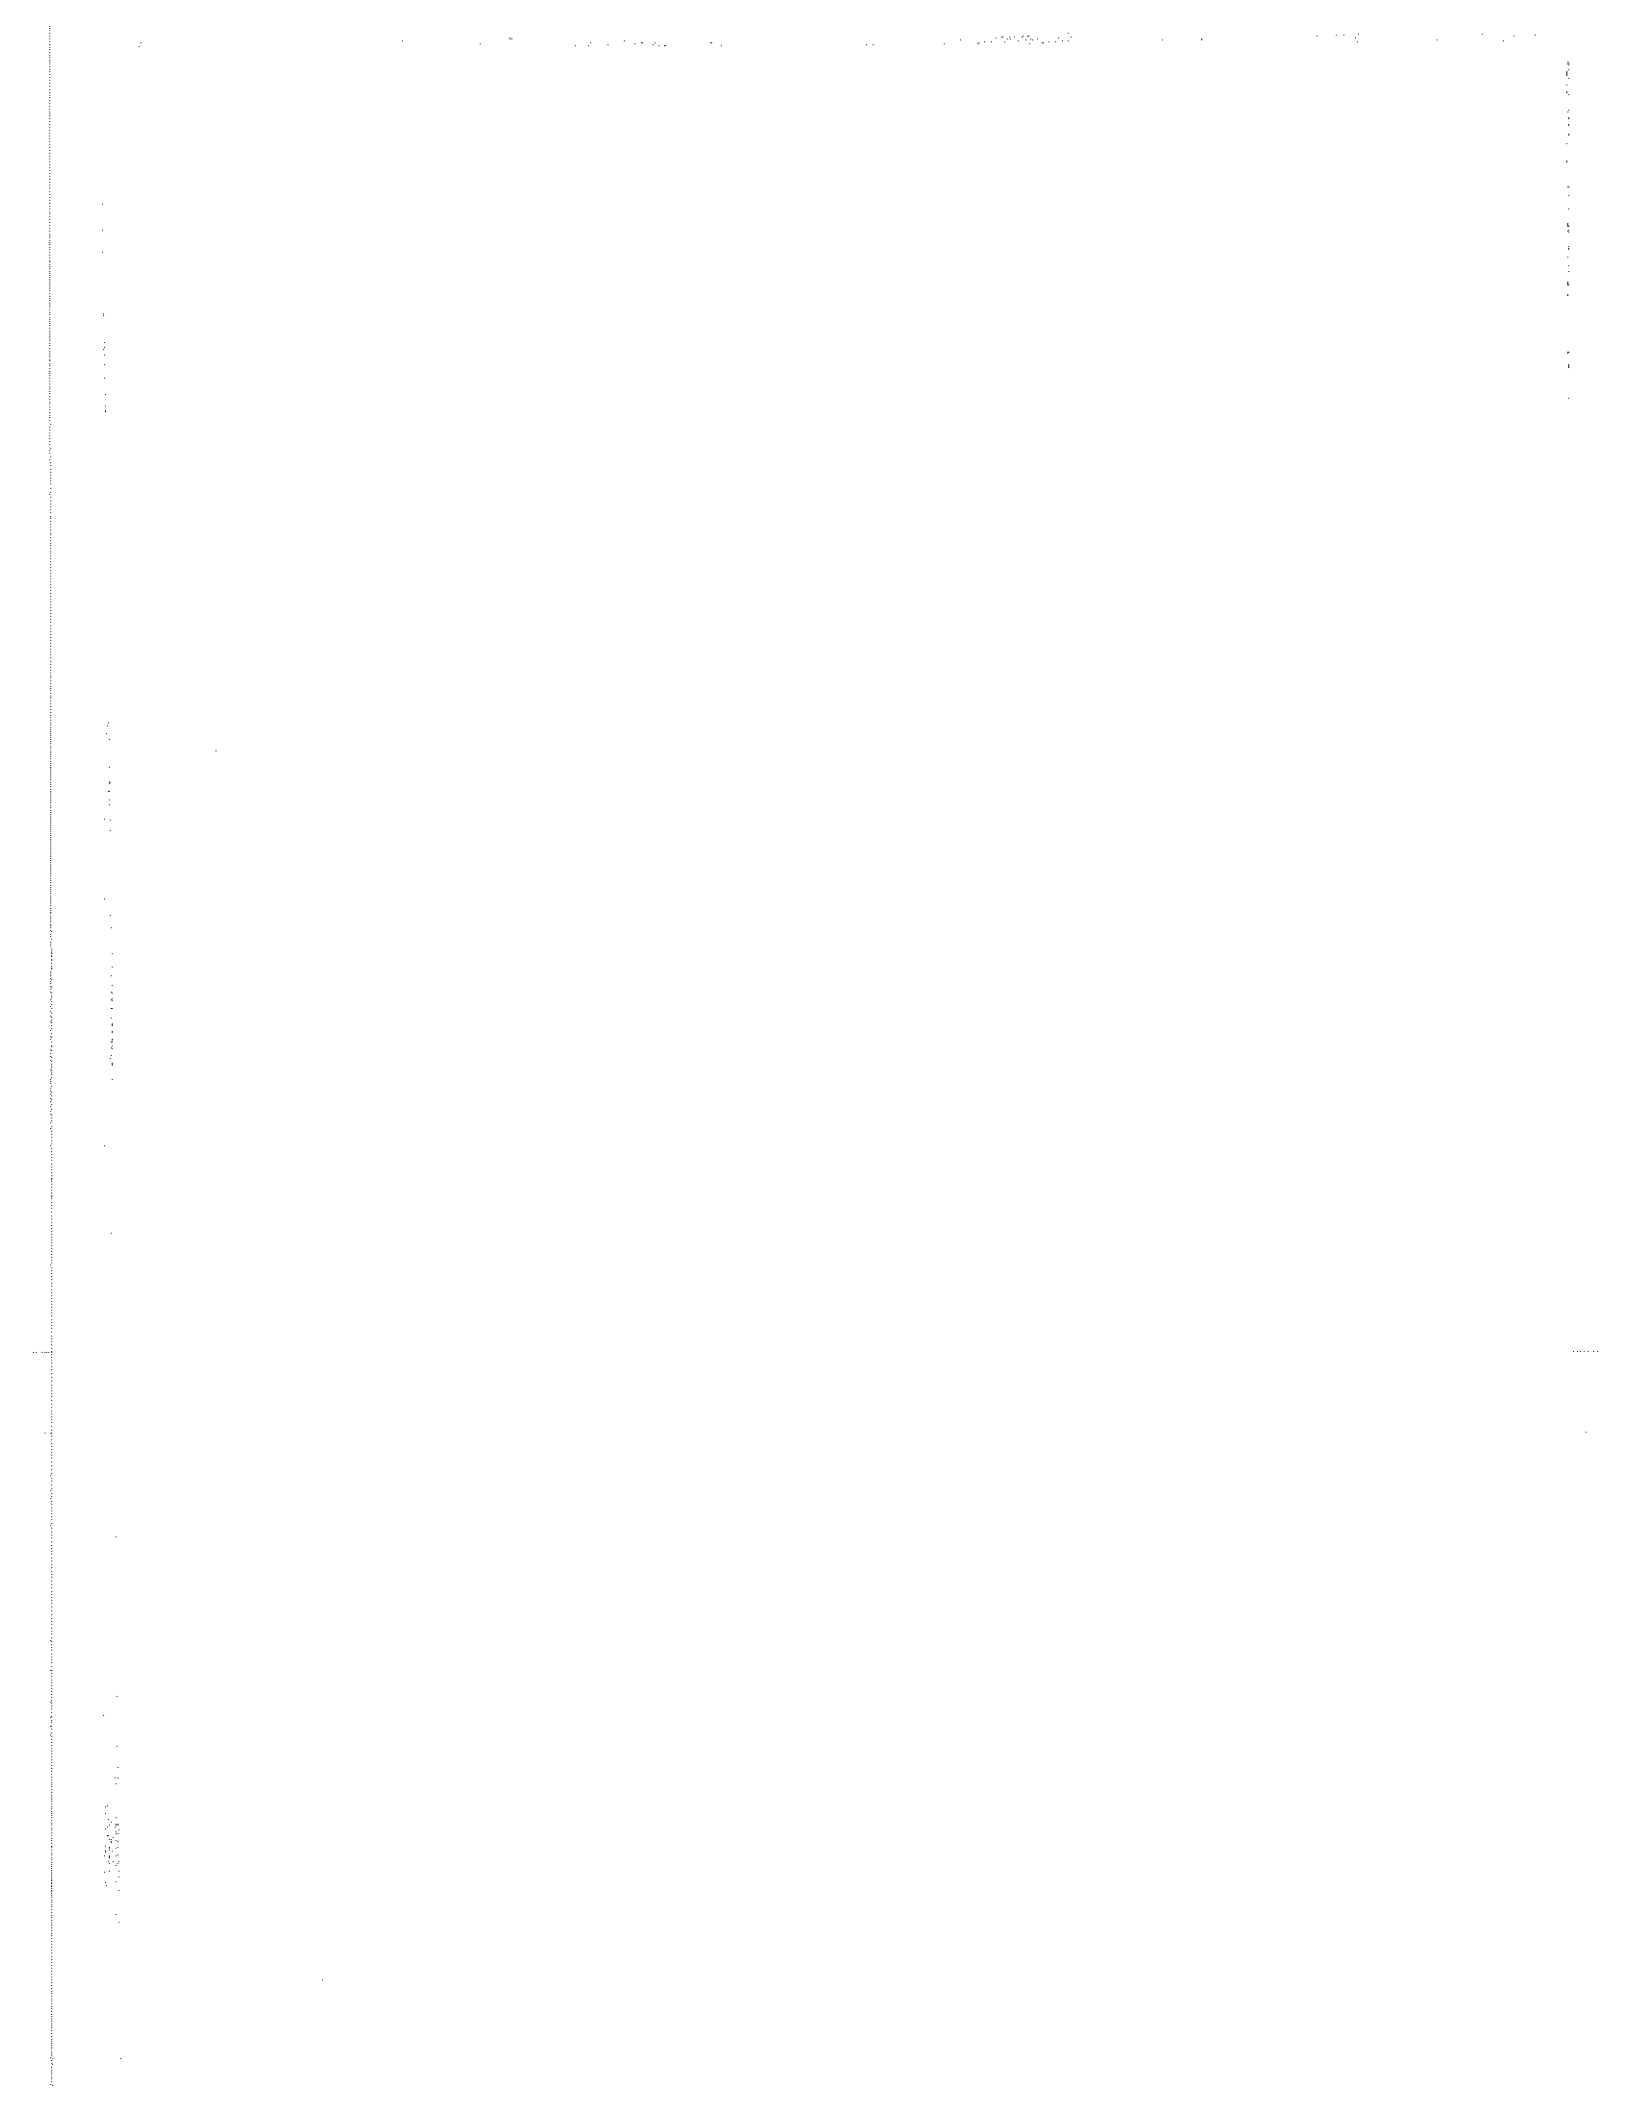

ALPHABETICAL INDEX

[B]		[M]	
BASIC COMMANDS	3-1	Mode Setting of Port	5-5
BASIC STATEMENT	4-1	[O]	
Built-in Function	4-92	Object	4-4
[C]		OPERATING BASICS	2-1
Command Grammar and Application	3-5	Operators	4-9
Connector Internal Pin Assigned and Signal Standard	5-3	[P]	
[D]		PARALLEL I/O PORT	5-1
Data Transfer	4-130	Parallel I/O Port	5-1
Direct Search	4-128	Precautions Common to All Commands	3-4
[E]		Program Carrying Out	2-2
Each Port Operation Method	5-6	Program Creating	2-1
Error Message List	6-1	Program Endin	2-2
ERROR MESSAGES	6-1	Program Structure	4-1
[F]		Programming Rules	4-1
File Management	1-6	[R]	
Floppy Disk	1-3	Ripple Analysis Function-1	4-118
Function calculating Max. value, Min. value	4-113	Ripple Analysis Function-2	4-124
Function Obtaining Address Point	4-108	[S]	
Function Obtaining Bandwidth, etc.	4-115	Statement Function List	4-12
Function Obtaining Frequency	4-110	Statement Syntax and Use	4-20
Function Obtaining Response	4-111	Statement Syntax List	4-14
[G]		[V]	
GPIB mode	1-2	Various Commands	3-1
[H]		Various Statements	4-12
How to Check Error Message Line Number	6-1	[I]	
How to Check Program Current Position	6-1	INPUT 1, OUTPUT 1, and OUTPUT 2 Terminals	5-7
[L]		[J]	
List of Built-In Function	4-104	[K]	
List of Command Function	3-2	[L]	
List of Command Syntax	3-3	[M]	

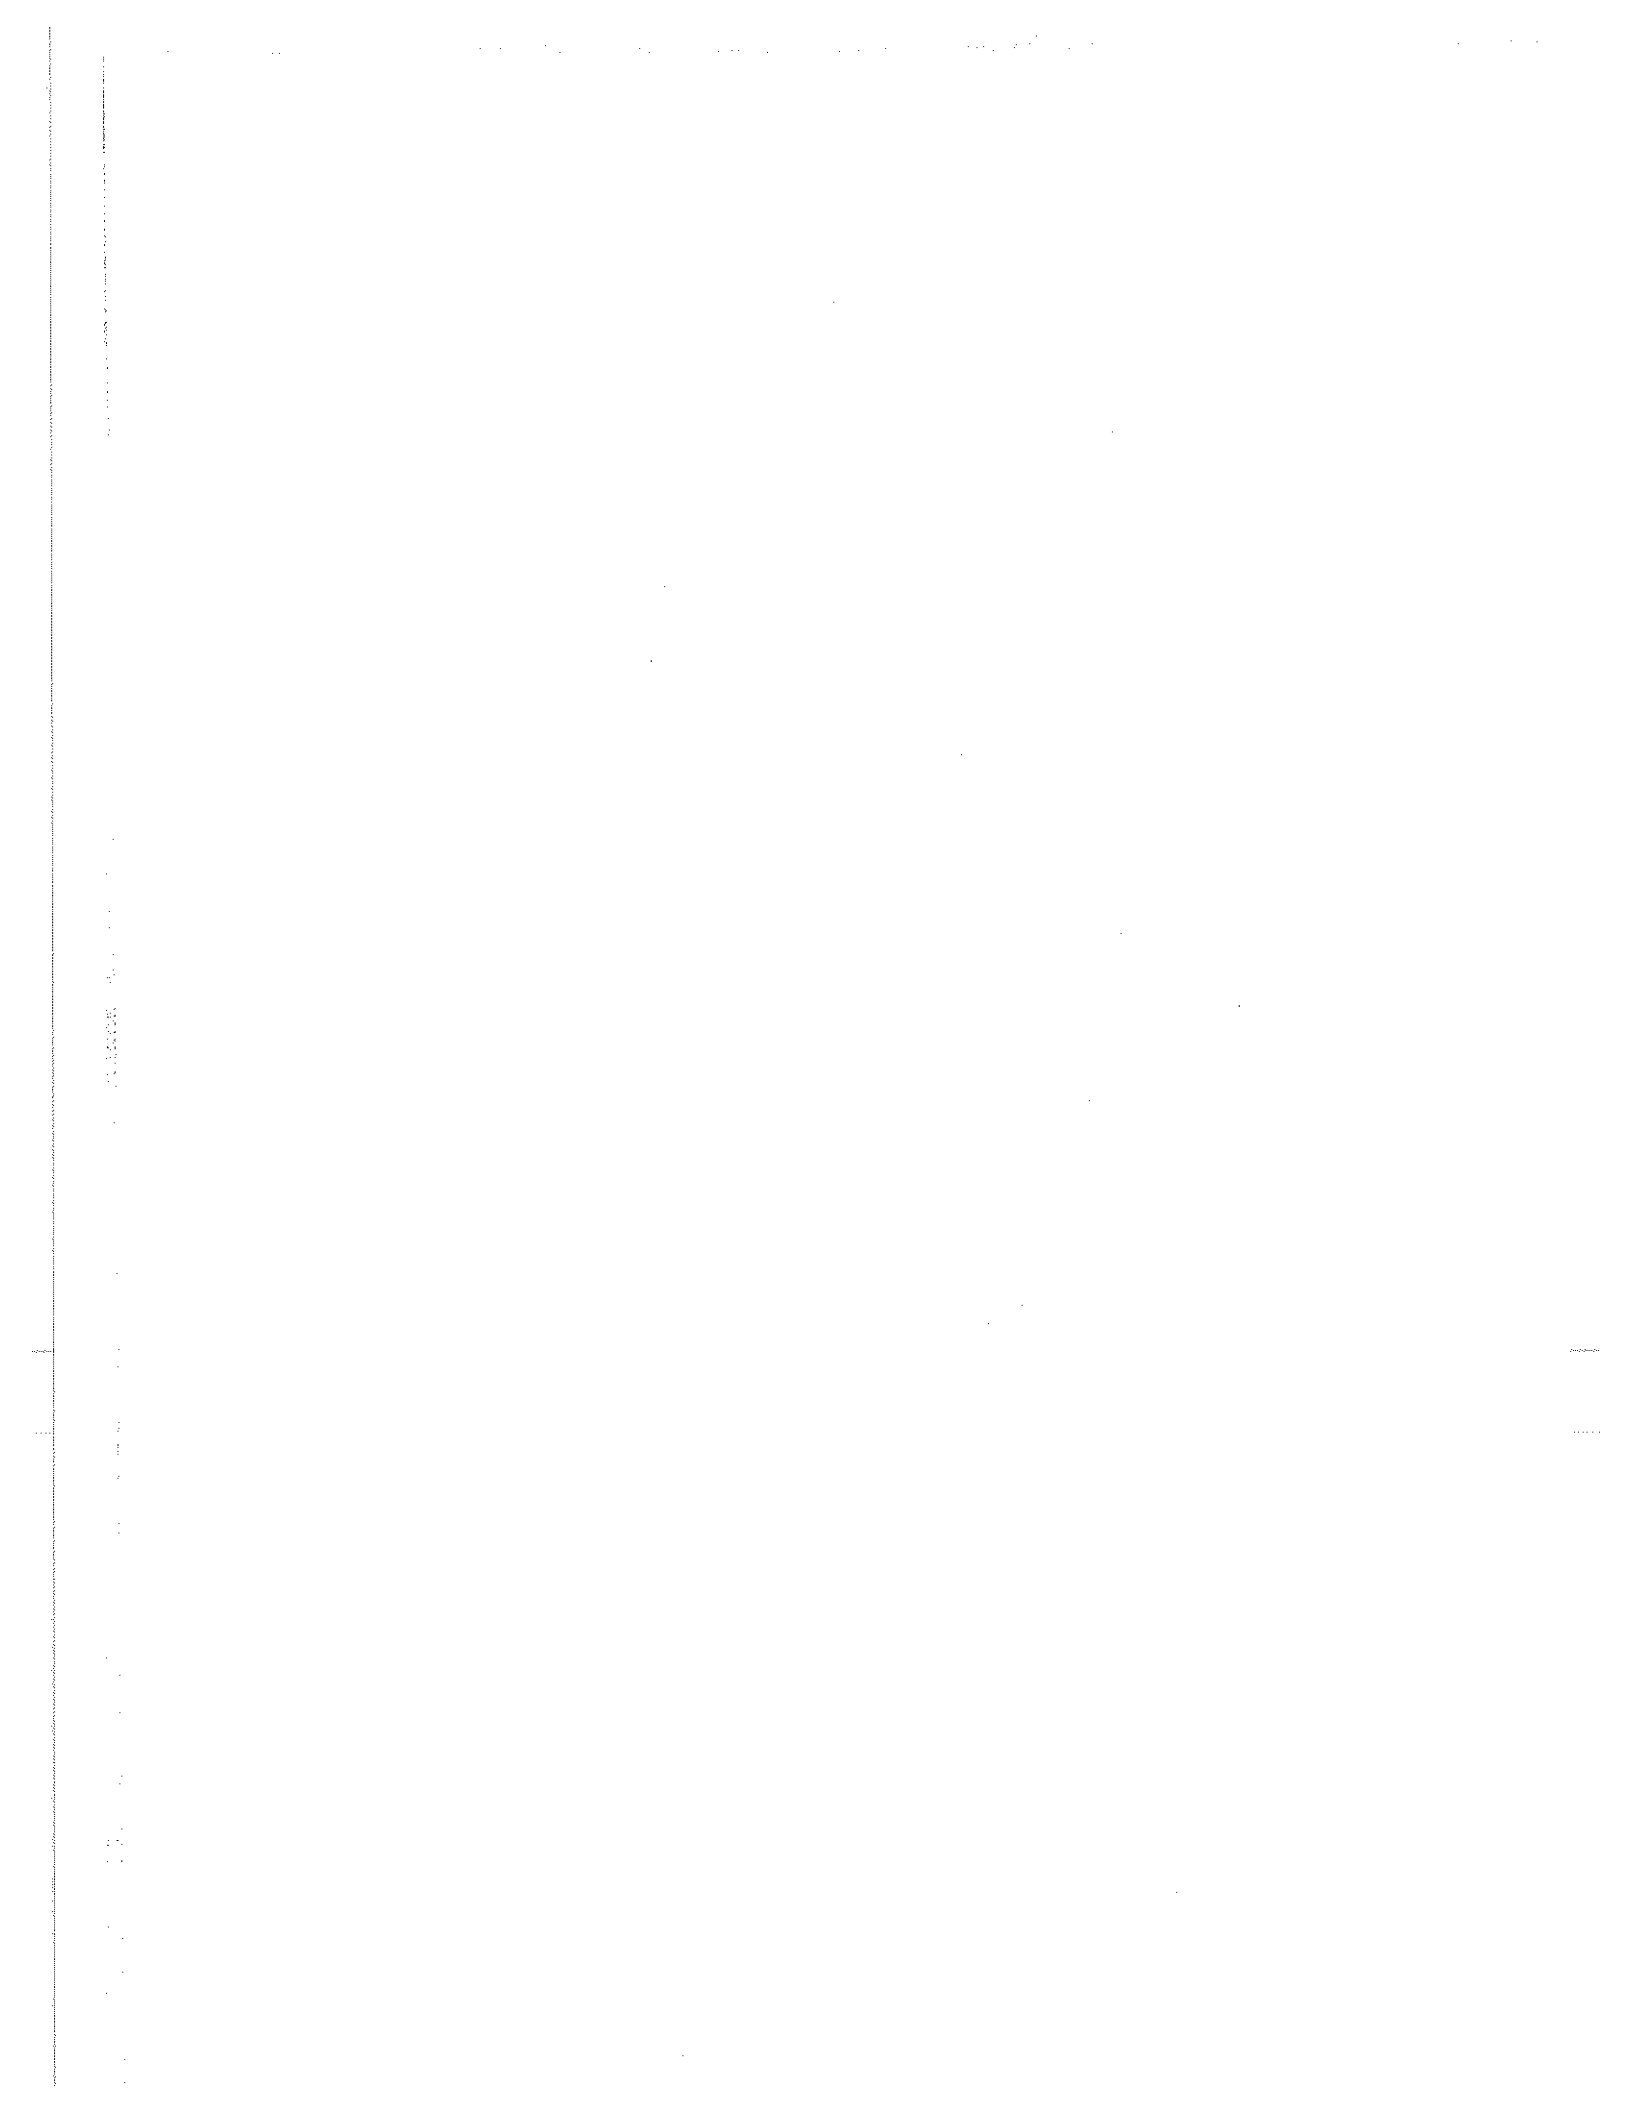

Part 2

100-442600-1000

100-442600-1000


TABLE OF CONTENTS

1.	INTRODUCTION	1-1
1.1	GPIB	1-1
1.2	Command Modes	1-2
1.2.1	IEEE488.2-1987 Command Mode	1-2
1.2.2	IEEE488.1-1987 Command Mode	1-2
1.2.3	Switching of Command Mode	1-2
1.3	GPIB Setup	1-3
2.	GPIB BUS FUNCTIONS	2-1
2.1	GPIB Interface Functions	2-1
2.2	Controller Functions	2-2
2.3	Responses to Interface Messages	2-3
2.3.1	Interface Clear (IFC)	2-3
2.3.2	Remote Enable (REN)	2-3
2.3.3	Serial Polling Enable (SPE)	2-3
2.3.4	Group Execute Trigger (GET)	2-4
2.3.5	Device Clear (DCL)	2-4
2.3.6	Selected Device Clear (SDC)	2-4
2.3.7	Go To Local (GTL)	2-4
2.3.8	Local Lockout (LLO)	2-5
2.3.9	Take Control (TCT)	2-5
2.4	Message Exchange Protocol	2-6
2.4.1	GPIB Buffers	2-6
2.4.2	IEEE488.2-1987 Command Mode	2-6
2.4.3	IEEE488.1-1987 Command Mode	2-7
2.4.4	BASIC Mode	2-8
3.	COMMAND SYNTAX	3-1
3.1	IEEE488.2-1987 Command Mode	3-1
3.1.1	Command Syntax	3-1
3.1.2	Data Formats	3-4
3.2	IEEE488.1-1987 Command Mode	3-7
3.2.1	Command Syntax	3-7
4.	STATUS BYTES	4-1
4.1	Status Register	4-1
4.1.1	Status Register Structure	4-1
4.1.2	Status Register Types	4-2
4.2	Status Byte Register	4-5
4.3	Standard Event Register	4-7
4.4	Standard Operation Status Register	4-8
4.5	Device Status Register	4-9
4.6	Power Status Register	4-10
4.7	Frequency Status Register	4-11

Table of Contents


4.8	Limit Status Register	4-12
4.9	SRQE/SRQD Operation	4-13
4.10	Notice on the status byte	4-14
5.	TRIGGER SYSTEM	5-1
5.1	Trigger Model	5-1
5.2	Idle State	5-2
5.3	Trigger Waiting State	5-3
5.4	Measuring State	5-4
5.5	IEEE488.1-1987 Command Mode	5-4
6.	SAMPLE PROGRAMS	6-1
7.	COMMAND REFERENCE	7-1
7.1	Command Description Format	7-3
7.2	Common Commands	7-6
7.3	ABORt Subsystem	7-21
7.4	CALCulate Subsystem	7-22
7.5	DISPLay Subsystem	7-34
7.5.1	Commands Used for All Models	7-34
7.5.2	Commands Used for Only R3765/67G Series	7-46
7.6	FILE Subsystem	7-49
7.7	FORMat Subsystem	7-53
7.8	INITiate Subsystem	7-55
7.9	REGister Subsystem	7-56
7.10	SENSE Subsystem	7-58
7.10.1	Commands Used for All Models	7-58
7.10.2	Commands Used for Only R3765/67G Series	7-91
7.11	SOURce Subsystem	7-118
7.12	STATus Subsystem	7-141
7.13	SYSTem Subsystem	7-155
7.14	TRACe Subsystem	7-159
7.15	TRIGger Subsystem	7-163
7.16	R3762/63 Command	7-166
7.17	R3765/67 MARKer Subsystem	7-167
7.17.1	Commands Used for All Models	7-167
7.17.2	Command Used for Only R3765/67G Series	7-192
7.18	FETCh? Subsystem	7-193
7.19	LIMit Subsystem	7-202
7.20	TRANSform Subsystem	7-228
7.20.1	Commands Used for All Models	7-228
7.20.2	Commands Used for Only R3765/67G Series	7-234
7.21	GATE Subsystem	7-236
7.22	CDMA Subsystem	7-239

7.23	SFIXture Subsystem	7-245
7.24	OUTPUT ATT Subsystem	7-264
APPENDIX		A1-1
A.1	List of Command.....	A1-1
A.1.1	Common Commands	A1-1
A.1.2	R3764/66, R3765/67 Commands	A1-2
A.1.3	R3762/63 Commands (Commands Used for All Models)	A1-7
A.1.4	R3762/63 Commands (Commands Used for R3765/67G Series)	A1-23
A.2	GPIB Command List Corresponding to Panel Key / Softkey	A2-1
A.2.1	ACTIVE CHANNEL Block.....	A2-2
A.2.2	STIMULUS Block.....	A2-2
A.2.3	RESPONSE Block.....	A2-8
A.2.4	INSTRUMENT STATE Block	A2-52
A.2.5	GPIB Block	A2-69
A.3	Initial Settings	A3-1
A.4	Multi-Line Interface Message	A4-1
ALPHABETICAL INDEX		I-1

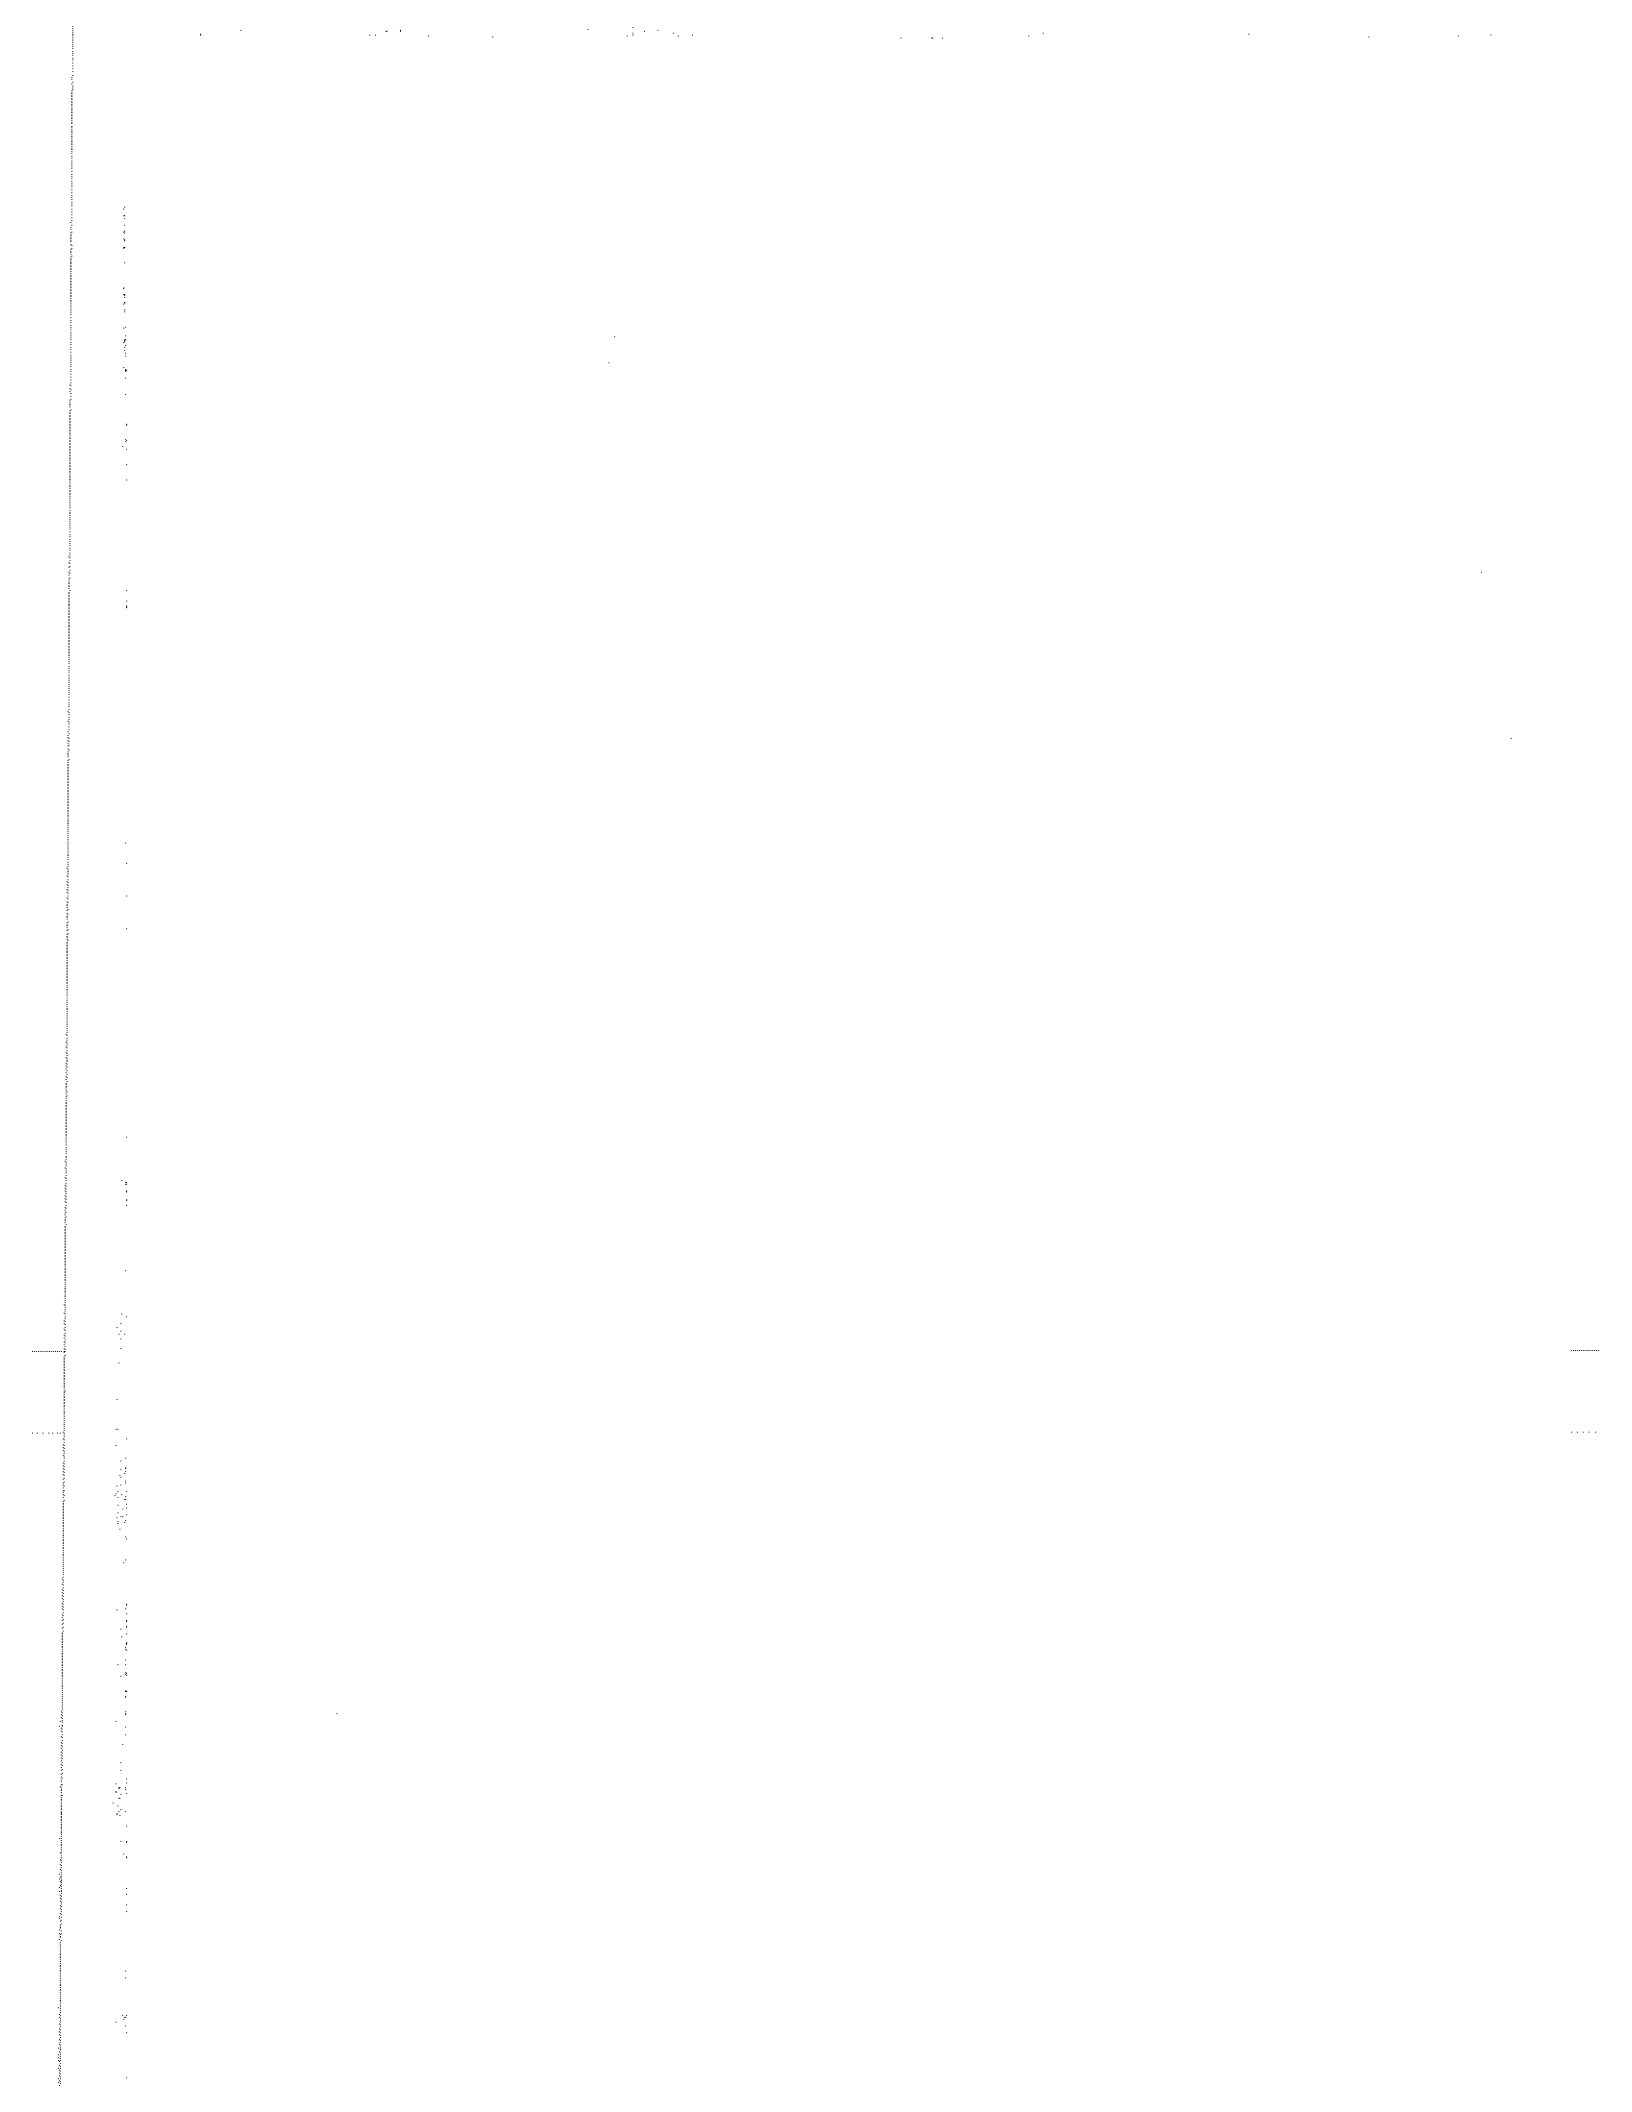

LIST OF TABLES

No.	Title	Page
7-1	Relationship between the Panel Menu and the STAN Command (1 of 3)	7-101
A3-1	Initial Settings (1 of 3)	A3-1
A3-2	Backup Memory Settings (factory default settings)	A3-5

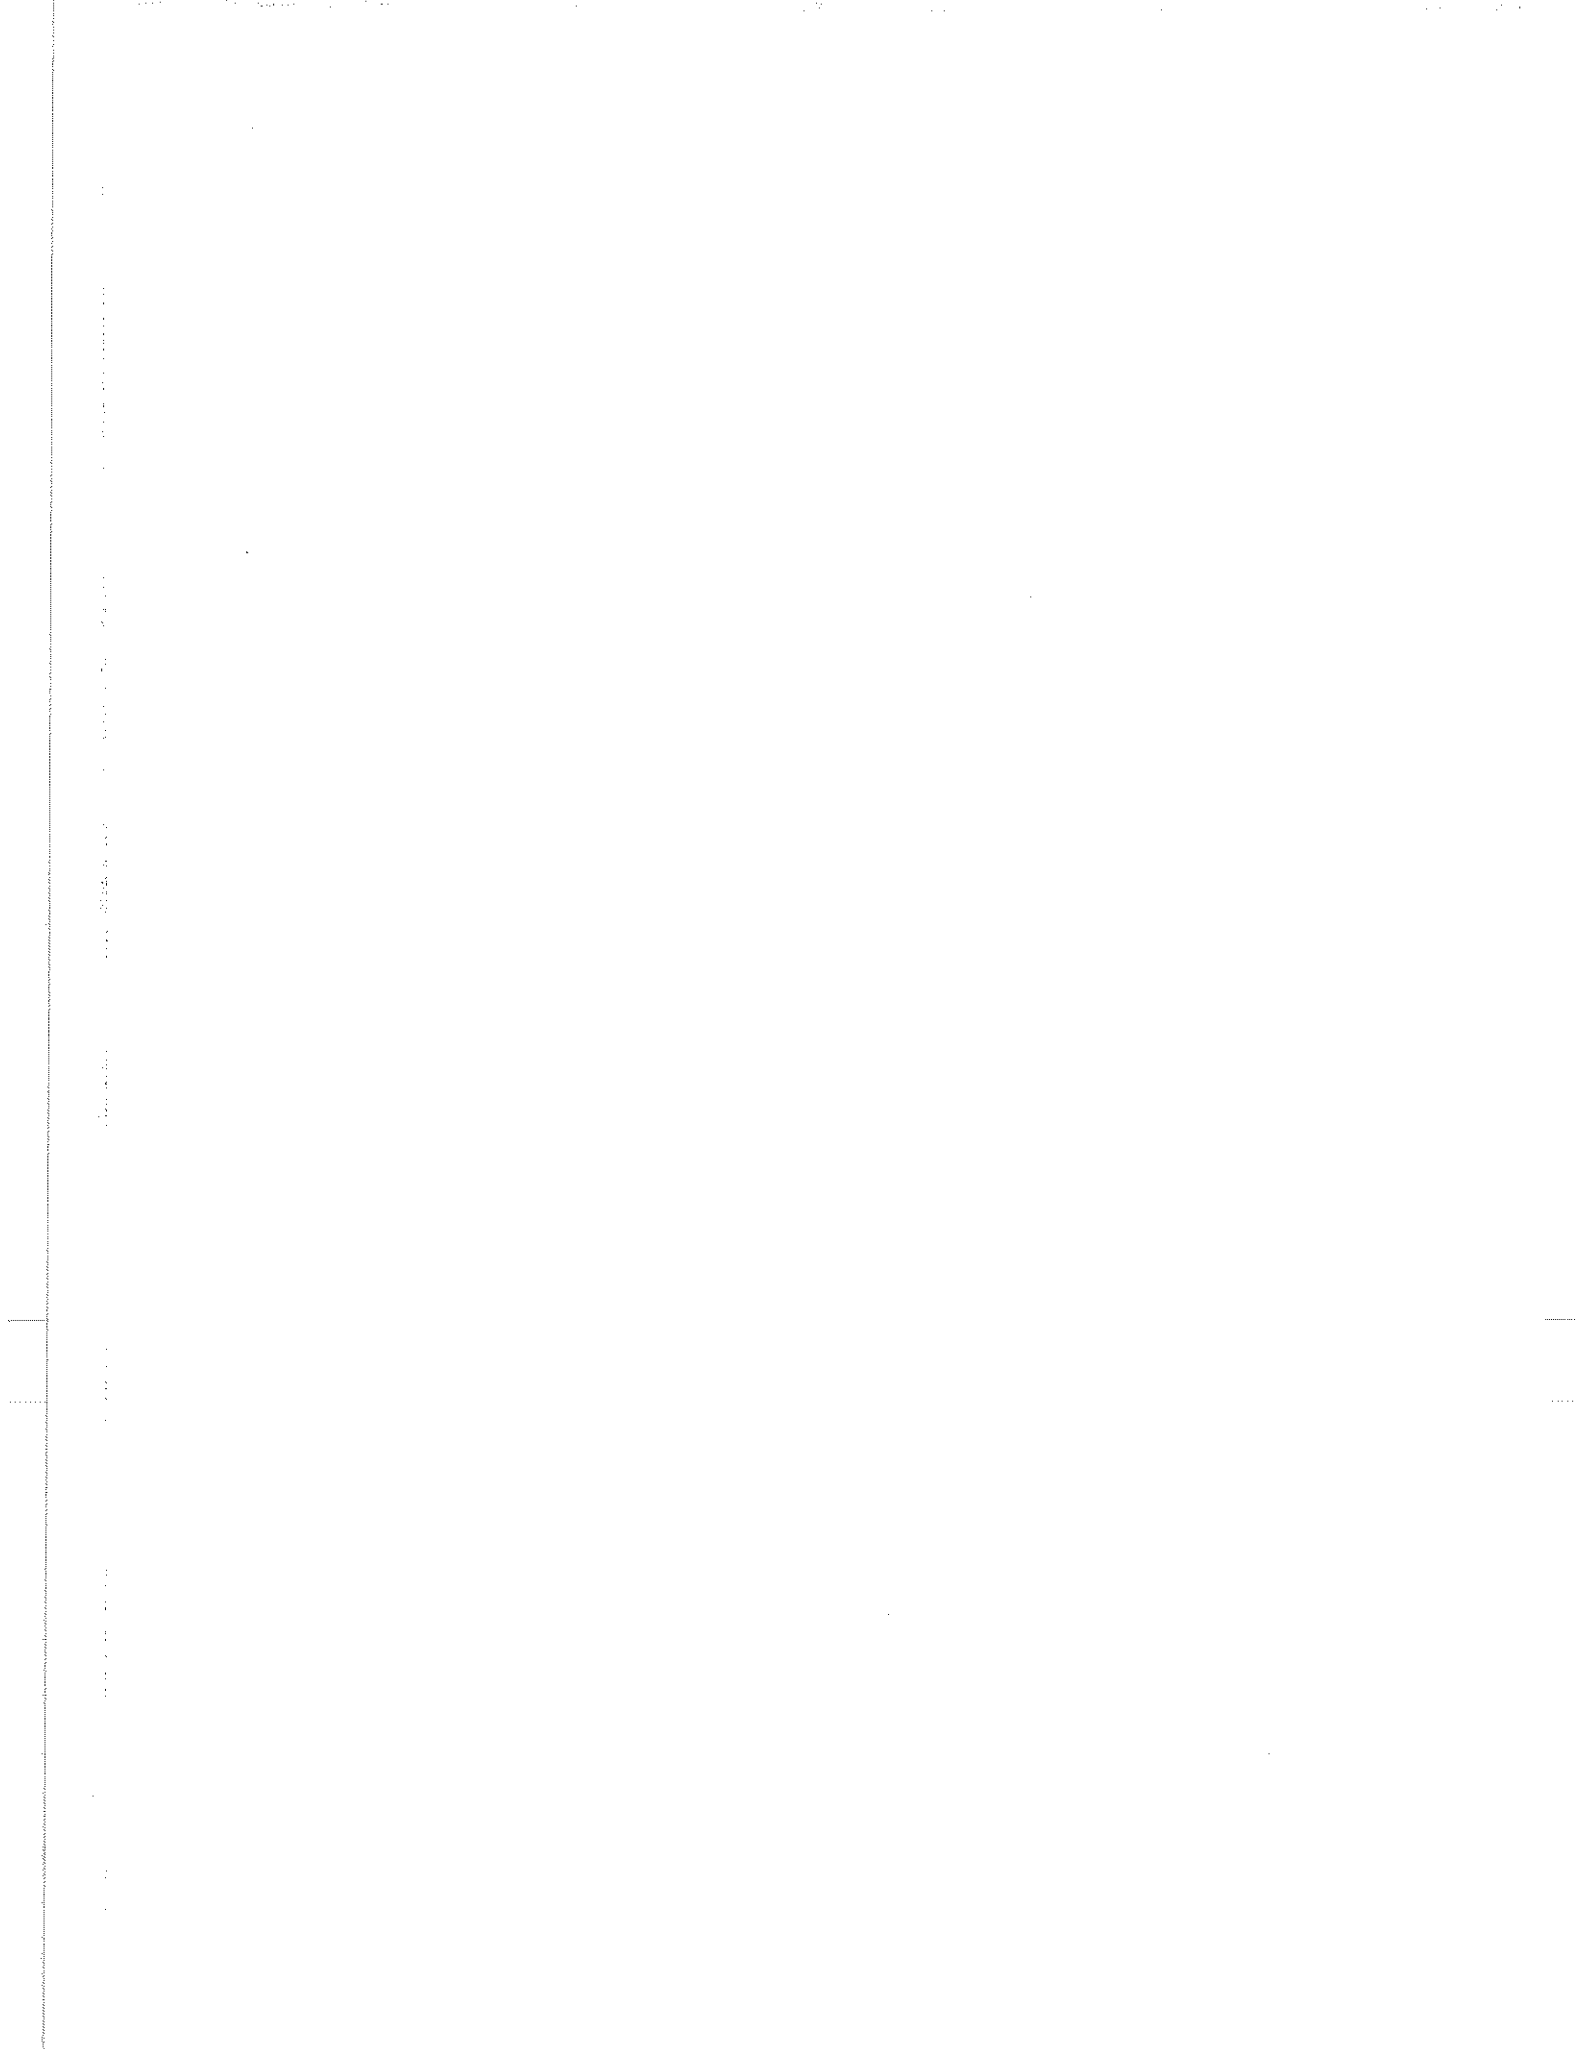

1. INTRODUCTION

The network analyzer is equipped with a GPIB (General-Purpose Interface Bus) as standard, which complies with IEEE standards 488.1-1987 and 488.2-1987 and can be remotely controlled by means of an external controller. The analyzer also has a built-in control function, enabling easy configuration of small GPIB systems.

The following describes the method of control using the GPIB remote control functions.

1.1 GPIB

The GPIB is a high-performance interface bus used to connect the measuring instruments to the computer.

The operations of the GPIB are defined by IEEE standard 488.1-1987. Since the GPIB has a bus-configured interface, it can specify a device by assigning a specific address to each device. Up to 15 devices can be connected in parallel to a single bus. GPIB devices have one or more of the following functions:

- **Talker**
The talker is a device which is specified to send data to the bus. Only one active talker can exist on the GPIB bus.
- **Listener**
The listener is a device which is specified to receive data from the bus. Multiple active listeners can exist on the GPIB bus.
- **Controller**
The controller is a device which specifies the talker and listener. Only one active controller can operate on the GPIB bus. Controllers which control IFC and REN messages are called "system controllers".
The GPIB bus can have only one system controller on it. If there are multiple controllers on the bus, the system controller becomes the active controller, while other devices which have a control function operate as addressable devices when the system is started up.
The TCT (Take Control) interface message is used to set a controller other than the system controller as the active controller. After setting, the system controller will become the non-active controller.
The controller controls the entire system by sending interface messages or device messages to each measuring instrument. The functions of the messages are:

- Interface message: Control of the GPIB bus
- Device message: Control of the measuring instrument

To use the built-in BASIC, refer to Part 1 of this manual.

1.2 Command Modes

1.2 Command Modes

1.2.1 IEEE488.2-1987 Command Mode

In R3764/66 and R3765/67 series, the operation is possible in two command modes.

- IEEE standard 488. 2-1987 command mode
- IEEE standard 488. 1-1987 command mode

R3762/63 series can perform the operation only in IEEE standard 488. 1-1987 command mode.

The 488.2-1987 is defined by extending the following items to 488.1-1987.

- Syntax for programming the measuring instrument
- Communication protocol (procedure) of commands and data
- Common commands

NOTE: The common commands refer to the commands that identically operate on all measuring instruments.

- Status data structure
- System synchronization protocol

1.2.2 IEEE488.1-1987 Command Mode

Since the command syntax and the communication protocol used in IEEE488.1-1987 command mode are compatible with those of R3762/63 series, smooth transition from IEEE488.1-1987 command mode to R3764/R3766, R3765/67 series is possible. (However, because of changes in product specifications, some operations are performed using different commands.)

1.2.3 Switching of Command Mode

This instrument is set IEEE488.1-1987 command mode after activating (power on).


Execute switching of IEEE488.1-1987 command mode and IEEE488.2-1987 command mode is as follows:

- Send OLDC OFF : It enters IEEE488.2-1987 command mode.
- Send OLDC ON: It enters IEEE488.1-1987 command mode.

1.3 GPIB Setup

1. Connecting GPIB

The following shows the standard GPIB connector. Secure the GPIB connector with the two screws to prevent it from coming loose during use.

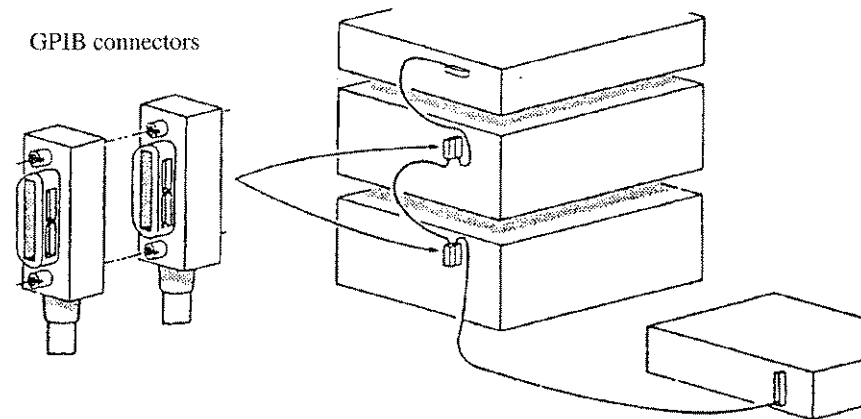

The following precautions should be observed when using the GPIB interface:

- The total GPIB cable length in a single bus system should not exceed $n \times 2$ meters, where n = the number of devices to be connected, including the GPIB controller. In no case should the cable length exceed 20 meters.
- Up to 15 devices can be connected to a single bus system.
- There are no restrictions concerning the method of connection between cables. However, no more than three GPIB connectors should be connected to a single device, since the use of excessive force could damage the connector mounting.

For example, the total cable length in a system with five devices should be 10 meters or less (2 meters \times 5 devices = 10 meters). The total cable length can be distributed freely within the range of the maximum allowed cable length. However, if more than ten devices are to be connected, some of them should be connected using cables of less than 2 meters so that the total cable length does not exceed 20 meters.

2. Setting GPIB address

The GPIB address is set using the keys on the front panel. The key operation depends on the model (R3764/66, R3765/67). For details, refer to the pertinent operation manual.

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

2. GPIB BUS FUNCTIONS

2.1 GPIB Interface Functions

| Code | Description |
|------|---|
| SH1 | With source handshake function |
| AH1 | With acceptor handshake function |
| T6 | Basic talker function, serial polling function, listener-specified talker cancel function |
| TE0 | Without extended talker function |
| L4 | Basic listener function, talker-specified listener cancel function |
| LE0 | Without extended listener function |
| SR1 | With service request function |
| RL1 | Remote function, local function, local lockout function |
| PP0 | Without parallel polling function |
| DC1 | Device clear function |
| DT1 | Device trigger function |
| C1 | System controller function |
| C2 | IFC transmission, controller in charge function |
| C3 | REN transmission function |
| C4 | SRQ response function |
| C12 | Transmission of interface messages, control transfer function |
| E1 | Using open-collector bus driver |

2.2 Controller Functions

2.2 Controller Functions

R3764/66, R3765/67 has a system controller mode and an addressable mode. The features of each mode are as follows:

| | System Controller Mode | Addressable Mode |
|------------|------------------------|-----------------------|
| At startup | Active controller | Non-active controller |
| IFC | Controllable | Not controllable |
| REN | Controllable | Not controllable |

To be active in the addressable mode, R3764/66, R3765/67 must have received the TCT interface message.

Only one system controller is allowed on the GPIB bus. When a system connected through the GPIB bus is started up, the system controller becomes the active controller. Only one active controller at a time is allowed on the GPIB bus. The controller controls the devices on the bus by sending interface messages and receiving service requests (SQR). Note that the IFC and REN interface messages are sent by the system controller only.

Interface messages are used to send indications of talker and listener, serial poll, device clear, trigger, local, and the other information to the measuring instrument. Service requests are used to receive interruptions from the instrument.

The active controller can transfer control to any non-active controller. After specifying the talker as the device to which control is to be transferred, the active controller sends a TCT interface message to transfer control to the talker. This operation is called "pass control".

When the system controller sends an IFC interface message, control is returned from the active controller to the system controller.

2.3 Responses to Interface Messages

The responses of the analyzer to interface messages are defined by IEEE standards 488.1-1987 and 488.2-1987 and are described in this section.

For information on how to send interface messages to the analyzer, refer to the instruction manual of the controller to be used.

2.3.1 Interface Clear (IFC)

The IFC message is transmitted directly to the analyzer through a signal line. The message allows the analyzer to stop the operation of the GPIB bus. Although all input/output operation is stopped, the input/output buffer is not cleared. Note that the DCL is used to clear the buffer. If the analyzer is specified as an active controller at that time, control of the GPIB bus will be removed from the analyzer and transferred to the system controller.

2.3.2 Remote Enable (REN)

The REN message is transmitted directly to the analyzer through a signal line. If the analyzer is specified as a listener when the message is true, the analyzer is in the remote mode. The analyzer remains in the remote mode until the GTL message is received, or the REN becomes false, or the LOCAL key is pressed.

When the analyzer is in the local mode, it ignores all the received data. When the analyzer is in the remote mode, it ignores all key inputting other than LOCAL key inputting. When the analyzer is in the LOCAL LOCKOUT mode (LLO; see section 2.3.8), it ignores all key inputting.

2.3.3 Serial Polling Enable (SPE)

When the analyzer receives a message from external devices, it is in the serial polling mode. If the analyzer is specified as a talker in this mode, it sends status bytes instead of normal messages. The analyzer remains in the serial polling mode until the SPD (Serial Polling Disable) message or the IFC message is received.

When the analyzer sends an SRQ (Service Request) message to the controller, bit 6 (RQS bit) of the response data is set to 1 (true). When the analyzer has finished sending this message, the RQS bit reverts to 0 (false). The SRQ (Service Request) message is sent directly through a signal line.

2.3.4 Group Execute Trigger (GET)

2.3.4 Group Execute Trigger (GET)

If the following conditions are satisfied when this message triggers the analyzer, the analyzer will start the measuring operation.

- The trigger source becomes the GPIB bus (TRIG: SOUR BUS).
- The analyzer is in the trigger waiting state (see "5. TRIGGER SYSTEM").

The GET operates in the same manner as the *TRG but differently from TRIG:IMM and TRIG:SIG. The GET, *TRG, TRIG:IMM and TRIG:SIG are stacked in the input buffer and executed in order of reception.

2.3.5 Device Clear (DCL)

When the analyzer receives the DCL message, it performs the following:

- Clearing of the input and output buffers
- Resetting of syntax (?>program<?) analysis, execution control and response data generation
- Cancellation of all commands that prevent the remote command from being executed next
- Cancellation of commands that are paused to wait for other parameters
- Cancellation of *OPC and *OPC?

It does not perform the following:

- Changing of data set or stored in the analyzer
- interruption of the front panel operation
- Modification or interruption of analyzer operations being executed
- Changing of status bytes other than MAV. (MAV becomes 0 when the output buffer is cleared.)

2.3.6 Selected Device Clear (SDC)

The SDC message operates in the same manner as the DCL message. However, it is executed only when the analyzer is as a listener. In other cases, it is ignored.

2.3.7 Go To Local (GTL)

The GTL message places the analyzer in the local mode. In the local mode, all the operations on the front panel are available.

2.3.8 Local Lockout (LLO)

The LLO message places the analyzer in the local lockout mode. If the analyzer is set to the remote mode in this mode, all the operations on the front panel will be inhibited. (Note that in the normal remote mode, front panel operations can be performed using the LOCAL key.)

The following three methods can be used to set the analyzer to the local mode from the local lockout mode:

- Sending a GTL message to the analyzer
- Setting the REN message to false (In this case, the local lockout mode will be canceled.)
- Switching on the analyzer power again

2.3.9 Take Control (TCT)

If the analyzer receives the TCT message when it is specified as a talker, it becomes the active controller through "pass control". On receiving the IFC message, the analyzer returns to the addressable mode.

2.4 Message Exchange Protocol

2.4 Message Exchange Protocol

The analyzer receives program messages from controllers or other devices through the GPIB bus and generates response data. The program messages include commands, queries (commands used to query response data) and data. The procedure used to exchange these commands, queries and data is explained in this section.

2.4.1 GPIB Buffers

The analyzer is equipped with the following three buffers:

1. Input buffer

The input buffer is used to store data temporarily for command analysis (1024 bytes).

Either of the following two methods can be used to clear the input buffer:

- Switching on the analyzer power
- Execution of the DCL or the SDC

2. Output buffer

The output buffer is used to store data which are to be read from the controller (1024 bytes).

Either of the following two methods can be used to clear the output buffer:

- Switching on the analyzer power
- Execution of the DCL or the SDC

3. Error queue

The error queue is available only for IEEE488.2-1987 command mode. It is used to store up to ten error messages for remote commands. Each time an error occurs during remote command analysis or in execution, an error message is stored in the queue. The SYST:ERR command is used to read out these messages. When a message is read out, it is removed from the queue.

Either of the following two methods can be used to clear the error queue:

- Switching on the analyzer power
- Execution of the *CLS

2.4.2 IEEE488.2-1987 Command Mode

IEEE488.2-1987 command mode performs the sending and receiving of messages in accordance with the message exchange protocol in compliance with IEEE standard 488.2-1987.

The following are the most important events when another controller or device receives messages from the analyzer in this mode:

- Response data are generated when a query is received.
- Data are generated in the order of query execution.

1. Purser

The purser receives command messages in the order of reception from the input buffer, analyzes the syntax and determines what the received command is to execute.

The purser traces the tree structure of the commands when analyzing the command program. It memorizes which part of the tree structure is to be used to start analysis when analyzing the next command. This information is returned to the head of the structure when the purser is cleared.

Any of the following four methods can be used to clear the purser:

- Switching on the analyzer power
- Reception of the DCL or the SDC
- Reception of ":" following ";"
- Reception of the terminator or the EOI signal

2. Generating response data

When the purser executes a query, the analyzer generates data in the output buffer in response to it (that is, to output data a query must be sent immediately before the data). The procedure implies that unless the controller reads out the data generated through the query, the data will never be cleared.

Apart from the controller read operation, there are two conditions under which the data are cleared. A query error will occur under the following conditions:

- Unterminated condition

When the controller has read the response data without terminating (LF code of ASCII or END message of GPIB) or sending the query

- Interrupted condition:

When the controller has received the next program message before reading the response data

2.4.3 IEEE488.1-1987 Command Mode

IEEE488.1-1987 command mode performs the sending and receiving of messages in accordance with the message exchange protocol in compliance with IEEE standard 488.1-1987. In this mode, the command stored in the input buffer can be analyzed, and no command string longer than the input buffer can be received (such commands are ignored).

When the analyzer is specified as a talker, the analyzer generates response data. It is necessary for the query to specify the items of the response data in advance. Each time the analyzer is specified as a talker, response data are generated and formatted on the output buffer. It is impossible to answer multiple queries simultaneously.

2.4.4 BASIC Mode

2.4.4 BASIC Mode

The analyzer supports a function enabling the analyzer to program itself or to be programmed by external devices with a built-in BASIC interpreter. When the BASIC interpreter is in operation, the GPIB interface of the analyzer enters a special mode and the interpreter controls the command messages from the external devices and data output from the analyzer.

For information on data input/output, refer to "ENTER and OUTPUT" in Part 1 of this manual. For information on how the BASIC interpreter does not control the GPIB, refer to "CONTROL Command" in Part 1 of this manual.

The analyzer enables the use of a special method whereby the addressable mode controls the built-in BASIC interpreter.

@BASIC statement

NOTE: *The character "@" must be at the beginning of the input message.*

There are no restrictions concerning the BASIC statement to be executed using this method. Also, the BASIC statements described here are not confined to commands. That is, statements such as the following can be executed:

- @100 PRINT "Hello World"
- @VAR=1000

Using this method, it is possible to download the built-in BASIC program from the external controller through the GPIB bus.

The GPIB bus is controlled by the BASIC interpreter when the BASIC interpreter is in operation. Under these conditions, the external controller can execute the statements in the same manner as above. (However, there are some restrictions on BASIC command execution.)

In other words, no character string beginning with "@" can be received through the GPIB bus in the addressable mode. (This restriction does not apply in the system controller mode, and there is no way to avoid it in the addressable mode.)


3. COMMAND SYNTAX

3.1 IEEE488.2-1987 Command Mode

For characters input in IEEE488.2-1987 command mode other than character string data and block data, no distinction is made between upper case and lower case.

3.1.1 Command Syntax

The command program for IEEE488.2-1987 command mode is defined in the following format:



NOTE: "=>" indicates repetition.

1. Header

The header has a hierarchical structure consisting of multiple mnemonics separated by a colon. A four-character (or three-character) "short form" is provided for each mnemonic consisting of four characters or more. (Mnemonics which are not abbreviated are called "long forms".) It is possible to use any form in any combination.

Any command with a header followed immediately by "?" becomes a query command.

2. Space (space character)

One space or more is required in this field; otherwise, a syntax error will occur.

3. Data

When the command requires multiple data, the data should be separated with commas. A space may be inserted before or after the each comma.

For details of data types, refer to "3.1.2 Data Formats".

4. Writing multiple commands

In IEEE488.2-1987 command mode, it is possible to write multiple commands by separating them with semicolons. If commands are written in this way, they should be executed while changing the current path in the hierarchical structure of the header.


3.1.1 Command Syntax

5. Changing the current path

The current path should be changed in accordance with the following rules:

- Switching on: The current path is set to "root".
- Terminator: The current path is set to "root".
- Colon (:): The current path is changed to the layer immediately below in the command tree. If the colon is at the beginning of the command, the current path will be changed to "root".
- Semicolon (;): The current path is not changed.
- Common command:
The command can be executed regardless of the current path position. When the *RST command is executed, the current path is set to "root". (See the example below.)

The following header structure is given as an example:

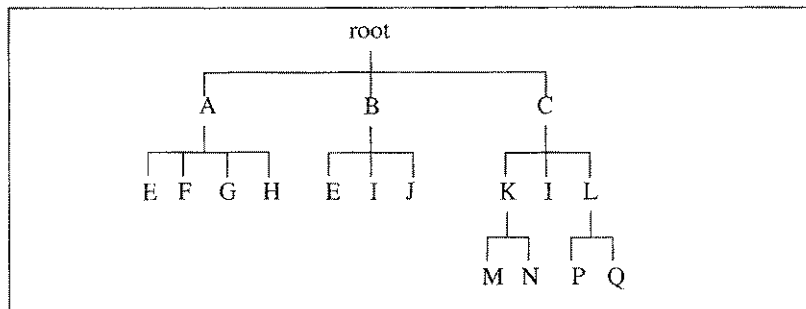

In this example, the current path is changed as follows:

1. :A:E;B:E
Since the colon in the second command changes the current path to "root", commands "A:E" and "B:E" are both valid.
2. :A:E<END> B:E
Since <END> (terminator) changes the current path to "root", commands "A:E" and "B:E" are both valid.
3. :A:E;F;G;H
Since the semicolon does not change the current path, ":A:E;F;G;H" results in the four commands "A:E", "A:F", "A:G" and "A:H".
4. :C:I;K:N;M
Since the colon changes the current path, "K:N" is viewed from the ":C:" layer. Therefore, "K:N" results in "C:K:N". At the same time, since "K:N" includes a colon, the current path is changed to ":C:K:" and the last "M" is interpreted as "C:K:M".
5. :A:E;*ESR 16
Since the common command is independent of the current path, "*ESR 16" will be executed correctly.

6. :A:E;*ESR 16;F;G;H

Since the common command does not change the current path, the third item, "F", will be searched for using the current path ":A:" set by the first item ":A:E". Therefore, "F", "G" and "H" result in "A:F", "A:G" and "A:H", respectively.

The following examples show syntax errors.

1. :A:E;B:E

Since "A:E" changes the current path to ":A:", "B:E" will be searched for in the layer of ":A:". However, because the mnemonic "B" is not found, an error will occur.

2. :C:K:M;L:P

Since ":C:K:M" changes the current path to ":C:K:", "L:P" will be searched for in the layer of ":C:K:". However, because the mnemonic "L" is not found, an error will occur.

3.1.2 Data Formats

3.1.2 Data Formats


In IEEE488.2-1987 command mode, the analyzer uses the data formats for data input/output shown in this section.

1. Numeric data

There are three numeric data formats, any of which can be used for numeric data input. (The data are rounded up or down in accordance with the data format to be input.)


Some commands add the units to the data at data inputting. For information on units, refer to 5. below.

The following shows the format of the character data.

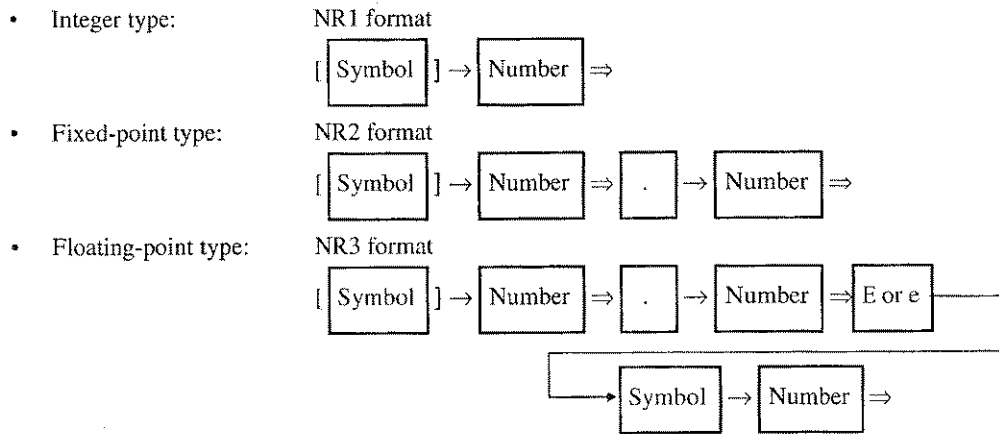

NOTE: " => " indicates repetition. Symbols at the beginning may be omitted.


2. Character data



NOTE: " => " indicates repetition.

3. Character string data

There are two character string data formats.

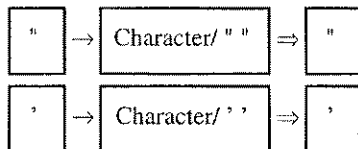


Each format can be used as an ASCII 7-bit code character in the character string data.

NOTE: In character string data starting with [\"], ['] must be represented by [\" \"]. In character string data starting with ['], ['] must be represented by [\' \']. " ⇒ " indicates repetition.

When the response data are character string data, character string data starting with [\"] should be output.

4. Block data

There are two block data formats. Either can be used for inputting into the analyzer.

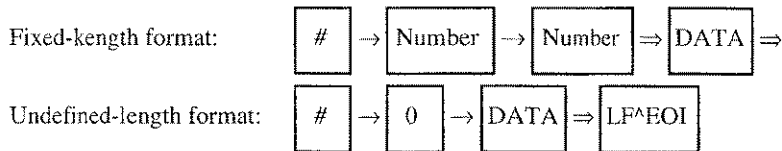

NOTE: " ⇒ " indicates repetition.

In the fixed-length format, the one-digit number following "#" represents the number of digits for the bytes in the data following that number. "0" cannot be used, because it indicates the undefined-length format.

Example: Block data #3128 <data byte>
 "3" following "#" represents the number of digits in the character string (128) following "3", while "128" represents the number of bytes in <data byte> following that number.

3.1.2 Data Formats

5. Units

Units are the suffix following a numeric value. The suffix can be used as a prefix for the unit. The table below lists the suffixes and the units which can be used.

| Suffixes | | Unit | Commands with which Usable |
|----------|-----|------|--|
| 1E18 | EX | HZ | [SENSe:]BANDwidth[:RESolution] |
| 1E125 | PE | | [SOURce:]FREQuency:CENTer |
| 1E12 | T | | [SOURce:]FREQuency:CW
[SOURce:]FREQuency:SPAN
[SOURce:]FREQuency:STARt
[SOURce:]FREQuency:STOP
[SOURce:]PSWeep:FREQuency |
| 1E9 | G | DEG | [SENSe:]CORRection:OFFSet:PHASe |
| 1E6 | MA | | INPut:ATTenuation
OUTPut:ATTenuation |
| 1E3 | K | DBM | [SOURce:]POWer[:LEVel][:AMPLitude] |
| 1E-3 | M * | | [SOURce:]POWer:STARt
[SOURce:]POWer:STOP |
| 1E-6 | U | M | [SENSe:]CORRection:EDELay:DISTance |
| 1E-9 | N | | [SENSe:]CORRection:EDELay[:TIME] |
| 1E-12 | P | S | [SENSe:]CORRection:PEXTension:TIME |
| 1E-15 | F | | [SOURce:]SWEep:TIME
TRIGger[:SEQuence]:DELay |
| 1E-18 | A | OHM | CALCulate:TRANSform:IMPedance:CIMPedance
INPut:IMPedance |

NOTE: For commands not listed in the table, only the suffix can be used.


*: If HZ or OHM is used as the unit, the command will be executed using th suffix 1E6 (equivalent to MA).

3.2 IEEE488.1-1987 Command Mode

The following shows the program message structure for IEEE488.1-1987 command mode. For IEEE488.1-1987 command mode, a lower-case letter is used as the separator, except in character string data.


3.2.1 Command Syntax

The program for IEEE488.1-1987 command mode is defined in the following format.




The separator can be a space of zero or more characters, a comma, or a semicolon. The following three data formats can be used:


- Numeric value data format:

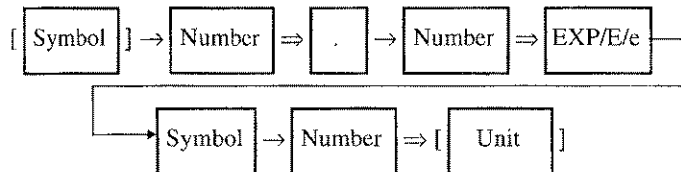

- Binary data format:



- Character string data format:



NOTE: " => " indicates repetition.

Network Analyzer Programming Manual (Part 2)

3.2.1 Command Syntax

The units below can be used for numeric value data:

| | | | |
|-------|------|------|------|
| GHZ | MHZ | KHZ | HZ |
| DEG | | | |
| DP | DM | DB | |
| METER | CM | | |
| SEC | MSEC | USEC | NSEC |
| VOLT | MV | UV | NV |
| MOHM | KOHM | OHM | |
| UNIT | | | |
| DIV | | | |
| PER | | | |

In character string data, the characters from the character immediately after the header to the last character of the input data are regarded as a character string. If "?" is added immediately after the header, the command will become a query command.

4. STATUS BYTES


The analyzer has a hierarchical status register structure in compliance with IEEE standard 488.2-1987, which is used to send various device status information to the controller. This chapter explains the operational models of the status byte and event assignments.

NOTE: The status structure differs from that of R3762/63, irrespective of the command mode.

4.1 Status Register

4.1.1 Status Register Structure

The analyzer employs the status register model defined by IEEE standard 488.2-1987 and consists of a condition register, an event register and an enable register.

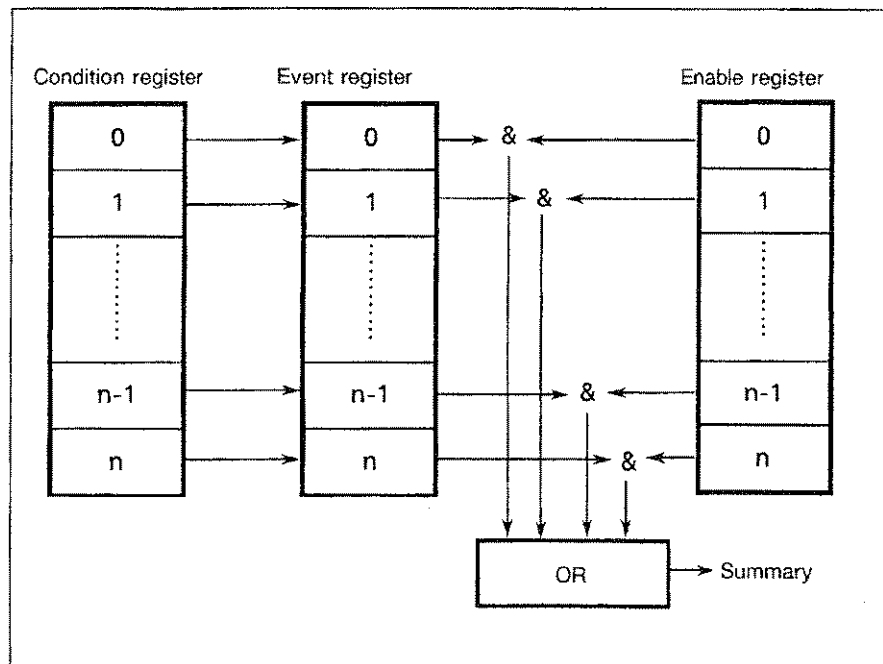

4.1.2 Status Register Types

1. Condition register

The condition register continuously monitors the status of devices, that is, retains the latest status of devices. No data can be written into this register.

2. Event register

The event register latches and retains the status information from the condition register. (In some cases, it retains status changes.)

Once the register is set, the condition is maintained until a query command reads out the information or the register is reset by means of the *CLS command. No data can be written into this register.

3. Enable register


The enable register specifies which bit in the event register is to be used as the valid status to generate a summary. The enable register is ANDed with the event register. The OR of the result of the AND operation is generated as a summary. The summary is written into the following status registers. Any data can be written into these registers.

4.1.2 Status Register Types

The following eight types of status register are used in the analyzer:


- | | |
|--|------------------|
| 1. Status byte register; | See Section 4.2. |
| 2. Standard event register; | See Section 4.3. |
| 3. Standard operation status register; | See Section 4.4. |
| 4. Questionable status register; | |
| 5. Device status register | See Section 4.5. |
| 6. Power status register; | See Section 4.6. |
| 7. Frequency status register; | See Section 4.7. |
| 8. Limit status register; | See Section 4.8. |

4.1.2 Status Register Types

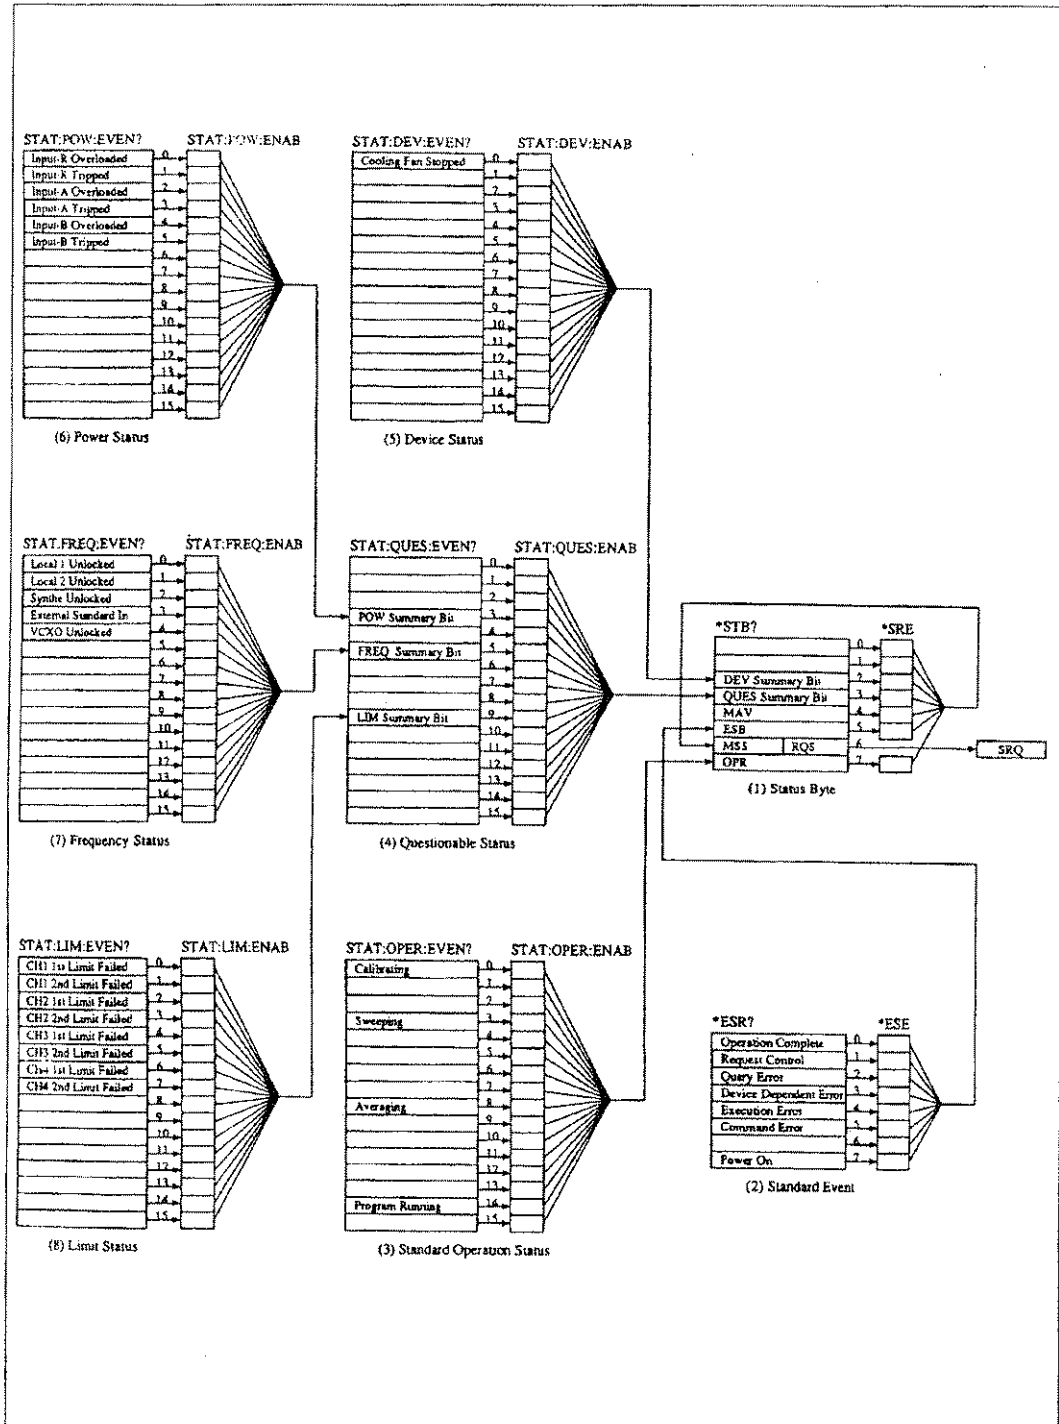

4.1.2 Status Register Types


The figure below shows the arrangement of the status registers in the analyzer.

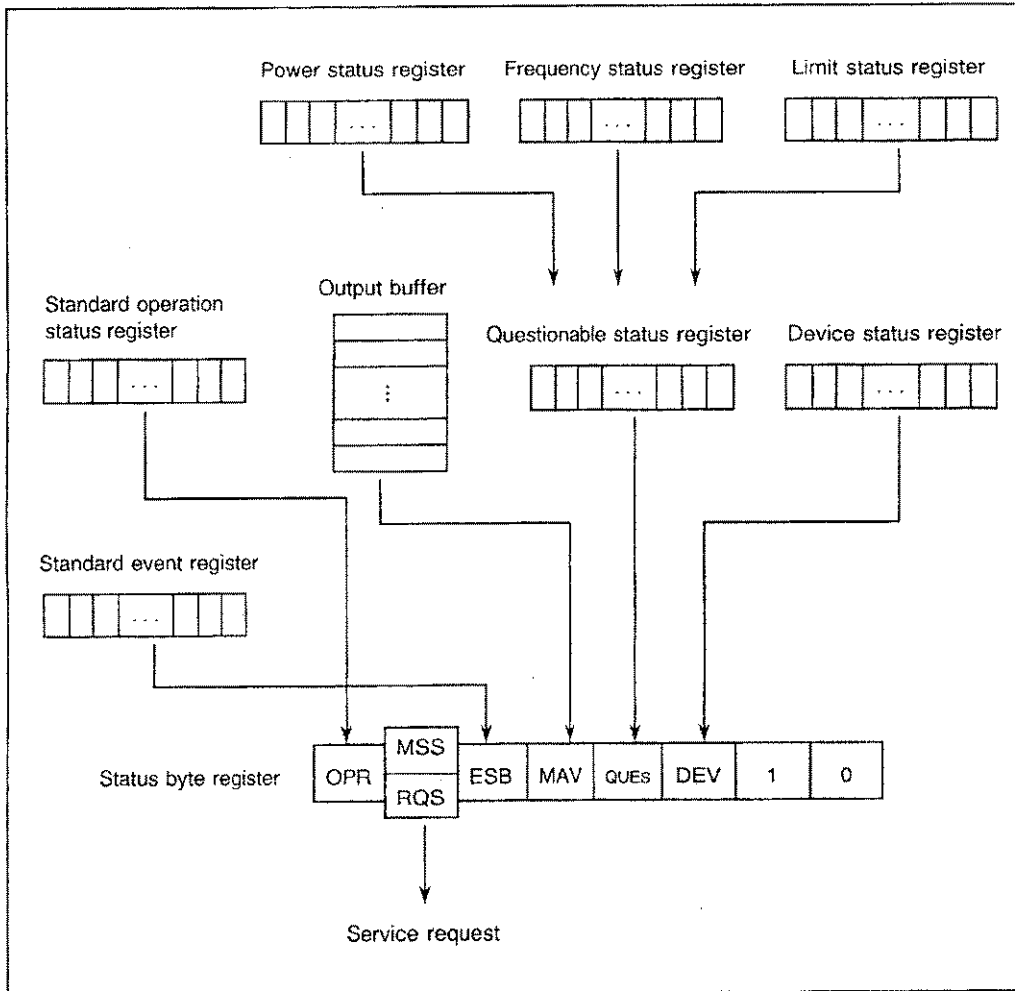

4.2 Status Byte Register

The status byte register summarizes the information from the status register (see section 4.1.1). In addition, a summary of the status byte register is sent to the controller as a service request. Therefore, the register operates slightly differently from the status register. This section explains the status byte register.

The figure below shows the structure of the status byte register

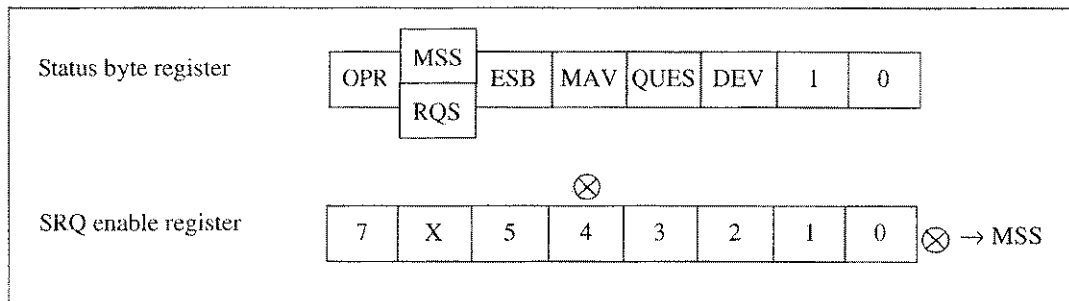

The register has the same functions as the status register explained in section 4.1.1, except with regard to the following three points:

1. The summary of the status byte register is written in bit 6 of the status byte register.
2. Bit 6 of the enable register is always valid and cannot be changed.
3. Bit 6 (MSS) of the status byte register writes the RQS of the service request.

The register responds to the serial polling from the controller. On doing so, bits 0 to 5 and bit 7 of the status byte register and the RQS are read out, then the RQS is reset to 0. The other bits are not cleared until each factor has been reset to 0.

When the *CLS command is executed, the status byte register, the RQS bit and the MSS bit can be cleared.

4.2 Status Byte Register

The table below explains the meanings of the bits in the status byte register.

| bit | | Description |
|--------|------|---|
| 7 | OPR | The OPR bit is a summary of the standard operation status register. |
| 6 | MSS | The RQS bit is true when the MSS bit of the status byte register is set to 1. The MSS bit is the summary bit for the entire status data structure. |
| | | The service request cannot read out the MSS bit. (However, the MSS bit is understood to be 1 when the RQS bit is 1.) |
| | | To read the MSS bit, use the common command *STB?. The *STB? command can read out bits 0 to 5 and bit 7 of the status byte register and the MSS bit. In this case, neither the status byte register nor the MSS bit can be cleared. |
| | | The MSS bit cannot become 0 until all the unmasked factors in the status register structure have been cleared. |
| 5 | ESB | The ESB bit is a summary of the standard event register. |
| 4 | MAV | The MAV bit is a summary bit for the output buffer. |
| | | When data exist in the buffer, this bit is set to 1. When the data are read out, it is set to 0. |
| 3 | QUES | The QUES bit is a summary of the questionable status register. |
| 2 | DEV | The DEV bit is a summary of the device status register. |
| 0 to 1 | | Always 0 |

4.3 Standard Event Register

The table below shows the assignments of the standard event register.

| bit | | Description |
|-----|------------------------|--|
| 7 | Power on | Set to 1 when the analyzer is switched on |
| 6 | | Always 0 |
| 5 | Command Error | Set to 1 when the purser finds a syntax error. |
| 4 | Execution Error | Set to 1 when the system fails to execute the instruction received as a GPIB command for some reason (such as out-of-range parameter). |
| 3 | Device Dependent Error | Set to 1 when errors other than command errors, execution errors, or query errors occur. |
| 2 | Query Error | Set to 1 when no data exist or data have been deleted when the controller attempts to read out data from the analyzer. |
| 1 | Request Control | Set to 1 when the analyzer is required to be the active controller. |
| 0 | Operation Control | Set to 1 when the analyzer has no command to be executed after receiving an *OPC command. |

4.4 Standard Operation Status Register

4.4 Standard Operation Status Register

1. Condition register

The table below shows the assignments of the condition register for the standard operation status.

| bit | | Description |
|---------|-----------------|---|
| 15 | | Always 0 |
| 14 | Program running | Set to 1 when the built-in BASIC language is running. |
| 4 to 13 | | Always 0 |
| 3 | Sweeping | Set to 1 when sweeping is being executed. |
| 1 to 2 | | Always 0 |
| 0 | Calibrating | Set to 1 when calibration data are being acquired. |

Note: Unlike the event register, the bit 8 (Averaging) is always 0.

2. Event register

The event register for the standard operation status is used to hold the change from 1 to 0 of the corresponding condition register. The table below shows the assignments of the event register for the standard operation status.

| bit | | Description |
|---------|-----------------|--|
| 15 | | Always 0 |
| 14 | Program running | Set to 1 when the built-in BASIC language stops. |
| 9 to 13 | | Always 0 |
| 8 | Averaging | Set to 1 when averaging finishes. |
| 4 to 7 | | Always 0 |
| 3 | Sweeping | Set to 1 when sweeping finishes. |
| 1 to 2 | | Always 0 |
| 0 | Calibrating | Set to 1 when calibration data acquisition finishes. |

4.5 Device Status Register

The table below shows the assignments of the condition register.

| bit | | Description |
|--------|---------------------|---------------------------------------|
| 0 | Cooling Fan Stopped | Sets to 1 when the cooling fan stops. |
| Others | | Always 0 |

4.6 Power Status Register

4.6 Power Status Register

The table below shows the assignments of the condition register.

| bit | | Description |
|--------|--------------------|---|
| 0 | Input-R Overloaded | Sets to 1 when the input-R is overloaded. |
| 1 | Input-R Tripped | Sets to 1 when the protection circuit of the input-R is in operation. |
| 2 | Input-A Overloaded | Sets to 1 when the input-A is overloaded. |
| 3 | Input-A Tripped | Sets to 1 when the protection circuit of the input-A is in operation. |
| 4 | Input-B Overloaded | Sets to 1 when the input-B is overloaded. |
| 5 | Input-B Tripped | Sets to 1 when the protection circuit of the input-B is in operation. |
| Others | | Always 0 |

Event register latches the change of the corresponding condition register 0 → 1. That is, 1 is set when the input is overloaded (or the protection circuit are put into operation).

4.7 Frequency Status Register

The table below shows the assignments of the condition register.

| bit | | Description |
|--------|----------------------|--|
| 0 | Local 1 Unlocked | Sets to 1 when the local 1 is unlocked. |
| 1 | Local 2 Unlocked | Sets to 1 when the local 2 is unlocked. |
| 2 | Synthe Unlocked | Sets to 1 when the synthesizer is unlocked. |
| 3 | External Standard In | Sets to 1 when the external standard frequency is input. |
| 4 | VCXO Unlocked | Sets to 1 when VCXO is unlocked. |
| Others | | Always 0 |

Event register latches the change of the corresponding condition register 0 → 1. That is, 1 is set when the lock is unlocked.

4.8 Limit Status Register

4.8 Limit Status Register

The table below shows the assignments of the condition register.

| bit | | Description |
|-----|----------------------|--|
| 0 | CH1 1st Limit Failed | Sets to 1 when the first waveform of the channel 1 is FAIL. |
| 1 | CH1 2nd Limit Failed | Sets to 1 when the second waveform of the channel 1 is FAIL. |
| 2 | CH2 1st Limit Failed | Sets to 1 when the first waveform of the channel 2 is FAIL. |
| 3 | CH2 2nd Limit Failed | Sets to 1 when the second waveform of the channel 2 is FAIL. |
| 4 | CH3 1st Limit Failed | Sets to 1 when the first waveform of the channel 3 is FAIL. |
| 5 | CH3 2nd Limit Failed | Sets to 1 when the second waveform of the channel 3 is FAIL. |
| 6 | CH4 1st Limit Failed | Sets to 1 when the first waveform of the channel 4 is FAIL. |
| 7 | CH4 2nd Limit Failed | Sets to 1 when the second waveform of the channel 4 is FAIL. |

Event register latches the change of the corresponding condition register 0 →1. That is, 1 is set when the FAIL arose in each waveform.

4.9 SRQE/SRQD Operation

The analyzer incorporates an expansion in the service request system to support R3762/63 compatible mode (this expansion is not specified in IEEE standard 488.2-1987). The items described here are not applicable to the IEEE488.2-1987 command mode.


In R3762/63, the SRQE/SRQD command is used to permit or inhibit service requests. Since IEEE standard 488.2-1987 uses a status data structure, the enable register can be used to permit or inhibit the service requests. However, the enable register cannot perform exactly the same functions as the SRQE/SRQD command because of the nature of the register (that is, if the enable register is set to "enable" when its factor is 1, a request will be generated), IEEE standard 488.2-1987 has been expanded only for the SRQE/SRQD signal in R3762/63 command mode.

The SRQE/SRQD command in IEEE488.1-1987 command mode operates as RQS enable/disable of the status data structure. The SRQE command ignores existing requests and does not issue a request. It sends an RQS message to the controller only when a new MSS occurs. The SRQD command always stops generating the RQS message. If the SRQD command and the SRQE command are executed continuously when the RQS state is TRUE, the RQS state will be set to FALSE. Since the controller cannot read out the RQS state at that time, a serial poll must be performed on the analyzer before executing the SRQD command if it is necessary to use the RQS state.

4.10 Notice on the status byte

4.10 Notice on the status byte

There are two output paths for a status byte as shown below:

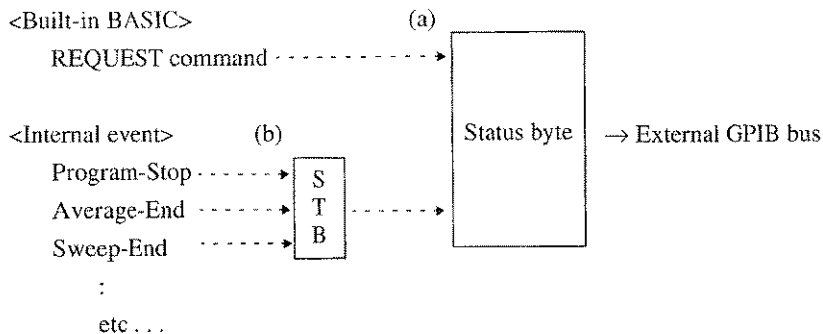

- (a) This is a status byte which is output through the external GPIB bus. This byte can be read out by using the serial poll (the bit 6 of RQS is set to 0 (zero) when read out).
- (b) Corresponds to the status register for the internal event. This register's contents can be read out by executing " * STB?" (Bit 6 (MSS) will not change when this is done).

NOTE:

1. The output of (a) is the one most recently stored (by either the <Built-in BASIC> or the <Internal event>).
2. When executing the REQUEST command under <Built-in BASIC>, the specified value is immediately saved to (a).
When executing a command under <Internal event>, the specified value is saved to (a) if any changes in (b) are detected.
3. Bit changes in (b) can be masked (except the MAV bit (Bit = 4)) by setting enable registers for each register up to (b).
The MAV bit is set to "1" when receiving a query command; "0" when outputting (including executions of the <Built-in BASIC>). In other words, there is a bit change each time a query command is executed.
The contents of (b) have precedence over the REQUEST command when a query command is executed before sending the contents of (a) (which has already been set by the REQUEST command) via a serial poll.
4. The status byte is always cleared by executing " * CLS" followed by "REQUEST 0".
" * CLS" is effective for register groups up to (b). So the bit status of (a) cannot be changed if (b) is already "0" (zero) (because there are no changes in (b), (a) stays unchanged).


5. TRIGGER SYSTEM

This chapter describes the trigger system.

The trigger system is used to synchronize measurement with a specified event. The event may be a GET interface message, a GPIB command such as the *TRG command, or an external trigger signal. The delay time from an event to the start of measurement can also be specified using the trigger system.

5.1 Trigger Model

The following shows the model of the trigger system for the analyzer.

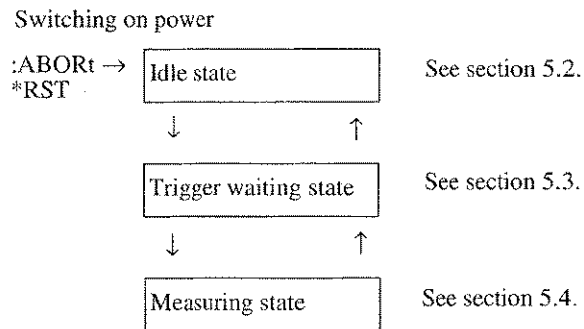


When the analyzer is switched on or when the :ABORt command or the *RST command is executed, the trigger state changes to the idle state. The idle and trigger waiting states wait for conditions that are required for measurement.

5.2 Idle State

5.2 Idle State

When the analyzer is switched on, the trigger system of the analyzer changes to the idle state. Also, the execution of the :ABORt command or the *RST command forcibly changes the trigger system to the idle state. The state changes as follows:

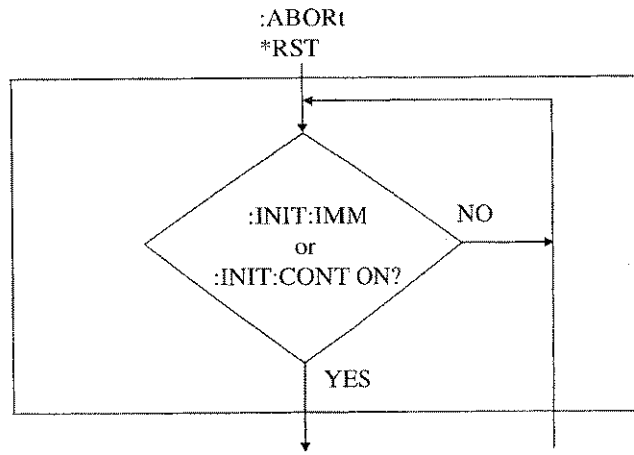


The trigger system does not leave this state until INITiate [:IMMediate] or INITiate:CONTInuous ON. Either of these conditions changes the trigger system to the trigger waiting state.

NOTE: Since the execution of the *RST command sets INITiate:CONTInuous to OFF, measurement stops.

When the trigger system exits the idle state, the operation pending flag of the analyzer is always set. Also, when the analyzer enters in the idle state, the operation pending flag is cleared. *OPC, *OPC? and *WAI refer to the operation pending flag.

5.3 Trigger Waiting State

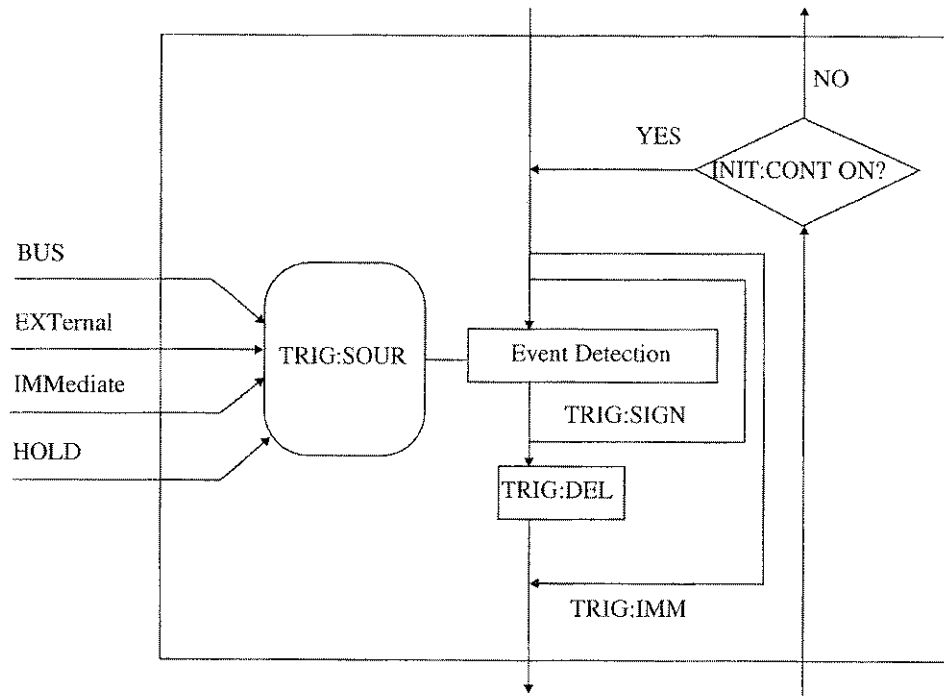


The above is a flowchart of the trigger waiting state of the analyzer. The TRIGger:SOURce command sets the trigger source, and the event detection detects a trigger factor. When the analyzer is triggered and leaves the event detection state, it enters the next state after the time specified by the TRIGger:DELay command has elapsed.

If the analyzer receives the TRIGger:SIGNal command in the trigger waiting state, it will enter the measuring state immediately without entering the event detection state. If it receives the TRIGger [:IMMEDIATE] command in the trigger waiting state, it will enter the measuring state immediately without entering the TRIGger:DELay state.

If the INITiate:CONTinuous signal is set to OFF when the analyzer exits the measuring state, the analyzer will not return to the idle state but will directly enter the next trigger waiting state.

5.4 Measuring State

5.4 Measuring State

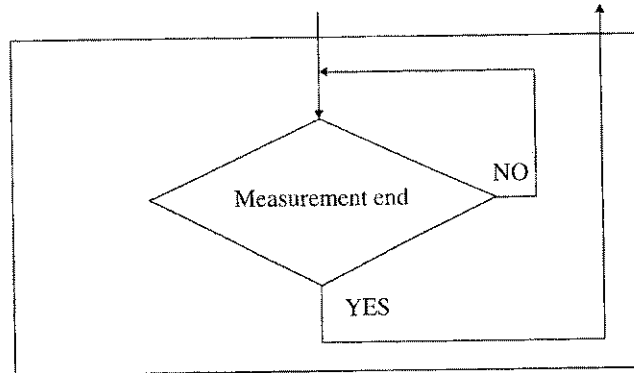

The analyzer performs measurement in this state. When the analyzer enters the measuring state, it performs sweeping and acquires measurement data.

5.5 IEEE488.1-1987 Command Mode

When the analyzer is in IEEE488.1-1987 command mode, it cannot utilize all of the functions for the trigger system described above. It can utilize only the following four macro commands for the trigger system.

The actual operations of each command in IEEE488.2-1987 command codes are shown on the right. They differ slightly from those used in the actual operation.

| | |
|--------|---|
| CONT | INITiate:CONTInuous ON |
| SINGLE | INITiate:CONTInuous OFF;:ABORt;INITiate |
| MEAS | ABORt;INITiate |
| SWPHLD | INITiate:CONTInuous OFF;:ABORt |

6. SAMPLE PROGRAMS

The following are three sample programs:

- Program 1
Inputs the center frequency and the span frequency, obtains in levels at all points of the waveform, and substitutes them for variables. After obtaining in all the levels, displays them in the order of 1 to 1201.
- Program 2
This is a basic program which performs sweeping once, waits until it has received an SRQ signal indicating the sweeping end while forming a loop, and exits the loop and proceeds to the next loop on receiving the SRQ signal.
- Program 3
Inputs the center frequency and the span frequency, searches for a maximum level of the waveform and the frequency at the maximum level, and displays the result.

6. SAMPLE PROGRAMS

• Program 1

```
100 !*****
110 !*
120 !* BINARY DATA TRANSFER *
130 !* TEST PROGRAM *
140 !*
150 !*****
160 !
170 DIM DA(1201)
180 INTEGER N,LP
190 ADD=31
195 OUTPUT ADD;"OLDC OFF"
200 OUTPUT ADD;"DISP:ACT 1;:CALC:FORM MLOG"
210 OUTPUT ADD;"SWE:POIN 1201"
220 OUTPUT ADD;"INIT:CONT OFF"
230 CLS
240 INPUT "CENTER FREQ ? [MHz] =",CF
250 INPUT "SPAN FREQ ? [KHz] =",SP
260 OUTPUT ADD;"FREQ:CENT ",CF,"MHz"
270 OUTPUT ADD;"FREQ:SPAN ",SP,"KHz"
280 OUTPUT ADD;"FREQ:STAR?"
290 ENTER ADD:STA
300 OUTPUT ADD;"FREQ:STOP?"
310 ENTER ADD:STP
320 P1=POINT1(STA,0)
330 P2=POINT1(STP,0)
340 N=TRANSR(P1,P2,DA(1),0)
350 FOR LP=1 TO 1201
360 PRINT "POINT ";(LP-1);" = ";DA(LP)
370 NEXT LP
380 PRINT "DATA COUNT = ";N
390 STOP
```

| Line | Description |
|------------|---|
| 100 to 160 | Comment lines. |
| 170 | Declares the variable arrangement (waveform data are substituted). |
| 180 | Declares the variable to be an integer. |
| 190 | Substitutes the address of the network analyzer for the variable. |
| 195 | Sets the IEEE488.2-1987 command mode. |
| 200 | Sets the format of channel 1 to LOGMAG. |
| 210 | Sets the measurement point to 1201. |
| 220 | Sets the sweeping to the single mode. |
| 230 | Deletes characters on the display. |
| 240 | Inputs the center frequency and substitutes it for the variable (unit: MHz). |
| 250 | Inputs the span frequency and substitutes it for the variable (unit: kHz). |
| 260 | Sets to the input center frequency. |
| 270 | Sets to the input span frequency. |
| 280 | Takes in the start frequency from the analyzer. |
| 290 | Substitutes the taken-in value for the variable. |
| 300 | Takes in the stop frequency from the analyzer. |
| 310 | Substitutes the taken-in value for the variable. |
| 320 | Converts the taken-in start frequency into an address point. |
| 330 | Converts the taken-in stop frequency into an address point. |
| 340 | Substitutes the waveform data (LOGMAG) for the variable. [Data at address point 0 = DA (1): up to 1200 below] |
| 350 | Displays data from 1 to 1201 in that order. |
| 360 | Displays the variable DA (1 to 1201) for which waveform data are substituted on the display. |
| 370 | Repeats until the LP reaches 1201. |
| 380 | Finally displays the number of times that data are transferred (1201 times). |
| 390 | Program ends. |

6. SAMPLE PROGRAMS

- Program 2

```
100 !*****
110 !*          *
120 !* SRQ SWEEP TEST *
130 !*          *
140 !*****
150 !
160 CLS
162 OUTPUT 31;"OLDC OFF"
165 OUTPUT 31;"STAT:OPER:ENAB 8"
170 OUTPUT 31;"SWE:POIN 1201"
180 OUTPUT 31;"SWE:TIME 1S"
190 OUTPUT 31;"INIT:CONT OFF::ABOR"
200 INPUT "HIT ENT KEY TO SWEEP START !",DUMMYS
210 GOSUB *SWP
220 PRINT "SWEEP TEST FINISHED !!!"
230 STOP
240 !
250 !*****
260 !
270 *SWP
280 ON ISRQ GOTO *PATH
290 OUTPUT 31;"*SRE 128":SPOLL(31)
300 ENABLE INTR
310 OUTPUT 31;"INIT"
320 *LOOP
330 GOTO *LOOP
340 !
350 *PATH
360 SPOLL(31):DISABLE INTR
370 OUTPUT 31;"*SRE 0"
380 RETURN
```



| Line | Description |
|------------|---|
| 100 to 150 | Comment lines. |
| 160 | Deletes characters on the display. |
| 162 | Sets the IEEE488.2-1987 command mode. |
| 165 | Enables bit 3 (Sweep End) of OPER status. |
| 170 | Sets measurement point of network analyzer to 1201. |
| 180 | Sets the sweeping time to one second. |
| 190 | Sets the sweeping to the single mode. |
| 200 | Displays a comment on the CRT. (Go to next with ENTER key.) |
| 210 | Calls subroutine (*SWP). |
| 220 | Displays a comment on the CRT. |
| 230 | Program ends. |
| 240 | Comment line |
| 250 | Comment line |
| 260 | Comment line |
| 270 | Subroutine (*SWP) |
| 280 | On receiving ISRQ, go to *PATH. |
| 290 | Enables SRQ transmission of the standard operation status register. |
| 300 | Permits reception of interruption. |
| 310 | Sets the sweeping to the single mode. (In this case, performs sweeping once.) |
| 320 | *LOOP |
| 330 | Goes to *LOOP.(Forms a loop until an ISRQ is received.) |
| 340 | Comment line |
| 350 | *PATH (Jump destination name when an ISRQ is received.) |
| 360 | Inhibits reception of interruptions. |
| 370 | Inhibits transmission of all SRQ commands. |
| 380 | Returns to the point where the subroutine (*SWP) was called. |

6. SAMPLE PROGRAMS

- Program 3

```
100 !*****
110 !*
120 !* MAX SEARCH SAMPLE PROGRAM *
130 !*
140 !*****
150 !
155 OUTPUT 31;"OLDC OFF"
160 OUTPUT 31;"DISP:ACT 1;:CALC:FORM MLOG"
170 OUTPUT 31;"SWE:POIN 1201"
180 OUTPUT 31;"SWE:TIME 1S"
190 CLS
200 INPUT "ENTER CENTER FREQ ? [MHz] =",CF
210 INPUT "ENTER SPAN FREQ ? [KHz] =",SF
220 OUTPUT 31;"FREQ:CENT ",CF,"MHz"
230 OUTPUT 31;"FREQ:SPAN ",SF,"KHz"
240 OUTPUT 31;"FREQ:STAR?"
250 ENTER 31;S1
260 OUTPUT 31;"FREQ:STOP?"
270 ENTER 31;S2
280 PO1=POINT1(S1,0)
290 PO2=POINT1(S2,0)
300 FR=FMAX(PO1,PO2,0)
310 LV=MAX(PO1,PO2,0)
320 FR=FR/10-6
330 PRINT "***** PROGRAM RESULT *****"
340 PRINT "MAX FREQ [MHz] = ";FR
350 PRINT "MAX LEVEL [dB] = ";LV
360 STOP
```

| Line | Description |
|------------|--|
| 100 to 150 | Comment lines. |
| 155 | Sets the IEEE488.2-1987 command mode. |
| 160 | Sets channel 1 of network analyzer to LOGMAG. |
| 170 | Sets the number of measurement points to 1201. |
| 180 | Sets the sweeping time to one second. |
| 190 | Deletes characters on the display. |
| 200 | Inputs the center frequency and substitutes it for the variable (unit: MHz). |
| 210 | Inputs the span frequency and substitutes it for the variable (unit: kHz). |
| 220 | Sets to the input center frequency. |
| 230 | Sets to the input span frequency. |
| 240 | Takes in the start frequency from the analyzer. |
| 250 | Substitutes the taken-in value for the variable. |
| 260 | Takes in the stop frequency from the analyzer. |
| 270 | Substitutes the taken-in value for the variable. |
| 280 | Converts the taken-in start frequency into an address point. |
| 290 | Converts the taken-in stop frequency into an address point. |
| 300 | Searches for the frequency with the maximum response (level) in the bandwidth. |
| 310 | Searches for the maximum response (level) in the bandwidth. |
| 320 | Converts the searched-for value into a value in MHz. |
| 330 | Displays a comment on the display. |
| 340 | Displays a comment and the frequency value of the maximum response. |
| 350 | Displays a comment and the maximum response value. |
| 360 | Program ends. |

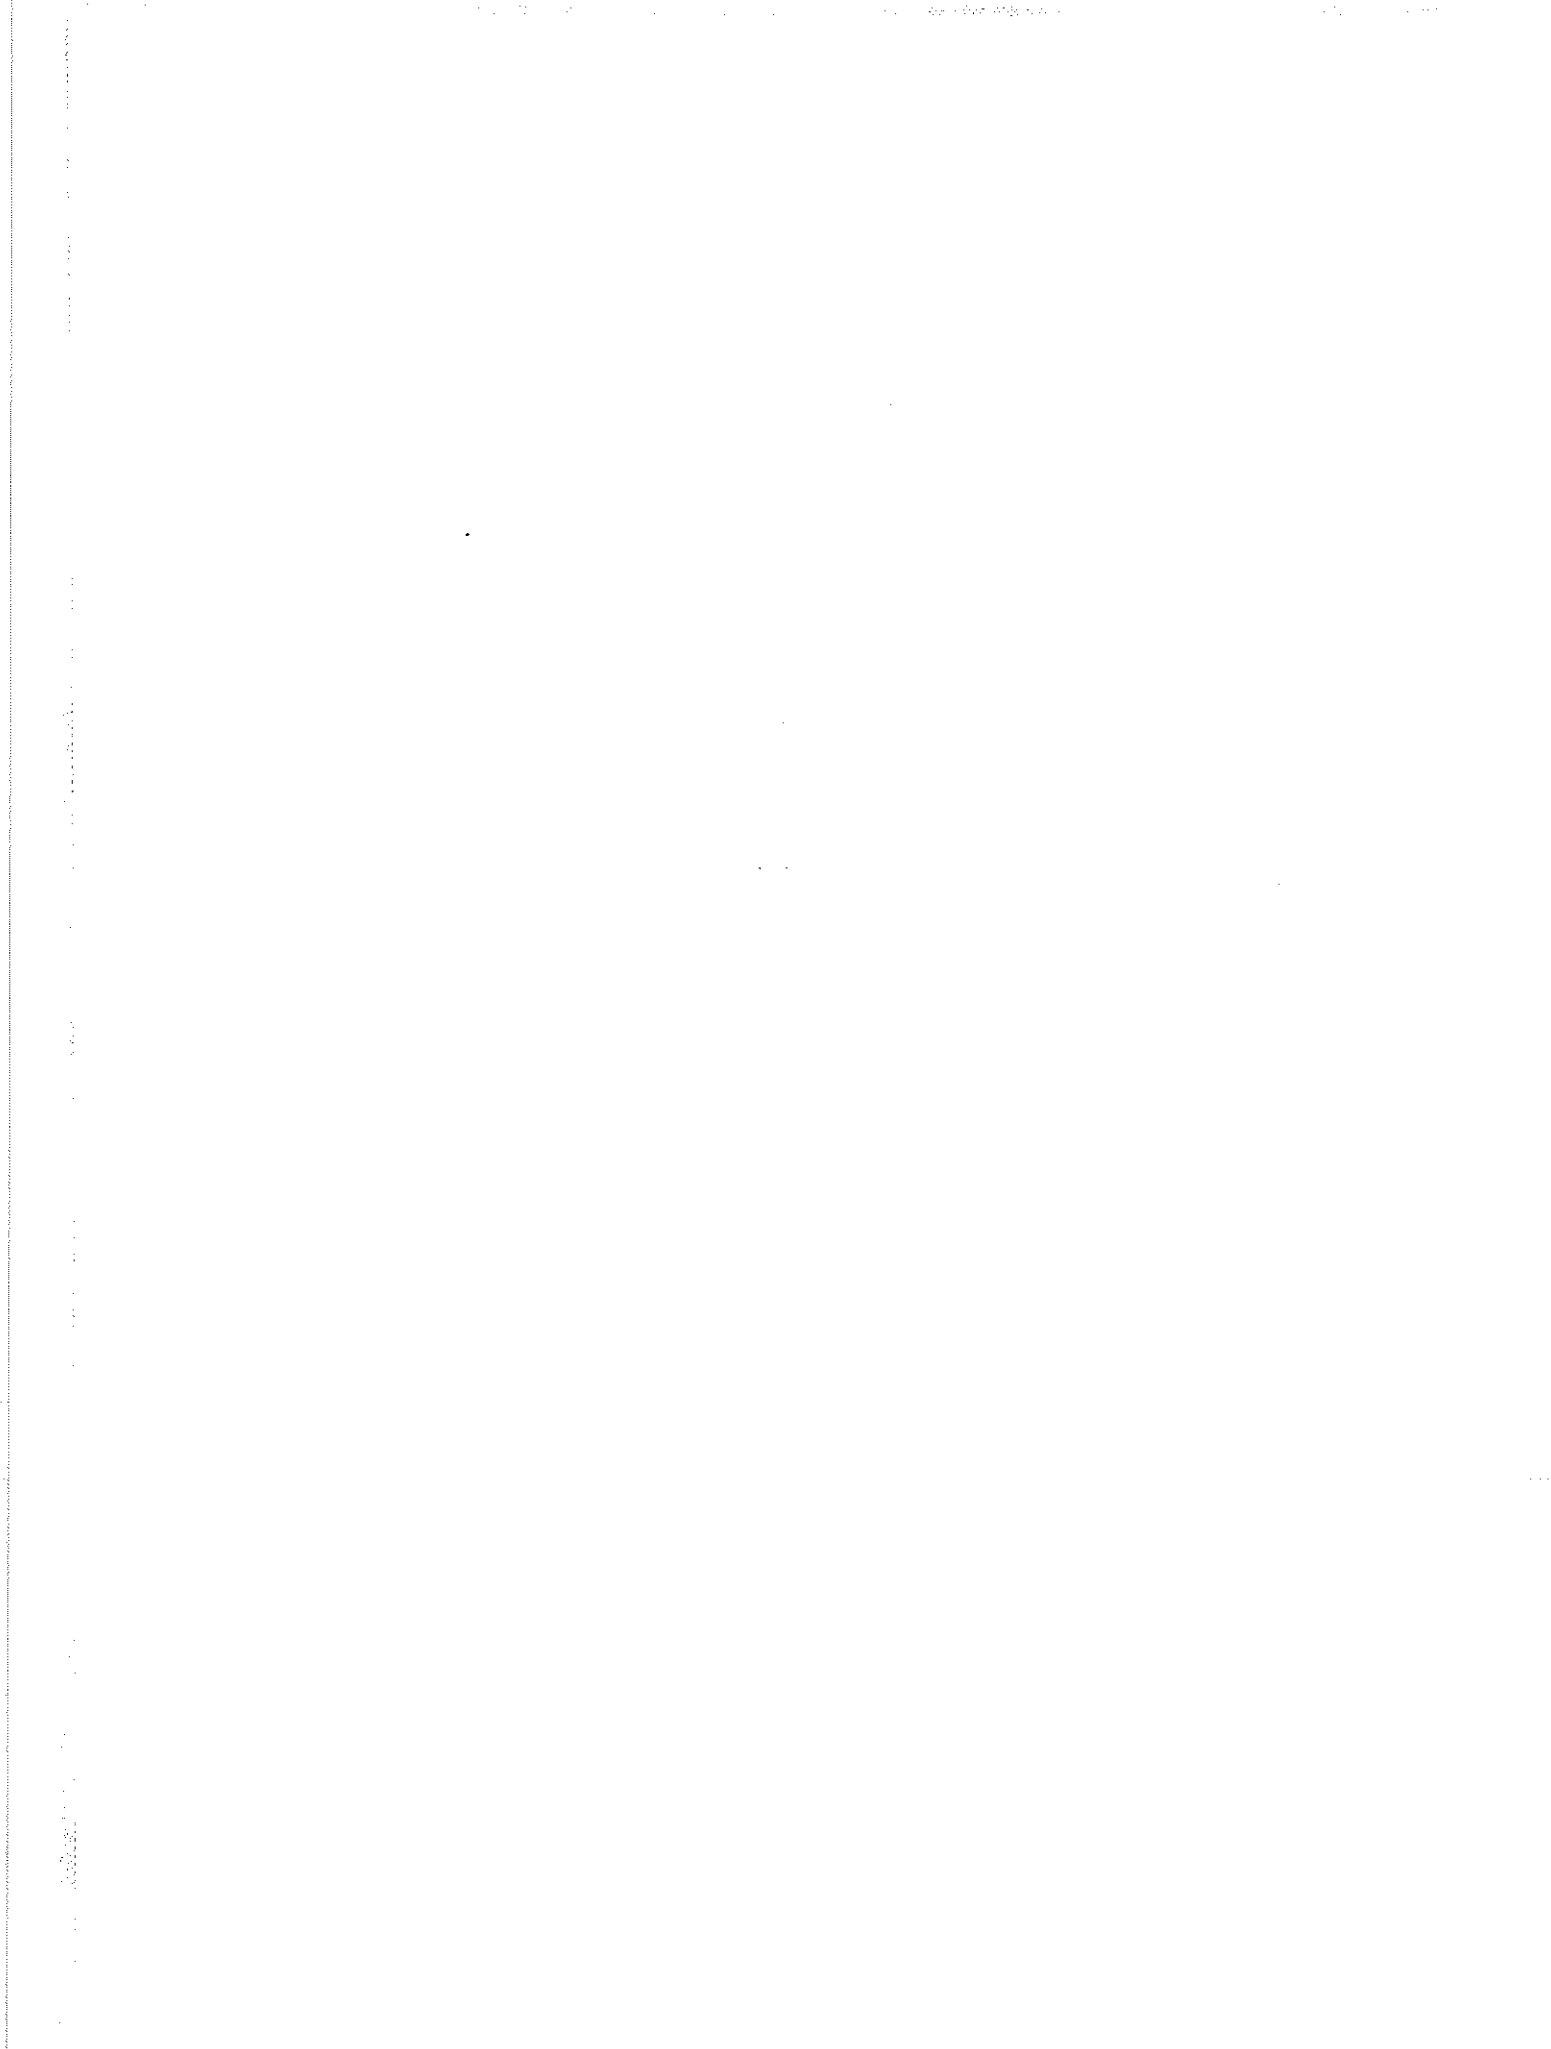

7. COMMAND REFERENCE

This chapter explains the program for all the remote commands of the analyzer (command syntax, or query syntax, or both), formats of response data (when there is a query), and other details.

NOTE:

1. *When referring to a command, note that part of the command mnemonic can be omitted.*
Example: Although the following two commands have different syntax, they function in the same way:
SOURCE:SWEEP:TIME IS
SWEEP:TIME IS
 2. *If you were unable to find this command in the command references using a description of SWEEP:TIME, search for a complete description of the command using the attached command list, then refer to the references. If you have a complete description of the command, you can search for it in the table of contents.*
-

The commands are grouped in the following subsystems:

- Common commands : Commands used by all the instruments to perform a unique function.
- ABORt subsystem : Commands used for resetting the trigger system.
- CALCulate subsystem : A group of commands used to determine how measurement data received is processed. Commands for setting measurement formats, and so on are included.
- DISPlay subsystem : A group of commands related to various displays, including displays of measurement data. The commands used to switch channel displays, and so on are included.
- FILE subsystem : A group of commands related to saving measurement data or setup information to files, or to retrieving measurement data or setup information from those files. Commands such as Store file, Load file, and so on are included.
- INITiate : Command used to start the trigger system.
- REGister subsystem : A group of commands related to saving measurement data or setup information to registers, or to reproducing measurement data or setup information from those registers.
- SENSE subsystem : A group of commands used with the measurement section, including commands for setting calibration data, and so on.
- SOURce subsystem : A group of commands used with the signal source, including commands for setting the sweep types, and so on.
- STATus subsystem : A group of commands related to the status register.
- SYSTem subsystem : Commands that do not affect the measurement system. Commands for system initialization, clock setting, and so on are included in this sub system.
- TRACe subsystem : Commands related to the internal data arrangement. Commands for arranging input and output data, and so on are included.
- TRIGger subsystem : Commands related to triggers. Commands for turning the trigger on and so on are included.
- MARKer subsystem : Commands related to markers. Commands for turning the markers ON or OFF, and so on are included.

7. COMMAND REFERENCE

- FETCh?** subsystem : Commands used for obtaining analysis results. Commands for obtaining the measurement values at marker locations are also included.
- LIMit** subsystem : Commands related to the limit test. Commands for turning the limit test ON or OFF, and so on are included.
- TRANsform** subsystem : Commands related to the time domain transformation function. Commands for turning the time domain display ON or OFF, etc. are included (these command are only available when Option 70 has been installed).
- GATE** subsystem : Commands related to the Gate function. Commands for turning the Gate function ON or OFF, etc. are included (these command are only available when Option 70 has been installed).
- CDMA** subsystem : Commands related to the CDMA IF filter analysis. Commands for turning the CDMA filter analysis gate ON or OFF, and so on are included.

7.1 Command Description Format

The following are detailed descriptions used with IEEE488.2-1987 and IEEE488.1-1987 command modes. The following precautions should be taken:

CAUTION:

1. *The command modes are described using the following expression:*
R3267/63 command : IEEE488.1-1987 command
R3764/66, R3765/67 command : IEEE488.2-1987 command
2. *The command and response data formats are described using the following symbols:*
 \diamond : *Indicates an element of syntax. The contents are written after the symbol.*
 |: *Indicates selection of one item from among multiple items.*
Example: A | B | C Means that A, B, or C is selectable.
 []: *Indicates that the enclosed item is an option (omissible).*
 {}: *Indicates that the enclosed item is a group of selections separated by | and that you can select one of them.*
3. *The headings mean the following:*
Command/Query: Indicates that both a command and a query are available.
Command: Indicates that only a command is available.
Query: Indicates that only a query is available.
4. *A mnemonic with four characters or more has a short form. In this document, upper-case characters indicate the short form.*
Example: SOURce:SWEep:TIM
short form: SOUR, SWE
long form: SOURCE, SWEEP
Since the term "TIME" consists of four characters, there is no difference between its short form and its long form.
5. *Query commands must have "?" as their header. For a query which requires parameters, the query format must be described.*
6. *The parameter formats commonly used in this chapter are as follows:*
 $\langle int \rangle$: *This is numeric data and can be input in NR1, NR2, or NR3 format. When the analyzer has received the data, they are rounded to a whole number.*
 $\langle real \rangle$: *This is numeric data and can be entered in NR1, NR2, or NR3 format. When the analyzer has received the data, they are rounded to a real number with the valid number of digits.*
 $\langle bool \rangle$: *On/off switch (0: OFF; 1: ON)*
 $\langle str \rangle$: *Character string Indicates an alphanumeric symbol enclosed by " or '. (For IEEE488.1-1987 commandmode, do not use " and '.)*
 $\langle block \rangle$: *Block data type*
The contents of data are eight-bit binary data strings.

For the format, refer to the description of IEEE488.2-1987 command mode.
7. *The parameters to be added to a part of the parameter header are shown below. They are commonly used for each command.*
 $\langle chno \rangle$: 0: *active channel*
 1: *Channel 1*
 2: *Channel 2*
 3: *Channel 3*
 4: *Channel 4*
(Note) It causes error to specify 3 or 4 for $\langle chno \rangle$ when sub-measure is OFF.

7.1 Command Description Format

<trace>: Analysis channel

(Note) For the command which can specify this, the specifications of *<chno>* are ignored. In these analysis channels, the channels which can be specified are limited by the command kinds.

| CH1 | CH2 | CH3 | CH4 | |
|-----|-----|-----|-----|--|
| 0 | 1 | 4 | 5 | ; Display data (The first waveform) |
| 2 | 3 | 6 | 7 | ; Memory data (The first waveform) |
| 8 | 9 | 12 | 13 | ; Display data (The second waveform) |
| 10 | 11 | 14 | 15 | ; Memory data (The second waveform) |
| 32 | 36 | 48 | 52 | ; LOGMAG data |
| 33 | 37 | 49 | 53 | ; Phase data |
| 34 | 38 | 50 | 54 | ; LOGMAG data of memory |
| 35 | 39 | 51 | 55 | ; Phase data of memory |
| 40 | 44 | 56 | 60 | ; Real part |
| 41 | 45 | 57 | 61 | ; Imaginary part |
| 42 | 46 | 58 | 62 | ; Real part of memory |
| 43 | 47 | 59 | 63 | ; Imaginary part of memory |
| | | | | (Hereafter, complex number data) |
| 128 | 192 | 256 | 320 | ; Data array before formatted |
| 129 | 193 | 257 | 321 | ; Data array |
| 130 | 194 | 258 | 322 | ; Memory array |
| 131 | 195 | 259 | 323 | ; Raw data array |
| 133 | 197 | 261 | 325 | ; Normalized standard data array |
| 134 | 198 | 262 | 326 | ; Direction error coefficient array |
| 135 | 199 | 263 | 327 | ; Source match error coefficient array |
| 136 | 200 | 264 | 328 | ; Reflection tracking error coefficient array |
| 137 | 201 | 265 | 329 | ; Forward direction: Directive error coefficient array |
| 138 | 202 | 266 | 330 | ; Forward direction: Source match error coefficient array |
| 139 | 203 | 267 | 331 | ; Forward direction: Reflection tracking error coefficient array |
| 140 | 204 | 268 | 332 | ; Forward direction: Load match error coefficient array |
| 141 | 205 | 269 | 333 | ; Forward direction: Transmission tracking error coefficient array |
| 142 | 206 | 270 | 334 | ; Forward direction: Isolation error coefficient array |
| 143 | 207 | 271 | 335 | ; Reverse direction: Directive error coefficient array |
| 144 | 208 | 272 | 336 | ; Reverse direction: Source match error coefficient array |
| 145 | 209 | 273 | 337 | ; Reverse direction: Reflection tracking error coefficient array |
| 146 | 210 | 274 | 338 | ; Reverse direction: Load match error coefficient array |
| 147 | 211 | 275 | 339 | ; Reverse direction: Transmission tracking error coefficient array |
| 148 | 212 | 276 | 340 | ; Reverse direction: Isolation error coefficient array |

<input>: 1: R channel
 2: A channel
 3: B channel
 4: C channel

<port>: 1: PORT 1
 2: PORT 2
 3: PORT 3
 4: PORT 4

<eport>: 1: *R channel*
2: *A channel*
3: *B channel*
4: *PORT 1*
5: *PORT 2*
6: *PORT 3*
7: *C channel*
8: *PORT 4*

<n>: n: *Integer value defined by each command*

Example: To set the measurement format of channel 1 to MLOG using CALCulate[<chno>]:FORMat, input the following:

CALCulate1:FORMat MLOG

<parano>: *In case that the display format is the type of rectangular coordinates.*

1: *Main trace*

2: *Sub trace*

In case that the display format is the type of polar coordinates

1: *Amplitude or real part*

2: *Phase or imaginary part*

7.2 Common Commands

7.2 Common Commands

| | | |
|----|------|-------------------------------------|
| 1. | *CLS | IEEE488.1-1987 command mode
*CLS |
|----|------|-------------------------------------|

- **Function** Clearing status byte and related data
- **Presence of command and query** Command
- **Command** *CLS
- **Description**

The *CLS command clears the status data structure and forcibly cancels *OPC and *OPC?. It also clears the error queue.

Since this command does not clear the output buffer, the MAV bit is not cleared when output data is present.

If this command is executed at the beginning of the line, all the status bits, including the MAV status bit, are cleared.

The *CLS command also clears the error queue.

The status byte (which was set by the REQUEST command in the Built-in BASIC) cannot be cleared by "* CLS". "* CLS" can be used to clear the status byte register whenever its contents are not zero. If you first execute "* CLS" and then execute "REQUEST 0" from BASIC when using the REQUEST command.

2. *DDT

- Function Macro definition for GET
- Presence of command and query Command / Query
- Command *DDT <block>
- Parameter <block>
- Response type <block>
- Description

The *DDT command defines the command sequence which is to be executed when the *TRG interface message or the *GET interface message is received. That is, it replaces the *TRG operation with a series of commands which has been written into the <block> data. The length of the sequence to be defined must not exceed 255 characters.

If the *DDT command defines block data (#10) with a length of 0, the *TRG interface message or the GET interface message will execute nothing. The macro can be canceled by executing the *RST command.

Block data are used to respond a query. If the *DDT? command is executed with the macro not yet defined, block data (#10) with a length of 0 will be returned.
- Caution

Do not use the *TRG interface message in this definition. If it is used in the definition with the *DDT command, the sequence set by the *DDT command will be called instead of the trigger, and thus an endless loop will be formed. (Actually, a macro error will occur because of nesting limitation.)
- Example

When the *DDT command is #214INIT;TRIG:SIGN, *TRG replaces INIT;TRIG:SIGN.

7.2 Common Commands

3. *DMC

- Function Macro definition
- Presence of command and query Command
- Command *DMC <str>,<block>
- Parameter <str>
<block>
- Description

The *DMC command defines the command sequence in the macro label specified by <str>. When <str> is received, the definition allows the system to operate as if it has received <block> itself. (However, *EMC must be 1.)

A hierarchical command can be used for this macro label. In addition, it is possible to overwrite the macro on R3764/66, R3765/67 command defined in advance. (However, it is not possible to overwrite on the common command.) Then, when the macro is enabled by *EMC 1, the system will perform the original operation by disabling a series of commands which has been replaced with the macro using *EMC 0. Use the *PMC command to delete the macro which has been defined by the *DMC command. Once registered, a macro cannot be re-registered until it has been cleared by the *PMC command.

Follow the grammar of R3764/66, R3765/67 command to write the macro body. Up to nine parameters (\$1 to \$9) can be given to the macro command. "1" must be given to the parameter following the macro command, "2" to the next parameter, and so on. Also, the macro definition can include the macro. Up to nine levels of nesting are supported. Up to 30 macros can be registered as new macros (depending on the condition).

See *PMC, *GMC?, *LMC? and *EMC.
- Example

When the *DMC command is "SWPINIT", #221FREQ:START \$1;STOP \$2, SWPINIT 100MHZ,500MHZ replaces FREQ:START 100MHZ:STOP 500MHZ.

4. *EMC
- Function Permission for macro execution
 - Presence of command and query Command / Query
 - Command *EMC<int>
 - Parameter <int>
 - Response type 0 | 1
 - Description

The *EMC command permits (1) or inhibits (0) the execution of the macro.

This command does not affect the contents of the macro definition. It is used to execute an original command which has been overwritten by the macro.

*RST inhibits the execution of the macro.

See *DMC, *PMC, *GMC? and *LMC?.
5. *ESE IEEE488.1-1987 command mode
*ESE
- Function Setting of standard event status enable register
 - Presence of command and query Command / Query
 - Command *ESE <int>
 - Parameter <int>
 - Response type NR1 (integer value)
 - Description

The *ESE command sets the enable register in the standard event status register. The standard event status register corresponding to the bit set to 1 in this register is reflected in the status byte register as a valid bit.

For details, see the description of the status data structure and *ESR?.
 - Example

When the operation control bit (bit 3) and the device dependent error bit (bit 0) are set to "enable", calculate:

$$2^3 + 2^0 = 8 + 1 = 9$$
 and set *ESE 9.

7.2 Common Commands

6. *ESR? IEEE488.1-1987 command mode *ESR?

- Function Readout of standard event status register
- Presence of command and query Query
- Query *ESR?
- Response type NR1 (integer value)
- Description The *ESR command reads out the standard event status register value. When the register is read out, it is cleared and the corresponding bit (bit 5) of the status byte is cleared.
For details, see the description of the status data structure.

Table Standard Event Register Assignmen

| bit | | Description |
|-----|------------------------|--|
| 7 | Power on | Set to 1 when the system is switched on |
| 6 | | Always 0 |
| 5 | Command Error | Set to 1 when the purser detects a grammar error |
| 4 | Execution Error | Set to 1 when the system fails to execute the instruction which has been received as a GPIB command for some reason (such as parameter out of range) |
| 3 | Device Dependent Error | Set to 1 when an error other than a command error, an execution error, or a query error occurs |
| 2 | Query Error | Set to 1 if there are no data or if data have been deleted when the controller attempts to read out data from the analyzer |
| 1 | Request Control | Set to 1 when the analyzer is required to be active controller |
| 0 | Operation Control | Set to 1 when the analyzer has no command to be executed after it has received the *OPC command |

7.

*GMC?

- Function Query of macro definition
- Presence of command and query Query
- Query *GMC? <name>
- Parameter <name>
- Response type <block>
- Description The *GMC? command reads out the macro definition specified by <name>. If the command reads out an undefined <name> macro, block data (#10) with a length of 0 will be returned. See *DMC, *PMC?, *LMC? and *EMC.

8.

*IDN?

IEEE488.1-1987 command mode
IDNT?

- Function Query of devices
- Presence of command and query Query
- Query *IDN?
IDNT?
- Response type "<manufacturer>,<model>,<serial number>,<firmware level>"
<manufacturer> = ADVANTEST
<model> = Model name
<serial number> = Serial number
<firmware level> = System version
- Description The *IDN? extracts system identification information. This command outputs four items in the character string format, as shown in the response format above.

7.2 Common Commands

9. *LMC?

- Function Readout of all macros
- Presence of command and query Query
- Query *LMC?
- Response type "<macro label>"["<macro label>"...]
<macro label> = Macro header
- Description Answers all the macro headers in the character string format.
When multiple macros are defined, they are separated by ",". If there is no defined macro, the system responds with a character string with a length of 0 ("").
See *DMC, *PMC, *GMC? and *EMC.

10. *OPC

IEEE488.1-1987 command mode
*OPC

- Function Notification of end of all operations in progress
- Presence of command and query Command / Query
- Command *OPC
- Response type 1
- Description The *OPC command sets the 'Operation Control' bit of the standard event status register to 1 when all commands being executed have been completed. If the next command is received before the command being executed finishes, the *OPC command waits until the execution of that command has been completed. Therefore, if the analyzer does not execute a command after receiving the *OPC command, the status register will be set.
The *OPC? writes 1 into the output buffer while the *OPC command above sets the 'Operation Control' bit. Therefore, the *OPC? command allows the command to be finished when the controller receives the response from the analyzer.
Both *OPC and *OPC? can be canceled by using a DCL interface message, the *CLS command, or the *RST command.
See *WAI.

11. *PCB IEEE488.1-1987 command mode
*PCB

- Function Setting of the GPIB address used to return the right of control
- Presence of command and query Command
- Command *PCB <primary>[,<secondary>]
- Parameter <primary>
<secondary>

NOTE: In IEEE488.1-1987 command mode, <secondary> cannot be input and must always be omitted.

- Description The *PCB command sets the address of the external controller to which the analyzer is connected.

12. *PMC

- Function Deletion of all macro definitions
- Presence of command and query Command
- Command *PMC
- Description The *PMC command deletes all the macro definitions. This command deletes all the macro headers and bodies from the memory of the analyzer, making it possible to register new macros. See *DDT, *DMC, *GMC?, *LMC? and *EMC.

7.2 Common Commands

| | | |
|-----|------|--|
| 15. | *SAV | IEEE488.1-1987 command mode
SAVEREG{1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20} |
|-----|------|--|

- Function Saves the device settings
- Presence of command and query Command
- IEEE488.2-1987 command mode
 - Command *SAV <int>
 - Parameter <int>
- IEEE488.1-1987 command mode
 - Command SAVEREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}

- Description

The *SAV command saves the analyser settings in an internal register with a specified number.

The internal register is backed up with a built-in battery.

Using the save register function, a maximum of 20 sets of measurement conditions and measurement data can be saved in the built-in memory of this network analyzer (each save register function saves one set of measurement conditions and measurement data).

Each time a save register function is executed, the data is saved as a file in the built-in memory, which has a capacity of 1880 kB. The total data saved cannot exceed this limit (this memory is shared with the C drive). If the total data exceeds this capacity, new data will not be saved (even if there is a register which does not contain data). When this happens, the user must first erase the data provisionally saved, then try to save the current data again.

| | | |
|-----|-------------------------------|---|
| 16. | *SRE | IEEE488.1-1987 command mode
*SRE |
| • | Function | Setting of service request enable register |
| • | Presence of command and query | Command / Query |
| • | Command | *SRE <int> |
| • | Parameter | <int> |
| • | Response type | NR1 (integer value) |
| • | Description | <p>The *SRE command sets the service request enable register. The status byte register corresponding to the bit in this register which is set to 1 is reflected in the MSS bit as a valid bit.</p> <p>Bit 6 of the response data for the query command is always 0.</p> <p>For details, see the description of the status data structure.</p> <p>See *STB?.</p> |
| • | Example | <p>If the OPR bit (bit 7), the ESB bit (bit 5) and the MAV bit (bit 4) are set to "enable", calculate:</p> $2^7 + 2^5 + 2^4 = 128 + 32 + 16 = 176$ <p>and set *SRE 176.</p> |

7.2 Common Commands

17. *STB? IEEE488.1-1987 command mode
*STB?

- Function Readout of status byte register
- Presence of command and query Query
- Query *STB?
- Response type NR1 (integer value)
- Description The *STB? command reads out the contents of the status byte register.
The summary bit of the request to be read out here is the MSS bit.
This register and the MSS bit are not cleared, even if the register is read out.
For details, see the description of the status data structure.

Status Byte Register Assignments

| bit | | |
|--------|------|---|
| 7 | OPR | OPR is a summary of the standard operation status register. |
| 6 | MSS | When the MSS bit of the status byte register is set to 1, the RQS bit is TRUE and the MSS bit is the summary bit for all of the status data structure. |
| | | The service request cannot read out the MSS bit. (However, when the RQS bit is 1, it is understood that the MSS bit is 1.) |
| | | To read the MSS bit, the common command *STB? should be used. The *STB? command can read out bits 0 to 5 and bit 7 of the status byte register and the MSS bit. In this case, the status byte register and the MSS bit are not cleared. |
| | | The MSS bit does not become 0 until all the unmasked factors in the status register structure are cleared. |
| 5 | ESB | The ESB bit is a summary of the standard event register. |
| 4 | MAV | The MAV bit is a summary bit of the output buffer.
The MAV bit is 1 when the output buffer has data to be output and it is 0 when the data are read out. |
| 3 | QUES | The QUES is a summary of the questionable status register. |
| 2 | DEV | The DEV is a summary of the device status register. |
| 0 to 1 | | Always 0 |

- | | | |
|-----|------|-------------------------------------|
| 18. | *TRG | IEEE488.1-1987 command mode
*TRG |
|-----|------|-------------------------------------|
- Function Triggering device
 - Presence of command and query Command
 - Command *TRG
 - Description The *TRG command triggers devices. This command has exactly the same effect as the GET interface message. If the analyzer receives the *TRG interface message when TRIG:SOUR is set to BUS and the analyzer is in the trigger waiting state (see "5. TRIGGER SYSTEM"), it starts measurement. Under conditions other than above, this command is ignored.

Both the *TRG interface message and the GET interface message are stored in the input buffer and they are processed in the order of inputting.
-
- | | | |
|-----|-------|--------------------------------------|
| 19. | *TST? | IEEE488.1-1987 command mode
*TST? |
|-----|-------|--------------------------------------|
- Function Query of self test result
 - Presence of command and query Query
 - Query *TST?
 - Response type 0 | error code
 - Description The *TST? command allows the analyzer to start the self test and return the result. Answering with 0 indicates that the test has been passed, while other answers indicate error codes. For the analyzer, answers other than "0" are not returned in response to "*TST?".

7.2 Common Commands

| | | |
|-----|------|-------------------------------------|
| 20. | *WAI | IEEE488.1-1987 command mode
*WAI |
|-----|------|-------------------------------------|

- Function Waiting for end of all operations being performed
- Presence of command and query Command
- Command *WAI
- Description The *WAI command is used to wait for the completion of all the commands which are being executed. If this command is executed, all commands input after that time will be delayed until all the commands being executed have been completed.
*WAI can be canceled by means of the DCL interface message.

7.4 CALCulate Subsystem

7.4 CALCulate Subsystem

| | | |
|----|---------------------------------|---|
| 1. | CALCulate[<chno>]:FORMat | IEEE488.1-1987 command mode
LOGMAG,PHASE,DELAY,LINMAG,SWR,REAL,IMAG,
UNWRAP,LINMP,LOGMP,LOGMD,POLAR,SRJX,SGJB |
| | • Function | Selection of measurement format |
| | • Presence of command and query | Command / Query |
| | • IEEE488.2-1987 command mode | |
| | Command | CALCulate[<chno>]:FORMat <format> |
| | Parameter | <format> = {MLOGarithmic PHASe GDELay MLINear
SWR REAL IMAGinaly UPHase MLIPhase
MLOPhase MLODelay POLar SCHart
ISCHart} |
| | Response type | MLOG PHAS GDEL MLIN SWR REAL IMAG UPH
MLIP MLOP MLOD POL SCH ISCH |
| | • IEEE488.1-1987 command mode | |
| | Command | LOGMAG
PHASE
DELAY
LINMAG
SWR
REAL
IMAG
UNWRAP
LINMP
LOGMP
LOGMD
POLAR
SRJX
SGJB |
| | Response type | 0 1 |
| | • Description | Specifies measurement formats such as amplitude, phase and group delay. |
| | | MLOGarithmic |

The input signal is measured as a complex number in the form $X + jY$, and the signal is calculated in accordance with the specified measurement format, as shown in the table below:

| R3762/63 command | R3764/66, R3765/67 command parameter | Calculation expression: (unit . relative measurement/absolute value) | Contents |
|------------------|--------------------------------------|--|--|
| LOGMAG | MLOG | $10 \log_{10}(X^2+Y^2)$: (dB/dBm) | Amplitude (logarithm) |
| PHASE | PHAS | $\arctan(Y/X)$: (deg/deg) | Phase |
| DELAY | GDEL | $\frac{-\Delta (\text{phase})}{360 \times \Delta (\text{frequency})}$: (sec/sec) | Group delay |
| LINMAG | | $\sqrt{X^2 + Y^2}$: (Unit/Vrms) | Amplitude |
| SWR | SWR | $\frac{1 + \Gamma}{1 - \Gamma}$: (Unit/Unit)
$\Gamma = \sqrt{X^2 + Y^2}$ | Reflection coefficient |
| REAL | REAL | X : (Unit/Unit) | Real part |
| IMAG | IMAG | Y : (Unit/Unit) | Imaginary part |
| UNWRAP | UPH | $\arctan(Y/X)$: (deg/deg) | Phase
PHASE indicates a value within a range of $\pm 180^\circ$.
UNWRAP indicates a continuous value using the first measurement point as reference without turning back at $\pm 180^\circ$. |
| LINMP | MLIP | pair (r1, r2)
$r1 = \sqrt{X^2 + Y^2}$: (Unit/Vrms)
$r2 = \arctan(Y/X)$: (deg/deg) | Amplitude and phase pair rectangular coordinate display |
| LOGMP | MLOP | pair (r1, r2)
$r1 = 10 \log_{10}(X^2+Y^2)$: (dB/dBm)
$r2 = \arctan(Y/X)$: (deg/deg) | Amplitude (logarithm) and phase pair rectangular coordinate display |
| LOGMD | MLOD | pair (r1, r2)
$r1 = 10 \log_{10}(X^2+Y^2)$: (dB/dBm)
$r2 = \frac{-\Delta (\text{phase})}{360 \times \Delta (\text{frequency})}$: (sec/sec) | Amplitude (logarithm) and group delay pair rectangular coordinate display |
| POLAR | POLar | X : (Unit/Unit)
Y : (Unit/Unit) | Real part
Imaginary part |
| SRJX | SCHart | X : (Unit/Unit)
Y : (Unit/Unit) | Real part
Imaginary part |
| SGJB | ISCHart | X : (Unit/Unit)
Y : (Unit/Unit) | Real part
Imaginary part |

7.4 CALCulate Subsystem

| | | |
|----|---------------------------------------|---------------------------------------|
| 2. | CALCulate[<chno>]:GDAPerture:APERture | IEEE488.1-1987 command mode
APERTP |
|----|---------------------------------------|---------------------------------------|

- Function: Group delay aperture setting
- Presence of command and query: Command / Query
- Command: CALCulate[<chno>]:GDAPerture:APERture <real>
APERTP<real>
- Parameter: <real>
- Response type: NR3 (real value)
- Description: Sets the aperture of the group delay.

Initial value: 10%
 Setting range: 0.01% to 50%
 Setting resolution: 0.01%

"The group delay can be calculated using the expression below, in which Δ (frequency) is called" aperture.

$$\text{Group delay} = \frac{-\Delta (\text{phase})}{360 \times \Delta (\text{frequency})}$$

The aperture (Δ(frequency)) is converted into the measurement point (horizontal axis) and determined for the setting value <real> as follows:

$$\begin{aligned} \Delta (\text{frequency}) &= \Delta (\text{point}) \\ &= \frac{\text{number of measurement point}-1}{100} \times \langle \text{real} \rangle \end{aligned}$$


That is, the setting value <real> is set as a percentage of the number of measurement points. The value is maintained even if the number of measurement points is changed. The Δ point is calculated internally again using the number of measurement points after the change.

- Example

Number of measurement points: 101 point

Aperture: $2(\%) \rightarrow \Delta (\text{point}) = \frac{101-1}{100} \times 2 = 2$

Measurement points:



3. CALCulate[<chno>]:MATH[:EXPRession]:NAME IEEE488.1-1987 command mode
MATH{DDM | DMM | DAM | DSM | OFF}

- Function Data (+, -, ×, /) memory setting
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:MATH[:EXPRession]:NAME <type>
 - Parameter <type> = {NONE | DDM | DMM | DAM | DSM}
 - Response type NONE | DDM | DMM | DAM | DSM
- IEEE488.1-1987 command mode
 - Command MATH {DDM | DMM | DAM | DSM | OFF}
 - Response type 0 | 1
- Description Calculates the relationship between the measurement data and the memory data.

| R3762/63 command | R3764/66, R3765/67 command parameter | Calculation |
|------------------|--------------------------------------|-------------|
| MATH DDM | DDM | ÷ |
| MATH DMM | DMM | × |
| MATH DAM | DAM | + |
| MATH DSM | DSM | - |
| MATH OFF | NONE | NONE |

- Caution

The calculation is valid only when the relationship between the data and the memory in the same channel is calculated. (It is not possible to calculate the relationship between the data and the memory in different channels.)

DDM (÷) is used to normalize the data.

The calculation is performed on the vector quantity (complex number data) before formatting.

7.4 CALCulate Subsystem

4. `CALCulate[<chno>]:PLINearity:PARTial <bool>IEEE488.1-1987 command mode
PLINPART<bool>`
- **Function** Turning the section definition of the Phase linearity analysis ON or OFF
 - **Presence of command and query** Command/Query
 - **Command** `CALCulate[<chno>]:PLINearity:PARTial <bool>
PLINPART<bool>`
 - **Parameter** `<bool>`
 - **Response type** 0 | 1
 - **Description** Turns the section definition of the Phase linearity analysis ON or OFF. When ON, the Phase linearity is analyzed within the section specified by the partial search. When OFF, the Phase linearity is analyzed for the full measurement range. The section definition is performed by the "MARKer[<chno>]:SEARch:PARTial:SRANge" (see Section 7-17-24).

| | | |
|----|--|---|
| 5. | CALCulate[<chno>]:PLINearity:STATe <bool>
PLINE<bool> | IEEE488.1-1987 command mode |
| • | Function | Turning the Phase linearity analysis ON or OFF |
| • | Presence of command and query | Command/Query |
| • | Command | CALCulate[<chno>]:PLINearity:STATe <bool>
PLINE<bool> |
| • | Parameter | <bool> |
| • | Response type | 0 1 |
| • | Description | Turns the Phase linearity analysis ON or OFF.
When the section analysis is set to ON by the "CALCu-
late[<chno>]:PLINearity:PARTial" command, the Phase linearity
is analyzed within the section specified by the partial marker search
range. When set to OFF, the Phase linearity is analyzed for the full
measurement range.
The analysis is obtained by the "FETCh[<chno>]:PLINearity?".
This function cannot be set at the same time as the CDMA Phase
Linearity function. |

7.4 CALCulate Subsystem

| | | |
|----|--------------------------------------|--|
| 6. | CALCulate[<chno>]:SMOothing:APERture | IEEE488.1-1987 command mode
SMOOPER |
|----|--------------------------------------|--|

- Function Smoothing span setting
- Presence of command and query Command / Query
- Command CALCulate[<chno>]:SMOothing:APERture <real>
SMOOPER<real>
- Parameter <real>
- Response type NR3 (real number value)
- Description Sets the smoothing aperture.

Initial value: 10%
 Setting range: 0.01% to 50%
 Setting resolution: 0.01%

The smoothing value is determined by the algorithm below. (2m) is referred to as "aperture".

Smoothing algorithm

$$\bar{D}_{(n)} = \frac{D_{(n-m)} + \dots + D_{(n)} + \dots + D_{(n+m)}}{2m+1}$$

$\bar{D}_{(n)}$: Smoothed nth data after formatting

$D_{(n)}$: nth data before smoothing

2m: Smoothing aperture

The aperture is obtained for the <real> setting using the expression below:

$$\text{Aperture}(2m) = \frac{(\text{number of measurement point})-1}{100} \times \text{<real>}$$

That is, <real> is set as a percentage of the number of measurement points. The setting value <real> is held even if the number of measurement points is changed, and the aperture (2m) is calculated internally again using the number of measurement points after the change.


- Example

Number of measurement points: 101 point

Aperture: $2(\%) \rightarrow$ aperture (2m)

$$= \frac{101-1}{100} \times 2$$

$$= 2$$

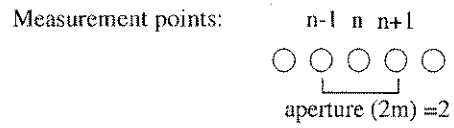

7.4 CALCulate Subsystem

| | | |
|----|-----------------------------------|-------------------------------------|
| 7. | CALCulate[<chno>]:SMOothing:STATE | IEEE488.1-1987 command mode
SMOO |
|----|-----------------------------------|-------------------------------------|

- Function: Turns smoothing ON or OFF
- Presence of command and query: Command / Query
- Command: CALCulate[<chno>]:SMOothing:STATE <bool>
SMOO<bool>
- Parameter: <bool>
- Response type: 0 1 1
- Description: This command is used to turn the smoothing ON or OFF.

Smoothing is used to obtain the moving average between adjacent formatted data.

By smoothing the noise component, a noise average can be obtained.

In contrast to this, since the averaging obtains the time average of the data before formatting (vector quantity), the noise is reduced rather than averaged.

Smoothing algorithm

$$\bar{D}_{(n)} = \frac{D_{(n-m)} + \dots + D_{(n)} + \dots + D_{(n+m)}}{2m+1}$$

$\bar{D}_{(n)}$: Smoothed nth data after formatting

$D_{(n)}$: nth data before smoothing

2m: Smoothing aperture


- Caution: When the measurement format is set to 2 traces (MLOP, MLOD, MLIP) or the memory trace is set to ON, smoothing is performed for all the traces.

- Example: Number of measurement points: 101 point

Aperture: $2(\%) \rightarrow$ Aperture (2m)

$$= \frac{101-1}{100} \times 2$$

$$= 2$$

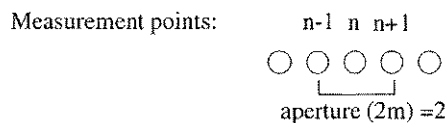

g. CALCulate[<chno>]:TRANSform:IMPedance:CIMPedance IEEE488.1-1987 command mode
SETZ0
MKRZ0{50|75}

- Function Z conversion characteristic impedance setting
- Presence of command and query Command / Query
- Command CALCulate[<chno>]:TRANSform:IMPedance:CIMPedance
<real>
SETZ0<real>
MKRZ0{50|75}
- Parameter <real>
- Response type NR3 (real number value)
0|1 (MKRZ0{50|75})
- Description Sets the characteristic impedance for the impedance measurement.

Initial value: 50Ω
Setting range: 100pΩ to 1GΩ
Setting resolution: 0.001pΩ

The measurement value is obtained using the value normalized by the characteristic impedance of the measurement system (1 Ω). Therefore, to obtain the absolute value, it is necessary to specify the characteristic impedance of the measurement system.

- Example To obtain the impedance using the reflection coefficient.

$$\text{Normalized impedance: } \frac{1+\Gamma}{1-\Gamma} \times 1(\Omega)$$

$$\text{Absolute value impedance: } \frac{1+\Gamma}{1-\Gamma} \times Z_0$$

Γ : Reflection coefficient

Z₀ : Characteristic impedance

7.4 CALCulate Subsystem

9. CALCulate[<chno>]:TRANSform:IMPedance:TYPE IEEE488.1-1987 command mode
 CONV{OFF|RZ|RY|TZ|TY|IDS}


- Function Z conversion type setting
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANSform:IMPedance:TYPE <type>
 - Parameter <type>={ NONE | ZREFlection | YREFlection | ZTRansmit | YTRansmit | INVersion }
 - Response type NONE | ZREF | YREF | ZTR | YTR | INV
- IEEE488.1-1987 command mode
 - Command CONV{OFF|RZ|RY|TZ|TY|IDS}
 - Response type 0|1
- Description Obtains the impedance from the reflection coefficient and the transfer characteristics using the table below:

| R3762/63 command | R3764/66, R3765/67 command parameter | Converted value | Conversion expression |
|------------------|--------------------------------------|-----------------------|--|
| CONVOFF | NONE | No conversion | |
| CONVRZ | ZREF | Reflection impedance | $\frac{1+\Gamma}{1-\Gamma} \times Z_0$ |
| CONVRY | YREF | Reflection admittance | $\frac{1+\Gamma}{1-\Gamma} \times \frac{1}{Z_0}$ |
| CONVTZ | ZTR | Transfer impedance | $\frac{2(1-T)}{T} \times Z_0$ |
| CONVTY | YTR | Transfer admittance | $\frac{T}{2(1-T)} \times \frac{1}{Z_0}$ |
| CONVIDS | INV | Reverse S parameter | $\frac{1}{S}$ |

Γ: Reflection coefficient
 T: Gain
 S: F or T
 Zo: Characteristic Impedance

- Caution

The data processing flow is as follows:

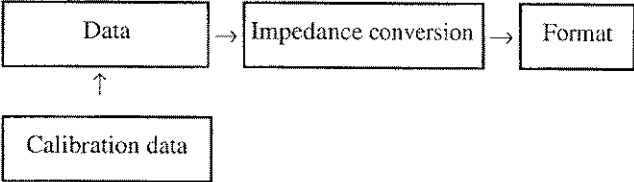

7.5 DISPlay Subsystem

7.5 DISPlay Subsystem

7.5.1 Commands Used for All Models

| | | |
|----|----------------|--|
| 1. | DISPlay:ACTive | IEEE488.1-1987 command mode
CH{1 2 3 4} |
|----|----------------|--|

- Function Active channel specification
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command DISPlay:ACTive <int>
 - Parameter <int>
 - Response type NR1 (integer value)
- IEEE488.1-1987 command mode
 - Command CH{1|2|3|4}
 - Response type 0|1
- Description Selects the active channel (Initial setting channel 1)
 The analyzer is equipped with four measurement channels, which can be used independently for measurement and data display.
 For the functions dependent on these channels, it is possible to specify <chno> as the header parameter of the command. When <chno> is omitted or IEEE488.1-1987 command is used, all the other commands are applied to the active channel specified here

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|------------------------|
| CH1 | 1 | Channel 1 is active. |
| CH2 | 2 | Channel 2 is active.78 |
| CH3 | 3 | Channel 3 is active. |
| CH4 | 4 | Channel 4 is active. |

NOTE: When sub measure is OFF, the sub channel cannot be switched to active. The sub measure must be switched ON previously.
 When the sub measure is switched ON/OFF, sometimes the active channel is switched automatically.
 (Refer to 7.10.1 20. [SENSe:]FUNCTION[<chno>][:ON] and 7.10.1 21. [SENSe:]FUNCTION[<chno>]:POWer.)

| | | |
|----|-------------------------------|--|
| 2. | DISPlay:DUAL | IEEE488.1-1987 command mode
DUAL |
| • | Function | ON/OFF of dual channel |
| • | Presence of command and query | Command / Query |
| • | Command | DISPlay:DUAL <bool>
DUAL<bool> |
| • | Parameter | <bool> |
| • | Response type | 0 1 |
| • | Description | Selects whether two measurement channels (CH1 and CH2) are to be displayed simultaneously or one of the channels is to be displayed.
When the sub measure is selected, channel 3 and channel 4 are displayed too.
Initial setting DUAL OFF |

7.5.1 Commands Used for All Models

3. DISPlay:FORMat IEEE488.1-1987 command mode
SPLIT


- Function Split/overlap selection
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command DISPlay:FORMat <type>
 - Parameter <type>={ULOWer | FBACk}
 - Response type ULOW | FBAC
- IEEE488.1-1987 command mode
 - Command SPLIT<bool>
 - Parameter <bool>={ON | OFF}
 - Response type 0 | 1
- Description Selects the split display or the overlap display.
Initial setting SPLIT OFF

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|-----------------|
| SPLIT ON | ULOW | Split display |
| SPLIT OFF | FBAC | Overlap display |

- Example

Split display

Overlap display

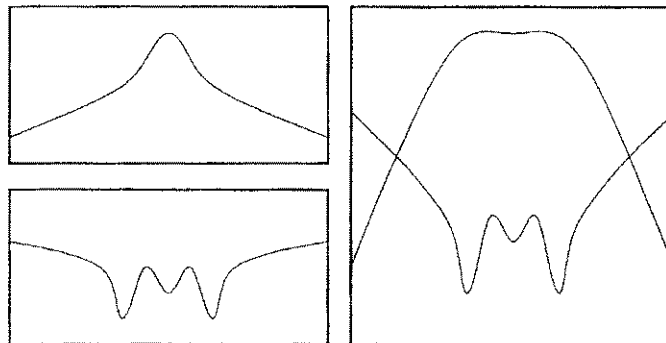

4. `DISPlay[:WINDow[<chno>]]:TEXT[:DATA]` IEEE488.1-1987 command mode
 LABEL

- Function Label setting
- Presence of command and query Command / Query
- Command `DISPlay[:WINDow[<chno>]]:TEXT[:DATA] {<str> | <block>}`
 LABEL<str>
- Parameter {<str> | <block>}
- Response type <str>=string
- Description Sets the label.
 The label is set for the active channel.
 Number of characters to be set:80

5. `DISPlay[:WINDow[<chno>]]:TRACe:ASSign` IEEE488.1-1987 command mode
 DISP{DATA | MEM | DM}

- Function ON/OFF of trace display
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 Command `DISPlay[:WINDow[<chno>]]:TRACe:ASSign <type>`
 Parameter <type>={DATA | MEMory | DMEMory}
 Response type DATA | MEM | DMEM
- IEEE488.1-1987 command mode
 Command `DISP{DATA | MEM | DM}`
 Response type 0 | 1
- Description Specifies the type of trace display.
 Initial setting DISPDATA

| R3762/63
command | R3764/66, R3765/67
command parameter | Operation |
|---------------------|---|---|
| DISPDATA | DATA | Displays the data trace only |
| DISPMEM | MEM | Displays the memory trace only |
| DISPDM | DMEM | Displays both the data trace and the memory trace |

Network Analyzer Programming Manual (Part 2)


7.5.1 Commands Used for All Models

6. `DISPlay[:WINDow[<chno>]]:TRACe:GRATicule[:STATe]` IEEE488.1-1987 command mode
 GRAT

- Function ON/OFF of graticule
- Presence of command and query Command / Query
- Command `DISPlay[:WINDow[<chno>]]:TRACe:GRATicule[:STATe]`
`<bool>`
`GRAT<bool>`
- Parameter `<bool>`
- Response type 0 | 1
- Description Selects whether or not the graticule is displayed.
 Initial setting GRAT ON

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|--------------------------------|
| GRAT ON | ON | Displays the graticule |
| GRAT OFF | OFF | Does not display the graticule |

- Example

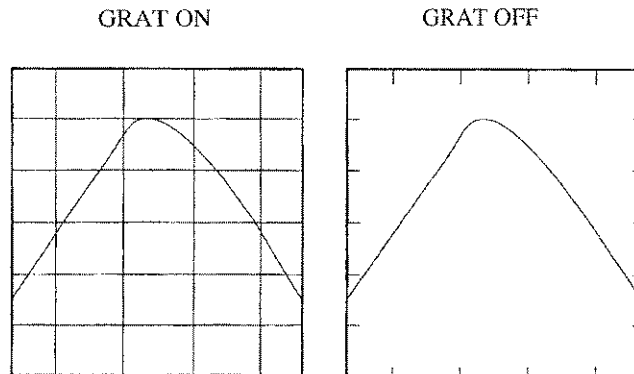

7. `DISPlay[:WINDow[<chno>]]:Y[<trace>]:RLINE` IEEE488.1-1987 command mode
REFL


- Function ON/OFF of Y-axis reference line display
- Presence of command and query Command / Query
- Command `DISPlay[:WINDow[<chno>]]:Y[<trace>]:RLINE <bool>`
`REFL<bool>`
- Parameter <bool>
- Response type 0 1 1
- Description Selects ON/OFF of the Y-axis reference line display.

The Y-axis reference line indicates the reference value for the Y-axis graticule.

Initial setting REFL ON

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|--|
| REFL ON | ON | Displays the Y-axis reference line |
| REFL OFF | OFF | Does not display the Y-axis reference line |

- Example

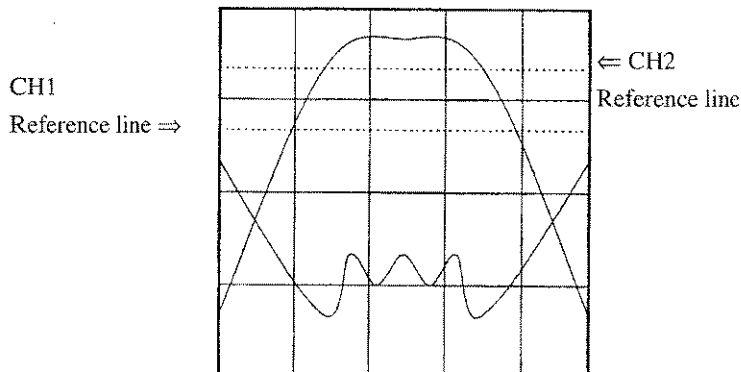

7.5.1 Commands Used for All Models

| | | |
|----|--|---|
| 8. | DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:AUTO | IEEE488.1-1987 command mode
AUTO
SCALF{1ST 2ND} |
|----|--|---|

- Function Y-axis automatic setting
- Presence of command and query Command
- Command DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:AUTO
ONCE
AUTO
SCALF{1ST|2ND}
- Parameter ONCE
- Description Automatically adjusts the Y-axis setting.
The Y axis is set to an optimum value so that all the data which were displayed before the execution of this command fit into the scale screen. (Only the PDIV, RLEV setting is updated.)
<trace> and SCALF{1ST|2ND} of IEEE488.1-1987 command mode are used to specify the trace whose scale is to be changed when the measurement format is set to 2 traces (MLOP, MLOD, MLIP). If the measurement format is not set to 2 traces, the specification will be ignored.

| | | |
|----------------------------------|---|----------|
| <trace> =0 First waveform of CH1 | } | SCALF1ST |
| =1 First waveform of CH2 | | |
| =4 First waveform of CH3 | | |
| =5 First waveform of CH4 | | |
| =8 Second waveform of CH1 | } | SCALF2ND |
| =9 Second waveform of CH2 | | |
| =12 Second waveform of CH3 | | |
| =13 Second waveform of CH4 | | |

| | |
|------------------|--|
| First waveform: | LOGMAG when the display format is LOGMAG&PHASE and LOGMAG&DELAY,
LINMAG when it's LINMAG&PHASE,
S11 when the measure mode is S11&S21(FWD),
S22 when it's S22&S12(REV). |
| Second waveform: | PHASE when the display format is LOGMAG&PHASE,
DELAY when it's LOGMAG&DELAY,
DELAY when it's LINMAG&DELAY,
S21 when the measure mode is S11&S21(FWD),
S12 when S22&S12(REV). |

| | | |
|----|---|---|
| 9. | DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:PDIVision | IEEE488.1-1987 command mode
SDIV
SCALF{1ST 2ND} |
|----|---|---|

- Function Y-axis grid scale setting
- Presence of command and query Command / Query
- Command DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:PDIVision
<real>
SDIV<real>
SCALF{1ST | 2ND}
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the scale value of the Y-axis grid (scale per graticule).
The command is ineffective in polar coordinate and Smith chart displays.
<trace> and SCALF{1ST | 2ND} of IEEE488.1-1987 command mode are used to specify the trace whose scale is to be changed when the measurement format is set to 2 traces (MLOP, MLOD, MLIP).
If the measurement format is not set to 2 traces, the specification will be ignored.

| | | | |
|------------|------------------------|---|----------|
| <trace> =0 | First waveform of CH1 | } | SCALF1ST |
| =1 | First waveform of CH2 | | |
| =4 | First waveform of CH3 | | |
| =5 | First waveform of CH4 | | |
| =8 | Second waveform of CH1 | } | SCALF2ND |
| =9 | Second waveform of CH2 | | |
| =12 | Second waveform of CH3 | | |
| =13 | Second waveform of CH4 | | |

 First waveform: LOGMAG when the display format is LOGMAG&PHASE and LOGMAG&DELAY,
 LINMAG when it's LINMAG&PHASE,
 S11 when the measure mode is S11&S21(FWD),
 S22 when it's S22&S12(REV).
 Second waveform: PHASE when the display format is LOGMAG&PHASE,
 DELAY when it's LOGMAG&DELAY,
 DELAY when it's LINMAG&DELAY,
 S21 when the measure mode is S11&S21(FWD),
 S12 when S22&S12(REV).
 The initial value depends on the measurement format.
 See "A.3 Initial Settings".


7.5.1 Commands Used for All Models

| | | |
|-----|---|---|
| 10. | DISPlay[:WINDow[<chno>]]:Y[<trace>]:SCALe]:RLEVel | IEEE488.1-1987 command mode
REFV
SCALF{1ST 2ND} |
|-----|---|---|

- **Function** Y-axis reference level setting
 - **Presence of command and query** Command / Query
 - **Command** DISPlay[:WINDow[<chno>]]:Y[<trace>]:SCALe]:RLEVel
<real>
REFV<real>
SCALF{1ST | 2ND}
 - **Parameter** <real>
 - **Response type** NR3 (real value)
 - **Description** Sets the level of the Y-axis reference line.
The Y-axis reference line indicates the reference value for the Y-axis graticule.
In polar coordinate and Smith chart displays, the value is set to the full-scale value on the outside circle.
<trace> and SCALF{1ST | 2ND} of IEEE488.1-1987 command mode are used to specify the trace whose scale is to be changed when the measurement format is set to 2 traces (MLOP, MLOD, MLIP).
If the measurement format is not set to 2 traces, the specification will be ignored.

| | | |
|--|---|----------|
| <trace> =0 First waveform of CH1
=1 First waveform of CH2
=4 First waveform of CH3
=5 First waveform of CH4 | } | SCALF1ST |
| =8 Second waveform of CH1
=9 Second waveform of CH2
=12 Second waveform of CH3
=13 Second waveform of CH4 | } | SCALF2ND |
- First waveform: LOGMAG when the display format is LOGMAG&PHASE and LOGMAG&DELAY,
LINMAG when it's LINMAG&PHASE,
S11 when the measure mode is S11&S21(FWD),
S22 when it's S22&S12(REV).
- Second waveform: PHASE when the display format is LOGMAG&PHASE,
DELAY when it's LOGMAG&DELAY,
DELAY when it's LINMAG&DELAY,
S21 when the measure mode is S11&S21(FWD),
S12 when S22&S12(REV).
- The initial value depends on the measurement format.
See "A.3 Initial Settings".

- Example

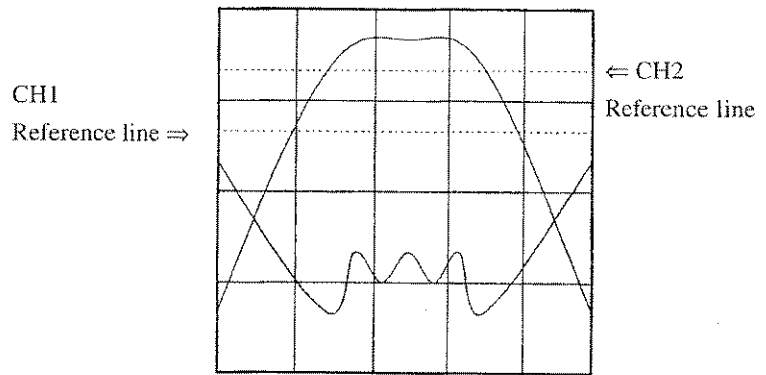

7.5.1 Commands Used for All Models

| | | |
|-----|---|---|
| 11. | DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:RPOSition | IEEE488.1-1987 command mode
REFF
SCALF{1ST 2ND} |
|-----|---|---|

- Function Y-axis reference line position specification
- Presence of command and query Command / Query
- Command DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:RPOSition
<real>
REFF<real>
SCALF{1ST|2ND}
- Parameter <real>=0 to 100
- Response type NR3 (real value)
- Description Specifies the position of the Y-axis reference line.

<trace> and SCALF{1ST|2ND} of IEEE488.1-1987 command mode are used to specify the trace whose scale is to be changed when the measurement format is set to 2 traces (MLOP, MLOD, MLIP).

If the measurement format is not set to 2 traces, the specification will be ignored

- <trace> =0 First waveform of CH1
 - =1 First waveform of CH2
 - =4 First waveform of CH3
 - =5 First waveform of CH4
 - =8 Second waveform of CH1
 - =9 Second waveform of CH2
 - =12 Second waveform of CH3
 - =13 Second waveform of CH4
- SCALF1ST (for traces 0-5)
SCALF2ND (for traces 8-13)


First waveform: LOGMAG when the display format is LOGMAG&PHASE and LOGMAG&DELAY,
LINMAG when it's LINMAG&PHASE,
S11 when the measure mode is S11&S21(FWD),
S22 when it's S22&S12(REV).

Second waveform: PHASE when the display format is LOGMAG&PHASE,
DELAY when it's LOGMAG&DELAY,
DELAY when it's LINMAG&DELAY,
S21 when the measure mode is S11&S21(FWD),
S12 when S22&S12(REV).

The initial value depends on the measurement format. See "A.3 Initial Settings".

The value should be specified as a percentage, with 100% at the top of the screen, 50% in the middle, and 0% at the bottom.

- Example

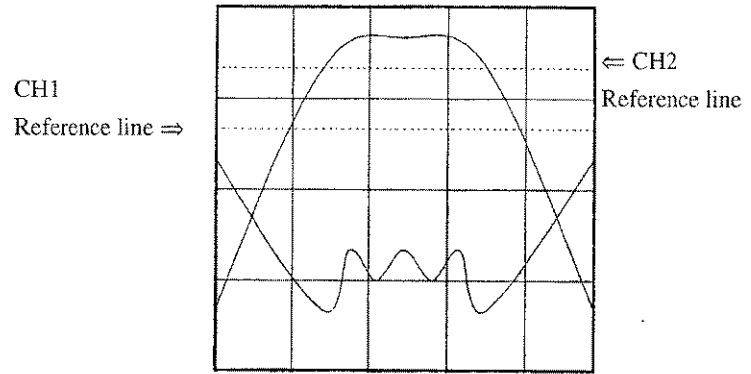

7.5.2 Commands Used for Only R3765/67G Series

7.5.2 Commands Used for Only R3765/67G Series

| | | |
|----|---------------------------------------|---|
| 1. | DISPlay:WINDow:WIDE:HORizontal <bool> | IEEE488.1-1987 command mode
MENUOV<bool> |
|----|---------------------------------------|---|

- Function Enlarges the measurement screen horizontally.
- Presence of command and query Command / Query
- Command DISPlay:WINDow:WIDE:HORizontal <bool>
MENUOV<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Used to widen the measurement screen to overlap the menu display area.
If this command is used to enlarge the measurement screen, the trace display area overlaps the menu display area. When the menu is displayed, part of the trace menu is hidden.

| | | |
|----|-------------------------------------|---|
| 2. | DISPlay:WINDow:WIDE:VERTical <bool> | IEEE488.1-1987 command mode
SCALUP<bool> |
|----|-------------------------------------|---|

- Function Enlarges the measurement screen vertically.
- Presence of command and query Command / Query
- Command DISPlay:WINDow:WIDE:VERTical <bool>
SCALUP<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Used to enlarge the measurement screen vertically.
If this command is used to enlarge the measurement screen, the real time clock and label are hidden.

3. `DISPlay:ANNOtation[:ALL] <bool>` IEEE488.1-1987 command mode
`ANNO<bool>`

- Function Turns the annotation on or off.
- Presence of command and query Command / Query
- Command `DISPlay:ANNOtation[:ALL] <bool>`
`ANNO<bool>`
- Parameter `<bool>`
- Response type 0 | 1
- Description Used to control the annotation displayed on the measurement screen.
 If this command is used to turn the annotation display off, the trace display area is enlarged to the upper and lower annotation display area.

4. `DISPlay:PROGram {OFF | FULL | LOWer}` IEEE488.1-1987 command mode
`BDISP{0 | 1 | 2}`

- Function Used to assign applications to the screen.
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command `DISPlay:PROGram <type>`
 - Parameter `<type> = {OFF | FULL | LOWer}`
 - Response type `OFF | FULL | LOW`
- IEEE488.1-1987 command mode
 - Command `BDISP{0 | 1 | 2}`
 - Parameter `<int>`
 - Response type `NR1 (integer value)`

7.5.2 Commands Used for Only R3765/67G Series

- Description

The BASIC applications can be assigned to the screen as shown in the table below.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|--|
| BDISP0 | OFF | The entire screen is used as the measurement screen. |
| BDISP1 | FULL | The entire screen is used for applications. |
| BDISP2 | LOWer | The upper half of the screen is used the measurement screen and the lower half of the screen is used for applications. |

7.6 FILE Subsystem

| | | |
|----|-------------|--------------------------------------|
| 1. | FILE:DELeTe | IEEE488.1-1987 command mode
PURGE |
|----|-------------|--------------------------------------|

- Function Deletion of a stored file
- Presence of command and query Command
- IEEE488.2-1987 command mode
 - Command FILE:DELeTe <str>
 - Parameter <str>=File name
- IEEE488.1-1987 command mode
 - Command PURGE<str>
 - Response type <str>=File name
- Description Deletes a file stored by the FILE:STORe command or the STFILE command.

| | | |
|----|-----------|---------------------------------------|
| 2. | FILE:LOAD | IEEE488.1-1987 command mode
LDFILE |
|----|-----------|---------------------------------------|

- Function Loading of a stored file
- Presence of command and query Command
- IEEE488.2-1987 command mode
 - Command FILE:LOAD <str>
 - Parameter <str>=File name
- IEEE488.1-1987 command mode
 - Command LDFILE<str>
 - Response type <str>=File name
- Description Loads a file stored by the FILE:STORe command or the STFILE command.

If the specified file is stored when the FILE:STATE:RAW or the FILE:STATE:DATA is ON, the sweeping is forcibly in the hold mode after loading because the measured waveform data are also loaded.

7.6 FILE Subsystem

| | | |
|----|-------------------------------|---|
| 3. | FILE:STATe:CONDition | IEEE488.1-1987 command mode
DSSTATE |
| • | Function | Definition of the conditions for the file to store |
| • | Presence of command and query | Command / Query |
| • | Command | FILE:STATe:CONDition <bool>
DSSTATE <bool> |
| • | Parameter | <bool> |
| • | Response type | 0 1 |
| • | Description | Selects whether or not to store the setting conditions of the file by the FILE:STORe command. |

| | | |
|----|-------------------------------|---|
| 4. | FILE:STATe:CORRection | IEEE488.1-1987 command mode
CORARY |
| • | Function | Definition of the conditions for the file to store |
| • | Presence of command and query | Command / Query |
| • | Command | FILE:STATe:CORRection <bool>
CORARY <bool> |
| • | Parameter | <bool> |
| • | Response type | 0 1 |
| • | Description | Selects whether or not to store the calibration data in the file by the FILE:STORe command. |

5. FILE:STATe:DATA IEEE488.1-1987 command mode
DATAARY

- Function Definition of the conditions for the file to store
- Presence of command and query Command / Query
- Command FILE:STATe:DATA <bool>
DATAARY <bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects whether or not to store the measured waveform data in the file by the FILE:STORe command.

6. FILE:STATe:MEMory IEEE488.1-1987 command mode
MEMARY

- Function Definition of the conditions for the file to store
- Presence of command and query Command / Query
- Command FILE:STATe:MEMory <bool>
MEMARY <bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects whether or not to store the memory waveform data in the file by the FILE:STORe command.

7.6 FILE Subsystem

| | | |
|----|----------------|---------------------------------------|
| 7. | FILE:STATe:RAW | IEEE488.1-1987 command mode
RAWARY |
|----|----------------|---------------------------------------|

- Function Definition of the conditions for the file to store
- Presence of command and query Command / Query
- Command FILE:STATe:RAW <bool>
RAWARY <bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects whether or not to store the raw data of the measured waveform in the file by the FILE:STORE command.

| | | |
|----|------------|---------------------------------------|
| 8. | FILE:STORe | IEEE488.1-1987 command mode
STFILE |
|----|------------|---------------------------------------|

- Function Storing the file
- Presence of command and query Command
- IEEE488.2-1987 command mode
Command FILE:STORe <str>
Parameter <str>=File name
- IEEE488.1-1987 command mode
Command STFILE<str>
Response type <str>=File name
- Description Setting conditions, calibration data, waveform data, etc. of this equipment can be stored to a floppy disk.
The information to be stored is defined by the FILE:STATe command. For details, refer to FILE:STATe command.

7.8 INITiate Subsystem

| | | |
|----|---------------------|--------------------------------------|
| 1. | INITiate:CONTInuous | IEEE488.1-1987 command mode
INITC |
|----|---------------------|--------------------------------------|

- Function ON/OFF of trigger system state
- Presence of command and query Command / Query
- Command INITiate:CONTInuous <bool>
INITC <bool>
- Parameter <bool>
- Response type 0 | 1
- Description The INITiate:CONTInuous command controls the start of the trigger system.
If CONTInuous is set to ON, the system does not return to the idle state and changes to the trigger waiting state.
If CONTInuous is set to OFF, it changes to the trigger waiting state through the idle state. In this case, use the INITiate[:IMMediate] command to go to the trigger waiting state.

For details, see "5. TRIGGER SYSTEM".

| | | |
|----|----------------------|-------------------------------------|
| 2. | INITiate[:IMMediate] | IEEE488.1-1987 command mode
INIT |
|----|----------------------|-------------------------------------|

- Function Trigger system start
- Presence of command and query Command
- Command INITiate[:IMMediate]
INIT
- Description The INITiate[:IMMediate] command starts the trigger system.
The trigger system changes from the idle state to the trigger waiting state to wait for the occurrence of an event.
For details, see "5. TRIGGER SYSTEM".

7.9 REGISTER Subsystem

7.9 REGISTER Subsystem

1. REGISTER:CLEAR IEEE488.1-1987 command mode
CLRREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}

 - Function Clearing the register
 - Presence of command and query Command
 - IEEE488.2-1987 command mode
Command REGISTER:CLEAR <int>
Parameter <int>
 - IEEE488.2-1987 command mode
Command CLRREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}
 - Description Clears the register data stored by the *SAV, the REGISTER:SAVE <int> or the SAVEREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}command.

2. REGISTER:RECALL IEEE488.1-1987 command mode
RECLREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}

 - Function Recalling (reading) the register
 - Presence of command and query Command
 - IEEE488.2-1987 command mode
Command REGISTER:RECALL {<int>|POFF}
Parameter <int>=Register number
POFF=Settings before power-off
 - IEEE488.1-1987 command mode
Command RECLREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}
 - Description Recalls the register data stored by *SAV, the REGISTER:SAVE <int> or the SAVEREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}command.
This command has the same function as *RCL.

3. REGister:SAVE IEEE488.1-1987 command mode
SAVEREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}

- Function Saving data into the register
- Presence of command and query Command
- IEEE488.2-1987 command mode
 - Command REGister:SAVE <int>
 - Parameter <int>
- IEEE488.1-1987 command mode
 - Command SAVEREG{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17|18|19|20}
- Description

Saves the analyzer settings and the calibration data into a register with the specified number.

Using the save register function, a maximum of 20 sets of measurement conditions and measurement data can be saved in the built-in memory of this network analyzer (each save register function saves a set of measurement conditions and measurement data).

Each time a save register function is executed, the data is saved as a file in the built-in memory which has a capacity of 1880 kB. The total data cannot exceed this limit (this memory is shared with the C drive). If the total data exceeds this limit, new data will not be saved (even if there is a register which does not contain data). When this happens, the user must first erase some data previously saved, and then try to save the current data again.

This command has the same function as *SAV.

7.10 SENSE Subsystem

7.10 SENSE Subsystem

7.10.1 Commands Used for All Models

| | | |
|----|-------------------------------|--|
| 1. | [SENSe:]AVERage[<chno>]:COUNT | IEEE488.1-1987 command mode
AVERFACT
AVR{2 4 8 16 32 64 128} |
|----|-------------------------------|--|

- **Function** Setting of number of averaging times
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command [SENSe:]AVERage[<chno>]:COUNT <int>
 - Parameter <int>
 - Response type NR1 (integer value)
- **IEEE488.1-1987 command mode**
 - Command AVERFACT<int>
AVR{2|4|8|16|32|64|128}
 - Parameter <int>
 - Response type NR1 (AVERFACT command)
0|1 (AVR{2|4|8|16|32|64|128} command)
- **Description** Sets the number of averaging times.
The averaging averages the data by adding time weight to the measured data before formatting. Since this method averages the data in accordance with the vector quantity, the noise level can be reduced.

The averaging process is as follows:

$$\bar{Y}_{(n)} = \frac{n-1}{n} \cdot \bar{Y}_{(n-1)} + \frac{1}{n} \cdot Y_{(n)} \quad (n \leq N)$$

$$\bar{Y}_{(n)} = \frac{N-1}{N} \cdot \bar{Y}_{(n-1)} + \frac{1}{N} \cdot Y_{(n)} \quad (n > N)$$

$\bar{Y}_{(n)}$: nth averaged data

$Y_{(n)}$: nth data

N: Number of averaging times

| | | |
|----|---------------------------------|---|
| 2. | [SENSe:]AVERAge[<chno>]:REStart | IEEE488.1-1987 command mode
AVERREST |
|----|---------------------------------|---|

- Function Averaging restart
- Presence of command and query Command
- Command [SENSe:]AVERAge[<chno>]:REStart
AVERREST
- Description Clears the average counter and restarts the averaging.
The averaging averages the data by adding time weight to the measured data before formatting. Since this method averages the data in accordance with the vector quantity, the noise level can be reduced.

The averaging process is as follows:

$$\bar{Y}_{(n)} = \frac{n-1}{n} \cdot \bar{Y}_{(n-1)} + \frac{1}{n} \cdot Y_{(n)} \quad (n \leq N)$$

$$\bar{Y}_{(n)} = \frac{N-1}{N} \cdot \bar{Y}_{(n-1)} + \frac{1}{N} \cdot Y_{(n)} \quad (n > N)$$

$\bar{Y}_{(n)}$: nth averaged data

$Y_{(n)}$: nth data

N: Number of averaging times

7.10.1 Commands Used for All Models

| | | |
|----|---------------------------------|--|
| 3. | [SENSe:]AVERage[<chno>][:STATe] | IEEE488.1-1987 command mode
AVERAGE
AVER |
|----|---------------------------------|--|

- Function ON/OFF of averaging
- Presence of command and query Command / Query
- Command [SENSe:]AVERage[<chno>][:STATe] <bool>
AVERAGE
AVER<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Sets ON/OFF of the averaging.

Initial setting OFF

The averaging averages the data by adding time weight to the measured data before formatted. Since this method averages the data in accordance with the vector quantity, the noise level can be reduced.

The averaging process is as follows:

$$\bar{Y}_{(n)} = \frac{n-1}{n} \cdot \bar{Y}_{(n-1)} + \frac{1}{n} \cdot Y_{(n)} \quad (n \leq N)$$

$$\bar{Y}_{(n)} = \frac{N-1}{N} \cdot \bar{Y}_{(n-1)} + \frac{1}{N} \cdot Y_{(n)} \quad (n > N)$$

$\bar{Y}_{(n)}$: nth averaged data

$Y_{(n)}$: nth data

N: Number of averaging times

AVERAGE of R3762/63 command is identical to AVER OFF.

- Caution Smoothing obtains the moving average between adjacent formatted data. Since the method averages the scalar quantity, it reduces the noise width but does not reduce the noise level.

| | | |
|----|--|---|
| 4. | [SENSe:]BANDwidth[<chno>][:RESolution] | IEEE488.1-1987 command mode
RBW
RBW{1K 300 100 30 10}HZ |
|----|--|---|

- Function Bandwidth setting
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SENSe:]BANDwidth[<chno>][:RESolution] <int>
 - Parameter <int>
 - Response type NRI (integer value)
- IEEE488.1-1987 command mode
 - Command RBW<int>
RBW{1K | 300 | 100 | 30 | 10}HZ
 - Parameter <int>
 - Response type NRI (RBW command)
0 | 1 (RBW{1K | 300 | 100 | 30 | 10}HZ command)
- Description Sets the resolution bandwidth of the receiver.

Initial setting 10kHz

The resolution bandwidth can be selected in the range 10kHz to 3Hz, as shown below. The maximum sweeping speed and noise level per point depend on the resolution bandwidth selected.

(1 of 2)

| Resolution bandwidth | Maximum sweeping speed per point |
|----------------------|----------------------------------|
| 20kHz * | 0.100msec/POINT |
| 15kHz * | 0.125msec/POINT |
| 10kHz * | 0.150msec/POINT |
| 7kHz * | 0.200msec/POINT |
| 5kHz * | 0.250msec/POINT |
| 4kHz * | 0.300msec/POINT |
| 3kHz * | 0.400msec/POINT |
| 2kHz * | 0.550msec/POINT |
| 1.5kHz * | 0.750msec/POINT |
| 1kHz | 1.0msec/POINT |
| 700Hz | 1.4msec/POINT |
| 500Hz | 1.9msec/POINT |

7.10.1 Commands Used for All Models

(2 of 2)

| Resolution bandwidth | Maximum sweeping speed per point |
|----------------------|----------------------------------|
| 400Hz | 2.7msec/POINT |
| 300Hz | 3.4msec/POINT |
| 200Hz | 5.0msec/POINT |
| 150Hz | 7.0msec/POINT |
| 100Hz | 11.0msec/POINT |
| 70Hz | 14.0msec/POINT |
| 50Hz | 19.0msec/POINT |
| 40Hz | 26.1msec/POINT |
| 30Hz | 34.9msec/POINT |
| 20Hz | 50.1msec/POINT |
| 15Hz | 70.1msec/POINT |
| 10Hz | 99.3msec/POINT |

* : Only the commands compliant with IEEE488.2-1987 can be set.

5. [SENSe:]BANDwidth[<chno>][:RESolution]:AUTO IEEE488.1-1987 command mode
RBWAUTO

- Function Automatic bandwidth setting
- Presence of command and query Command / Query
- Command [SENSe:]BANDwidth[<chno>][:RESolution]:AUTO <bool>
RBWAUTO
- Parameter <bool>
- Response type 0 1 1
- Description Automatically sets the resolution bandwidth in accordance with the measurement frequency.
The maximum sweeping speed and noise level per point depend on the resolution bandwidth selected.

| Resolution bandwidth | Maximum sweeping speed per point |
|----------------------|----------------------------------|
| 20kHz | 0.100msec/POINT |
| 15kHz | 0.125msec/POINT |
| 10kHz | 0.150msec/POINT |
| 7kHz | 0.200msec/POINT |
| 5kHz | 0.250msec/POINT |
| 4kHz | 0.300msec/POINT |
| 3kHz | 0.400msec/POINT |
| 2kHz | 0.550msec/POINT |
| 1.5kHz | 0.750msec/POINT |
| 1kHz | 1.0msec/POINT |
| 700Hz | 1.4msec/POINT |
| 500Hz | 1.9msec/POINT |
| 400Hz | 2.7msec/POINT |
| 300Hz | 3.4msec/POINT |
| 200Hz | 5.0msec/POINT |
| 150Hz | 7.0msec/POINT |
| 100Hz | 11.0msec/POINT |
| 70Hz | 14.0msec/POINT |
| 50Hz | 19.0msec/POINT |
| 40Hz | 26.1msec/POINT |
| 30Hz | 34.9msec/POINT |
| 20Hz | 50.1msec/POINT |
| 15Hz | 70.1msec/POINT |
| 10Hz | 99.3msec/POINT |

7.10.1 Commands Used for All Models

- **Caution**

The maximum sweeping speed per point depends on the resolution bandwidth. Since at particularly low frequencies the resolution bandwidth is low and the sweeping speed is reduced, do not set the frequency too low.

| | | |
|----|--|---|
| 6. | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] | IEEE488.1-1987 command mode
NORM,NORMS
OPEN,SHORT,LOAD
S11OPEN,S11SHORT,S11LOAD,
S22OPEN,S22SHORT,S22LOAD,
FWDTRNS,FWDMATCH,
REVTRNS,REVMATCH,
OMITISO,FWDISO,REVISO |
|----|--|---|

- Function Calibration data acquisition
- Presence of command and query Command
- Command [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] <standard>
(NORM | SNOR),S11O,S11S,S11L,S22O,S22S,S22L,FTR,
FMAT,RTR,RMAT,GTHRU,OIS,FIS,RIS <bool>
OPEN,SHORT,LOAD,S11OPEN,S11SHORT,S11LOAD,
S22OPEN,S22SHORT,S22LOAD,FWDTRNS,FWDMATCH,
REVTRNS,REVMATCH,OMITISO,FWDISO,REVISO
- Parameter <standard>={NORMalize | SNORmalize | OPEN | SHORT |
LOAD}
- Description Acquires the calibration data.
This command restarts the sweeping and acquires the calibration data.
If the averaging function is set to ON, the calibration data are acquired after the sweeping has been repeated the number of times specified.
If the calibration data have already been acquired, the data will be updated. However, when one-port full calibration and two-port full calibration are in progress, the data cannot be updated. In this case, the data should be cleared then updated.

7.10.1 Commands Used for All Models

| R3762/63
command | R3764/66, R3765/67
command parameter | Operation (acquired data) |
|---------------------|---|--|
| NORM ON | NORM | Normalize: Acquired and finished simultaneously |
| NORMS ON | SNOR | Short normalize: Acquired and finished simultaneously |
| OPEN | OPEN | One-port full calibration Open data |
| SHORT | SHOR | One-port full calibration Short data |
| LOAD | LOAD | One-port full calibration Load data |
| S11OPEN | S11O | Two-port full calibration Open data (S11) |
| S11SHORT | S11S | Two-port full calibration Short data (S11) |
| S11LOAD | S11L | Two-port full calibration Load data (S11) |
| S22OPEN | S22O | Two-port full calibration Open data (S22) |
| S22SHORT | S22S | Two-port full calibration Short data (S22) |
| S22LOAD | S22L | Two-port full calibration Load data (S22) |
| FWDTRNS | FTR | Two-port full calibration Forward direction through characteristic data |
| FWDMATCH | FMAT | Two-port full calibration Forward direction port matching characteristic data |
| REVTRNS | RTR | Two-port full calibration Reverse direction through characteristic data |
| REVMATCH | RMAT | Two-port full calibration Reverse direction port matching characteristic data |
| --- | GTHRU | Two-port full calibration Acquires the above four (transmission characteristics) together. |
| OMITISO | OIS | Two-port full calibration Isolation data (OMIT) |
| FWDISO | FIS | Two-port full calibration Isolation data (Forward) |
| REVISO | RIS | Two-port full calibration Isolation data (Reverse) |

| | | |
|----|--|-----------------------------|
| 7. | [SENSe:]CORRection[<chno>]:COLLect:DELeTe
CLEAR | IEEE488.1-1987 command mode |
|----|--|-----------------------------|

- Function Calibration data clearing
- Presence of command and query Command
- Command [SENSe:]CORRection[<chno>]:COLLect:DELeTe
CLEAR
- Description Clears the calibration data.
For one-port full calibration and two-port full calibration, once the calibration has finished, it is impossible to acquire the data again until the data have been cleared. Therefore, to acquire the calibration data again, the data should be cleared.
Note that if the calibration data are to be cleared, the correction measurement should be set to OFF.

| | | |
|----|---|-----------------------------|
| 8. | [SENSe:]CORRection[<chno>]:COLLect:SAVE
DONE
DONE1PORT
DONE2PORT | IEEE488.1-1987 command mode |
|----|---|-----------------------------|

- Function Calculation of error coefficient from calibration data
- Presence of command and query Command
- Command [SENSe:]CORRection[<chno>]:COLLect:SAVE
DONE
DONE1PORT
DONE2PORT
- Description Calculates the error coefficient from the calibration data acquired and sets the correction measurement function to ON.

7.10.1 Commands Used for All Models

| | | |
|----|---------------------------------------|--|
| 9. | [SENSe:]CORRection[<chno>]:CSET:STATe | IEEE488.1-1987 command mode
CORRECT |
|----|---------------------------------------|--|

- Function ON/OFF of correction measurement
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CSET:STATe <bool>
CORRECT<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects ON/OFF of correction measurement using the calibration data.

If the calibration data have already been gained, this command should be used to perform the correction measurement. Since the stored calibration data are not cleared when this command is set to OFF, it is possible to perform the correction measurement by setting the command to ON at any time.

| | | |
|-----|--|-----------------------------|
| 10. | [SENSe:]CORRection[<chno>]:CSET:INTerpolate <bool>
INTERPOL | IEEE488.1-1987 command mode |
|-----|--|-----------------------------|

- Function Interpolation error correction ON/OFF
- Presence of command and query Command / Query
- Command {SENSe:]CORRection[<chno>]:CSET:INTerpolate<bool>
INTERPOL<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects ON/OFF of interpolation error correction measurement.
Changes the frequency range, the measurement points and so on without re-obtaining the correction data.
When changing the frequency range or the number of measurement points with this function activated, the correction data is calculated from the previously obtained correction data.
The following settings are enabled.
 - (1) Change of the Sweep range (Only in the corrective range)
 - (2) Change of the Sweep type (Linear sweep, Log sweep, Level sweep)
 - (3) Change of the number of Sweep points

NOTE: *When it is impossible to interpolate the data according to the setting conditions, the correction data previously obtained is used just as it is.*

7.10.1 Commands Used for All Models

| | | |
|-----|---|-----------------------------|
| 11. | [SENSe:]CORRection[<chno>]:EDELay:DISTance
LENGVAL | IEEE488.1-1987 command mode |
|-----|---|-----------------------------|

- Function Electrical length (distance) setting
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:EDELay:DISTance <real>
LENGVAL<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the value of the electrical length correction by inputting the distance.

$$\begin{aligned} \text{Correction value } \phi \text{ (deg)} &= \frac{L}{c} \times \frac{1}{V_f} \times f \times 360 \\ &= S \times f \times 360 \end{aligned}$$

- L : Electrical length (distance)
- V_f : Velocity factor
- c : Velocity of light
- f : Frequency
- S : Electrical length (time)

| | | |
|-----|---|-----------------------------|
| 12. | [SENSe:]CORRection[<chno>]:EDELay:STATe | IEEE488.1-1987 command mode |
| | | LENGTH |

- Function ON/OFF of electrical length correction
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:EDELay:STATe <bool>
LENGTH<bool>
- Parameter <bool>
- Response type 0 1 1
- Description Selects ON/OFF of the electrical length correction.
Corrects the phase of the measurement data in accordance with the electrical length already set.
This command is used to add or remove the phase of the connection cable so that only the phase of the object can be measured.

$$\begin{aligned} \text{Correction value } \phi \text{ (deg)} &= \frac{L}{c} \times \frac{1}{V_f} \times f \times 360 \\ &= S \times f \times 360 \end{aligned}$$

- L : Electrical length (distance)
- V_f : Velocity factor
- c : Velocity of light
- f : Frequency
- S : Electrical length (time)

Network Analyzer Programming Manual (Part 2)

7.10.1 Commands Used for All Models

| | | |
|-----|--|-------------------------------------|
| 13. | [SENSe:]CORRection[<chno>]:EDELay[:TIME] | IEEE488.1-1987 command mode
ELED |
|-----|--|-------------------------------------|

- Function Electrical length (time) setting
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:EDELay[:TIME] <real>
ELED<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the value of the electrical length in time.

$$\begin{aligned} \text{Correction value } \phi \text{ (deg)} &= \frac{L}{c} \times \frac{1}{V_f} \times f \times 360 \\ &= S \times f \times 360 \end{aligned}$$

L : Electrical length (distance)

V_f : Velocity factor

c : Velocity of light

f : Frequency

S : Electrical length (time)

14. [SENSe:]CORRection[<chno>]:GPHase:STATe IEEE488.1-1987 command mode
INPCOR

- Function ON/OFF of frequency characteristic correction in the receiver part
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SENSe:]CORRection[<chno>]:GPHase:STATe <bool>
 - Parameter <bool>
 - Response type 0 | 1
- IEEE488.1-1987 command mode
 - Command INPCOR<bool>
 - Parameter <bool>
 - Response type 0 | 1
- Description Selects whether or not the frequency characteristics in the receiver part are to be corrected. (ON or OFF)

15. [SENSe:]CORRection[<chno>]:OFFSet:PHASe IEEE488.1-1987 command mode
PHAO

- Function Phase offset value setting
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:OFFSet:PHASe <real>
PHAO<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the value of the phase offset.
A constant value is added to the phase data. Unlike the electrical length correction, the command always add a constant regardless of the frequency.
- Caution If 0 is set, CORR:OFFS:STAT is automatically set to OFF.
If the value other than 0 is set, CORR:OFFS:STAT is automatically set to ON.

7.10.1 Commands Used for All Models

| | | |
|-----|---|---|
| 16. | [SENSe:]CORRection[<chno>]:OFFSet:STATe
PHAOFS | IEEE488.1-1987 command mode |
| • | Function | ON/OFF of phase offset function |
| • | Presence of command and query | Command / Query |
| • | Command | [SENSe:]CORRection[<chno>]:OFFSet:STATe <bool>
PHAOFS<bool> |
| • | Parameter | <bool> |
| • | Response type | 0 1 |
| • | Description | Selects ON/OFF of the phase offset function.
A constant value is added to the phase data. Unlike the electrical length correction, the command always add a constant regardless the frequency. |
| • | Caution | If OFF is set, CORR:OFFS:PHAS is automatically set to 0. |

| | | |
|-----|---|---|
| 17. | [SENSe:]CORRection[<chno>]:PEXTension:TIME[<eport>]
EPORT{R A B 1 2} | IEEE488.1-1987 command mode |
| • | Function | Setting of correction value of reference plane extension |
| • | Presence of command and query | Command / Query |
| • | Command | [SENSe:]CORRection[<chno>]:PEXTension:TIME[<eport>]
<real>
EPORT{R A B 1 2}<real> |
| • | Parameter | <real> |
| • | Response type | NR3 (real value) |
| • | Description | Sets the value of the reference plane extension.
The command corrects the extension in accordance with the input port. While the electrical correction simply corrects the set value, this command corrects in accordance with the input port condition by setting the value corresponding to the input port.
For example, this command automatically sets the correction value to two times the port extension value for reflection measurement and to one time the port extension value for transfer measurement. |

| | | |
|-----|---|-------------------------------------|
| 18. | [SENSe:]CORRection[<chno>]:PEXTension:STATe | IEEE488.1-1987 command mode
PORE |
|-----|---|-------------------------------------|

- Function ON/OFF of the function of reference plane extension
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:PEXTension:STATe <bool>
PORE<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects ON/OFF of the function of the reference plane extension.
The command corrects the extension in accordance with the input port. While the electrical correction simply corrects the set value, this command corrects in accordance with the input port condition by setting the value corresponding to the input port.
For example, this command automatically sets the correction value to two times the port extension value for reflection measurement and to one time the port extension value for transfer measurement.

7.10.1 Commands Used for All Models

| | | |
|-----|---|-----------------------------|
| 19. | [SENSe:]CORRection[<chno>]:RVELOCITY:COAX
VELOFACT | IEEE488.1-1987 command mode |
|-----|---|-----------------------------|

- Function Cable transfer coefficient setting
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:RVELOCITY:COAX <real>
VELOFACT<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the cable transfer coefficient value.

$$\begin{aligned} \text{Correction value } \phi \text{ (deg)} &= \frac{L}{c} \times \frac{1}{V_f} \times f \times 360 \\ &= S \times f \times 360 \end{aligned}$$

$$V_f = \frac{1}{\sqrt{\epsilon_R}}$$

- l : Electrical length (distance)
- V_f : Velocity factor
- c : Velocity of light
- f : Frequency
- S : Electrical length (time)
- ε_R : Relative permittivity

| | | |
|-----|-------------------------------|---|
| 20. | [SENSe:]FUNctIon[<chno>][:ON] | IEEE488.1-1987 command mode
{R A B AR BR AB BDC BDCR}IN,
S11,S12,S21,S22,SFWD,SREV
SMEAS |
|-----|-------------------------------|---|

- **Function** Specification of the measure mode and ON/OFF of the sub measure mode
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**

| | |
|---------------|--|
| Command | [SENSe:]FUNctIon[<chno>][:ON] <input> |
| Parameter | <input>={"POWer:{AC DC} {1 2 3}"
"POWer:{AC DC}:RATio {21 31 213}"
"POWer:{S11 S12 S22 S21 SFWD SREV}"
"POWer:NONE" } |
| Response type | "POW:{AC DC} {1 2 3}"
"POW:{AC DC}:RAT {21 31 213}"
"POW:{S11 S12 S22 S21 SFWD SREV}"
"POW:NONE" |
- **IEEE488.1-1987 command mode**

| | |
|---------------|---|
| Command | {R A B AR BR AB BDC BDCR}IN
S11,S12,S21,S22,SFWD,SREV
SMEAS<bool> |
| Response type | 0 1 |
- **Description** Specifies the measure mode for measurement/analysis, and switches ON/OFF of the sub measure.
In IEEE488.2-1987 command mode, specifies the measure mode by specifying the channel by <chno>. Specifying 3 or 4 for <chno> when the sub measure is OFF, the sub measure becomes ON.
Mode setting of the sub measure is performed by specifying 3 or 4 for <chno>, or by setting the active channel to 3 or 4 in advance. To set the sub measure to OFF, sets the active channel to 3 or 4, or specifies 3 or 4 for <chno>, and sets the parameter "POW:NONE." Then the active channel is switched to the corresponding main channel.

7.10.1 Commands Used for All Models

In IEEE488.1-1987 command mode, the setting is performed to the active channel. The setting must be performed after switching the active channel.

To set the sub measure to ON, sends SMEASON. Then the sub measure mode becomes the same as the corresponding main measure mode, and the active channel is switched to the sub channel.

To set the sub measure to OFF, sends SMEASOFF. The active channel is switched to the corresponding main channel.

NOTE: When the sub measure is OFF, the sub channel cannot be switched to active.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation (input port) |
|------------------|--------------------------------------|--|
| RIN | POW:AC 1 | Sets input R. |
| AIN | POW:AC 2 | Sets input A. |
| BIN | POW:AC 3 | Sets input B. |
| ARIN | POW:AC:RAT 2,1 | Sets input A/R (for ratio measurement). |
| BRIN | POW:AC:RAT 3,1 | Sets input B/R (for ratio measurement). |
| ABIN | POW:AC:RAT 2,3 | Sets input A/B (for ratio measurement). |
| BDCIN | POW:DC 3 | Sets input B (DC) (for DC measurement). |
| BDCRIN | POW:DC :RAT 3,1 | Sets input B (DC)/R (for ratio measurement). |
| S11 | POW:S11 | Sets S11. |
| S12 | POW:S12 | Sets S12. |
| S21 | POW:S21 | Sets S21. |
| S22 | POW:S22 | Sets S22. |
| SFWD | POW:SFWD | Sets S11 & S21 (REFL&TRANS). |
| SREV | POW:SREV | Sets S22 & S12. |
| SMEASON | Specifies 3 or 4 for <chno>. | Sets the sub measure to ON. |
| SMEASOFF | POW:NONE | Sets the sub measure to OFF. |

Refer to "7.5.1 1. DISPlay:ACTive", too.

| | | |
|-----|---------------------------------|--|
| 21. | [SENSe:]FUNctIon[<chno>]:POWer | IEEE488.1-1987 command mode
{R A B AR BR AB BDC BDCR}IN,
S11,S12,S21,S22,SFWD,SREV
SMEAS |
| | • Function | Measure mode specification and ON/OFF of sub measure |
| | • Presence of command and query | Command / Query |
| | • IEEE488.2-1987 command mode | |
| | Command | [SENSe:]FUNctIon[<chno>]:POWer <input> |
| | Parameter | <input>={R A B AR BR AB BDC BDCR S11 S12 S21 S22 SFWD SREV NONE} |
| | Response type | R A B AR BR AB BDC BDCR S11 S12 S21 S22 SFWD SREV NONE |
| | • IEEE488.1-1987 command mode | |
| | Command | {R A B AR BR AB BDC BDCR}IN
S11,S12,S21,S22,SFWD,SREV
SMEAS<bool> |
| | Response type | 0 1 |
| | • Description | Specifies the measure mode for measurement/analysis, and switches ON/OFF of the sub measure.

In IEEE488.2-1987 command mode, specifies the measure mode by specifying the channel by <chno>. Specifying 3 or 4 for <chno> when the sub measure is OFF, the sub measure becomes ON.

Mode setting of the sub measure is performed by specifying 3 or 4 for <chno>, or by setting the active channel to 3 or 4 in advance. To set the submeasure to OFF, sets the active channel to 3 or 4, or specifies 3 or 4 for <chno>, and sets the parameter NONE.

Then the active channel is switched to the corresponding main channel.

In IEEE488.1-1987 command mode, the setting is performed to the active channel. The setting must be performed after switching the active channel.

To set the sub measure to ON, sends SMEASON. Then the sub measure mode becomes the same as the corresponding main measure mode, and the active channel is switched to the sub channel.

To set the sub measure to OFF, sends SMEASOFF. The active channel is switched to the corresponding main channel. |

NOTE: When the sub measure is OFF, the sub channel cannot be switched to active.

7.10.1 Commands Used for All Models

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation (input port) |
|------------------|--------------------------------------|------------------------------------|
| RIN | R | Sets R input |
| AIN | A | Sets A input |
| BIN | B | Sets B input |
| ARIN | AR | Sets A/R input (ratio measurement) |
| BRIN | BR | Sets B/R input (ratio measurement) |
| ABIN | AB | Sets A/B input (ratio measurement) |
| BDCIN | BDC | Sets B (DC) input |
| BDCRIN | BDCR | Sets B (DC)/R input |
| S11 | S11 | Sets S11 |
| S12 | S12 | Sets S12 |
| S21 | S21 | Sets S21 |
| S22 | S22 | Sets S22 |
| SFWD | SFWD | Sets S11 & S21 (REFL&TRANS) |
| SREV | SREV | Sets S22 & S12 |
| SMEASON | Specifies 3 or 4 for <chno>. | Sets the sub measure to ON. |
| SMEASOFF | NONE | Sets the sub measure to OFF. |

Refer to "7.5.1 1. DISPlay:ACTive", too.

22. [SENSe:]CORRection[<chno>]:CKIT:TERMinal[<port>] IEEE488.1-1987 command mode
PORT{1|2}{FEM|MAL}

- Function Setting the male/female of connector at the test port
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SENSe:]CORRection[<chno>]:CKIT:TERMinal[<port>]
 - Parameter <type>
 - Response type <type>={FEMale|MALe}
 - FEM|MAL
- IEEE488.1-1987 command mode
 - Command PORT{1|2}{FEM|MAL}
 - Response type 0|1
- Description Sets the calibration kit for calibration procedure by switching the male or female of connector on the test port.
- Caution
 - This is not the setting of male or female at the calibration kit side but at the test port side.
 - The connector type of calibration kit is set by CORR:CKIT[:TYPE]<int> or CKIT{0|1|2|3|4|5}.

7.10.1 Commands Used for All Models

23. [SENSe:]CORRection[<chno>]:CKIT[:TYPE] IEEE488.1-1987 command mode
CKIT{0|1|2|3|4|5}

- Function Setting the connector type of calibration kit
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SENSe:]CORRection[<chno>]:CKIT[:TYPE] <int>
 - Parameter <int>
 - Response type NR1 (integer value)
- IEEE488.1-1987 command mode
 - Command CKIT{0|1|2|3|4|5}
 - Response type 0|1
- Description Sets the calibration kit for calibration procedure by choosing the connector type for calibration kit.

| R3762/63 command | R3764/66, R3765/67 command parameter | Connector type |
|------------------|--------------------------------------|----------------------------|
| CKIT0 | 0 | DON'T CARE |
| CKIT1 | 1 | N type (50Ω) (male/female) |
| CKIT2 | 2 | N type (75Ω) (male/female) |
| CKIT3 | 3 | 3.5mm (male/female) |
| CKIT4 | 4 | 7mm |
| CKIT5 | 5 | USER DEFINE |

- Caution The male/female of connector is set by
CORR:CKIT:TERM{FEM|MAL} or PORT{1|2}{FEM|MAL}.

| | | |
|-----|--|---------------------------------------|
| 24. | [SENSe:]CORRection[<chno>]:SLOPe:PHASe | IEEE488.1-1987 command mode
PHASLO |
|-----|--|---------------------------------------|

- Function Setting the phase slope
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:SLOPe:PHASe <real>
PHASLO<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the slope value (deg).
The phase value that start point is 0° and have the gradient to become the specified phase value at the final point is added to the phase data.
This gradient is not pertinent to frequency and linearly calculated by the point.

| | | |
|-----|---|--|
| 25. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:SAVE | IEEE488.1-1987 command mode
STDSAVE |
|-----|---|--|

- Function Saving the STD value as USER-DEFINE
- Presence of command and query Command
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:SAVE
STDSAVE
- Description Saves (registers) each STD value that is set by CORR:CKIT:DEF:STAN... or STD{1 | 2}... as USER-DEFINE.

7.10.1 Commands Used for All Models

26. [SENSe:]CORRection[<chno>]:CKIT:DEFine IEEE488.1-1987 command mode
:STANdard[<port>]:OCAPacitance[<n>] STD{1|2}C{0|1|2|3}

- Function Setting the open capacity of open STD
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:OCAPacitance[<n>] <real>
STD{1|2}C{0|1|2|3}<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the open capacity of open STD (calibration kit)

| R3762/63
command | R3764/66, R3765/67
command <n> | Range of setting |
|---------------------|-----------------------------------|---|
| STD{1 2}C0 | 0 | ±10k (10 ⁻¹⁵ F) |
| STD{1 2}C1 | 1 | ±10k (10 ⁻²⁷ F/Hz) |
| STD{1 2}C2 | 2 | ±10k (10 ⁻³⁶ F/Hz ²) |
| STD{1 2}C3 | 3 | ±10k (10 ⁻⁴⁵ F/Hz ³) |

- Caution When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

- | | | |
|---------------------------------|--|-----------------------------|
| 27. | <code>[SENSe:]CORRection[<chno>]:CKIT:DEFine</code> | IEEE488.1-1987 command mode |
| | <code>:STANdard[<port>]:ODELay</code> | STD{1 2}ODEL |
| • Function | Setting the electrical length (time) of open STD | |
| • Presence of command and query | Command / Query | |
| • Command | <code>[SENSe:]CORRection[<chno>]:CKIT:DEFine</code>
<code>:STANdard[<port>]:ODELay <real></code>
<code>STD{1 2}ODEL<real></code> | |
| • Parameter | <real> | |
| • Response type | NR3 (integer value) | |
| • Description | Sets the electrical length of open STD (calibration kit) by time. | |
| • Caution | When the following operation is performed without executing
CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values
are erased.
{System preset, *RST, Recall, Load or setting of calibration kit
connector} | |
| 28. | <code>[SENSe:]CORRection[<chno>]:CKIT:DEFine</code> | IEEE488.1-1987 command mode |
| | <code>:STANdard[<port>]:OLOS</code> | STD{1 2}OLOS |
| • Function | Setting the loss of open STD | |
| • Presence of command and query | Command / Query | |
| • Command | <code>[SENSe:]CORRection[<chno>]:CKIT:DEFine</code>
<code>:STANdard[<port>]:OLOSs <real></code>
<code>STD{1 2}OLOS<real></code> | |
| • Parameter | <real> | |
| • Response type | NR3 (real value) | |
| • Description | Sets the loss (Ω /sec) of open STD (calibration kit). | |
| • Caution | When the following operation is performed without executing
CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values
are erased.
{System preset, *RST, Recall, Load or setting of calibration kit
connector} | |

Network Analyzer Programming Manual (Part 2)

7.10.1 Commands Used for All Models

| | | |
|-----|--|---|
| 29. | [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:OIMPedance | IEEE488.1-1987 command mode
STD{1 2}OIMP |
|-----|--|---|

- **Function** Setting the characteristic impedance (Z0) of open STD
- **Presence of command and query** Command / Query
- **Command** [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:OIMPedance <real>
STD{1 | 2}OIMP<real>
- **Parameter** <real>
- **Response type** NR3 (real value)
- **Description** Sets the characteristic impedance (Z0) of open STD (calibration kit).
- **Caution** When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

| | | |
|-----|--|---|
| 30. | [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:SDELay | IEEE488.1-1987 command mode
STD{1 2}SDEL |
|-----|--|---|

- **Function** Setting the electrical length (time) of short STD
- **Presence of command and query** Command / Query
- **Command** [SENSe:]CORRection[<chno>]:CKIT:DEFine
STANdard[<port>]:SDELay <real>
STD{1 | 2}SDEL.<real>
- **Parameter** <real>
- **Response type** NR3 (real value)
- **Description** Sets the electrical length of short STD (calibration kit) by time.
- **Caution** When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

| | | |
|-----|---|---|
| 31. | [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:SLOSs | IEEE488.1-1987 command mode
STD{1 2}SLOS |
|-----|---|---|

- Function Setting the loss of short STD
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:SLOSs <real>
STD{1|2}SLOS<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the loss (Ω /sec) of short STD (calibration kit).
- Caution When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

| | | |
|-----|--|---|
| 32. | [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:SIMPedance | IEEE488.1-1987 command mode
STD{1 2}SIMP |
|-----|--|---|

- Function Setting the characteristic impedance (Z_0) of short STD
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:SIMPedance <real>
STD{1|2}SIMP<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the characteristic impedance (Z_0) of short STD (calibration kit).
- Caution When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

7.10.1 Commands Used for All Models

33. [SENSe:]CORRection[<chno>]:CKIT:DEFine IEEE488.1-1987 command mode
:STANdard[<port>]:TDELay STD1TDEL<real>

- Function Setting the electrical length (time) of through STD
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine
STANdard[<port>]:TDELay <real>
STD1TDEL<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the electrical length through STD (calibration kit) by time.

| R3762/63
command | R3764/66, R3765/67
command <port> | Correspond port |
|---------------------|--------------------------------------|----------------------|
| STD1TDEL | 1 | between port 1 and 2 |

- Caution When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

34. [SENSe:]CORRection[<chno>]:CKIT:DEFine IEEE488.1-1987 command mode
:STANdard[<port>]:TLOSs STDITLOS

- Function Setting the loss of through STD
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine
:STANdard[<port>]:TLOSs <real>
STDITLOS<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the loss (Ω /sec) of through STD (calibration kit).

| | | |
|---------------------|--------------------------------------|----------------------|
| R3762/63
command | R3764/66, R3765/67
command <port> | Correspond port |
| STDITLOS | 1 | between port 1 and 2 |

- Caution When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

7.10.1 Commands Used for All Models

35. [SENSe:]CORRection[<chno>]:CKIT:DEFine IEEE488.1-1987 command mode
:STANdard[<port>]:TIMPedance STDITIMP

- Function Setting the characteristic impedance (Z0) of through STD
- Presence of command and query Command / Query
- Command [SENSe:]CORRection[<chno>]:CKIT:DEFine
STANdard[<port>]:TIMPedance <real>
STDITIMP<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the characteristic impedance (Z0) of through STD (calibration kit).

| R3762/63 command | R3764/66, R3765/67 command <port> | Correspond port |
|------------------|-----------------------------------|----------------------|
| STDITIMP | 1 | between port 1 and 2 |

- Caution When the following operation is performed without executing CORR:CKIT:DEF:SAVE or STDSAVE, the previous set values are erased.
{System preset, *RST, Recall, Load or setting of calibration kit connector}

7.10.2 Commands Used for Only R3765/67G Series

| | | |
|----|-------------------------------|--|
| 1. | [SENSe:]FUNctIon[<chno>][:ON] | IEEE488.1-1987 command mode
{R A B C AR BR CR AB AC BC BDC BDCR CDC CDCR}IN
S11,S21,S12,S22,SFWD,SREV,S11B,
S31,S13,S33B,SFWDDB,SREVB,S22C,
S32,S23,S33C,SFWDDB,SREVC,S11D,
S41,S14,S44D,SFWDDB,SREVD,S22E,
S42,S24,S44E,SFWDDB,SREVE,S33F,
S43,S34,S44F,SFWDDB,SREVF,SMEAS |
|----|-------------------------------|--|

- **Function** Specification of the measure mode and ON/OFF of the sub measure mode
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**

| | |
|-----------|--|
| Command | [SENSe:]FUNctIon[<chno>][:ON] |
| Parameter | <input>={"POWer:{AC DC} {1 2 3 4}" "POWer:{AC DC}:RATio {2 1 3 1 4 1 3 2 4 2 4 3}" "POWer:{S11 S21 S12 S22 SFWD SREV S11B S31 S13 S33B SFWDDB SREVB S22C S32 S23 S33C SFWDDB SREVC S11D S41 S14 S44D SFWDDB SREVD S22E S42 S24 S44E SFWDDB SREVE S33F S43 S34 S44F SFWDDB SREVF}" "POWer:NONE" } |
- **Response type** {"POW:{AC | DC} {1 | 2 | 3 | 4}" | "POW:{AC | DC}:RAT {2 | 1 | 3 | 1 | 4 | 1 | 3 | 2 | 4 | 2 | 4 | 3}" | "POWer:{S11 | S21 | S12 | S22 | SFWD | SREV | S11B | S31 | S13 | S33B | SFWDDB | SREVB | S22C | S32 | S23 | S33C | SFWDDB | SREVC | S11D | S41 | S14 | S44D | SFWDDB | SREVD | S22E | S42 | S24 | S44E | SFWDDB | SREVE | S33F | S43 | S34 | S44F | SFWDDB | SREVF}" | "POWer:NONE" }
- **IEEE488.1-1987 command mode**

| | |
|---------------|---|
| Command | {R A B C AR BR CR AB AC BC BDC BDCR CDC CDCR}IN
S11,S21,S12,S22,SFWD,SREV,S11B,S31,S13,S33B,SFWDDB,
SREVB,S22C,S32,S23,S33C,SFWDDB,SREVC,S11D,S41,S14,
S44D,SFWDDB,SREVD,S22E,S42,S24,S44E,SFWDDB,SREVE,
S33F,S43,S34,S44F,SFWDDB,SREVF,SMEAS<bool> |
| Response type | 0 1 |

7.10.2 Commands Used for Only R3765/67G Series

- Description

Specifies the measure mode for measurement/analysis, and switches ON/OFF of the sub measure.

In IEEE488.2-1987 command mode, specifies the measure mode by specifying the channel by <chno>. Specifying 3 or 4 for <chno> when the sub measure is OFF, the sub measure becomes ON.

Mode setting of the sub measure is performed by specifying 3 or 4 for <chno>, or by setting the active channel to 3 or 4 in advance. To set the sub measure to OFF, sets the active channel to 3 or 4, or specifies 3 or 4 for <chno>, and sets the parameter NONE.

Then the active channel is switched to the corresponding main channel.

In IEEE488.1-1987 command mode, the setting is performed to the active channel. The setting must be performed after switching the active channel.

To set the sub measure to ON, sends SMEASON. Then the sub measure mode becomes the same as the corresponding main measure mode, and the active channel is switched to the sub channel.

To set the sub measure to OFF, sends SMEASOFF. The active channel is switched to the corresponding main channel.
- Caution

When the sub measure is OFF, the sub channel cannot be switched to active.

Adding A, B, C, D, E or F to the command parameter, when you attempt to set reflection measurement parameters, determines the test port combination.

When the 3-port full cal (equipped with OPT 11) or the 4-port full cal (equipped with OPT 14) is turned on, the test port does not need to be connected because all ports can be measured.

 - A : Measures between PORT1 and PORT2.
 - B : Measures between PORT1 and PORT3.
 - C : Measures between PORT2 and PORT3.
 - D : Measures between PORT1 and PORT4.
 - E : Measures between PORT2 and PORT4.
 - F : Measures between PORT3 and PORT4.

| R3762/63
command | R3764/66, R3765/67
command parameter | Operation (input port) |
|---------------------|---|---|
| RIN | "POW:AC 1" | Sets input R. |
| AIN | "POW:AC 2" | Sets input A. |
| BIN | "POW:AC 3" | Sets input B. |
| CIN | "POW:AC 4" | Sets input C. |
| ARIN | "POW:AC:RAT 2,1" | Sets input A/R (for ratio measurement). |
| BRIN | "POW:AC:RAT 3,1" | Sets input B/R (for ratio measurement). |
| CRIN | "POW:AC:RAT 4,1" | Sets input C/R (for ratio measurement). |
| ABIN | "POW:AC:RAT 2,3" | Sets input A/B (for ratio measurement). |
| ACIN | "POW:AC:RAT 2,4" | Sets input A/C (for ratio measurement). |
| BCIN | "POW:AC:RAT 3,4" | Sets input B/C (for ratio measurement). |
| BDCIN | "POW:DC 3" | Sets input B(DC). |
| BDCRIN | "POW:DC:RAT 3,1" | Sets input B(DC)/R. |
| CDCIN | "POW:DC 4" | Sets input C(DC). |
| CDCRIN | "POW:DC:RAT 4,1" | Sets input C(DC)/R. |
| S11 | "POW:S11" | Sets S11. (Measures between PORT1 and PORT2.) |
| S21 | "POW:S21" | Sets S21. (Measures between PORT1 and PORT2.) |
| S12 | "POW:S12" | Sets S12. (Measures between PORT1 and PORT2.) |
| S22 | "POW:S22" | Sets S22. (Measures between PORT1 and PORT2.) |
| SFWD | "POW:SFWD" | Sets S11&S21. (Measures between PORT1 and PORT2.) |
| SREV | "POW:SREV" | Sets S22&S12. (Measures between PORT1 and PORT2.) |
| S11B | "POW:S11B" | Sets S11. (Measures between PORT1 and PORT3.) |
| S31 | "POW:S31" | Sets S31. (Measures between PORT1 and PORT3.) |
| S13 | "POW:S13" | Sets S13. (Measures between PORT1 and PORT3.) |
| S33B | "POW:S33B" | Sets S33. (Measures between PORT1 and PORT3.) |
| SFWDB | "POW:SFWDB" | Sets S11&S31. (Measures between PORT1 and PORT3.) |
| SREVB | "POW:SREVB" | Sets S33&S13. (Measures between PORT1 and PORT3.) |
| S22C | "POW:S22C" | Sets S22. (Measures between PORT2 and PORT3.) |
| S32 | "POW:S32" | Sets S32. (Measures between PORT2 and PORT3.) |
| S23 | "POW:S23" | Sets S23. (Measures between PORT2 and PORT3.) |
| S33C | "POW:S33C" | Sets S33. (Measures between PORT2 and PORT3.) |
| SFWDC | "POW:SFWDC" | Sets S22&S32. (Measures between PORT2 and PORT3.) |
| SREVC | "POW:SREVC" | Sets S33&S23. (Measures between PORT2 and PORT3.) |

Network Analyzer Programming Manual (Part 2)

7.10.2 Commands Used for Only R3765/67G Series

| R3762/63
command | R3764/66, R3765/67
command parameter | Operation (input port) |
|---------------------|---|---|
| S11D | "POW:S11D" | Sets S11. (Measures between PORT1 and PORT4.) |
| S41 | "POW:S41" | Sets S41. (Measures between PORT1 and PORT4.) |
| S14 | "POW:S14" | Sets S14. (Measures between PORT1 and PORT4.) |
| S44D | "POW:S44D" | Sets S44. (Measures between PORT1 and PORT4.) |
| SFWDD | "POW:SFWDD" | Sets S11&S41. (Measures between PORT1 and PORT4.) |
| SREVD | "POW:SREVD" | Sets S44&S14. (Measures between PORT1 and PORT4.) |
| S22E | "POW:S22E" | Sets S22. (Measures between PORT2 and PORT4.) |
| S42 | "POW:S42" | Sets S42. (Measures between PORT2 and PORT4.) |
| S24 | "POW:S24" | Sets S24. (Measures between PORT2 and PORT4.) |
| S44E | "POW:S44E" | Sets S44. (Measures between PORT2 and PORT4.) |
| SFWDE | "POW:SFWDE" | Sets S22&S42. (Measures between PORT2 and PORT4.) |
| SREVE | "POW:SREVE" | Sets S44&S24. (Measures between PORT2 and PORT4.) |
| S33F | "POW:S33F" | Sets S33. (Measures between PORT3 and PORT4.) |
| S43 | "POW:S43" | Sets S43. (Measures between PORT3 and PORT4.) |
| S34 | "POW:S34" | Sets S34. (Measures between PORT3 and PORT4.) |
| S44F | "POW:S44F" | Sets S44. (Measures between PORT3 and PORT4.) |
| SFWDF | "POW:SFWDF" | Sets S33&S43. (Measures between PORT3 and PORT4.) |
| SREVF | "POW:SREVF" | Sets S44&S34. (Measures between PORT3 and PORT4.) |

| | | |
|----|--------------------------------|--|
| 2. | [SENSe:]FUNCTION[<chno>]:POWer | IEEE488.1-1987command mode
{R A B C AR BR CR AB AC BC BDC BDCR CDC CDCR}IN}
S11,S21,S12,S22,SFWD,SREV,S11B,
S31,S13,S33B,SFWDDB,SREVB,S22C,
S32,S23,S33C,SFWDDB,SREVC,S11D,
S41,S14,S44D,SFWDDB,SREVD,S22E,
S42,S24,S44E,SFWDDB,SREVE,S33F,
S43,S34,S44F,SFWDDB,SREVF,SMEAS |
|----|--------------------------------|--|

- **Function** Specification of the measure mode and ON/OFF of the sub measure mode
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**

| | |
|---------------|--|
| Command | [SENSe:]FUNCTION[<chno>]:POWer<input> |
| Parameter | <input>= {R A B C AR BR CR AB AC BC BDC BDCR CDC CDCR S11 S21 S12 S22 SFWD SREV S11B S31 S13 S33B SFWDDB SREVB S22C S32 S23 S33C SFWDDB SREVC S11D S41 S14 S44D SFWDDB SREVD S22E S42 S24 S44E SFWDDB SREVE S33F S43 S34 S44F SFWDDB SREVF NONE} |
| Response type | R A B C AR BR CR AB AC BC BDC BDCR CDC CDCR S11 S21 S12 S22 SFWD SREV S11B S31 S13 S33B SFWDDB SREVB S22C S32 S23 S33C SFWDDB SREVC S11D S41 S14 S44D SFWDDB SREVD S22E S42 S24 S44E SFWDDB SREVE S33F S43 S34 S44F SFWDDB SREVF NONE |
- **IEEE488.1-1987 command mode**

| | |
|---------------|---|
| Command | {R A B C AR BR CR AB AC BC BDC BDCR CDC CDCR}IN
S11,S21,S12,S22,SFWD,SREV,S11B,S31,S13,S33B,SFWDDB,
SREVB,S22C,S32,S23,S33C,SFWDDB,SREVC,S11D,S41,S14,
S44D,SFWDDB,SREVD,S22E,S42,S24,S44E,SFWDDB,SREVE,
S33F,S43,S34,S44F,SFWDDB,SREVF,SMEAS<bool> |
| Response type | 0 1 |
- **Description** Specifies the measure mode for measurement/analysis, and switches ON/OFF of the sub measure.
In IEEE488.2-1987 command mode, specifies the measure mode by specifying the channel by <chno>. Specifying 3 or 4 for <chno> when the sub measure is OFF, the sub measure becomes ON.
Mode setting of the sub measure is performed by specifying 3 or 4 for <chno>, or by setting the active channel to 3 or 4 in advance. To set the sub measure to OFF, sets the active channel to 3 or 4, or specifies 3 or 4 for <chno>, and sets the parameter NONE.
Then the active channel is switched to the corresponding main

7.10.2 Commands Used for Only R3765/67G Series

channel.

In IEEE488.1-1987 command mode, the setting is performed to the active channel. The setting must be performed after switching the active channel.

To set the sub measure to ON, sends SMEASON. Then the sub measure mode becomes the same as the corresponding main measure mode, and the active channel is switched to the sub channel.

To set the sub measure to OFF, sends SMEASOFF. The active channel is switched to the corresponding main channel.

- **Caution**

When the sub measure is OFF, the sub channel cannot be switched to active.

Adding A, B, C, D, E or F to the command parameter, when you attempt to set reflection measurement parameters, determines the test port combination.

When the 3-port full cal (equipped with OPT 11) or the 4-port full cal (equipped with OPT 14) is turned on, the test port does not need to be connected because all ports can be measured.

A : Measueres between PORT1 and PORT2.

B : Measueres between PORT1 and PORT3.

C : Measueres between PORT2 and PORT3.

D : Measueres between PORT1 and PORT4.

E : Measueres between PORT2 and PORT4.

F : Measueres between PORT3 and PORT4.

| R3762/63
command | R3764/66, R3765/67
command parameter | Operation (input port) |
|---------------------|---|---|
| RIN | R | Sets input R. |
| AIN | A | Sets input A. |
| BIN | B | Sets input B. |
| CIN | C | Sets input C. |
| ARIN | AR | Sets input A/R (for ratio measurement). |
| BRIN | BR | Sets input B/R (for ratio measurement). |
| CRIN | CR | Sets input C/R (for ratio measurement). |
| ABIN | AB | Sets input A/B (for ratio measurement). |
| ACIN | AC | Sets input A/C (for ratio measurement). |
| BCIN | BC | Sets input B/C (for ratio measurement). |
| BDCIN | BDC | Sets input B(DC). |
| BDCRIN | BDCR | Sets input B(DC)/R. |
| CDCIN | CDC | Sets input C(DC). |
| CDCRIN | CDCR | Sets input C(DC)/R. |
| S11 | S11 | Sets S11. (Measures between PORT1 and PORT2.) |
| S21 | S21 | Sets S21. (Measures between PORT1 and PORT2.) |
| S12 | S12 | Sets S12. (Measures between PORT1 and PORT2.) |
| S22 | S22 | Sets S22. (Measures between PORT1 and PORT2.) |
| SFWD | SFWD | Sets S11&S21. (Measures between PORT1 and PORT2.) |
| SREV | SREV | Sets S22&S12. (Measures between PORT1 and PORT2.) |
| S11B | S11B | Sets S11. (Measures between PORT1 and PORT3.) |
| S31 | S31 | Sets S31. (Measures between PORT1 and PORT3.) |
| S13 | S13 | Sets S13. (Measures between PORT1 and PORT3.) |
| S33B | S33B | Sets S33. (Measures between PORT1 and PORT3.) |
| SFWDB | SFWDB | Sets S11&S31. (Measures between PORT1 and PORT3.) |
| SREVB | SREVB | Sets S33&S13. (Measures between PORT1 and PORT3.) |

7.10.2 Commands Used for Only R3765/67G Series

| R3762/63
command | R3764/66, R3765/67
command parameter | Operation (input port) |
|---------------------|---|---|
| S22C | S22C | Sets S22. (Measures between PORT2 and PORT3.) |
| S32 | S32 | Sets S32. (Measures between PORT2 and PORT3.) |
| S23 | S23 | Sets S23. (Measures between PORT2 and PORT3.) |
| S33C | S33C | Sets S33. (Measures between PORT2 and PORT3.) |
| SFWDC | SFWDC | Sets S22&S32. (Measures between PORT2 and PORT3.) |
| SREVC | SREVC | Sets S33&S23. (Measures between PORT2 and PORT3.) |
| S11D | S11D | Sets S11. (Measures between PORT1 and PORT4.) |
| S41 | S41 | Sets S41. (Measures between PORT1 and PORT4.) |
| S14 | S14 | Sets S14. (Measures between PORT1 and PORT4.) |
| S44D | S44D | Sets S44. (Measures between PORT1 and PORT4.) |
| SFWDD | SFWDD | Sets S11&S41. (Measures between PORT1 and PORT4.) |
| SREVD | SREVD | Sets S44&S14. (Measures between PORT1 and PORT4.) |
| S22E | S22E | Sets S22. (Measures between PORT2 and PORT4.) |
| S42 | S42 | Sets S42. (Measures between PORT2 and PORT4.) |
| S24 | S24 | Sets S24. (Measures between PORT2 and PORT4.) |
| S44E | S44E | Sets S44. (Measures between PORT2 and PORT4.) |
| SFWDE | SFWDE | Sets S22&S42. (Measures between PORT2 and PORT4.) |
| SREVE | SREVE | Sets S44&S24. (Measures between PORT2 and PORT4.) |
| S33F | S33F | Sets S33. (Measures between PORT3 and PORT4.) |
| S43 | S43 | Sets S43. (Measures between PORT3 and PORT4.) |
| S34 | S34 | Sets S34. (Measures between PORT3 and PORT4.) |
| S44F | S44F | Sets S44. (Measures between PORT3 and PORT4.) |
| SFWDF | SFWDF | Sets S33&S43. (Measures between PORT3 and PORT4.) |
| SREVF | SREVF | Sets S44&S34. (Measures between PORT3 and PORT4.) |

3. [SENSe:]CORRection[<chno>]:COLLect:MEtHod IEEE488.1-1987 command mode
 CAL{NONE | NORM | SNOR | F1P | NIS |
 F2P | D2P | T2P | F3P | F3P123 | F3P124 | F4P}

- **Function** Sets the CAL method (type).
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**

| | |
|---------------|--|
| Command | [SENSe:]CORRection[<chno>]:COLLect:MEtHod<type> |
| Parameter | <type>={NORMalize SNORMalize F1Port NISolation
F2Port D2Port T2Port F3Port F3P123 F3P124
F4Port} |
| Response type | NONE NORM SNOR F1P NIS F2P D2P T2P F3P
F3P123 F3P124 F4P |
- **IEEE488.1-1987 command mode**

| | |
|---------------|--|
| Command | CAL{NONE NORM SNOR F1P NIS F2P D2P T2P F3P
F3P123 F3P124 F4P} |
| Response type | (CALNONE is only for Query.)
0 1 |
- **Description** This command sets the CAL method in advance (see Table 7-1) before the CORR:COLL[:ACQ]STAN<n> or STAN{1 | 2 | ...c} is used.
- **Caution**

When CORR:CSET:STAT or CORRECT is ON, this command cannot be set. Also, if another type is specified when the CAL has been obtained, the obtained data will be lost (same as CORR:COLL:DEL).

The set value will be retained until the PRESET, *RST, RECALL or LOAD command is used. (executed or reset).

When a <type> unavailable for the instrument is specified, an error occurs.

In Query, the currently used CAL type is returned even if the calibration has not been completed (ie. not in DONE status).

When CORR:COLL:DEL or CLEAR is executed, NONE is automatically set.

7.10.2 Commands Used for Only R3765/67G Series

4. [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] IEEE488.1-1987 command mode
 STAN{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|19|20|21|22|23|24|25}

- Function Acquires the CAL (Calibration) data.
- Presence of command and query Command
- IEEE488.2-1987 command mode
 Command [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
 <standard>
 Parameter <standard>={NORMalize | SNORmalize | ... | STANdard<n>}
- IEEE488.1-1987 command mode
 Command STAN{1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|19|20|21|22|23|24|25}
- Caution When using CORR:COLL STAN<n> or STAN{1|2|...c}, it is necessary to set the CAL mode in advance using CORR:COLL:METH<type> or CAL{NORM | SNOR | F1P | F2P | ...c} (see Table 7-1).
 When CORR:COLL:METH? Is NONE, or CALNONE is 1, the result of CORR:COLL STAN<n> and STAN{1|2|...c} will be invalid.

Table 7-1 Relationship between the Panel Menu and the STAN Command (1 of 3)

| Panel menu | Corresponding GPIB command | Remarks |
|--|---|---|
| NORMALIZE(THRU) | CORR:COLL:METH NORM
CORR:COLL STAN1;*WAI | Same as CORR:COLL NORM
Same as CORR:COLL NORM |
| NORMALIZE(SHORT) | CORR:COLL:METH SNOR
CORR:COLL STAN1;*WAI | Same as CORR:COLL SNOR
Same as CORR:COLL SNOR |
| 1 PORT FULL CAL
OPEN
SHORT
LOAD
DONE 1-PORT | CORR:COLL:METH F1P
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL STAN3;*WAI
CORR:COLL:SAVE | Same as CORR:COLL OPEN
Same as CORR:COLL SHORT
Same as CORR:COLL LOAD |
| NORMALIZE & ISOL'N
THRU
ISOLATION
DONE NORM & ISO | CORR:COLL:METH NIS
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL:SAVE | Same as CORR:COLL THRU
Same as CORR:COLL ISOL |
| 2 PORT FULL CAL
FWD:OPEN
FWD:SHORT
FWD:LOAD
REV:OPEN
REV:SHORT
REV:LOAD
FWD.TRANS THRU
FWD.MATCH THRU
REV.TRANS THRU
REV.MATCH THRU
GROUP THRU
OMIT ISOLATION
FWD.ISOLATION
REV.ISOLATION
DONE 2-PORT | CORR:COLL:METH F2P
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL STAN3;*WAI
CORR:COLL STAN4;*WAI
CORR:COLL STAN5;*WAI
CORR:COLL STAN6;*WAI
CORR:COLL STAN7;*WAI
CORR:COLL STAN8;*WAI
CORR:COLL STAN9;*WAI
CORR:COLL STAN10;*WAI
CORR:COLL STAN11;*WAI
CORR:COLL STAN12;*WAI
CORR:COLL STAN13;*WAI
CORR:COLL STAN14;*WAI
CORR:COLL:SAVE | Same as CORR:COLL S11O
Same as CORR:COLL S11S
Same as CORR:COLL S11L
Same as CORR:COLL S22O
Same as CORR:COLL S22S
Same as CORR:COLL S22L
Same as CORR:COLL FTR
Same as CORR:COLL FMAT
Same as CORR:COLL RTR
Same as CORR:COLL RMAT
Same as CORR:COLL GTHR
Same as CORR:COLL OIS
Same as CORR:COLL FIS
Same as CORR:COLL RIS |
| 3 PORT FULL CAL
S11(PORT1):OPEN
S11(PORT1):SHORT
S11(PORT1):LOAD
S22(PORT2):OPEN
S22(PORT2):SHORT
S22(PORT2):LOAD
S33(PORT3):OPEN | CORR:COLL:METH F3P
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL STAN3;*WAI
CORR:COLL STAN4;*WAI
CORR:COLL STAN5;*WAI
CORR:COLL STAN6;*WAI
CORR:COLL STAN7;*WAI | |

7.10.2 Commands Used for Only R3765/67G Series

Table 7-1 Relationship between the Panel Menu and the STAN Command (2 of 3)

| Panel menu | Corresponding GPIB command | Remarks |
|--|--|---|
| S33(PORT3):SHORT
S33(PORT3):LOAD
P1-P2 THRU
P1-P3 THRU
P2-P3 THRU
OMIT ISOLATION
P1-P2 ISOLATION
P1-P3 ISOLATION
P2-P3 ISOLATION
DONE 3-PORT | CORR:COLL STAN8;*WAI
CORR:COLL STAN9;*WAI
CORR:COLL STAN10;*WAI
CORR:COLL STAN11;*WAI
CORR:COLL STAN12;*WAI
CORR:COLL STAN13;*WAI
CORR:COLL STAN14;*WAI
CORR:COLL STAN15;*WAI
CORR:COLL STAN16;*WAI
CORR:COLL:SAVE | |
| 3 PORT FULL CAL (P1-P2-P3)
S11(PORT1):OPEN
S11(PORT1):SHORT
S11(PORT1):LOAD
S22(PORT2):OPEN
S22(PORT2):SHORT
S22(PORT2):LOAD
S33(PORT3):OPEN
S33(PORT3):SHORT
S33(PORT3):LOAD
P1-P2 THRU
P1-P3 THRU
P2-P3 THRU
OMIT ISOLATION
P1-P2 ISOLATION
P1-P3 ISOLATION
P2-P3 ISOLATION
DONE 3-PORT | CORR:COLL:METH F3P123
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL STAN3;*WAI
CORR:COLL STAN4;*WAI
CORR:COLL STAN5;*WAI
CORR:COLL STAN6;*WAI
CORR:COLL STAN7;*WAI
CORR:COLL STAN8;*WAI
CORR:COLL STAN9;*WAI
CORR:COLL STAN10;*WAI
CORR:COLL STAN11;*WAI
CORR:COLL STAN12;*WAI
CORR:COLL STAN13;*WAI
CORR:COLL STAN14;*WAI
CORR:COLL STAN15;*WAI
CORR:COLL STAN16;*WAI
CORR:COLL:SAVE | Only available for the R3765 or R3767CG equipped with OPT 14. |
| 3 PORT FULL CAL (P1-P2-P4)
S11(PORT1):OPEN
S11(PORT1):SHORT
S11(PORT1):LOAD
S22(PORT2):OPEN
S22(PORT2):SHORT
S22(PORT2):LOAD
S44(PORT4):OPEN
S44(PORT4):SHORT
S44(PORT4):LOAD | CORR:COLL:METH F3P124
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL STAN3;*WAI
CORR:COLL STAN4;*WAI
CORR:COLL STAN5;*WAI
CORR:COLL STAN6;*WAI
CORR:COLL STAN7;*WAI
CORR:COLL STAN8;*WAI
CORR:COLL STAN9;*WAI | Only available for the R3765 or R3767CG equipped with OPT 14. |

Table 7-1 Relationship between the Panel Menu and the STAN Command (3 of 3)

| Panel menu | Corresponding GPIB command | Remarks |
|--|--|---|
| P1-P2 THRU
P1-P4 THRU
P2-P4 THRU
OMIT ISOLATION
P1-P2 ISOLATION
P1-P4 ISOLATION
P2-P4 ISOLATION
DONE 3-PORT | CORR:COLL STAN10;*WAI
CORR:COLL STAN11;*WAI
CORR:COLL STAN12;*WAI
CORR:COLL STAN13;*WAI
CORR:COLL STAN14;*WAI
CORR:COLL STAN15;*WAI
CORR:COLL STAN16;*WAI
CORR:COLL:SAVE | Only available for the R3765 or R3767CG equipped with OPT 14. |
| 4 PORT FULL CAL
S11(PORT1)OPEN
S11(PORT1)SHORT
S11(PORT1)LOAD
S22(PORT2)OPEN
S22(PORT2)SHORT
S22(PORT2)LOAD
S33(PORT3)OPEN
S33(PORT3)SHORT
S33(PORT3)LOAD
S44(PORT4)OPEN
S44(PORT4)SHORT
S44(PORT4)LOAD
P1-P2 THRU
P1-P3 THRU
P2-P3 THRU
P1-P4 THRU
OMIT ISOLATION
P1-P2 ISOLATION
P1-P3 ISOLATION
P2-P3 ISOLATION
P1-P4 ISOLATION
P2-P4 ISOLATION
P3-P4 ISOLATION
DONE 4-PORT | CORR:COLL:METH F4P
CORR:COLL STAN1;*WAI
CORR:COLL STAN2;*WAI
CORR:COLL STAN3;*WAI
CORR:COLL STAN4;*WAI
CORR:COLL STAN5;*WAI
CORR:COLL STAN6;*WAI
CORR:COLL STAN7;*WAI
CORR:COLL STAN8;*WAI
CORR:COLL STAN9;*WAI
CORR:COLL STAN10;*WAI
CORR:COLL STAN11;*WAI
CORR:COLL STAN12;*WAI
CORR:COLL STAN13;*WAI
CORR:COLL STAN14;*WAI
CORR:COLL STAN15;*WAI
CORR:COLL STAN16;*WAI
CORR:COLL STAN19;*WAI
CORR:COLL STAN20;*WAI
CORR:COLL STAN21;*WAI
CORR:COLL STAN22;*WAI
CORR:COLL STAN23;*WAI
CORR:COLL STAN24;*WAI
CORR:COLL STAN25;*WAI
CORR:COLL:SAVE | Only available for the R3765 or R3767CG equipped with OPT 14. |

7.10.2 Commands Used for Only R3765/67G Series

| | | |
|----|--|---|
| 5. | [SENSe:]CORRection[<chno>]:CKIT:TERMinal[<port>] | IEEE488.1-1987 command mode
PORT{1 2 3 4}{FEM MAL} |
|----|--|---|

- **Function** Sets the male or female of the test port connector.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** [SENSe:]CORRection[<chno>]:CKIT:TERMinal[<port>]<type>
 - Parameter** <type> = {FEMale|MALe}
 - Response type** FEM|MAL
- **IEEE488.1-1987 command mode**
 - Command** PORT{1|2|3|4}{FEM|MAL}
 - Response type** 0|1
- **Description** Switches between the male and female settings of the test port connector when setting the CAL KIT for calibration.
- **Caution** Sets the male or female for the test port, not for the CAL KIT.
Sets the connector type of the CAL KIT using CORR:CKIT[:TYPE]<int> or CKIT{0|1|2|3|4|5}.

6. [SENSe:]CORRection[<chno>]:CKIT[:TYPE] IEEE488.1-1987 command mode
CKIT{0|1|2|3|4|5}

- **Function** Sets the CAL kit connector type.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command [SENSe:]CORRection[<chno>]:CKIT[:TYPE]<int>
 - Parameter <int>
 - Response type NR1 (Integer number)
- **IEEE488.1-1987 command mode**
 - Command CKIT{0|1|2|3|4|5}
 - Response type 0|1
- **Description** Sets the CAL Kit connector type used when setting the CAL kit for calibration.

| R3762/63 command | R3764/66,R3765/67 command parameter | Connector type |
|------------------|-------------------------------------|-------------------------------|
| CKIT0 | 0 | DON'T CARE |
| CKIT1 | 1 | N type (50Ω) (male or female) |
| CKIT2 | 2 | N type (75Ω) (male or female) |
| CKIT3 | 3 | 3.5mm (male or female) |
| CKIT4 | 4 | 7mm |
| CKIT5 | 5 | USER DEFINE |

- **Caution** The CORR:CKIT:TERM {FEM|MAL} or PORT{1|2|3}{FEM|MAL} sets the male or female setting for the connector.

8. [SENSe:]CORRection[<chno>]:SLOPe:PHASe IEEE488.1-1987 command mode
PHASLO

- Function Sets Phase slope.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
Command [SENSe:]CORRection[<chno>]:SLOPe:PHASe<real>
- IEEE488.1-1987 command mode
Command PHASLO<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the Phase slope value (degree).
Adds a phase slope value to the phase data so that the starting point is 0° and the ending point is the specified phase value.
This slope is not related to frequencies and is linearly calculated at the points.

9. [SENSe:]CORRection[<chno>]:CKIT:DEFine:SAVE IEEE488.1-1987 command mode
STDSAVE

- Function Saves the set STD value in USER-DEFINE.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:SAVE
- IEEE488.1-1987 command mode
Command STDSAVE
- Description Saves (registers) each STD value set by CORR: CKIT:DEF: STN ... or STD{1|2|3|4}... as USER-DEFINE.

7.10.2 Commands Used for Only R3765/67G Series

| | | |
|-----|---|---|
| 10. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:OCAPacitance[<n>] | IEEE488.1-1987 command mode
STD{1 2 3 4}C{0 1 2 3} |
|-----|---|---|

- Function Sets the open capacitance of the open standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:STANdard
[<port>]: OCAPacitance[<n>]<real>
- IEEE488.1-1987 command mode
Command STD{1|2|3|4}C{0|1|2|3}<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets open capacitance of the open standard (CAL kit).

| R3762/63
command | R3764/66,R3765/67
command parameter<n> | Setting range |
|---------------------|---|--|
| STD{1 2 3 4}C0 | 0 | ±10k(10 ⁻¹⁵ F) |
| STD{1 2 3 4}C1 | 1 | ±10k(10 ⁻²⁷ F/Hz) |
| STD{1 2 3 4}C2 | 2 | ±10k(10 ⁻³⁶ F/Hz ²) |
| STD{1 2 3 4}C3 | 3 | ±10k(10 ⁻⁴⁵ F/Hz ³) |

- Caution When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

| | | |
|-----|--|---|
| 11. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:ODELay | IEEE488.1-1987 command mode
STD{1 2 3 4}ODEL |
|-----|--|---|

- Function Sets the electrical length (time) of the open standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode

| | |
|---------|---|
| Command | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]: ODELay<real> |
|---------|---|
- IEEE488.1-1987 command mode

| | |
|---------|------------------------|
| Command | STD{1 2 3 4}ODEL<real> |
|---------|------------------------|
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the electrical length of the open standard (CAL kit) in time.
- Caution When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

7.10.2 Commands Used for Only R3765/67G Series

| | | |
|-----|--|---|
| 12. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:OLOS | IEEE488.1-1987 command mode
STD{1 2 3 4}OLOS |
|-----|--|---|

- Function Sets the loss of the open standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:STANdard
 [<port>]: OLOSs<real>
- IEEE488.1-1987 command mode
 Command STD{1|2|3|4}OLOS<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the loss (Ω /sec) of the open standard (CAL kit).
- Caution When the following operation is executed without performing
 CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been
 made, the set value will be lost.

| | | |
|-----|--|---|
| 13. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:OIMPedance | IEEE488.1-1987 command mode
STD{1 2 3 4}OIMP |
|-----|--|---|

- Function Sets the impedance (Z0) of the open standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:STANdard
 [<port>]: OIMPedance<real>
- IEEE488.1-1987 command mode
 Command STD{1|2|3|4}OIMP<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the impedance (Z0) of the open standard (CAL kit).
- Caution When the following operation is executed without performing
 CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been
 made, the set value will be lost.

7.10.2 Commands Used for Only R3765/67G Series

| | | |
|-----|--|---|
| 14. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:SDELay | IEEE488.1-1987 command mode
STD{1 2 3 4}SDEL |
|-----|--|---|

- Function Sets the electrical length (time) of the short standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]: SDELay<real>
- IEEE488.1-1987 command mode
 - Command STD{1|2|3|4}SDEL<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the electrical length of the short standard (CAL kit) in time.
- Caution When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

| | | |
|-----|---|---|
| 15. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:SLOSs | IEEE488.1-1987 command mode
STD{1 2 3 4}SLOS |
|-----|---|---|

- Function Sets the loss of the short standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode

| | |
|---------|--|
| Command | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]: SLOSs<real> |
|---------|--|
- IEEE488.1-1987 command mode

| | |
|---------|------------------------|
| Command | STD{1 2 3 4}SLOS<real> |
|---------|------------------------|
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the loss (Ω /sec) of the short standard (CAL kit).
- Caution When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

7.10.2 Commands Used for Only R3765/67G Series

| | | |
|-----|--|--|
| 16. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:SIMPedance | IEEE488.1-1987 command mode
STD{1 2 3 4}SIMP |
| • | Function | Sets the impedance (Z0) of the short standard. |
| • | Presence of command and query | Command/Query |
| • | IEEE488.2-1987 command mode | |
| | Command | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]: SIMPedance<real> |
| • | IEEE488.1-1987 command mode | |
| | Command | STD{1 2 3 4}SIMP<real> |
| • | Parameter | <real> |
| • | Response type | NR3 (Real number) |
| • | Description | Sets the impedance (Z0) of the short standard (CAL kit). |
| • | Caution | When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost. |

17. [SENSe:]CORRection[<chno>]:CKIT:DEFine: IEEE488.1-1987 command mode
 STANdard[<port>]:TDELay STD{1|2|3|4|5}TDEL

- Function Sets the electrical length (time) of the thru standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:
 STANdard[<port>]: TDELay<real>
- IEEE488.1-1987 command mode
 Command STD{1|2|3|4|5}TDEL<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the electrical length of the thru standard (CAL kit) in time.

| R3762/63
command | R3764/66,R3765/67
command parameter<port> | Corresponding port |
|---------------------|--|-------------------------|
| STD1TDEL | 1 | Between PORT1 and PORT2 |
| STD2TDEL | 2 | Between PORT1 and PORT3 |
| STD3TDEL | 3 | Between PORT2 and PORT3 |
| STD4TDEL | 4 | Between PORT1 and PORT4 |
| STD5TDEL | 5 | Between PORT2 and PORT4 |

- Caution When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

7.10.2 Commands Used for Only R3765/67G Series

18. [SENSe:]CORRection[<chno>]:CKIT:DEFine: IEEE488.1-1987 command mode
 STANdard[<port>]:TLOSs STD{1|2|3|4|5}TLOS

- Function Sets the loss of the thru standard.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command [SENSe:]CORRection[<chno>]:CKIT:DEFine:
 STANdard[<port>]: TLOSs<real>
- IEEE488.1-1987 command mode
 Command STD{1|2|3|4|5}TLOS<real>
- Parameter <real>
- Response type NR3 (Real number)
- Description Sets the loss (Ω /sec) of the thru standard (CAL kit).

| R3762/63 command | R3764/66,R3765/67 command parameter<port> | Corresponding port |
|------------------|---|-------------------------|
| STD1TLOS | 1 | Between PORT1 and PORT2 |
| STD2TLOS | 2 | Between PORT1 and PORT3 |
| STD3TLOS | 3 | Between PORT2 and PORT3 |
| STD4TLOS | 4 | Between PORT1 and PORT4 |
| STD5TLOS | 5 | Between PORT2 and PORT4 |

- Caution When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

| | | |
|-----|--|---|
| 19. | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:TIMPedance | IEEE488.1-1987 command mode
STD{1 2 3 4 5}TIMP |
|-----|--|---|

- **Function** Sets the impedance (Z0) of the thru standard.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**

| | |
|---------|--|
| Command | [SENSe:]CORRection[<chno>]:CKIT:DEFine:
STANdard[<port>]:TIMPedance<real> |
|---------|--|
- **IEEE488.1-1987 command mode**

| | |
|---------|--------------------------|
| Command | STD{1 2 3 4 5}TIMP<real> |
|---------|--------------------------|
- **Parameter** <real>
- **Response type** NR3 (Real number)
- **Description** Sets the impedance (Z0) of the thru standard (CAL kit).

| R3762/63
command | R3764/66,R3765/67
command parameter<port> | Corresponding port |
|---------------------|--|-------------------------|
| STD1TIMP | 1 | Between PORT1 and PORT2 |
| STD2TIMP | 2 | Between PORT1 and PORT3 |
| STD3TIMP | 3 | Between PORT2 and PORT3 |
| STD4TIMP | 4 | Between PORT1 and PORT4 |
| STD5TIMP | 5 | Between PORT2 and PORT4 |

- **Caution** When the following operation is executed without performing CORR:CKIT:DEF:SAVE or STDSAVE after a setting has been made, the set value will be lost.

7.11 SOURce Subsystem

7.11 SOURce Subsystem

| | | |
|----|--|---------------------------------------|
| 1. | [SOURce:]CORRection[<chno>]:GAIN:STATe | IEEE488.1-1987 command mode
SRCCOR |
|----|--|---------------------------------------|

- Function ON/OFF of frequency characteristic calibration in the signal source part.
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURce:]CORRection[<chno>]:GAIN:STATe <bool>
 - Parameter <bool>
 - Response type 0 1 1
- IEEE488.1-1987 command mode
 - Command SRCCOR<bool>
 - Parameter <bool>
 - Response type 0 1 1
- Description Selects whether or not the frequency characteristics in the signal source part are to be calibrated. (ON or OFF)

| | | |
|----|-----------------|---------------------------------------|
| 2. | [SOURCE:]COUPLE | IEEE488.1-1987 command mode
COUPLE |
|----|-----------------|---------------------------------------|

- Function ON/OFF of connecting channels for output signal
- Presence of command and query Command / Query
- Command [SOURCE:]COUPLE <bool>
COUPLE<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Selects whether or not the same measurement conditions are to be used for measurement channels 1 and 2.

Initial setting: COUPLE ON

The measurement conditions include:

- Sweeping type
- Frequency
- Output level
- Sweeping time
- Number of points for measurement
- Resolution bandwidth

If the command is set to COUPLE OFF, it measures measurement channel 1 first then measurement channel 2. In other words, it measures channel 1 and 2 alternately.

When the sub measure is selected, channel 3 and channel 1, and channel 4 and channel 2 are always measured simultaneously regardless of COUPLE ON/OFF.

If the command is set to COUPLE ON, channel 1 and channel 2 are measured simultaneously.

When the sub measure is selected, the four screens are measured simultaneously.

Network Analyzer Programming Manual (Part 2)

7.11 SOURce Subsystem

3. [SOURce:]FREQuency[<chno>]:CENTer IEEE488.1-1987 command mode
CENTERF

- Function Center frequency setting
- Presence of command and query Command / Query
- Command [SOURce:]FREQuency[<chno>]:CENTer <real>
CENTERF<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the center frequency when the frequency is swept.

| | |
|--------------------|--|
| Initial setting | 1.92GHz (R3764H/65H)
4.02GHz (R3766H/67H)
1.90015GHz (R3765G)
4.00015GHz (R3767G) |
| Setting range | 20MHz to 3.8GHz (R3764H/65H)
20MHz to 8.0GHz (R3766H/67H)
300kHz to 3.8GHz(R3765G)
300kHz to 8.0GHz(R3767G) |
| Setting resolution | 1Hz |

| | | |
|----|-------------------------------|---------------------------------------|
| 4. | [SOURCE:]FREQUENCY[<chno>]:CW | IEEE488.1-1987 command mode
CWFREQ |
|----|-------------------------------|---------------------------------------|

- Function Fixed frequency setting
- Presence of command and query Command / Query
- Command [SOURCE:]FREQUENCY[<chno>]:CW <real>
CWFREQ<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the frequency for level sweeping.

| | |
|--------------------|--------------------------------------|
| Initial setting | 1GHz (R3764H/65H/66H/67H/R3765G/67G) |
| Setting range | 20MHz to 3.8GHz (R3764H/65H) |
| | 20MHz to 8.0GHz (R3766H/67H) |
| | 300kHz to 3.8GHz(R3765G) |
| | 300kHz to 8.0GHz(R3767G) |
| Setting resolution | 1Hz |

7.11 SOURce Subsystem

| | | |
|---|----------------------------------|-------------------------------------|
| 5. | [SOURce:]FREQuency[<chno>]:LPASs | IEEE488.1-1987 command mode
SETF |
| <ul style="list-style-type: none"> • Function Automatically sets a low pass mode frequency • Presence of command and query Command • Command SOURce[<chno>]:FREQuency:LPASs
SETF • Description Sets a measurement frequency range as a prerequisite for using the low pass mode (Stop frequency = Start frequency × Number of measurement points). • Caution This command is only available when Option 70 has been installed. | | |

| | | |
|---|---------------------------------|---|
| 6. | [SOURce:]FREQuency[<chno>]:MODE | IEEE488.1-1987 command mode
LINFREQ
LOGFREQ |
| <ul style="list-style-type: none"> • Function Sweeping type setting • Presence of command and query Command / Query • IEEE488.2-1987 command mode <ul style="list-style-type: none"> Command [SOURce:]FREQuency[<chno>]:MODE <mode> Parameter <mode>=SWEep Response type CW SWE PSW • IEEE488.1-1987 command mode <ul style="list-style-type: none"> Command LINFREQ
LOGFREQ Response type 0 1 • Description This command must be set by combining each item as shown in the table below:
Initial setting Linear frequency sweeping | | |

| Command | PSW:
MODE | FREQ:
MODE | POW:
MODE | SWE:
SPAC | Sweeping type | Corresponding
R3762/63
command |
|-----------|--------------|---------------|--------------|--------------|--------------------------------------|--------------------------------------|
| Parameter | (NONE) | SWE | (FIX) | LIN | Linear frequency sweeping | LINFREQ |
| | | | | LOG | Log frequency sweeping | LOGFREQ |
| | | (CW) | SWE | (LIN) | Level sweeping | LEVEL |
| | FREQ | (PSW) | (FIX) | (LIN) | Program sweeping
(frequency only) | USRPSWP |
| | ALL | (PSW) | (PSW) | (LIN) | Program sweeping | USRARWP |

NOTE:

The value in parentheses indicates the value which is returned for a query. Do not use this value for setting.

Sweeping type Linear frequency sweeping: Sweeps the frequency at a constant interval and a fixed level.

Log frequency sweeping: Sweeps the frequency at a log interval and a fixed level.

Level sweeping: Sweeps the output level at a fixed frequency.

Program sweeping (frequency only): Arbitrarily sets the frequency only for each interval.

Program sweeping: Arbitrarily sets the frequency, the output level, the resolution bandwidth and the settling time for each interval.

Note that the log frequency sweeping cannot be set for R3764 or R3766.

7.11 SOURce Subsystem

| | | |
|----|---------------------------------|--------------------------------------|
| 7. | [SOURce:]FREQuency[<chno>]:SPAN | IEEE488.1-1987 command mode
SPANF |
|----|---------------------------------|--------------------------------------|

- Function Span frequency setting
- Presence of command and query Command / Query
- Command [SOURce:]FREQuency[<chno>]:SPAN <real>
SPANF<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the span frequency for frequency sweeping.

| | |
|-----------------|--|
| Initial setting | 3.76GHz (R3764H/65H)
7.96GHz (R3766H/67H)
3.7997GHz (R3765G)
7.9997GHz (R3767G) |
| Set range | 0 to 3.78GHz (R3764H/65H)
0 to 7.98GHz (R3766H/67H)
0 to 3.9997GHz (R3765G)
0 to 7.9997GHz (R3767G) |
| Set resolution | 1Hz |

| | | |
|----|----------------------------------|---------------------------------------|
| 8. | [SOURCE:]FREQUENCY[<chno>]:START | IEEE488.1-1987 command mode
STARTF |
|----|----------------------------------|---------------------------------------|

- Function Start frequency setting
- Presence of command and query Command / Query
- Command [SOURCE:]FREQUENCY[<chno>]:START <real>
STARTF<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the start frequency for frequency sweeping.

| | |
|-----------------|--|
| Initial setting | 40MHz (R3764H/65H/66H/67H)
300kHz (R3765G/67G) |
| Set range | 20MHz to 3.8GHz (R3764H/65H)
20MHz to 8.0GHz (R3766H/67H)
300kHz to 3.8GHz (R3765G)
300kHz to 8.0GHz (R3767G) |
| Set resolution | 1Hz |

Network Analyzer Programming Manual (Part 2)

7.11 SOURce Subsystem

| | | |
|----|---------------------------------|--------------------------------------|
| 9. | [SOURce:]FREQuency[<chno>]:STOP | IEEE488.1-1987 command mode
STOPF |
|----|---------------------------------|--------------------------------------|

- Function Stop frequency setting
- Presence of command and query Command / Query
- Command [SOURce:]FREQuency[<chno>]:STOP <real>
STOPF<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the stop frequency for frequency sweeping.

| | |
|-----------------|--|
| Initial setting | 3.8GHz (R3764H/65H/R3765G)
8.0GHz (R3766H/67H/R3767G) |
| Set range | 20MHz to 3.8GHz (R3764H/65H)
20MHz to 8.0GHz (R3766H/67H)
300kHz to 3.8GHz (R3765G)
300kHz to 80.GHz (R3767G) |
| Set resolution | 1Hz |

10. [SOURCE:]POWER[<chno>][:LEVel][:AMPLitude] IEEE488.1-1987 command mode
OUTLEV

- Function Output level setting
- Presence of command and query Command / Query
- Command [SOURCE:]POWER[<chno>][:LEVel][:AMPLitude]<real>
OUTLEV<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the output level for frequency sweeping.
Setting resolution 0.01dB

| | | Initial setting | Setting range | |
|----------------------------------|----------|-----------------|-----------------|--------------------|
| | | | SRC COR ON | SRC COR OFF |
| A type | | 0dB | -13dBm to+17dBm | -16dBm to+24.95dBm |
| B type | | 0dB | -15dBm to+15dBm | -13dBm to+22.95dBm |
| C type
(A type + S parameter) | H series | 10dB | -20dBm to+15dBm | -23dBm to+17.95dBm |
| | G series | 10dB | -10dBm to+10dBm | -23dBm to+17.95dBm |

7.11 SOURce Subsystem

11. [SOURce:]POWer[<chno>]:MODE IEEE488.1-1987 command mode
LEVEL

- Function Sweeping type setting
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURce:]POWer[<chno>]:MODE <mode>
 - Parameter <mode>={SWEep}
 - Response type FIX | SWE | PSW
- IEEE488.1-1987 command mode
 - Command LEVEL
 - Response type 011
- Description This command is set by combining each item as shown in the table below:
Initial setting Linear frequency sweeping

| Command | PSW:
MODE | FREQ:
MODE | POW:
MODE | SWE:
SPAC | Sweeping type | Corresponding
R3762/63
command |
|-----------|--------------|---------------|--------------|------------------|--------------------------------------|--------------------------------------|
| Parameter | (NONE) | SWE | (FIX) | LIN | Linear frequency sweeping | LINFREQ |
| | | | | LOG | Log frequency sweeping | LOGFREQ |
| | FREQ | (CW) | SWE | (LIN) | Level sweeping | LEVEL |
| | | (PSW) | (FIX) | (LIN) | Program sweeping
(frequency only) | USRFSWP |
| ALL | (PSW) | (PSW) | (LIN) | Program sweeping | USRARWP | |

NOTE: The value in parentheses indicates the value which is returned for a query. Do not use this value when using the command.

Sweeping type Linear frequency sweeping: Sweeps the frequency at a constant interval and a fixed level.

Log frequency sweeping: Sweeps the frequency at a log interval and a fixed level.

Level sweeping: Sweeps the output level at a fixed frequency.

Program sweeping (frequency only):

Arbitrarily sets the frequency only for each interval.

Program sweeping: Arbitrarily sets the frequency, the output level, the resolution bandwidth and the settling time for each interval.

Note that the log frequency sweeping cannot be set for R3764 or R3766.

12. [SOURCE:]POWER[<chno>]:START IEEE488.1-1987 command mode
STLEVEL

- Function Start level setting
- Presence of command and query Command / Query
- Command [SOURCE:]POWER[<chno>]:START <real>
STLEVEL<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the start level for level sweeping.

| | | Initial setting | | Setting range | |
|----------------------------------|----------|-----------------|------|-----------------|--------------------|
| | | Start | Stop | SRC COR ON | SRC COR OFF |
| A type | | -13dBm | 0dB | -13dBm to+17dBm | -16dBm to+24.95dBm |
| B type | | -15dBm | 0dB | -15dBm to+15dBm | -13dBm to+22.95dBm |
| C type
(A type + S parameter) | H series | -20dBm | 0dB | -20dBm to+15dBm | -23dBm to+17.95dBm |
| | G series | -10dBm | 0dB | -10dBm to+10dBm | -23dBm to+17.95dBm |

Setting resolution 0.01dB

7.11 SOURce Subsystem

| | | |
|-----|-----------------------------|--|
| 13. | [SOURce:]POWER[<chno>]:STOP | IEEE488.1-1987 command mode
SPLEVEL |
|-----|-----------------------------|--|

- Function Stop level setting
- Presence of command and query Command / Query
- Command [SOURce:]POWER[<chno>]:STOP <real>
SPLEVEL<real>
- Parameter <real>
- Response type NR3 (real value)
- Description Sets the stop level for level sweeping.

| | | Initial setting | | Setting range | |
|----------------------------------|----------|-----------------|------|-----------------|--------------------|
| | | Start | Stop | SRC COR ON | SRC COR OFF |
| A type | | -13dBm | 0dB | -13dBm to+17dBm | -16dBm to+24.95dBm |
| B type | | -15dBm | 0dB | -15dBm to+15dBm | -13dBm to+22.95dBm |
| C type
(A type + S parameter) | H series | -20dBm | 0dB | -20dBm to+15dBm | -23dBm to+17.95dBm |
| | G series | -10dBm | 0dB | -10dBm to+10dBm | -23dBm to+17.95dBm |

Setting resolution 0.01dB

14. [SOURCE:]PSweep[<chno>]:BANDwidth[<n>] IEEE488.1-1987 command mode
 USEG
 URBW

- Function Inputs segment bandwidth used with program sweeping
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURCE:]PSweep[<chno>]:BANDwidth[<n>] <int>
 - Parameter <int>
 - Response type NR1 (integer value)
- IEEE488.1-1987 command mode
 - Command USEG<int>
URBW<int>
 - Parameter <int>
 - Response type NR1 (integer value)
- Description Sets the segment bandwidth for program sweeping.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|------------------------------|
| USEG | <n> | Specifies the segment number |
| URBW | <int> | Sets the bandwidth |

- Caution The bandwidth setting is reflected in (USRASWP) only when PSweep[<chno>]:MODE is set to ALL. When the mode is set to FREQ, it is not reflected in (USRFSWP).

7.11 SOURce Subsystem

15. [SOURCE:]PSweep[<chno>]:CLEAR[<n>]

- Function Clears the specified segment used with program sweeping
- Presence of command and query Command
- IEEE488.2-1987 command mode
Command [SOURCE:]PSweep[<chno>]:CLEAR[<n>]
- Description Clears the nth segment setting used with program sweeping.

16. [SOURCE:]PSweep[<chno>]:CLEAR[<n>]:ALL IEEE488.1-1987 command mode
USEGCL

- Function Clears all segments used with program sweeping
- Presence of command and query Command
- Command [SOURCE:]PSweep[<chno>]:CLEAR[<n>]:ALL
USEGCL
- Description Clears all segment settings used with program sweeping.

17. [SOURce:]PSweep[<chno>]:FREQUENCY[<n>] IEEE488.1-1987 command mode
 USEG
 UFREQ
 U{START | STOP}

- Function Inputs of segment frequencies used for program sweeping
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURce:]PSweep[<chno>]:FREQUENCY[<n>]<start>[,<stop>]
 - Parameter <start>
<stop>
 - Response type <start>,<stop>
<start>=<stop>=NR3 (real value)
- IEEE488.1-1987 command mode
 - Command USEG<int>
UFREQ<real>
U{START | STOP}<real>
 - Response type NR1 (USEG command)
NR3 (UFREQ | USTART | USTOP command)
- Description Sets the segment frequency used for program sweeping.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|------------------------------|
| USEG | <n> | Specifies the segment number |
| UFREQ | * 1 | Sets the fixed frequency |
| USTART | <start> | Sets the start frequency |
| USTOP | <stop> | Sets the stop frequency |

*1: Corresponds to <start> when <stop> is omitted.
 If <stop> is omitted, <stop> = <start> and the segment point number (PSweep[<chno>]:POINTS[<n>]) will automatically be set to 1.

7.11 SOURce Subsystem

18. [SOURce:]PSWeep[<chno>]:MODE IEEE488.1-1987 command mode
USR{FSWP|ASWP}

- Function Sweeping type setting
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURce:]PSWeep[<chno>]:MODE <mode>
 - Parameter <mode>={FREQuency | ALL}
 - Response type NONE | FREQ | ALL
- IEEE488.1-1987 command mode
 - Command USR{FSWP|ASWP}
 - Response type 0|1
- Description To set this command, combine each item as shown in the table below:
Initial setting Linear frequency sweeping
If PSW:MODE is set to FREQ or ALL, the segments already input are searched. And then, the segments are internally rearranged in the ascending order of the frequency and are executed.
In this case, if the STOP frequency of a segment is larger than the START frequency of the following segment after the rearrangement, an error occurs.

| Command | PSW: MODE | FREQ: MODE | POW: MODE | SWE: SPAC | Sweeping type | Corresponding R3762/63 command |
|-----------|-----------|------------|-----------|-----------|-----------------------------------|--------------------------------|
| Parameter | (NONE) | SWE | (FIX) | LIN | Linear frequency sweeping | LINFREQ |
| | | | | LOG | Log frequency sweeping | LOGFREQ |
| | | (CW) | SWE | (LIN) | Level sweeping | LEVEL |
| | FREQ | (PSW) | (FIX) | (LIN) | Program sweeping (frequency only) | USRFSWP |
| | ALL | (PSW) | (PSW) | (LIN) | Program sweeping | USRARWP |

NOTE: The value in parentheses indicates the value which is returned by a query. Do not use this value when setting the command.

Sweeping type Linear frequency sweeping: Sweeps the frequency at a constant interval and a fixed level.

Log frequency sweeping: Sweeps the frequency at a log interval and a fixed level.

Level sweeping: Sweeps the output level at a fixed frequency.

Program sweeping (frequency only):

Arbitrarily sets the frequency only for each interval.

Program sweeping: Arbitrarily sets the frequency, the output level, the resolution bandwidth and the settling time for each interval.

Note that the log frequency sweeping cannot be set for R3764 or R3766.

19. [SOURCE:]PSweep[<chno>]:POINTS[<n>] IEEE488.1-1987 command mode
 USEG
 UPOINT

- Function Inputs the number of segment points used for program sweeping
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURCE:]PSweep[<chno>]:POINTS[<n>] <int>
 - Parameter <int>
 - Response type NR1 (integer value)
- IEEE488.1-1987 command mode
 - Command USEG<int>
UPOINT<int>
 - Parameter <int>
 - Response type NR1 (integer value)
- Description Sets the number of segment points used for program sweeping.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|------------------------------|
| USEG | <n> | Specifies the segment number |
| UPOINT | <int> | Sets the number of points |

7.11 SOURce Subsystem

| | | |
|-----|------------------------------------|---|
| 20. | [SOURce:]PSweep[<chno>]:POWer[<n>] | IEEE488.1-1987 command mode
USEG
ULEVEL |
|-----|------------------------------------|---|

- **Function** Inputs the segment output level used for program sweeping
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command [SOURce:]PSweep[<chno>]:POWer[<n>] <real>
 - Parameter <real>
 - Response type NR3 (real value)
- **IEEE488.1-1987 command mode**
 - Command USEG<int>
ULEVEL<real>
 - Parameter <int>
<real>
 - Response type NR1 (USEG command)
NR3 (ULEVEL command)
- **Description** Sets the segment output level used for program sweeping.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|------------------------------|
| USEG | <n> | Specifies the segment number |
| ULEVEL | <real> | Sets the output level |

- **Caution** The value set for the output level is shown in (USRASWP) only when PSweep[<chno>]:MODE is set to ALL. When the mode is FREQ, it is not shown in (USRFSWP).

| | | |
|-----|---------------------------------------|---|
| 21. | [SOURCE:]PSweep[<chno>]:SETTLing[<n>] | IEEE488.1-1987 command mode
USEG
USETLT |
|-----|---------------------------------------|---|

- **Function** Inputs the segment settling time used for program sweeping
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command [SOURCE:]PSweep[<chno>]:SETTLing[<n>] <real>
 - Parameter <real>
 - Response type NR3 (real value)
- **IEEE488.1-1987 command mode**
 - Command USEG<int>
USETLT<real>
 - Parameter <int>
<real>
 - Response type NR1 (USEG command)
NR3 (USETLT command)
- **Description** Sets the segment settling time used for program sweeping.

| R3762/63 command | R3764/66, R3765/67 command parameter | Operation |
|------------------|--------------------------------------|------------------------------|
| USEG | <n> | Specifies the segment number |
| USETLT | <real> | Sets the settling time |

- **Caution** The value used for the settling time is shown in (USRASWP) only when PSweep[<chno>]:MODE is set to ALL. When the mode is FREQ, it is not shown in (USRFSWP).

Network Analyzer Programming Manual (Part 2)

7.11 SOURce Subsystem

| | | |
|-----|-------------------------------|--|
| 22. | [SOURce:]SWEep[<chno>]:POINts | IEEE488.1-1987 command mode
POIN
M{1201 801 601 301 201 101 51 21 11 6 3}P |
|-----|-------------------------------|--|

- **Function** Setting the number of points for sweeping
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**

| | |
|---------------|-------------------------------------|
| Command | [SOURce:]SWEep[<chno>]:POINts <int> |
| Parameter | <int> |
| Response type | NR1 (integer value) |
- **IEEE488.1-1987 command mode**

| | |
|---------------|---|
| Command | POIN<int>
M{1201 801 601 301 201 101 51 21 11 6 3}P |
| Parameter | <int> |
| Query | POIN?
M{1201 801 601 301 201 101 51 21 11 6 3}P? |
| Response type | NR1 (POIN? command)
0 1 (M{1201 601 301 201 101 51 21 11 6 3}P? command) |
- **Description** Sets the number of points for sweeping.

The number of points set are:

3,6,11,21,51,101,201,301,401,601,801,1201

23. [SOURCE:]SWEep[<chno>]:SPACing IEEE488.1-1987 command mode
LINFREQ
LOGFREQ

- Function Sweeping type specification
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command [SOURCE:]SWEep[<chno>]:SPACing <mode>
 - Parameter <mode>={LINear | LOGarithmic}
 - Response type LIN | LOG
- IEEE488.1-1987 command mode
 - Command LINFREQ
LOGFREQ
 - Response type 0 | 1
- Description To set this command, combine each item as shown in the table below:
Initial setting Linear frequency sweeping.

| Command | PSW:
MODE | FREQ:
MODE | POW:
MODE | SWE:
SPAC | Sweeping type | Corresponding
R3762/63
command |
|-----------|--------------|---------------|--------------|------------------|--------------------------------------|--------------------------------------|
| Parameter | (NONE) | SWE | (FIX) | LIN | Linear frequency sweeping | LINFREQ |
| | | | | LOG | Log frequency sweeping | LOGFREQ |
| | FREQ | (CW) | SWE | (LIN) | Level sweeping | LEVEL |
| | | (PSW) | (FIX) | (LIN) | Program sweeping
(frequency only) | USRFSWP |
| ALL | (PSW) | (PSW) | (LIN) | Program sweeping | USRARWP | |

NOTE: The value in parentheses indicates the value which is returned for a query. Do not use this value when setting the command.

Sweeping type Linear frequency sweeping: Sweeps the frequency at a constant interval and a fixed level.

Log frequency sweeping: Sweeps the frequency at a log interval and a fixed level.

Level sweeping: Sweeps the output level at a fixed frequency.

Program sweeping (frequency only):

Arbitrarily sets the frequency only for each interval.

Program sweeping: Arbitrarily sets the frequency, the output level, the resolution bandwidth and the settling time for each interval.

Note that the log frequency sweeping cannot be set for R3764 ro R3766

7.11 SOURce Subsystem

| | | |
|---|--|--------------------------------------|
| 24. | <p>[SOURce:]SWEep[<chno>]:TIME</p> | IEEE488.1-1987 command mode
STIME |
| <ul style="list-style-type: none"> • Function Used to set the sweeping time • Presence of command and query Command / Query • IEEE488.2-1987 command mode <ul style="list-style-type: none"> Command [SOURce:]SWEep[<chno>]:TIME <real>
STIME<real> Parameter <real> Response type NR3 (real value) • Description Sets the sweeping time. A setting of "0" indicates that the sweeping time is set to AUTO (see below). | | |
| <p style="margin-left: 40px;">Initial setting 30ms
Set range 0.2ms to 3932.1s
Set resolution 0.05ms</p> | | |

| | | |
|---|---|--|
| 25. | <p>[SOURce:]SWEep[<chno>]:TIME:AUTO</p> | IEEE488.1-1987 command mode
STIMEAUTO |
| <ul style="list-style-type: none"> • Function Automatically sets the sweeping time • Presence of command and query Command / Query • IEEE488.2-1987 command mode <ul style="list-style-type: none"> Command [SOURce:]SWEep[<chno>]:TIME:AUTO <bool>
STIMEAUTO Parameter <bool> Response type 0 1 • Description Automatically sets the sweeping time to the minimum value which has been determined by the resolution bandwidth.

If the sweeping time is set in the AUTO mode, the mode will be canceled. | | |

7.12 STATus Subsystem

1. STATus:DEvice:CONDition?

- Function DEV status referring
- Presence of command and query Query
- Query STATus:DEvice:CONDition?
- Response type NR1 (integer value)
- Description Returns the contents of condition register of the device status register. This register is not cleared even though it is read out. For details, see "4. STATUS BYTES."

Condition register assignments

| bit | | Description |
|--------|--------------------------|--|
| 0 | Cooling Fan Stopped | Sets to 1 when the cooling fan is stopped. |
| 1 | Overtemperature detected | This bit is set to 1 when the internal temperature is not within the guaranteed range. |
| Others | | Always 0 |

2. STATus:DEvice:ENABle

- Function DEV status referring
- Presence of command and query Command/Query
- Command STATus:DEvice:ENABle <int>
- Parameter <int>
- Response type NR1 (integer value)
- Description Sets the contents of enable register of the device status register. The event register corresponding to the bit set to 1 in this register is reflected in 2 in the status byte register as a valid bit. For details, see "4. STATUS BYTES."
- Example If the the Cooling Fan Stopped (bit 1) is to be set to 'enable', set STAT:DEV:ENAB 1.

7.12 STATUS Subsystem

3. STATUS:DEVice[:EVENT]?

- Function DEV status query (with clear)
- Presence of command and query Query
- Query STATUS:DEVice:EVENT?
- Response type NR1 (integer value)
- Description Returns the contents of event register of the device status register. When this register is read out, it's cleared and also bit 2 of the corresponding status byte register is cleared.
For details, see "4. STATUS BYTES."

Event register assignments

| bit | | Description |
|--------|--------------------------|--|
| 0 | Cooling Fan Stopped | Sets to 1 when the cooling fan is stopped. |
| 1 | Overtemperature detected | This bit is set to 1 when the internal temperature is not within the guaranteed range. |
| Others | | Always 0 |

4. STATUS:FREQUENCY:CONDition?

- Function FREQ status referring
- Presence of command and query Query
- Query STATUS:FREQUENCY:CONDition?
- Response type NRI (integer value)
- Description Returns the contents of condition register of the frequency status register. Even though this register is read out, it's not cleared. For details, see "4. STATUS BYTES."

Condition register assignments

| bit | | Description |
|--------|----------------------|--|
| 0 | Local 1 Unlocked | Sets to 1 when local 1 is unlocked. |
| 1 | Local 2 Unlocked | Sets to 1 when local 2 is unlocked. |
| 2 | Synthe Unlocked | Sets to 1 when synthesizer is unlocked. |
| 3 | External Standard In | Sets to 1 when external standard frequency is input. |
| 4 | VCXO Unlocked | Sets to 1 when VCXO is unlocked. |
| Others | | Always 0 |

7.12 STATus Subsystem

5. STATus:FREQuency:ENABle?

- Function FREQ status enable register setting
- Presence of command and query Command/Query
- Command STATus:FREQuency:ENABle <int>
- Parameter <int>
- Response type NR1 (integer value)
- Description Sets the contents of enable register of the frequency status register. The event register corresponding to the bit set to 1 in this register is reflected in the bit 5 in the questionable status register as a valid bit.
For details, see "4. STATUS BYTES."
- Example If the the External Standard In (bit 3) is to be set to 'enable', calculate $2^{*}3=8$ and set STAT:FREQ:ENAB 8.

6. STATus:FREQuency[:EVENT]?

- Function FREQ status reading
- Presence of command and query Query
- Query STATus:FREQuency[:EVENT]?
- Response type NR1 (integer value)
- Description Returns the contents of event register of the frequency status register. When this register is read out, it's cleared, as is bit 5 of the corresponding questionable status register.
For details, see "4. STATUS BYTES."

Event register assignments

| bit | | Description |
|--------|----------------------|--|
| 0 | Local 1 Unlocked | Sets to 1 when local 1 is unlocked. |
| 1 | Local 2 Unlocked | Sets to 1 when local 2 is unlocked. |
| 2 | Synthe Unlocked | Sets to 1 when synthesizer is unlocked. |
| 3 | External Standard In | Sets to 1 when external standard frequency is input. |
| 4 | VCXO Unlocked | Sets to 1 when VCXO is unlocked. |
| Others | | Always 0 |

7.12 STATUS Subsystem

7. STATUS:LIMit:CONDition?

- Function LIM status referring
- Presence of command and query Query
- Query STATUS:LIMit:CONDition?
- Response type NR1 (integer value)
- Description Returns the contents of condition register of the limit status register. Even if this register is read out, it's not cleared.
For details, see "4. STATUS BYTES."

Condition register assignments

| bit | | Description |
|--------|----------------------|--|
| 0 | CH1 1st Limit Failed | Sets to 1 when the first waveform of channel 1 is FAIL. |
| 1 | CH1 2nd Limit Failed | Sets to 1 when the second waveform of channel 1 is FAIL. |
| 2 | CH2 1st Limit Failed | Sets to 1 when the first waveform of channel 2 is FAIL. |
| 3 | CH2 2nd Limit Failed | Sets to 1 when the second waveform of channel 2 is FAIL. |
| 4 | CH3 1st Limit Failed | Sets to 1 when the first waveform of channel 3 1 is FAIL. |
| 5 | CH3 1st Limit Failed | Sets to 1 when the second waveform of channel 3 1 is FAIL. |
| 6 | CH4 2nd Limit Failed | Sets to 1 when the first waveform of channel 4 is FAIL. |
| 7 | CH4 1st Limit Failed | Sets to 1 when the second waveform of channel 4 is FAIL. |
| Others | | Always 0 |

8. STATus:LIMit:ENABle

- Function LIM status enable register setting
- Presence of command and query Command/Query
- Command STATus:LIMit:ENABle <int>
- Parameter <int>
- Response type NR1 (integer value)
- Description Sets the contents of enable register of the limit status register. The event register corresponding to the bit set to 1 in this register is reflected in the bit 9 in the questionable status register as a valid bit.
For details, see "4. STATUS BYTES."
- Example If the CH1 1st Limit Failed (bit 0) and the CH3 1st Limit Failed (bit 4) are to be set to 'enable', calculate $2^{**}0 + 2^{**}4 = 17$ and set STAT:LIN:ENAB 17.

7.12 STATus Subsystem

9. STATus:LIMit[:EVENT]?

- Function LIM status reading
- Presence of command and query Query
- Query STATus:LIMit[:EVENT]?
- Response type NR1 (integer value)
- Description Returns the contents of event register of the limit status register. When this register is read out, it's cleared, as is bit 9 of the corresponding questionable status register.
For details, see "4. STATUS BYTES."

Event register assignments

| bit | | Description |
|--------|----------------------|--|
| 0 | CH1 1st Limit Failed | Sets to 1 when the first waveform of channel 1 is FAIL. |
| 1 | CH1 2nd Limit Failed | Sets to 1 when the second waveform of channel 1 is FAIL. |
| 2 | CH2 1st Limit Failed | Sets to 1 when the first waveform of channel 2 is FAIL. |
| 3 | CH2 2nd Limit Failed | Sets to 1 when the second waveform of channel 2 is FAIL. |
| 4 | CH3 1st Limit Failed | Sets to 1 when the first waveform of channel 3 is FAIL. |
| 5 | CH3 2nd Limit Failed | Sets to 1 when the second waveform of channel 3 is FAIL. |
| 6 | CH4 1st Limit Failed | Sets to 1 when the first waveform of channel 4 is FAIL. |
| 7 | CH4 2nd Limit Failed | Sets to 1 when the second waveform of channel 4 is FAIL. |
| Others | | Always 0 |

10. STATus:OPERation:CONDition?

- Function OPER status referring
- Presence of command and query Query
- Query STATus:OPERation:CONDition?
- Response type NR1 (integer value)
- Description Returns the contents of condition register of the operation status register. Even if this register is read out, it's not cleared.
For details, see "4. STATUS BYTES."

Condition register assignments

| bit | | Description |
|--------|-----------------|--|
| 0 | Calibrating | Sets to 1 during calibrating. |
| 3 | Sweeping | Sets to 1 during sweeping. |
| 8 | Averaging | This bit is set to 1 during averaging operation. |
| 14 | Program Running | Sets to 1 during built-in BASIC program running. |
| Others | | Always 0 |

11. STATus:OPERation:ENABle

- Function OPER status enable register setting
- Presence of command and query Command/Query
- Command STATus:OPERation:ENABle <int>
- Parameter <int>
- Response type NR1 (integer value)
- Description Sets the contents of enable register of the operation status register. The event register corresponding to the bit set to 1 in this register is reflected in the bit 7 in the status byte register as a valid bit.
For details, see "4. STATUS BYTES."
- Example If the Program Running (bit 14) and the Sweeping (bit 3) are to be set to 'enable', calculate $2^{*}14 + 2^{*}3 = 16392$ and set STAT:OPER=ENAB 16392.

7.12 STATus Subsystem

12. STATus:OPERation[:EVENT]?

- Function OPER status reading
- Presence of command and query Query
- Query STATus:OPERation[:EVENT]?
- Response type NR1 (integer value)
- Description Returns the contents of event register of the operation status register. When this register is read out, it's cleared, as is bit 7 of the corresponding status byte register.
For details, see "4. STATUS BYTES."

Event register assignments

| bit | | Description |
|--------|-----------------|--|
| 0 | Calibrating | Sets to 1 when the calibration ends. |
| 3 | Sweeping | Sets to 1 when the sweeping ends. |
| 8 | Averaging | This bit is set to 1 when averaging operation is complete. |
| 14 | Program Running | Sets to 1 when the built-in BASIC program stops. |
| Others | | Always 0 |

13. STATus:POWer:CONDition?

- Function POW status referring
- Presence of command and query Query
- Query STATus:POWer:CONDition?
- Response type NR1 (integer value)
- Description Returns the contents of condition register of the power status register. This register is not cleared even if it is read out.
For details, see "4. STATUS BYTES."

Condition register assignments

| bit | | Description |
|--------|--------------------|---|
| 0 | Input-R Overloaded | Sets to 1 when the input-R is overloaded. |
| 1 | Input-R Tripped | Sets to 1 when the protection circuit of the input-R is in operation. |
| 2 | Input-A Overloaded | Sets to 1 when the input-A is overloaded. |
| 3 | Input-A Tripped | Sets to 1 when the protection circuit of the input-A is in operation. |
| 4 | Input-B Overloaded | Sets to 1 when the input-B is overloaded. |
| 5 | Input-B Tripped | Sets to 1 when the protection circuit of the input-B is in operation. |
| Others | | Always 0 |

7.12 STATus Subsystem

14.

STATus:POWer:ENABle

- Function POW status enable register setting
- Presence of command and query Command/Query
- Command STATus:POWer:ENABle <int>
- Parameter <int>
- Response type NR1 (integer value)
- Description Sets the contents of enable register of the power status register. The event register corresponding to the bit set to 1 in this register is reflected in the bit 3 in the questionable status register as a valid bit.
For details, see "4. STATUS BYTES."
- Example If the Input-A Overloaded (bit 2) is to be set to 'enable', calculate $2^{**}2 = 4$ and set STAT:POW:ENAB 4.

15. STATus:POWer[:EVENT]?

- Function POW status reading
- Presence of command and query Query
- Query STATus:POWer[:EVENT]?
- Response type NR1 (integer value)
- Description Returns the contents of event register of the power status register. When this register is read out, it's cleared, as is bit 3 of the corresponding questionable status register. For details, see "4. STATUS BYTES."

Event register assignments

| bit | | Description |
|--------|--------------------|---|
| 0 | Input-R Overloaded | Sets to 1 when the input-R is overloaded. |
| 1 | Input-R Tripped | Sets to 1 when the protection circuit of the input-R is in operation. |
| 2 | Input-A Overloaded | Sets to 1 when the input-A is overloaded. |
| 3 | Input-A Tripped | Sets to 1 when the protection circuit of the input-A is in operation. |
| 4 | Input-B Overloaded | Sets to 1 when the input-B is overloaded. |
| 5 | Input-B Tripped | Sets to 1 when the protection circuit of the input-B is in operation. |
| Others | | Always 0 |

7.12 STATus Subsystem

16. STATus:QUEStionable:ENABle

- Function QUES status enable register setting
- Presence of command and query Command/Query
- Command STATus:QUEStionable:ENABle <int>
- Parameter <int>
- Response type NR1 (integer value)
- Description Sets the contents of enable register of the questionable status register. The event register corresponding to the bit set to 1 in this register is reflected in the bit 3 in the status byte register as a valid bit. For details, see "4. STATUS BYTES."
- Example If the POW (bit 3) and LIM (bit 9) summary bits are to be set to 'enable', calculate $2^{**}3 + 2^{**}9 = 520$ and set STAT:QUES:ENAB 520.

17. STATus:QUEStionable[:EVENT]?

- Function QUES status reading
- Presence of command and query Query
- Query STATus:QUEStionable[:EVENT]?
- Response type NR1 (integer value)
- Description Returns the contents of event register of the questionable status register. When this register is read out, it's cleared, as is the corresponding status byte register. For details, see "4. STATUS BYTES."

Event register assignments

| bit | | Description |
|--------|------------------|---|
| 3 | POW Summary Bit | Sets to 1 when the summary of power status register is 1. |
| 5 | FREQ Summary Bit | Sets to 1 when the summary of frequency status register is 1. |
| 9 | LIM Summary Bit | Sets to 1 when the summary of limit status register is 1. |
| Others | | Always 0 |

7.13 SYSTem Subsystem

- | | | |
|----|-------------|---|
| 1. | SYSTem:DATE | IEEE488.1-1987 command mode
YEAR
MONTH
DAY |
|----|-------------|---|
- Function Date setting
 - Presence of command and query Command / Query
 - IEEE488.2-1987 command mode

| | |
|---------------|---|
| Command | SYSTem:DATE <year>,<month>,<day> |
| Parameter | <year>=Numeric data is 1999 to 2029
<month>=Numeric data is 1 to 12
<day>=Numeric data is 1 to 31 |
| Response type | <year>,<month>,<day>
<year>=<month>=<day>=NR1 (integer value) |
 - IEEE488.1-1987 command mode

| | |
|---------------|-------------------------------------|
| Command | YEAR<int>
MONTH<int>
DAY<int> |
| Parameter | <int> |
| Response type | NR1 (integer value) |
 - Description Sets the date on the timer built into the analyzer.
Use the Christian calendar (four digits) to set the year (examples: 1999, 2000)

7.13 SYSTem Subsystem

2. SYSTem:ERRor?

- Function Query of error
- Presence of command and query Query
- Query SYSTem:ERRor?
- Response type <errno>,<errmsg>
<errno>=NRI (integer value)
<errmsg>=error messege
- Description The system can store information on up to 10 errors in the error queue. If more than nine errors occur, the indication of 10th error will be replaced with:

-350, "Queue overflow"

The 10th and subsequent errors cannot be maintained.SYSTem:ERRor? removes the error information from the queue.

Since the queue stores errors using the FIFO (First-In First-Out) method, the command removes error information in the order of occurrence of errors.

When error information is removed from the queue, the information is deleted from the queue, and the queue is ready for the next error information.

If there is no error, the system responds with:

0, "No error"

The *CLS command clears the error queue.

| | | |
|----|---------------|-----------------------------------|
| 3. | SYSTem:PRESet | IEEE488.1-1987 command mode
IP |
|----|---------------|-----------------------------------|

- Function System initialization
- Presence of command and query Command
- Command SYSTem:PRESet
IP
- Description The SYSTem:PRESet (IP) command initializes the setting of the analyzer and resets the trigger system.
The initial values set using this command are different from those set using the *RST command. For actual setting values, see "A.3 Initial Settings".
The items this command performs are the same as those performed using the PRESET key on the front panel.

7.13 SYSTem Subsystem

| | | |
|----|-------------|---|
| 4. | SYSTem:TIME | IEEE488.1-1987 command mode
HOUR
MINUTE
RTC30ADJ |
|----|-------------|---|

- Function Time setting
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command SYSTem:TIME <hour>,<minute>,<second>
 - Parameter
 - <hour>=Numeric data is 0 to 23
 - <minute>=Numeric data is 0 to 59
 - <second>=Numeric data is 0 to 59
 - Response type
 - <hour>,<minute>,<second>
 - <hour>=<minute>=<second>=NR1 (integer value)
- IEEE488.1-1987 command mode
 - Command
 - HOUR<int>
 - MINUTE<int>
 - RTC30ADJ
 - Parameter
 - <int>
 - Response type
 - NR1 (integer value)

There is no query for the RTC30ADJ command.
- Description

Sets the time on the timer built into the analyzer. A 24-hour clock is used. The RTC30ADJ command of IEEE488.1-1987 command mode always sets the second to "0".

7.14 TRACe Subsystem

1. TRACe[<chno>]:COPY IEEE488.1-1987 command mode
DTOM
 - Function Trace copying
 - Presence of command and query Command
 - Command TRACe[<chno>]:COPY <name>
DTOM
 - Parameter <name>=DATA
 - Description The command copies the data waveform onto the memory waveform.

2. TRACe[<chno>][:DATA]? IEEE488.1-1987 command mode
OT{1|2|3|4}{DRAT|CORED|MRAT|NORED|DFOR|
MFOR|CORNR|CORDI|CORSO|CORTR}
 - Function Query of trace (output)
 - Presence of command and query Query
 - IEEE488.2-1987 command mode
 - Query TRACe[<chno>][:DATA]?{<name>|<trace>}[, {<name>|<trace>}...]
 - Parameter <name>= {RAW | DATA | MEM | UDAT | FDAT1 | FDAT2 | FMEM1 | FMEM2 | NORM | EDIR | ESM | ERTR | EDF | ESF | ERF | ELF | ETF | EXF | EDR | ESR | ERR | ELR | ETR | EXR}
 - <trace>=Analysis channel
 - IEEE488.1-1987 command mode
 - Query OT{1|2|3|4}{DRAT|CORED|MRAT|NORED|DFOR|MFOR|CORNR|CORDI|CORSO|CORTR}
 - Description Outputs the specified trace data. Multiple <names> or <trace> can be specified by separating them with a comma. In such cases, the data per trace are output in the specified order. (After the data corresponding to one trace are output, outputting of the data of next trace is begun.)

7.14 TRACe Subsystem

3. TRACe[<chno>][:DATA] IEEE488.1-1987 command mode
 IN{1|2|3|4}{DRAT|CORED|MRAT|NORED|DFOR|MFOR
 CORNR|CORDI|CORSO|CORTR}

- Function Trace inputting
- Presence of command and query Command
- IEEE488.2-1987 command mode
 - Command TRACe[<chno>][:DATA]{<name> | <trace>},
 {<block> | <real>[,<real>...]}
 - Parameter <name>= {RAW | DATA | MEM | UDAT | FDAT1 | FDAT2 |
 FMEM1 | FMEM2 | NORM | EDIR | ESM | ERTR | EDF
 | ESF | ERF | ELF | ETP | EXF | EDR | ESR | ERR | ELR
 | ETR | EXR}
 - <trace>= Analysis channel
- IEEE488.1-1987 command mode
 - Command IN{1|2|3|4}{DRAT|CORED|MRAT|NORED|DFOR|MFOR|
 CORNR|CORDI|CORSO|CORTR}
- Description Inputs the data into the specified trace.
 Unlike trace outputting, multiple <name> or <trace> cannot be
 specified.

* Trace input/output command parameters

| R3762/63 command | R3764/66, R3765/67
command parameter | | Object traces | Data format ^{*2} |
|---------------------------|---|-------------------|--|---------------------------|
| | <name> ^{*1} | <trace> | | |
| {OT IN}
{1 2 3 4}DRAT | RAW | {131 195 259 323} | Raw data array | Complex number |
| {OT IN}
{1 2 3 4}CORED | DATA | {129 193 257 321} | Data array | Complex number |
| {OT IN}
{1 2 3 4}MRAT | MEMory | {130 194 258 322} | Memory array | Complex number |
| {OT IN}
{1 2 3 4}NORED | UDATa | {128 192 256 320} | Data array before formatting | Complex number |
| {OT IN}
{1 2 3 4}DFOR | FDATa1 | {011 4 5} | Data array after formatting 1 | First waveform |
| | FDATa2 | {8 9 12 13} | Data array after formatting 2 | Second waveform |
| {OT IN}
{1 2 3 4}MFOR | FMEMory1 | {2 3 6 7} | Memory array after formatting 1 | First waveform |
| | FMEMory2 | {10 11 14 15} | Memory array after formatting 2 | Second wavefor |
| {OT IN}
{1 2 3 4}CORNR | NORMalize | {133 197 261 325} | Normalized reference data array | Complex number |
| {OT IN}
{1 2 3 4}CORDI | EDIRectivity | {134 198 262 326} | Direction error coefficient array | Complex number |
| {OT IN}
{1 2 3 4}CORSO | ESMatch | {135 199 263 327} | Source match error coefficient array | Complex number |
| {OT IN}
{1 2 3 4}CORTR | ERTRacking | {136 200 264 328} | Reflection tracking error coefficient array | Complex number |
| | EDForward | {137 201 265 329} | Forward direction: Direction error coefficient array | Complex number |
| | ESForward | {138 202 266 330} | Forward direction: Source match error coefficient array | Complex number |
| | ERForward | {139 203 267 331} | Forward direction: Reflection tracking error coefficient array | Complex number |
| | ELForward | {140 204 268 332} | Forward direction: load match error coefficient array | Complex number |
| | ETForward | {141 205 269 333} | Forward direction: Transfer tracking error coefficient array | Complex number |
| | EXForward | {142 206 270 334} | Forward direction: Isolation error coefficient array | Complex number |
| | EDReverse | {143 207 271 335} | Reverse direction: Direction error coefficient array | Complex number |
| | ESReverse | {144 208 272 336} | Reverse direction: Source match error coefficient array | Complex number |
| | ERReverse | {145 209 273 337} | Reverse direction: Reflection tracking error coefficient array | Complex number |

7.14 TRACe Subsystem

| R3762/63 command | R3764/66, R3765/67 command parameter | | Object traces | Data format ^{*2} |
|------------------|--------------------------------------|-------------------------|--|---------------------------|
| | <name>*1 | <trace> | | |
| | ELReverse | {146 210 274 338} | Reverse direction: load match error coefficient array | Complex number |
| | ETReverse | {147 211 275 339} | Reverse direction: Transfer tracking error coefficient array | Complex number |
| | EXReverse | {148 212 276 340} | Reverse direction: Isolation error coefficient array | Complex number |

*1: If <name> is specified using R3764/66, R3765/67 command, the channel should be specified using the parameter <chno>.

*2: The data type depends on the trace type (see below).

Complex number: Complex numbers are output in the order real, imaginary, real, imaginary, and so on. Therefore, the total number of data output is doubled.

First waveform: When the format is set to LOGMAG&PHASE or LOGMAG&DELAY, the first waveform is LOGMAG; when the format is set to LINMAG&PHASE, the first waveform is LINMAG; when the format is set to SMITH or POLAR, the first waveform is real; when the measure mode is S11&S21, the first waveform is S11; and when the measure mode is S22&S12, the first waveform is S22.

Second waveform: When the format is set to LOGMAG&PHASE or LINMAG&PHASE, the second waveform is PHASE; when the format is set to LOGMAG&DELAY, the second waveform is DELAY; when the format is set to SMITH or POLAR, the second waveform is imaginary part; when the measure mode is S11&S21, the second waveform is S21; and when the measure mode is S22&S12, the second waveform is S12.

In other cases, the data are invalid.

7.15 TRIGger Subsystem

- | | | |
|----|---|---|
| 1. | TRIGger[:SEQuence]:DELAy | IEEE488.1-1987 command mode
SETLTIME |
| | <ul style="list-style-type: none"> • Function Trigger delay setting • Presence of command and query Command / Query • Command TRIGger[:SEQuence]:DELAy <real>
SETLTIME<real> • Parameter <real> • Response type NR3 (real value) • Description This command sets the delay time between the detection of the trigger and the start of measurement.
The delay time is available only when TRIGger[:SEQuence]:DELAy:STATe is set to ON.
See "TRIGger[:SEQuence]:DELAy:STATe". • Caution If 0 is set, TRIG:DEL:STAT is automatically set to OFF.
If the value other than 0 is set, TRIG:DEL:STAT is automatically set to ON. | |
| 2. | TRIGger[:SEQuence]:DELAy:STATe | IEEE488.1-1987 command mode
SETLVARI |
| | <ul style="list-style-type: none"> • Function ON/OFF of trigger delay • Presence of command and query Command / Query • Command TRIGger[:SEQuence]:DELAy:STATe <bool>
SETLVARI<bool> • Parameter <bool> • Response type 0 1 • Description This command enables/disables the trigger delay times set by the TRIGger[:SEQuence]:DELAy (SETLTIME) command. Setting this command to OFF is identical to TRIGger[:SEQuence]:DELAy 0 (SETLTIME 0). • Caution If OFF is set, TRIG:DEL is automatically set to 0. | |

7.15 TRIGger Subsystem

3. TRIGger[:SEquence][:IMMediate]

- Function Event detection path (not delay)
- Presence of command and query Command
- Command TRIGger[:SEquence][:IMMediate]
- Description This command bypasses the trigger waiting state. If the trigger system is in the trigger waiting state, the command starts the measurement immediately.

In this case, the delay time set by the TRIGger[:SEquence]:DELay (SETLTIME) command becomes invalid.

For details, see "5. TRIGGER SYSTEM".

4. TRIGger[:SEquence]:SIGNal

- Function Event detection path (with delay)
- Presence of command and query Command
- Command TRIGger[:SEquence]:SIGNal
- Description This command bypasses the event detection of the trigger waiting state. If the trigger system is in the trigger waiting state, the command starts the measurement after the delay time set by TRIGger[:SEquence]:DELay (SETLTIME) has elapsed.

For details, see "5. TRIGGER SYSTEM".

| | | |
|----|---------------------------|---|
| 5. | TRIGger[:SEQuence]:SOURce | IEEE488.1-1987 command mode
FREE
EXTERN |
|----|---------------------------|---|

- **Function** Trigger source setting
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** TRIGger[:SEQuence]:SOURce <source>
 - Parameter** <source>={IMMediate | EXTernal | BUS | HOLD}
 - Response type** IMM | EXT | BUS | HOLD
- **IEEE488.1-1987 command mode**
 - Command** FREE
EXTERN
 - Response type** 0 | 1

• **Description** This command selects the trigger source. The event detection ends when all of the conditions below are satisfied.

IMMediate: Has no event. This condition immediately ends the event detection of the trigger waiting state.

EXTernal: Waits for the external signal.

BUS: Waits for the *TRG interface message or the GET interface message.

HOLD: Does not end the event detection of the trigger waiting state.

If the analyzer receives TRIGger[:IMMediate] or TRIGger:SIGNAL in the trigger waiting state, it starts the measurement regardless of the trigger source setting.

For details, see "5. TRIGGER SYSTEM".

FREE and EXTERN of IEEE488.1-1987 command mode select the same trigger sources as IMMediate and EXTernal of IEEE488.2-1987 command mode, respectively.

7.16 R3762/63 Command

7.16 R3762/63 Command

1. CONT

- Function Sets the sweeping mode to CONT
- Presence of command and query Command
- Command CONT
- Description Performs continuous sweeping and measurement.

2. MEAS

- Function Performs measurement
- Presence of command and query Command
- Command MEAS
- Description If the system is in the process of sweeping, it resets the sweeping and performs the sweeping and the measurement once. If the sweeping mode is set to CONT, it continuously performs the sweeping and the measurement.

3. SINGLE

- Function Sets the sweeping mode to SINGLE
- Presence of command and query Command
- Command SINGLE
- Description The system performs the sweeping and the measurement once.

4. SWPHLD

- Function Holds the sweeping
- Presence of command and query Command
- Command SWPHLD
- Description The system immediately stops the sweeping.

7.17 R3765/67 MARKer Subsystem

7.17.1 Commands Used for All Models

| | | |
|----|----------------------------------|--|
| 1. | MARKer[<chno>]:ACTivate[:NUMBer] | IEEE488.1-1987 command mode
MKR{1 2 3 4 5 6 7 8 9 10}A |
| • | Function | Setting of active marker |
| • | Presence of command and query | Command / Query |
| • | IEEE488.2-1987 command mode | |
| | Command | MARKer[<chno>]:ACTivate[:NUMBer] <n>[,<real>] |
| | Parameter | <n>=1 to 10 (marker number)
<real>=Setting value (stimulus value) |
| | Response type | NR1 (integer value): 0 to 10 (marker number)
NR3 (real value): Setting value (stimulus value) |
| • | IEEE488.1-1987 command mode | |
| | Command | MKR{1 2 3 4 5 6 7 8 9 10}A |
| | Response type | NR3 (real value): Setting value (stimulus value)
NR3 (real value): Measurement value (data A, B, C)
NR1 (integer value): Status |
| • | Description | Specifies a number of the active marker. The specified marker will automatically be ON.
In IEEE488.2-1987 command mode, the marker number and the setting value are returned by the query. If no marker is ON, 0 is set as the marker number.
Setting value can be obtained by the FETch? query.
In IEEE488.1-1987 command mode, setting value and measurement value are returned by the query.
Refer to "7.18 FETch? Subsystem" for details of data and format. |

7.17.1 Commands Used for All Models

| | | |
|----|---|-----------------------------|
| 2. | MARKer[<chno>]:ACTivate:STATE
MKROFF | IEEE488.1-1987 command mode |
|----|---|-----------------------------|

- Function ON/OFF of marker
- Presence of command and query Command / Query
- Command MARKer[<chno>]:ACTivate:STATE <bool>
MKROFF
- Parameter <bool>
- Response type 0 1 1
- Description If the active marker is set to OFF and the other markers are set to ON, the marker having the smallest number is changed as an active marker.
In IEEE488.2-1987 command mode, the marker 1 is set to ON only when the parameters are ON and the marker 1 is OFF.

| | | |
|----|--|-----------------------------|
| 3. | MARKer[<chno>]:ACTivate:STIMulus
MKR{1 2 3 4 5 6 7 8 9 10}A | IEEE488.1-1987 command mode |
|----|--|-----------------------------|

- Function Setting of marker stimulus value.
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:ACTivate:STIMulus <real>
 - Parameter <real>=Stimulus value
 - Response type NR3(real value): Stimulus value
- IEEE488.1-1987 command mode
 - Command MKR{1|2|3|4|5|6|7|8|9|10}A <real>
 - Parameter <real>=Stimulus value
 - Response type NR3 (real value): Setting value (stimulus value)
NR3 (real value): Measurement value (data A, B, C)
NR1 (integer value): Status
- Description Sets the stimulus value of the active marker.
In IEEE488.2-1987 command mode, setting value is returned by the query.
Measurement data can be obtained by the RETch? query.
In IEEE488.1-1987 command mode, setting value and measurement value are returned by the query.

| | | |
|----|---------------------|--|
| 4. | MARKer[<chno>]:AOFF | IEEE488.1-1987 command mode
MKRAOFF |
|----|---------------------|--|


- Function OFF of all markers
- Presence of command and query Command
- Command MARKer[<chno>]:AOFF
MKRAOFF
- Description Sets all markers to OFF.

| | | |
|----|---------------------------|--|
| 5. | MARKer[<chno>]:COMPensate | IEEE488.1-1987 command mode
MKRCMP
MKRUCMP |
|----|---------------------------|--|

- Function ON/OFF of marker interpolation mode
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:COMPensate <bool>
 - Parameter <bool>
 - Response type 0 | 1
- IEEE488.1-1987 command mode
 - Command MKRCMP → ON
MKRUCMP → OFF
 - Response type 0 | 1
- Description Marker interpolation mode is used to interpolate the data between measurement points in linear approximation.

OFF: Marker can be set only to the measurement point. If you set the stimulus value to the point other than the measurement point, it is automatically changed to the nearest measurement point.

ON: Marker between the measurement points can be set with interpolating.

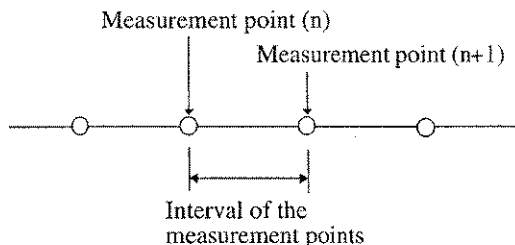

7.17.1 Commands Used for All Models

6. MARKer[<chno>]:CONVert[:MODE] IEEE488.1-1987 command mode
 ZYMK{DFLT | LIN | RI | LC}

- Function Setting of marker conversion mode
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:CONVert[:MODE] <format>
 - Parameter <format>={DEfFault | LINear | RIMaginary}
 - Response type DEF | LIN | RIM
- IEEE488.1-1987 command mode
 - Command ZYMK{DFLT | LIN | RI | LC}
 - Response type 011
- Description Sets the format of the measurement marker value irrespective of the measurement format. This command is effective when the parameter conversion of the measurement value is in execution.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Marker Format |
|--------------------------|---|---|
| ZYMKDFLT | DEfFault | The same format as the measurement format |
| ZYMKLIN | LINear | Linear impedance |
| ZYMKRI | RIMaginary | Imaginary impedance |

| | | |
|----|--|--|
| 7. | MARKer[<chno>]:COUPle

MKRCOUP
MKRUCOUP | IEEE488.1-1987 command mode
MKRCOUP
MKRUCOUP |
|----|--|--|

- **Function** Setting of marker couple mode
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command MARKer[<chno>]:COUPle <bool>
 - Parameter <bool>
 - Response type 0 | 1
- **IEEE488.1-1987 command mode**
 - Command MKRCOUP→ ON
MKRUCOUP→ OFF
- **Description** Sets ON/OFF the marker coupling of the channel 1, 2, 3 and 4.
 ON: The marker set to the active channel is automatically set to
 the other channels.
 OFF: Marker is set to the channel 1, 2, 3 and 4 each.

7.17.1 Commands Used for All Models

8. MARKer[<chno>]:DELTA[:MODE] IEEE488.1-1987 command mode
DMKR{C|A|F|OF}

- Function Setting of delta marker
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:DELTA[:MODE] <type>
 - Parameter <type>={OFF|CHILd|COMPare|FIXed}
 - Response type OFF|CHIL|COMP|FIX
- IEEE488.1-1987 command mode
 - Command DMKRC
DMKRA
DMKRF
DMKROF
 - Response type 0|1
- Description Sets the mode of the delta marker.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Mode |
|--------------------------|---|--|
| DMKRC | CHIL | Sets the child marker to the point of the active marker and obtains the difference between the active marker and the child marker. |
| DMKRA | COMP | Obtains the difference between the active marker and the other marker. |
| DMKRF | FIX | Obtains the difference between the fixed marker (FIX MKR) and the active marker. |
| DMKROF | OFF | Sets the delta maker mode to OFF. |

NOTE: Before setting the delta mode to COMP, specify the compare marker.

Delta stimulus cannot be set in IEEE488.1-1987 command mode.

9. MARKer[<chno>]:DELTA:COMPare IEEE488.1-1987 command mode
DMKR{1|2|3|4|5|6|7|8|9|10}O
- Function Compare marker specification
 - Presence of command and query Command / Query
 - IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:DELTA:COMPare <n>[,<real>]
 - Parameter <n>=1 to 10 (marker number)
<real>=Stimulus value (relative value from the active marker)
 - Response type <NR1> (integer value): 1 to 10 (marker number)
<NR3> (real value): Stimulus value
(relative value from the active marker)
 - IEEE488.1-1987 command mode
 - Command DMRK{1|2|3|4|5|6|7|8|9|10}O<real>
 - Parameter <real>=Stimulus value (relative value from the active marker)
 - Response type 0|1
 - Description Specifies the marker to be compared when the delta marker is set to the COMPare mode. And, sets the position in the relative value from the active marker.

7.17.1 Commands Used for All Models

10. MARKer[<chno>]:FANalysis:DIRection IEEE488.1-1987 command mode
TIN
TOUT

- Function Setting the direction for the filter analysis
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:FANalysis:DIRection <type>
 - Parameter <type>={IN|OUT}
 - Response type IN|OUT
- IEEE488.1-1987 command mode
 - Command TIN
TOUT
 - Response type 0|1
- Description Sets the direction for the filter analysis.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Direction |
|--------------------------|---|---|
| TIN | IN | Searching outward from the active marker. |
| TOUT | OUT | Searching toward the active marker. |

11. MARKer[<chno>]:FANalysis:FORMat {ABSolute | RELative} IEEE488.1-1987 command mode
FANAABS | FANAREL

- **Function** Sets the display method of the bandwidth frequency when analyzing the filter
- **Presence of command and query** Command/Query
- **IEEE488.1-1987 command mode**
 - Command MARKer[<chno>]:FANalysis:FORMat <type>
 - Parameter <type> = {ABSolute | RELative}
 - Response type ABS | REL
- **IEEE488.1-1987 command mode**
 - Command FANAABS | FANAREL
 - Response type 0 | 1
- **Description** Sets the display method of the bandwidth frequency when analyzing the filter.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Operation |
|--------------------------|---|--|
| FANAABS | ABSolute | Absolute value display |
| FANAREL | RELative | Value display relative to the center frequency |

7.17.1 Commands Used for All Models

12. MARKer{<chno>}:FANalysis:REFerence {ACTive | MAXimum | RLINe}
 IEEE488.1-1987 command mode
 TREFACT | TREFMAX | TREFREF

- Function Sets the search reference used when analyzing the filter
- Presence of command and query Command/Query
- IEEE488.1-1987 command mode
 - Command MARKer{<chno>}:FANalysis:REFerence <type>
 - Parameter <type> = {ACTive | MAXimum | RLINe}
 - Response type ACT | MAX | RLIN
- IEEE488.1-1987 command mode
 - Command TREFACT | TREFMAX | TREFREF
 - Response type 0 | 1
- Description Sets the search reference used when analyzing the filter.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Operation |
|--------------------------|---|------------------------------|
| TREFACT | ACTive | Active marker reference |
| TREFMAX | MAXimum | Minimum loss value reference |
| TREFREF | RLINe | Reference line reference |

| | | |
|-----|--|-----------------------------|
| 13. | MARKer[<chno>]:FANalysis[:STATe]
FLTANA | IEEE488.1-1987 command mode |
|-----|--|-----------------------------|

- Function Turns the filter analysis ON or OFF
- Presence of command and query Command / Query
- Command MARKer[<chno>]:FANalysis[:STATe] <bool>
FLTANA<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Used to sets the filter analysis ON or OFF.

The following items can be measured by the filter analysis.

- Center frequency of the pass band specified with the analysis width (loss) from the active marker.
- Pass bandwidth
- The Left frequency of the pass band
- The Right frequency of the pass band
- Quality factor (Q factor)
- Selectivity (shaping factor)

Quality factor (Q factor) and selectivity (shaping factor) are obtained from the loss minimum value.

7.17.1 Commands Used for All Models

14. MARKer[<chno>]:FANalysis:TYPE {BAND | NOTCh} IEEE488.1-1987 command mode
 FANABAND | FANANOTCH

- Function Sets the filter type used when analyzing the filter
- Presence of command and query Command/Query
- IEEE488.1-1987 command mode
 - Command MARKer[<chno>]:FANalysis:TYPE <type>
 - Parameter <type> = {BAND | NOTCh}
 - Response type BAND | NOTC
- IEEE488.1-1987 command mode
 - Command FANABAND | FANANOTCH
 - Response type 0 | 1
- Description Sets the filter type used when analyzing the filter.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Operation |
|--------------------------|---|---------------------------|
| FANABAND | BAND | Band pass filter analysis |
| FANANOTCH | NOTCh | Notch filter analysi |

| | | |
|-----|--------------------------------|---|
| 15. | MARKer[<chno>]:FANalysis:WIDTh | IEEE488.1-1987 command mode
T{3 6 60 X}DB
T{3 6 X}DEG |
|-----|--------------------------------|---|

- **Function** Sets the analysis band for the filter analysis
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**

| | |
|----------------------|---|
| Command | MARKer[<chno>]:FANalysis:WIDTh <real> |
| Parameter | <real>=Analysis band (pass bandwidth) |
| Response type | NR3(real value): Analysis band (pass bandwidth) |
- **IEEE488.1-1987 command mode**

| | | |
|----------------------|---------------------------------------|----------------|
| Command | T3DB | T3DEG |
| | T6DB | T6DEG |
| | T60DB | TXDEG<real> |
| | TXDB<real> | |
| Parameter | <real>=Analysis band (pass bandwidth) | |
| Response type | NR3 (real value): | CENTER |
| | NR3 (real value): | LEFT |
| | NR3 (real value): | RIGHT |
| | NR3 (real value): | BAND |
| | NR3 (real value): | QUALITY FACTOR |
| | NR3 (real value): | SHAPE FACTOR |
| | NR1 (integer value): | Status |
- **Description** Used to set the analysis band (pass bandwidth) for the filter analysis.
 To set 3dB, 6dB or 60dB in IEEE488.1-1987 command mode, execute each of them by T3DB, T6DB, and T60DB command.
 Set a <real> value. (Only when the TXDB command is used)
 If 3deg or 6deg is set in phase, use T3DEG or T6DEG.
 Set a <real> value. (Only when the TXDEG command is used)

7.17.1 Commands Used for All Models

| | | |
|-----|-------------------------------|--------------------------------------|
| 16. | MARKer[<chno>]:FIXed:STIMulus | IEEE488.1-1987 command mode
FMKRS |
|-----|-------------------------------|--------------------------------------|

- Function Sets the X axis value for the fixed marker (FIX MKR)
- Presence of command and query Command / Query
- Command MARKer[<chno>]:FIXed:STIMulus <real>
FMKRS<real>
- Parameter <real>=X axis value
- Response type <NR3> real value:X axis value
- Description Used to set the X axis value for the fixed marker (FIX MKR) shown in the rectangular coordinates display.
The fixed marker (FIX MKR) is available only when the parameter conversion is set to OFF or I/S.

| | | |
|-----|----------------------------|--------------------------------------|
| 17. | MARKer[<chno>]:FIXed:VALue | IEEE488.1-1987 command mode
FMKRV |
|-----|----------------------------|--------------------------------------|

- Function Sets the Y axis value for the fixed marker (FIX MKR)
- Presence of command and query Command / Query
- Command MARKer[<chno>]:FIXed:VALue <real>
FMKRV<real>
- Parameter <real>=Y axis value
- Response type <NR3> real value:Y axis value
- Description Used to set the Y axis value for the fixed marker (FIX MKR) shown in the rectangular coordinates display.
Also used to sets real part of the value for the fixed marker shown in the Smith chart or the polar coordinates display.

18. MARKer[<chno>]:FIXed:AVALue

- Function Sets the imaginary part of the fixed marker (FIX MKR)
- Presence of command and query Command / Query
- Command MARKer[<chno>]:FIXed:AVALue <real>
- Parameter <real>=Imaginary part
- Response type <NR3> real value:Imaginary part
- Description Used to sets imaginary part of the value for the fixed marker (FIX MKR) shown in the Smith chart or the polar coordinates display.

7.17.1 Commands Used for All Models

19. MARKer[<chno>]:LET IEEE488.1-1987 command mode
MKR{REF | CENT | STAR | STOP | SPAN | FIX | PEXT}

- Function Marker assignment function.
- Presence of command and query Command
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:LET <type>
 - Parameter <type>= {STARt | STOP | CENTer | SPAN | RLEVel | FIXed | PEXTension}
- IEEE488.1-1987 command mode
 - Command MKR{REF | CENT | STAR | STOP | SPAN | FIX | PEXT}
- Description Assigns the set value and the measurement value of the active marker to each setting parameter.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Operation |
|--------------------------|---|--|
| MKRREF | RLEV | Assigns the Y axis value (measurement value) of the active marker to the reference value. |
| MKRCENT | CENT | Assigns the X axis value (setting value) of the active marker to the center value of the sweep. This command is available only in the frequency sweep. |
| MKRSTAR | STAR | Assigns the X axis value (setting value) of the active marker to the start value of the sweep. |
| MKRSTOP | STOP | Assigns the X axis value (setting value) of the active marker to the stop value of the sweep. |
| MKRSPAN | SPAN | Assign the difference between the X values of the active and child markers (these values are set values) to the sweep span. |
| MKRFIX | FIX | Assigns the position of the active marker to the fixed marker (FIX MKR). |
| MKRPEXT | PEXT | A port extension value is given from the frequency and phase of an active marker. |

20. MARKer[<chno>]:LIST

- Function Turns the marker list display ON or OFF
- Presence of command and query Command / Query
- Command MARKer[<chno>]:LIST <bool>
- Parameter <bool>
- Response type 0 | 1
- Description Used to turn the marker list display ON or OFF.

21. MARKer[<chno>]:POLar IEEE488.1-1987 command mode
PMKR{LIN | LOG | RI}

- Function Sets the marker mode for the polar display
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:POLar <type>
 - Parameter <type>={MLINear | MLOGarithmic | RIMaginary}
 - Response type MLIN | MLOG | RIM
- IEEE488.1-1987 command mode
 - Command PMKR{LIN | LOG | RI}
 - Response type 0 | 1
- Description Sets the marker mode used with the polar display.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Mode |
|--------------------------|---|-------------------|
| PMKRLIN | MLIN | Linear value |
| PMKRLOG | MLOG | Logarithmic value |
| PMKRRI | RIM | Complex value |

7.17.1 Commands Used for All Models

22. MARKer[<chno>]:SMITH IEEE488.1-1987 command mode
SMKR{LIN|LOG|RI|RX|GB}

- **Function** Sets the marker mode used for the smith chart display
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command MARKer[<chno>]:SMITH <type>
 - Parameter <type>={MLINear | MLOGarithmic | RIMaginary | IMPedance | ADMittance}
 - Response type MLIN | MLOG | RIM | IMP | ADM
- **IEEE488.1-1987 command mode**
 - Command SMKR {LIN | LOG | RI | RX | GB}
 - Response type 0 | 1
- **Description** Sets the marker mode used for the smith chart display.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Mode |
|--------------------------|---|-------------------|
| SMKRLIN | MLIN | Linear value |
| SMKRLOG | MLOG | Logarithmic value |
| SMKRRI | RIM | Complex value |
| SMKRXX | IMP | Impedance value |
| SMKRGB | ADM | Admittance value |

| | | |
|-----|------------------------------|---|
| 23. | MARKer[<chno>]:SEARCh[:MODE] | IEEE488.1-1987 command mode
SRCHOFF
{MAX MIN}SRCH
ZRPSRCH
DRIPPL1 |
|-----|------------------------------|---|

- **Function** Marker search function
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command MARKer[<chno>]:SEARCh[:MODE] <type>
 - Parameter <type>={OFF | MAX | MIN | TARG | RIPPle}
 - Response type OFF | MAX | MIN | TARG | RIPP
- **IEEE488.1-1987 command mode**
 - Command SRCHOFF
{MAX | MIN}SRCH
ZRPSRCH
DRIPPL1
 - Response type

| | | |
|------------------|---------------------|----------------------------------|
| SRCHOFF: | 0 1 | |
| {MAX MIN}SRCH: | } NR3 (real value): | Setting value (stimulus value) |
| ZRPSRCH | | Measurement value (data A, B, C) |
| DRIPPL1 | | |
| | | NR1 (integer value): Status |
- **Description** Sets the marker search function.

| R3762/63 command mode | R3764/66, R3765/67 command parameter | Search Mode |
|-----------------------|--------------------------------------|---------------|
| SRCHOFF | OFF | OFF |
| MAXSRCH | MAX | Maximum value |
| MINSRCH | MIN | Minimum value |
| ZRPSRCH | TARG | Target value |
| DRIPPL1 | RIPP | Ripple value |

In IEEE488.2-1987 command mode, the search mode is returned by the query. The measurement value can be obtained by using the FETCh? query.

In IEEE488.1-1987 command mode, a measurement value is returned by the query.

| | | |
|-----|-------------------------------------|---|
| 26. | MARKer[<chno>]:SEARch:RIPPlE[:MODE] | IEEE488.1-1987 command mode
DRIPPL1
DMAXMIN |
|-----|-------------------------------------|---|

- Function: Ripple search mode specification
- Presence of command and query: Command / Query
- IEEE488.2-1987 command mode
 - Command: MARKer[<chno>]:SEARch:RIPPlE[:MODE] <type>
 - Parameter: <type>={MAX | MIN | BOTH | PPEak}
 - Response type: MAX | MIN | BOTH | PPEak
- Description: Specifies a mode when performing a ripple search.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Mode |
|--------------------------|---|---|
| DRIPPL1 | MAX | Obtains the maximum value of local maximum values. |
| | MIN | Obtains the minimum value of local minimum values. |
| | BOTH | Obtains the difference between the maximum value of local maximum values and the minimum value of local minimum values. |
| DMAXMIN | PPEak | Obtains the difference between the maximum value and the minimum value. |

NOTE: DRIPPL2 is not supported.

7.17.1 Commands Used for All Models

27. MARKer[<chno>]:SEARch:RIPple{:DX |:DY} IEEE488.1-1987 command mode
DLT{X | Y}


- Function Setting the detectivity of the ripple search
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:SEARch:RIPple{:DX |:DY} <real>
DLT{X | Y} <real>
 - Parameter <real>=Setting value
 - Response type <NR3> real value:Setting value
- Description Sets the detectivity of the ripple search.
If the detectivity is set to $\Delta Y/\Delta X$, first obtain the a point of which the gradient of the waveform (Y/X) is $\Delta Y/\Delta X$ or more, then obtain the d point of which the reverse gradient is $\Delta Y/\Delta X$ or more. And finally obtain a maximum value between the a point and the d point as the local maximum peak.
Obtain a minimum value in the same way of obtaining a maximum value with the reverse gradient.

IEEE488.2-1987 command mode; DX→Set the ΔX

DY→Set the ΔY

IEEE488.1-1987 command mode; DLTX→Set the ΔX

DLTY→Set the ΔY

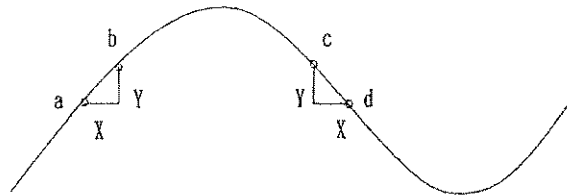

28. MARKer[<chno>]:SEARch:TARGet[:MODE] IEEE488.1-1987 command mode
ZRPSRCH

- Function Specifies the mode used when doing a target search
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command MARKer[<chno>]:SEARch:TARGet[:MODE] <type>
 - Parameter <type>={ZERO | PI | VALue}
 - Response type ZERO | PI | VALue
- IEEE488.1-1987 command mode
 - Command ZRPSRCH
 - Response type NR3 (real value): Setting value (stimulus value)
NR3 (real value): Measurement value (data A, B, C)
NR1 (integer value): Status
- Description Specifies a mode of the target search.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Mode |
|--------------------------|---|-----------------------------------|
| ZRPSRCH | ZERO | Searches the phase for 0deg. |
| | PI | Searches the phase for ±180deg. |
| | VAL | Searches for the specified value. |

7.17.1 Commands Used for All Models

29. MARKer[<chno>]:SEARch:TARGet:VALue

- Function Specifies a value for the forget search
- Presence of command and query Command / Query
- Command MARKer[<chno>]:SEARch:TARGet:VALue <real>
- Parameter <real>
- Response type <NR3> real value
- Description Specifies the value used for a target search when target search is set to specified value mode.

30. MARKer[<chno>]:SEARch:TARGet:LEFT

- Function Searches for the left frequency
- Presence of command and query Command
- Command MARKer[<chno>]:SEARch:TARGet:LEFT
- Description Used to search for the next frequency on the left when in target search mode.

31. MARKer[<chno>]:SEARch:TARGet:RIGHT

- Function Searches for the right frequency
- Presence of command and query Command
- Command MARKer[<chno>]:SEARch:TARGet:RIGHT
- Description Used to search for the next frequency on the right when in forget search mode.

32. MARKer[<chno>]:SEARch:TRACking IEEE488.1-1987 command mode
MKRTRAC

- Function Turns the tracking mode ON or OFF
- Presence of command and query Command / Query
- Command MARKer[<chno>]:SEARch:TRACking <bool>
MKRTRAC
- Parameter <bool>
- Response type 0 | 1
- Description The tracking mode settings are as follows:
ON: A marker search is executed every time a sweep ends.

NOTE: Set the tracking mode to ON before specifying the marker search.

OFF: Marker search is executed only once when a marker search is specified.

33. MARKer[<chno>]:STATistics <bool> IEEE488.1-1987 command mode
MKRSTAT

- Function Turns the statistical analysis function ON or OFF
- Presence of command and query Command/Query
- Command MARKer[<chno>]:STATistics <bool>
MKRSTAT<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Used to turn the statistical analysis function ON or OFF.

7.17.2 Command Used for Only R3765/67G Series

7.17.2 Command Used for Only R3765/67G Series

| | | |
|----|----------------------------------|---|
| 1. | MARKer[<chno>]:LIST:SPLit <bool> | IEEE488.1-1987 command mode
MARKLS<bool> |
|----|----------------------------------|---|

- Function: Selects how the marker list is displayed.
- Presence of command and query: Command/Query
- Command: MARKer[<chno>]:LIST:SPLit<bool>
MARKLS<bool>
- Parameter: <bool>
- Response type: 0 | 1
- Description: Used to turn the split marker list on or off. If the split marker list is turned off, the marker list overlays the trace.

7.18 FETCh? Subsystem

| | | |
|----|-------------------------------|--|
| 1. | FETCh[<chno>]:CDMA:FANalysis? | IEEE488.1-1987 command mode
CDMAFREP? |
|----|-------------------------------|--|

- **Function** Returns the CDMA filter analysis result.
- **Presence of command and query** Command/Query
- **Command** FETCh[<chno>]:CDMA:FANalysis?
CDMAFREP?
- **Response type** <data1>,<data2>,<data3>,<data4>,<data5>,<data6>
 <data1> = <real> (Center frequency of the passband)
 <data2> = <real> (Passband)
 <data3> = <real> (Insertion loss)
 <data4> = <real> (Difference between the lowest local minimum within the passband and the peak value)
 <data5> = <real> (Guaranteed attenuation (ATTN FREQ1))
 <data6> = <real> (Guaranteed attenuation (ATTN FREQ2))

 NR3(Real value)
 22-characters fixed-length format
 SN.NNNNNNNNNNNNNNNNESNN
 (S:+/-, N:0 to 9, E: Exponential sign)
- **Description** Outputs the result of the CDMA filter analysis. CDMA filter analyses are performed on LOG MAG data. If the format is either LOGMAG, LOGMAG&PHASE or LOGMAG&DELAY, the LOGMAG data on the displayed waveform is analyzed. If the format is other than the above, internal LOGMAG data which has not yet been displayed is analyzed (see the operation manual for more information).

 <data1>: This is the center frequency of the filter passband. The data format uses a 22-character fixed-length format as shown below:
 SN.NNNNNNNNNNNNNNNNESNN
 (S:+/-, N:0 to 9, E: Exponential sign)
 When the data is invalid, the value is
 +1.000000000000000E+38.

7.18 FETCh? Subsystem

<data2>: This is the filter passband. The same is used 22-character fixed-length format as in <data1>.

When the data is invalid, the value is

+1.000000000000000E+38.

<data3>: This is the filter insertion loss (the peak value). The same is used 22-character fixed-length format as in <data1>.

When the data is invalid, the value is

+1.000000000000000E+38.

<data4>: This is the difference between the lowest local minimum and the peak value. The same is used 22-character fixed-length format as in <data1>. When the data is invalid, the value is +1.000000000000000E+38.

<data5>: This is the guaranteed attenuation (ATTN FREQ1). The same is used 22-character fixed-length format as in <data1>.

When the data is invalid, the value is

+1.000000000000000E+38.

<data6>: This is the guaranteed attenuation (ATTN FREQ2). The same is used 22-character fixed-length format as in <data1>.

When the data is invalid, the value is

+1.000000000000000E+38.

| | | |
|----|---------------------------------------|-----------------------------|
| 2. | FETCh[<chno>]:PLINearity?
PLINREP? | IEEE488.1-1987 command mode |
|----|---------------------------------------|-----------------------------|

- **Function** Outputs the Phase Linearity analysis result
- **Presence of command and query** Query
- **Command** FETCh[<chno>]:PLINearity?
PLINREP?
- **Response type** <real>
NR3 (Real value)
22-characters fixed-length format
SN.NNNNNNNNNNNNNNNNESNN
(S:+/-, N:0 to 9, E: Exponential sign)
- **Description** This mode allows the user to obtain the result of the Phase Linearity analysis.
This function can be used for both Phase linearity and CDMA Phase linearity. When the Phase linearity function is set to ON, the analysis result of the Phase linearity is output; when the CDMA Phase linearity function is set to ON, the analysis result of the CDMA Phase linearity is output.
A 22-character fixed-length format is used. When the data is invalid, the value is +1.000000000000000E+38.

7.18 FETCh? Subsystem

3. FETCh[<chno>][:MARKer][:ACTivate]?

- Function Active marker output
- Presence of command and query Query
- Command FETCh[<chno>][:MARKer][:ACTivate]?
- Response type <data1>, <data2>, <data3>, <data4>, <data5>
 <data1>=<real> (Stimulus)
 <data2>=<real> (Data A)
 <data3>=<real> (Data B)
 <data4>=<real> (Data C)
 <data5>=<int> (Status)

- Description Outputs the latest active marker data.
 The output data is transferred in ASCII format.

<Stimulus>

Shows the X axis value at the marker point.

The following fixed length format of 22 characters is used.

SN.NNNNNNNNNNNNNNNNESNN

(S:+/-, N:0 to 9, E:Exponential sign)

If the active marker is disabled, the stimulus is
 +1.000000000000000E+38.

If the delta marker is enabled, the stimulus is the difference between the markers.

<Data A, B>

Data A is the operation data of the first waveform. Data B is the operation data of the second waveform.

The memory waveform is data B.

When the polar coordinates or the smith chart display is set, data A is the value for the real part and the data B is the value for the imaginary part.

The data format is the same as that of the stimulus.

If there is no available data, data A and B are
 +1.000000000000000E+38.

<Data C>

Data C is available when the polar coordinates or the smith chart display is set. In this case, data c is the reactance value or the capacitance value.

The data format is the same as that of the stimulus.

If there is no available data, the data C is +1.0000000000000000E+38.

<Status>

The status of the operation data is as follows.

- 1: No data.
- 0: Data for the normal operation.
- 1: Measurement data cannot be operated.
- 2: Level 1 error in the filter analysis.
- 3: Level 2 error in the filter analysis.
- 4: Level 3 error in the filter analysis.
- 5: Level 4 error in the filter analysis.

The status is an integer value in the format of 1 or 2 character(s).

7.18 FETCh? Subsystem

4. FETCh[<chno>][:MARKer]:FANalysis?

- Function Filter analysis output
- Presence of command and query Query
- Command FETCh[<chno>][:MARKer]:FANalysis?
- Response type <data1>, <data2>, <data3>, <data4>, <data5>, <data6>, <data7>
 <data1>=<real> (CENTER FREQ)
 <data2>=<real> (LEFT FREQ)
 <data3>=<real> (RIGHT FREQ)
 <data4>=<real> (BAND WIDTH)
 <data5>=<real> (QUALITY FACTOR)
 <data6>=<real> (SHAPE FACTOR)
 <data7>=<int> (Status)

- Description Outputs the results for the filter analysis.
 The filter analysis is executed with the first waveform data. If the data waveform is OFF, however, the memory waveform data is used.
 The output data is transferred in the ASCII format.

<CENTER FREQ>
 Center frequency of the filter
 The format is the following fixed length format of 22 characters.
 SN.NNNNNNNNNNNNNNNNESNN
 (S:+/-, N:0 to 9, E:Exponent characteristic)
 If the active marker is disabled, the CENTER FREQ
 is+1.000000000000000E+38.
 If the delta marker is enabled, the frequency difference between the
 markers cannot be transferred.

<LEFT FREQ>
 Left frequency of the searched bandwidth
 The format is the same as that of the CENTER FREQ.

<RIGHT FREQ>
 If no available data, the LEFT FREQ is
 +1.000000000000000E+38.
 Right frequency of the searched bandwidth
 The format is the same as that of the CENTER FREQ.
 If no available data, the RIGHT FREQ is
 +1.000000000000000E+38.

<BANDWIDTH>

Searched bandwidth

The format is the same as that of the CENTER_FREQ.

If no available data, the BANDWIDTH is
+1.000000000000000E+38.

<QUALITYFACTOR>

Quality factor

The format is the same as that of the CENTER_FREQ.

If no available data, the QUALITYFACTOR is
+1.000000000000000E+38.

<SHAPEFACTOR>

Selectivity

The format is the same as that of the CENTER_FREQ.

<Status>

If no available data, the SHAPEFACTOR is
+1.000000000000000E+38.

The status of the operation data is as follows.

- 1: No data.
- 0: Data for the normal operation.
- 1: Measurement data cannot be operated.

The status is in the format of 1 or 2 integers.

7.18 FETCh? Subsystem

5. FETCh[<chno>][:MARKer]:NUMBer<n>?

- Function Data output of the specified marker.
- Presence of command and query Query
- Command FETCh[<chno>][:MARKer]:NUMBer<n>?
- Parameter <n>=0 to 10
- Description Outputs the marker data of the specified number.
Number 0 is the active marker.
The format is the same as that of the active marker output.

| | | |
|----|--|-----------------------------|
| 6. | FETCh[<chno>][:MARKer]:STATistics?
REPSTAT? | IEEE488.1-1987 command mode |
|----|--|-----------------------------|

- **Function** Outputs the result of the statistical analysis
- **Presence of command and query** Query
- **Command** FETCh[<chno>][:MARKer]:STATistics?
REPSTAT?
- **Parameter** <data1>,<data2>,<data3>
<data1> = <real> (Median)
<data2> = <real> (Standard deviation)
<data3> = <real> (Peak to peak)
- **Response type** NR3(Real number)
22-character fixed-length format
SN.NNNNNNNNNNNNNNNNSNN
(S:+/-, N:0 to 9, E: Exponential sign)
- **Description** Used to output the result of the statistical analysis.

 <data1>: the median. The data format is a 22-character fixed-length format as shown below:
 SN.NNNNNNNNNNNNNNNNSNN
 (S:+/-, N:0 to 9, E: Exponential sign)
 When the data is invalid, the value is
 +1.00000000000000E+38.

 <data2>: the standard deviation of the waveform data. The data format is a 22-character fixed-length format as in <data1>. When the data is invalid, the value is
 +1.00000000000000E+38.

 <data3>: the peak to peak of the waveform data The data format is a 22-character fixed-length format as in <data1>. When the data is invalid, the value is
 +1.00000000000000E+38.

7.19 LIMit Subsystem

7.19 LIMit Subsystem

| | | |
|----|---|---|
| 1. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP | IEEE488.1-1987 command mode
FAILBEEP
PASSBEEP |
|----|---|---|

- Function ON/OFF of beep sound at the limit test
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode

| | |
|---------------|--|
| Command | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP <bool> |
| Parameter | <bool> |
| Response type | 0 1 1 |
- IEEE488.1-1987

| | |
|---------------|----------------------------------|
| Command | FAILBEEP<bool>
PASSBEEP<bool> |
| | Refer to "7.19 27 LPAR" too. |
| Parameter | <bool> |
| Response type | 0 1 1 |
- Description

Selects whether or not a beep sound at the limit test.

In IEEE488.2 command mode, the beep is available by setting this command to ON when the limit test function I(DISP:LIM) is ON.

In IEEE488.1 command mode, the beep is available by setting FAILBEEP or PASSBEEP to ON.

Even if either one of FAILBEEP or PASSBEEP is set to OFF, the beep is disabled.

| | | |
|----|---|---|
| 2. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP:FOR | IEEE488.1-1987 command mode
FAILBEEP
PASSBEEP |
|----|---|---|

- **Function** Sets the conditions under which a beep sound is played when performing a limit test.
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP:FOR
<type>
 - Parameter** <type>={FAIL | PASS}
- **R3751 command mode**
 - Command** FAILBEEP<bool>
PASSBEEP<bool>
 - Parameter** Refer to "7.19 27 LPAR" too.
<bool>
 - Response type** 0 | 1
- **Description**

Selects whether the beep sound is played when a FAIL or PASS occurs during the limit test.

When this is set to ON under the IEEE488.2 command mode (DISP:LIM:BEEP ON), a beep sound is played according to the settings below.

When FAILBEEP is set to ON, the beep sounds at a FAIL result.

When PASSBEEP is set to ON, the beep sounds at a PASS result.

When either FAILBEEP or PASSBEEP is set to OFF, the beep does not sound for those conditions.

7.19 LIMit Subsystem

3. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP:TONE` IEEE488.1-1987 command mode
`BEEPTONE`

- Function Sets the beep tone
- Presence of command and query Command / Query
- Command `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP:TONE`
`<int>`
`BEEPTONE<int>`
Refer to "7.19 27 LPAR" too.
- Parameter `<int>=0 to 7`
- Response type NR1 (integer value)
- Description Sets the beep tone for the limit test.

4. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:CLEar` IEEE488.1-1987 command mode
`LSEGCL`

- Function Clears all segments in the limit table
- Presence of command and query Command
- IEEE488.2-1987 command mode
Command `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:CLEar`
- IEEE488.1-1987 command mode
Command `LSEGCL`
Refer to "7.19 27 LPAR" too.
- Description Clears the contents of all the segments in the limit table.
Two limit tables exist in each channel. To clear the second table, specify 2 for `<parano>`.
To clear the segment only partially, use `DISP:LIM:SEGM:DEL`.

5. DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:DATA

- Function Information setting of all segments in the limit table.
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:DATA <block>
 - Parameter
 - <block> = #<byte><length><data>
 - <byte> = Describes byte of the next string <length> with ASCII numeral (1 character).
 - <length> = Describes byte of the next string <data> with ASCII numeral.
 - <data> = Describes each element of all the necessary segments in order of <stimulus>, <upper>, <lower>, <type>, <color>, <wcolor>, ...
 - <stimulus> = Stimulus value
 - <upper> = Upper limit value
 - <lower> = Lower limit value
 - <type> = Line type {SLINE | FLINe | SPOint}
 - <color> = Limit line display color {1-7}
 - <wcolor> = Display color of signal waveform {1-7}
 - Response type <block>
- Description
 - Sets all segment information of the limit table in perfect form. The previous segment information is lost.
 - Sorts the segments in ascending order of stimulus value as they are received.
 - If some description error is found in the data, the segments up to that point are valid, but subsequent segments are ignored.
- Example
 - LISP:LIM:DATA #2463GHz,5dB,-5dB,SLIN,2,6,6GHz,10dB,-10dB,SPO,2,6

7.19 LIMit Subsystem

| | | |
|----|---|---|
| 6. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:LINE | IEEE488.1-1987 command mode
LIMILINE |
|----|---|---|

- Function Turns the limit line screen display ON or OFF
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:LINE<bool>
 - Parameter <bool>
 - Response type 0|1
- IEEE488.1-1987 command mode
 - Command LIMILINE<bool>
Refer to "7.19 27 LPAR" too.
 - Parameter <bool>
 - Response type 0|1
- Description Used to turn the limit line screen display ON or OFF.
An ON setting displays the limit line on the display scale. Limit tests cannot be performed without setting DISP:LIM to ON.

| | | |
|----|---|---|
| 7. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:OFFSet:AMPLitude | IEEE488.1-1987 command mode
LIMIAMPO |
|----|---|---|

- **Function** Adds or subtracts offset values to or from all segment limit values.
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:OFFSet:AMPLitude <real>
 - Parameter** <real>
 - Response type** NR3 (real value)
- **IEEE488.1-1987 command mode**
 - Command** LIMIAMPO<real>
Refer to "7.19 27 LPAR" too.
 - Parameter** <real>
 - Response type** NR3 (real value)
- **Description** Moves the limit line up or down according to the specified offset value.
In order to add the offset value to the stimulus value, use the DISP:LIM:OFFS:STIM command.

7.19 LIMit Subsystem

| | | |
|----|---|---|
| 8. | DISPlay[:WINDow[<chno>]];LIMit[<parano>]
:OFFSet:STIMulus <real> | IEEE488.1-1987 command mode
LIMISTIO |
|----|---|---|

- **Function** Adds or subtracts offset values to or from all segment stimulus values.
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - **Command** DISPlay[:WINDow[<chno>]];LIMit[<parano>]
:OFFSet:STIMulus <real>
 - **Parameter** <real>
 - **Response type** NR3 (real value)
- **IEEE488.1-1987 command mode**
 - **Command** LIMISTIO<real>
Refer to "7.19 27 LPAR" too.
 - **Parameter** <real>
 - **Response type** NR3 (real value)
- **Description** Moves the limit line up and down according to the specified offset value.

In order to add the offset value to the response value, use DISP:LIM:OFFS:AMPL command.

| | | |
|----|---|---------------------------------------|
| 9. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:ParallelIO | IEEE488.1-1987 command mode
LIMPIO |
|----|---|---------------------------------------|

- Function Controls the line limit result output.
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode

| | |
|---------------|--|
| Command | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:ParallelIO <bool> |
| Parameter | <bool> |
| Response type | 0 1 |
- IEEE488.1-1987 command mode

| | |
|---------------|--|
| Command | LIMPIO<bool>
Refer to "7.19 27 LPAR" too. |
| Parameter | <bool> |
| Response type | 0 1 |
- Description Used to control whether the line limit test results are output to the parallel I/O (PIO).
Setting this command to ON when the limit test (DISP:LIM) has been enabled outputs the results to PIO.

7.19 LIMit Subsystem

| | | |
|-----|--|-----------------------------|
| 10. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>] | IEEE488.1-1987 command mode |
| | :PARAmeter:PolarLIMit | LIMPLIN LIMPLOG |

- **Function** Selects which judgment parameter combination to use when using the Polar display format.
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:PARAmeter:PolarLIMit <select>
 - Parameter** <select> = {LINear | LOGarithmic}
 - Response type** LIN | LOG
- **IEEE488.1-1987 command mode**
 - Command** LIMPLIN | LIMPLOG
Refer to "7.19 27 LPAR" too.
 - Response type** 0 | 1
- **Description** When the Polar format (CALCulate[:FORMat]POLar) is selected for the display, a combination of magnitude and phase are used for the judgement parameter.

This command selects whether a linear or log magnitude is used.

| R3762/63 command mode | R3764/66, R3765/67 command parameter | Judgement parameter <parano> |
|-----------------------|--------------------------------------|-------------------------------|
| LIMPLIN | LINear | 0; Magnitude (Linear)1; Phase |
| LIMPLOG | LOGarithmic | 0; Magnitude (Log)1; Phase |

If the display format of the corresponding channel used rectangular coordinates, this setting has no effect.

| | | |
|-----|---|--|
| 11. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:PARAmeter:SmithLIMit | IEEE488.1-1987 command mode
LIMSLIN LIMSLOG |
|-----|---|--|

- **Function** Selects which judgment parameter combination to use when using the Smith chart format.
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:PARAmeter:SmithLIMit <select>
 - Parameter** <select> = {LINear | LOGarithmic}
 - Response type** LIN | LOG
- **IEEE488.1-1987 command mode**
 - Command** LIMSLIN | LIMSLOG
 - Refer to "7.19 27 LPAR" too.
 - Response type** 0 | 1
- **Description** When the Smith chart format (CALCulate[:FORMat] SCHart | ISCHart) is selected for the display, the combination of magnitude and phase are used for the judgement parameter.
This command selects whether a linear or log magnitude is used.

| R3762/63
command mode | R3764/66, R3765/67
command parameter | Judgement parameter <parano> |
|--------------------------|---|-------------------------------|
| LIMPLIN | LINear | 0; Magnitude (Linear)1; Phase |
| LIMPLOG | LOGarithmic | 0; Magnitude (Log)1; Phase |

If the display format of the corresponding channel uses rectangular coordinates, this setting has no effect.

7.19 LIMit Subsystem

| | | |
|-----|--|---------------------------------------|
| 12. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:PARAmeter[:STATe] | IEEE488.1-1987 command mode
LIMPAR |
|-----|--|---------------------------------------|

- **Function** Turns each judgment parameter setting ON or OFF.
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:PARAmeter[:STATe] <bool>
 - Parameter** <bool>
 - Response type** 0|1
- **IEEE488.1-1987 command mode**
 - Command** LIMPAR<bool>
Refer to "7.19 27 LPAR" too.
 - Parameter** <bool>
 - Response type** 0|1
- **Description** Used to turn each judgment parameter setting ON or OFF.

| <parano> | Judgement parameter |
|----------|--------------------------------|
| 1 | Main trace/real part/magnitude |
| 2 | Sub trace/imaginary part/phase |

To execute the limit test, use DISP:LIM ON after setting the limit. Even if the parameter is set to ON, if no segment has been set, this setting has is effect.

13. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:REPort?`

- **Function** Reports PASS and FAIL information for all segments
 - **Presence of command and query** Query
 - **IEEE488.2-1987 command mode**
 - Query** `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:REPort?`
 - Response type** `<block>`

The output format is related to the data format setting (FORMat[:DATA]).

For ASCII format (FORMat[:DATA] ASCii).

`<block> = <segment>[,<segment>, ...]`

`<segment> = 0 to 30 numeral (ASCII character string)`

For binary format (FORMat[:DATA] {REAL|MBIN}, {32|64}).

`<block> = #<byte>[<length>]<data>`

`<byte> =` Specifies byte of the next string `<length>` with 1 character of ASCII numeral.

`<length> =` Specifies byte of the next string `<data>` with ASCII numeral.

`<data> =` Numbers of FAIL segments (Order of 1 byte integer, ascending order)
 - **Description** Used to report PASS or FAIL information from all segments tested.
- To see the test results, use DISP:LIM:RES?.
- Refer to "3.1.2 Data Formats" for more information about the block data `<block>`.
- Refer to "7.7.2 FORMat[:DATA]" for more information on the data format.

7.19 LIMit Subsystem

| | | |
|-----|--|--|
| 14. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:RESult? | IEEE488.1-1987 command mode
LIMRES? |
|-----|--|--|

- Function Reports PASS and FAIL information for the test results
- Presence of command and query Query
- IEEE488.2-1987 command mode
 - Query DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:RESult?
 - Response type PASS | FAIL | OFF | UND
- IEEE488.1-1987 command mode
 - Query LIMRES?
 - Refer to "7.19 27 LPAR" too.
 - Response type PASS | FAIL | OFF | UND
- Description Used to show the test results as either PASS or FAIL.
If the limit test is turned OFF, a result of "OFF" is returned, and if the limit value is undefined, "UNDEFINED" is returned.

15. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>`

- **Function** Sets all information for the specified segment together
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Query** `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n> <block>`
 - Parameter**
 - `<block> = #<byte><length><data>`
 - `<byte> =` Describes byte of the next string `<length>` with ASCII numeral (1 character).
 - `<length> =` Describes byte of the next string `<data>` with ASCII numeral.
 - `<data> =` Describes each element of the segments in order of `<stimulus>`, `<upper>`, `<lower>`, `<type>`, `<color>`, `<wcolor>`.
 - `<stimulus> =` Stimulus value
 - `<upper> =` Upper limit value
 - `<lower> =` Lower limit value
 - `<type> =` Line type {SLINe | FLINe | SPONt}
 - `<color> =` Limit line display color {1-7}
 - `<wcolor> =` Display color of signal waveform {1-7}
 - `<block>`
 - Response type**
- **Description**

Combines the necessary information for a single segment together in one setting. If the specified segment is not empty, old contents are overwritten.

The segment number `<n>` can be between 0 and 30.

When all the data has been received, the segments are ordered according to their stimulus values.

If the specified segments are more than the segment number specified beforehand, the specification of segment is ignored and they are added to the first empty segment.
- **Example** `DISP:LIM:SEGM1 #2224GHz, 5dB,-5dB, SLIN, 2, 6`

7.19 LIMit Subsystem

| | | |
|-----|--|-----------------------------|
| 16. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>] | IEEE488.1-1987 command mode |
| | :SEGment<n>:COLor | LIMC |

- **Function** Sets the limit line display color for the specified segment
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:COLor <int>
 - Parameter** <int>
 - Response type** NR1 (integer value)
- **IEEE488.1-1987 command mode**
 - Command** LIMC<int>
Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
 - Parameter** <int>
 - Response type** NR1 (integer value)
- **Description** Used to set the limit line display colors for the specified segments.

| Parameter | Display color |
|-----------|---------------|
| 1 | Gray |
| 2 | Red |
| 3 | Purple |
| 4 | Green |
| 5 | Blue |
| 6 | Yellow |
| 7 | White |

In IEEE488.2-1987 command mode, the segment number <n> range is 0 to 30. In IEEE488.1-1987 command mode, the segment number must be specified by the LSEG command in advance.

17. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:DELEte`

- Function Deletes the specified segment
- Presence of command and query Command
- IEEE488.2-1987 command mode
Command `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:DELEte`
- Description Used to delete the specified segment and shifts next segment up.
Use `DISP:LIM:CLEar` to delete all segments.

18. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>] :SEGment<n>:LOWer` IEEE488.1-1987 command mode
LIML

- Function Sets the lower limit value for the specified segment
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
Command `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:LOWer<real>`
Parameter `<real>`
Response type NR3 (real value)
- IEEE488.1-1987 command mode
Command `LIML<real>`
Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
Parameter `<real>`
Response type NR3 (real value)
- Description Used to set the lower limit value for the specified segment.
If the lower limit specified is larger than the upper limit, exchange these values.
In IEEE488.2-1987 command mode, the segment number `<n>` range is 0 to 30. In IEEE488.1-1987 command mode, the segment number must be specified by the LSEG command in advance.

7.19 LIMit Subsystem

19. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:LOWer:REPort?`

- Function Reports the results for FAIL points at the lower limit of the specified segment
- Presence of command and query Query
- IEEE488.2-1987 command mode

Query `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:LOWer:REPort?`

Response type `<block>`
 The output format is related to the data format setting (FORMat[:DATA]).

In case of ASCII format (FORMat[:DATA] ASCii).

`<block>` = `<point>[,<point>,...]`
`<point>` = `<stimulus>,<amplitude>,<failed>` (ASCII character string)

In case of binary format (FORMat[:DATA] {REAL | MBIN}, {32 | 64}).

`<block>` = `#<byte><length>[<point>...]`
`<byte>` = Specifies byte of the next string `<length>` with 1 character of ASCII numeral.
`<length>` = Specifies byte of the next string `<point>...` with ASCII numeral.
`<point>` = `<stimulus><amplitude><failed>` (binary format)
`<stimulus>` = Stimulus value of FAIL point `<real>`
`<amplitude>` = Response value of FAIL point `<real>`
`<failed>` = The difference between the response value and the lower limit value `<real>`

- Description Used to report the results for the FAIL point at the lower limit of the specified segment.
 The output data format follows the specifications set by the FORM[:DATA] command.
 The stimulus value and the response value units correspond to the current display format.
 Refer to "7.7 2 FORMat[:DATA]" for the data format.

20. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:REPort?`

- **Function** Reports the result for a FAIL point in the specified segment
- **Presence of command and query** Query
- **IEEE488.2-1987 command mode**
 - Query** `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:REPort?`
 - Response type** <block>
The output format is related to the data format setting (FORMat[:DATA]).

In case of ASCII format (FORMat[:DATA] ASCii).
<block> = <point>[,<point>,....]
<point> = <stimulus>,<amplitude>,<failed> (ASCII character string)

In case of binary format (FORMat[:DATA] {REAL | MBIN}, {32 | 64}).
<block> = #<byte><length>[<point>...]
<byte> = Specifies byte of the next string <length> with 1 character of ASCII numeral.
<length> = Specifies byte of the next string <point>... with ASCII numeral.
<point> = <stimulus><amplitude><failed> (binary format)
<stimulus> = Stimulus value of FAIL point <real>
<amplitude> = Response value of FAIL point <real>
<failed> = The difference between the response value and the lower limit value <real>
- **Description** Used to report the results for the FAIL point in the specified segment.
The output data format follows the specifications set by the FORM[:DATA] command.
The stimulus value and the response value units correspond to the current display format.
Refer to "7.7.2 FORMat[:DATA]" for the data format.

7.19 LIMit Subsystem

| | | |
|-----|--|--------------------------------------|
| 21. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:STIMulus | IEEE488.1-1987 command mode
LSTIM |
|-----|--|--------------------------------------|

- Function Sets the stimulus value for the specified segment
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:STIMulus <real>
 - Parameter <real>
 - Response type NR3 (real value)
- IEEE488.1-1987 command mode
 - Command LSTIM<real>
 - Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
 - Response type NR3 (real value)
- Description Used to set the stimulus value for the specified segment.
In IEEE488.2-1987 command mode, the segment number <n> range is 0 to 30. In IEEE488.1-1987 command mode, the segment number must be specified by the LSEG command in advance.

22. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]` IEEE488.1-1987 command mode
`:SEGment<n>:TYPE` LIMTFLT | LIMTSLP | LIMTSP

- **Function** Sets the line type for the specified segment
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** `DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]`
`:SEGment<n>:TYPE <type>`
 - Parameter** `<type>=SLINe | FLINe | SPOint`
 - Response type** `SLIN | FLIN | SPO`
- **IEEE488.1-1987 command mode**
 - Command** `LIMTFLT | LIMTSLP | LIMTSP`
Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
 - Response type** `0 | 1`
- **Description** Used to set the line type for the specified segment.

| R3762/63
command | R3764/66, R3765/67
command parameter | Type |
|---------------------|---|--------------|
| LIMTFLT | FLINe | Flat line |
| LIMTSLP | SLINe | Slope line |
| LIMTSP | SPOint | Single point |

If a setting other than single point is selected in the polar coordinate display format, the same limit value is adapted for all measurement points in the segment.

In IEEE488.2-1987 command mode, the segment number <n> has a range of 0 to 30. In IEEE488.1-1987 command mode, the segment number must be specified by the LSEG command in advance.

7.19 LIMit Subsystem

| | | |
|-----|---|-------------------------------------|
| 23. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGMent<n>:UPPer | IEEE488.1-1987 command mode
LIMU |
|-----|---|-------------------------------------|

- Function Sets the upper limit value for the specified segment
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode
 - Command DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]
:SEGMent<n>:UPPer <real>
 - Parameter <real>
 - Response type NR3 (real value)
- IEEE488.1-1987 command mode
 - Command LSTIM<real>
Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
 - Parameter <real>
 - Response type NR3 (real value)
- Description Used to set the upper limit value for the specified segment.
If the upper limit specified is smaller than the lower limit, exchange these values.
In IEEE488.2-1987 command mode, segment number <n> has a range of 0 to 30. In IEEE488.1-1987 command mode, the segment number must be specified by LSEG command in advance.

24. `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:UPPer:REPort?`

- **Function** Reports the result FAIL point at the upper limit of the specified segment
- **Presence of command and query** Query
- **IEEE488.2-1987 command mode**
 - Query** `DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:UPPer:REPort?`
 - Response type** <block>
The output format is related to the data format setting (FORMat[:DATA]).

In case of ASCII format (FORMat[:DATA] ASCi).
<block> = <point>[,<point>,...]
<point> = <stimulus>,<amplitude>,<failed> (ASCII character string)

In case of binary format (FORMat[:DATA] {REAL|MBIN}, {32|64}).
<block> = #<byte><length>[<point>...]
<byte> = Specifies byte of the next string <length> with 1 character of ASCII numeral.
<length> = Specifies byte of the next string <point>... with ASCII numeral.
<point> = <stimulus><amplitude><failed> (binary format)
<stimulus> = Stimulus value of FAIL point <real>
<amplitude> = Response value of FAIL point <real>
<failed> = The difference between the response value and the upper limit value <real>
- **Description** Used to report the results for the FAIL point at the upper limit of the specified segment.
The output data format depends on the FORM[:DATA] command.
The units of the stimulus value and the response value will be the same as the current display format.
Refer to "7.7.2 FORMat[:DATA]" for the data format.

7.19 LIMit Subsystem

| | | |
|-----|--|--------------------------------------|
| 25. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:WCOLor | IEEE488.1-1987 command mode
LIMWC |
|-----|--|--------------------------------------|

- **Function** Sets the waveform color for the specified segment
- **Presence of command and query** Command / Query
- **IEEE488.2-1987 command mode**
 - Command** DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]
:SEGment<n>:WCOLor <int>
 - Parameter** <int>
 - Response type** NR1 (integer value)
- **IEEE488.1-1987 command mode**
 - Command** LIMWC<int>
Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
 - Parameter** <int>
 - Response type** NR1 (integer value)
- **Description** Used to set the display color for the measurement waveform of the specified segment.

Within the stimulus range of the segment, the measurement waveform of PASS range is displayed in the color specified. But the measurement waveform of FAIL range is displayed in red regardless of the setting here.

| Parameter | Display color |
|-----------|---------------|
| 1 | Gray |
| 2 | Red |
| 3 | Purple |
| 4 | Green |
| 5 | Blue |
| 6 | Yellow |
| 7 | White |

In IEEE488.2-1987 command mode, segment number <n> has a range of 0 to 30. In IEEE488.1-1987 command mode, the segment number must be specified by the LSEG command in advance.

| | | |
|-----|--|---|
| 26. | DISPlay[:WINDow[<chno>]]:LIMit[<parano>][:STATe] | IEEE488.1-1987 command mode
LIMITEST |
|-----|--|---|

- Function Turns the limit test function ON or OFF
- Presence of command and query Command / Query
- IEEE488.2-1987 command mode

| | |
|---------------|---|
| Command | DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]
[:STATe] <bool> |
| Parameter | <bool> |
| Response type | 011 |
- IEEE488.1-1987 command mode

| | |
|---------------|--|
| Command | LIMITEST<bool>
Refer to "7.19 27 LPAR" too. |
| Parameter | <bool> |
| Response type | 011 |
- Description

When the limit test is set to ON, the trace data judgment is executed using the set limit value.

In order to display the limit line on the screen set, DISP:LIM:LINE to ON.

The parameter <parano> specification is ignored.

7.19 LIMit Subsystem

27.

| | |
|--|-------------------------------------|
| | IEEE488.1-1987 command mode
LPAR |
|--|-------------------------------------|

- **Function** Selects the parameter number.
- **Presence of command and query** Command / Query
- **R3751 command mode**
 - Command** LPAR<int>
 - Parameter** <int>=1 to 2
 - Response type** NR1 (integer value)
- **Description** Specifies the parameter number used under IEEE488.1 command mode.

A selected parameter is allocated to the LIMIT command which requires the parameter number.

As each command depends on the header parameter <parano> under IEEE488.2 command mode, the setting made by this command is ignored.

28.

IEEE488.1-1987 command mode
LSEG

- **Function** Selects the segment number
- **Presence of command and query** Command / Query
- **IEEE488.1-1987 command mode**
 - Command** LSEG<int>
 - Parameter** <int> = 0 to 30
 - Response type** NR1 (integer value)
- **Description**

Specifies a segment number in IEEE488.1-1987 command mode. In the set commands of segment, LIMC, LIML, LSTIM, LIMIT, LIMU and LIMWC, the setting is performed for the segment numbers specified here.

In IEEE488.2-1987 command mode, the setting by this command is ignored because the setting follows the segment by the header parameter <n> in each command.

7.20 TRANSform Subsystem

7.20 TRANSform Subsystem

7.20.1 Commands Used for All Models

| | | |
|----|--|--|
| 1. | CALCulate[<chno>]:TRANSform:TIME:CENTer <real> | IEEE488.1-1987 command mode
CENTERT<real> |
|----|--|--|

- Function Sets a center time
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:TRANSform:TIME:CENTer <real>
CENTERT<real>
- Response type NR3 (Real value)
- Description Used to set a center time for the time domain display.
- Caution This command is only available when Option 70 has been installed.

| | | |
|----|--|---------------------------------------|
| 2. | CALCulate[<chno>]:TRANSform:TIME:SPAN? | IEEE488.1-1987 command mode
SPANT? |
|----|--|---------------------------------------|

- Function Outputs a time span
- Presence of command and query Query
- Command CALCulate[<chno>]:TRANSform:TIME:SPAN?
SPANT?
- Response type <real>
NR3 (Real value)
22-characters fixed-length format
SN.NNNNNNNNNNNNNNNNESNN
(S:+/-, N: 0 to 9, E: Exponential sign)
- Description Used to set a time span for the time domain display.
- Caution This command is only available when Option 70 has been installed.

3. `CALCulate[<chno>]:TRANSform:TIME:START <real>` IEEE488.1-1987 command mode
`STARTT<real>`

- Function Sets a start time
- Presence of command and query Command/Query
- Command `CALCulate[<chno>]:TRANSform:TIME:START <real>`
`STARTT<real>`
- Response type NR3 (Real value)
- Description Used to set a start time for the time domain display.
- Caution This command is only available when Option 70 has been installed.

4. `CALCulate[<chno>]:TRANSform:TIME:STATE <bool>` IEEE488.1-1987 command mode
`TIMDTRAN<bool>`

- Function Turns the time domain display ON or OFF
- Presence of command and query Command/Query
- Command `CALCulate[<chno>]:TRANSform:TIME:STATE <bool>`
`TIMDTRAN<bool>`
- Parameter `<bool>`
- Response type 0 | 1
- Description Selects whether or not the time domain is displayed (if it set to OFF, the frequency domain is displayed instead).
- Caution This command is only available when Option 70 has been installed.

7.20.1 Commands Used for All Models

5. `CALCulate[<chno>]:TRANSform:TIME:STIMulus {IMPulse | STEP}`
 IEEE488.1-1987 command mode
 BANDPASS | LOWPIMPU | LOWPSTEP

- **Function** Selects an input type when transforming in the time domain
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command `CALCulate[<chno>]:TRANSform:TIME:STIMulus <type>`
 - Parameter `<type> = {IMPulse | STEP}`
 - Response type `IMP | STEP`
- **IEEE488.1-1987 command mode**
 - Command `BANDPASS | LOWPIMPU | LOWPSTEP`
 - Parameter `<bool>`
 - Response type `0 | 1`
- **Description** Used to set an input type for transformations between the frequency domain and the time domain.
 In the IEEE488.2-1987 command mode, set the input type using the command shown below:
`CALCulate[<chno>]:TRANSform:TIME:TYPE{BPASs | LPASs}`
 IEEE488.2-1987 command mode

| CALC:TRAN:TIME:TYPE | CALC:TRAN:TIME:STIM | Transformation mode |
|---------------------|---------------------|---------------------|
| BPASs | (Not affected) | Bandpass |
| LPASs | IMPulse | Low pass impulse |
| LPASs | STEP | Low pass step |

IEEE488.1-1987 command mode

| Command | Transformation mode |
|----------|---------------------|
| BANDPASS | Bandpass |
| LOWPIMPU | Low pass impulse |
| LOWPSTEP | Low pass step |

- **Caution** This command is only available when Option 70 has been installed.

- | | | |
|----|---------------------------------------|--|
| 6. | CALCulate[<chno>]:TRANSform:TIME:STOP | IEEE488.1-1987 command mode
STOPT<real> |
|----|---------------------------------------|--|
- **Function** Sets a stop time
 - **Presence of command and query** Command/Query
 - **Command** CALCulate[<chno>]:TRANSform:TIME:STOP <real>
STOPT<real>
 - **Parameter** <real>
 - **Response type** NR3 (Real value)
 - **Description** Used to set a stop time in the time domain display.
 - **Caution** This command is only available when Option 70 has been installed.

7.20.1 Commands Used for All Models

7. CALCulate[<chno>]:TRANSform:TIME:TYPE{BPASs | LPASs}
 IEEE488.1-1987 command mode
 BANDPASS | LOWPIMPU | LOWPSTEP

- **Function** Selects a transformation mode for the time domain
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - **Command** CALCulate[<chno>]:TRANSform:TIME:TYPE <type>
 - **Parameter** <type> = {BRASs | LPASs}
 - **Response type** BRAS | LPAS
- **IEEE488.1-1987 command mode**
 - **Command** BANDPASS | LOWPIMPU | LOWPSTEP
Refer to "7.19 27 LPAR" and "7.19 28 LSEG" too.
 - **Response type** 0 | 1
- **Description** Used to set a transformation mode to be used for the frequency domain and the time domain.
 In the IEEE488.2-1987 command mode, set the transformation mode using the command shown below:
 CALCulate[<chno>]:TRANSform:TIME:STIMulus
 {IMPulse | STEP}
 IEEE488.2-1987 command mode

| CALC:TRAN:TIME:TYPE | CALC:TRAN:TIME:STIM | Transformation mode |
|---------------------|---------------------|---------------------|
| BPASs | (Not affected) | Bandpass |
| LPASs | IMPulse | Low pass impulse |
| LPASs | STEP | Low pass step |

IEEE488.1-1987 command mode

| Command | Transformation mode |
|----------|---------------------|
| BANDPASS | Bandpass |
| LOWPIMPU | Low pass impulse |
| LOWPSTEP | Low pass step |

- **Caution** This command is only available when Option 70 has been installed.

8. `CALCulate[<chno>]:TRANSform:TIME:WINDow {MINimum | NORMal | MAXimum}`
 IEEE488.1-1987 command mode
 WINDMINI | WINDNORM | WINDMAXI

- **Function** Sets a window type
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command `CALCulate[<chno>]:TRANSform:TIME:WINDow <type>`
 - Parameter `<type> = {MINimum | NORMal | MAXimum}`
 - Response type `MIN | NORM | MAX`
- **IEEE488.1-1987 command mode**
 - Command `WINDMINI | WINDNORM | WINDMAXI`
 - Response type `0 | 1`
- **Description** Used to set a window type for the time domain display.

| Command parameter | Operation |
|-------------------|-----------|
| MINimum | Minimum |
| NORMal | Normal |
| MAXimum | Maximum |

- **Caution** This command is only available when Option 70 has been installed.

7.20.2 Commands Used for Only R3765/67G Series

7.20.2 Commands Used for Only R3765/67G Series

| | | |
|----|---|-----------------------------|
| 1. | CALCulate[<chno>]:TRANsform:TIME:SPAN <real>
SPANT<real> | IEEE488.1-1987 command mode |
|----|---|-----------------------------|

- Function Used to set a time span.
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:TRANsform:TIME:SPAN <real>
SPANT<real>
- Parameter <real>
- Response type NR3 (real value)
- Description A time span is set for the screen displaying the time axis.
- Caution This command is available only when option 70 is used.

2. CALCulate[<chno>]:TRANSform:TIME:DISPlay {TIME | DISTance | RTIME | RDISTance}
 IEEE488.1-1987 command mode
 TDISPT | TDISPD | TDISPRT | TDISPRD

- Function Used to set the annotation of the horizontal axis.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANSform:TIME:DISPlay <type>
 - Parameter <type> = {TIME | DISTance | RTIME | RDISTance}
 - Response type TIME | DIST | RTIM | RDIS
- IEEE488.1-1987 command mode
 - Command TDISPT | TDISPD | TDISPRT | TDISPRD
 - Response type 0 | 1
- Description When the time axis is displayed, the annotation of the horizontal axis is set to a time or distance display.

| Command parameter | Operation |
|-------------------|--|
| TIME | Sets the annotation to a time display (sec). |
| DISTance | Sets the annotation to a distance display (m). |
| RTIME | Sets the annotation to a time display (sec) and half value is displayed. |
| RDISTance | Sets the annotation to a distance display (m) and half value is displayed. |

- Caution This command is available only when option 70 is used.

7.21 GATE Subsystem

7.21 GATE Subsystem

| | | |
|----|--|---|
| 1. | CALCulate[<chno>]:FILTer:GATE:TIME:CENTer <real>
GATECENT<real> | IEEE488.1-1987 command mode
GATECENT<real> |
|----|--|---|

- **Function** Sets a center time for the gate
- **Presence of command and query** Command/Query
- **Command** CALCulate[<chno>]:FILTer:GATE:TIME:CENTer <real>
GATECENT<real>
- **Parameter** <real>
- **Response type** NR3 (Real value)
- **Description** Used to set a center time for the gate.
- **Caution** This command is only available when Option 70 has been installed.

| | | |
|----|--|---|
| 2. | CALCulate[<chno>]:FILTer:GATE:TIME:SPAN <real>
GATESPAN<real> | IEEE488.1-1987 command mode
GATESPAN<real> |
|----|--|---|

- **Function** Sets a time span for the gate
- **Presence of command and query** Command/Query
- **Command** CALCulate[<chno>]:FILTer:GATE:TIME:SPAN <real>
GATESPAN<real>
- **Parameter** <real>
- **Response type** NR3 (Real value)
- **Description** Used to set a time span for the gate.
- **Caution** This command is only available when Option 70 has been installed.

3. `CALCulate[<chno>]:FILTer:GATE:TIME:STATe <bool>` IEEE488.1-1987 command mode
`GATE <bool>`

- Function Turns the gate function ON or OFF
- Presence of command and query Command/Query
- Command `CALCulate[<chno>]:FILTer:GATE:TIME:STATe <bool>`
`GATE <bool>`
- Parameter `<bool>`
- Response type 011
- Description Used to turn the gate function ON or OFF.

NOTE: The CDMA filter analysis gate function (CALC:GATE:CDMA:STAT) is automatically OFF when the gate function is ON.

- Caution This command is only available when Option 70 has been installed.

4. `CALCulate[<chno>]:FILTer:GATE:TIME:STARt <real>` IEEE488.1-1987 command mode
`GATESTAR<real>`

- Function Sets a gate start time
- Presence of command and query Command/Query
- Command `CALCulate[<chno>]:FILTer:GATE:TIME:STARt <real>`
`GATESTAR<real>`
- Parameter `<real>`
- Response type NR3 (Real value)
- Description Used to set a gate start time.
- Caution This command is only available when Option 70 has been installed.

7.21 GATE Subsystem

5. CALCulate[<chno>]:FILTer:GATE:TIME:STOP <real> IEEE488.1-1987 command mode
GATESTOP<real>

- Function Sets a gate stop time
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:FILTer:GATE:TIME:STOP <real>
GATESTOP<real>
- Parameter <real>
- Response type NR3 (Real value)
- Description Used to set a gate stop time.
- Caution This command is only available when Option 70 has been installed.

6. CALCulate[<chno>]:FILTer:GATE:TIME:WINDow {MINimum | NORMal | WIDE | MAXimum} IEEE488.1-1987 command mode
GATSMINI | GATSNORM | GATSWIDE | GATSMAXI

- Function Selects a gate type
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
Command CALCulate[<chno>]:TRANsform:TIME:WINDow <type>
Parameter <type> = {MINimum | NORMal | WIDE | MAXimum}
Response type MIN | NORM | WIDE | MAX
- IEEE488.1-1987 command mode
Command GATSMINI | GATSNORM | GATSWIDE | GATSMAXI
Response type 0 | 1
- Description Used to select a gate type.

| R3762/63
Command parameter | R3764/66, R3765/67
Command | Operation |
|-------------------------------|-------------------------------|-----------|
| MINimum | GATSMINI | Minimum |
| NORMal | GATSNORM | Normal |
| WIDE | GATSWIDE | Wide |
| MAXimum | GATSMAXI | Maximum |

- Caution This command is only available when Option 70 has been installed.

7.22 CDMA Subsystem

1.

| | |
|--|-----------------------------|
| CALCulate[<chno>]:CDMA:FANalysis:ATTenuation1 <real>
CDMAATT1<real> | IEEE488.1-1987 command mode |
|--|-----------------------------|

 - Function Sets the offset frequency (ATTN FREQ1) used when calculating the guaranteed attenuation
 - Presence of command and query Command/Query
 - Command CALCulate[<chno>]:CDMA:FANalysis:ATTenuation1 <real>
CDMAATTN1<real>
 - Parameter <real>
 - Response type NR3 (Real number)
 - Description Used to set the offset frequency (ATTN FREQ1) when calculating the guaranteed attenuation.
When <real> set to 0 (zero), no data is analyzed at this offset frequency (ATTN FREQ1).

2.

| | |
|--|-----------------------------|
| CALCulate[<chno>]:CDMA:FANalysis:ATTenuation2 <real>
CDMAATT2<real> | IEEE488.1-1987 command mode |
|--|-----------------------------|

 - Function Sets the offset frequency (ATTN FREQ2) used when calculating the guaranteed attenuation
 - Presence of command and query Command/Query
 - Command CALCulate[<chno>]:CDMA:FANalysis:ATTenuation2 <real>
CDMAATTN2<real>
 - Parameter <real>
 - Response type NR3 (Real number)
 - Description Used to set the offset frequency (ATTN FREQ2) when calculating the guaranteed attenuation.
When <real> set to 0 (zero), no data is analyzed at this offset frequency (ATTN FREQ2).

7.22 CDMA Subsystem

| | | |
|----|---|-----------------------------|
| 3. | CALCulate[<chno>]:CDMA:FANalysis:STATe <bool>
CDMAFANA<bool> | IEEE488.1-1987 command mode |
|----|---|-----------------------------|

- Function Turns the CDMA filter analysis function ON or OFF
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:CDMA:FANalysis:STATe <bool>
CDMAFANA<bool>
- Parameter <bool>
- Response type 0 1 1
- Description Used to turn the CDMA filter analysis function ON or OFF.
The following items are measured during the CDMA filter analysis:

- Central frequency of the passband specified by the analysis depth (loss) from the peak value.
- Passband width
- Insertion loss (the peak value)
- Difference between the lowest local minimum and the peak value within the passband
- Guaranteed attenuation at the points given by ATTN FREQ1 (whose center point is the center frequency)
- Guaranteed attenuation at the points given by ATTN FREQ2 (whose center point is the center frequency)

The analysis result is obtained using "FETCh[<chno>]:CDMA:FANalysis?".

4. `CALCulate[<chno>]:CDMA:FANalysis:WIDTh <real>` IEEE488.1-1987 command mode
`CDMATXDB<real>`
- Function Sets the analysis depth of the CDMA filter analysis
 - Presence of command and query Command/Query
 - Command `CALCulate[<chno>]:CDMA:FANalysis:WIDTh <real>`
`CDMATXDB<real>`
 - Parameter `<real>`
 - Response type NR3 (Real value)
 - Description Used to set the analysis depth (loss) for the CDMA filter analysis.

5. `CALCulate[<chno>]:CDMA:GATE:STATe <bool>` IEEE488.1-1987 command mode
`CDMA<bool>`
- Function Turns the gate function for the CDMA filter analysis ON or OFF
 - Presence of command and query Command/Query
 - Command `CALCulate[<chno>]:CDMA:GATE:STATe <bool>`
`CDMA<bool>`
 - Parameter `<bool>`
 - Response type 0 | 1
 - Description Used to turn the gate function for the CDMA filter analysis ON or OFF.

NOTE: When this function is set to ON, the gate function normally used (`CALC: FILT:GATE:TIME:STAT`) is automatically set to OFF.

7.22 CDMA Subsystem

6. CALCulate[<chno>]:CDMA:GATE:STARTt <real> IEEE488.1-1987 command mode
CDMASTAR<real>

- Function Sets a gate start time for the CDMA filter analysis
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:CDMA:GATE:STARTt <real>
CDMASTAR<real>
- Parameter <real>
- Response type NR3 (Real value)
- Description Used to set a gate start time for the CDMA filter analysis.

7. CALCulate[<chno>]:CDMA:GATE:STOP <real> IEEE488.1-1987 command mode
CDMASTOP<real>

- Function Sets a gate stop time for the CDMA filter analysis
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:CDMA:GATE:STOP <real>
CDMASTOP<real>
- Parameter <real>
- Response type NR3 (Real value)
- Description Used to set a gate stop time for the CDMA filter analysis.

8. CALCulate[<chno>]:CDMA:GATE:WINDow {MINimum | NORMal | WIDE | MAXimum | CDMA}
 IEEE488.1-1987 command mode
 CDMSMINI | CDMSNORM | CDMSWIDE | CDMSMAXI | CDMSCDMA

- **Function** Sets a gate type for the CDMA filter analysis
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command CALCulate[<chno>]:CDMA:GATE:WINDow <type>
 - Parameter <type> = {MINimum | NORMal | WIDE | MAXimum | CDMA}
 - Response type MIN | NORM | WID | MAX | CDMA
- **IEEE488.1-1987 command mode**
 - Command CDMSMINI | CDMSNORM | CDMSWIDE | CDMSMAXI | CDMSCDMA
 - Response type 0 | 1
- **Description** Used to set a gate type for the CDMA filter analysis.

| R3762/63 command | R3764/66,R3765/67 command parameter | Operation |
|------------------|-------------------------------------|----------------------------------|
| CDMSMINI | MINimum | Minimum |
| CDMSNORM | NORMal | Normal |
| CDMSWIDE | WIDE | Wide |
| CDMSMAXI | MAXimum | Maximum |
| CDMSCDMA | CDMA | Optimum value of the CDMA filter |

7.22 CDMA Subsystem

| | | |
|----|---|---|
| 9. | CALCulate[<chno>]:CDMA:PLINearity:STATe <bool>
MKRSTAT<bool> | IEEE488.1-1987 command mode
CDMAPLIN<bool> |
|----|---|---|

- Function Turns the CDMA phase linearity analysis function ON or OFF
- Presence of command and query Command/Query
- Command CALCulate[<chno>]:CDMA:PLINearity:STATe <bool>
MKRSTAT<bool>
- Parameter <bool>
- Response type 0 | 1
- Description Used to turn the CDMA phase linearity analysis function ON or OFF.
The analysis result is obtained using the "FETCh[<chno>]:PLINearity?"
This function cannot be set at the same time as the Phase linearity function.

7.23 SFIXture Subsystem

1. CALCulate[<chno>]:TRANsform:SFIXture:BALance:MMODE
 IEEE488.1-1987 command mode
 SFBM{OFF | SDD | SDC | SCD | SCC}

- **Function** Sets the mode analysis function.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** CALCulate[<chno>]:TRANsform:SFIXture:BALance:MMODE <type>
 - Parameter** <type> = {OFF | SDD | SDC | SCD | SCC}
 - Response type** OFF | SDD | SDC | SCD | SCC
- **IEEE488.1-1987 command mode**
 - Command** SFBM{OFF | SDD | SDC | SCD | SCC}
 - Response type** 0 | 1
- **Description** Sets the mode analysis function.

| IEEE488.1-1987 command mode | IEEE488.2-1987 command mode parameter | Operation |
|-----------------------------|---------------------------------------|---|
| SFBMOFF | OFF | The mode analysis is turned off. |
| SFBMSDD | SDD | Differential mode input, Differential mode output |
| SFBMSDC | SDC | Common mode input, Differential mode output |
| SFBMSCD | SCD | Differential mode input, Common mode output |
| SFBMSCC | SCC | Common mode input, Common mode output |

The mode analysis port is set using the same command used to set the measurement mode (S11/S21/S12/S22). Refer to [SENSe]FUNCTION[<chno>]:POWer{S11 | S21 | S12 | S22}.

- **Caution** Turn the software fixture function on. If it is turned off, the mode analysis function is disabled. This command is available only if the Option 71 is installed.

7.23 SFIXture Subsystem

2. CALCulate[<chno>]:TRANsform:SFIXture:BALance[<bport>]:CAPacitance
 IEEE488.1-1987 command mode
 SFB{1|2}C

- **Function** Sets the capacitance value of the balanced matching circuit.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**

| | |
|---------------|--|
| Command | CALCulate[<chno>]:TRANsform:SFIXture:BALance[<bport>]:
CAPacitance <real> |
| Parameter | SFB{1 2}C<real> |
| Response type | <real> |
| | NR3 (real value) |
- **Description** Sets the capacitance value of the cross-port matching circuit. If a value of "0" is entered, it is ignored(it is assumed that no capacitance is connected).
- **Caution** This command is available only if the Option 71 is installed.

3. CALCulate[<chno>]:TRANsform:SFIXture:BALance[<bport>]:GCAPacitance
 IEEE488.1-1987 command mode
 SFB{1|2}G

- **Function** Sets the value of a conductance in parallel with the capacitance of the balanced matching circuit.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**

| | |
|---------------|---|
| Command | CALCulate[<chno>]:TRANsform:SFIXture:BALance[<bport>]:
GCAPacitance <real> |
| Parameter | SFB{1 2}G<real> |
| Response type | <real> |
| | NR3 (real value) |
- **Description** Sets the value of a conductance in parallel with the capacitance of the balanced matching circuit.
- **Caution** This command is available only if the Option 71 is installed.

4. CALCulate[<chno>]:TRANSform:SFIxture:BALance[<bport>]:INDuctance
 IEEE488.1-1987 command mode
 SFB{1|2}L

- Function Sets the inductance value of the balanced matching circuit.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANSform:SFIxture:BALance[<bport>]:
INDuctance <real>
 - Parameter SFB{1|2}L<real>
 - Response type <real>
 - NR3 (real value)
- Description Sets the inductance value of the balanced matching circuit. If a value of "0" is entered, it is ignored, (it is assumed that no inductance is connected).
- Caution This command is available only if the Option 71 is installed.

5. CALCulate[<chno>]:TRANSform:SFIxture:BALance[<bport>]:MATChing
 IEEE488.1-1987 command mode
 SFB{1|2}MC

- Function Turns the balanced matching circuit function on or off.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANSform:SFIxture:BALance[<bport>]:
MATChing <bool>
 - Parameter SFB{1|2}MC<bool>
 - Response type <bool>
 - 0|1
- Description Turns the balanced matching circuit function on or off.
- Caution Turn the software fixture function on. If it is turned off, the balanced matching function is disabled.
 This command is available only if the Option 71 is installed.

7.23 SFIxture Subsystem

6. CALCulate[<chno>]:TRANsform:SFIxture:BALance[<bport>]:RINDuctance
IEEE488.1-1987 command mode
SFB{1|2}R

- **Function** Sets the value of a resistance in series with the inductance of the balanced matching circuit.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** CALCulate[<chno>]:TRANsform:SFIxture:BALance[<bport>]:RINDuctance <real>
 - Parameter** SFB{1|2}R<real>
 - Response type** <real>
 - Response type** NR3 (real value)
- **Description** Sets the value of a resistance in parallel with the inductance of the balanced matching circuit.
- **Caution** This command is available only if the Option 71 is installed.

7. CALCulate[<chno>]:TRANsform:SFIxture:FBALun:STATe IEEE488.1-1987 command mode
SFFBAL

- **Function** Turning the floating BALUN function on or off.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** CALCulate[<chno>]:TRANsform:SFIxture:FBALun:STATe <bool>
 - Parameter** SFFBAL<bool>
 - Response type** <bool>
 - Response type** 0|1
- **Description** Turning the floating BALUN function on or off.
The balanced port is set using the same command used to set the measurement mode (S11|S21|S12|S22).
Refer to [SENSe]FUNctIon[<chno>]:POWer{S11|S21|S12|S22}.
- **Caution** Turn the software fixture function on. If it is turned off, the floating BALUN function is disabled.
This command is only available when Option 71 has been installed.

8. CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE
 IEEE488.1-1987 command mode
 SFBP{B23 | B32 | B34 | B43 | B12 | B21}

- **Function** Sets the Balance Parameter measurement port.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE <type>
 - Parameter** <type> = {B23 | B32 | B34 | B43 | B12 | B21}
 - Response type** {B23 | B32 | B34 | B43 | B12 | B21}
- **IEEE488.1-1987 command mode**
 - Command** SFBP{B23 | B32 | B34 | B43 | B12 | B21}
 - Response type** 0 | 1
- **Description** Used to set the Balance Parameter measurement port.

| IEEE488.1-1987 command mode | IEEE488.2-1987 command mode parameter | Operation |
|-----------------------------|---------------------------------------|---|
| SFBPB23 | B23 | Calculates the Balance Parameter between P2 and P3. |
| SFBPB32 | B32 | Calculates the Balance Parameter between P3 and P2. |
| SFBPB34 | B34 | Calculates the Balance Parameter between P3 and P4. |
| SFBPB43 | B43 | Calculates the Balance Parameter between P4 and P3. |
| SFBPB12 | B12 | Calculates the Balance Parameter between P1 and P2. |
| SFBPB21 | B21 | Calculates the Balance Parameter between P2 and P1. |

- **Caution** Turn the software fixture function on. If it is turned off, the Balance Parameter function is disabled. This command is only available when Option 71 has been installed.

7.23 SFIxture Subsystem

9. CALCulate[<chno>]:TRANsform:SFIxture:BPARAmeter:STATe IEEE488.1-1987 command mode
SFBPSTA

- Function Toggles the Balance Parameter function on or off.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANsform:SFIxture:BPARAmeter:STATe
<bool>
 - Parameter SFBPSTA<bool>
 - Response type <bool>
 - 0 1 1
- Description Used to toggle the Balance Parameter function on or off.
- Caution Turn the software fixture function on. If it is turned off, the Balance Parameter function is disabled. This command is only available when Option 71 has been installed.

10. CALCulate[<chno>]:TRANsform:SFIxture:DBALun:STATe IEEE488.1-1987 command mode
SFDBAL

- Function Turns the differential BALUN function on or off.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANsform:SFIxture:DBALun:STATe
<bool>
 - Parameter SFDBAL<bool>
 - Response type <bool>
 - 0 1 1
- Description Turns the differential BALUN function on or off. The balanced port is set using the same command used to set the measurement mode (S11/S21/S12/S22). Refer to [SENSe]FUNctIon[<chno>]:POWer{S11 | S21 | S12 | S22}.
- Caution Turn the software fixture function on. If it is turned off, the differential BALUN function is disabled. This command is only available when Option 71 has been installed.

11. CALCulate[<chno>]:TRANSform:SFIxTure:DEVIce:STATe IEEE488.1-1987 command mode
SFIMP
- Function Toggles the impedance conversion function on or off.
 - Presence of command and query Command/Query
 - IEEE488.2-1987 command mode

| | |
|---------------|--|
| Command | CALCulate[<chno>]:TRANSform:SFIxTure:DEVIce<port>:
STATe <bool> |
| Parameter | SFIMP<bool>
<bool> |
| Response type | 0 1 |
 - Description Used to toggle the impedance conversion function on or off.
 - Caution Turn the software fixture function on. If it is turned off, the impedance conversion function is disabled. This command is only available when Option 71 or Option 72 has been installed.

12. CALCulate[<chno>]:TRANSform:SFIxTure:DEVIce[<port>]:SMATching IEEE488.1-1987 command mode
SFP{1 | 2 | 3 | 4}MS
- Function Turns the network removal function on or off.
 - Presence of command and query Command/Query
 - IEEE488.2-1987 command mode

| | |
|---------------|--|
| Command | CALCulate[<chno>]:TRANSform:SFIxTure:DEVIce[<port>]:
SMATching <bool> |
| Parameter | SFP{1 2 3 4}MS<bool>
<bool> |
| Response type | 0 1 |
 - Description Turns the network removal function on or off.
 - Caution Turn the software fixture function on. If it is turned off, the network removal function is disabled. This command is only available when Option 71 or Option 72 has been installed.

7.23 SFIxture Subsystem

13. CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:CAPacitance
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}C

- Function Sets the capacitance value in the matching circuit.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:
 CAPacitance <real>
 SFP{1|2|3|4}C<real>
 Parameter <real>
 Response type NR3 (real value)
- Description Used to set the capacitance value in the matching circuit. If "0" is entered, the capacitance is considered zero, and ignored as if nothing is connected to the circuit.*1
 *1: "parallel-C" is considered zero, and "series-C" is considered infinite.
- Caution This command is only available when Option 71 or Option 72 has been installed.

14. CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:GCAPacitance
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}G

- Function Sets the conductance value in parallel with the matching circuit.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:
 GCAPacitance <real>
 SFP{1|2|3|4}G<real>
 Parameter <real>
 Response type NR3 (real value)
- Description Used to set the conductance value in parallel with the matching circuit.
- Caution This command is only available when Option 71 or Option 72 has been installed.

15. CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:IMPedance
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}Z

- Function Sets the impedance value for the impedance conversion function.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:
 IMPedance <real>
 SFP{1|2|3|4}Z<real>
 Parameter <real>
 Response type NR3 (real value)
- Description Used to set the impedance value in the impedance conversion function.
- Caution This command is only available when Option 71 or Option 72 has been installed.

16. CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:INDuctance
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}L

- Function Sets the inductance value in the matching circuit.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:
 INDuctance <real>
 SFP{1|2|3|4}L<real>
 Parameter <real>
 Response type NR3 (real value)
- Description Used to set the inductance value in the matching circuit. If "0" is entered, the capacitance is considered zero, and ignored as if nothing is connected to the circuit.*2
 *2: "parallel-L" is considered infinite, and "series-L" is considered zero.
- Caution This command is only available when Option 71 or Option 72 has been installed.

7.23 SFIxture Subsystem

17. CALCulate[<ch>]:TRANSform:SFIxture:DEVIce<port>:MATChing
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}MC

- Function Toggles the matching circuit function on or off.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<ch>]:TRANSform:SFIxture:DEVIce<port>:
 MATCHing <bool>
 - SFP{1|2|3|4}MC<bool>
 - Parameter <bool>
 - Response type 0|1
- Description Used to toggle the matching circuit function on or off.
- Caution Turn the software fixture function on. The matching circuit does not function when the software fixture function is turned off.
 This command is only available when Option 71 or Option 72 has been installed.

18. CALcUlate[<ch>]:TRANsform:SFIxture:DEvIce<port>:MODEl
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}{CPLS|LPCS|CSLP|LSCP|LPCP|S2PFile}

- Function Sets the matching circuit model.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALcUlate[<ch>]:TRANsform:SFIxture:DEvIce<port>:MODEl
 <type>
 - Parameter <type> = {CPLS|LPCS|CSLP|LSCP|LPCP|S2PFile}
 - Response type CPLS|LPCS|CSLP|LSCP|LPCP|S2PFile
- IEEE488.1-1987 command mode
 - Command SFP{1|2|3|4}{CPLS|LPCS|CSLP|LSCP|LPCP|S2PFile}
 - Response type 0|1
- Description Used to set the matching circuit model.

| IEEE488.1-1987 command mode | IEEE488.2-1987 command mode parameter | Operation |
|-----------------------------|---------------------------------------|--|
| SFP{1 2 3 4}CPLS | CPLS | Sets the matching circuit model to parallel C with series L. |
| SFP{1 2 3 4}LPCS | LPCS | Sets the matching circuit model to parallel L with series C. |
| SFP{1 2 3 4}CSLP | CSLP | Sets the matching circuit model to series C with parallel L. |
| SFP{1 2 3 4}LSCP | LSCP | Sets the matching circuit model to series L with parallel C. |
| SFP{1 2 3 4}LPCP | LPCP | Sets the matching circuit model to parallel L with parallel P. |
| SFP{1 2 3 4}S2PFile | S2PFile | Sets the matching as specified by the user-defined file. |

- Caution This command is only available when Option 71 or Option 72 has been installed.

7.23 SFIxture Subsystem

19. CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:RINDuctance
 IEEE488.1-1987 command mode
 SFP{1|2|3|4}R

- Function Sets a resistance in series with the matching circuit inductance.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 Command CALCulate[<chno>]:TRANsform:SFIxture:DEVIce<port>:
 RINDuctance <real>
 SFP{1|2|3|4}R<real>
 Parameter <real>
 Response type NR3 (real value)
- Description Used to set a resistance in series with the matching circuit inductance.
- Caution This command is only available when Option 71 or Option 72 has been installed.

20. CALCulate[<chno>]:TRANSform:SFIXture:FILE:LOAD IEEE488.1-1987 command mode
 SFLD{S1P1 | S1P2 | S1P3 | S1P4 |
 S2P1 | S2P2 | S2P3 | S2P4 | SUB1 |
 SUB2 | SUB3 | SUB4}

- **Function** Reads a user-defined file.
- **Presence of command and query** Command
- **IEEE488.2-1987 command mode**
 Command CALCulate[<chno>]:TRANSform:SFIXture:FILE:LOAD <type>
 Parameter <type> = {S1P1 | S1P2 | S1P3 | S1P4 | S2P1 | S2P2 | S2P3 | S2P4 |
 SUB1 | SUB2 | SUB3 | SUB4}
- **IEEE488.1-1987 command mode**
 Command SFLD{S1P1 | S1P2 | S1P3 | S1P4 | S2P1 | S2P2 | S2P3 | S2P4 |
 SUB1 | SUB2 | SUB3 | SUB4}
- **Description** Reads a user-defined file to set the matching circuit.

| IEEE488.1-1987 command mode | IEEE488.2-1987 command mode parameter | File name |
|-----------------------------|---------------------------------------|------------|
| SFLDS1P1 | S1P1 | sfadd1.s1p |
| SFLDS1P2 | S1P2 | sfadd2.s1p |
| SFLDS1P3 | S1P3 | sfadd3.s1p |
| SFLDS1P4 | S1P4 | sfadd4.s1p |
| SFLDS2P1 | S2P1 | sfadd1.s2p |
| SFLDS2P2 | S2P2 | sfadd2.s2p |
| SFLDS2P3 | S2P3 | sfadd3.s2p |
| SFLDS2P4 | S2P4 | sfadd4.s2p |
| SFLDSUB1 | SUB1 | sfdel1.s2p |
| SFLDSUB2 | SUB2 | sfdel2.s2p |
| SFLDSUB3 | SUB3 | sfdel3.s2p |
| SFLDSUB4 | SUB4 | sfdel4.s2p |

- **Caution** This command is only available when Option 71 or Option 72 has been installed.

7.23 SFIxTure Subsystem

21. CALCulate[<chno>]:TRANSform:SFIxTure:FILE:SAVE:CSV
 IEEE488.1-1987 command mode
 SFSVCSV

- Function Saves measurement data (in CSV file format).
- Presence of command and query Command
- Command CALCulate[<chno>]:TRANSform:SFIxTure:FILE:SAVE:CSV
SFSVCSV
- Description All measurement data is saved on floppy disks in CSV file format. Data is saved in the format selected from CALCulate:
TRANSform:SFIxTure:SAVE:FORMat.

| Calibration | Format | File name |
|-------------|--------|------------------------------------|
| 1 PORT CAL | RI | s1ri<four-digit serial number>.csv |
| | DB | s1db<four-digit serial number>.csv |
| 2 PORT CAL | RI | s2ri<four-digit serial number>.csv |
| | DB | s2db<four-digit serial number>.csv |
| 3 PORT CAL | RI | s3ri<four-digit serial number>.csv |
| | DB | s3db<four-digit serial number>.csv |
| 4 PORT CAL | RI | s4ri<four-digit serial number>.csv |
| | DB | s4db<four-digit serial number>.csv |

- Caution This command is only available when Option 71 or Option 72 has been installed.

22. CALCulate[<chno>]:TRANSform:SFIxture:FILE:SAVE:DISPlay IEEE488.1-1987 command mode
SFSVDISP

- Function Saves display data (in CSV file format).
- Presence of command and query Command
- Command CALCulate[<chno>]:TRANSform:SFIxture:FILE:SAVE:DISPlay
SFSVDISP
- Description Measurement data displayed in an active channel is saved on floppy disks in CSV file format.

| File name |
|------------------------------------|
| disp<four-digit serial number>.csv |

- Caution This command is only available when Option 71 or Option 72 has been installed.

23. CALCulate[<chno>]:TRANSform:SFIxture:FILE:SAVE:TS IEEE488.1-1987 command mode
SFSVTS

- Function Saves measurement data (in TS file format)
- Presence of command and query Command
- Command CALCulate[<chno>]:TRANSform:SFIxture:FILE:SAVE:TS
SFSVTS
- Description All measurement data is saved on floppy disks in TS file format. Data is saved in the format selected from CALCulate:TRANSform:SFIxture:SAVE:FORMat.

| Calibration | File name |
|-------------|----------------------------------|
| 1 PORT CAL | ts<four-digit serial number>.s1p |
| 2 PORT CAL | ts<four-digit serial number>.s2p |
| 3 PORT CAL | ts<four-digit serial number>.s3p |
| 4 PORT CAL | ts<four-digit serial number>.s4p |

- Caution This command is only available when Option 71 or Option 72 has been installed.

7.23 SFIXture Subsystem

24. CALCulate[<chno>]:TRANSform:SFIXture:PEXTension:STATe
- IEEE488.1-1987 command mod
SFPEXT
- Function Toggles the port extension function on or off.
 - Presence of command and query Command/Query
 - IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANSform:SFIXture:PEXTension:STATe
<bool>
 - Parameter SFPEXT<bool>
<bool>
 - Response type 0 | 1
 - Description Used to toggle the port extension function on or off.
 - Caution The port extension of the software fixture links up with the port extension of the CAL function. The port extension of the CAL function still functions even if the software fixture function is turned off.
 Refer to [SENSe]CORRection[<chno>]:PEXTension:STATe.

25. CALCulate[<chno>]:TRANsform:SFIxTure:PEXTension<port>:TIME
 IEEE488.1-1987 command mod
 SFP{1|2|3|4}PE

- Function Sets the port extension value.
- Presence of command and query Command/Query
- IEEE488.2-1987 command mode
 - Command CALCulate[<chno>]:TRANsform:SFIxTure:PEXTension<port>:
TIME <real>
 - Parameter SFP{1|2|3|4}PE<real>
<real>
 - Response type NR3 (real value)
- Description Used to set the port extension value.
- Caution The port extension value of the software fixture links up with the port extension value of the CAL function. The port extension of the CAL function still functions even if the software fixture function is turned off.
 Refer to
 [SENSe]CORRection[<chno>]:PEXTension:TIME[<eport>].

7.23 SFIxture Subsystem

26. CALCulate[<chno>]:TRANSform:SFIxture:SAVE:FILE:FORMat
 IEEE488.1-1987 command mode
 SFSV {DB | RI}

- **Function** Sets a format in which file data is saved.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** CALCulate[<chno>]:TRANSform:SFIxture:SAVE:FILE:FORMat <type>
 - Parameter** <type> = {DB | RI}
 - Response type** DB | RI
- **IEEE488.1-1987 command mode**
 - Command** SFSV {DB | RI}
 - Response type** 0 | 1
- **Description** Sets a format in which TS or CSV files are saved.

| IEEE488.1-1987 command mode | IEEE488.2-1987 command mode parameter | Format |
|-----------------------------|---------------------------------------|---|
| SFSVDB | DB | Magnitude (LogMag) and phase (Phase) |
| SFSVRI | RI | Real part (Real) and Imaginary part (Img) |

- **Caution** This command is only available when Option 71 or Option 72 has been installed.

| | | |
|-----|--|--|
| 27. | CALCulate[<chno>]:TRANsform:SFIxTure:STATe | IEEE488.1-1987 command mode
SFSTATE |
|-----|--|--|

- **Function** Toggles the software fixture function on or off.
- **Presence of command and query** Command/Query
- **IEEE488.2-1987 command mode**
 - Command** CALCulate[<chno>]:TRANsform:SFIxTure:STATe <bool>
SFSTATE<bool>
 - Parameter** <bool>
 - Response type** 0|1
- **Description** Used to toggle the software fixture function on or off.
- **Caution** The software fixture function is enabled only while a full calibration is being carried out.
This command is only available when Option 71 or Option 72 has been installed.

7.24 OUTPUT ATT Subsystem

7.24 OUTPUT ATT Subsystem

| | |
|----|---|
| 1. | OUTPut:ATTenuation:AUTO
IEEE488.1-1987 command mode
ATTAUTO<bool> |
|----|---|

- **Function** Sets whether the output attenuator is set up automatically or manually.
- **Presence of command and query** Command/Query
- **Command** OUTPut:ATTenuation:AUTO <bool>
- **Query** ATTAUTO<bool>
- **Parameter** <bool>
- **Response type** 0 | 1
- **Description** Sets whether the output attenuator is set up automatically or manually.

| Value | Attenuator |
|-------|-------------------|
| ON | Automatic setting |
| OFF | Manual setting |

- **Caution** This command is only available when Option 10 has been installed.

2. OUTPut[<port>]:ATTenuation IEEE488.1-1987 command mode
ATTP{1|2|3|4}

- **Function** Sets the output attenuation value.
- **Presence of command and query** Command/Query
- **Command** OUTPut[<port>]:ATTenuation <real>
- **Parameter** ATTP{1|2|3|4}<real>
- **Response type** <real>
- **Description** NR3 (real value)
- **Description** Sets the attenuation value if the output attenuator is set to Manual.

| Value | Attenuation value |
|-------|-------------------|
| 0 | 0dB |
| 20 | 20dB |
| 40 | 40dB |
| 60 | 60dB |

- **Caution** This command is only available when Option 10 has been installed.



APPENDIX

A.1 List of Command

A.1.1 Common Commands

*CLS

*DDT <blk>

*DMC <str>,<blk>

*EMC <num>

*ESE <num>

*ESR?

*GMC? <name>

*IDN?

*LMC?

*OPC

*PCB <primary>[,<secondary>]

*PMC

*RCL{<num> | POFF}

*RST

*SAV <num>

*SRE <num>

*STB?

*TRG

*TST?

*WAI

A.1.2 R3764/66, R3765/67 Commands

ABORt

CALCulate[<chno>]:FORMat{MLOGarithmic | PHASe | GDELay | POLar | MLINear | SWR | REAL
 | IMAGinary | UPHase | SCHart | ISCHart | MLIPhase | MLOPhase | MLODeley}

CALCulate[<chno>]:GDAPerture:APERture <real>

CALCulate[<chno>]:MATH[:EXPRession]:NAME{NONE | DDM | DMM | DAM | DSM}

CALCulate[<chno>]:SMOothing:APERture <real>

CALCulate[<chno>]:SMOothing:STATe <bool>

CALCulate[<chno>]:TRANSform:IMPedance:CIMPedance <real>

CALCulate[<chno>]:TRANSform:IMPedance:TYPE{NONE | ZREFlection | YREFlecion | ZTRansmit |
 | YTRansmit | INVersion}

DISPlay:ACTive <int>

DISPlay:DUAL <bool>

DISPlay:FORMat{ULOWer | FBACk}

DISPlay[:WINDow[<chno>]]:LIMit[pn]:BEEP <bool>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:CLEar

DISPlay[:WINDow[<chno>]]:LIMit[pn]:DATA <block>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:LINE <bool>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:OFFSet:AMPLitude <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:OFFSet:AMPLitude <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:OFFSet:STIMulus <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:OFFSet:STIMulus <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:PARAmeter[:STATe] <bool>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:PARAmeter:PLIMit{LINear | LOGarithmic}

DISPlay[:WINDow[<chno>]]:LIMit[pn]:PARAmeter:SLIMit{LINear | LOGarithmic}

DISPlay[:WINDow[<chno>]]:LIMit[pn]:ParallelIO <bool>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:REPort?

DISPlay[:WINDow[<chno>]]:LIMit[pn]:RESult?

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n> <block>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:COLor <int>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:DEL

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:LOWer <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:LOWer:REPort?

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:REPort?

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:STIMulus <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:TYPE{SLINE | FLINe | SPOint}

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:UPPer <real>

DISPlay[:WINDow[<chno>]]:LIMit[pn]:SEGMENT<n>:UPPer:REPort?

DISPlay[:WINDow[<chno>]]:LIMit[pn][:STATe] <bool>

DISPlay[:WINDow[<chno>]]:TEXT[:DATA]{<str> | <block>}

DISPlay[:WINDow[<chno>]]:TRACe:ASSign{DATA | MEMory | DMEMemory}
 DISPlay[:WINDow[<chno>]]:TRACe:GRATicue[:STATe] <bool>
 DISPlay[:WINDow[<chno>]]:Y[trace]:RLINe <bool>
 DISPlay[:WINDow[<chno>]]:Y[trace][:SCALE]:AUTO ONCE
 DISPlay[:WINDow[<chno>]]:Y[trace][:SCALE]:PDIVision <real>
 DISPlay[:WINDow[<chno>]]:Y[trace][:SCALE]:RLEVel <real>
 DISPlay[:WINDow[<chno>]]:Y[trace][:SCALE]:RPOStion <real>

FETCh[<chno>][:MARKer]:FANalysis?
 FETCh[<chno>][:MARKer]:NUMBer<n>?
 FETCh[<chno>][:MARKer]:ACTivate?
 FILE:DELeTe <str>
 FILE:LOAD <str>
 FILE:STATe:CONDition <bool>
 FILE:STATe:CORRection <bool>
 FILE:STATe:DATA <bool>
 FILE:STATe:MEMory <bool>
 FILE:STATe:RAW <bool>
 FILE:STORE <str>
 FORMat:BORDer{NORMal | SWAPped}
 FORMat[:DATA]{ASCii | REAL,32 | REAL,64 | MBINary,32 | MBINary,64}

INITiate:CONTInuous <bool>
 INITiate[:IMMediate]

MARKer[<chno>]:ACTivate:STATe <bool>
 MARKer[<chno>]:ACTivate:STIMulus <real>
 MARKer[<chno>]:ACTivate[:NUMBer] <n>[,<real>]
 MARKer[<chno>]:AOFF
 MARKer[<chno>]:COMPensate <bool>
 MARKer[<chno>]:CONVert[:MODE]{DEFault | LINear | RIMaginary}
 MARKer[<chno>]:COUPle <bool>
 MARKer[<chno>]:DELTA:COMPare <n>[,<real>]
 MARKer[<chno>]:DELTA[:MODE]{OFF | CHIIid | COMPare | FIXed}
 MARKer[<chno>]:FANalysis:DIRection{IN | OUT}
 MARKer[<chno>]:FANalysis:WIDTh <real>
 MARKer[<chno>]:FANalysis[:STATe] <bool>
 MARKer[<chno>]:FIXed:AVALue <real>
 MARKer[<chno>]:FIXed:STIMulus <real>
 MARKer[<chno>]:FIXed:VALue <real>
 MARKer[<chno>]:LET{STARt | STOP | CENTer | SPAN | RLEVel | FIXed}

A.1.2 R3764/66, R3765/67 Commands

```

MARKer[<chno>]:LIST <bool>
MARKer[<chno>]:POLar{MLINear | MLOGarithmic | RIMaginary}
MARKer[<chno>]:SEARch:PARTial:SRANge
MARKer[<chno>]:SEARch:PARTial[:STATe] <bool>
MARKer[<chno>]:SEARch:RIPple:DX <real>
MARKer[<chno>]:SEARch:RIPple:DY <real>
MARKer[<chno>]:SEARch:RIPple[:MODE]{MAX | MIN | BOTH | PPEak}
MARKer[<chno>]:SEARch:TARGet:LEFT
MARKer[<chno>]:SEARch:TARGet:RIGHT
MARKer[<chno>]:SEARch:TARGet:VALue <real>
MARKer[<chno>]:SEARch:TARGet[:MODE]{ZERO | PI | VALue}
MARKer[<chno>]:SEARch:TRACKing <bool>
MARKer[<chno>]:SEARch[:MODE]{OFF | MAX | MIN | TARGet | RIPple}
MARKer[<chno>]:SMITH{MLINear | MLOGarithmic | RIMaginary | IMPedance | ADMittance}

REGister:CLEar <int>
REGister:RECall{<int> | POFF}
REGister:SAVE <int>

[SENSe:]AVERAge[<chno>]:COUNt <int>
[SENSe:]AVERAge[<chno>]:REStArt
[SENSe:]AVERAge[<chno>][:STATe] <bool>
[SENSe:]BANDwidth[<chno>][:RESolution] <int>
[SENSe:]BANDwidth[<chno>][:RESolution]:AUTO <bool>
[SENSe:]CORRection[<chno>]:CKIT:TERMinal[port]{MALe | FEMale}
[SENSe:]CORRection[<chno>]:CKIT[:TYPE]{0-4}
[SENSe:]CORRection[<chno>]:COLLect:DELeTe
[SENSe:]CORRection[<chno>]:COLLect:SAVE
[SENSe:]CORRection[<chno>]:COLLect[:ACQuire]{NORMalize | SNORromalize | OPEN | SHORT
| LOAD | S11Oopen | S11Sshort | S11Load
| S22Oopen | S22Sshort | S22Load | FTRansmit
| FMATch | RTRansmit | RMATch | GTHRU
| OISolation | FISolation | RISolation}

[SENSe:]CORRection[<chno>]:CSET:INTerpolate <bool>
[SENSe:]CORRection[<chno>]:CSET:STATe <bool>
[SENSe:]CORRection[<chno>]:EDELay:DISTance <real>
[SENSe:]CORRection[<chno>]:EDELay:STATe <bool>
[SENSe:]CORRection[<chno>]:EDELay[:TIME] <real>
[SENSe:]CORRection[n]:GPHase:STATe <bool>
[SENSe:]CORRection[<chno>]:OFFSet:PHASe <real>
[SENSe:]CORRection[<chno>]:OFFSet:STATe <bool>

```

```

[SENSe:]CORRection[<chno>]:PEXTension:STATe <bool>
[SENSe:]CORRection[<chno>]:PEXTension:TIME[eport] <real>
[SENSe:]CORRection[<chno>]:RVELocity:COAX <real>
[SENSe:]CORRection[n]:GPHase:STATe <bool>
[SENSe:]FUNctIon[<chno>]:POWer{AR | BR | AB | R | A | B | BDC | BDCR | S11 | S21 | S12 | S22
                                     | SF | WD | SREV | NONE}
[SENSe:]FUNctIon[<chno>][:ON]{"POWer:{AC | DC}{1 | 2 | 3}" | "POWer:RATio:{AC | DC}
                                     {2,1 | 3,1 | 2,3}" | "POWer:{S11 | S12 | S21 | S22}"
                                     | "POWer:{SFWD | SREV}" | "POWer:NONE"}

[SOURce:]POWer[<chno>]:BANDwidth[n] <int>
[SOURce:]CORRection[n]:GAIN:STATe <bool>
[SOURce:]COUple <bool>
[SOURce:]FREQuency[<chno>]:CENTer <real>
[SOURce:]FREQuency[<chno>]:CW <real>
[SOURce:]FREQuency[<chno>]:MODE SWEEp
[SOURce:]FREQuency[<chno>]:SPAN <real>
[SOURce:]FREQuency[<chno>]:STARt <real>
[SOURce:]FREQuency[<chno>]:STOP <real>
[SOURce:]POWer[<chno>]:STARt <real>
[SOURce:]POWer[<chno>]:STOP <real>
[SOURce:]POWer[<chno>]MODE SWEEp
[SOURce:]POWer[<chno>][:LEVel][:AMPlitude] <real>
[SOURce:]PSWeep[<chno>]:CLEar
[SOURce:]PSWeep[<chno>]:CLEar:ALL
[SOURce:]PSWeep[<chno>]:FREQuency<n> <real>[,<real>]
[SOURce:]PSWeep[<chno>]:MODE{FREQuency | ALL}
[SOURce:]PSWeep[<chno>]:POINts<n> <int>
[SOURce:]PSWeep[<chno>]:POWer<n> <real>
[SOURce:]PSWeep[<chno>]:SETTling<n> <real>
[SOURce:]SWEep[<chno>]:POINts <num>
[SOURce:]SWEep[<chno>]:SPACing{LINear | LOGarithmic}
[SOURce:]SWEep[<chno>]:TIME <real>
[SOURce:]SWEep[<chno>]:TIME:AUTO <bool>

STATus:DEvIce:CONDition?
STATus:DEvIce:ENABle
STATus:DEvIce[:EVENt]?
STATus:FREQuency:CONDition?
STATus:FREQuency:ENABle
STATus:FREQuency[:EVENt]?
STATus:LIMit:CONDition?

```

Network Analyzer Programming Manual (Part 2)

A.1.2 R3764/66, R3765/67 Commands

STATus:LIMit:ENABle
STATus:LIMit[:EVENT]?
STATus:OPERation:CONDition?
STATus:OPERation:ENABle <num>
STATus:OPERation[:EVENT]?
STATus:POWer:CONDition?
STATus:POWer:ENABle
STATus:POWer[:EVENT]?
STATus:QUEStionable:ENABle
STATus:QUEStionable[:EVENT]?
SYSTem:DATE <year>,<month>,<day>
SYSTem:ERRor?
SYSTem:PRESet
SYSTem:TIME <hour>,<minute>,<second>

TRACe[<chno>]:COPY DATA
TRACe[<chno>][:DATA]{<name> | <trace>},{<block> | <real>[,<real>...]}
TRACe[<chno>][:DATA]?{<name> | <trace>}[,<name> | <trace>]...]
TRIGger[:SEQuence]:DELay <real>
TRIGger[:SEQuence]:DELay:STATe <bool>
TRIGger[:SEQuence]:SIGNal
TRIGger[:SEQuence]:SOURce {IMMediate | EXTernal | BUS | HOLD}
TRIGger[:SEQuence][:IMMediate]

A.1.3 R3762/63 Commands (Commands Used for All Models)

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| AB | [SENSe:]FUNctIon[<chno>]:POWer AB |
| ABIN | [SENSe:]FUNctIon[<chno>]:POWer AB |
| ADDRCONT<int> | *PCB <int> |
| AIN | [SENSe:]FUNctIon[<chno>]:POWer A |
| ALTAB | [SOURce:]COUPlE OFF |
| APERTP<real> | CALCulate[<chno>]:GDAPerture:APERture <real> |
| AR | [SENSe:]FUNctIon[<chno>]:POWer AR |
| ARIN | [SENSe:]FUNctIon[<chno>]:POWer AR |
| AUTO | DISPlay[:WINDow[<chno>]]:Y[trace][:SCALE]:AUTO ONCE |
| AVER<bool> | [SENSe:]AVERage[<chno>][:STATe] <bool> |
| AVERAGE | [SENSe:]AVERage[<chno>][:STATe] OFF |
| AVERFACT<int> | [SENSe:]AVERage[<chno>]:COUNt <int> |
| AVERREST | [SENSe:]AVERage[<chno>]:REStart |
| AVR128 | [SENSe:]AVERage[<chno>]:COUNt 128; STATe ON |
| AVR16 | [SENSe:]AVERage[<chno>]:COUNt 16; STATe ON |
| AVR2 | [SENSe:]AVERage[<chno>]:COUNt 2; STATe ON |
| AVR32 | [SENSe:]AVERage[<chno>]:COUNt 32; STATe ON |
| AVR4 | [SENSe:]AVERage[<chno>]:COUNt 4; STATe ON |
| AVR64 | [SENSe:]AVERage[<chno>]:COUNt 64; STATe ON |
| AVR8 | [SENSe:]AVERage[<chno>]:COUNt 8; STATe ON |
| BDCIN | [SENSe:]FUNctIon[<chno>]:POWer BDC |
| BDCRIN | [SENSe:]FUNctIon[<chno>]:POWer BDCR |
| BEEPFail<bool> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP <bool> |
| BIN | [SENSe:]FUNctIon[<chno>]:POWer B |
| BR | [SENSe:]FUNctIon[<chno>]:POWer BR |
| BRIN | [SENSe:]FUNctIon[<chno>]:POWer BR |
| CALN | [SENSe:]CORRection[<chno>]:CSET:STATe OFF |
| CENT<real> | [SOURce:]FREQuency[<chno>]:CENTer <real> |
| CENTERF<real> | [SOURce:]FREQuency[<chno>]:CENTer <real> |
| CH1 | DISPlay:ACTive 1 |
| CH2 | DISPlay:ACTive 2 |
| CH3 | DISPlay:ACTive 3 |
| CH4 | DISPlay:ACTive 4 |
| CHAN1 | DISPlay:ACTive 1 |
| CHAN2 | DISPlay:ACTive 2 |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| CKIT0 | [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 0 |
| CKIT1 | [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 1 |
| CKIT2 | [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 2 |
| CKIT3 | [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 3 |
| CKIT4 | [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 4 |
| CKIT5 | [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 5 |
| CLEA1 | REGister:CLEar 1 |
| CLEA2 | REGister:CLEar 2 |
| CLEA3 | REGister:CLEar 3 |
| CLEA4 | REGister:CLEar 4 |
| CLEA5 | REGister:CLEar 5 |
| CLEAR | [SENSe:]CORRection[<chno>]:COLLect:DELeTe |
| CLES | *CLS |
| CLRREG1 | REGister:CLEar 1 |
| CLRREG10 | REGister:CLEar 10 |
| CLRREG2 | REGister:CLEar 2 |
| CLRREG3 | REGister:CLEar 3 |
| CLRREG4 | REGister:CLEar 4 |
| CLRREG5 | REGister:CLEar 5 |
| CLRREG6 | REGister:CLEar 6 |
| CLRREG7 | REGister:CLEar 7 |
| CLRREG8 | REGister:CLEar 8 |
| CLRREG9 | REGister:CLEar 9 |
| CLS | *CLS |
| CONT | INITiate:CONTinuous ON |
| CONV1DS | CALCulate[<chno>]:TRANsform:IMPedance:TYPE INVersion |
| CONVOFF | CALCulate[<chno>]:TRANsform:IMPedance:TYPE NONE |
| CONVRY | CALCulate[<chno>]:TRANsform:IMPedance:TYPE YREFlection |
| CONVRZ | CALCulate[<chno>]:TRANsform:IMPedance:TYPE ZREFlection |
| CONVTY | CALCulate[<chno>]:TRANsform:IMPedance:TYPE YTRansmit |
| CONVTZ | CALCulate[<chno>]:TRANsform:IMPedance:TYPE ZTRansmit |
| CONVYREF | CALCulate[<chno>]:TRANsform:IMPedance:TYPE YREFlection |
| CONVYTRA | CALCulate[<chno>]:TRANsform:IMPedance:TYPE YTRansmit |
| CONVZREF | CALCulate[<chno>]:TRANsform:IMPedance:TYPE ZREFlection |
| CONVZTRA | CALCulate[<chno>]:TRANsform:IMPedance:TYPE ZTRansmit |
| CORARY <bool> | FILE:STATe:CORRection <bool> |
| CORR <bool> | [SENSe:]CORRection[<chno>]:CSET:STATe <bool> |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| CORRECT<bool> | [SENSe:]CORREction[<chno>]:CSET:STATe <bool> |
| COUC<bool> | [SOURCe:]COUPle <bool> |
| COUPLE<bool> | [SOURCe:]COUPle <bool> |
| CWFREQ<real> | [SOURce:]FREQuency[<chno>]:CW <real> |
| DATAARY<bool> | FILE:STATe:DATA <bool> |
| DATI | TRACe[<chno>]:COPY DATA |
| DAY<int> | SYSTem:DATE <year>,<month>,<day> |
| DELA | CALCualte[<chno>]:FORMat GDELay |
| DELAY | CALCualte[<chno>]:FORMat GDELay |
| DELO | MARKEr[<chno>]:DELTA[:MODE] OFF |
| DELR1 | MARKEr[<chno>]:DELTA:COMPare 1 |
| DELR2 | MARKEr[<chno>]:DELTA:COMPare 2 |
| DELR3 | MARKEr[<chno>]:DELTA:COMPare 3 |
| DELR4 | MARKEr[<chno>]:DELTA:COMPare 4 |
| DELRFIXM | MARKEr[<chno>]:DELTA[:MODE] FIXed |
| DISM<bool> | MARKEr:LIST <bool> |
| DISPDATA | DISPlay[:WINDow[<chno>]]:TRACe:ASSign DATA |
| DISPDATM | DISPlay[:WINDow[<chno>]]:TRACe:ASSign DMEMemory |
| DISPDDM<bool> | CALCulate[<chno>]:MATH[:EXPRession]:NAME {DDM NONE} |
| DISPDM | DISPlay[:WINDow[<chno>]]:TRACe:ASSign DMEMemory |
| DISPDDM | CALCulate:MATH[:EXPRession]:NAME DSM |
| DISPMEM | DISPlay[:WINDow[<chno>]]:TRACe:ASSign MEMory |
| DISPMEMO | DISPlay[:WINDow[<chno>]]:TRACe:ASSign MEMory |
| DIVI | CALCulate[<chno>]:MATH[:EXPRession]:NAME DDM |
| DL0 | (CR+LF/EOI; none) |
| DL1 | (LF; none) |
| DL2 | (EOI; none) |
| DL3 | (CR+LF; none) |
| DLTX<real> | MARKEr[<chno>]:SEARCh:RIPple:DX <real> |
| DLTY<real> | MARKEr[<chno>]:SEARCh:RIPple:DY <real> |
| DMAXMIN | MARKEr[<chno>]:SEARCh:RIPple[:MODE] PPEak |
| DMKR100[real] | MARKEr[<chno>]:DELTA:COMPare 10[,<real>] |
| DMKR10[real] | MARKEr[<chno>]:DELTA:COMPare 1[,<real>] |
| DMKR20[real] | MARKEr[<chno>]:DELTA:COMPare 2[,<real>] |
| DMKR30[real] | MARKEr[<chno>]:DELTA:COMPare 3[,<real>] |
| DMKR40[real] | MARKEr[<chno>]:DELTA:COMPare 4[,<real>] |
| DMKR50[real] | MARKEr[<chno>]:DELTA:COMPare 5[,<real>] |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| DMKR60[real] | MARKer[<chno>]:DELTA:COMPare 6[,<real>] |
| DMKR70[real] | MARKer[<chno>]:DELTA:COMPare 7[,<real>] |
| DMKR80[real] | MARKer[<chno>]:DELTA:COMPare 8[,<real>] |
| DMKR90[real] | MARKer[<chno>]:DELTA:COMPare 9[,<real>] |
| DMKRA | MARKer[<chno>]:DELTA[:MODE] COMPare |
| DMKRC | MARKer[<chno>]:DELTA[:MODE] CHILd |
| DMKRF | MARKer[<chno>]:DELTA[:MODE] FIXed |
| DMKROF | MARKer[<chno>]:DELTA[:MODE] OFF |
| DONE | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DONE | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DONE1PORT | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DONE2PORT | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DONEISO | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DONEREFL | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DONETRNS | [SENSe:]CORRection[<chno>]:COLLect:SAVE |
| DRIPPL1 | MARKer[<chno>]:SEARch[:MODE] RIPPlE |
| DSSTATE<bool> | FILE:STATe:CONDition <bool> |
| DTOM | TRACe[<chno>]:COPY DATA |
| DUAC<bool> | DISPlay:DUAL <bool> |
| DUAL<bool> | DISPlay:DUAL <bool> |
| ELED<real> | [SENSe:]CORRection[<chno>]:EDELay[:TIME] <real> |
| ELED<val> | [SENSe:]CORRection[<chno>]:EDELay:DISTance <real> |
| EPORT1<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME4 <real> |
| EPORT2<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME5 <real> |
| EPORTA<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME2 <real> |
| EPORTB<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME3 <real> |
| EPORTR<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME1 <real> |
| ESE | *ESE |
| ESR? | *ESR? |
| EXTERN | TRIGger[:SEQuence]:SOURce EXTernal |
| EXTTOFF | TRIGger[:SEQuence]:SOURce IMMediate |
| EXTTON | TRIGger[:SEQuence]:SOURce EXTernal |
| FAILBEEP<bool> | DISPlay:WINDow[<chno>]:LIMit[<parano>]:BEEP <bool> |
| FLTANA<bool> | MARKer[<chno>]:FANnalsis[:STATe] <bool> |
| FMKRS<real> | MARKer[<chno>]:FIXed:STIMulus <real> |
| FMKRV<real> | MARKer[<chno>]:FIXed:VALue <real> |

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| FORM0 | FORMat:DATA ASCii;BORDER NORMAl |
| FORM2 | FORMat:DATA REAL,32;BORDER NORMAl |
| FORM3 | FORMat:DATA REAL,64;BORDER NORMAl |
| FORM4 | FORMat:DATA ASCii;BORDER NORMAl |
| FORM5 | FORMat:DATA REAL,32;BORDER SWAPped |
| FORM6 | FORMat:DATA REAL,64;BORDER SWAPped |
| FORM7 | FORMat:DATA MBINary,32;BORDER NORMAl |
| FORM8 | FORMat:DATA MBINary,64;BORDER NORMAl |
| FREE | TRIGger[:SEquence]:SOURce IMMEDIATE |
| FRER | INITiate:CONTInuous ON |
| FWDISO | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] FISolation |
| FWDMATCH | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] FMATch |
| FWDTRNS | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] FTRansmit > I |
| GRAT<bool> | ISPlay[:WINDow[<chno>]]:TRACe:GRATICule[:STATE] <bool> |
| GRPTHRU | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] GTHRU |
| HOLD | INITiate:CONTInuous OFF;:ABORt |
| HOUR<int> | SYSTem:TIME <hour>,<minute>,<second> |
| IDN? | *IDN? |
| IDNT | *IDN? |
| IFBW<int> | [SENSe:]BANDwidth[:RESolution] <int> |
| IMAG | CALCulate[<chno>]:FORMat IMAGinary |
| INICORDI | TRACe[<chno>][:DATA]{EDIRectivity 134},{<block> <real>[,<real>...]} |
| INICORDI | TRACe[<chno>][:DATA]{EDIRectivity 134},{<block> <real>[,<real>...]} |
| INICORED | TRACe[<chno>][:DATA]{DATA 129},{<block> <real>[,<real>...]} |
| INICORNR | TRACe[<chno>][:D0TA]{NORMAlize 133},{<block> <real>[,<real>...]} |
| INICORNR | TRACe[<chno>][:DATA]{NORMAlize 133},{<block> <reaAv>[,<real>...]} |
| INICORSO | TRACe[<chno>][:DATA]{ESMatch 135},{<block> <real>[,<real>...]} |
| INICORSO | TRACe[<chno>][:DATA]{ESMatch 135},{<block> <real>[,<real>...]} |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| IN1CORTR | TRACe[<chno>][:DATA]{ERTRacking 136},{<block> <real>[,<real>...]} |
| IN1CORTR | TRACe[<chno>][:DATA]{ERTRacking 136},{<block> <real>[,<real>...]} |
| IN1DFOR | TRACe[<chno>][:DATA]{FDATa1 0},{<block> <real> [,<real>...]} |
| IN1DRAT | TRACe[<chno>][:DATA]{RAW 131},{<block> <real> [,<real>...]} |
| IN1MFOR | TRACe[<chno>][:DATA]{FMEMory1 2},{<block> <real> [,<real>...]} |
| IN1MRAT | TRACe[<chno>][:DATA]{MEMory 130},{<block> <real> [,<real>...]} |
| IN1NORED | TRACe[<chno>][:DATA]{UDATa 128},{<block> <real> [,<real>...]} |
| IN2CORDI | TRACe[<chno>][:DATA]{EDIRectivity 198},{<block> <real>[,<real>...]} |
| IN2CORDI | TRACe[<chno>][:DATA]{EDIRectivity 198},{<block> <real>[,<real>...]} |
| IN2CORED | TRACe[<chno>][:DATA]{DATA 193},{<block> <real> [,<real>...]} |
| IN2CORNR | TRACe[<chno>][:DATA]{NORMAlize 197},{<block> <real>[,<real>...]} |
| IN2CORNR | TRACe[<chno>][:DATA]{NORMAlize 197},{<block> <real>[,<real>...]} |
| IN2CORSO | TRACe[<chno>][:DATA]{ESMatch 199},{<block> <real> [,<real>...]} |
| IN2CORSO | TRACe[<chno>][:DATA]{ESMatch 199},{<block> <real> [,<real>...]} |
| IN2CORTR | TRACe[<chno>][:DATA]{ERTRacking 200},{<block> <real>[,<real>...]} |
| IN2CORTR | TRACe[<chno>][:DATA]{ERTRacking 200},{<block> <real>[,<real>...]} |
| IN2DFOR | TRACe[<chno>][:DATA]{FDATa1 1},{<block> <real> [,<real>...]} |
| IN2DRAT | TRACe[<chno>][:DATA]{RAW 195},{<block> <real> [,<real>...]} |
| IN2MFOR | TRACe[<chno>][:DATA]{FMEMory1 3},{<block> <real> [,<real>...]} |
| IN2MRAT | TRACe[<chno>][:DATA]{MEMory 194},{<block> <real> [,<real>...]} |
| IN2NORED | TRACe[<chno>][:DATA]{UDATa 192},{<block> <real> [,<real>...]} |
| IN3CORDI | TRACe[<chno>][:DATA]{EDIRectivity 262},{<block> <real>[,<real>...]} |
| IN3CORED | TRACe[<chno>][:DATA]{DATA 257},{<block> <real> [,<real>...]} |
| IN3CORNR | TRACe[<chno>][:DATA]{NORMAlize 261},{<block> <real>[,<real>...]} |
| IN3CORSO | TRACe[<chno>][:DATA]{ESMatch 263},{<block> <real>[,<real>...]} |
| IN3CORTR | TRACe[<chno>][:DATA]{ERTRacking 264},{<block> <real>[,<real>...]} |
| IN3DFOR | TRACe[<chno>][:DATA]{FDATa1 4},{<block> <real> [,<real>...]} |
| IN3DRAT | TRACe[<chno>][:DATA]{RAW 259},{<block> <real> [,<real>...]} |
| IN3MFOR | TRACe[<chno>][:DATA]{FMEMory1 6},{<block> <real> [,<real>...]} |
| IN3MRAT | TRACe[<chno>][:DATA]{MEMory 258},{<block> <real> [,<real>...]} |
| IN3NORED | TRACe[<chno>][:DATA]{UDATa 256},{<block> <real> [,<real>...]} |
| IN4CORDI | TRACe[<chno>][:DATA]{EDIRectivity 326},{<block> <real>[,<real>...]} |
| IN4CORED | TRACe[<chno>][:DATA]{DATA 321},{<block> <real> [,<real>...]} |
| IN4CORNR | TRACe[<chno>][:DATA]{NORMAlize 325},{<block> <real>[,<real>...]} |
| IN4CORSO | TRACe[<chno>][:DATA]{ESMatch 327},{<block> <real> [,<real>...]} |
| IN4CORTR | TRACe[<chno>][:DATA]{ERTRacking 328},{<block> <real>[,<real>...]} |
| IN4DFOR | TRACe[<chno>][:DATA]{FDATa1 5},{<block> <real> [,<real>...]} |
| IN4DRAT | TRACe[<chno>][:DATA]{RAW 323},{<block> <real> [,<real>...]} |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| IN4MFOR | TRACe[<chno>][:DATA]{FMEMory1 7},{<block> <real> [,<real>...]} |
| IN4MRAT | TRACe[<chno>][:DATA]{MEMory 322},{<block> <real> [,<real>...]} |
| IN4NORED | TRACe[<chno>][:DATA]{UDATa 320},{<block> <real> [,<real>...]} |
| INPCOR | [SENSe:]CORREction[n]:GPHase:STATe <bool> |
| INTERPOL | [SENSe:]CORREction[<chno>]:CSET:INTerpolate <bool> |
| IP | SYSTem:PRESet |
| LABEL<str> | DISPlay[:WINDow[<chno>]]:TEXT[:DATA]{<str> <block>} |
| LDFILE<str> | FILE:LOAD <str> |
| LENGTH<bool> | [SENSe:]CORREction[<chno>]:EDELay:STATe <bool> |
| LENGVAL<real> | [SENSe:]CORREction[<chno>]:EDELay:DISTance <real> |
| LEVEL | [SOURce:]POWer[<chno>]:MODE SWEEp |
| LIMC<int> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :COLor <int> |
| DLIMIAMPO<real> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:OFFSet :AMPLitude <real> |
| LIMILINE<bool> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:LINE <bool> |
| LIMISTIO<real> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:OFFSet
:STIMulus <real> |
| LIMITEST<bool> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]::STATe <bool> |
| LIML<real> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n>:LOWer <real> |
| LIMPLIN | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:PARAMeter:PLIMit LINear |
| LIMPLOG | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:PARAMeter:PLIMit
LOGarithmic |
| LIMSLIN | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:PARAMeter:SLIMit LINear |
| LIMSLOG | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:PARAMeter:SLIMit
LOGarithmic |
| LIMS<real> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :STIMulus
<real> |
| LIMTFL | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :TYPE FLINe |
| LIMTFLT | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :TYPE FLINe |
| LIMTSL | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :TYPE SLINe |
| LIMTSLP | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :TYPE SLINe |
| LIMTSP | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :TYPE SPOint |
| LIMU<real> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :UPPer <real> |
| LINFREQ | [SOURce:]FREQuency[<chno>]:MODE SWEEp;[SOURce:]SWEep
[<chno>]:SPACing LINear |
| LINM | CALCulate[<chno>]:FORMat MLINear |
| LINMAG | CALCulate[<chno>]:FORMat MLINear |
| LINMP | CALCulate[<chno>]:FORMat MLIPhase |
| LISFREQ | [SOURce:]PSWEEP[<chno>]:MODE FREQuency |

Network Analyzer Programming Manual (Part 2)

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| LOAD | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] LOAD |
| LOGFREQ | [SOURce:]FREQuency[<chno>]:MODE SWEEp;:[SOURce:]SWEeP
[<chno>]:SPACing LOGarithmic |
| LOGM | CALCulate[<chno>]:FORMat MLOGarithmic |
| LOGMAG | CALCulate[<chno>]:FORMat MLOGarithmic |
| LOGMD | CALCulate[<chno>]:FORMat MLODelay |
| LOGMP | CALCulate[<chno>]:FORMat MLOPhase |
| LSEG | (segment number is specified by <n> in each command) |
| LSEGCL | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:CLEar |
| LSTIM<real> | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGMENT<n> :STIMulus
<real> |
| M101P | [SOURce:]SWEeP[<chno>]:POINts 101 |
| M11P | [SOURce:]SWEeP[<chno>]:POINts 11 |
| M1201P | [SOURce:]SWEeP[<chno>]:POINts 1201 |
| M201P | [SOURce:]SWEeP[<chno>]:POINts 201 |
| M21P | [SOURce:]SWEeP[<chno>]:POINts 21 |
| M301P | [SOURce:]SWEeP[<chno>]:POINts 301 |
| M3P | [SOURce:]SWEeP[<chno>]:POINts 3 |
| M51P | [SOURce:]SWEeP[<chno>]:POINts 51 |
| M601P | [SOURce:]SWEeP[<chno>]:POINts 601 |
| M6P | [SOURce:]SWEeP[<chno>]:POINts 6 |
| MARK1<val> | MARKEr[<chno>]:ACTivate[:NUMBer] 1[,<real>] |
| MARK2<val> | MARKEr[<chno>]:ACTivate[:NUMBer] 2[,<real>] |
| MARK3<val> | MARKEr[<chno>]:ACTivate[:NUMBer] 3[,<real>] |
| MARK4<val> | MARKEr[<chno>]:ACTivate[:NUMBer] 4[,<real>] |
| MARKCONT | MARKEr[<chno>]:COMPensate OFF |
| MARKCOUP | MARKEr[<chno>]:COUPLe ON |
| MARKCW | MARKEr[<chno>]:LET CENTer |
| MARKDISC | MARKEr[<chno>]:COMPensate ON |
| MARKFAUV<val> | MARKEr:FIXed:AVALue <val> |
| MARKFSTI<val> | MARKEr[<chno>]:FIXed:STIMulus <real> |
| MARKFVAL<val> | MARKEr[<chno>]:FIXed:VALue <real> |
| MARKMAXI | MARKEr[<chno>]:SEARch[:MODE] MAX |
| MARKMINI | MARKEr[<chno>]:SEARch[:MODE] MIN |
| MARKOFF | MARKEr[<chno>]:AOFF |
| MARKREF | MARKEr[<chno>]:LET RLEVel |
| MARKSPAN | MARKEr[<chno>]:LET SPAN |
| MARKSTAR | MARKEr[<chno>]:LET START |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| MARKSTOP | MARKer[<chno>]:LET STOP |
| MARKUNCO | MARKer[<chno>]:COUPlE OFF |
| MARKZERO | MARKer[<chno>]:LET FIXEd |
| MAXSRCH | MARKer[<chno>]:SEARCh[:MODE] MAX |
| MEAS | ABORt;INITiate[:IMMediate] |
| MEASA | [SENSe:]FUNCTion[<chno>]:POWer A |
| MEASB | [SENSe:]FUNCTion[<chno>]:POWer B |
| MEASR | [SENSe:]FUNCTion[<chno>]:POWer R |
| MEMARY <bool> | FILE:STATe:MEMory <bool> |
| MINSRCH | MARKer[<chno>]:SEARCh[:MODE] MIN |
| MINU | CALCulate:MATH[:EXPRession]:NAME DSM |
| MINUTE <int> | SYSTem:TIME <hour>,<minute>,<second> |
| MKR10A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 10[,<real>] |
| MKR1A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 1[,<real>] |
| MKR2A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 2[,<real>] |
| MKR3A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 3[,<real>] |
| MKR4A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 4[,<real>] |
| MKR5A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 5[,<real>] |
| MKR6A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 6[,<real>] |
| MKR7A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 7[,<real>] |
| MKR8A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 8[,<real>] |
| MKR9A <real> | MARKer[<chno>]:ACTivate[:NUMBer] 9[,<real>] |
| MKRAOFF | MARKer[<chno>]:AOFF |
| MKRCENT | MARKer[<chno>]:LET CENTer |
| MKRCMP | MARKer[<chno>]:COMPensate ON |
| MKRCOUP | MARKer[<chno>]:COUPlE ON |
| MKRFIX | MARKer[<chno>]:LET FIXEd |
| MKROFF | MARKer[<chno>]:ACTivate:STATe OFF |
| MKRPART <bool> | MARKer[<chno>]:SEARCh:PARTial[:STATe] <bool> |
| MKRREF | MARKer[<chno>]:LET RLEVel |
| MKRSPAN | MARKer[<chno>]:LET SPAN |
| MKRSTAR | MARKer[<chno>]:LET START |
| MKRSTOP | MARKer[<chno>]:LET STOP |
| MKRTRAC <bool> | MARKer[<chno>]:SEARCh:TRACKing <bool> |
| MKRUCMP | MARKer[<chno>]:COMPensate OFF |
| MKRUCOUP | MARKer[<chno>]:COUPlE OFF |
| MKRZO50 | CALCulate[<chno>]:TRANsform:IMPedance:CIMPedance 50OHM |
| MKRZO75 | CALCulate[<chno>]:TRANsform:IMPedance:CIMPedance 75OHM |

Network Analyzer Programming Manual (Part 2)

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| MONTH<int> | SYSTem:DATE <year>,<month>,<day> |
| NORM<ON> | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] NORMALize |
| NORMS<ON> | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] SNORMALize |
| OMITISO | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] OISolation |
| OPC | *OPC |
| OPEN | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] OPEN |
| OT1CORDI | TRACe[<chno>][:DATA]?{EDIRectivity 134} |
| OT1CORED | TRACe[<chno>][:DATA]?{DATA 129} |
| OT1CORNr | TRACe[<chno>][:DATA]?{NORMAlize 133} |
| OT1CORSO | TRACe[<chno>][:DATA]?{ESMatch 135} |
| OT1CORTR | TRACe[<chno>][:DATA]?{ERTRacking 136} |
| OT1DFOR | TRACe[<chno>][:DATA]?{FDATa1 0} |
| OT1DRAT | TRACe[<chno>][:DATA]?{RAW 131} |
| OT1MFOR | TRACe[<chno>][:DATA]?{FMEMory1 2} |
| OT1MRAT | TRACe[<chno>][:DATA]?{MEMory 130} |
| OT1NORED | TRACe[<chno>][:DATA]?{UDATa 128} |
| OT2CORDI | TRACe[<chno>][:DATA]?{EDIRectivity 198} |
| OT2CORED | TRACe[<chno>][:DATA]?{DATA 193} |
| OT2CORNr | TRACe[<chno>][:DATA]?{NORMAlize 197} |
| OT2CORSO | TRACe[<chno>][:DATA]?{ESMatch 199} |
| OT2CORTR | TRACe[<chno>][:DATA]?{ERTRacking 200} |
| OT2DFOR | TRACe[<chno>][:DATA]?{FDATa1 1} |
| OT2DRAT | TRACe[<chno>][:DATA]?{RAW 195} |
| OT2MFOR | TRACe[<chno>][:DATA]?{FMEMory1 3} |
| OT2MRAT | TRACe[<chno>][:DATA]?{MEMory 194} |
| OT2NORED | TRACe[<chno>][:DATA]?{UDATa 192} |
| OT3CORDI | TRACe[<chno>][:DATA]?{EDIRectivity 262} |
| OT3CORED | TRACe[<chno>][:DATA]?{DATA 257} |
| OT3CORNr | TRACe[<chno>][:DATA]?{NORMAlize 261} |
| OT3CORSO | TRACe[<chno>][:DATA]?{ESMatch 263} |
| OT3CORTR | TRACe[<chno>][:DATA]?{ERTRacking 264} |
| OT3DFOR | TRACe[<chno>][:DATA]?{FDATa1 4} |
| OT3DRAT | TRACe[<chno>][:DATA]?{RAW 259} |
| OT3MFOR | TRACe[<chno>][:DATA]?{FMEMory1 6} |
| OT3MRAT | TRACe[<chno>][:DATA]?{MEMory 258} |
| OT3NORED | TRACe[<chno>][:DATA]?{UDATa 256} |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| OT4CORDI | TRACe[<chno>][:DATA]?{EDIrectivity 326} |
| OT4CORED | TRACe[<chno>][:DATA]?{DATA 321} |
| OT4CORNR | TRACe[<chno>][:DATA]?{NORMAlize 325} |
| OT4CORSO | TRACe[<chno>][:DATA]?{ESMatch 327} |
| OT4CORTR | TRACe[<chno>][:DATA]?{ERTRacking 328} |
| OT4DFOR | TRACe[<chno>][:DATA]?{FDATa1 5} |
| OT4DRAT | TRACe[<chno>][:DATA]?{RAW 323} |
| OT4MFOR | TRACe[<chno>][:DATA]?{FMEMory1 7} |
| OT4MRAT | TRACe[<chno>][:DATA]? {MEMory 322} |
| OT4NORED | TRACe[<chno>][:DATA]? {UDATa 320} |
| OUTLEV<real> | [SOURce:]POWer[<chno>][:LEVel][:AMPLitude] <real> |
| PCB<int> | *PCB <int> |
| PHAO<real> | [SENSe:]CORRection[<chno>]:OFFSet:PHASe <real> |
| PHAOFS<bool> | [SENSe:]CORRection[<chno>]:OFFSet:STATe <bool> |
| PHAS | CALCulate[<chno>]:FORMat PHASe |
| PHASE | CALCulate[<chno>]:FORMat PHASe |
| PMKRLIN | MARKER[<chno>]:POLar MLINear |
| PMKRRI | MARKER[<chno>]:POLar RIMaginary |
| PMKRRLG | MARKER[<chno>]:POLar MLOGarithmic |
| POIN<int> | [SOURce:]SWEep[<chno>]:POINts <int> |
| POLA | CALCulate[<chno>]:FORMat POLar |
| POLAR | CALCulate[<chno>]:FORMat POLar |
| POLMLIN | MARKER[<chno>]:POLar MLINear |
| POLMLOG | MARKER[<chno>]:POLar MLOGarithmic |
| POLMRI | MARKER[<chno>]:POLar RIMaginary |
| PORE<bool> | [SENSe:]CORRection[<chno>]:PEXTension:STATe <bool> |
| PORT1FEM | [SENSe:]CORRection[<chno>]:CKIT:TERMinal1 FEMale |
| PORT1MAL | [SENSe:]CORRection[<chno>]:CKIT:TERMinal1 MALe |
| PORT2FEM | [SENSe:]CORRection[<chno>]:CKIT:TERMinal2 FEMale |
| PORT2MAL | [SENSe:]CORRection[<chno>]:CKIT:TERMinal3 MALe |
| PORTA<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME2 <real> |
| PORTB<real> | [SENSe:]CORRection[<chno>]:PEXTension:TIME3 <real> |
| POWE<real> | [SOURce:]POWer[<chno>][:LEVel][:AMPLitude] <real> |
| POWS | [SOURce:]POWer[<chno>]:MODE SWEep |
| POWTOFF | [SENSe:]POWer.AC:PROTection:CLEar |
| PRES | SYSTem:PRESet |
| PURGE<str> | FILE:DELete <str> |

Network Analyzer Programming Manual (Part 2)

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| RAWARY<bool> | FILE:STATe:RAW <bool> |
| RBW100HZ | [SENSe:]BANDwidth[:RESolution] 100HZ |
| RBW10HZ | [SENSe:]BANDwidth[:RESolution] 10HZ |
| RBW1KHZ | [SENSe:]BANDwidth[:RESolution] 1KHZ |
| RBW300HZ | [SENSe:]BANDwidth[:RESolution] 300HZ |
| RBW30HZ | [SENSe:]BANDwidth[:RESolution] 30HZ |
| RBW<int> | [SENSe:]BANDwidth[:RESolution] <int> |
| RBWAUTO | [SENSe:]BANDwidth[:RESolution]:AUTO ON |
| REAL | CALCulate[<chno>]:FORMat REAL |
| RECA1 | REGister:RECall 1 |
| RECA2 | REGister:RECall 2 |
| RECA3 | REGister:RECall 3 |
| RECA4 | REGister:RECall 4 |
| RECA5 | REGister:RECall 5 |
| RECLPOFF | REGister:RECall(0 POff) |
| RECLREG1 | REGister:RECall 1 |
| RECLREG10 | REGister:RECall 10 |
| RECLREG2 | REGister:RECall 2 |
| RECLREG3 | REGister:RECall 3 |
| RECLREG4 | REGister:RECall 4 |
| RECLREG5 | REGister:RECall 5 |
| RECLREG6 | REGister:RECall 6 |
| RECLREG7 | REGister:RECall 7 |
| RECLREG8 | REGister:RECall 8 |
| RECLREG9 | REGister:RECall 9 |
| REFL<bool> | DISPlay[:WINDow[<chno>]]:Y[trace]:RLINe <bool> |
| REFP<real> | DISPlay[:WINDow[<chno>]]:Y[trace]:SCALE:RPOSITION <real> |
| REFV<real> | DISPlay[:WINDow[<chno>]]:Y[trace]:SCALE:RLEVEL <real> |
| REST | ABORt;INITiate[:IMMEDIATE] |
| REVISO | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] RISolution |
| REVMATCH | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] RMATCh |
| REVTRNS | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] RTRANsmit |
| RIN | [SENSe:]FUNCTION[<chno>]:POWER R |
| RST | *RST |
| RTC30ADJ | SYSTem:TIME <hour>,<minute>,<second> |
| S11 | [SENSe:]FUNCTION[<chno>]:POWER S11 |
| S11LOAD | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] S11Load |

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| S11OPEN | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] S11Open |
| S11SHORT | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] S11Short |
| S12 | [SENSe:]FUNction[<chno>]:POWer S12 |
| S21 | [SENSe:]FUNction[<chno>]:POWer S21 |
| S22 | [SENSe:]FUNction[<chno>]:POWer S22 |
| S22LOAD | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] S22Load |
| S22OPEN | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] S22Open |
| S22SHORT | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] S22Short |
| SAVE1 | REGister:SAVE 1 |
| SAVE2 | REGister:SAVE 2 |
| SAVE3 | REGister:SAVE 3 |
| SAVE4 | REGister:SAVE 4 |
| SAVE5 | REGister:SAVE 5 |
| SAVEREG1 | REGister:SAVE 1 |
| SAVEREG10 | REGister:SAVE 10 |
| SAVEREG2 | REGister:SAVE 2 |
| SAVEREG3 | REGister:SAVE 3 |
| SAVEREG4 | REGister:SAVE 4 |
| SAVEREG5 | REGister:SAVE 5 |
| SAVEREG6 | REGister:SAVE 6 |
| SAVEREG7 | REGister:SAVE 7 |
| SAVEREG8 | REGister:SAVE 8 |
| SAVEREG9 | REGister:SAVE 9 |
| SCAL<real> | DISPlay[:WINDow[<chno>]]:Y[trace][:SCALe]:PDIVision <real> |
| SCALF1ST | DISPlay[:WINDow[<chno>]]:Y[trace]... |
| SCALF2ND | DISPlay[:WINDow[<chno>]]:Y[trace]... |
| SDIV<real> | DISPlay[:WINDow[<chno>]]:Y[trace][:SCALe]:PDIVision <real> |
| SEAMAX | MARKer[<chno>]:SEARch[:MODE] MAX |
| SEAMIN | MARKer[<chno>]:SEARch[:MODE] MIN |
| SEAOFF | MARKer[<chno>]:SEARch[:MODE] OFF |
| SETLTIME<real> | TRIGger[:SEQuence]:DELay <real> |
| SETLVARI<bool> | TRIGger[:SEQuence]:DELay:STATe <bool> |
| SETZ | CALCulate[<chno>]:TRANsform:IMPedance:CIMPedance <real> |
| SETZ0<real> | CALCulate[<chno>]:TRANsform:IMPedance:CIMPedance <real> |
| SFWD | [SENSe:]FUNction[<chno>]:POWer SFWD |
| SGJB | CALCulate[<chno>]:FORMat ISCHart |
| SHORT | [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] SHORT |
| SING | INITiate:CONTinuous OFF::ABORT;INITiate |

Network Analyzer Programming Manual (Part 2)

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| SINGLE | INITiate:CONTInuous OFF;:ABORT;INITiate |
| SMEAS<bool> | [SENSe:]FUNctIon[<chno>]:POWer <input> |
| SMIC | CALCulate[<chno>]:FORMat SCHart |
| SMIMGB | MARKEr[<chno>]:SMITH ADMittance |
| SMIMLIN | MARKEr[<chno>]:SMITH MLINear |
| SMIMLOG | MARKEr[<chno>]:SMITH MLOGarithmic |
| SMIMRI | MARKEr[<chno>]:SMITH RIMaginary |
| SMIMRX | MARKEr[<chno>]:SMITH IMPedance |
| SMKRGB | MARKEr[<chno>]:SMITH ADMittance |
| SMKRLIN | MARKEr[<chno>]:SMITH MLINear |
| SMKRLOG | MARKEr[<chno>]:SMITH MLOGarithmic |
| SMKRRI | MARKEr[<chno>]:SMITH RIMaginary |
| SMKRRX | MARKEr[<chno>]:SMITH IMPedance |
| SMOO<bool> | CALCulate[<chno>]:SMOothing:STATe <bool> |
| SMOOAPER<real> | CALCulate[<chno>]:SMOothing:APERture <real> |
| SPAN<real> | [SOURce:]FREQuency[<chno>]:SPAN <real> |
| SPANF<real> | [SOURce:]FREQuency[<chno>]:SPAN <real> |
| SPLD<bool> | DISPlay:FORMat {ULOWer FBACk} |
| SPLEVEL<real> | [SOURce:]POWer[<chno>]:STOP <real> |
| SPLIT<bool> | DISPlay:FORMat {ULOWer FBACk} |
| SRCCOR | [SOURce:]CORRection[n]:GAIN:STATe <bool> |
| SRCHOFF | MARKEr[<chno>]:SEARCh[:MODE] OFF |
| SRE | *SRE |
| SREV | [SENSe:]FUNctIon[<chno>]:POWer SREV |
| SRJX | CALCulate[<chno>]:FORMat SCHart |
| SRQD | (none) |
| SRQE | (none) |
| STAR<real> | [SOURce:]{FREQuency POWer}[<chno>]:STARt <real> |
| STARTF<real> | [SOURce:]FREQuency[<chno>]:STARt <real> |
| STB? | *STB? |
| STFILE<str> | FILE:STORe <str> |
| STIME<real> | [SOURce:]SWEep[<chno>]:TIME <real> |
| STIMEAUTO | [SOURce:]SWEep[<chno>]:TIME:AUTO ON |
| STILEVEL<real> | [SOURce:]POWer[<chno>]:STARt <real> |
| STOP<real> | [SOURce:]{FREQuency POWer}[<chno>]:STOP <real> |
| STOPF<real> | [SOURce:]FREQuency[<chno>]:STOP <real> |
| SWEA | [SOURce:]SWEep[<chno>]:TIME:AUTO ON |
| SWET<real> | [SOURce:]SWEep[<chno>]:TIME <real> |

A.1.3 R3762/63 Commands (Commands Used for All Models)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|--|
| SWPHLD | INITiate:CONTInuous OFF;:ABORt |
| SWR | CALCulate[<chno>]:FORMat SWR |
| T3DB | MARKer[<chno>]:FANalysis:WIDTh 3DB |
| T3DEG | MARKer[<chno>]:FANalysis:WIDTh 3DEG |
| T60DB | MARKer[<chno>]:FANalysis:WIDTh 60DB |
| T6DB | MARKer[<chno>]:FANalysis:WIDTh 6DB |
| T6DEG | MARKer[<chno>]:FANalysis:WIDTh 6DEG |
| TIN | MARKer[<chno>]:FANalysis:DIRection IN |
| TITL<str> | DISPlay[:WINDow[<chno>]]:TEXT[:DATA] <str> |
| TOUT | MARKer[<chno>]:FANalysis:DIRection OUT |
| TRACK<bool> | MARKer[<chno>]:SEARch:TRACKing <bool> |
| TST? | *TST? |
| TXDB<real> | MARKer[<chno>]:FANalysis:WIDTh <real> |
| TXDEG<real> | MARKer[<chno>]:FANalysis:WIDTh <real>;:MARKer[<chno>]:SEARch[:MODE] TARGet |
| UFREQ<real> | [SOURce:]PSWeep[<chno>]:FREQuency[n] <real> |
| ULEVEL<real> | [SOURce:]PSWeep[<chno>]:POWer[n] <real> |
| UNWARP | CALCulate[<chno>]:FORMat UPHase |
| UPOINT<int> | [SOURce:]PSWeep[<chno>]:POINis[n] <int> |
| URBW<int> | [SOURce:]PSWeep[<chno>]:BANDwidth[n] <int> |
| USEG<int> | [SOURce:]PSWeep[<chno>]:FREQuency[n] <real>[,<real>] |
| USEGCL | [SOURce:]PSWeep[<chno>]:CLEar[n]:ALL |
| USETLT<real> | [SOURce:]PSWeep[<chno>]:SETTLing[n] <real> |
| USPLEV | [SOURce:]PSWeep[<chno>]:POWer[n] <real>[,<real>] |
| USRASWP | [SOURce:]PSWeep[<chno>]:MODE ALL |
| USRFSWP | [SOURce:]PSWeep[<chno>]:MODE FREQuency |
| USRSWP | [SOURce:]PSWeep[<chno>]:MODE FREQuency |
| USTART<real> | [SOURce:]PSWeep[<chno>]:FREQuency[n] <real>[,<real>] |
| USTLEV | [SOURce:]PSWeep[<chno>]:POWer[n] <real>[,<real>] |
| USTOP<real> | [SOURce:]PSWeep[<chno>]:FREQuency[n] <real>[,<real>] |
| VELOFACT<real> | [SENSe:]CORRection[<chno>]:RVELocity:COAX <real> |
| WAIT | *WAI |
| WIIT<bool> | MARKer[<chno>]:FANnalsis[:STATe] <bool> |
| WIDV<real> | MARKer[<chno>]:FANalysis:WIDTh <real> |
| YEAR<int> | SYSTem:DATE <year>,<month>,<day> |

Network Analyzer Programming Manual (Part 2)

A.1.3 R3762/63 Commands (Commands Used for All Models)

| <u>R3762/63 Commands</u> | <u>Corresponding R3764/66, R3765/67 commands</u> |
|--------------------------|--|
| ZRPSRCH | MARKer[<chno>]:SEARch:TARGet[:MODE] ZERO |
| ZYMKDFLT | MARKer[<chno>]:CONVert[:MODE] DEFault |
| ZYMKLIN | MARKer[<chno>]:CONVert[:MODE] LINear |
| ZYMKRI | MARKer[<chno>]:CONVert[:MODE] RIMaginary |

A.1.4 R3762/63 Commands (Commands Used for R3765/67G Series)

| R3762/63 Commands | Corresponding R3764/66, R3765/67 commands |
|-------------------|---|
| ACIN | [SENSe:]FUNctIon[<chno>]:POWer AC
[SENSe:]FUNctIon[<chno>][:ON] "POWer:AC:RATio 2,4" |
| BCIN | [SENSe:]FUNctIon[<chno>]:POWer BC
[SENSe:]FUNctIon[<chno>][:ON] "POWer:AC:RATio 3,4" |
| CIN | [SENSe:]FUNctIon[<chno>]:POWer C
[SENSe:]FUNctIon[<chno>][:ON] "POWer:AC 4" |
| CRIN | [SENSe:]FUNctIon[<chno>]:POWer CR
[SENSe:]FUNctIon[<chno>][:ON] "POWer:AC:RATio 4,1" |
| CDCIN | [SENSe:]FUNctIon[<chno>]:POWer CDC
[SENSe:]FUNctIon[<chno>][:ON] "POWer:DC 4" |
| CDCRIN | [SENSe:]FUNctIon[<chno>]:POWer CDCR
[SENSe:]FUNctIon[<chno>][:ON] "POWer:DC:RATio 4,1" |
| S11B | [SENSe:]FUNctIon[<chno>]:POWer S11B
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S11B" |
| S31 | [SENSe:]FUNctIon[<chno>]:POWer S31
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S31" |
| S13 | [SENSe:]FUNctIon[<chno>]:POWer S13
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S13" |
| S33B | [SENSe:]FUNctIon[<chno>]:POWer S33B
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S33B" |
| SFWDB | [SENSe:]FUNctIon[<chno>]:POWer SFWDB
[SENSe:]FUNctIon[<chno>][:ON] "POWer:SFWDB" |
| SREVB | [SENSe:]FUNctIon[<chno>]:POWer SREVB
[SENSe:]FUNctIon[<chno>][:ON] "POWer:SREVB" |
| S22C | [SENSe:]FUNctIon[<chno>]:POWer S22C
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S22C" |
| S32 | [SENSe:]FUNctIon[<chno>]:POWer S32
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S32" |
| S23 | [SENSe:]FUNctIon[<chno>]:POWer S23
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S23" |
| S33C | [SENSe:]FUNctIon[<chno>]:POWer S33C
[SENSe:]FUNctIon[<chno>][:ON] "POWer:S33C" |
| SFWDC | [SENSe:]FUNctIon[<chno>]:POWer SFWDC
[SENSe:]FUNctIon[<chno>][:ON] "POWer:SFWDC" |
| SREVC | [SENSe:]FUNctIon[<chno>]:POWer SREVC
[SENSe:]FUNctIon[<chno>][:ON] "POWer:SREVC" |
| MENUOV | DISPlay:WINDow:WIDE:HORizontal |
| SCALUP | DISPlay:WINDow:WIDE:VERTical |

Network Analyzer Programming Manual (Part 2)

A.1.4 R3762/63 Commands (Commands Used for R3765/67G Series)

| <u>R3762/63 Commands</u> | <u>Corresponding R3764/66, R3765/67 commands</u> |
|--------------------------|--|
| ANNO | DISPlay:ANNotation[:ALL] |
| MARKLS | MARKer[<chno>]:LIST:SPLit |
| BDISP0 | DISPlay:PROGram OFF |
| BDISP1 | DISPlay:PROGram ALL |
| BDISP2 | DISPlay:PROGram LOWer |
| SPANT | CALCulate[<chno>]:TRANsform:TIME:SPAN |
| TDISPT | CALCulate[<chno>]:TRANsform:TIME:DISPlay TIME |
| TDISPD | CALCulate[<chno>]:TRANsform:TIME:DISPlay DISTance |
| TDISPRT | CALCulate[<chno>]:TRANsform:TIME:DISPlay RTIME |
| TDISPRD | CALCulate[<chno>]:TRANsform:TIME:DISPlay RDISTance |

A.2 GPIB Command List Corresponding to Panel Key / Softkey

Shows the GPIB command corresponding to the panel key or the softkey.

- Describes depending on the item in the following panel.
 1. ACTIVE CHANNEL block
 2. STIMULUS block
 3. RESPONSE block
 4. INSTRUMENT STATE block
 5. GPIB block
- Explanation of "O" and "N"
 - O: IEEE488.1-1987 command mode
 - N: IEEE488.2-1987 command mode

A.2.1 ACTIVE CHANNEL Block

A.2.1 ACTIVE CHANNEL Block

1. CH1

[CH1] O: CH1
 N: DISPlay:ACTive {113 }

2. CH2

[CH2] O: CH2
 N: DISPlay:ACTive {214 }

A.2.2 STIMULUS Block

1. MENU

Signal source menu

{POWER} Calls the power menu (see step (1-1)).

{SWEEP TIME} O: STIME<real>
 STIMEAUTO
 N: [SOURce:]SWEEp[<chno>]:TIME <real>
 [SOURce:]SWEEp[<chno>]:TIME:AUTO <bool>

{SWEEP TYPE []} Calls the sweep type menu (see step (1-3)).

{TRIGGER []} Calls the trigger menu (see step (1-2)).

{POINTS} O: M{120116011301120111011b511b211111613}P / POIN<int>
 POIN<int>
 N: [SOURce:]SWEEp[<chno>]:POINts <int>

{COUPLED CH ON/OFF} O: COUPLE<bool>
 N: [SOURce:]COUPlE <bool>

{CW FREQ} O: CWFREQ<real>
 N: [SOURce:]FREQuency[<chno>]:CW <real>

{RESTART} O: MEAS
 N: ABORt;INITiate[:IMMediate]

(1-1) Power menu

{POWER} O: OUTLEV<real>
 N: [SOURCE:]POWER[<chno>][:LEVel][:AMPLitude] <real>

{Return} Returns to the signal source menu (see step (1)).

(1-2) Trigger menu

{CONTINUOUS} O: CONT
 N: INITiate:CONTInuous ON

{SINGLE} O: SINGLE
 N: INITiate:CONTInuous OFF;:ABORt;INITiate

{HOLD} O: SWPHLD
 N: INITiate:CONTInuous OFF;:ABORt

{INT TRIG} O: FREE
 N: TRIGger[:SEQuence]:SOURce IMMEDIATE

{EXT TRIG} O: EXTERN
 N: TRIGger[:SEQuence]:SOURce EXTernal

{TRIGGER DELAY} O: SETLTIME <real>
 N: TRIGger[:SEQuence]:DELay <real>

{Return} Returns to the signal source menu (see step (1)).

A.2.2 STIMULUS Block

(1-3) Sweep type menu

| | | |
|--------------------------|---|------------------------------|
| <i>{LIN FREQ}</i> | O : LINFREQ | |
| | N : [SOURCE:]FREQUENCY[<chno>]:MODE SWEEP; | } |
| | [SOURCE:]SWEEP[<chno>]:SPACING LINear | |
| <i>{LOG FREQ}</i> | O : LOGFREQ | |
| | N : [SOURCE:]FREQUENCY[<chno>]:MODE SWEEP; | } |
| | [SOURCE:]SWEEP[<chno>]:SPACING LOGarithmic | |
| <i>{USER SWEEP}</i> | O : USRFSWP | Use these commands together. |
| | N : [SOURCE:]PSWEEP[<chno>]:MODE FREQUENCY | |
| <i>{PROGRAM SWEEP}</i> | O : USRARWP | |
| | N : [SOURCE:]PSWEEP[<chno>]:MODE ALL | |
| <i>{POW SWEEP}</i> | O : LEVEL | |
| | N : [SOURCE:]POWER[<chno>]:MODE SWEEP | |
| <i>{EDIT USER SWEEP}</i> | Calls the user frequency sweep segment editing menu (see step (1-3-1)). | |
| <i>{EDIT PROG SWEEP}</i> | Calls the program sweep segment editing menu (see step (1-3-2)). | |
| <i>{Return}</i> | Returns to the signal source menu (see step (1)). | |

(1-3-1) User frequency sweep segment editing menu

{SEGMENT:NUMBER} O: USEG<n>
N: See Note.

NOTE: In IEEE488.2-1987 command mode, the segment number is specified by the parameter <n> in each GPIB command.

{START} O: USTART<start>
N: [SOURCE:]PSWeep[<chno>]:FREQuency[<n>]<start>
[,<stop>]

{STOP} O: USTOP<stop>
N: [SOURCE:]PSWeep[<chno>]:FREQuency[<n>]<start>
[,<stop>]

{FREQ} O: UFREQ<real>
N: [SOURCE:]PSWeep[<chno>]:FREQuency[<n>] <start>

{POINT} O: UPOINT<int>
N: [SOURCE:]PSWeep[<chno>]:POINts[<n>] <int>

{CLEAR SEG} O: There is no GPIB command to be applied.
N: [SOURCE:]PSWeep[<chno>]:CLEar[<n>]

{CLEAR ALL SEG} O: USEGCL
N: [SOURCE:]PSWeep[<chno>]:CLEar[<n>]:ALL

{Return}
<start> and <stop> are <real>.

A.2.2 STIMULUS Block

(1-3-2) Program sweep segment editing menu (1 of 2)

{SEGMENT: NUMBER} O: USEG<n>
N: See Note.

NOTE: In IEEE488.2-1987 command mode, the segment number is specified by the parameter <n> in each GPIB command.

{START} O: USTART<start> / UFREQ<real>
N: [SOURCE:]PSweep[<chno>]:FREQUENCY[<n>]
<start>[,<stop>]

{STOP} O: USTOP<stop>
N: [SOURCE:]PSweep[<chno>]:FREQUENCY[<n>]
<start>[,<stop>]

{POINT} O: UPOINT<int>
N: [SOURCE:]PSweep[<chno>]:POINTS[<n>] <int>

{CLEAR SEG} O: There is no GPIB command to be applied.
N: [SOURCE:]PSweep[<chno>]:CLEAR[<n>]

{CLEAR ALL SEG} O: USEGCL
N: [SOURCE:]PSweep[<chno>]:CLEAR[<n>]:ALL

{Return} Returns to the sweep type menu (see step (1-3)).

{More 1/2} Calls the program sweep segment editing menu (2 of 2).
<start> and <stop> are real.

Program sweep segment editing menu (2 of 2)

{SEGMENT: POWER} O: ULEVEL <real>
N: [SOURCE:]PSweep[<chno>]:POWER[<n>] <real>

{IF RBW} O: URBW <int>
N: [SOURCE:]PSweep[<chno>]:BANDWIDTH[<n>] <int>

{SETTLING TIME} O: USETLT <real>
N: [SOURCE:]PSweep[<chno>]:SETTLING[<n>] <real>

{Return} Returns to the sweep type menu (see step (1-3)).

{More 2/2} Calls the program sweep segment editing menu (1 of 2).

2. START

[START]O: STARTF <real>
STLEVEL <real>N: [SOURCE:]FREQUENCY[<chno>]:START <real>
[SOURCE:]POWER[<chno>]:START <real>

3. STOP

[STOP]O: STOPF <real>
STLEVEL <real>N: [SOURCE:]FREQUENCY[<chno>]:STOP <real>
[SOURCE:]POWER[<chno>]:STOP <real>

4. CENTER

[CENTER]

O: CENTERF <real>

N: [SOURCE:]FREQUENCY[<chno>]:CENTER <real>

5. SPAN

[SPAN]

O: SPANF <real>

N: [SOURCE:]FREQUENCY[<chno>]:SPAN <real>

A.2.3 RESPONSE Block

A.2.3 RESPONSE Block

1. MEAS

Measurement menu

1. R3765A/67A+S parameter, R3765C/67C

| | |
|-----------------------------|--|
| <i>{S11(A/R) REFL FWD}</i> | O : S11
N : [SENSe:]FUNction[<chno>][:ON] 'POWer:S11'
[SENSe:]FUNction[<chno>]:POWer S11 |
| <i>{S21(B/R) TRANS FWD}</i> | O : S21
N : [SENSe:]FUNction[<chno>][:ON] 'POWer:S21'
[SENSe:]FUNction[<chno>]:POWer S21 |
| <i>{S12(A/R) TRANS REV}</i> | O : S12
N : [SENSe:]FUNction[<chno>][:ON] 'POWer:S12'
[SENSe:]FUNction[<chno>]:POWer S12 |
| <i>{S22(B/R) REFL REV}</i> | O : S22
N : [SENSe:]FUNction[<chno>][:ON] 'POWer:S22'
[SENSe:]FUNction[<chno>]:POWer S22 |
| <i>{S11&S21 FWD}</i> | O : There is no GPIB command to be applied.
N : [SENSe:]FUNction[<chno>][:ON] 'POWer:SFWD'
[SENSe:]FUNction[<chno>]:POWer SFWD |
| <i>{S22&S12 REV}</i> | O : There is no GPIB command to be applied.
N : [SENSe:]FUNction[<chno>][:ON] 'POWer:SREV'
[SENSe:]FUNction[<chno>]:POWer SREV |
| <i>{SUB MEAS ON/OFF}</i> | |
| <i>{CONVERSION []}</i> | Calls the parameter conversion menu (see step (1-1)). |

2. R3765A/67A

{A/R}

O : ARIN

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:AC:RATIo2,1'
[SENSe:]FUNctIon[<chno>]:POWER AR*{B/R}*

O : BRIN

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:AC:RATIo3,1'
[SENSe:]FUNctIon[<chno>]:POWER BR*{R}*

O : RIN

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:AC1'
[SENSe:]FUNctIon[<chno>]:POWER R*{A}*

O : AIN

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:AC2'
[SENSe:]FUNctIon[<chno>]:POWER A*{B}*

O : BIN

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:AC3'
[SENSe:]FUNctIon[<chno>]:POWER B*{SUB MEAS ON/OFF}**{CONVERSION []}*

Calls the parameter conversion menu (see step (1-1)).

3. R3765B/67B

{REFLECTION}

O : S11

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:S11'
[SENSe:]FUNctIon[<chno>]:POWER S11*{TRANSMISSION}*

O : S21

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:S21'
[SENSe:]FUNctIon[<chno>]:POWER S21*{TRANS & REFL}*

O : There is no GPIB command to be applied.

N : [SENSe:]FUNctIon[<chno>][:ON] 'POWER:SFWD'
[SENSe:]FUNctIon[<chno>]:POWER SFWD*{SUB MEAS ON/OFF}**{CONVERSION []}*

Calls the parameter conversion menu (see step (1-1)).

A.2.3 RESPONSE Block

(1-1) Parameter conversion menu

| | |
|-------------------|---|
| <i>{Z(REFL)}</i> | O: CONVRZ
N: CALCulate[<chno>]:TRANSform:IMPedance:TYPE ZRE-
Flection |
| <i>{Z(TRANS)}</i> | O: CONVTZ
N: CALCulate[<chno>]:TRANSform:IMPedance:TYPE
ZTRansmit |
| <i>{Y(REFL)}</i> | O: CONVRY
N: CALCulate[<chno>]:TRANSform:IMPedance:TYPE YRE-
Flection |
| <i>{Y(TRANS)}</i> | O: CONVTY
N: CALCulate[<chno>]:TRANSform:IMPedance:TYPE
YTRansmit |
| <i>{1/S}</i> | O: CONVIDS
N: CALCulate[<chno>]:TRANSform:IMPedance:TYPE
INVersion |
| <i>{OFF}</i> | O: CONVOFF
N: CALCulate[<chno>]:TRANSform:IMPedance:TYPE
NONE |
| <i>{Z0 VALUE}</i> | O: SETZ0 <real> / MKRZO{50 75}
N: CALCulate[<chno>]:TRANSform:IMPedance:
CIMPedance<real> |
| <i>{Return}</i> | Returns to the measurement menu (see step (1)). |

2. FORMAT

Format menu (1 of 2)

{LOG MAG}

O : LOGMAG

N : CALCulate[<chno>]:FORMat MLOGarithmic

{PHASE}

O : PHASE

N : CALCulate[<chno>]:FORMat PHASE

{DELAY}

O : DELAY

N : CALCulate[<chno>]:FORMat GDELAY

{SMITH (R+jX)}

O : SRJX

N : CALCulate[<chno>]:FORMat SCHart

{SMITH (G+jB)}

O : SGJB

N : CALCulate[<chno>]:FORMat ISCHart

{POLAR}

O : POLAR

N : CALCulate[<chno>]:FORMat POLar

{LIN MAG}

O : LINMAG

N : CALCulate[<chno>]:FORMat MLINear

{More 1/2}

Calls the format menu (2 of 2).

Network Analyzer Programming Manual (Part 2)

A.2.3 RESPONSE Block

Format menu (2 of 2)

| | |
|------------------------------|--|
| <i>{SWR}</i> | O: SWR
N: CALCulate[<chno>]:FORMat SWR |
| <i>{REAL}</i> | O: REAL
N: CALCulate[<chno>]:FORMat REAL |
| <i>{IMAG}</i> | O: IMAG
N: CALCulate[<chno>]:FORMat IMAGinary |
| <i>{PHASE-∞,+∞}</i> | O: UNWRAP
N: CALCulate[<chno>]:FORMat UPHase |
| <i>{LOG MAG & PHASE}</i> | O: LOGMP
N: CALCulate[<chno>]:FORMat MLOPhase |
| <i>{LOG MAG & DELAY}</i> | O: LOGMD
N: CALCulate[<chno>]:FORMat MLODelay |
| <i>{LIN MAG & PHASE}</i> | O: LINMP
N: CALCulate[<chno>]:FORMatM LIPhase |
| <i>{More 2/2}</i> | Calls the format menu (1 of 2). |

3. SCALE

Scale menu

| | |
|------------------------------|---|
| <i>{AUTO SCALE}</i> | O: AUTO
N: DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:AUTO ONCE |
| <i>{DIV}</i> | O: SDIV <real>
N: DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:PDIVision <real> |
| <i>{REF VALUE}</i> | O: REFV <real>
N: DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:RLEVel <real> |
| <i>{REF POS}</i> | O: REFP <real>
N: DISPlay[:WINDow[<chno>]]:Y[<trace>][:SCALe]:RPOSition <real> |
| <i>{REF LINE}</i> | O: REFL <bool>
N: DISPlay[:WINDow[<chno>]]:Y[<trace>]RLINE <bool> |
| <i>{SCALE FOR 2nd / 1st}</i> | O: SCALF{1ST 2ND}
N: See Note. |

NOTE: In IEEE488.2-1987 command mode, TRACE is selected by the parameter <trace> in each GPIB command.

<trace>= 0,1,4,5,8,9,12,13
 (0:CH1 TRACE 1st,
 1:CH2 TRACE 1st,
 4:CH3 TRACE 1st,
 5:CH4 TRACE 1st,
 8:CH1 TRACE 2nd,
 9:CH2 TRACE 2nd,
 12:CH3 TRACE 2nd,
 13:CH4 TRACE 2nd)

A.2.3 RESPONSE Block

4. DISPLAY

Display menu (1 of 2)

- {DUAL CH ON/OFF}* O: DUAL <bool>
N: DISPlay:DUAL <bool>
- {SPLIT CH ON/OFF}* O: SPLIT <bool>
N: DISPlay:FORMat {ULOWer|FBACK} (See Note.)

*NOTE: SPLIT CH:
ULOWer;Split display
FBACK;Over-wrap display*

- {DISPLAY DATA}* O: DISPDATA
N: DISPlay[:WINDow[<chno>]]:TRACe:ASSign DATA
- {DISPLAY MEMORY}* O: DISPMEM
N: DISPlay[:WINDow[<chno>]]:TRACe:ASSign MEMory
- {DISPLAY DATA & MEM}* O: DISPDM
N: DISPlay[:WINDow[<chno>]]:TRACe:ASSign DMEMory
- {DEFINE TRACE []}* Calls the trace operation menu (see step (4-2)).
- {DATA → MEMORY}* O: DTOM
N: TRACe[<chno>]:COPY DATA
- {More 1/2}* Calls the display menu (2 of 2).

Display menu (2 of 2)

- {GRATICULE ON/OFF}* O: GRAT <bool>
N: DISPlay[:WINDow[<chno>]]:TRACe:GRATicule[:STATe] <bool>
- {LABEL}* Calls the label menu (see step (4-1)).
- {COLOR}* No GPIB commands are available.
- DEFAULT COLOR* No GPIB commands are available.
- {More 2/2}* Calls the display menu (1 of 2).

(4-1) Label menu

| | |
|----------------------|--|
| <i>{DONE}</i> | O : LABEL <str>
N : DISPlay[:WINDow[<chno>]:TEXT[:DATA] {<str> <block>} |
| <i>{CURSOR →}</i> | There is no GPIB command to be applied. |
| <i>{CURSOR ←}</i> | There is no GPIB command to be applied.B |
| <i>{BACKSPACE}</i> | There is no GPIB command to be applied. |
| <i>{DELETE CHAR}</i> | There is no GPIB command to be applied. |
| <i>{CLEAR LINE}</i> | There is no GPIB command to be applied. |
| <i>{CANCEL}</i> | Calls the display menu (2 of 2) (see step (4)). |

(4-2) Trace operation menu

| | |
|-------------------|---|
| <i>{DATA/MEM}</i> | O : DISPDDM ON
N : CALCulate[<chno>]:MATH[:EXPRession]:NAME DDM |
| <i>{DATA-MEM}</i> | O : There is no GPIB command to be applied.
N : CALCulate[<chno>]:MATH[:EXPRession]:NAME DSM |
| <i>{DATA*MEM}</i> | O : There is no GPIB command to be applied.
N : CALCulate[<chno>]:MATH[:EXPRession]:NAME DMM |
| <i>{DATA+MEM}</i> | O : There is no GPIB command to be applied.
N : CALCulate[<chno>]:MATH[:EXPRession]:NAME DAM |
| <i>{OFF}</i> | O : DISPDDM OFF
N : CALCulate[<chno>]:MATH[:EXPRession]:NAME NONE |
| <i>{Return}</i> | Returns to the display menu (1 of 2) (see step (4)). |

A.2.3 RESPONSE Block

5. AVG

Average menu

{AVG STATE ON/OFF} O : AVER <bool>
 N : [SENSe:]AVERAge[<chno>][:STATe] <bool>

{AVG COUNT} O : AVERFACT <int>/ AVR{2|4|8|16|32|64|128}
 N : [SENSe:]AVERAge[<chno>]:COUNT <int>

{AVG RESTART} O : AVERREST
 N : [SENSe:]AVERAge[<chno>]:REStArt

{GROUP DELAY APERTURE}
 O : APERTP <real>
 N : CALCulate[<chno>]:GDAPerture:APERTure <real>

{SMOOTHING ON/OFF} O : SMOO <bool>
 N : CALCulate[<chno>]:SMOothing:STATe <bool>

{SMOOTHING APERTURE} O : SMOOAPER <REAL>
 N : CALCulate[<chno>]:SMOothing:APERTure <real>

{IF RBW[]} O : RBW <int> / RBW-1K {300|100|30|10}HZ /
 RBWAUTO
 N : [SENSe:]BANDwidth[<chno>][:RESolution] <real>
 [SENSe:]BANDwidth[<chno>][:RESolution]:AUTO
 <bool>

6. CAL

Calibration menu (1 of 2)

| | |
|-----------------------------|---|
| <i>{NORMALIZE (THRU)}</i> | O : NORM ON
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] NORMalize |
| <i>{NORMALIZE (SHORT)}</i> | O : NORMS ON
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] SNORmalize |
| <i>{CAL MENU}</i> | Calls the full calibration selection menu (see step (6-1)). |
| <i>{CORRECT ON/OFF}</i> | O : CORRECT <bool>
N : [SENSe:]CORRection[<chno>]:CSET:STATe <bool> |
| <i>{INTERPOLATE ON/OFF}</i> | O : INTERPOL
N : [SENSe:]CORRection[<chno>]:CSET:INTerpolate <bool> |
| <i>{PORT EXTENSION}</i> | Calls the port extension menu (see step (6-4)). |
| <i>{Z0 VALUE}</i> | O : SETZ0 <real> / MKRZO{50 75}
N : CALCulate[<chno>]:TRANSform:IMPedance: CIMPedance <real> |
| <i>{More 1/2}</i> | Calls the calibration menu (2 of 2). |

Calibration menu (2 of 2)

| | |
|-----------------------------|---|
| <i>{ELEC DELAY ON/OFF}</i> | O : LENGTH <bool>
N : [SENSe:]CORRection[<chno>]:EDELay:STATe <bool> |
| <i>{ELECTRICAL DELAY}</i> | O : ELED <real>
N : [SENSe:]CORRection[<chno>]:EDELay[:TIME] <real> |
| <i>{ELECTRICAL LENGTH}</i> | O : LENGVAL <real>
N : [SENSe:]CORRection[<chno>]:EDELay:DISTance <real> |
| <i>{VELOCITY FACTOR}</i> | O : VELOFACT <real>
N : [SENSe:]CORRection[<chno>]:RVELocity:COAX <real> |
| <i>{PHASE OFFSET VALUE}</i> | O : PHAO
N : [SENSe:]CORRection[<chno>]:OFFSet:PHASe <real> |
| <i>{PHASE SLOPE}</i> | O : PHASLO <real>
N : [SENSe:]CORRection[<chno>]:SLOPe:PHASe <real> |
| <i>{More 2/2}</i> | Calls the calibration menu (1 of 2). |

Network Analyzer Programming Manual (Part 2)

A.2.3 RESPONSE Block

(6-1) Full calibration selection menu

| | |
|-------------------------|--|
| <i>{1PORT FULL CAL}</i> | Calls the 1 port full calibration menu (see step (6-1-1)). |
| <i>{2PORT FULL CAL}</i> | Calls the 2 port full calibration menu (see step (6-2-1)). |
| <i>{CAL KIT []}</i> | Calls the calibration kit menu (see step (6-3-1)). |
| <i>{CLEAR CAL DATA}</i> | O : CLEAR
N : [SENSe:]CORRection[<chno>]:COLLect:DELeTe |
| <i>{Return}</i> | Returns to the calibration menu (1 of 2) (see step (6)) |

(6-1-1) 1 port full calibration menu

| | |
|----------------------|---|
| <i>{OPEN}</i> | O : OPEN
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] OPEN |
| <i>{SHORT}</i> | O : SHORT
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] SHORT |
| <i>{LOAD}</i> | O : LOAD
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] LOAD |
| <i>{DONE 1-PORT}</i> | O : DONE / DONE1PORT
N : [SENSe:]CORRection[<chno>]:COLLect:SAVE |

(6-2-1) 2 port full calibration menu

| | |
|------------------------|---|
| <i>{REFLECT'N}</i> | Calls the reflection menu (see step (6-2-2)). |
| <i>{TRANS-MISSION}</i> | Calls the transmission menu (see step (6-2-3)). |
| <i>{ISOLATION}</i> | Calls the isolation menu (see step (6-2-4)). |
| <i>{DONE 2-PORT}</i> | O : DONE
N : [SENSe:]CORRection[<chno>]:COLLect:SAVE |

(6-2-2) Reflection menu

| | |
|-------------------------|--|
| <i>{S11:OPEN}</i> | O : S11OPEN
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
S11Open |
| <i>{S11:SHORT}</i> | O : S11SHORT
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
S11Short |
| <i>{S11:LOAD}</i> | O : S11LOAD
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
S11Load |
| <i>{S22:OPEN}</i> | O : S22OPEN
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
S22Open |
| <i>{S22:SHORT}</i> | O : S22SHORT
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
S22Short |
| <i>{S22:LOAD}</i> | O : S22LOAD
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire]
S22Load |
| <i>{DONE REFLECT'N}</i> | O : DONEREFL
N : [SENSe:]CORRection[<chno>]:COLLect:SAVE |

A.2.3 RESPONSE Block

(6-2-3) Transmission menu

| | |
|-------------------------|---|
| <i>{FWD.TRANS THRU}</i> | O : FWDTRNS
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] FTRansmit |
| <i>{FWD.MATCH THRU}</i> | O : FWDMATCH
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] FMATCh |
| <i>{REV.TRANS THRU}</i> | O : REVTRNS
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] RTRansmit |
| <i>{REV.MATCH THRU}</i> | O : REVMATCH
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] RMATCh |
| <i>{GROUP THRU}</i> | O : There is no GPIB COMMAND to be applied.
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] GTHRU |
| <i>{DONE TRANS}</i> | O : DONE
N : [SENSe:]CORRection[<chno>]:COLLect:SAVE |

(6-2-4) Isolation menu

| | |
|-------------------------|--|
| <i>{OMIT ISOLATION}</i> | O : OMITISO
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] OISolation |
| <i>{FWD.ISOL'N}</i> | O : FWDISO
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] FISo-
lation |
| <i>{REV.ISOL'N}</i> | O : REVISO
N : [SENSe:]CORRection[<chno>]:COLLect[:ACQuire] RISolation |
| <i>{DONE ISOLATION}</i> | O : DONEISO
N : [SENSe:]CORRection[<chno>]:COLLect:SAVE |

(6-3-1) Calibration kit menu

| | |
|--------------------|---|
| <i>{N(50Ω)}</i> | O: CKIT1
N: [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 1 |
| <i>{N(75Ω)}</i> | O: CKIT2
N: [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 2 |
| <i>{3.5mm}</i> | O: CKIT3
N: [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 3 |
| <i>{7mm}</i> | O: CKIT4
N: [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 4 |
| <i>{DONT CARE}</i> | O: CKIT0
N: [SENSe:]CORRection[<chno>]:CKIT[:TYPE] 0 |
| <i>{Return}</i> | Returns to the calibration menu (see step (6)). |

(6-3-2) FEMAL/MAL selection menu

| | |
|---------------------------|--|
| <i>{PORT 1 FEMAL/MAL}</i> | O: PORT1 FEM/PORT1 MAL
N: [SENSe:]CORRection[<chno>]:CKIT:TERMiNal1 FEMale
N: [SENSe:]CORRection[<chno>]:CKIT:TERMiNal1 MALE |
| <i>{PORT 2 FEMAL/MAL}</i> | O: PORT2 FEM/PORT2 MAL
N: [SENSe:]CORRection[<chno>]:CKIT:TERMiNal2 FEMale
N: [SENSe:]CORRection[<chno>]:CKIT:TERMiNal2 MALE |
| <i>{Return}</i> | Calls the calibration kit menu (see step (6-3-1)). |

A.2.3 RESPONSE Block

(6-4) Port extension menu

| | |
|----------------------------|---|
| <i>{EXTENSION ON/OFF}</i> | O : PORE <bool> |
| | N : [SENSe:]CORRection[<chno>]:PEXTension:STATe
<bool> |
| <i>{EXTENSION INPUT R}</i> | O : EPORTR <real> |
| | N : [SENSe:]CORRection[<chno>]:PEXTension:TIME1
<real> |
| <i>{EXTENSION INPUT A}</i> | O : EPORTA <real> |
| | N : [SENSe:]CORRection[<chno>]:PEXTension:TIME2
<real> |
| <i>{EXTENSION INPUT B}</i> | O : EPORTB <real> |
| | N : [SENSe:]CORRection[<chno>]:PEXTension:TIME3
<real> |
| <i>{EXTENSION PORT 1}</i> | O : EPORT1 <real> |
| <i>(Note)</i> | N : [SENSe:]CORRection[<chno>]:PEXTension:TIME4
<real> |
| <i>{EXTENSION PORT 2}</i> | O : EPORT2 <real> |
| <i>(Note)</i> | N : [SENSe:]CORRection[<chno>]:PEXTension:TIME5
<real> |
| <i>{Return}</i> | Returns to the calibration menu (2 of 2). |

NOTE: This can be set in case of R3765A/67A+S parameter, R3765C/67C and R3765B/67B.

7. MKR

Marker menu

| | |
|------------------------------|---|
| <i>{ACTIVATE MARKER []}</i> | Calls the active marker menu (1 of 2) (see step (7-1)). |
| <i>{MARKER ALL OFF}</i> | O : MKRAOFF
N : MARKer[<chno>]:AOFF |
| <i>{ΔMODE MENU}</i> | Calls the delta mode menu (see step (7-2)). |
| <i>{MKR LIST ON/OFF}</i> | O : There is no GPIB command to be applied.
N : MARKer[<chno>]:LIST <bool> |
| <i>{MARKER MODE MENU}</i> | Calls the marker mode menu (see step (7-3)). |

To acquire the marker data, use the following commands.

O: MKR {1|2|3|4|5|6|7|8|9|10}A?
N: FETch[<chno>]:MARKer[:ACTivate]?
FETch[<chno>]:MARKer:NUMBER<n>?

A.2.3 RESPONSE Block

(7-1) Active marker menu (1 of 2)

| | |
|---------------------------|---|
| <i>{MARKER 1}</i> | O : MKR1A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 1[,<real>] |
| <i>{MARKER 2}</i> | O : MKR2A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 2[,<real>] |
| <i>{MARKER 3}</i> | O : MKR3A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 3[,<real>] |
| <i>{MARKER 4}</i> | O : MKR4A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 4[,<real>] |
| <i>{MARKER 5}</i> | O : MKR5A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 5[,<real>] |
| <i>{ACTIVATE MKR OFF}</i> | O : MKROFF
N : MARKer[<chno>]:ACTivate:STATe <bool> |
| <i>{Return}</i> | Returns to the marker menu (see step (7)). |
| <i>{More 1/2}</i> | Calls the active marker menu (2 of 2). |

Active marker menu (2 of 2)

| | |
|---------------------------|---|
| <i>{MARKER 6}</i> | O : MKR6A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 6[,<real>] |
| <i>{MARKER 7}</i> | O : MKR7A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 7[,<real>] |
| <i>{MARKER 8}</i> | O : MKR8A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 8[,<real>] |
| <i>{MARKER 9}</i> | O : MKR9A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 9[,<real>] |
| <i>{MARKER 10}</i> | O : MKR10A <real>
N : MARKer[<chno>]:ACTivate[:NUMBER] 10[,<real>] |
| <i>{ACTIVATE MKR OFF}</i> | O : MKROFF
N : MARKer[<chno>]:ACTivate:STATe <bool> |
| <i>{Return}</i> | Returns to the marker menu (see step (7)). |
| <i>{More 2/2}</i> | Calls the active marker menu (1 of 2). |

| | |
|-----------------------------|--|
| (7-2) Delta mode menu | |
| <i>{ΔMODE OFF}</i> | O: DMKROF
N: MARKer[<chno>]:DELTA[:MODE] OFF |
| <i>{ΔREF=ΔMKR}</i> | O: DMKRC
N: MARKer[<chno>]:DELTA[:MODE] CHILd |
| <i>{ΔREF=ACT MKR}</i> | Calls the ACT MKR menu (see step (7-2-1)).
O: DMKRA
N: MARKer[<chno>]:DELTA[:MODE] COMPare |
| <i>{ΔREF=FIXED MKR}</i> | O: DMKRF
N: MARKer[<chno>]:DELTA[:MODE] FIXed |
| <i>{FIXED MKR POSITION}</i> | Calls FIXED MKR setting menu (see step (7-2-2)). |
| <i>{Return}</i> | Returns to the marker menu (see step (7)). |

NOTE: Select the compare marker before setting the delta mode to *ΔREF=ACT MKR*.
(See ACT MKR menu.)

| | |
|-------------------------------|--|
| (7-2-1) ACT MKR menu (1 of 2) | |
| <i>{COMPARE MARKER 1}</i> | O: DMKR1O <real>
N: MARKer[<chno>]:DELTA:COMPare 1[,<real>] |
| <i>{COMPARE MARKER 2}</i> | O: MKR2O <real>
N: MARKer[<chno>]:DELTA:COMPare 2[,<real>] |
| <i>{COMPARE MARKER 3}</i> | O: DMKR3O <real>
N: MARKer[<chno>]:DELTA:COMPare 3[,<real>] |
| <i>{COMPARE MARKER 4}</i> | O: DMKR4O <real>
N: MARKer[<chno>]:DELTA:COMPare 4[,<real>] |
| <i>{COMPARE MARKER 5}</i> | O: DMKR5O <real>
N: MARKer[<chno>]:DELTA:COMPare 5[,<real>] |
| <i>{ACTIVATE MARKER []}</i> | Calls the active marker menu (1 of 2) (see step (7-1)). |
| <i>{Return}</i> | Returns to the delta mode menu (see step (7-2)). |
| <i>{More 1/2}</i> | Calls ACT MKR menu (2 of 2). |

A.2.3 RESPONSE Block

ACT MKR menu (2 of 2)

| | |
|------------------------------|--|
| <i>{COMPARE MARKER 6}</i> | O: DMKR6O <real>
N: MARKer[<chno>]:DELTA:COMPare 6[,<real>] |
| <i>{COMPARE MARKER 7}</i> | O: DMKR7O <real>
N: MARKer[<chno>]:DELTA:COMPare 7[,<real>] |
| <i>{COMPARE MARKER 8}</i> | O: DMKR8O <real>
N: MARKer[<chno>]:DELTA:COMPare 8[,<real>] |
| <i>{COMPARE MARKER 9}</i> | O: DMKR9O <real>
N: MARKer[<chno>]:DELTA:COMPare 9[,<real>] |
| <i>{COMPARE MARKER 10}</i> | O: DMKR10O <real>
N: MARKer[<chno>]:DELTA:COMPare 10[,<real>] |
| <i>{ACTIVATE MARKER []}</i> | Calls the active marker menu (1 of 2) (see step (7-1)). |
| <i>{Return}</i> | Returns to the delta mode menu (see step (7-2)). |
| <i>{More 2/2}</i> | Calls ACT MKR menu (1 of 2). |

(7-2-2) FIXED MKR setting menu (1 of 2)

| | |
|-------------------------------|---|
| <i>{FIXED MKR STIMULUS}</i> | O: FMKRS <real>
N: MARKer[<chno>]:FIXed:STIMulus <real> |
| <i>{FIXED MKR VALUE}</i> | O: FMKRV <real>
N: MARKer[<chno>]:FIXed:VALue <real> |
| <i>{FIXED MKR AUX VALUE}</i> | O: There is no GPIB command to be applied.
N: MARKer[<chno>]:FIXed:AVALue <real> |
| <i>{FIXED MKR→ACTIVE MKR}</i> | O: MKRFIX
N: MARKer[<chno>]:LET FIXed |
| <i>{Return}</i> | Returns to the delta mode menu (see step (7-2)). |

(7-3) Marker mode menu

| | |
|----------------------------------|---|
| <i>{MKR CMP/UNCMP}</i> | O : MKRCMP/ MKRUCMP
N : MARKer[<chno>]:COMPensate <bool> |
| <i>{MKR CPL/UNCPL}</i> | O : MKRCOUP/ MKRUCOUP
N : MARKer[<chno>]:COUPle <bool> |
| <i>{CONVERSION MKR MENU []}</i> | Calls the conversion marker menu (see step (7-3-1)). |
| <i>{SMITH MKR MENU []}</i> | Calls the smith marker menu (see step (7-3-2)). |
| <i>{POLAR MKR MENU []}</i> | Calls the polar marker menu (see step (7-3-3)). |
| <i>{Return}</i> | Returns to the marker menu (see step (7)). |

(7-3-1) Conversion marker menu

| | |
|------------------|--|
| <i>{DEFAULT}</i> | O : ZYMKDFLT
N : MARKer[<chno>]:CONVert[:MODE] DEFault |
| <i>{LIN MKR}</i> | O : ZYMKLIN
N : MARKer[<chno>]:CONVert[:MODE] LINear |
| <i>{Re/Im}</i> | O : ZYMKRI
N : MARKer[<chno>]:CONVert[:MODE] RIMaginary |
| <i>{Return}</i> | Returns to the marker mode menu (see step (7-3)). |

A.2.3 RESPONSE Block

(7-3-2) Smith marker menu

| | |
|--------------------|--|
| <i>{LIN MKR}</i> | O : SMKRLIN
N : MARKer[<chno>]:SMITH MLINear |
| <i>{LOG MKR}</i> | O : SMKRLOG
N : MARKer[<chno>]:SMITH MLOGarithmic |
| <i>{Re/Im MKR}</i> | O : SMKRRRI
N : MARKer[<chno>]:SMITH RIMaginary |
| <i>{R+jX MKR}</i> | O : SMKRRRX
N : MARKer[<chno>]:SMITH IMPedance |
| <i>{G+jB MKR}</i> | O : SMKRGB
N : MARKer[<chno>]:SMITH ADMittance |
| <i>{Z0 VALUE}</i> | O : SETZ0 <real> / MKRZO{50 75}
N : CALCulate[<chno>]:TRANSform:IMPedance:
CIMPedance <real> |
| <i>{Return}</i> | Returns to the marker mode menu (see step (7-3)). |

(7-3-3) Polar marker menu

| | |
|--------------------|--|
| <i>{LIN MKR}</i> | O : PMKRLIN
N : MARKer[<chno>]:POLar MLINear |
| <i>{LOG MKR}</i> | O : PMKRLOG
N : MARKer[<chno>]:POLar MLOGarithmic |
| <i>{Re/Im MKR}</i> | O : PMKRRRI
N : MARKer[<chno>]:POLar RIMaginary |
| <i>{Z0 VALUE}</i> | O : SETZ0 <real> / MKRZO{50 75}
N : CALCulate[<chno>]:TRANSform:IMPedance:
CIMPedance <real> |
| <i>{Return}</i> | Returns to the marker mode menu (see step (7-3)). |

8. MKR→

Marker search menu

| | |
|-----------------------------|---|
| <i>{MARKER → START}</i> | O: MKRSTAR
N: MARKer[<chno>]:LET START |
| <i>{MARKER → STOP}</i> | O: MKRSTOP
N: MARKer[<chno>]:LET STOP |
| <i>{MARKER → CENTER}</i> | O: MKRCENT
N: MARKer[<chno>]:LET CENTER |
| <i>{MARKER → SPAN}</i> | O: MKRSPAN
N: MARKer[<chno>]:LET SPAN |
| <i>{MARKER → REF.VALUE}</i> | O: MKRREF
N: MARKer[<chno>]:LET RLEVeI |
| <i>{PART SRCH []}</i> | Calls the partial search menu (see step (8-1)). |
| <i>{MKR SEARCH []}</i> | Calls the search menu (see step (8-2)). |

(8-1) Partial search menu

| | |
|-------------------------|---|
| <i>{ΔMODE MENU}</i> | Calls the delta mode menu (see step (7-2)). |
| <i>{SET RANGE}</i> | O: There is no GPIB command to be applied.
N: MARKer[<chno>]:SEARCh:PARTial:SRANge |
| <i>{STATISTICS []}</i> | O: MKRSTAT <bool>
N: MARKer[<chno>]:STATistics <bool> |
| <i>{PART SRCH []}</i> | O: MKRPART <bool>
N: MARKer[<chno>]:SEARCh:PARTial[:STATe] <bool> |
| <i>{Return}</i> | Returns to the marker search menu (see step (8)). |

NOTE: To obtain the analysis result, use the following:

O: REPSTAT?

N: FETCh[<chno>][:MARKer]:STATistics?

A.2.3 RESPONSE Block

(8-2) Search menu

| | |
|--------------------------|---|
| <i>{MKR SEARCH OFF}</i> | O : SRCHOFF
N : MARKer[<chno>]:SEARch[:MODE] OFF |
| <i>{MAX}</i> | O : MAXSRCH
N : MARKer[<chno>]:SEARch[:MODE] MAX |
| <i>{MIN}</i> | O : MINSRCH
N : MARKer[<chno>]:SEARch[:MODE] MIN |
| <i>{TARGET}</i> | Calls the target menu (see step (8-2-1)).
O : ZRPSRCH (0° SEARCH)
N : MARKer[<chno>]:SEARch[:MODE] TARGET |
| <i>{RIPPLE}</i> | Calls the ripple menu (see step (8-2-2)).
O : DRIPPL1
N : MARKer[<chno>]:SEARch[:MODE] RIPPLE |
| <i>{FLTR ANAL}</i> | Calls the filter analysis menu (see step (8-2-3)). |
| <i>{TRACKING ON/OFF}</i> | O : MKRTRAC <bool>
N : MARKer[<chno>]:SEARch:TRACking <bool> |
| <i>{Return}</i> | Returns to the marker search menu (see step (8)). |

(8-2-1) Target menu

| | |
|-----------------------|--|
| <i>{TARGET VALUE}</i> | O : There is no command to be applied.
N : MARKer[<chno>]:SEARch:TARGet[:MODE] VALue
MARKer[<chno>]:SEARch:TARGet:VALue <real> |
| <i>{0°}</i> | O : ZRPSRCH
N : MARKer[<chno>]:SEARch:TARGet[:MODE] ZERO |
| <i>{±180°}</i> | O : There is no command to be applied.
N : MARKer[<chno>]:SEARch:TARGet[:MODE] PI |
| <i>{LEFT SEARCH}</i> | O : There is no command to be applied.
N : MARKer[<chno>]:SEARch:TARGet:LEFT |
| <i>{RIGHT SEARCH}</i> | O : There is no command to be applied. |
| <i>{Return}</i> | Returns to the search menu (see step (8-2)). |

(8-2-2) Ripple menu

| | |
|-----------------------|---|
| <i>{MAX ∩}</i> | O: There is no command to be applied.
N: MARKer[<chno>]:SEARch:RIPPlE[:MODE] MAX |
| <i>{MIN ∪}</i> | O: There is no command to be applied.
N: MARKer[<chno>]:SEARch:RIPPlE[:MODE] MIN |
| <i>{ΔMAX ∩-MIN ∪}</i> | O: DRIPPL1
N: MARKer[<chno>]:SEARch:RIPPlE[:MODE] BOTH |
| <i>{MAX-MIN}</i> | O: DMAXMIN
N: MARKer[<chno>]:SEARch:RIPPlE[:MODE] PPEak |
| <i>{ΔX}</i> | O: DLTx <real>
N: MARKer[<chno>]:SEARch:RIPPlE:DX <real> |
| <i>{ΔY}</i> | O: DLTy <real>
N: MARKer[<chno>]:SEARch:RIPPlE:DY <real> |
| <i>{Return}</i> | Returns to the search menu (see step (8-2)). |

A.2.3 RESPONSE Block

(8-2-3) Filter analysis menu

{WIDTH VALUE} O: T{3|6|60}DB/ T{3|6}DEG/ TXDB <real>/ TXDEG <real>
 N: MARKer[<chno>]:FANalysis:WIDTh <real>

{FILTER TYPE BAND/NOTCH} O: {FANABANDIFANANOTCH }
 N: MARKer[<chno>]:FANalysis:TYPE{BAND|NOTCh }

{SEARCH FROM []} Calls the search reference menu (see step (8-2-4)).

{DISPLAY MODE ABS/REL} O: FANAABSIFANAREL
 N: MARKer[<chno>]:FANalysis:FORMat {ABSolutel RELative }

{SEARCH IN/OUT} O: TIN/ TOUT
 N: MARKer[<chno>]:FANalysis:DIRectiOn {INIOUT}

{FILTER ANAL []} O: FLTANA <bool>
 N: MARKer[<chno>]:FANalysis[:STATe] <bool>

{Return} Returns to the search menu (see step (8-2)).

The filter analysis data can be acquired using the following command.

O: TXDB?/ TXDEG?
 N: FETch[<chno>][:MARKer]:FANalysis?

(8-2-4) Search reference menu

{ACTIVE MARKER} O: TREFACT
 N: MARKer[<chno>]:FANalysis:REFerence ACTive

{MAXIMUM VALUES} O: TREFMAX
 N: MARKer[<chno>]:FANalysis:REFerence MAXimum

{REFERENCE LINE} O: TREFREF
 N: MARKer[<chno>]:FANalysis:REFerence RLINe

{Return} Returns to the Filter analysis menu (see step (8-2-3)).

9. FUNCTION

Function menu

{TRANSFORM} Calls the Time domain transformation menu (9-1).

NOTE: The Time domain transformation menu is displayed only when Option 70 has been installed.

{CDMA IF FILTER} Calls the CDMA Filter menu (see step (9-2)).

{SOFTWARE FIXTURE} Calls the SOFTWARE FIXTURE menu (see step (9-3)).

(9-1) Time domain transformation menu (See Note)

{TRANSFORM ON/OFF} O : TIMDTRAN<bool>
N : CALCulate[<chno>]:TRANSform:TIME:STATe <bool>

{SET FREQ LOW PASS} O : SETF<real>
N : [SOURCE:]FREQuency[<chno>]:LPASs <real>

{LOW PASS IMPULSE} O : LOWPIMPU<bool>
N : CALCulate[<chno>]:TRANSform:TIME:TYPE LPASs
CALCulate[<chno>]:TRANSform:TIME:STIMulus
IMPulse

{LOW PASS STEP} O : LOWPSTEP<bool>
N : CALCulate[<chno>]:TRANSform:TIME:TYPE LPASs
CALCulate[<chno>]:TRANSform:TIME:STIMulus STEP

{BAND PASS} O : BANDPASS<bool>
N : CALCulate[<chno>]:TRANSform:TIME:TYPE BPASs

{WINDOW []} Calls the Window menu (see step (9-1-1)).

{GATE []} Calls the Gate menu (see step (9-1-2)).

{Return} Returns to the Function menu (see step (9)).

NOTE: The Time domain transformation menu and the above-mentioned commands are only available when Option 70 has been installed.

A.2.3 RESPONSE Block

(9-1-1) Window menu (See Note)

| | |
|------------------|--|
| <i>{MAXIMUM}</i> | O: WINDMAXI
N: CALCulate[<chno>]:TRANsform:TIME:WINDow MAXi-
mum |
| <i>{NORMAL}</i> | O: WINDNORM
N: CALCulate[<chno>]:TRANsform:TIME:WINDow NOR-
Mal |
| <i>{MINMUM}</i> | O: WINDMINI
N: CALCulate[<chno>]:TRANsform:TIME:WINDow MINI-
mum |
| <i>{Return}</i> | Return to the Time domain transformation menu (see step (9-1)). |

NOTE: The Window menu and the above-mentioned commands are only available when Option 70 has been installed.

(9-1-2) Gate menu (See Note)

| | |
|--------------------------|--|
| <i>{GATE ON/OFF}</i> | O: GATE<bool>
N: CALCulate[<chno>]:FILTer:GATE:TIME:STATe <bool> |
| <i>{GATE START []}</i> | O: GATESTAR<real>
N: CALCulate[<chno>]:FILTer:GATE:TIME:STARt <real> |
| <i>{GATE STOP []}</i> | O: GATESTOP<real>
N: CALCulate[<chno>]:FILTer:GATE:TIME:STOP <real> |
| <i>{GATE CENTER []}</i> | O: GATECENT<real>
N: CALCulate[<chno>]:FILTer:GATE:TIME:CENTer <real> |
| <i>{GATE SPAN []}</i> | O: GATESPAN<real>
N: CALCulate[<chno>]:FILTer:GATE:TIME:SPAN <real> |
| <i>{VELOCITY FACTOR}</i> | O: VELOFACT<real>
N: [SENSe:]CORRection[<chno>]:RVELocity:COAX <real> |
| <i>{GATE SHARP []}</i> | Calls the Gate shape menu (see step (9-1-3)). |
| <i>{Return}</i> | Returns to the Time domain transformation menu (see step (9-1)). |

NOTE: The Gate menu and the above-mentioned commands are only available when Option 70 has been installed.

(9-1-3) Gate shape menu

| | |
|------------------|--|
| {MAXIMUM} | O : GATSMAXI
N : CALCulate[<chno>]:FILTer:GATE:TIME:WINDow
MAXimum |
| {WIDE} | O : GATSWIDE
N : CALCulate[<chno>]:FILTer:GATE:TIME:WINDow
WIDE |
| {NORMAL} | O : GATSNORM
N : CALCulate[<chno>]:TRANsform:TIME:WINDow NOR-
Mal |
| {MINMUM} | O : GATSMINI
N : CALCulate[<chno>]:TRANsform:TIME:WINDow MINI-
mum |
| {Return} | Returns to the Gate menu (see step (9-1-2)). |

NOTE: *The Gate shape menu and the above-mentioned commands are only available when Option 70 has been installed.*

(9-2) CDMA IF filter analysis menu

| | |
|-----------------------------------|---|
| {CDMA IF GATE []} | Calls the CDMA IF gate menu (see step (9-2-1)). |
| {CDMA FILTER ANALYSIS []} | Calls the CDMA filter analysis menu (see step (9-2-4)). |
| {CDMA PHASE LINEARITY []} | O : CDMAPLIN <bool>
N : CALCulate[<chno>]:CDMA:PLINearity:STATe <bool> |
| {PHASE LINEARITY []} | Calls the Phase linearity analysis menu (see step (9-2-6)). |
| {Return} | Returns to the Function menu (see step (9)). |
| | Use the following commands to obtain the CDMA PHASE LIN-
EARITY analysis result: |
| | O : PLINREP? |
| | N : FETCh[<chno>]:PLINearity? |

A.2.3 RESPONSE Block

(9-2-1) CDMA IF gate menu

| | |
|------------------------------|--|
| <i>{CDMA GATE []}</i> | O : CDMA<bool>
N : CALCulate[<chno>]:CDMA:GATE:STATe <bool> |
| <i>{CDMA GATE START []}</i> | O : CDMASTAR<real>
N : CALCulate[<chno>]:CDMA:GATE:START <real> |
| <i>{GATE STOP []}</i> | O : CDMASTOP<real>
N : CALCulate[<chno>]:CDMA:GATE:STOP <real> |
| <i>{GATE SHAPE []}</i> | Calls the CDMA filter gate shape menu (see step (9-2-2)). |
| <i>{Return}</i> | Returns to the CDMA IF filter analysis menu (see step (9-2)). |

(9-2-2) CDMA filter gate shape menu

| | |
|------------------|--|
| <i>{MAXIMUM}</i> | O : CDMSMAXI
N : CALCulate[<chno>]:CDMA:GATE:WINDow MAXimum |
| <i>{WIDE}</i> | O : CDMSWIDE
N : CALCulate[<chno>]:CDMA:GATE:WINDow WIDE |
| <i>{NORMAL}</i> | O : CDMSNORM
N : CALCulate[<chno>]:CDMA:GATE:WINDow NORMAl |
| <i>{MINMUM}</i> | O : CDMSMINI
N : CALCulate[<chno>]:CDMA:GATE:WINDow MINimum |
| <i>{CDMAIF}</i> | O : CDMSCDMA
N : CALCulate[<chno>]:CDMA:GATE:WINDow CDMA |
| <i>{Return}</i> | Returns to the CDMA IF gate menu (see step (9-2-1)). |

(9-2-3) CDMA filter analysis menu

{CDMA FILTER ANALYSIS []}

O : CDMAFANA<bool>

N : CALCulate[<chno>]:CDMA:FANalysis:STATe <bool>
See Note.

NOTE: The CDMA filter analysis result can be obtained using "FETCH [<chno>]:CDMA:FANalysis?".

{WIDTH VALUE}

O : CDMATXDB<real>

N : CALCulate[<chno>]:CDMA:FANalysis:WIDTh <real>

{ATTN FREQ1}

O : CDMAATT1<real>

N : CALCulate[<chno>]:CDMA:FANalysis:ATTenuation1
<real>**{ATTN FREQ2}**

O : CDMAATT2<real>

N : CALCulate[<chno>]:CDMA:FANalysis:ATTenuation2
<real>**{Return}**

Returns to CDMA IF filter analysis menu (see step (9-2-2)).

(9-2-4) Phase linearity analysis menu

{PHASE LINEARITY []}

O : PLINE<bool>

N : CALCulate[<chno>]:PLINearity:STATe <bool>

{PARTIAL ON/OFF}

O : PLINPART<bool>

N : CALCulate[<chno>]:PLINearity:PARTial <bool>

{Return}

Returns to CDMA IF filter analysis menu (see step (9-2-2)).

Use the following to obtain the PHASE LINEARITY analysis result:

O : PLINREP?

N : FETCH[<chno>]:PLINearity?

A.2.3 RESPONSE Block

(9-3) SOFTWARE FIXTURE menu

{SOFTWARE FIXTURE [ON/OFF]}

O : SFSTATE<bool>

N : CALCulate[<chno>]:TRANSform:SFIXture:STATE
<bool>

{PORT CONDITION}

Calls the PORT CONDITION menu (see step (9-3-1)).

{BALANCE MEASUREMENT}

Calls the BLANCE MEAS. menu (see step (9-3-10)).

{MODE ANALYSIS [ON/OFF]}

O : SFBM{OFF | SDD | SDC | SCD | SCC}

N : CALCulate[<chno>]:TRANSform:SFIXture:
BALance:MMODE {OFF | SDD | SDC | SCD | SCC}

NOTE: The measurement menu is changed. (see step (9-3-20))

{FIXTURE LIST [ON/OFF]}

No applicable GPIB commands are available.

{LOAD USR CIRCUIT}

Calls the LOAD USR CIR menu (see step (9-3-13)).

{SAVE FILE}

Calls the SAVE FILE menu (see step (9-3-17)).

(9-3-1) PORT CONDITION menu

{PORT EXTENSION [OFF]}

Calls the PORT EXTENSION menu (see step (9-3-2)).

{DELETE CIRCUIT}

Calls the DELETE CIRCUIT menu (see step (9-3-3)).

{NORMALIZE IMPEDANCE [OFF]}

Calls the NORM. IMPE. menu (see step (9-3-4)).

{ADD CIRCUIT}

Calls the ADD CIRCUIT menu (see step (9-3-5)).

{Return}

(9-3-2) PORT EXTENSION menu

{PORT EXTENSION [ON/OFF]}

O : SFPEXT<bool>

N : CALCulate[<chno>]:TRANSform:SFIXture:PEXTension:
STATE <bool>

{EXTENSION PORT1}

O : SFP1PE<real>

N : CALCulate[<chno>]:TRANSform:SFIXture:PEXTension
<port>:TIME <real>

{EXTENSION PORT2} O : SFP2PE<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:PEXTension
 <port>:TIME <real>

{EXTENSION PORT3} O : SFP3PE<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:PEXTension
 <port>:TIME <real>

{EXTENSION PORT4} O : SFP4PE<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:PEXTension
 <port>:TIME <real>

{MARKER→EXTENSION} O : MKRPEXT
 N : MARKer[<chno>]:LET PEXTension

{RETURN}

(9-3-3) DELETE CIRCUIT menu

{PORT1 DEL CIRCUIT [ON/OFF]}

O : SFP1MS<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:SMATching <bool>

{PORT2 DEL CIRCUIT [ON/OFF]}

O : SFP2MS<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:SMATching <bool>

{PORT3 DEL CIRCUIT [ON/OFF]}

O : SFP3MS<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:SMATching <bool>

{PORT4 DEL CIRCUIT [ON/OFF]}

O : SFP4MS<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:SMATching <bool>

{LOAD DEL S2P}***{RETURN}***

A.2.3 RESPONSE Block

(9-3-4) NORM. IMPE. menu

{IMPEDANCE TRANSFORM [ON/OFF]}

O : SFIMP<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce<port>:STATe <bool>

{PORT1 IMPEDANCE}

O : SFP1Z<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:IMPedance <real>

{PORT2 IMPEDANCE}

O : SFP2Z<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:IMPedance <real>

{PORT3 IMPEDANCE}

O : SFP3Z<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:IMPedance <real>

{PORT4 IMPEDANCE}

O : SFP4Z<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:IMPedance <real>

{RETURN}

(9-3-5) ADD CIRCUIT menu (1 of 4)

{PORT1 ADD CIRCUIT [ON/OFF]}

O : SFP1MC<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:MATChing <bool>

{PORT1 ADD TYPE [CP-LS-D]}

Calls the PORT1 ADD TYPE menu (see step (9-3-6)).

{PORT1 CAP C}

O : SFP1C<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:CAPacitance <real>

{PORT1 CAP G}

O : SFP1G<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:GCAPacitance <real>

{PORT1 IND L}

O : SFP1L<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:INDuctance <real>

{PORT1 IND R} O : SFP1R<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:RINDuctance <real>

{RETURN}

{More 1/4}

ADD CIRCUIT menu (2 of 4)

{PORT2 ADD CIRCUIT [ON/OFF]}

O : SFP2MC<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:MATChing <bool>

{PORT2 ADD TYPE [CP-LS-D]}

Calls the PORT2 ADD TYPE menu (see step (9-3-7)).

{PORT2 CAP C}

O : SFP2C<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:CAPacitance <real>

{PORT2 CAP G}

O : SFP2G<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:GCAPacitance <real>

{PORT2 IND L}

O : SFP2L<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:INDuctance <real>

{PORT2 IND R}

O : SFP2R<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:RINDuctance <real>

{RETURN}

{More 2/4}

ADD CIRCUIT menu (3 of 4)

{PORT3 ADD CIRCUIT [ON/OFF]}

O : SFP3MC<bool>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 DEVIce[<port>]:MATChing <bool>

{PORT3 ADD TYPE [CP-LS-D]}

Calls the PORT3 ADD TYPE menu (see step (9-3-8)).

A.2.3 RESPONSE Block

{PORT3 CAP C} O: SFP3C<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:CAPacitance <real>

{PORT3 CAP G} O: SFP3G<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:GCAPacitance <real>

{PORT3 IND L} O: SFP3L<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:INDuctance <real>

{PORT3 IND R} O: SFP3R<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:RINDuctance <real>

{RETURN}

{More 3/4}

ADD CIRCUIT menu (4 of 4)

{PORT4 ADD CIRCUIT {ON/OFF}}

O: SFP4MC<bool>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MATChing <bool>

{PORT4 ADD TYPE {CP-LS-D}}

Calls the PORT4 ADD TYPE menu (see step (9-3-9)).

{PORT4 CAP C} O: SFP4C<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:CAPacitance <real>

{PORT4 CAP G} O: SFP4G<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:GCAPacitance <real>

{PORT4 IND L} O: SFP4L<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:INDuctance <real>

{PORT4 IND R} O: SFP4R<real>
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:RINDuctance <real>

{RETURN}

{More 4/4}

(9-3-6) PORT1 ADD TYPE menu

| | |
|----------------------------|---|
| <i>{PORT1 C(P)-L(S)-D}</i> | O : SFP1CPLS
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl CPLS |
| <i>{PORT1 L(P)-C(S)-D}</i> | O : SFP1LPCS
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LPCS |
| <i>{PORT1 C(S)-L(P)-D}</i> | O : SFP1CSLP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl CSLP |
| <i>{PORT1 L(S)-C(P)-D}</i> | O : SFP1LSCP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LSCP |
| <i>{PORT1 L(P)-C(P)-D}</i> | O : SFP1LPCP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LPCP |
| <i>{PORT1 USR CIRCUIT}</i> | O : SFP1S2PF
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl S2PFile |
| <i>{LOAD USR CIRCUIT}</i> | Calls the LOAD USR CIR menu (see step (9-3-13)). |
| <i>{RETURN}</i> | |

(9-3-7) PORT2 ADD TYPE menu

| | |
|----------------------------|--|
| <i>{PORT2 C(P)-L(S)-D}</i> | O : SFP2CPLS
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl CPLS |
| <i>{PORT2 L(P)-C(S)-D}</i> | O : SFP2LPCS
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LPCS |
| <i>{PORT2 C(S)-L(P)-D}</i> | O : SFP2CSLP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl CSLP |

A.2.3 RESPONSE Block

{PORT2 L(S)-C(P)-D} O: SFP2LSCP
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl LSCP

{PORT2 L(P)-C(P)-D} O: SFP2LPCP
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl LPCP

{PORT2 USR CIRCUIT} O: SFP2S2PF
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl S2PFile

{LOAD USR CIRCUIT} Calls the LOAD USR CIR menu (see step (9-3-13)).

{RETURN}

(9-3-8) PORT3 ADD TYPE menu

{PORT3 C(P)-L(S)-D} O: SFP3CPLS
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl CPLS

{PORT3 L(P)-C(S)-D} O: SFP3LPCS
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl LPCS

{PORT3 C(S)-L(P)-D} O: SFP3CSLP
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl CSLP

{PORT3 L(S)-C(P)-D} O: SFP3LSCP
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl LSCP

{PORT3 L(P)-C(P)-D} O: SFP3LPCP
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl LPCP

{PORT3 USR CIRCUIT} O: SFP3S2PF
 N: CALCulate[<chno>]:TRANSform:SFIXture:
 DEVice[<port>]:MODEl S2PFile

{LOAD USR CIRCUIT} Calls the LOAD USR CIR menu (see step (9-3-13)).

{RETURN}

(9-3-9) PORT4 ADD TYPE menu

| | |
|----------------------------|---|
| {PORT4 C(P)-L(S)-D} | O : SFP4CPLS
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl CPLS |
| {PORT4 L(P)-C(S)-D} | O : SFP4LPCS
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LPCS |
| {PORT4 C(S)-L(P)-D} | O : SFP4CSLP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl CSLP |
| {PORT4 L(S)-C(P)-D} | O : SFP4LSCP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LSCP |
| {PORT4 L(P)-C(P)-D} | O : SFP4LPCP
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl LPCP |
| {PORT4 USR CIRCUIT} | O : SFP4S2PF
N : CALCulate[<chno>]:TRANSform:SFIXture:
DEVIce[<port>]:MODEl S2PFile |
| {LOAD USR CIRCUIT} | Calls the LOAD USR CIR menu (see step (9-3-13)). |
| {RETURN} | |

(9-3-10) BALANCE MEAS. menu

| | |
|-------------------------------------|---|
| {MATCHING BALANCE P1} | Calls the MAT. BALANCE P1 menu (see step (9-3-11)). |
| {MATCHING BALANCE P2} | Calls the MAT. BALANCE P2 menu (see step (9-3-12)). |
| {BALANCE PARAMETER [ON/OFF]} | |

O : SFBPSTA<bool>
N : CALCulate[<chno>]:TRANSform:SFIXture:
BPARAMeter:STATe <bool>

NOTE: The measurement menu is changed. (see step (9-3-18))

| | |
|-------------------------------|--|
| {FLOAT BALUN [ON/OFF]} | O : SFFBAL<bool>
N : CALCulate[<chno>]:TRANSform:SFIXture:FBALun:
STATe <bool> |
|-------------------------------|--|

NOTE: The measurement menu is changed. (see step (9-3-19))

A.2.3 RESPONSE Block

{DIFF BALUN [ON/OFF]} O : SFDBAL<bool>
N : CALCulate[<chno>]:TRANSform:SFIxture:DBALun:
STATe <bool>

NOTE: The measurement menu is changed. (see step (9-3-19))

{RETURN}

(9-3-11)MAT. BALANCE P1 menu

{BALANCE P1 C(P)-L(P)-D [ON/OFF]}

O : SFB1MC<bool>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:MATChing <bool>

{BALANCE P1 CAP C}

O : SFB1C<real>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:CAPacitance <real>

{BALANCE P1 CAP G}

O : SFB1G<real>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:GCAPacitance <real>

{BALANCE P1 IND L}

O : SFB1L<real>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:INDuctance <real>

{BALANCE P1 IND R}

O : SFB1R<real>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:RINDuctance <real>

{RETURN}

(9-3-12)MAT. BALANCE P2 menu

{BALANCE P2 C(P)-L(P)-D [ON/OFF]}

O : SFB2MC<bool>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:MATChing <bool>

{BALANCE P2 CAP C}

O : SFB2C<real>
N : CALCulate[<chno>]:TRANSform:SFIxture:
BALance[<bport>]:CAPacitance <real>

{BALANCE P2 CAP G} O : SFB2G<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 BALance[<bport>]:GCAPacitance <real>

{BALANCE P2 IND L} O : SFB2L<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 BALance[<bport>]:INDuctance <real>

{BALANCE P2 IND R} O : SFB2R<real>
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 BALance[<bport>]:RINDuctance <real>

{RETURN}

(9-3-13)LOAD USR CIR menu

{LOAD ADD S1P} Calls the LOAD ADD S1P menu (see step (9-3-14)).

{LOAD ADD S2P} Calls the LOAD ADD S2P menu (see step (9-3-15)).

{LOAD DEL S2P} Calls the LOAD DEL S2P menu (see step (9-3-16)).

{RETURN}

(9-3-14)LOAD ADD S1P menu

{LOAD sfadd1.s1p} O : SFLDS1P1
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S1P1

{LOAD sfadd2.s1p} O : SFLDS1P2
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S1P2

{LOAD sfadd3.s1p} O : SFLDS1P3
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S1P3

{LOAD sfadd4.s1p} O : SFLDS1P4
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S1P4

{RETURN}

A.2.3 RESPONSE Block

(9-3-15)LOAD ADD S2P menu

{LOAD sfadd1.s2p} O : SFLDS2P1
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S2P1

{LOAD sfadd2.s2p} O : SFLDS2P2
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S2P2

{LOAD sfadd3.s2p} O : SFLDS2P3
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S2P3

{LOAD sfadd4.s2p} O : SFLDS2P4
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD S2P4

{RETURN}

(9-3-16)LOAD DEL S2P menu

{LOAD sfdel1.s2p} O : SFLDSUB1
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD SUB1

{LOAD sfdel2.s2p} O : SFLDSUB2
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD SUB2

{LOAD sfdel3.s2p} O : SFLDSUB3
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD SUB3

{LOAD sfdel4.s2p} O : SFLDSUB4
 N : CALCulate[<chno>]:TRANSform:SFIXture:FILE:
 LOAD SUB4

{RETURN}

(9-3-17)SAVE FILE menu

{SAVE TS} O: SFSVTS
 N: CALCulate[<chno>]:TRANSform:SFIXture:FILE:SAVE:TS

{SAVE CSV} O: SFSVCSV
 N: CALCulate[<chno>]:TRANSform:SFIXture:FILE:SAVE:CSV

{SAVE DISP CSV} O: SFSVDISP
 N: CALCulate[<chno>]:TRANSform:SFIXture:FILE:SAVE:DISPlay

{CSV FILE FORMAT {DB|RI}}
 O: SFSV{DB | RI}
 N: CALCulate[<chno>]:TRANSform:SFIXture:SAVE:FILE:FORMat {DB | RI}

{RETURN}

(9-3-18)BALANCE PARAMETER measurement menu (For 3PORT)

{B32} O: SFBPB32
 N: CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE B32

{B23} O: SFBPB23
 N: CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE B23

{SUB MEAS {ON/OFF}}

BALANCE PARAMETER measurement menu (For 4PORT)

{B21} O: SFBPB21
 N: CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE B21

{B12} O: SFBPB12
 N: CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE B12

{B43} O: SFBPB43
 N: CALCulate[<chno>]:TRANSform:SFIXture:BPARAMeter:MODE B43

A.2.3 RESPONSE Block

{B34} O : SFBPB34
 N : CALCulate[<chno>]:TRANSform:SFIXture:
 BPARAMeter:MODE B34

{SUB MEAS [ON/OFF]}

(9-3-19)FLOAT/DIFF BALUN measurement menu

{SS11} O : S11
 N : [SENSe:]FUNCTion[<chno>][:ON] 'POWer:S11'
 [SENSe:]FUNCTion[<chno>]:POWer S11

{SS21} O : S21
 N : [SENSe:]FUNCTion[<chno>][:ON] 'POWer:S21'
 [SENSe:]FUNCTion[<chno>]:POWer S21

{SS12} O : S12
 N : [SENSe:]FUNCTion[<chno>][:ON] 'POWer:S12'
 [SENSe:]FUNCTion[<chno>]:POWer S12

{SS22} O : S22
 N : [SENSe:]FUNCTion[<chno>][:ON] 'POWer:S22'
 [SENSe:]FUNCTion[<chno>]:POWer S22

{SS11&SS21} O : No applicable GPIB commands are available.
 N : [SENSe:]FUNCTion[<chno>][:ON] 'POWer:SFWD'
 [SENSe:]FUNCTion[<chno>]:POWer SFWD

{SS22&SS12} O : No applicable GPIB commands are available.
 N : [SENSe:]FUNCTion[<chno>][:ON] 'POWer:SREV'
 [SENSe:]FUNCTion[<chno>]:POWer SREV

{SUB MEAS [ON/OFF]}

(9-3-20)MODE ANALYSIS measurement menu

{Sdd} O : SFBMSDD
 N : CALCulate[<chno>]:TRANSform:SFIXture:BALance:
 MMODE SDD

{Sdc} O : SFBMSDC
 N : CALCulate[<chno>]:TRANSform:SFIXture:BALance:
 MMODE SDC

{Sde} O : SFBMSCD
 N : CALCulate[<chno>]:TRANSform:SFIXture:BALance:
 MMODE SCD

{Sc} O: SFBMSCC
N: CALCulate[<chno>]:TRANSform:SFIXture:BALance:
MMODE SCC

{11} O: S11
N: [SENSe:]FUNctIon[<chno>][:ON] 'POWER:S11'
[SENSe:]FUNctIon[<chno>]:POWER S11

{21} O: S21
N: [SENSe:]FUNctIon[<chno>][:ON] 'POWER:S21'
[SENSe:]FUNctIon[<chno>]:POWER S21

{12} O: S12
N: [SENSe:]FUNctIon[<chno>][:ON] 'POWER:S12'
[SENSe:]FUNctIon[<chno>]:POWER S12

{22} O: S22
N: [SENSe:]FUNctIon[<chno>][:ON] 'POWER:S22'
[SENSe:]FUNctIon[<chno>]:POWER S22

A.2.4 INSTRUMENT STATE Block

A.2.4 INSTRUMENT STATE Block

1. SAVE

Save menu

| | |
|-------------------------|--|
| <i>{SAVE REGISTER}</i> | Calls the save register menu (1 of 2) (see step (1-1)). |
| <i>{CLEAR REGISTER}</i> | Calls the clear register menu (1 of 2) (see step (1-2)). |
| <i>{STORE FILE}</i> | Calls the store file menu (see step (1-3)). |
| <i>{PURGE FILE}</i> | Calls the purge file menu (see step (1-4)). |
| <i>{FORMAT DISK}</i> | No GPIB commands are available. |

(1-1) Save register menu (1 of 4)

| | |
|---------------------|---|
| <i>{SAVE REG-1}</i> | O : SAVEREG1
N : *SAV 1/ REGister:SAVE 1 |
| <i>{SAVE REG-2}</i> | O : SAVEREG2
N : *SAV 2/ REGister:SAVE 2 |
| <i>{SAVE REG-3}</i> | O : SAVEREG3
N : *SAV 3/ REGister:SAVE 3 |
| <i>{SAVE REG-4}</i> | O : SAVEREG4
N : *SAV 4/ REGister:SAVE 4 |
| <i>{SAVE REG-5}</i> | O : SAVEREG5
N : *SAV 5/ REGister:SAVE 5 |
| <i>{RENAME REG}</i> | There is no GPIB command to be applied. |
| <i>{Return}</i> | Returns to the save menu (see step (1)). |
| <i>{More 1/4}</i> | Calls the save register menu (2 of 4). |

Save register menu (2 of 4)

| | |
|----------------------|--|
| <i>{SAVE REG-6}</i> | O: SAVEREG6
N: *SAV 6/ REGister:SAVE 6 |
| <i>{SAVE REG-7}</i> | O: SAVEREG7
N: *SAV 7/ REGister:SAVE 7 |
| <i>{SAVE REG-8}</i> | O: SAVEREG8
N: *SAV 8/ REGister:SAVE 8 |
| <i>{SAVE REG-9}</i> | O: SAVEREG9
N: *SAV 9/ REGister:SAVE 9 |
| <i>{SAVE REG-10}</i> | O: SAVEREG10
N: *SAV 10/ REGister:SAVE 10 |
| <i>{RENAME REG }</i> | No GPIB commands are available. |
| <i>{Return}</i> | Returns to the save menu (see step (1)). |
| <i>{More 2/4}</i> | Calls the save register menu (3 of 4). |

Save register menu (3 of 4)

| | |
|----------------------|---|
| <i>{SAVE REG-11}</i> | O: SAVEREG11
N: *SAV 11/REGister:SAVE 11 |
| <i>{SAVE REG-12}</i> | O: SAVEREG12
N: *SAV 12/REGister:SAVE 12 |
| <i>{SAVE REG-13}</i> | O: SAVEREG13
N: *SAV 13/REGister:SAVE 13 |
| <i>{SAVE REG-14}</i> | O: SAVEREG14
N: *SAV 14/REGister:SAVE 14 |
| <i>{SAVE REG-15}</i> | O: SAVEREG15
N: *SAV 15/REGister:SAVE 15 |
| <i>{RENAME REG}</i> | No GPIB commands are available. |
| <i>{Return}</i> | Calls the Save menu (see step (1)). |
| <i>{More 3/4}</i> | Calls the Save register menu (4 of 4). |

A.2.4 INSTRUMENT STATE Block

Save register menu (4 of 4)

| | |
|----------------------|---|
| <i>{SAVE REG-16}</i> | O : SAVEREG16
N : *SAV 16/REGister:SAVE 16 |
| <i>{SAVE REG-17}</i> | O : SAVEREG17
N : *SAV 17/REGister:SAVE 17 |
| <i>{SAVE REG-18}</i> | O : SAVEREG18
N : *SAV 18/REGister:SAVE 18 |
| <i>{SAVE REG-19}</i> | O : SAVEREG19
N : *SAV 19/REGister:SAVE 19 |
| <i>{SAVE REG-20}</i> | O : SAVEREG20
N : *SAV 20/REGister:SAVE 20 |
| <i>{RENAME REG}</i> | No GPIB commands are available. |
| <i>{Return}</i> | Calls the Save menu (see step (1)). |
| <i>{More 4/4}</i> | Calls the Save register menu (1 of 4). |

(1-2) Clear register menu (1 of 4)

| | |
|----------------------|--|
| <i>{CLEAR REG-1}</i> | O : CLRREG1
N : REGister:CLear 1 |
| <i>{CLEAR REG-2}</i> | O : CLRREG2
N : REGister:CLear 2 |
| <i>{CLEAR REG-3}</i> | O : CLRREG3
N : REGister:CLear 3 |
| <i>{CLEAR REG-4}</i> | O : CLRREG4
N : REGister:CLear 4 |
| <i>{CLEAR REG-5}</i> | O : CLRREG5
N : REGister:CLear 5 |
| <i>{RENAME REG}</i> | No GPIB commands are available. |
| <i>{Return}</i> | Returns to the save menu (see step (1)). |
| <i>{More 1/4}</i> | Calls the clear register menu (2 of 4). |

Clear register menu (2 of 4)

| | |
|-----------------------|--|
| <i>{CLEAR REG-6}</i> | O : CLRREG6
N : REGISTER:CLEAR 6 |
| <i>{CLEAR REG-7}</i> | O : CLRREG7
N : REGISTER:CLEAR 7 |
| <i>{CLEAR REG-8}</i> | O : CLRREG8
N : REGISTER:CLEAR 8 |
| <i>{CLEAR REG-9}</i> | O : CLRREG9
N : REGISTER:CLEAR 9 |
| <i>{CLEAR REG-10}</i> | O : CLRREG10
N : REGISTER:CLEAR 10 |
| <i>{RENAME REG}</i> | No GPIB commands are available. |
| <i>{Return}</i> | Returns to the save menu (see step (1)). |
| <i>{More 2/4}</i> | Calls the clear register menu (3 of 4). |

Clear register menu (3 of 4)

| | |
|-----------------------|---|
| <i>{CLEAR REG-11}</i> | O : CLSREG11
N : REGISTER:CLEAR 11 |
| <i>{CLEAR REG-12}</i> | O : CLSREG12
N : REGISTER:CLEAR 12 |
| <i>{CLEAR REG-13}</i> | O : CLSREG13
N : REGISTER:CLEAR 13 |
| <i>{CLEAR REG-14}</i> | O : CLSREG14
N : REGISTER:CLEAR 14 |
| <i>{CLEAR REG-15}</i> | O : CLSREG15
N : REGISTER:CLEAR 15 |
| <i>{RENAME REG}</i> | There are no GPIB commands to be applied. |
| <i>{Return}</i> | Returns to the Clear menu (see step (1)). |
| <i>{More 3/4}</i> | Calls the Clear register menu (4 of 4). |

A.2.4 INSTRUMENT STATE Block

Clear register menu (4 of 4)

| | |
|-----------------------|---|
| <i>{CLEAR REG-16}</i> | O: CLSREG16
N: REGister:CLEar 16 |
| <i>{CLEAR REG-17}</i> | O: CLSREG17
N: REGister:CLEar 17 |
| <i>{CLEAR REG-18}</i> | O: CLSREG18
N: REGister:CLEar 18 |
| <i>{CLEAR REG-19}</i> | O: CLSREG19
N: REGister:CLEar 19 |
| <i>{CLEAR REG-20}</i> | O: CLSREG20
N: REGister:CLEar 20 |
| <i>{RENAME REG}</i> | There are no GPIB commands to be applied. |
| <i>{Return}</i> | Returns to the Clear menu (see step (1)). |
| <i>{More 4/4}</i> | Calls the clear register menu (1 of 4). |

(1-3) Store file menu

| | |
|-----------------------|--|
| <i>{STORE}</i> | O: STFILE <str>
N: FILE:STORe <str> |
| <i>{ROLL↑}</i> | No GPIB commands are available. |
| <i>{ROLL↓}</i> | No GPIB commands are available. |
| <i>{DEFINE STORE}</i> | Calls the file data menu (see step (1-3-1)). |
| <i>{NAME}</i> | No GPIB commands are available. |
| <i>{NAME↑}</i> | No GPIB commands are available. |
| <i>{NAME↓}</i> | No GPIB commands are available. |
| <i>{CANCEL}</i> | No GPIB commands are available. |

<str> in "STORE" is file name.

(1-3-1) File data menu

| | |
|----------------------------|---|
| <i>{STATE ON/OFF}</i> | O: DSSTATE <bool>
N: FILE:STATe:CONDition <bool> |
| <i>{RAY ARRAY ON/OFF}</i> | O: RAWARY <bool>
N: FILE:STATe:RAW <bool> |
| <i>{CORR COEF ON/OFF}</i> | O: CORARY <bool>
N: FILE:STATe:CORRection <bool> |
| <i>{DATA ARRAY ON/OFF}</i> | O: DATAARY <bool>
N: FILE:STATe:DATA <bool> |
| <i>{MEM ARRY ON/OFF}</i> | O: MEMARY <bool>
N: FILE:STATe:MEMory <bool> |
| <i>{Return}</i> | Returns to the save menu (see step (1)). |

(1-4) Purge file menu

| | |
|-------------------|--|
| <i>{PURGE}</i> | O: PURGE <str>
N: FILE:DELeTe <str> |
| <i>{CURSOR ↑}</i> | There is no GPIB command to be applied. |
| <i>{CURSOR ↓}</i> | There is no GPIB command to be applied. |
| <i>{Return}</i> | Returns to the save menu (see step (1)). |

<str> in "PURGE" is file name.

A.2.4 INSTRUMENT STATE Block

2. RECALL

Recall menu (1 of 4)

| | |
|---------------------------|---|
| <i>{RECALL REG-1}</i> | O: RECLREG1
N: *RCL 1/ REGISTER:RECALL 1 |
| <i>{RECALL REG-2}</i> | O: RECLREG2
N: *RCL 2/ REGISTER:RECALL 2 |
| <i>{RECALL REG-3}</i> | O: RECLREG3
N: *RCL 3/ REGISTER:RECALL 3 |
| <i>{RECALL REG-4}</i> | O: RECLREG4
N: *RCL 4/ REGISTER:RECALL 4 |
| <i>{RECALL REG-5}</i> | O: RECLREG5
N: *RCL 5/ REGISTER:RECALL 5 |
| <i>{RECALL POWER OFF}</i> | O: RECLPOFF
N: *RCL POFF/ REGISTER:RECALL POFF |
| <i>{LOAD FILE}</i> | O: LDFILE <str>
N: FILE:LOAD <str> |
| <i>{More 1/4}</i> | Calls the recall menu (2 of 4). |

<str> in "LOAD FILE" is the file name.

Recall menu (2 of 4)

| | |
|---------------------------|---|
| <i>{RECALL REG-6}</i> | O : RECLREG6
N : *RCL 6/ REGister:RECall 6 |
| <i>{RECALL REG-7}</i> | O : RECLREG7
N : *RCL 7/ REGister:RECall 7 |
| <i>{RECALL REG-8}</i> | O : RECLREG8
N : *RCL 8/ REGister:RECall 8 |
| <i>{RECALL REG-9}</i> | O : RECLREG9
N : *RCL 9/ REGister:RECall 9 |
| <i>{RECALL REG-10}</i> | O : RECLREG10
N : *RCL 10/ REGister:RECall 10 |
| <i>{RECALL POWER OFF}</i> | O : RECLPOFF
N : *RCL POFF/ REGister:RECall POFF |
| <i>{LOAD FILE}</i> | O : LDFILE <str>
N : FILE:LOAD <str> |
| <i>{More 2/4}</i> | Calls the recall menu (3 of 4). |

<str> in "LOAD FILE" is the file name.

A.2.4 INSTRUMENT STATE Block

Recall menu (3 of 4)

| | |
|---------------------------|--|
| <i>{RECALL REG-11}</i> | O: RECLREG11
N: *RCL 11/REGister:RECall 11 |
| <i>{RECALL REG-12}</i> | O: RECLREG12
N: *RCL 12/REGister:RECall 12 |
| <i>{RECALL REG-13}</i> | O: RECLREG13
N: *RCL 13/REGister:RECall 13 |
| <i>{RECALL REG-14}</i> | O: RECLREG14
N: *RCL 14/REGister:RECall 14 |
| <i>{RECALL REG-15}</i> | O: RECLREG15
N: *RCL 15/REGister:RECall 15 |
| <i>{RECALL POWER OFF}</i> | O: RECLPOFF
N: *RCL POFF/REGister:RECall POFF |
| <i>{LOAD FILE}</i> | O: LDFILE<str>
N: FILE:LOAD <str> |
| <i>{More 3/4}</i> | Calls the Recall menu (4 of 4). |

The <str> of LOAD FILE is the filename.

Recall menu (4 of 4)

| | |
|---------------------------|--|
| <i>{RECALL REG-16}</i> | O : RECLREG16
N : *RCL 16/REGister:RECall 16 |
| <i>{RECALL REG-17}</i> | O : RECLREG17
N : *RCL 17/REGister:RECall 17 |
| <i>{RECALL REG-18}</i> | O : RECLREG18
N : *RCL 18/REGister:RECall 18 |
| <i>{RECALL REG-19}</i> | O : RECLREG19
N : *RCL 19/REGister:RECall 19 |
| <i>{RECALL REG-20}</i> | O : RECLREG20
N : *RCL 20/REGister:RECall 20 |
| <i>{RECALL POWER OFF}</i> | O : RECLPOFF
N : *RCL POFF/REGister:RECall POFF |
| <i>{LOAD FILE}</i> | O : LDFILE<str>
N : FILE:LOAD <str> |
| <i>{More 4/4}</i> | Calls the Recall menu (1 of 4). |

The <str> of LOAD FILE is the filename.

A.2.4 INSTRUMENT STATE Block

3. SYSTEM

System menu

{SYSTEM DRIVE}

There is no GPIB command to be applied.
See Note.

*NOTE: Specify the drive name with the file name as follows:
"[drive name:]<file name>"*

{SET CLOCK}

Calls the real time clock menu (see step (3-1)).

{LIMIT MENU}

Calls the limit menu (see step (3-2-1)).

(3-1) Real time clock menu

{YEAR}

O: YEAR <int>
N: SYSTem:DATE <year>,<month>,<day>

{MONTH}

O: MONTH <int>
N: SYSTem:DATE <year>,<month>,<day>

{DAY}

O: DAY <int>
N: SYSTem:DATE <year>,<month>,<day>

{HOUR}

O: HOUR <int>
N: SYSTem:TIME <hour>,<minute>,<second>

{MINUTE}

O: MINUTE <int>
N: SYSTem:TIME <hour>,<minute>,<second>

{SECOND}

O: SECOND <int>
N: SYSTem:TIME <hour>,<minute>,<second>

{Return}

Returns to the system menu (see step (3)).

(3-2-1) Limit menu

| | |
|------------------------------|--|
| {LIMIT LINE ON/OFF} | O : LIMITLINE |
| | N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:LINE
<bool> |
| {LIMIT TEST ON/OFF} | O : LIMITTEST |
| | N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>][:STATe]
<bool> |
| {BEEP []} | Calls the beep mode menu (see step (3-2-9)). |
| {LIMIT MODE MENU} | Calls the limit mode menu (see step (3-2-2)). |
| {EDIT LIMIT LINE} | Calls the edit limits menu (1 of 2). (see step (3-2-3)). |
| {SELECT DATA 1ST/2ND} | O : LPAR<int> |
| | N : There is no GPIB command to be applied. |
| {LIMIT LINE OFFSETS} | Calls the offset limits menu (see step (3-2-8)). |
| {Return} | Calls the system menu (see step (3)). |

(3-2-2) Limit mode menu

| | |
|---------------------------|--|
| {1ST DATA ON/OFF} | O : LIMPAR<bool> |
| | N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
PARAmeter[:STATe] <bool> |
| {2ND DATA ON/OFF} | O : LIMPAR<bool> |
| | N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
PARAmeter[:STATe] <bool> |
| {MAG DATA LIN/LOG} | O : LIMSLIN/LIMSLOG ← Smith display |
| | LIMPLIN/LIMPLOG ← Polar display |
| | N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
PARAmeter: SmithLIMit
{LINear LOGarithmic} ← Smith display |
| | DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
PARAmeter:PolarLIMit ← Polar display
{LINear LOGarithmic}¶ |
| {Return} | Calls the limit menu. |

A.2.4 INSTRUMENT STATE Block

(3-2-3) Edit limits menu (1 of 2)

| | |
|------------------------------|--|
| <i>{SEGMENT}</i> | O : LSEG
N : There is no GPIB command to be applied. |
| <i>{SELECT DATA 1ST/2ND}</i> | O : LIMP <small>AR</small> <int>
N : There is no GPIB command to be applied. |
| <i>{EDIT SEGMENT}</i> | Calls the edit segment menu (see step (3-2-5)). |
| <i>{DELETE}</i> | O : There is no GPIB command to be applied.
N : DIS <small>PL</small> ay[:W <small>IND</small> ow[<chno>]]:L <small>IM</small> it[<parano>]:
SEG <small>MENT</small> <n>;DE <small>LE</small> te |
| <i>{ADD SEGMENT}</i> | O : There is no GPIB command to be applied.
N : There is no GPIB command to be applied. |
| <i>{LINE TYPE}</i> | Calls the limit type menu (see step (3-2-7)). |
| <i>{DONE}</i> | O : There is no GPIB command to be applied.
N : There is no GPIB command to be applied. |
| <i>{More 1/2}</i> | Calls the edit limits menu (2 of 2). (see step (3-2-4)). |

| | |
|-----------------------------------|---|
| (3-2-4) Edit limits menu (2 of 2) | |
| {LIMIT LINE ON/OFF} | O : LIMITLINE <bool>
N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
LINE <bool> |
| {LIMIT TEST ON/OFF} | O : LIMITEST <bool>
N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
[STATe] <bool> |
| {BEEP []} | Calls the beep mode menu (see step (3-2-9)). |
| {MAG DATA LIN/LOG} | O : LIMSLIN/LIMSLOG ← Smith display
LIMPLIN/LIMPILOG ← Polar display
N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
PARAmeter:SmithLIMit
{LINear LOGarithmic} ← Smith display
DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:
PARAmeter:PolarLIMit
{LINear LOGarithmic} ← Polar display |
| {LIMIT MODE MENU} | Calls the limit mode menu (see step (3-2-2)). |
| {LIMIT LINE OFFSETS} | Calls the offset limits menu (see step (3-2-8)). |
| {CLEAR LIST} | Calls the clear limit menu (see step (3-2-6)). |
| {More 2/2} | Calls the edit limits menu (1 of 2) (see step (3-2-2)). |

A.2.4 INSTRUMENT STATE Block

(3-2-5) Edit segment menu

| | |
|-----------------------------|--|
| <i>{STIMULUS VALUE}</i> | O : LIMS<real>
N : DISPlay[:WINDow[<chno>]]:LIMit[<pn>]:SEGment<n>:STIMulus <real> |
| <i>{MARKER TO STIMULUS}</i> | O : No GPIB commands are available.
N : No GPIB commands are available. |
| <i>{UPPER LIMIT}</i> | O : LIMU<real>
N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:UPPer <real> |
| <i>{LOWER LIMIT}</i> | O : LIML<real>
N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:SEGment<n>:LOWer <real> |
| <i>{DELTA LIMIT}</i> | O : There is no GPIB command to be applied.
N : There is no GPIB command to be applied. |
| <i>{MIDDLE VALUE}</i> | O : There is no GPIB command to be applied.
N : There is no GPIB command to be applied. |
| <i>{MARKER TO MIDDLE}</i> | O : There is no GPIB command to be applied.
N : There is no GPIB command to be applied. |
| <i>{Return}</i> | O : There is no GPIB command to be applied.
N : There is no GPIB command to be applied. |

(3-2-6) Clear limit menu

| | |
|--------------|--|
| <i>{YES}</i> | O : LSEGCL
N : DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:CLEar |
| <i>{NO}</i> | O : No GPIB commands are available.
N : No GPIB commands are available. |

(3-2-7) Limit type menu

| | |
|-----------------------|--|
| <i>{SLOPING LINE}</i> | O: LIMTSLP
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
SEGMENT<n>:TYPE SLINe |
| <i>{FLAT LINE}</i> | O: LIMTFLT
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
SEGMENT<n>:TYPE FLINe |
| <i>{SINGLE POINT}</i> | O: LIMTSP
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
SEGMENT<n>:TYPE SPOint |
| <i>{LIMIT COLOR}</i> | O: LIMC<int>
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
SEGMENT<n>:COLOr <int> |
| <i>{WAVE COLOR}</i> | O: LIMWC<int>
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
SEGMENT<n>:WCOLOr <int> |
| <i>{Return}</i> | Calls the edit limits menu (1 of 2). (see step (3-2-3)). |

(3-2-8) Offset limits menu

| | |
|----------------------------|--|
| <i>{STIMULUS OFFSET}</i> | O: LIMISTIO<real>
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
OFFSet:STIMulus <real> |
| <i>{AMPLITUDE OFFSET}</i> | O: LIMIAMPO<real>
N: DISPLAY[:WINDow[<chno>]]:LIMit[<parano>]:
OFFSet:AMPLitude <real> |
| <i>{MARKER TO AMP.OFS}</i> | O: No GPIB commands are available.
N: No GPIB commands are available. |
| <i>{Return}</i> | Calls the limits menu (see step (3-2-1)). |

A.2.4 INSTRUMENT STATE Block

(3-2-9) Beep mode menu

| | |
|--------------------|--|
| {OFF} | O: FAILBEEP OFF/PASSBEEP OFF
N: DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP OFF |
| {FAIL} | O: FAILBEEP ON
N: DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP: FOR FAIL |
| {PASS} | O: PASSBEEP ON
N: DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP: FOR PASS |
| {BEEP TONE} | O: BEEPTONE<int>
N: DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:BEEP: TONE <int> |
| {Return} | Calls the limit menu (see step (3-2-1)). |

To obtain the result of the limit line judgment, the following commands are available.

For the PASS/FAIL information for all segments

O: There is no GPIB command to be applied.

N: DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:REPort?

For the PASS/FAIL information for test results

O: LIMRES?

N: DISPlay[:WINDow[<chno>]]:LIMit[<parano>]:RESult?

4. PRESET

| | |
|-----------------|---------------------------|
| [PRESET] | O: IP
N: SYSTem:PRESet |
|-----------------|---------------------------|

A.2.5 GPIB Block

1. PROGRAM

{PROGRAM}

There is no GPIB command to be applied to the following menus which are called by this key.

- Controller menu
- Load menu
- Drive menu

2. REMOTE/LCL

GPIB menu

{SYSTEM CONTROLLER}

There is no GPIB command to be applied.

{TALKER LISTENER}

There is no GPIB command to be applied.

{SET ADDRESSES}

Calls the address menu (see step (2-1)).

(2-1) Address menu

{ADDRESS R3765}

There is no GPIB command to be applied.

NOTE: Note: In the case of R3767, the address menu is displayed with R3767.

{ADDRESS PLOTTER}


There is no GPIB command to be applied.

{ADDRESS PRINTER}

There is no GPIB command to be applied.

{Return}

Return to the GPIB menu (see step (2)).

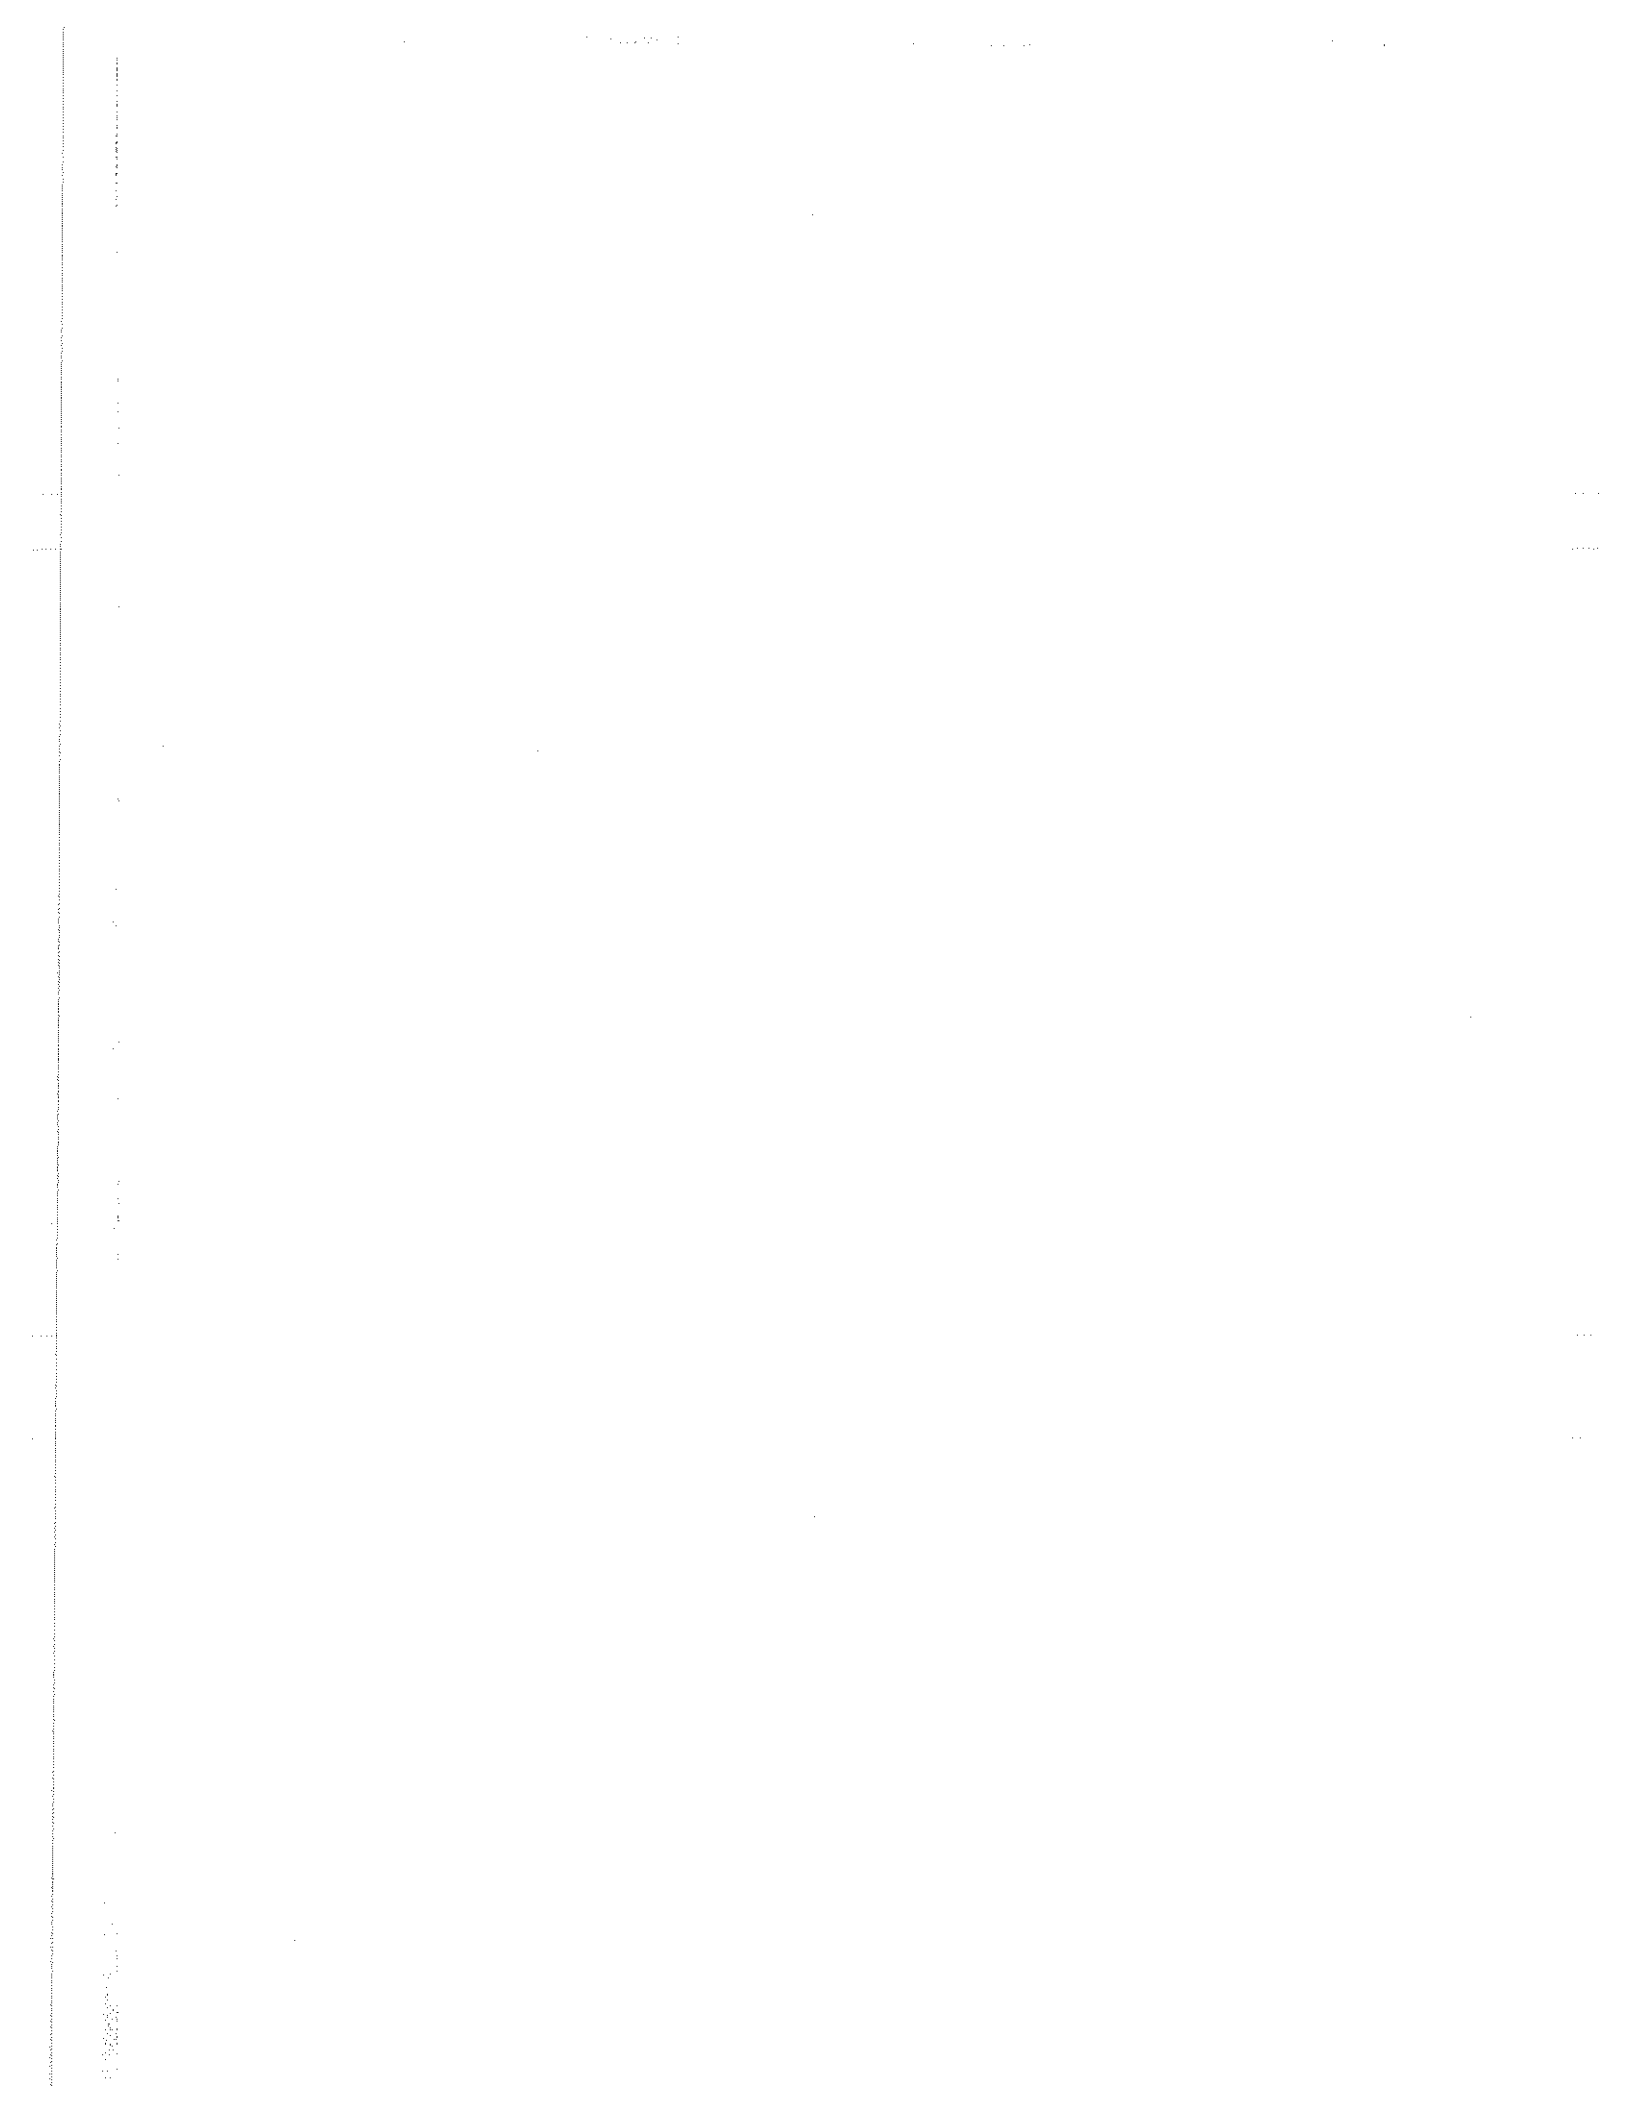

A.3 Initial Settings

Table A3-1 Initial Settings (1 of 3)

| Function | Initialization Method | |
|-----------------------------------|--|--|
| | Power ON or Preset | *RST |
| <u>Stimulus</u> | | |
| Sweeping type | Linear frequency sweeping | Same as left column |
| Continuous sweeping | ON | OFF |
| Trigger source | Internal (FREE RUN) | Same as left column |
| Trigger delay | OFF (0sec) | Same as left column |
| Sweeping time | 190.95msec (AUTO)
(R3764/65 series) | 240.2msec (Auto)
(R3764/65 series) |
| | 402.0msec (AUTO)
(R3766/67 series) | 420.35msec (AUTO)
(R3766/67 series) |
| Number of measurement point | 201 | 1201 |
| Start frequency | 5Hz | Same as left column |
| Stop frequency | 3.8GHz (R3764/65 series)
8.0GHz (R3766/67 series) | Same as left column |
| Center frequency | 1.92GHz (R3764/65 series)
4.02Hz (R3766/67 series) | Same as left column |
| Frequency span | 3.76GHz (R3764/65 series)
7.96GHz (R3766/67 series) | Same as left column |
| Frequency display | Start/Stop | Same as left column |
| Fixed frequency of level sweeping | 1GHz | Same as left column |
| Output level | *1 | Same as left column |
| Start level | *2 | Same as left column |
| Stop level | *2 | Same as left column |
| 2-channel interlocking | ON | Same as left column |
| Program sweeping segment | All clear | Same as left column |
| <u>Response</u> | | |
| Dual channel | OFF | Same as left column |
| Active channel | CH1 | Same as left column |
| Resolution bandwidth | 10kHz | Same as left column |
| Input port selection condition | *3 | Same as left column |
| Averaging | OFF (number of times: 16) | Same as left column |
| Trace operation | NONE | Same as left column |
| Conversion | NONE | Same as left column |
| Characteristic impedance ZO | 50Ω | Same as left column |
| Measurement format | *4 | Same as left column |
| Group delay aperture | 10% | 0.01% |
| Smoothing | OFF (Aperture 10%) | OFF (Aperture 0.01%) |
| Display | Data | Same as left column |
| Split/Overlap | Overlap | Same as left column |
| Label | Non | Same as left column |

A.3 Initial Settings

*1: Output level

| Type \ | Power ON or Preset | *RST |
|--------------------|--------------------|---------------------|
| A | 0dBm | Same as left column |
| B | 0dBm | Same as left column |
| C
A+S parameter | 10dBm | Same as left column |

*2: Start/Stop level

| Type \ | Power ON or Preset | | *RST | |
|--------------------|--------------------|-------|---------------------|-------|
| | Start | Stop | Start | Stop |
| A | -13dBm | 0dBm | Same as left column | 22dBm |
| B | -15dBm | 0dBm | Same as left column | 20dBm |
| C
A+S parameter | -20dBm | 10dBm | Same as left column | 10dBm |

*3: Input port selection condition

| Type \ Channel | CH1 | CH2 | CH3 | CH4 |
|--------------------|------------|--------------|------------|--------------|
| A | A/R | B/R | A/R | B/R |
| B | REFLECTION | TRANSMISSION | REFLECTION | TRANSMISSION |
| C
A+S parameter | S11 | S21 | S11 | S21 |

*4: Measurement format

| Type \ Channel | CH1 | CH2 | CH3 | CH4 |
|--------------------|--------|--------|--------|--------|
| A | LOGMAG | LOGMAG | LOGMAG | LOGMAG |
| B | LOGMAG | LOGMAG | POLAR | LOGMAG |
| C
A+S parameter | LOGMAG | LOGMAG | POLAR | LOGMAG |

Table A3-1 Initial Settings (2 of 3)

| Function | Initialization Method | |
|---|-----------------------|---------------------|
| | Power ON or Preset | *RST |
| <u>Reference value</u> | | |
| Logarithm amplitude | 0dB | Same as left column |
| Phase | 0° | Same as left column |
| Group delay | 0sec | Same as left column |
| Smith chart | 1 | Same as left column |
| Polar coordinate | 1 | Same as left column |
| Linear amplitude | 0 | Same as left column |
| SWR | 1 | Same as left column |
| Real part | 10 | Same as left column |
| Imaginary part | 10 | Same as left column |
| Continuous phase | 0° | Same as left column |
| <u>The value per division of Y-axis</u> | | |
| Logarithm amplitude | *5 | Same as left column |
| Phase | 45° | Same as left column |
| Group delay | 100nsec | Same as left column |
| Smith chart | - | Same as left column |
| Polar coordinate | - | Same as left column |
| Linear amplitude | 100m | Same as left column |
| SWR | 1 | Same as left column |
| Real part | 1 | Same as left column |
| Imaginary part | 1 | Same as left column |
| Continuous phase | 360° | Same as left column |
| <u>Reference position</u> | | |
| Logarithm amplitude | *6 | Same as left column |
| Phase | 50% | Same as left column |
| Group delay | 50% | Same as left column |
| Smith chart | - | Same as left column |
| Polar coordinate | - | Same as left column |
| Linear amplitude | 0% | Same as left column |
| SWR | 0% | Same as left column |
| Real part | 100% | Same as left column |
| Imaginary part | 100% | Same as left column |
| Continuous phase | 50% | Same as left column |

A.3 Initial Settings

*5: Logarithm amplitude (The value per division of Y-axis)

| Type \ Channel | CH1 | CH2 | CH3 | CH4 |
|--------------------|------|------|--------|-----|
| A | 10dB | 10dB | 1dB | 1dB |
| B | 5dB | 10dB | 1 UNIT | 1dB |
| C
A+S parameter | 5dB | 10dB | 1 UNIT | 1dB |

*6: Logarithm amplitude (Reference position)


| Type \ Channel | CH1 | CH2 | CH3 | CH4 |
|--------------------|-----|-----|-----|-----|
| A | 90% | 90% | 90% | 90% |
| B | 90% | 90% | - | 90% |
| C
A+S parameter | 90% | 90% | - | 90% |

Table A3-1 Initial Settings (3 of 3)

| Function | Initialization Method | |
|--------------------------------------|-----------------------|---------------------|
| | Power ON or Preset | *RST |
| <u>Calibration</u> | | |
| Correction measurement | OFF | Same as left column |
| Calibration data | Clear | Same as left column |
| Electrical length correction | OFF(0sec) | Same as left column |
| Phase offset | OFF(0°) | Same as left column |
| Measurement end extension correction | OFF | Same as left column |
| R Input | 0sec | Same as left column |
| A Input | 0sec | Same as left column |
| B Input | 0sec | Same as left column |
| Port 1 | 0sec | Same as left column |
| Port 2 | 0sec | Same as left column |
| Propagation constant | 1 | Same as left column |

Table A3-2 Backup Memory Settings (factory default settings)

| Item | Initial Setting |
|-------------------------------|-----------------|
| Analyzer GPIB address | 11 |
| System controller/addressable | Addressable |
| Printer GPIB address | 18 |
| Plotter GPIB address | 5 |
| Save register | All clear |

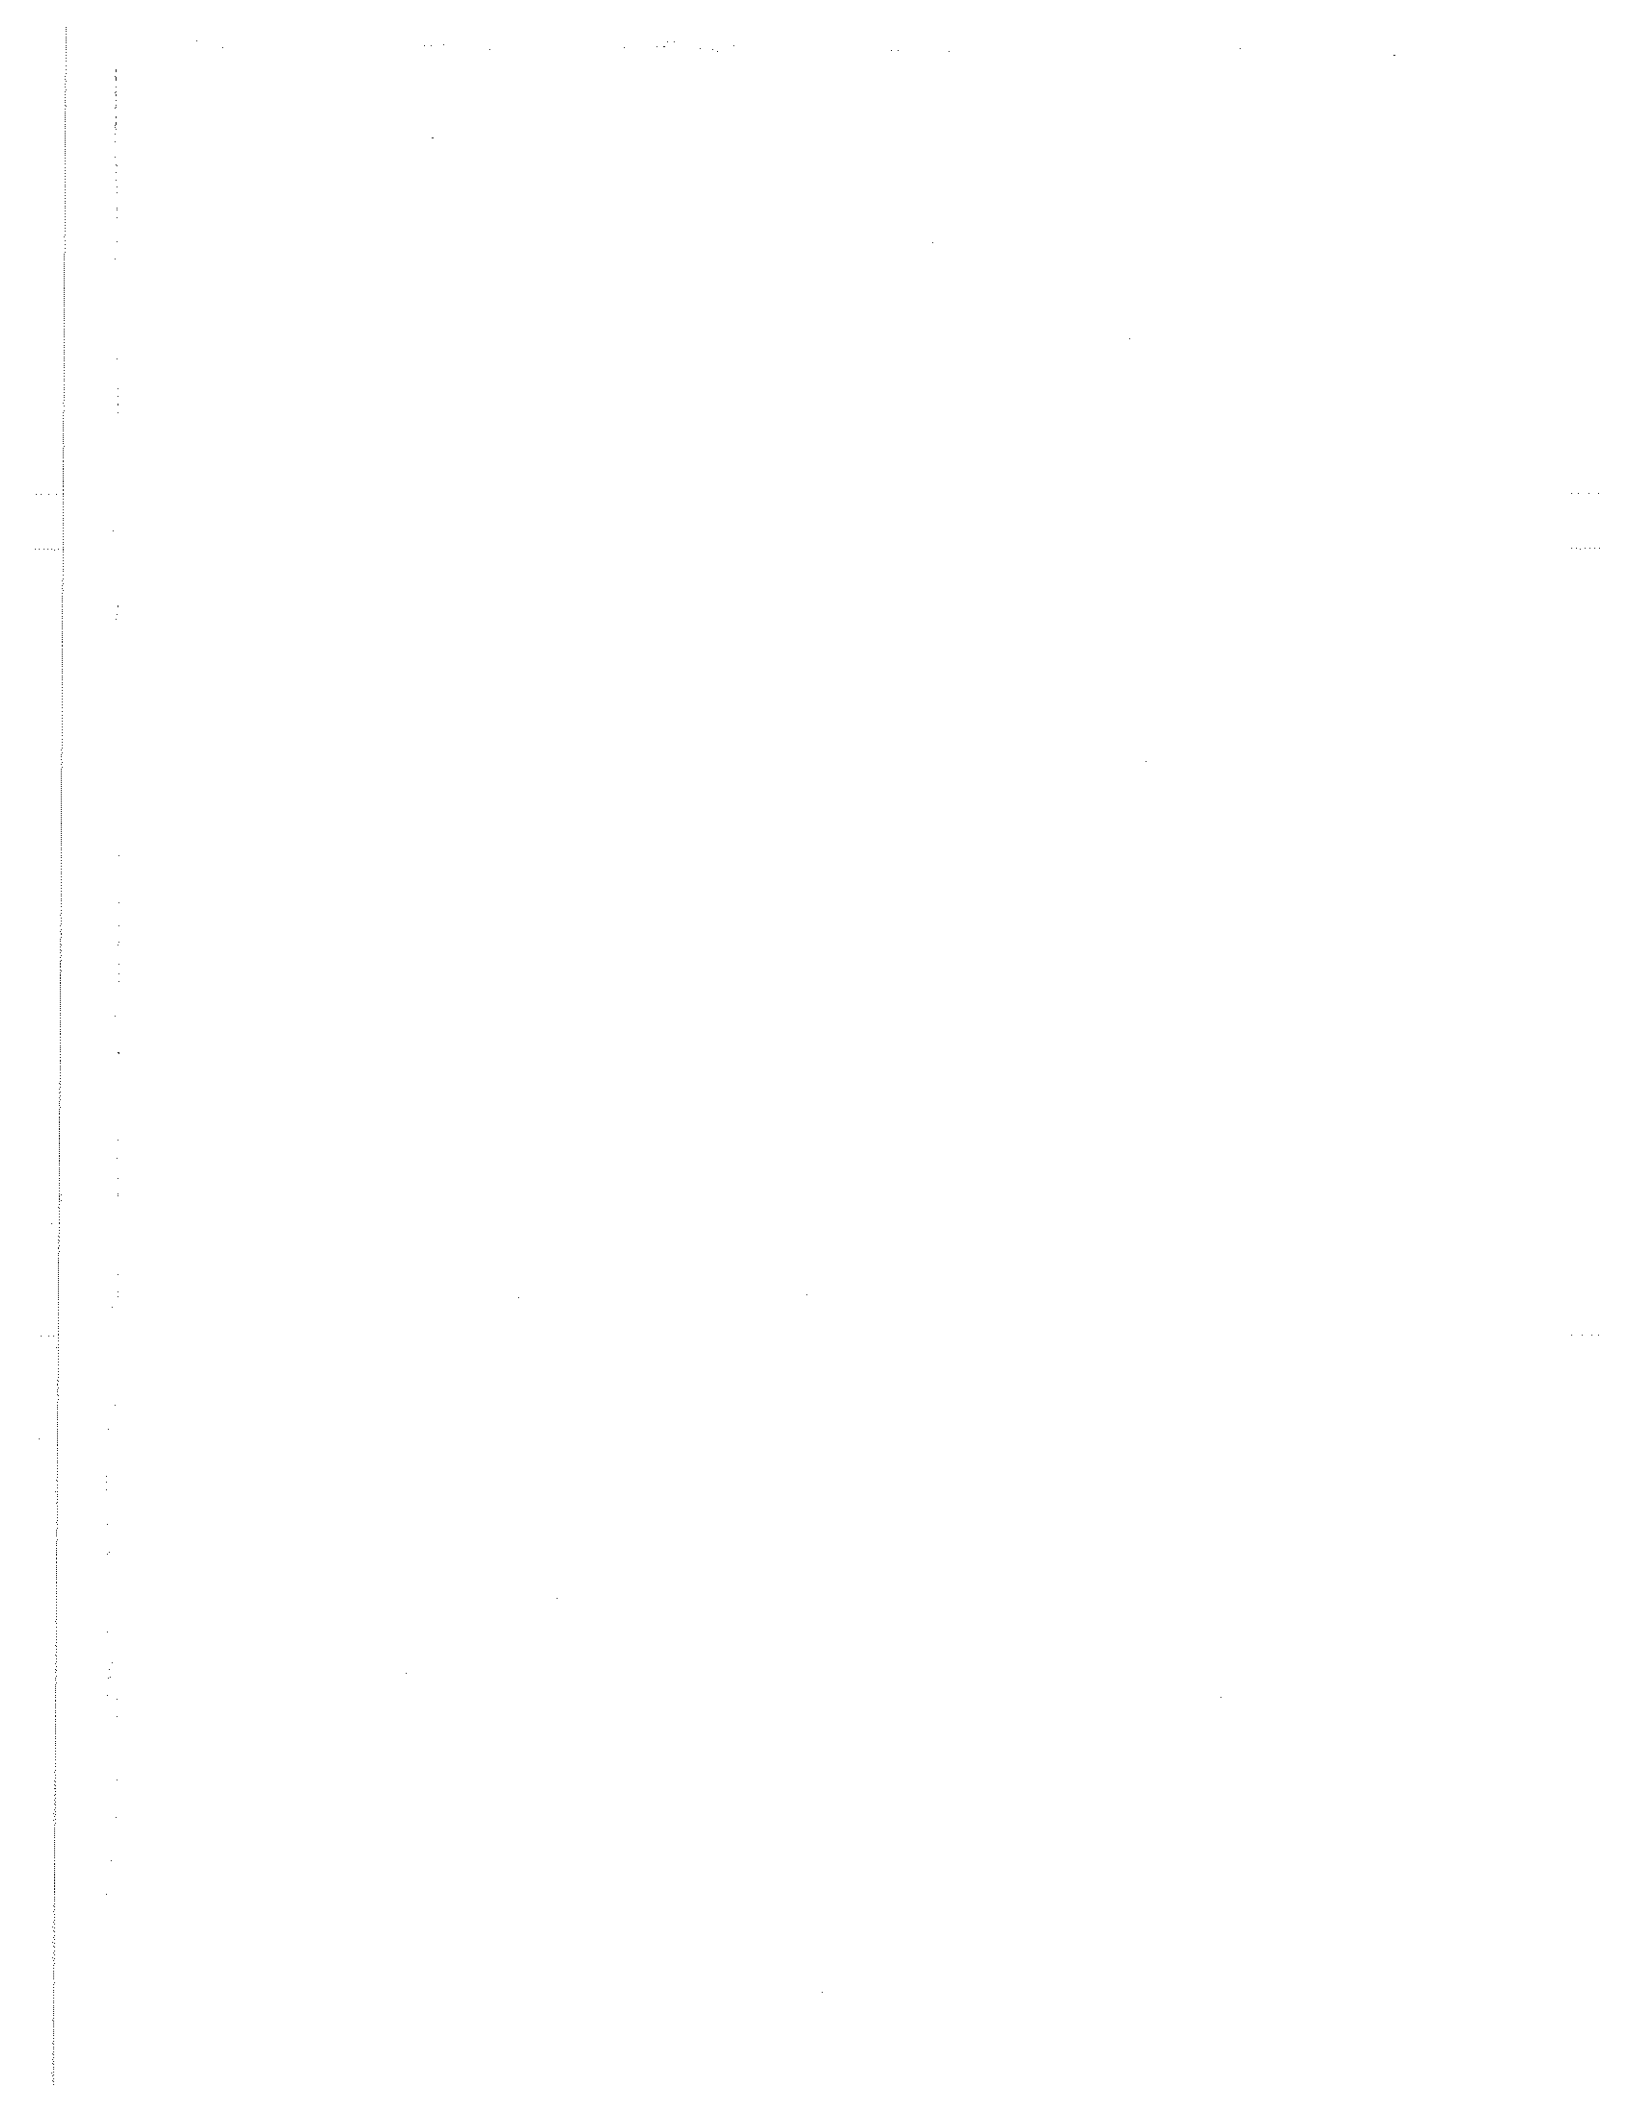

A.4 Multi-Line Interface Message

| | PCG | | | | | | | | | | | | SCG | | | |
|----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | ACG | | UCG | | LAG | | TAG | | 4 | | 5 | | | | | |
| | 0 | | 1 | | 2 | | 3 | | 4 | | 5 | | 6 | | 7 | |
| | ascii | msg | ascii | msg | ascii | msg | ascii | msg | ascii | msg | ascii | msg | ascii | msg | ascii | msg |
| 0 | NUL | | DEL | | SP | | 0 | | @ | | P | | ' | | p | |
| 1 | SOH | GTL | DC1 | LLO | ! | | 1 | | A | | Q | | a | | q | |
| 2 | STX | | DC2 | | " | | 2 | | B | | R | | b | | r | |
| 3 | ETX | | DC3 | | # | | 3 | | C | | S | | c | | s | |
| 4 | EOT | SDC | DC4 | DCL | \$ | | 4 | | D | | T | | d | | t | |
| 5 | ENQ | PPC | NAK | PPU | % | | 5 | | E | | U | | e | | u | |
| 6 | ACK | | SYN | | & | | 6 | | F | | V | | f | | v | |
| 7 | BEL | | ETB | | ' | ① | 7 | ① | G | ② | W | ② | g | | w | |
| 8 | BS | GET | CAN | SPE | (| | 8 | | H | | X | | h | | x | |
| 9 | HT | TCT | EM | SPD |) | | 9 | | I | | Y | | i | | y | |
| 10 | LF | | SUB | | * | | : | | J | | Z | | j | | z | |
| 11 | VT | | ESC | | + | | ; | | K | | [| | k | | { | |
| 12 | FF | | FS | | , | | < | | L | | \ | | l | | | |
| 13 | CR | | GS | | - | | = | | M | |] | | m | | } | |
| 14 | SO | | RS | | . | | > | | N | | ^ | | n | | - | |
| 15 | SI | | US | | / | | ? UNL | | O | | - UNT | | o | | DEL | |

NOTE: PCG: Primary command group
 ACG: Address command group
 UCG: Universal command group
 LAG: Listener address group
 TAG: Talker address group
 SCG: Second command group (defined by PCG)
 ①: Listener address to be allocated for devices
 ②: Talker address to be allocated for devices



ALPHABETICAL INDEX

| [Symbol] | |
|---|--|
| [SENSe:]AVERAge[<chno>]: | |
| COUNT | 7-58 |
| [SENSe:]AVERAge[<chno>][:STATe] | 7-60 |
| [SENSe:]BANDwidth[<chno>]: | |
| [:RESolution] | 7-61 |
| [SENSe:]BANDwidth[<chno>][:RESolution]: | |
| AUTO | 7-63 |
| [SENSe:]CORRection[<chno>]: | |
| CKIT | 7-81, 7-83,
7-84, 7-85,
7-86, 7-87,
7-88, 7-89,
7-90, 7-104,
7-107, 7-108,
7-109, 7-110,
7-111, 7-112,
7-113, 7-114,
7-115, 7-116,
7-117 |
| CKIT[:TYPE] | 7-82, 7-105 |
| COLLect | 7-67, 7-99 |
| COLLect[:ACQuire] | 7-65, 7-100 |
| CSET | 7-68, 7-69 |
| EDELay | 7-71 |
| EDELay[:TIME] | 7-72 |
| GPHase | 7-73 |
| OFFSet | 7-73, 7-74 |
| PEXTension | 7-74, 7-75,
7-106 |
| RVELocity | 7-76 |
| SLOPe | 7-83, 7-107 |
| [SENSe:]CORRection[<chno>]:CKIT | 7-86 |
| [SENSe:]CORRection[<chno>]:EDELay | 7-70 |
| [SENSe:]FUNCTion[<chno>]: | |
| POWER | 7-79, 7-95 |
| [SENSe:]FUNCTion[<chno>][:ON] | 7-77, 7-91 |
| [SOURce:]CORRection[<chno>]: | |
| GAIN | 7-118 |
| [SOURce:]COUple | 7-119 |
| [SOURce:]FREQuency[<chno>]: | |
| CENTer | 7-120 |
| CW | 7-121 |
| LPASs | 7-122 |
| MODE | 7-122 |
| SPAN | 7-124 |
| STARt | 7-125 |
| STOP | 7-126 |
| [SOURce:]POWer[<chno>]: | |
| MODE | 7-128 |
| STARt | 7-129 |
| STOP | 7-130 |
| [SOURce:]POWer[<chno>][:LEVel] | |
| [:AMPLitude] | 7-127 |
| [SOURce:]PSWEEP[<chno>]: | |
| BANDwidth[<n>] | 7-131 |
| CLear[<n>] | 7-132 |
| FREQuency[<n>] | 7-133 |
| POINts[<n>] | 7-135 |
| POWer[<n>] | 7-136 |
| SETTling[<n>] | 7-137 |
| [SOURce:]SWEEP[<chno>]: | |
| POINts | 7-138 |
| SPACing | 7-139 |
| TIME | 7-140 |
| TIME:AUTO | 7-140 |
| | 7-59 |
| *CLS | 7-6 |
| *DDT | 7-7 |
| *DMC | 7-8 |
| *EMC | 7-9 |
| *ESE | 7-9 |
| *ESR | 7-10 |
| *GMC | 7-11 |
| *IDN | 7-11 |
| *LMC | 7-12 |
| *OPC | 7-12 |
| *PCB | 7-13 |
| *PMC | 7-13 |
| *RCL | 7-14, 7-16 |
| *RST | 7-15, 7-16 |
| *SAV | 7-16 |
| *SRE | 7-17 |
| *STB | 7-18 |
| *TRG | 7-19, 7-20,
7-21 |
| *WAI | 7-20 |
| {MAXIMIN}SRCH | 7-185 |

[A]

| | |
|----------------------------|-------|
| ABORt | 7-21 |
| ABORt Subsystem | 7-21 |
| ACTIVE CHANNEL Block | A2-2 |
| ANNO | 7-47 |
| APERTP | 7-24 |
| ATTAUTO | 7-264 |
| ATTP{1121314} | 7-265 |
| AUTO | 7-40 |
| AVER | 7-60 |
| AVERAGE | 7-60 |
| AVERFACT | 7-58 |
| AVERREST | 7-59 |

Alphabetical Index

- AVR 7-58
- [B]**
- BASIC Mode 2-8
BDISP{0|1|2} 7-47
BEEPTONE 7-204
- [C]**
- CALCulate 7-235, 7-238
CALCulate Subsystem 7-22
CALCulate[<ch>]:
 TRANSform 7-254, 7-255
CALCulate[<ch>]:TRANSform 7-255
CALCulate[<chno>]:
 CDMA 7-239, 7-240,
7-241, 7-242,
7-243, 7-244
 FILTer 7-236, 7-237,
7-238
 FORMat 7-22
 GDAPerture 7-24, 7-25
 PLINearity 7-26, 7-27
 SMOothing 7-28, 7-30
 TRANSform 7-31, 7-32,
7-228, 7-229,
7-230, 7-231,
7-232, 7-233,
7-234, 7-235,
7-245, 7-246,
7-247, 7-248,
7-249, 7-250,
7-251, 7-252,
7-253, 7-256,
7-257, 7-258,
7-259, 7-260,
7-261, 7-262,
7-263
 CALCulate[<chno>]:CDMA 7-241, 7-242
 CALCulate[<chno>]:FILTer 7-237, 7-238
 CALCulate[<chno>]:GDAPerture 7-24
 CALCulate[<chno>]:MATH 7-25
 CALCulate[<chno>]:PLINearity 7-25
 CALCulate[<chno>]:TRANSform 7-32, 7-233,
7-234, 7-235
 CDMA 7-241
 CDMAATT1 7-239
 CDMAATT2 7-239
 CDMAFANA 7-240
 CDMAFREP 7-193
 CDMAPLIN 7-244
 CDMASTAR 7-242
 CDMASTOP 7-242
 CDMATXDB 7-241
 CENTERF 7-120
 CENTERT 7-228
 CH{1|2|3|4} 7-34
 CKIT 7-82
 CLEAR 7-67
 CLRREG 7-56
 Command Description Format 7-3
 Command Modes 1-2
 COMMAND REFERENCE 7-1
 COMMAND SYNTAX 3-1
 Common Commands 7-6
 CONT 7-166
 Controller Functions 2-2
 CONV{OFF|IR|RY|TZ|ITY|IDS} 7-32
 CORARY 7-50
 CORRECT 7-68
 COUPLE 7-119
 CWFREQ 7-121
- [D]**
- Data Formats 3-4
DATAARY 7-51
DAY 7-155
DELAY 7-22
Device Clear (DCL) 2-4
DISP{DATA|MEM|IDM} 7-37
DISPlay Subsystem 7-34
DISPlay:
 ACTIVE 7-34
 ANNotation[:ALL] 7-47
 FORMat 7-36
 PROGram 7-49
 PROGram {OFF|f|ULL|LOWer} 7-47
 WINDow 7-46
DISPlay:DUAL 7-35
DISPlay:WINDow 7-46
DISPlay[:WINDow[<chno>]]:
 LIMit[<parano>] 7-202, 7-203,
7-204, 7-205,
7-206, 7-207,
7-208, 7-209,
7-210, 7-211,
7-212, 7-213,
7-214, 7-215,
7-216, 7-217,
7-218, 7-219,
7-220, 7-221,
7-222, 7-223,
7-224
 LIMit[<parano>][:STATe] 7-225
 TEXT[:DATA] 7-37
 TRACe 7-37, 7-38

Y[<trace>] 7-39, 7-41
 Y[<trace>][:SCALE] 7-40, 7-42,
 7-44
 DLT{X|Y} 7-188
 DMAXMIN 7-187
 DMKR(C|A|F|O|F) 7-172
 DONE 7-67
 DONE1PORT 7-67
 DONE2PORT 7-67
 DRIPPL1 7-185, 7-187
 DSSTATE 7-50
 DTOM 7-159
 DUAL 7-35

[E]

ELED 7-72
 EPORT{R|A|B|I|2} 7-74
 EXTERN 7-165

[F]

FAILBEEP 7-202, 7-203
 FETCh? Subsystem 7-193
 FETCh[<chno>]:
 CDMA 7-193
 PLINearity 7-195
 FETCh[<chno>][:MARKer]:
 FANalysis 7-198
 NUMBer 7-200
 STATistics 7-201
 FETCh[<chno>][:MARKer][:ACTivate] 7-196
 FILE Subsystem 7-49
 FILE:
 STATe 7-50, 7-51,
 7-52
 STORE 7-52
 FILE:DELeTe 7-49
 FILE:LOAD 7-49
 FILE:STATe 7-51
 FLTANA 7-177
 FMKRS 7-180
 FMKRV 7-180
 FORM{0|2|3|5|6|7|8} 7-53, 7-54
 FORMa[:DATA] 7-54
 FORMat:
 BORDER 7-53
 FREE 7-165
 FWDISO 7-65
 FWDMATCH 7-65
 FWDTRNS 7-65

[G]

GATE 7-237

GATE Subsystem 7-236
 GATECENT 7-236
 GATESPAN 7-236
 GATESTAR 7-237
 GATESTOP 7-238
 Go To Local (GTL) 2-4
 GPIB 1-1
 GPIB Block A2-69
 GPIB Buffers 2-6
 GPIB BUS FUNCTIONS 2-1
 GPIB Interface Functions 2-1
 GPIB Setup 1-3
 GRAT 7-38
 Group Execute Trigger (GET) 2-4

[H]

HOUR 7-158

[I]

IDNT 7-11
 IEEE488.1-1987 Command Mode 1-2
 IEEE488.2-1987 Command Mode 1-2
 IMAG 7-22
 INIT 7-55
 INTC 7-55
 Initial Settings A3-1
 INITiate:
 CONTinuous 7-55
 INITiate[:IMMediate] 7-55
 INMAG 7-22
 INPCOR 7-73
 INSTRUMENT STATE Block A2-52
 Interface Clear (IFC) 2-3
 INTERPOL 7-69
 IP 7-157

[L]

LABEL 7-37
 LDFILE 7-49
 LENGTH 7-71
 LENGVAL 7-70
 LEVEL 7-128
 LIMC 7-216
 LIMIAMPO 7-207
 LIMILINE 7-206
 LIMISTIO 7-208
 LIMITEST 7-225
 LIML 7-217
 LIMPAR 7-212
 LIMPIO 7-209
 LIMRES 7-214
 LIMU 7-222

Alphabetical Index

LIMWC 7-224
 LINFREQ 7-122, 7-139
 LINMAG 7-22
 LINMP 7-22
 List of Command A1-1
 LOAD 7-65
 Local Lockout (LLO) 2-5
 LOGFREQ 7-122, 7-139
 LOGMAG 7-22
 LOGMD 7-22
 LOGMP 7-22
 LPAR 7-226
 LSEG 7-227
 LSEGCL 7-204
 LSTIM 7-220

[M]

MARKer[<chno>]:
 ACTivate 7-168
 ACTivate[:NUMBER] 7-167
 AOFF 7-169
 COMPensate 7-169
 CONVert[:MODE] 7-170
 COUPle 7-171
 DELTA 7-173
 DELTA[:MODE] 7-172
 FANalysis 7-174, 7-175,
 7-176, 7-178,
 7-179
 FANalysis[:STATE] 7-177
 FIXed 7-180, 7-181
 FIXed:VALue 7-180
 LET 7-182
 LIST 7-183, 7-192
 POLar 7-183
 SEARch 7-186, 7-187,
 7-188, 7-189,
 7-190, 7-191
 SEARch[:MODE] 7-185
 SMITH 7-184
 STATistics 7-191
 MARKer[<chno>]:ACTivate 7-168
 MARKer[<chno>]:SEARch 7-187, 7-189
 MARKI.S 7-192
 MATH 7-25
 MEAS 7-166
 Measuring State 5-4
 MEMARY 7-51
 MENUOV 7-46
 Message Exchange Protocol 2-6
 MINUTE 7-158
 MKRAOFF 7-169
 MKRCMP 7-169

MKRCOUP 7-171
 MKROFF 7-168
 MKRPART 7-186
 MKRSTAT 7-191
 MKRTRAC 7-191
 MKRUCMP 7-169
 MKRUCOUP 7-171
 MKRZ0{50|75} 7-31
 MONTH 7-155
 Multi-Line Interface Message A4-1

[N]

NORM 7-65
 NORMS 7-65
 Notice on the status byte 4-14

[O]

OMITISO 7-65
 OPEN 7-65
 OUTLEV 7-127
 OUTPut:
 ATTenuation 7-264
 OUTPut[<port>]:
 ATTenuation 7-265

[P]

PASSBEEP 7-202, 7-203
 PHAO 7-73
 PHAOFS 7-74
 PHASE 7-22
 PHASLO 7-83, 7-107
 PLINE 7-27
 PLINPART 7-26
 PLINREP 7-195
 PMKR{LINILOGIRI} 7-183
 POIN 7-138
 POLAR 7-22
 PORE 7-75
 PORT 7-81
 PURGE 7-49

[R]

RAWARY 7-52
 RBW 7-61
 RBWAUTO 7-63
 REAL 7-22
 RECLPOFF 7-14
 RECLREG 7-14, 7-56
 REFL 7-39
 REFP 7-44
 REFV 7-42

IMPORTANT INFORMATION FOR ADVANTEST SOFTWARE

PLEASE READ CAREFULLY: This is an important notice for the software defined herein. Computer programs including any additions, modifications and updates thereof, operation manuals, and related materials provided by ADVANTEST (hereafter referred to as "SOFTWARE"), included in or used with hardware produced by ADVANTEST (hereafter referred to as "PRODUCTS").

SOFTWARE License

All rights in and to the SOFTWARE (including, but not limited to, copyright) shall be and remain vested in ADVANTEST. ADVANTEST hereby grants you a license to use the SOFTWARE only on or with ADVANTEST PRODUCTS.

Restrictions

- (1) You may not use the SOFTWARE for any purpose other than for the use of the PRODUCTS.
- (2) You may not copy, modify, or change, all or any part of, the SOFTWARE without permission from ADVANTEST.
- (3) You may not reverse engineer, de-compile, or disassemble, all or any part of, the SOFTWARE.

Liability

ADVANTEST shall have no liability (1) for any PRODUCT failures, which may arise out of any misuse (misuse is deemed to be use of the SOFTWARE for purposes other than it's intended use) of the SOFTWARE. (2) For any dispute between you and any third party for any reason whatsoever including, but not limited to, infringement of intellectual property rights.

LIMITED WARRANTY

1. Unless otherwise specifically agreed by Seller and Purchaser in writing, ADVANTEST will warrant to the Purchaser that during the Warranty Period this Product (other than consumables included in the Product) will be free from defects in material and workmanship and shall conform to the specifications set forth in this Operation Manual.
2. The warranty period for the Product (the "Warranty Period") will be a period of one year commencing on the delivery date of the Product.
3. If the Product is found to be defective during the Warranty Period, ADVANTEST will, at its option and in its sole and absolute discretion, either (a) repair the defective Product or part or component thereof or (b) replace the defective Product or part or component thereof, in either case at ADVANTEST's sole cost and expense.
4. This limited warranty will not apply to defects or damage to the Product or any part or component thereof resulting from any of the following:
 - (a) any modifications, maintenance or repairs other than modifications, maintenance or repairs (i) performed by ADVANTEST or (ii) specifically recommended or authorized by ADVANTEST and performed in accordance with ADVANTEST's instructions;
 - (b) any improper or inadequate handling, carriage or storage of the Product by the Purchaser or any third party (other than ADVANTEST or its agents);
 - (c) use of the Product under operating conditions or environments different than those specified in the Operation Manual or recommended by ADVANTEST, including, without limitation, (i) instances where the Product has been subjected to physical stress or electrical voltage exceeding the permissible range and (ii) instances where the corrosion of electrical circuits or other deterioration was accelerated by exposure to corrosive gases or dusty environments;
 - (d) use of the Product in connection with software, interfaces, products or parts other than software, interfaces, products or parts supplied or recommended by ADVANTEST;
 - (e) the occurrence of an event of force majeure, including, without limitation, fire, explosion, geological change, storm, flood, earthquake, tidal wave, lightning or act of war; or
 - (f) any negligent act or omission of the Purchaser or any third party other than ADVANTEST.
5. **EXCEPT TO THE EXTENT EXPRESSLY PROVIDED HEREIN, ADVANTEST HEREBY EXPRESSLY DISCLAIMS, AND THE PURCHASER HEREBY WAIVES, ALL WARRANTIES, WHETHER EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, (A) ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND (B) ANY WARRANTY OR REPRESENTATION AS TO THE VALIDITY, SCOPE, EFFECTIVENESS OR USEFULNESS OF ANY TECHNOLOGY OR ANY INVENTION.**
6. **THE REMEDY SET FORTH HEREIN SHALL BE THE SOLE AND EXCLUSIVE REMEDY OF THE PURCHASER FOR BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.**
7. **ADVANTEST WILL NOT HAVE ANY LIABILITY TO THE PURCHASER FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF ANTICIPATED PROFITS OR REVENUES, IN ANY AND ALL CIRCUMSTANCES, EVEN IF ADVANTEST HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND WHETHER ARISING OUT OF BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE), STRICT LIABILITY, INDEMNITY, CONTRIBUTION OR OTHERWISE.**

CUSTOMER SERVICE DESCRIPTION

In order to maintain safe and trouble-free operation of the Product and to prevent the incurrence of unnecessary costs and expenses, ADVANTEST recommends a regular preventive maintenance program under its maintenance agreement.

ADVANTEST's maintenance agreement provides the Purchaser on-site and off-site maintenance, parts, maintenance machinery, regular inspections, and telephone support and will last a maximum of ten years from the date the delivery of the Product. For specific details of the services provided under the maintenance agreement, please contact the nearest ADVANTEST office listed at the end of this Operation Manual or ADVANTEST's sales representatives.

Some of the components and parts of this Product have a limited operating life (such as, electrical and mechanical parts, fan motors, unit power supply, etc.). Accordingly, these components and parts will have to be replaced on a periodic basis. If the operating life of a component or part has expired and such component or part has not been replaced, there is a possibility that the Product will not perform properly. Additionally, if the operating life of a component or part has expired and continued use of such component or part damages the Product, the Product may not be repairable. Please contact the nearest ADVANTEST office listed at the end of this Operation Manual or ADVANTEST's sales representatives to determine the operating life of a specific component or part, as the operating life may vary depending on various factors such as operating condition and usage environment.

CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL BUYER

The product should be thoroughly inspected immediately upon original delivery to buyer. All material in the container should be checked against the enclosed packing list or the instruction manual alternatively. ADVANTEST will not be responsible for shortage unless notified immediately.

If the product is damaged in any way, a claim should be filed by the buyer with carrier immediately. (To obtain a quotation to repair shipment damage, contact ADVANTEST or the local supplier.) Final claim and negotiations with the carrier must be completed by buyer.

SALES & SUPPORT OFFICES

Advantest America Measuring Solutions, Inc. (North America)

New Jersey Office

258 Fernwood Avenue, Edison, NJ 08837

Phone: (1) (732) 346-2600 Facsimile: (1) (732) 346-2610

Santa Clara Office

3201 Scott Blvd., Santa Clara, CA 95054

Phone: (1) (408) 988-7700 Facsimile: (1) (408) 987-0688

ROHDE & SCHWARZ Engineering and Sales GmbH (Europe)

Mühlendorfstraße 15, D-81671 München, Germany

P.O.B. 80 14 29, D-81614 München, Germany

Phone: (49) (89) 4129-13711 Facsimile: (49) (89) 4129-13723

Advantest (Singapore) Pte. Ltd. (Singapore)

438A Alexandra Road, #8-03/06

Alexandra Technopark, Singapore 119967

Phone: (65) (6) 274-3100 Facsimile: (65) (6) 274-4055

Advantest Korea Co., Ltd. (Korea)

16Fl., MIRAEWASARAM Bldg., 942-1

Daechi-Dong, Kangnam-Ku, Seoul, Korea

Phone: (82) (02) 3452-7710 Facsimile: (82) (02) 3452-7970

Advantest (Suzhou) Co., Ltd. (China)

5F, No. 46 Factory Building,

No. 555 Gui Ping Road, Shanghai, China 200233

Phone: (86) (21) 6485-2725 Facsimile: (86) (21) 6485-2726

Technology Support on the Leading Edge
ADVANTEST®

ADVANTEST CORPORATION

Shinjuku-NS Building, 4-1, Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo 163-0880, Japan